

Arria V Device Handbook

Volume 1: Device Interfaces and Integration

Contents

Logic Array Blocks and Adaptive Logic Modules in Arria V Devices.....1-1

LAB	1-1
MLAB	1-2
Local and Direct Link Interconnects	1-4
Dedicated Logic Control	1-5
ALM Resources	1-7
ALM Output	1-9
ALM Operating Modes	1-11
Normal Mode	1-11
Extended LUT Mode	1-12
Arithmetic Mode	1-12
Shared Arithmetic Mode	1-13
Document Revision History.....	1-15

Embedded Memory Blocks in Arria V Devices.....2-1

Types of Embedded Memory.....	2-1
Embedded Memory Capacity in Arria V Devices.....	2-1
Embedded Memory Design Guidelines for Arria V Devices.....	2-2
Guideline: Consider the Memory Block Selection.....	2-2
Guideline: Implement External Conflict Resolution.....	2-2
Guideline: Customize Read-During-Write Behavior.....	2-2
Guideline: Consider Power-Up State and Memory Initialization.....	2-5
Guideline: Control Clocking to Reduce Power Consumption.....	2-6
Embedded Memory Features.....	2-6
Embedded Memory Configurations.....	2-7
Embedded Memory Modes.....	2-8
Mixed-Width Port Configurations.....	2-9
M20K Blocks Mixed-Width Configurations.....	2-10
M10K Blocks Mixed-Width Configurations.....	2-10
MLABs Mixed-Width Configurations.....	2-11
Embedded Memory Clocking Modes.....	2-11
Clocking Modes for Each Memory Mode.....	2-12
Asynchronous Clears in Clocking Modes.....	2-13
Output Read Data in Simultaneous Read/Write.....	2-13
Independent Clock Enables in Clocking Modes.....	2-13

Parity Bit in Memory Blocks.....	2-13
Byte Enable in Embedded Memory Blocks.....	2-13
Byte Enable Controls in Memory Blocks.....	2-14
Data Byte Output.....	2-14
RAM Blocks Operations.....	2-14
Memory Blocks Packed Mode Support.....	2-15
Memory Blocks Address Clock Enable Support.....	2-15
Memory Blocks Error Correction Code Support.....	2-17
Error Correction Code Truth Table.....	2-17
Document Revision History.....	2-18
 Variable Precision DSP Blocks in Arria V Devices.....	 3-1
Features.....	3-1
Supported Operational Modes in Arria V Devices.....	3-2
Design Considerations.....	3-4
Operational Modes.....	3-4
Internal Coefficient and Pre-Adder.....	3-5
Accumulator.....	3-5
Chainout Adder.....	3-5
Block Architecture.....	3-5
Input Register Bank.....	3-8
Pre-Adder.....	3-13
Internal Coefficient.....	3-13
Multipliers.....	3-14
Adder.....	3-14
Accumulator and Chainout Adder.....	3-14
Systolic Registers.....	3-15
Double Accumulation Register.....	3-15
Output Register Bank.....	3-16
Operational Mode Descriptions.....	3-16
Independent Multiplier Mode.....	3-16
Independent Complex Multiplier Mode.....	3-23
Multiplier Adder Sum Mode.....	3-28
Sum of Square Mode.....	3-31
18 x 18 Multiplication Summed with 36-Bit Input Mode.....	3-32
Systolic FIR Mode.....	3-33
Document Revision History.....	3-36
 Clock Networks and PLLs in Arria V Devices.....	 4-1
Clock Networks.....	4-1

Clock Resources in Arria V Devices.....	4-1
Types of Clock Networks.....	4-2
Clock Sources Per Quadrant.....	4-5
Types of Clock Regions.....	4-5
Clock Network Sources.....	4-6
Clock Output Connections.....	4-9
Clock Control Block.....	4-9
Clock Power Down.....	4-11
Clock Enable Signals.....	4-12
Arria V PLLs.....	4-13
PLL Locations in Arria V Devices.....	4-13
Fractional PLL Architecture.....	4-18
PLL External Clock I/O Pins.....	4-18
PLL Control Signals.....	4-19
Clock Feedback Modes.....	4-20
Clock Multiplication and Division.....	4-26
Programmable Duty Cycle.....	4-26
Clock Switchover.....	4-26
PLL Reconfiguration and Dynamic Phase Shift.....	4-31
Document Revision History.....	4-31
I/O Features in Arria V Devices.....	5-1
I/O Resources Per Package for Arria V Devices.....	5-1
I/O Vertical Migration for Arria V Devices.....	5-4
Verifying Pin Migration Compatibility.....	5-4
I/O Standards Support in Arria V Devices.....	5-5
I/O Standards Support for FPGA I/O in Arria V Devices.....	5-5
I/O Standards Support for HPS I/O in Arria V Devices.....	5-7
I/O Standards Voltage Levels in Arria V Devices.....	5-8
MultiVolt I/O Interface in Arria V Devices.....	5-10
I/O Design Guidelines for Arria V Devices.....	5-11
Mixing Voltage-Referenced and Non-Voltage-Referenced I/O Standards.....	5-11
Guideline: Use the Same V_{CCPD} for All I/O Banks in a Group.....	5-12
Guideline: Ensure Compatible V_{CCIO} and V_{CCPD} Voltage in the Same Bank.....	5-12
Guideline: V_{REF} Pin Restrictions.....	5-12
Guideline: Observe Device Absolute Maximum Rating for 3.3-V Interfacing.....	5-12
Guideline: Use PLL Integer Mode for LVDS Applications.....	5-13
I/O Banks Locations in Arria V Devices.....	5-13
I/O Banks Groups in Arria V Devices.....	5-14
Modular I/O Banks for Arria V GX Devices.....	5-15

Modular I/O Banks for Arria V GT Devices.....	5-17
Modular I/O Banks for Arria V GZ Devices.....	5-18
Modular I/O Banks for Arria V SX Devices.....	5-18
Modular I/O Banks for Arria V ST Devices.....	5-19
I/O Element Structure in Arria V Devices.....	5-20
I/O Buffer and Registers in Arria V Devices.....	5-20
Programmable IOE Features in Arria V Devices.....	5-21
Programmable Current Strength.....	5-22
Programmable Output Slew-Rate Control.....	5-23
Programmable IOE Delay.....	5-23
Output Buffer Delay.....	5-23
Programmable Pre-Emphasis.....	5-24
Programmable Differential Output Voltage.....	5-24
I/O Pins Features for Arria V Devices.....	5-25
Open-Drain Output.....	5-25
Bus-Hold Circuitry.....	5-25
Pull-up Resistor.....	5-26
On-Chip I/O Termination in Arria V Devices.....	5-26
R_S OCT without Calibration in Arria V Devices.....	5-26
R_S OCT with Calibration in Arria V Devices.....	5-28
R_T OCT With Calibration in Arria V Devices.....	5-30
Dynamic OCT in Arria V Devices.....	5-32
LVDS Input R_D OCT in Arria V Devices.....	5-33
OCT Calibration Block in Arria V Devices.....	5-33
External I/O Termination for Arria V Devices.....	5-35
Single-ended I/O Termination.....	5-37
Differential I/O Termination.....	5-39
Document Revision History.....	5-44

High-Speed Differential I/O Interfaces and DPA in Arria V Devices.....6-1

Dedicated High-Speed Circuitries in Arria V Devices.....	6-1
SERDES and DPA Bank Locations in Arria V Devices.....	6-2
LVDS SERDES Circuitry.....	6-3
True LVDS Buffers in Arria V Devices.....	6-4
High-Speed I/O Design Guidelines for Arria V Devices.....	6-6
PLLs and Clocking for Arria V Devices.....	6-6
LVDS Interface with External PLL Mode.....	6-7
Pin Placement Guidelines for DPA and Non-DPA Differential Channels.....	6-10
Differential Transmitter in Arria V Devices.....	6-15
Transmitter Blocks.....	6-15

Transmitter Clocking.....	6-16
Serializer Bypass for DDR and SDR Operations.....	6-17
Programmable Differential Output Voltage.....	6-17
Programmable Pre-Emphasis.....	6-18
Differential Receiver in Arria V Devices.....	6-18
Receiver Blocks in Arria V Devices.....	6-19
Receiver Modes in Arria V Devices.....	6-22
Receiver Clocking for Arria V Devices.....	6-24
Differential I/O Termination for Arria V Devices.....	6-25
Source Synchronous Timing Budget.....	6-25
Differential Data Orientation.....	6-26
Differential I/O Bit Position.....	6-26
Transmitter Channel-to-Channel Skew.....	6-27
Receiver Skew Margin for Non-DPA Mode.....	6-28
Document Revision History.....	6-30

External Memory Interfaces in Arria V Devices.....7-1

External Memory Performance.....	7-2
HPS External Memory Performance.....	7-2
Memory Interface Pin Support in Arria V Devices.....	7-2
Guideline: Using DQ/DQS Pins.....	7-3
DQ/DQS Bus Mode Pins for Arria V Devices.....	7-3
DQ/DQS Groups in Arria V GX.....	7-5
DQ/DQS Groups in Arria V GT.....	7-6
DQ/DQS Groups in Arria V GZ.....	7-7
DQ/DQS Groups in Arria V SX.....	7-7
DQ/DQS Groups in Arria V ST.....	7-8
External Memory Interface Features in Arria V Devices.....	7-8
UniPHY IP.....	7-9
External Memory Interface Datapath.....	7-9
DQS Phase-Shift Circuitry.....	7-11
Phase Offset Control for Arria V GZ Devices.....	7-15
PHY Clock (PHYCLK) Networks.....	7-16
DQS Logic Block.....	7-17
Leveling Circuitry for Arria V GZ Devices.....	7-20
Dynamic OCT Control.....	7-21
IOE Registers.....	7-21
Delay Chain.....	7-24
Hard Memory Controller.....	7-26
Features of the Hard Memory Controller.....	7-26

Multi-Port Front End.....	7-28
Bonding Support.....	7-28
Document Revision History.....	7-32

Configuration, Design Security, and Remote System Upgrades in Arria V

Devices.....	8-1
Enhanced Configuration and Configuration via Protocol.....	8-1
MSEL Pin Settings.....	8-2
Configuration Sequence.....	8-3
Power Up.....	8-4
Reset.....	8-5
Configuration.....	8-5
Configuration Error Handling.....	8-5
Initialization.....	8-5
User Mode.....	8-6
Device Configuration Pins.....	8-6
Configuration Pin Options in the Quartus II Software.....	8-7
Fast Passive Parallel Configuration.....	8-8
Fast Passive Parallel Single-Device Configuration.....	8-8
Fast Passive Parallel Multi-Device Configuration.....	8-9
Active Serial Configuration.....	8-11
DATA Clock (DCLK).....	8-11
Active Serial Single-Device Configuration.....	8-11
Active Serial Multi-Device Configuration.....	8-12
Estimating the Active Serial Configuration Time.....	8-14
Using EPCS and EPCQ Devices.....	8-14
Controlling EPCS and EPCQ Devices.....	8-15
Trace Length and Loading.....	8-15
Programming EPCS and EPCQ Devices.....	8-15
Passive Serial Configuration.....	8-19
Passive Serial Single-Device Configuration Using an External Host.....	8-20
Passive Serial Single-Device Configuration Using an Altera Download Cable.....	8-20
Passive Serial Multi-Device Configuration.....	8-21
JTAG Configuration.....	8-23
JTAG Single-Device Configuration.....	8-24
JTAG Multi-Device Configuration.....	8-25
CONFIG_IO JTAG Instruction.....	8-26
Configuration Data Compression.....	8-26
Enabling Compression Before Design Compilation.....	8-27
Enabling Compression After Design Compilation.....	8-27

Using Compression in Multi-Device Configuration.....	8-27
Remote System Upgrades.....	8-27
Configuration Images.....	8-28
Configuration Sequence in the Remote Update Mode.....	8-29
Remote System Upgrade Circuitry.....	8-29
Enabling Remote System Upgrade Circuitry.....	8-30
Remote System Upgrade Registers.....	8-30
Remote System Upgrade State Machine.....	8-32
User Watchdog Timer.....	8-32
Design Security.....	8-33
JTAG Secure Mode.....	8-33
Security Key Types.....	8-33
Security Modes.....	8-34
Design Security Implementation Steps.....	8-35
Document Revision History.....	8-35
 SEU Mitigation for Arria V Devices.....	9-1
Error Detection Features.....	9-1
Configuration Error Detection.....	9-1
User Mode Error Detection.....	9-1
Internal Scrubbing.....	9-2
Specifications.....	9-2
Minimum EMR Update Interval.....	9-2
Error Detection Frequency.....	9-3
CRC Calculation Time.....	9-4
Using Error Detection Features in User Mode.....	9-4
Enabling Error Detection and Internal Scrubbing.....	9-5
CRC_ERROR Pin.....	9-5
Error Detection Registers.....	9-5
Error Detection Process.....	9-7
Testing the Error Detection Block.....	9-9
Document Revision History.....	9-9
 JTAG Boundary-Scan Testing in Arria V Devices.....	10-1
BST Operation Control	10-1
IDCODE	10-1
Supported JTAG Instruction	10-3
JTAG Secure Mode	10-6
JTAG Private Instruction	10-7
I/O Voltage for JTAG Operation	10-7

Performing BST	10-8
Enabling and Disabling IEEE Std. 1149.1 BST Circuitry	10-8
Guidelines for IEEE Std. 1149.1 Boundary-Scan Testing.....	10-9
IEEE Std. 1149.1 Boundary-Scan Register	10-9
Boundary-Scan Cells of an Arria V Device I/O Pin.....	10-9
IEEE Std. 1149.6 Boundary-Scan Register.....	10-11
Document Revision History.....	10-13
 Power Management in Arria V Devices.....	11-1
Power Consumption.....	11-1
Dynamic Power Equation.....	11-1
Programmable Power Technology.....	11-2
Temperature Sensing Diode.....	11-3
Internal Temperature Sensing Diode.....	11-3
External Temperature Sensing Diode.....	11-3
Hot-Socketing Feature.....	11-4
Hot-Socketing Implementation.....	11-5
Arria V GX and GT Power-Up Sequence.....	11-6
Arria V GZ Power-Up Sequence.....	11-7
Power-On Reset Circuitry.....	11-8
Power Supplies Monitored and Not Monitored by the POR Circuitry.....	11-10
Document Revision History.....	11-11

Logic Array Blocks and Adaptive Logic Modules in Arria V Devices

1

2012.11.19

AV-52001

 [Subscribe](#)

 [Feedback](#)

This chapter describes the features of the logic array block (LAB) in the Arria® V core fabric.

The LAB is composed of basic building blocks known as adaptive logic modules (ALMs) that you can configure to implement logic functions, arithmetic functions, and register functions.

You can use a quarter of the available LABs in Arria V devices as a memory LAB (MLAB).

The Quartus® II software and other supported third-party synthesis tools, in conjunction with parameterized functions such as the library of parameterized modules (LPM), automatically choose the appropriate mode for common functions such as counters, adders, subtractors, and arithmetic functions.

This chapter contains the following sections:

- LAB
- ALM Operating Modes

LAB

The LABs are configurable logic blocks that consist of a group of logic resources. Each LAB contains dedicated logic for driving control signals to its ALMs.


MLAB is a superset of the LAB and includes all the LAB features.

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered

Figure 1-1: LAB Structure and Interconnects Overview in Arria V Devices

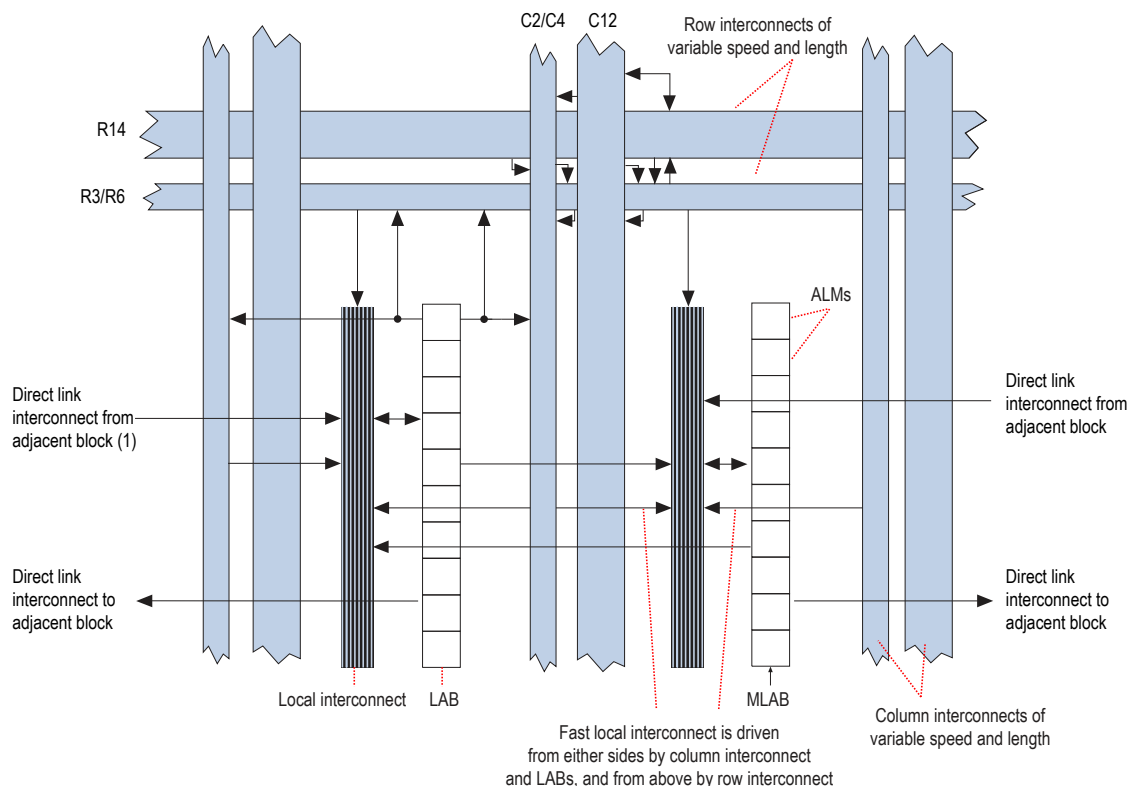This figure shows an overview of the Arria V LAB and MLAB structure with the LAB interconnects.



Note:

1. Connects to adjacent LABs, memory blocks, digital signal processing (DSP) blocks, or I/O element (IOE) outputs.

MLAB

Each MLAB supports a maximum of 640 bits of simple dual-port SRAM.

You can configure each ALM in an MLAB in the following configurations:

- A 32 x 2 memory block, resulting in a configuration of 32 x 20 simple dual-port SRAM blocks for Arria V GX, GT, SX, and ST devices
- Either a 64 x 1 or a 32 x 2 block, resulting in a configuration of either a 64 x 10 or a 32 x 20 simple dual-port SRAM block for Arria V GZ devices

Figure 1-2: LAB and MLAB Structure for Arria V GX, GT, SX, and ST Devices

LUT-based-32 x 2 Simple dual-port SRAM	(1)	ALM
LUT-based-32 x 2 Simple dual-port SRAM	(1)	ALM
LUT-based-32 x 2 Simple dual-port SRAM	(1)	ALM
LUT-based-32 x 2 Simple dual-port SRAM	(1)	ALM
LUT-based-32 x 2 Simple dual-port SRAM	(1)	ALM
LAB Control Block		LAB Control Block
LUT-based-32 x 2 Simple dual-port SRAM	(1)	ALM
LUT-based-32 x 2 Simple dual-port SRAM	(1)	ALM
LUT-based-32 x 2 Simple dual-port SRAM	(1)	ALM
LUT-based-32 x 2 Simple dual-port SRAM	(1)	ALM
LUT-based-32 x 2 Simple dual-port SRAM	(1)	ALM
LUT-based-32 x 2 Simple dual-port SRAM	(1)	ALM

MLAB

LAB

Note:
1. You can use an MLAB ALM as a regular LAB ALM or configure it as a dual-port SRAM.

Figure 1-3: LAB and MLAB Structure for Arria V GZ Devices

LUT-based-64 x 1 Simple dual-port SRAM	(1)	ALM
LUT-based-64 x 1 Simple dual-port SRAM	(1)	ALM
LUT-based-64 x 1 Simple dual-port SRAM	(1)	ALM
LUT-based-64 x 1 Simple dual-port SRAM	(1)	ALM
LUT-based-64 x 1 Simple dual-port SRAM	(1)	ALM
LAB Control Block		LAB Control Block
LUT-based-64 x 1 Simple dual-port SRAM	(1)	ALM
LUT-based-64 x 1 Simple dual-port SRAM	(1)	ALM
LUT-based-64 x 1 Simple dual-port SRAM	(1)	ALM
LUT-based-64 x 1 Simple dual-port SRAM	(1)	ALM
LUT-based-64 x 1 Simple dual-port SRAM	(1)	ALM
LUT-based-64 x 1 Simple dual-port SRAM	(1)	ALM

MLAB
LAB

Note:

1. You can use an MLAB ALM as a regular LAB ALM or configure it as a dual-port SRAM.


Local and Direct Link Interconnects

Each LAB can drive 30 ALMs through fast-local and direct-link interconnects. Ten ALMs are in any given LAB and ten ALMs are in each of the adjacent LABs.

The local interconnect can drive ALMs in the same LAB using column and row interconnects and ALM outputs in the same LAB.

Neighboring LABs, MLABs, M10K blocks, or digital signal processing (DSP) blocks from the left or right can also drive the LAB's local interconnect using the direct link connection.

The direct link connection feature minimizes the use of row and column interconnects, providing higher performance and flexibility.

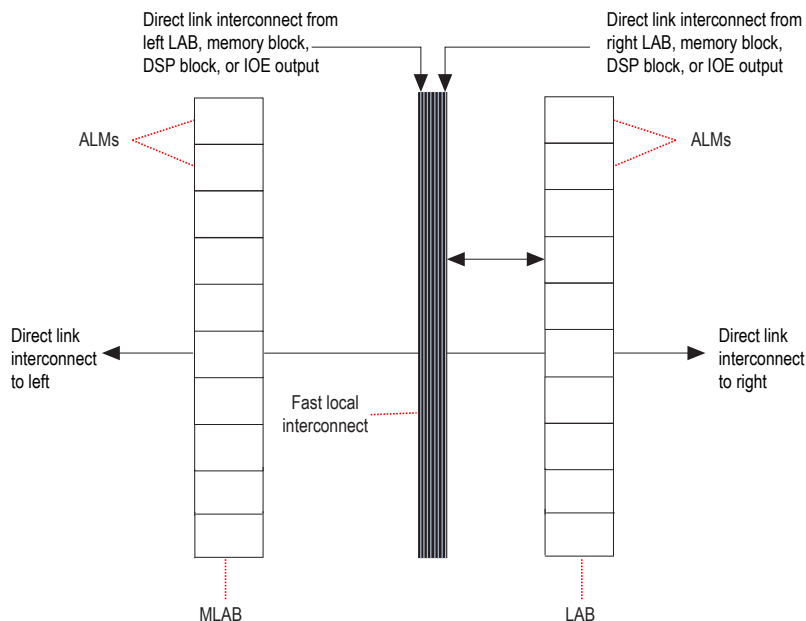Figure 1-4: LAB Fast Local and Direct Link Interconnects for Arria V Devices

Dedicated Logic Control

Each LAB contains dedicated logic for driving the control signals to its ALMs, and has two unique clock sources and three clock enable signals.

The LAB control block generates up to three clocks using the two clock sources and three clock enable signals. Each clock and the clock enable signals are linked.

De-asserting the clock enable signal turns off the corresponding LAB-wide clock.

The following figures show the clock sources and clock enable signals in a LAB.

Figure 1-5: LAB-Wide Control Signals for Arria V GX, GT, SX, and ST Devices

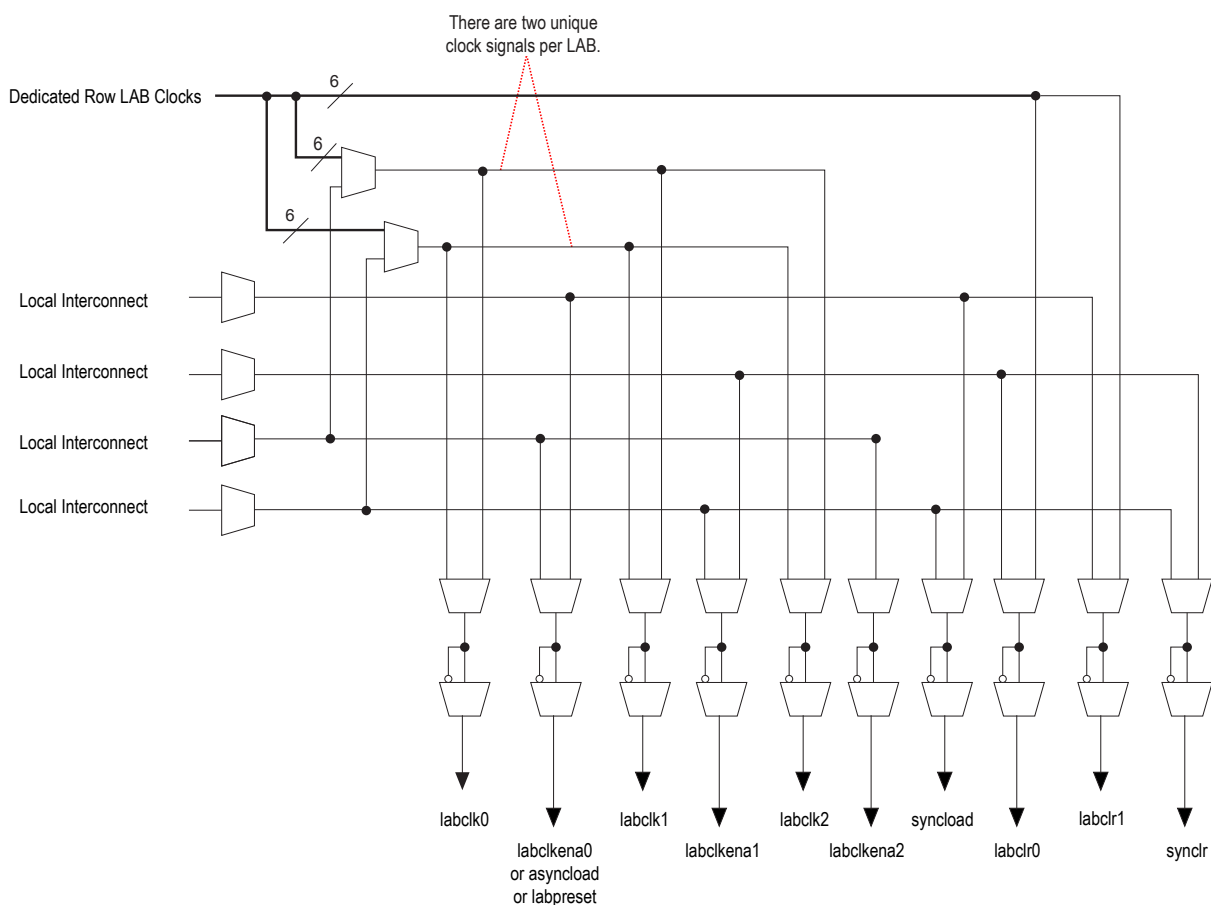
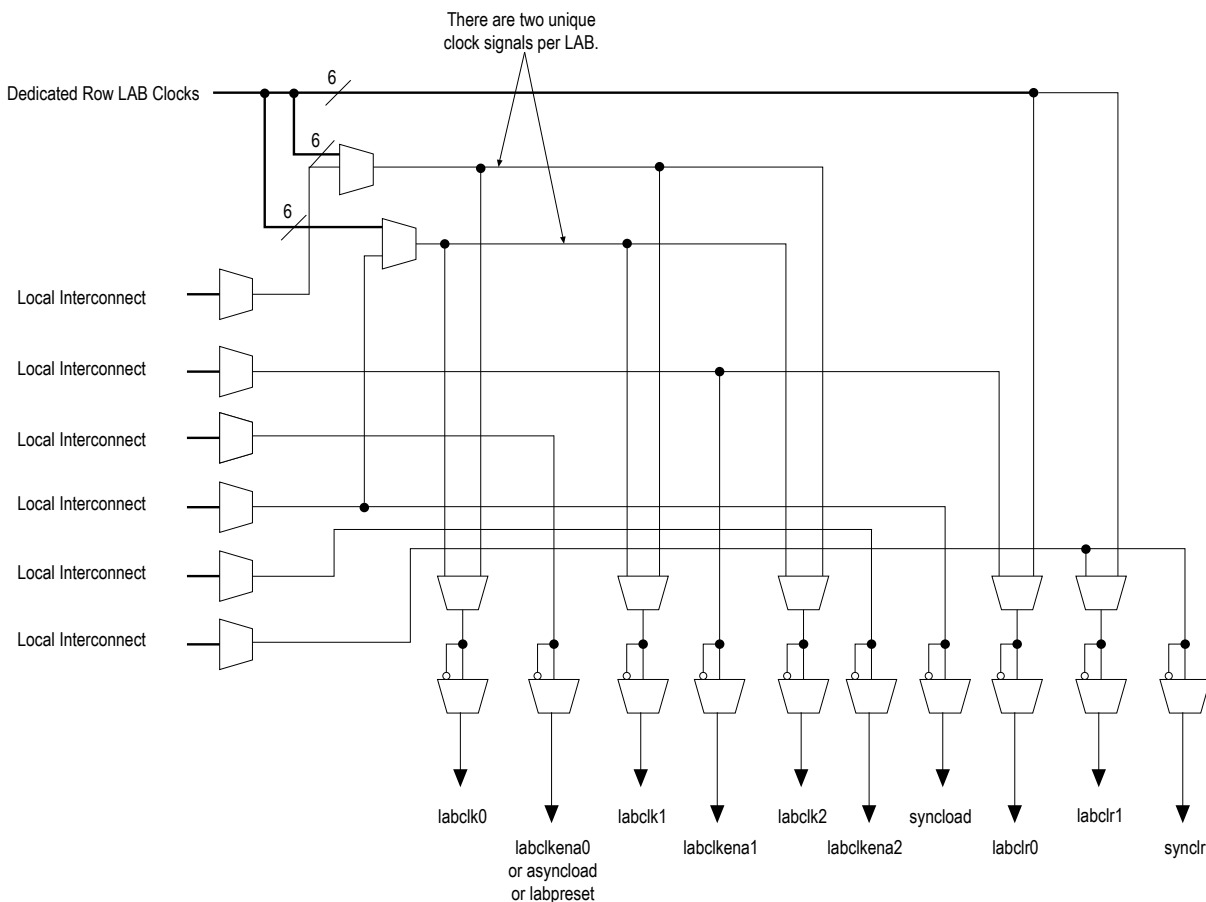


Figure 1-6: LAB-Wide Control Signals for Arria V GZ Devices

ALM Resources

One ALM contains four programmable registers. Each register has the following ports:

- Data
- Clock
- Synchronous and asynchronous clear
- Synchronous load

Global signals, general-purpose I/O (GPIO) pins, or any internal logic can drive the clock and clear control signals of an ALM register.

GPIO pins or internal logic drives the clock enable signal.

For combinational functions, the registers are bypassed and the output of the look-up table (LUT) drives directly to the outputs of an ALM.

Note: The Quartus II software automatically configures the ALMs for optimized performance.

Figure 1-7: ALM High-Level Block Diagram for Arria V GX, GT, SX, and ST Devices


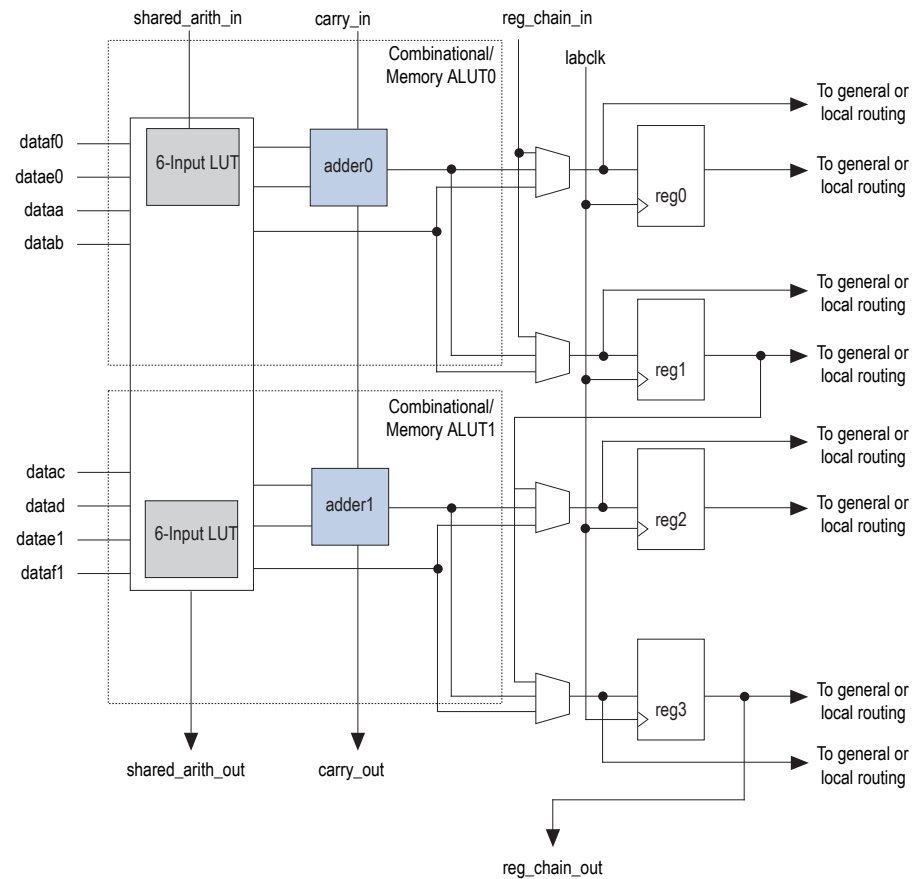


Figure 1-8: ALM High-Level Block Diagram for Arria V GZ Devices

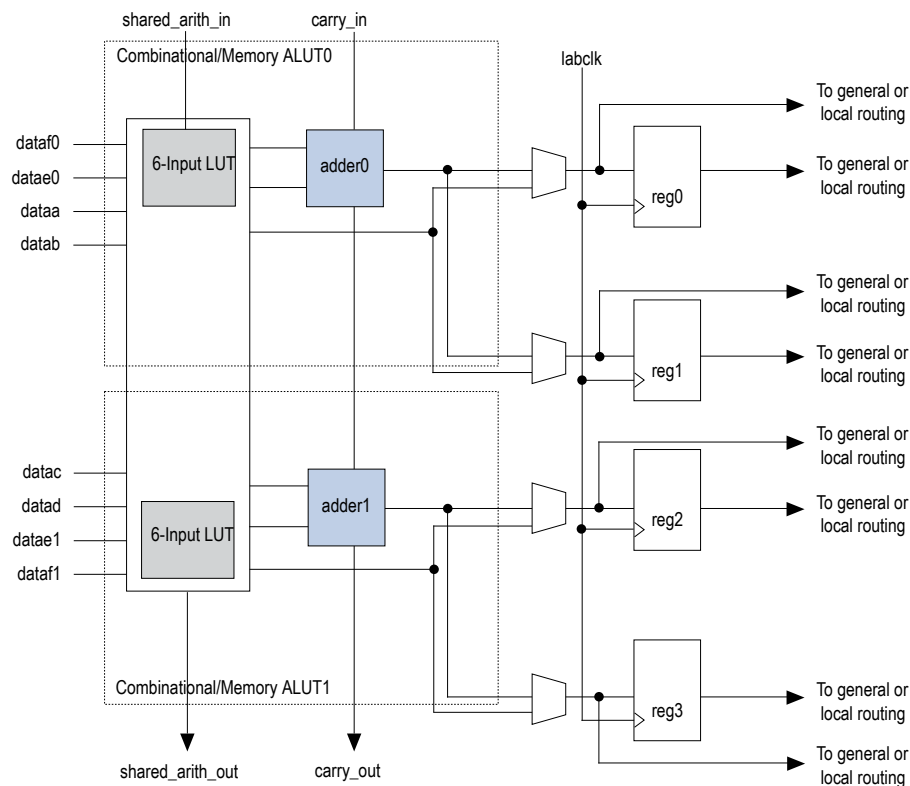

ALM Output

Each ALM has two sets of outputs—general routing outputs and register chain outputs—that drive the local, row, and column routing resources. The LUT, adder, or register output can drive the ALM outputs.

For each set of output drivers, two ALM outputs can drive column, row, or direct link routing connections, and one of these ALM outputs can also drive local interconnect resources. The LUT or adder can drive one output while the register drives another output.

Register packing improves device utilization by allowing unrelated register and combinational logic to be packed into a single ALM. Another mechanism to improve fitting is to allow the register output to feed back into the look-up table (LUT) of the same ALM so that the register is packed with its own fan-out LUT. The ALM can also drive out registered and unregistered versions of the LUT or adder output.

Figure 1-9: ALM Connection Details for Arria V GX, GT, SX, and ST Devices

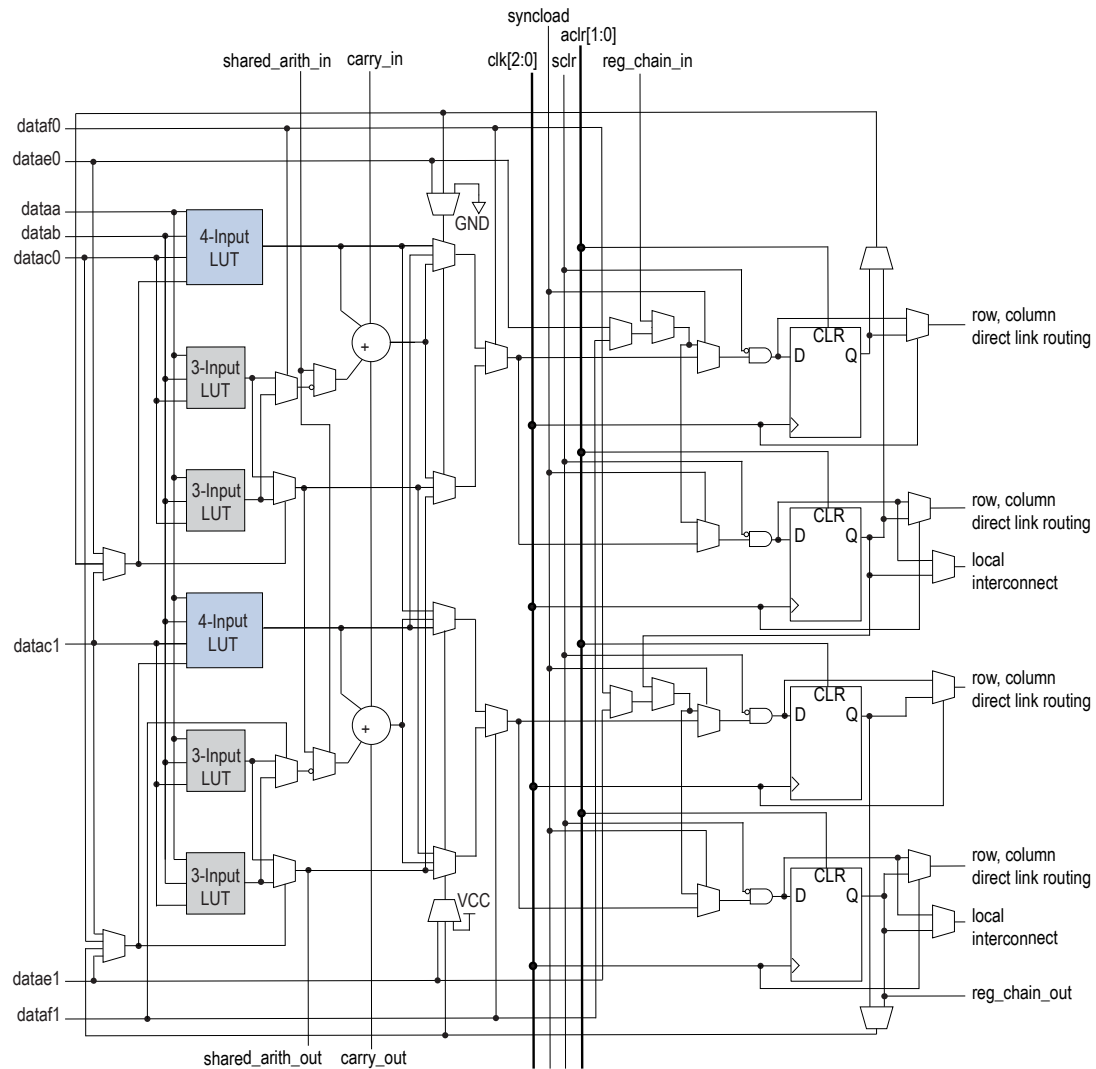
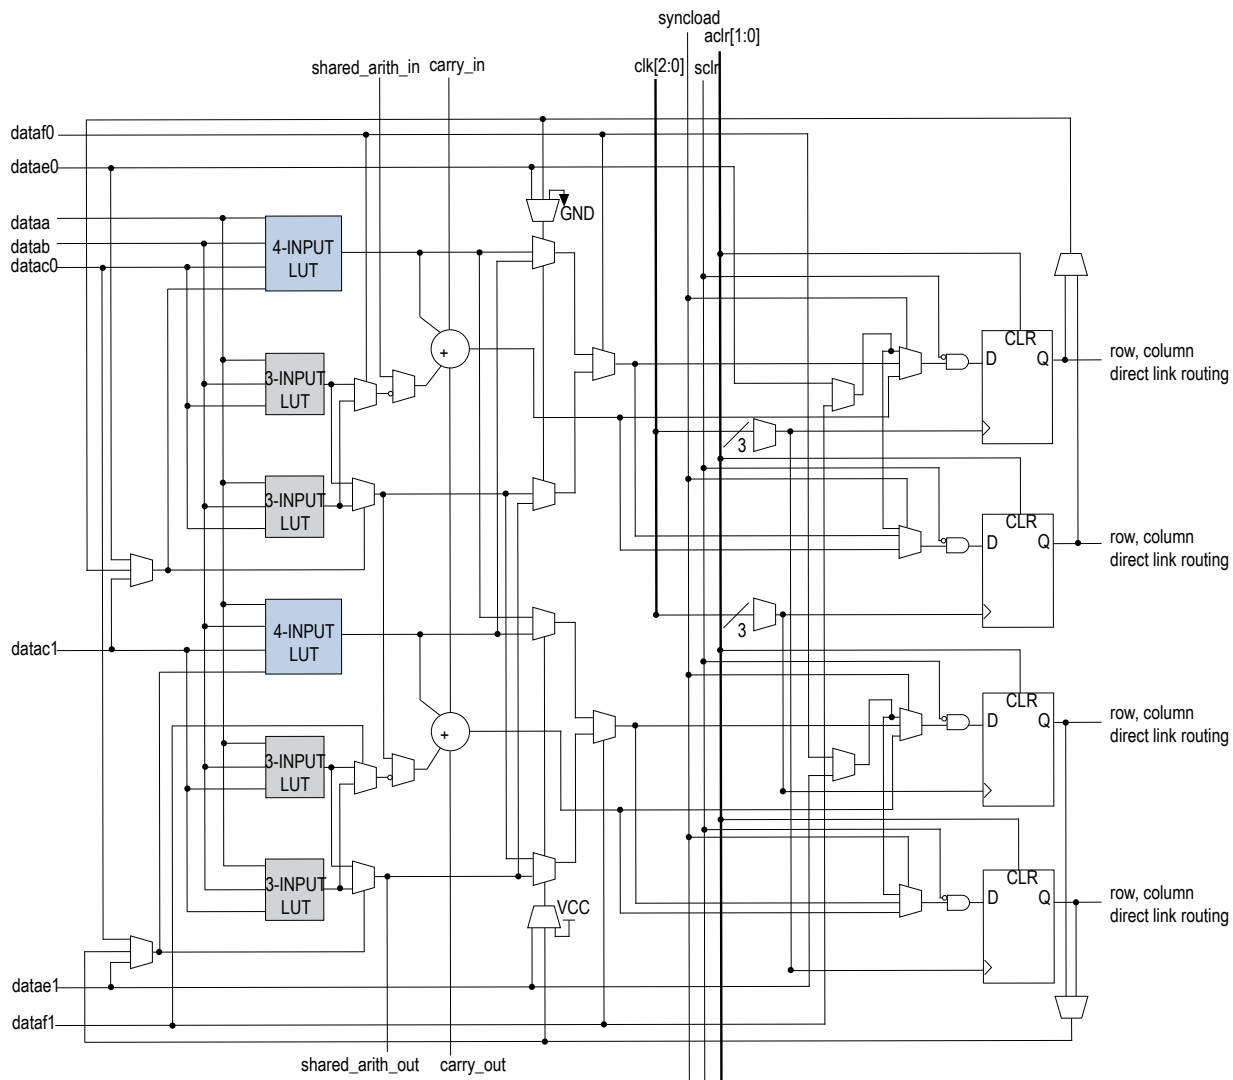


Figure 1-10: ALM Connection Details for Arria V GZ Devices

ALM Operating Modes

The Arria V ALM operates in any of the following modes:

- Normal mode
- Extended LUT mode
- Arithmetic mode
- Shared arithmetic mode

Normal Mode

Normal mode allows two functions to be implemented in one Arria V ALM, or a single function of up to six inputs.

Up to eight data inputs from the LAB local interconnect are inputs to the combinational logic.


The ALM can support certain combinations of completely independent functions and various combinations of functions that have common inputs.

Extended LUT Mode

In this mode, if the 7-input function is unregistered, the unused eighth input is available for register packing.

Functions that fit into the template, as shown in the following figure, often appear in designs as “if-else” statements in Verilog HDL or VHDL code.

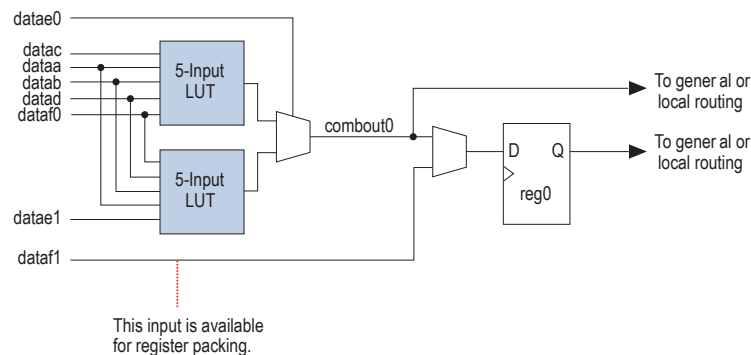Figure 1-11: Template for Supported 7-Input Functions in Extended LUT Mode for Arria V Devices




Arithmetic Mode

The ALM in arithmetic mode uses two sets of two 4-input LUTs along with two dedicated full adders.

The dedicated adders allow the LUTs to perform pre-adder logic; therefore, each adder can add the output of two 4-input functions.

The ALM supports simultaneous use of the adder’s carry output along with combinational logic outputs. The adder output is ignored in this operation.

Using the adder with the combinational logic output provides resource savings of up to 50% for functions that can use this mode.

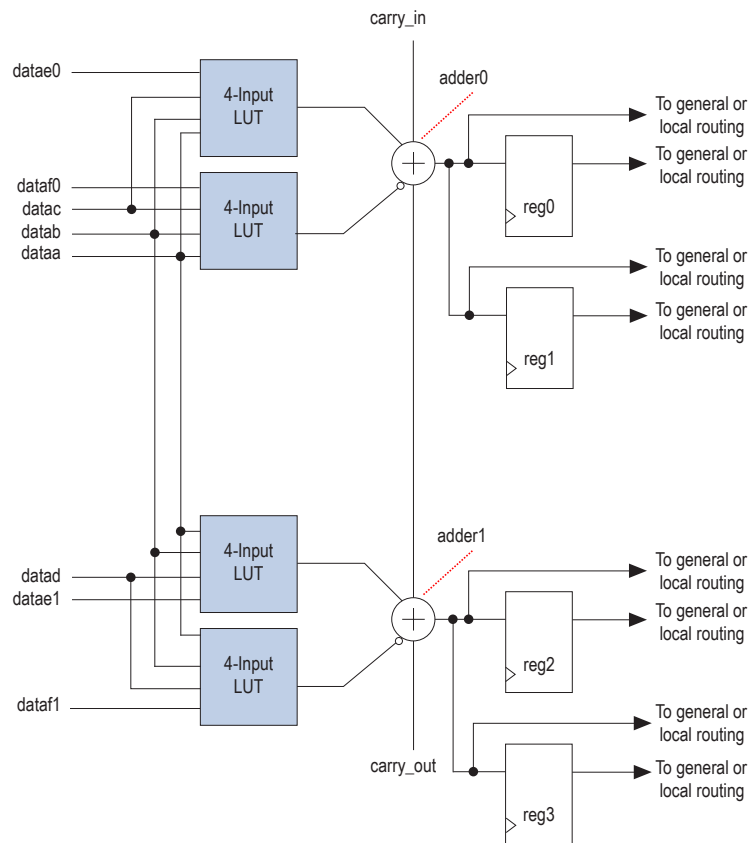Figure 1-12: ALM in Arithmetic Mode for Arria V Devices

Carry Chain

The carry chain provides a fast carry function between the dedicated adders in arithmetic or shared arithmetic mode.

The two-bit carry select feature in Arria V devices halves the propagation delay of carry chains within the ALM. Carry chains can begin in either the first ALM or the fifth ALM in a LAB. The final carry-out signal is routed to an ALM, where it is fed to local, row, or column interconnects.

To avoid routing congestion in one small area of the device when a high fan-in arithmetic function is implemented, the LAB can support carry chains that only use either the top half or bottom half of the LAB before connecting to the next LAB. This leaves the other half of the ALMs in the LAB available for implementing narrower fan-in functions in normal mode. Carry chains that use the top five ALMs in the first LAB carry into the top half of the ALMs in the next LAB in the column. Carry chains that use the bottom five ALMs in the first LAB carry into the bottom half of the ALMs in the next LAB within the column. You can bypass the top-half of the LAB columns and bottom-half of the MLAB columns.


The Quartus II Compiler creates carry chains longer than 20 ALMs (10 ALMs in arithmetic or shared arithmetic mode) by linking LABs together automatically. For enhanced fitting, a long carry chain runs vertically, allowing fast horizontal connections to the TriMatrix memory and DSP blocks. A carry chain can continue as far as a full column.

Shared Arithmetic Mode

The ALM in shared arithmetic mode can implement a 3-input add in the ALM.

This mode configures the ALM with four 4-input LUTs. Each LUT either computes the sum of three inputs or the carry of three inputs. The output of the carry computation is fed to the next adder using a dedicated connection called the shared arithmetic chain.

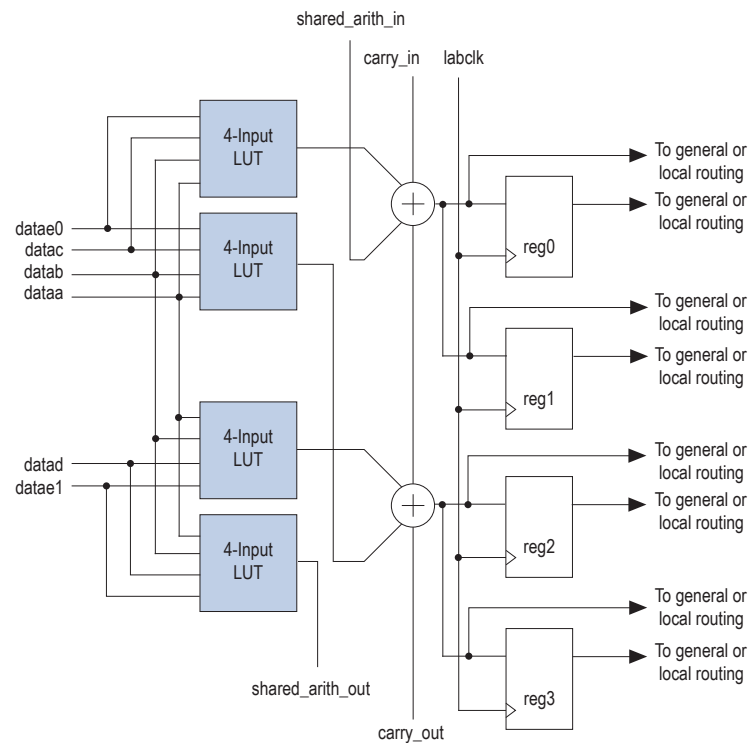Figure 1-13: ALM in Shared Arithmetic Mode for Arria V Devices



Shared Arithmetic Chain

The shared arithmetic chain available in enhanced arithmetic mode allows the ALM to implement a 3-input adder. This significantly reduces the resources necessary to implement large adder trees or correlator functions.

The shared arithmetic chain can begin in either the first or sixth ALM in a LAB.

Similar to carry chains, the top and bottom half of the shared arithmetic chains in alternate LAB columns can be bypassed. This capability allows the shared arithmetic chain to cascade through half of the ALMs in an LAB while leaving the other half available for narrower fan-in functionality. In every LAB, the column is top-half bypassable; while in MLAB, columns are bottom-half bypassable.

The Quartus II Compiler creates shared arithmetic chains longer than 20 ALMs (10 ALMs in arithmetic or shared arithmetic mode) by linking LABs together automatically. To enhance fitting, a long shared arithmetic chain runs vertically, allowing fast horizontal connections to the TriMatrix memory and DSP blocks. A shared arithmetic chain can continue as far as a full column.

Document Revision History

Date	Version	Changes
November 2012	2012.11.19	- Added MLAB structure for Arria V GZ devices. - Added LAB-wide control signals diagram for Arria V GZ devices. - Added ALM high level block diagram for Arria V GZ devices. - Added ALM connection details diagram for Arria V GZ devices. - Reorganized content and updated template.
June 2012	2.0	Updated for the Quartus II software v12.0 release: - Restructured chapter. - Updated Figure 1–6.
November 2011	1.1	Restructured chapter.
May 2011	1.0	Initial release.

Embedded Memory Blocks in Arria V Devices

2

2012.11.19

AV-52002

 [Subscribe](#)

 [Feedback](#)

The embedded memory blocks in the devices are flexible and designed to provide an optimal amount of small- and large-sized memory arrays to fit your design requirements.

Types of Embedded Memory

The Arria V devices contain two types of memory blocks:

- 20 Kb M20K or 10 Kb M10K blocks—blocks of dedicated memory resources. The M20K and M10K blocks are ideal for larger memory arrays while still providing a large number of independent ports.
- 640-bit memory logic array blocks (MLABs)—enhanced memory blocks that are configured from dual-purpose logic array blocks (LABs). The MLABs are ideal for wide and shallow memory arrays. The MLABs are optimized for implementation of shift registers for digital signal processing (DSP) applications, wide shallow FIFO buffers, and filter delay lines. Each MLAB is made up of ten adaptive logic modules (ALMs). In the Arria V devices, you can configure these ALMs as ten 32 x 2 blocks, giving you one 32 x 20 simple dual-port SRAM block per MLAB. You can also configure these ALMs, in Arria V GZ devices, as ten 64 x 1 blocks, giving you one 64 x 10 simple dual-port SRAM block per MLAB.

Embedded Memory Capacity in Arria V Devices

Table 2-1: Embedded Memory Capacity and Distribution in Arria V Devices

Variant	Member Code	M20K		M10K		MLAB		Total RAM Bit (Kb)
		Block	RAM Bit (Kb)	Block	RAM Bit (Kb)	Block	RAM Bit (Kb)	
Arria V GX	A1	—	—	800	8,000	741	463	8,463
	A3	—	—	1,051	10,510	1538	961	11,471
	A5	—	—	1,180	11,800	1877	1,173	12,973
	A7	—	—	1,366	13,660	2317	1,448	15,108
	B1	—	—	1,510	15,100	2964	1,852	16,952
	B3	—	—	1,726	17,260	3357	2,098	19,358
	B5	—	—	2,054	20,540	4052	2,532	23,072
	B7	—	—	2,414	24,140	4650	2,906	27,046

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered

Variant	Member Code	M20K		M10K		MLAB		Total RAM Bit (Kb)
		Block	RAM Bit (Kb)	Block	RAM Bit (Kb)	Block	RAM Bit (Kb)	
Arria V GT	C3	—	—	1,051	10,510	1538	961	11,471
	C7	—	—	1,366	13,660	2317	1,448	15,108
	D3	—	—	1,726	17,260	3357	2,098	19,358
	D7	—	—	2,414	24,140	4650	2,906	27,046
Arria V GZ	E1	585	11,700	—	—	4,151	2,594	14,294
	E3	957	19,140	—	—	6,792	4,245	23,385
	E5	1,440	28,800	—	—	7,548	4,718	33,518
	E7	1,700	34,000	—	—	8,490	5,306	39,306
Arria V SX	B3	—	—	1,729	17,290	3223	2,014	19,304
	B5	—	—	2,282	22,820	4253	2,658	25,478
Arria V ST	D3	—	—	1,729	17,290	3223	2,014	19,304
	D5	—	—	2,282	22,820	4253	2,658	25,478

Embedded Memory Design Guidelines for Arria V Devices

There are several considerations that require your attention to ensure the success of your designs. Unless noted otherwise, these design guidelines apply to all variants of this device family.

Guideline: Consider the Memory Block Selection

The Quartus II software automatically partitions the user-defined memory into the memory blocks based on your design's speed and size constraints. For example, the Quartus II software may spread out the memory across multiple available memory blocks to increase the performance of the design.

To assign the memory to a specific block size manually, use the RAM megafunction in the MegaWizard™ Plug-In Manager.

For the memory logic array blocks (MLAB), you can implement single-port SRAM through emulation using the Quartus II software. Emulation results in minimal additional use of logic resources.

Because of the dual-purpose architecture of the MLAB, only data input and output registers are available in the block. The MLABs gain read address registers from the ALMs. However, the write address and read data registers are internal to the MLABs.

Guideline: Implement External Conflict Resolution


In the true dual-port RAM mode, you can perform two write operations to the same memory location. However, the memory blocks do not have internal conflict resolution circuitry. To avoid unknown data being written to the address, implement external conflict resolution logic to the memory block.

Guideline: Customize Read-During-Write Behavior

Customize the read-during-write behavior of the memory blocks to suit your design requirements.

The following figure shows the difference between the two types of read-during-write operations available—same port and mixed port.

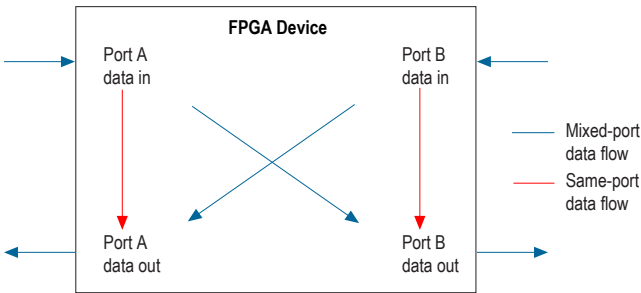Figure 2-1: Read-During-Write Data Flow



Same-Port Read-During-Write Mode

The same-port read-during-write mode applies to a single-port RAM or the same port of a true dual-port RAM.


The following table lists the available output modes if you select the embedded memory blocks in the same-port read-during-write mode.

Table 2-2: Output Modes for Embedded Memory Blocks in Same-Port Read-During-Write Mode

Output Mode	Memory Type	Description
"new data" (flow-through)	M20K, M10K	The new data is available on the rising edge of the same clock cycle on which the new data is written.
"don't care"	M20K, M10K, MLAB	The RAM outputs "don't care" values for a read-during-write operation.

The following figure shows sample functional waveforms of same-port read-during-write behavior in the “new data” mode.

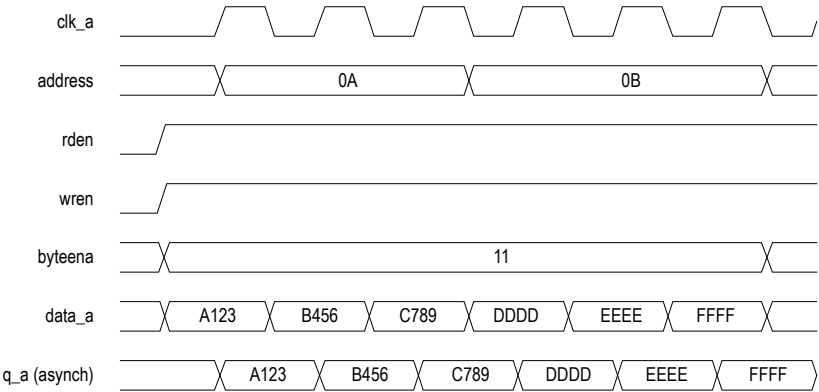Figure 2-2: Same-Port Read-During-Write: New Data Mode



Mixed-Port Read-During-Write Mode

The mixed-port read-during-write mode applies to simple and true dual-port RAM modes where two ports perform read and write operations on the same memory address using the same clock—one port reading from the address, and the other port writing to it.


The following table lists the available output modes in the mixed-port read-during-write mode.

Table 2-3: Output Modes for RAM in Mixed-Port Read-During-Write Mode


Output Mode	Memory Type	Description
"new data"	MLAB	A read-during-write operation to different ports causes the MLAB registered output to reflect the "new data" on the next rising edge after the data is written to the MLAB memory. This mode is available only if the output is registered.
"old data"	M20K, M10K, MLAB	A read-during-write operation to different ports causes the RAM output to reflect the "old data" value at the particular address. For MLAB, this mode is available only if the output is registered.
"don't care"	M20K, M10K, MLAB	The RAM outputs "don't care" or "unknown" value. For MLAB, the Quartus II software does not analyze the timing between write and read operations. To prevent metastability issue at the MLAB output, never write and read the same address at the same time. For M20K or M10K memory, the Quartus II software analyzes the timing between write and read operations.
"constrained don't care"	MLAB	The RAM outputs "don't care" or "unknown" value. The Quartus II software analyzes the timing between write and read operations in the MLAB.

The following figure shows a sample functional waveform of mixed-port read-during-write behavior for the "new data" mode.

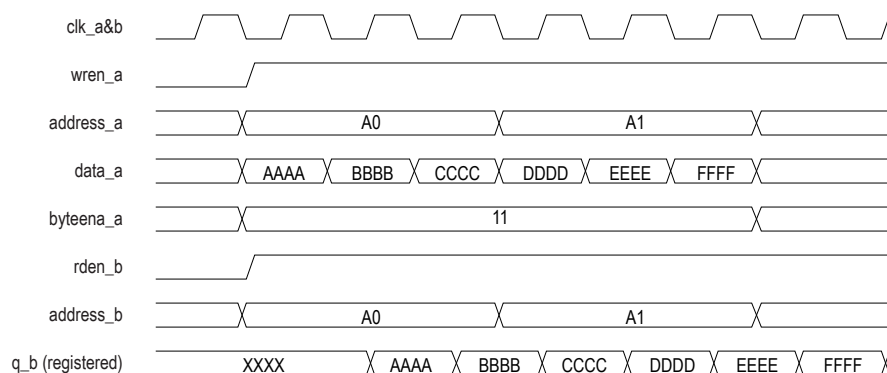
Figure 2-3: Mixed-Port Read-During-Write: New Data Mode



The following figure shows a sample functional waveform of mixed-port read-during-write behavior for the "old data" mode.

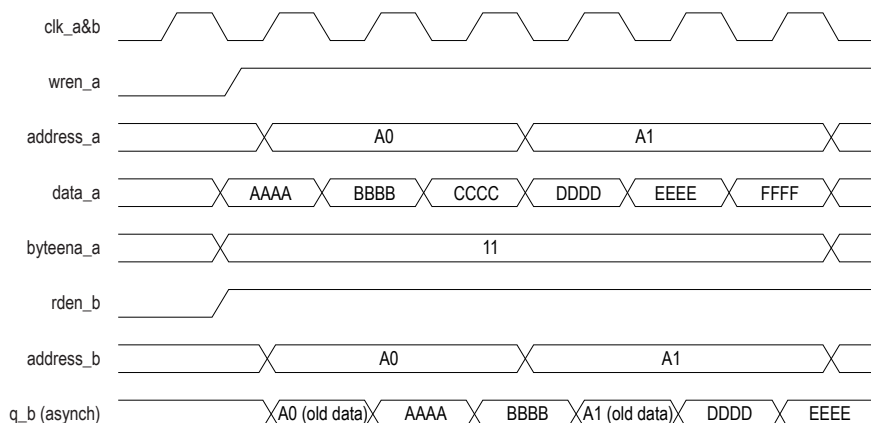Figure 2-4: Mixed-Port Read-During-Write: Old Data Mode

The following figure shows a sample functional waveform of mixed-port read-during-write behavior for the “don’t care” or “constrained don’t care” mode.

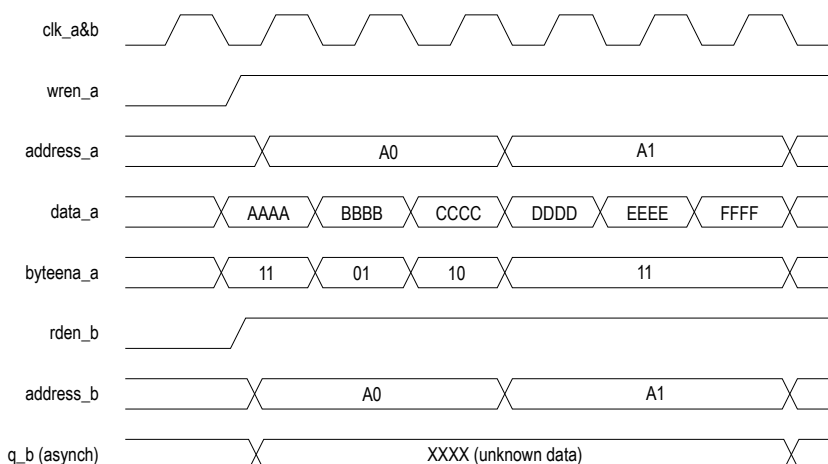Figure 2-5: Mixed-Port Read-During-Write: Don’t Care or Constrained Don’t Care Mode

In the dual-port RAM mode, the mixed-port read-during-write operation is supported if the input registers have the same clock. The output value during the operation is “unknown.”

For more information about the RAM megafunction that controls the read-during-write behavior, refer to the [Internal Memory \(RAM and ROM\) User Guide](#).

Guideline: Consider Power-Up State and Memory Initialization

Consider the power up state of the different types of memory blocks if you are designing logic that evaluates the initial power-up values, as listed in the following table.

Table 2-4: Initial Power-Up Values of Embedded Memory Blocks

Memory Type	Output Registers	Power Up Value
MLAB	Used	Zero (cleared)
	Bypassed	Read memory contents

Memory Type	Output Registers	Power Up Value
M20K, M10K	Used	Zero (cleared)
	Bypassed	Zero (cleared)

By default, the Quartus II software initializes the RAM cells in Arria V devices to zero unless you specify a **.mif**.

All memory blocks support initialization with a **.mif**. You can create **.mif** files in the Quartus II software and specify their use with the RAM megafunction when you instantiate a memory in your design. Even if a memory is pre-initialized (for example, using a **.mif**), it still powers up with its output cleared.

For more information about **.mif** files, refer to the [Internal Memory \(RAM and ROM\) User Guide](#) and the [Quartus II Handbook](#).

Guideline: Control Clocking to Reduce Power Consumption

Reduce AC power consumption in your design by controlling the clocking of each memory block:

- Use the read-enable signal to ensure that read operations occur only when necessary. If your design does not require read-during-write, you can reduce your power consumption by deasserting the read-enable signal during write operations, or during the period when no memory operations occur.
- Use the Quartus II software to automatically place any unused memory blocks in low-power mode to reduce static power.

Embedded Memory Features

The following table summarizes the features supported by the embedded memory blocks.

Table 2-5: Memory Features in Arria V Devices

Features	M20K, M10K	MLAB
Maximum operating frequency	M20K—600 MHz M10K—400 MHz	Arria V GX, GT, SX, and ST—500 MHz Arria V GZ—600 MHz
Total RAM bits (including parity bits)	M20K—20,480 M10K—10,240	640
Parity bits	Supported	Supported
Byte enable	Supported	Supported
Packed mode	Supported	—
Address clock enable	Supported	Supported
Simple dual-port mixed width	Supported	—
True dual-port mixed width	Supported	—
FIFO buffer mixed width	Supported	—
Memory Initialization File (.mif)	Supported	Supported

Features	M20K, M10K	MLAB
Mixed-clock mode	Supported	Supported
Fully synchronous memory	Supported	Supported
Asynchronous memory	—	Only for flow-through read memory operations.
Power-up state	Output ports are cleared.	- Registered output ports—Cleared. - Unregistered output ports—Read memory contents.
Asynchronous clears	Output registers	Output registers
Write/read operation triggering	Rising clock edges	Rising clock edges
Same-port read-during-write	- M20K—output ports set to new data - M10K—output ports set to "new data" or "don't care" The "don't care" mode applies only for the single-port RAM mode).	Output ports set to "don't care".
Mixed-port read-during-write	Output ports set to "old data" or "don't care".	Output ports set to "old data", "new data", "don't care", or "constrained don't care".
ECC support	Soft IP support using the Quartus® II software. Built-in support in x32-wide simple dual-port mode (M20K only).	Soft IP support using the Quartus® II software.

Embedded Memory Configurations

Table 2-6: Supported Embedded Memory Block Configurations for Arria V Devices

Memory Block	Depth (bits)	Programmable Width
MLAB	32	x16, x18, or x20
	64	x10

Memory Block	Depth (bits)	Programmable Width
M20K	512	x40
	1K	x20
	2K	x10
	4K	x5
	8K	x2
	16K	x1
M10K	256	x40 or x32
	512	x20 or x16
	1K	x10 or x8
	2K	x5 or x4
	4K	x2
	8K	x1

Embedded Memory Modes

The following table lists and describes the memory modes that are supported in the Arria V embedded memory blocks.

Caution: To avoid corrupting the memory contents, do not violate the setup or hold time on any of the memory block input registers during read or write operations. This is applicable if you use the memory blocks in single-port RAM, simple dual-port RAM, true dual-port RAM, or ROM mode.

Table 2-7: Memory Modes Supported in the Embedded Memory Blocks

Memory Mode	M20K and M10K Support	MLAB Support	Description and Additional Information
Single-port RAM	Yes	Yes	You can perform only one read or one write operation at a time. Use the read enable port to control the RAM output ports behavior during a write operation: - To retain the previous values that are held during the most recent active read enable—create a read-enable port and perform the write operation with the read enable port deasserted. - To show the new data being written, the old data at that address, or a "Don't Care" value when read-during-write occurs at the same address location—do not create a read-enable signal, or activate the read enable during a write operation.
Simple dual-port RAM	Yes	Yes	You can simultaneously perform one read and one write operations to different locations where the write operation happens on port A and the read operation happens on port B.

Memory Mode	M20K and M10K Support	MLAB Support	Description and Additional Information
True dual-port RAM	Yes	—	You can perform any combination of two port operations: two reads, two writes, or one read and one write at two different clock frequencies.
Shift-register	Yes	Yes	You can use the memory blocks as a shift-register block to save logic cells and routing resources. This is useful in DSP applications that require local data storage such as finite impulse response (FIR) filters, pseudo-random number generators, multi-channel filtering, and auto- and cross-correlation functions. Traditionally, the local data storage is implemented with standard flip-flops that exhaust many logic cells for large shift registers. The input data width (w), the length of the taps (m), and the number of taps (n) determine the size of a shift register (w x m x n). You can cascade memory blocks to implement larger shift registers.
ROM	Yes	Yes	You can use the memory blocks as ROM. - Initialize the ROM contents of the memory blocks using a .mif or .hex. - The address lines of the ROM are registered on M20K or M10K blocks but can be unregistered on MLABs. - The outputs can be registered or unregistered. - The output registers can be asynchronously cleared. - The ROM read operation is identical to the read operation in the single-port RAM configuration.
FIFO	Yes	Yes	You can use the memory blocks as FIFO buffers. Use the SCFIFO and DCFIFO megafunctions to implement single- and dual-clock asynchronous FIFO buffers in your design. For designs with many small and shallow FIFO buffers, the MLABs are ideal for the FIFO mode. However, the MLABs do not support mixed-width FIFO mode.

For more information about the following topics, refer to the respective user guides:

- Memory modes—[Internal Memory \(RAM and ROM\) User Guide](#).
- Implementing the shift register mode—[RAM-Based Shift Register \(ALTSHIFT_TAPS\) Megafunction User Guide](#).
- Implementing FIFO buffers—[SCFIFO and DCFIFO Megafunctions User Guide](#).

Mixed-Width Port Configurations

The mixed-width port configuration is supported in the simple dual-port RAM and true dual-port RAM memory modes.

For more information about dual-port mixed width support, refer to the [Internal Memory \(RAM and ROM\) User Guide](#).

M20K Blocks Mixed-Width Configurations

The following table lists the mixed-width configurations of the M20K blocks in the simple dual-port RAM mode.

Table 2-8: M20K Block Mixed-Width Configurations (Simple Dual-Port RAM Mode)

Read Port	Write Port									
	16K x 1	8K x 2	4K x 4	4K x 5	2K x 8	2K x 10	1K x 16	1K x 20	512 x 32	512 x 40
16K x 1	Yes	Yes	Yes	—	Yes	—	Yes	—	Yes	—
8K x 2	Yes	Yes	Yes	—	Yes	—	Yes	—	Yes	—
4K x 4	Yes	Yes	Yes	—	Yes	—	Yes	—	Yes	—
4K x 5	—	—	—	Yes	—	Yes	—	Yes	—	Yes
2K x 8	Yes	Yes	Yes	—	Yes	—	Yes	—	Yes	—
2K x 10	—	—	—	Yes	—	Yes	—	Yes	—	Yes
1K x 16	Yes	Yes	Yes	—	Yes	—	Yes	—	Yes	—
1K x 20	—	—	—	Yes	—	Yes	—	Yes	—	Yes
512 x 32	Yes	Yes	Yes	—	Yes	—	Yes	—	Yes	—
512 x 40	—	—	—	Yes	—	Yes	—	Yes	—	Yes

The following table lists the mixed-width configurations of the M20K blocks in true dual-port mode.

Table 2-9: M20K Block Mixed-Width Configurations (True Dual-Port Mode)

Port A	Port B							
	16K x 1	8K x 2	4K x 4	4K x 5	2K x 8	2K x 10	1K x 16	1K x 20
16K x 1	Yes	Yes	Yes	—	Yes	—	Yes	—
8K x 2	Yes	Yes	Yes	—	Yes	—	Yes	—
4K x 4	Yes	Yes	Yes	—	Yes	—	Yes	—
4K x 5	—	—	—	Yes	—	Yes	—	Yes
2K x 8	Yes	Yes	Yes	—	Yes	—	Yes	—
2K x 10	—	—	—	Yes	—	Yes	—	Yes
1K x 16	Yes	Yes	Yes	—	Yes	—	Yes	—
1K x 20	—	—	—	Yes	—	Yes	—	Yes

M10K Blocks Mixed-Width Configurations

The following table lists the mixed-width configurations of the M10K blocks in the simple dual-port RAM mode.

Table 2-10: M10K Block Mixed-Width Configurations (Simple Dual-Port RAM Mode)

Read Port	Write Port									
	8K x 1	4K x 2	2K x 4	2K x 5	1K x 8	1k x 10	512 x 16	512 x 20	256 x 32	256 x 40
8K x 1	Yes	Yes	Yes	—	Yes	—	Yes	—	Yes	—
4K x 2	Yes	Yes	Yes	—	Yes	—	Yes	—	Yes	—
2K x 4	Yes	Yes	Yes	—	Yes	—	Yes	—	Yes	—
2K x 5	—	—	—	Yes	—	Yes	—	Yes	—	Yes
1K x 8	Yes	Yes	Yes	—	Yes	—	Yes	—	Yes	—
1K x 10	—	—	—	Yes	—	Yes	—	Yes	—	Yes
512 x 16	Yes	Yes	Yes	—	Yes	—	Yes	—	Yes	—
512 x 20	—	—	—	Yes	—	Yes	—	Yes	—	Yes
256 x 32	Yes	Yes	Yes	—	Yes	—	Yes	—	Yes	—
256 x 40	—	—	—	Yes	—	Yes	—	Yes	—	Yes

The following table lists the mixed-width configurations of the M10K blocks in true dual-port mode.

Table 2-11: M10K Block Mixed-Width Configurations (True Dual-Port Mode)

Port B	Port A							
	8K x 1	4K x 2	2K x 4	2K x 5	1K x 8	1K x 10	512 x 16	512 x 20
8K x 1	Yes	Yes	Yes	—	Yes	—	Yes	—
4K x 2	Yes	Yes	Yes	—	Yes	—	Yes	—
2K x 4	Yes	Yes	Yes	—	Yes	—	Yes	—
2K x 5	—	—	—	Yes	—	Yes	—	Yes
1K x 8	Yes	Yes	Yes	—	Yes	—	Yes	—
1K x 10	—	—	—	Yes	—	Yes	—	Yes
512 x 16	Yes	Yes	Yes	—	Yes	—	Yes	—
512 x 20	—	—	—	Yes	—	Yes	—	Yes

MLABs Mixed-Width Configurations

MLABs do not have native support for mixed-width operation. However, if you select AUTO for your memory block type in the parameter editor, the Quartus II software can implement mixed-width memories in MLABs by using more than one MLAB.

Embedded Memory Clocking Modes

This section describes the clocking modes for the Arria V memory blocks.

Caution: To avoid corrupting the memory contents, do not violate the setup or hold time on any of the memory block input registers during read or write operations.

Clocking Modes for Each Memory Mode

The following table lists the embedded memory clocking modes supported for each memory mode.

Table 2-12: Memory Blocks Clocking Modes for Each Memory Mode

Clocking Mode	Memory Mode				
	Single-Port	Simple Dual-Port	True Dual-Port	ROM	FIFO
Single clock mode	Yes	Yes	Yes	Yes	Yes
Read/write clock mode	—	Yes	—	—	Yes
Input/output clock mode	Yes	Yes	Yes	Yes	—
Independent clock mode	—	—	Yes	Yes	—

Note: The clock enable signals are not supported for write address, byte enable, and data input registers on Arria V MLAB blocks.

Single Clock Mode

In the single clock mode, a single clock, together with a clock enable, controls all registers of the memory block.

Read/Write Clock Mode

In the read/write clock mode, a separate clock is available for each read and write port. A read clock controls the data-output, read-address, and read-enable registers. A write clock controls the data-input, write-address, write-enable, and byte enable registers.

Input/Output Clock Mode

In input/output clock mode, a separate clock is available for each input and output port. An input clock controls all registers related to the data input to the memory block including data, address, byte enables, read enables, and write enables. An output clock controls the data output registers.

Independent Clock Mode

In the independent clock mode, a separate clock is available for each port (A and B). Clock A controls all registers on the port A side; clock B controls all registers on the port B side.

Note: You can create independent clock enable for different input and output registers to control the shut down of a particular register for power saving purposes. From the parameter editor, click **More Options** (beside the clock enable option) to set the available independent clock enable that you prefer.

Asynchronous Clears in Clocking Modes

In all clocking modes, asynchronous clears are available only for output latches and output registers. For the independent clock mode, this is applicable on both ports.

Output Read Data in Simultaneous Read/Write

If you perform a simultaneous read/write to the same address location using the read/write clock mode, the output read data is unknown. If you require the output read data to be a known value, use single-clock or input/output clock mode and select the appropriate read-during-write behavior in the MegaWizard™ Plug-In Manager.

Independent Clock Enables in Clocking Modes

Independent clock enables are supported in the following clocking modes:

- Read/write clock mode—supported for both the read and write clocks.
- Independent clock mode—supported for the registers of both ports.

To save power, you can control the shut down of a particular register using the clock enables. For more information, refer to [Guideline: Control Clocking to Reduce Power Consumption](#) on page 6.

Parity Bit in Memory Blocks

The following table describes the parity bit support for the memory blocks.

Table 2-13: Parity Bit Support for the Embedded Memory Blocks

M20K, M10K	MLAB
• The parity bit is the fifth bit associated with each 4 data bits in data widths of 5, 10, 20, and 40 (bits 4, 9, 14, 19, 24, 29, 34, and 39). • In non-parity data widths, the parity bits are skipped during read or write operations. • Parity function is not performed on the parity bit.	• The parity bit is the ninth bit associated with each byte. • The ninth bit can store a parity bit or serve as an additional bit. • Parity function is not performed on the parity bit.

Byte Enable in Embedded Memory Blocks

The embedded memory blocks support byte enable controls:

- The byte enable controls mask the input data so that only specific bytes of data are written. The unwritten bytes retain the values written previously.
- The write enable (`wren`) signal, together with the byte enable (`byteena`) signal, control the write operations on the RAM blocks. By default, the `byteena` signal is high (enabled) and only the `wren` signal controls the writing.
- The byte enable registers do not have a `clear` port.
- If you are using parity bits, on the M20K or M10K blocks, the byte enable function controls 8 data bits and 2 parity bits; on the MLABs, the byte enable function controls all 10 bits in the widest mode.
- The MSB and LSB of the `byteena` signal correspond to the MSB and LSB of the data bus, respectively.
- The byte enables are active high.

Byte Enable Controls in Memory Blocks

The following table lists the `byteena` controls in the x20 data widths.

Table 2-14: `byteena` Controls in x20 Data Width

<code>byteena[1:0]</code>	Data Bits Written	
11 (default)	[19:10]	[9:0]
10	[19:10]	—
01	—	[9:0]

The following table lists the `byteena` controls in the x40 data widths.

Table 2-15: `byteena` Controls in x40 Data Width

<code>byteena[3:0]</code>	Data Bits Written			
1111 (default)	[39:30]	[29:20]	[19:10]	[9:0]
1000	[39:30]	—	—	—
0100	—	[29:20]	—	—
0010	—	—	[19:10]	—
0001	—	—	—	[9:0]

Note: If you use the ECC feature on the M20K blocks, you cannot use the byte enable feature.


Data Byte Output

In M10K blocks, the corresponding masked data byte output appears as a “don’t care” value.

In M20K blocks or MLABs, when you de-assert a byte-enable bit during a write cycle, the corresponding data byte output appears as either a “don’t care” value or the current data at that location. You can control the output value for the masked byte in the M20K blocks or MLABs by using the Quartus II software.

RAM Blocks Operations

The following figure shows how the `wren` and `byteena` signals control the operations of the RAM blocks. For the M10K blocks, the write-masked data byte output appears as a “don’t care” value because the “current data” value is not supported.

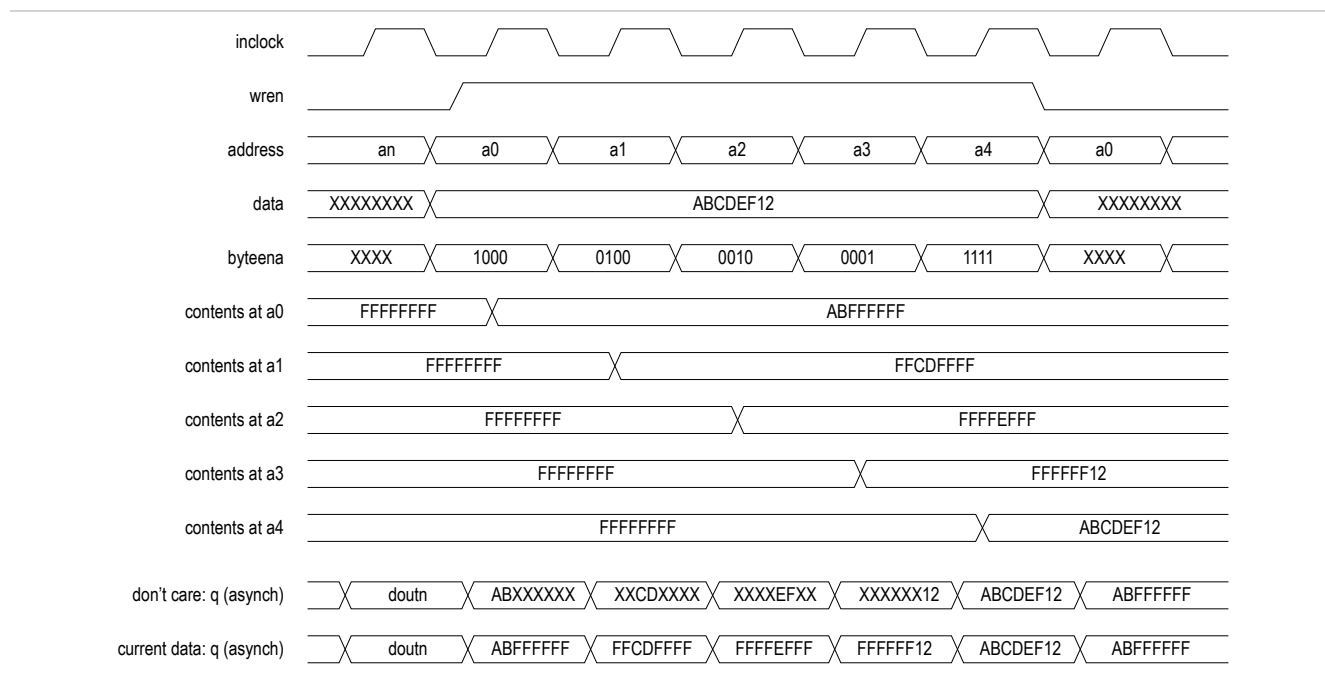Figure 2-6: Byte Enable Functional Waveform

Memory Blocks Packed Mode Support

The M20K and M10K memory blocks support packed mode.


The packed mode feature packs two independent single-port RAM blocks into one memory block. The Quartus II software automatically implements packed mode where appropriate by placing the physical RAM block in true dual-port mode and using the MSB of the address to distinguish between the two logical RAM blocks. The size of each independent single-port RAM must not exceed half of the target block size.

Memory Blocks Address Clock Enable Support

The embedded memory blocks support address clock enable, which holds the previous address value for as long as the signal is enabled ($\text{addressstall} = 1$). When the memory blocks are configured in dual-port mode, each port has its own independent address clock enable. The default value for the address clock enable signal is low (disabled).


The following figure shows an address clock enable block diagram. The address clock enable is referred to by the port name `addressstall`.

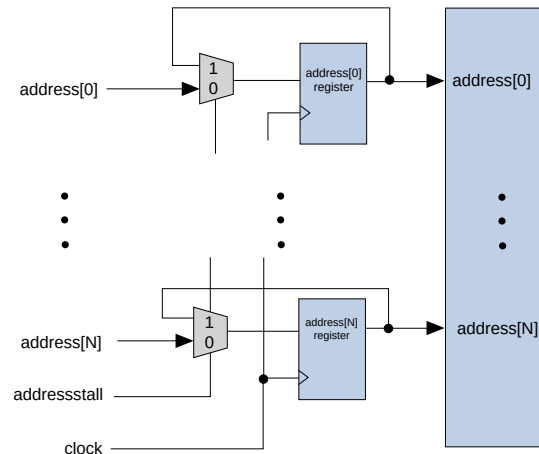Figure 2-7: Address Clock Enable




The following figure shows the address clock enable waveform during the read cycle.

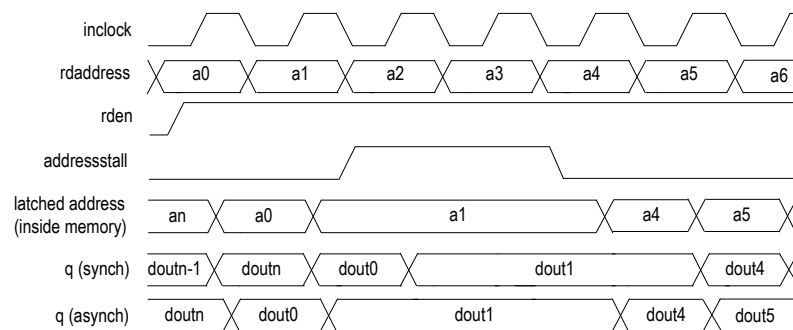Figure 2-8: Address Clock Enable During Read Cycle Waveform



The following figure shows the address clock enable waveform during the write cycle.

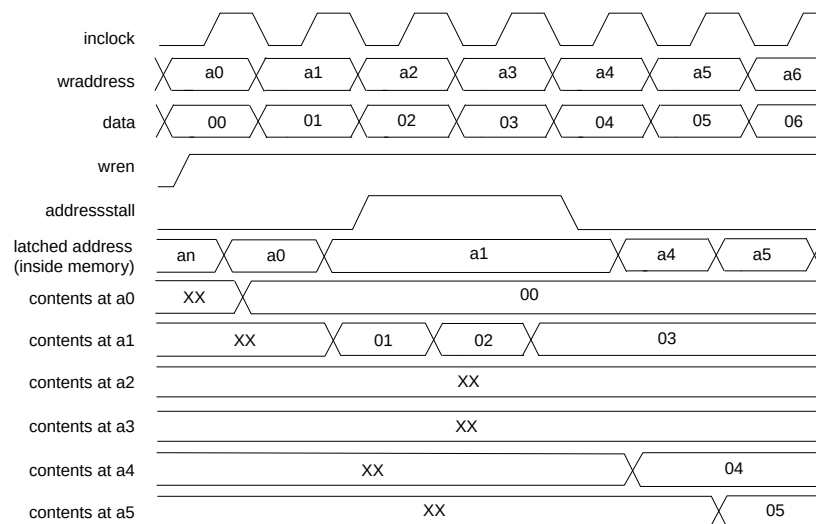Figure 2-9: Address Clock Enable During the Write Cycle Waveform



Memory Blocks Error Correction Code Support

ECC allows you to detect and correct data errors at the output of the memory. ECC can perform single-error correction, double-adjacent-error correction, and triple-adjacent-error detection in a 32-bit word. However, ECC cannot detect four or more errors.

The M20K blocks have built-in support for ECC when in x32-wide simple dual-port mode:

- The M20K runs slower than non-ECC simple-dual port mode when ECC is engaged. However, you can enable optional ECC pipeline registers before the output decoder to achieve the same performance as non-ECC simple-dual port mode at the expense of one cycle of latency.
- The M20K ECC status is communicated with two ECC status flag signals—*e* (error) and *ue* (uncorrectable error). The status flags are part of the regular output from the memory block. When ECC is engaged, you cannot access two of the parity bits because the ECC status flag replaces them.

Error Correction Code Truth Table


Table 2-16: ECC Status Flags Truth Table

e (error) eccstatus [1]	ue (uncorrectable error) eccstatus [0]	Status
0	0	No error.
0	1	Illegal.
1	0	A correctable error occurred and the error has been corrected at the outputs; however, the memory array has not been updated.
1	1	An uncorrectable error occurred and uncorrectable data appears at the outputs.

If you engage ECC:

- You cannot use the byte enable feature.
- Read-during-write old data mode is not supported.

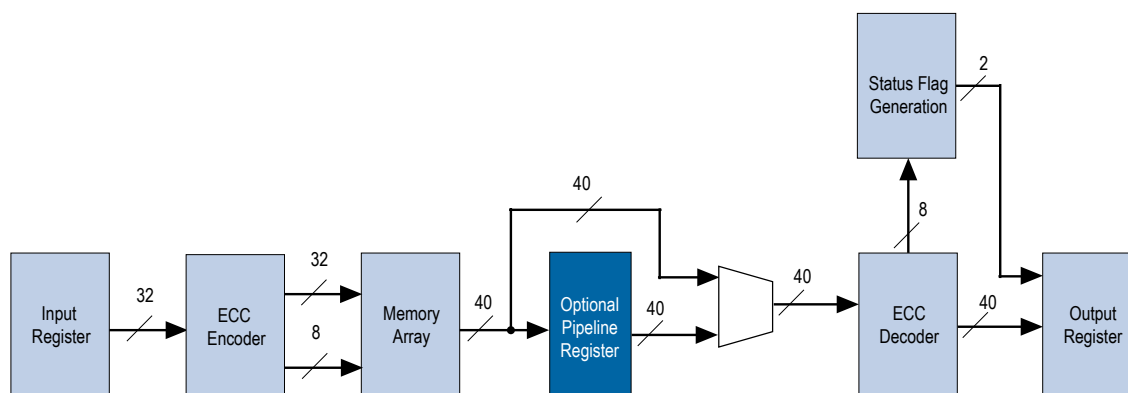Figure 2-10: ECC Block Diagram for M20K Memory



Document Revision History

Date	Version	Changes
November 2012	2012.11.19	• Reorganized content and updated template. • Added information for Arria V GZ including M20K memory, memory features, and memory capacity. • Added and updated memory capacity information from the <i>Arria V Device Overview</i> for easy reference. • Moved information about supported memory block configurations into its own table. • Added short descriptions of each clocking mode. • Added topic about the packed mode support. • Added topic about the address clock enable support. • Added topic about ECC support and the ECC truth table.
June 2012	2.0	• Restructured the chapter. • Updated the “Memory Modes”, “Clocking Modes”, and “Design Considerations” sections. • Updated Table 2–1. • Added the “Parity Bit” and “Byte Enable” sections. • Moved the memory capacity information to the <i>Arria V Device Overview</i>.
November 2011	1.1	• Updated Table 2–1. • Restructured chapter.
May 2011	1.0	Initial release.

Variable Precision DSP Blocks in Arria V Devices

3

2012.11.19

AV-52003



Subscribe



Feedback

This chapter describes how the variable-precision digital signal processing (DSP) blocks in Arria® V devices are optimized to support higher bit precision in high-performance DSP applications.

Features

The Arria V variable precision DSP blocks offer the following features:

- High-performance, power-optimized, and fully registered multiplication operations
- 9-bit, 18-bit, 27-bit, and 36-bit word lengths
- 18 x 19 and 18 x 25 complex multiplications
- Built-in addition, subtraction, and 64-bit accumulation unit to combine multiplication results
- Cascading 19-bit or 27-bit to form the tap-delay line for filtering applications
- Cascading 64-bit output bus to propagate output results from one block to the next block without external logic support
- Hard pre-adder supported in 18-bit, 19-bit, and 27-bit mode for symmetric filters
- Internal coefficient register bank for filter implementation
- 18-bit and 27-bit systolic finite impulse response (FIR) filters with distributed output adder

For more information about the number of multipliers in each Arria V device, refer to the [Arria V Device Overview](#).

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered

Supported Operational Modes in Arria V Devices

Table 3-1: Variable Precision DSP Blocks Operational Modes for Arria V GX, GT, SX, and ST Devices

Variable-Precision DSP Block Resource	Operation Mode	Supported Instance	Pre-Adder Support	Coefficient Support	Input Cascade Support ¹	Chainout Support
1 variable precision DSP block	Independent 9 x 9 multiplication	3	No	No	No	No
	Independent 18 x 18 multiplication	2	Yes	Yes	Yes	No
	Independent 18 x 19 multiplication	2	Yes	Yes	Yes	No
	Independent 18 x 25 multiplication	1	Yes	Yes	Yes	Yes
	Independent 20 x 24 multiplication	1	Yes	Yes	Yes	Yes
	Independent 27 x 27 multiplication	1	Yes	Yes	Yes	Yes
	Two 18 x 19 multiplier adder mode	1	Yes	Yes	Yes	Yes
	18 x 18 multiplier adder summed with 36-bit input	1	Yes	No	No	Yes
2 variable precision DSP blocks	Complex 18 x 19 multiplication	1	No	No	Yes	No

¹ When you enable the pre-adder feature, the input cascade support is not available.

Table 3-2: Variable Precision DSP Blocks Operational Modes for Arria V GZ Devices

Variable Precision DSP Block Resources	Operational Mode	Supported Instance	Pre-adder Support	Coefficient Support	Input Cascade support	Chainout Support
1 variable precision DSP block	Independent 9 x 9 multiplication	3	No	No	No	No
	Independent 16 x 16 multiplication	2	Yes	Yes	Yes	No
	Independent 18 x 18 partial multiplication (32-bit)	2	Yes	Yes	Yes	No
	Independent 18 x 18 multiplication	1	Yes	Yes	Yes	No
	Independent 27 x 27 multiplication	1	Yes	Yes	Yes	Yes
	Independent 36 x 18 multiplication	1	No	Yes	No	Yes
	Two 18 x 18 multiplier Adder	1	Yes	Yes	Yes	Yes
	Two 16 x 16 multiplier adder	1	Yes	Yes	Yes	Yes
	Sum of 2 square	1	Yes ²	No	No	Yes
	18 x 18 multiplication summed with 36-bit input	1	No	No	No	Yes

² The pre-adder feature for this mode is automatically enabled.

Variable Precision DSP Block Resources	Operational Mode	Supported Instance	Pre-adder Support	Coefficient Support	Input Cascade support	Chainout Support
2 variable precision DSP blocks	Independent 18 x 18 multiplication	3	No	No	No	No
	Independent 36 x 36 multiplication	1	No	No	No	No
	Complex 18 x 18 multiplication	1	Yes	Yes	Yes	Yes
	Four 18 x 18 multiplier adder	1	Yes	Yes	Yes	No
	Two 27 x 27 multiplier adder	1	Yes	Yes	Yes	No
	Two 18 x 36 multiplier adder	1	No	Yes	No	No
3 variable precision DSP blocks	Complex 18 x 25 multiplication	1	Yes ²	No	No	No
4 variable precision DSP blocks	Complex 27 x 27 multiplication	1	Yes	Yes	Yes	No

Design Considerations

You should consider the following elements in your design:

- Operational modes
- Internal coefficient and pre-adder
- Accumulator
- Chainout adder

Operational Modes

The Quartus® II software includes megafunctions that you can use to control the operation mode of the multipliers. After entering the parameter settings with the MegaWizard™ Plug-In Manager, the Quartus II software automatically configures the variable precision DSP block.

Alternatively, you can infer the Arria V variable precision DSP block from the HDL source code and use the HDL template files in the Quartus II software.

With either method, the Quartus II software maps the functionality to the variable precision DSP blocks during compilation.

For more information about megafunctions and template files, refer to the following items:

- [Introduction to Megafunction User Guide](#)
- [Integer Arithmetic Megafunctions User Guide](#)
- [Floating-Point Megafunctions User Guide](#)
- [Quartus II Software Help](#)

Internal Coefficient and Pre-Adder

To use the pre-adder feature, all input data and multipliers must have the same clock setting.

The input cascade support is not available when you enable the pre-adder feature.

Arria V GX, GT, SX, and ST Devices

In both 18-bit and 27-bit modes, you can use the coefficient feature and pre-adder feature independently.

Arria V GZ Devices

In 18-bit applications, you must enable the coefficient feature when the pre-adder feature is enabled.

In 27-bit applications, you can use the coefficient feature and pre-adder feature independently.

In 27-bit applications, with pre-adder enabled, the input data width is restricted to 22 bits if the multiplicand input comes from dynamic input due to width limitation in the input registers. If the multiplicand input comes from the internal coefficients, the data width of the multiplicand is 27 bits.

Note: When you enabled the pre-adder feature, all input data must have the same clock setting.

Accumulator

Arria V GX, GT, SX, and ST Devices

The accumulator supports double accumulation by enabling the 64-bit double accumulation registers located between the output register bank and the accumulator.

The double accumulation registers are set statically in the programming file.

Arria V GZ Devices

For Arria V GZ devices, the accumulator does not support double accumulation.

The accumulator feature is not available in multi-block mode.

Chainout Adder

You can use the output chaining path to add results from other DSP blocks.

Block Architecture


The Arria V variable precision DSP block consists of the following elements:

- Input register bank
- Pre-adder
- Internal coefficient
- Multipliers
- Adder

- Accumulator and chainout adder
- Systolic registers
- Double accumulation register
- Output register bank

If the variable precision DSP block is not configured in systolic FIR mode, both systolic registers are bypassed.

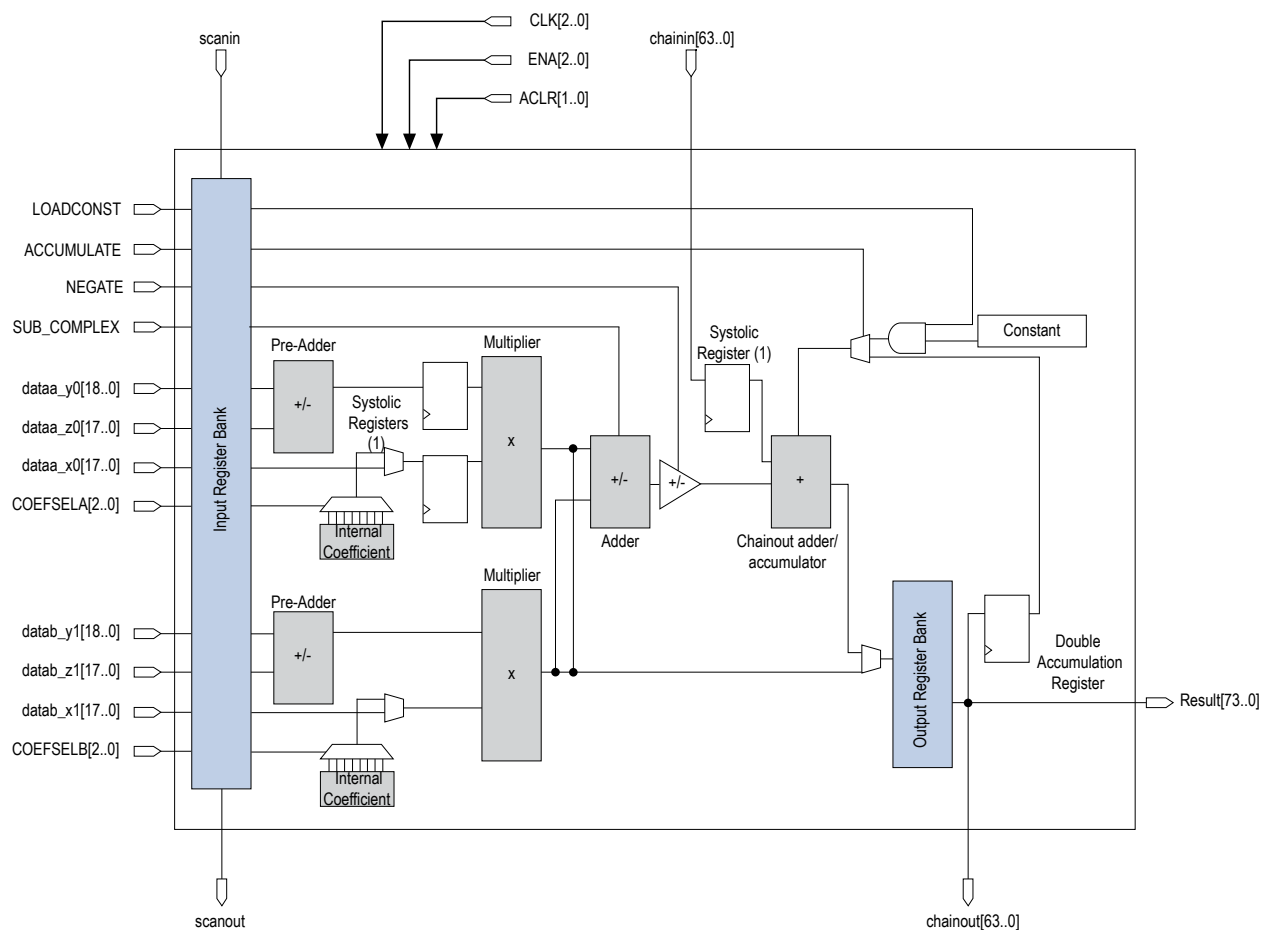Figure 3-1: Variable Precision DSP Block Architecture in 18 x 19 Mode for Arria V GX, GT, SX, and ST Devices



Note:

1. When enabled, systolic registers are clocked with the same clock source as the output register bank.

Figure 3-2: Variable Precision DSP Block Architecture in 27 x 27 Mode for Arria V GX, GT, SX, and ST Devices

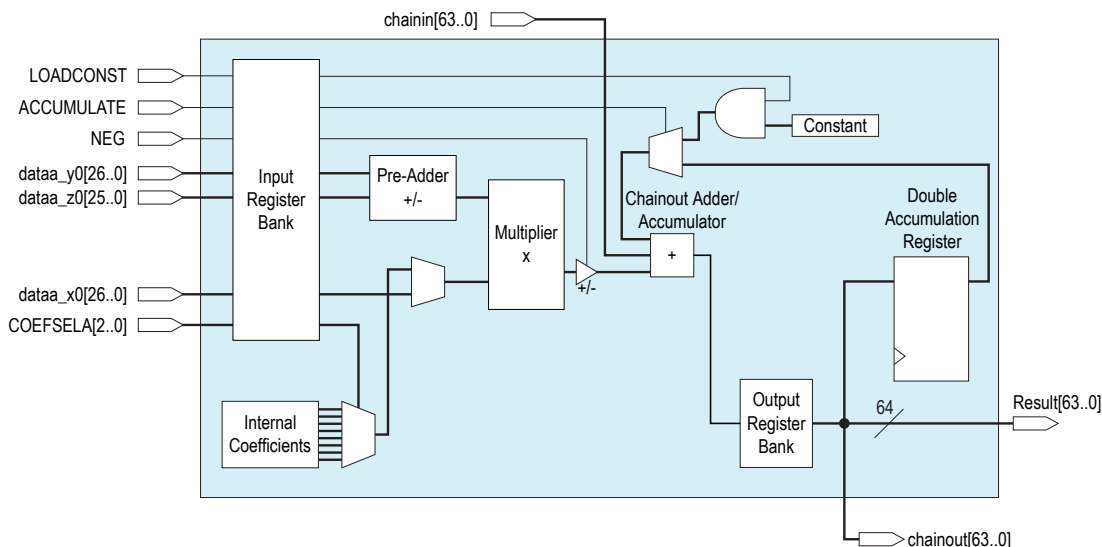


Figure 3-3: Variable Precision DSP Block Architecture in 18 x 18 Mode for Arria V GZ Devices

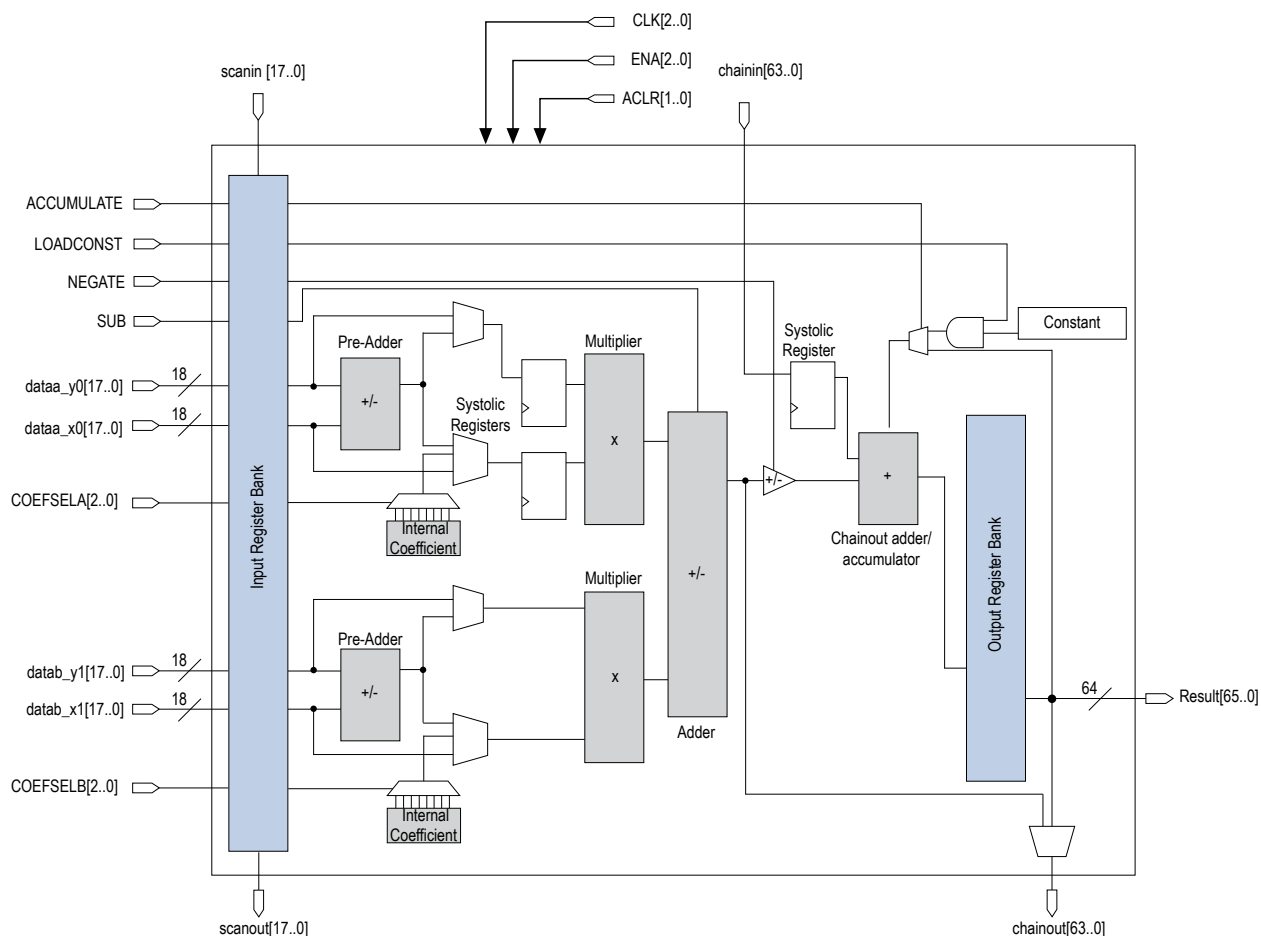
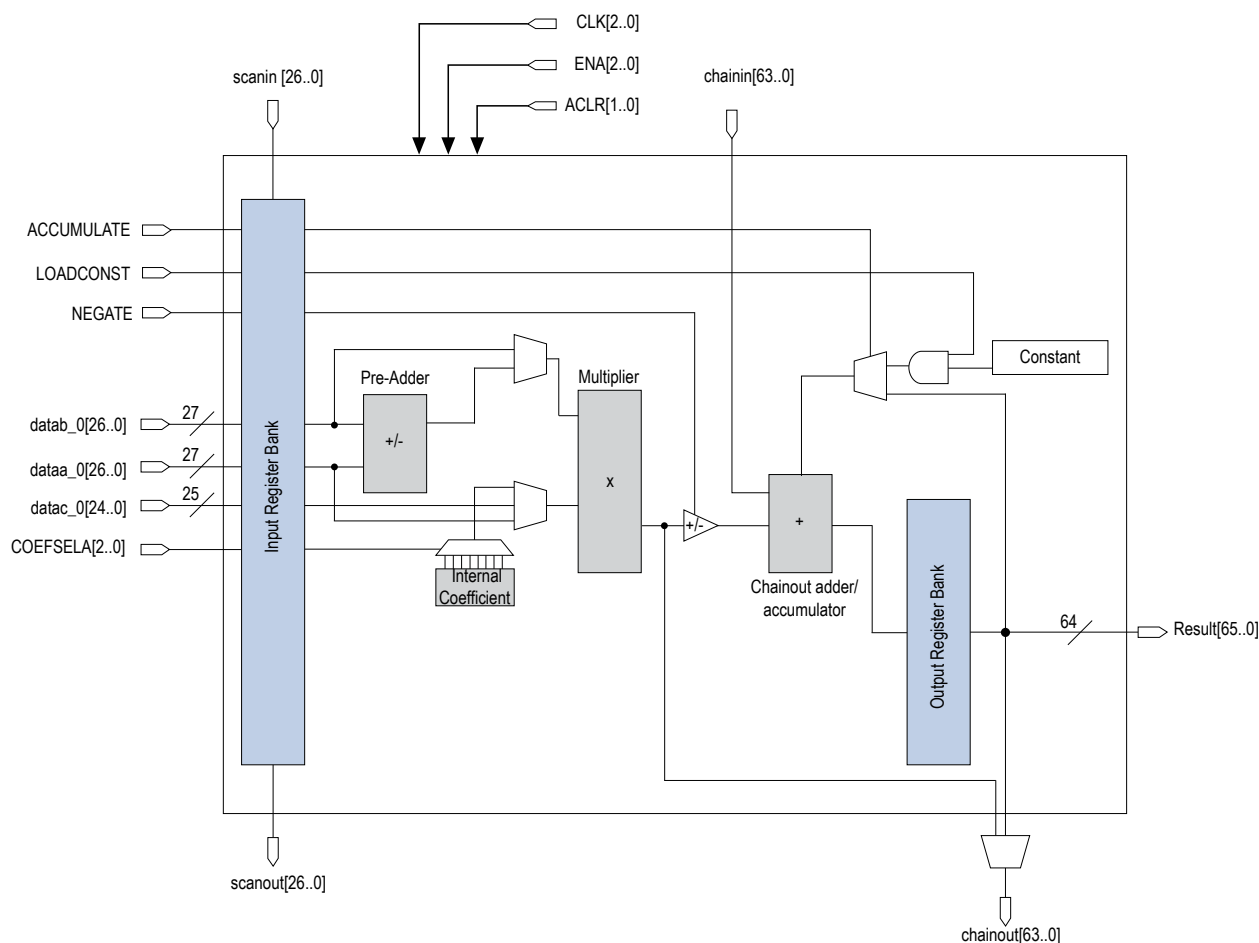


Figure 3-4: Variable Precision DSP Block Architecture in 27 x 27 Mode for Arria V GZ Devices

Input Register Bank

The input register bank consists of data, dynamic control signals, and two sets of delay registers.

All the registers in the DSP blocks are positive-edge triggered and cleared on power up. Each multiplier operand can feed an input register or a multiplier directly, bypassing the input registers.

The following variable precision DSP block signals control the input registers within the variable precision DSP block:

- `CLK[2..0]`
- `ENA[2..0]`
- `ACLR[0]`

In 18 x 18 and 18 x 19 mode, you can use the delay registers to balance the latency requirements when you use both the input cascade and chainout features.

The tap-delay line feature allows you to drive the top leg of the multiplier inputs from general routing or from the cascade chain. The following inputs can be driven from either the general routing or from the cascade chain:

- For Arria V GX, GT, SX, and ST devices:
 - `dataa_y0` and `datab_y1` in 18 x 19 mode
 - `dataa_y0` in 27 x 27 mode
- For Arria V GZ devices:
 - `dataa_y0[17..0]` and `datab_y1[17..0]` in 18 x 18 mode
 - `dataa_y0` in 27 x 27 mode

The Arria V GZ variable precision DSP block support 18-bit and 27-bit input cascading.

Figure 3-5: Input Register of a Variable Precision DSP Block in 18 x 19 Mode for Arria V GX, GT, SX, and ST Devices on page 10 through *Figure 3-8: Input Register of a Variable Precision DSP Block in 27 x 27 Mode for Arria V GZ Devices* on page 13 show the input registers for Arria V devices. The figures show the data registers only. Registers for the control signals are not shown.

Figure 3-5: Input Register of a Variable Precision DSP Block in 18 x 19 Mode for Arria V GX, GT, SX, and ST Devices

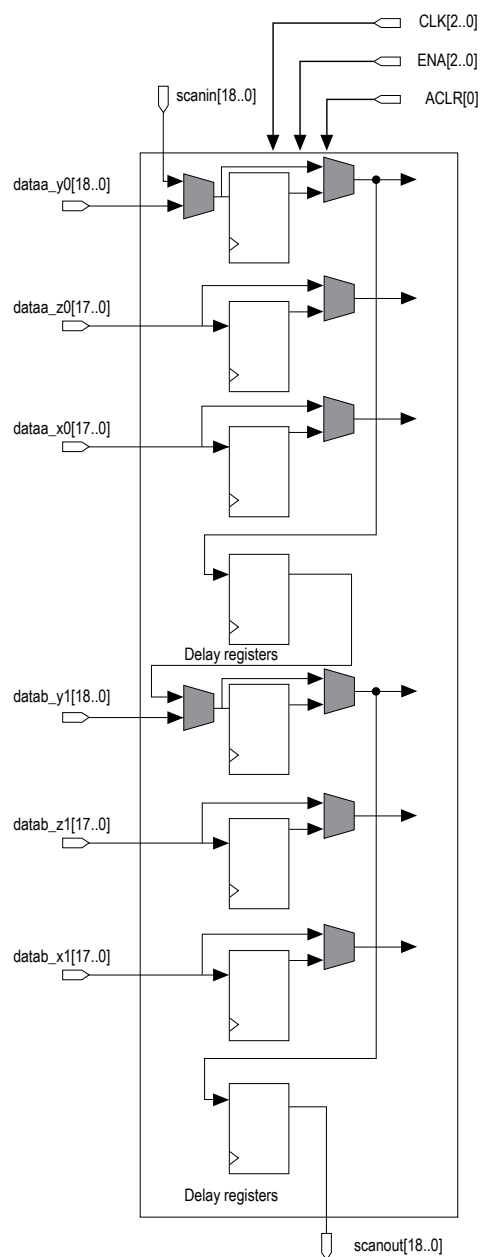


Figure 3-6: Input Register of a Variable Precision DSP Block in 27 x 27 Mode for Arria V GX, GT, SX, and ST Devices

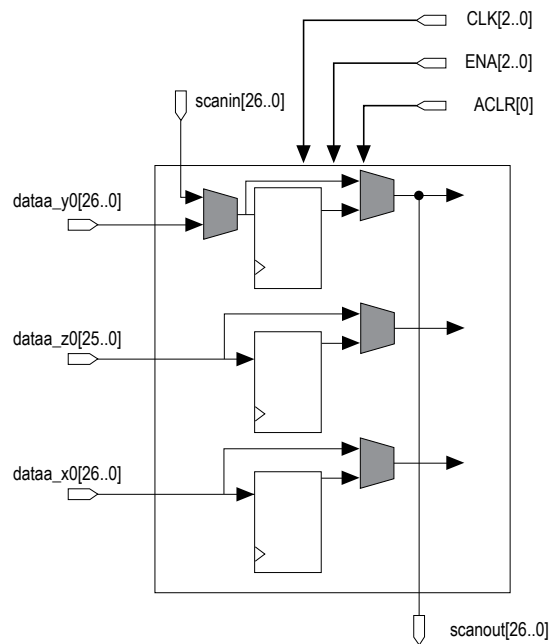


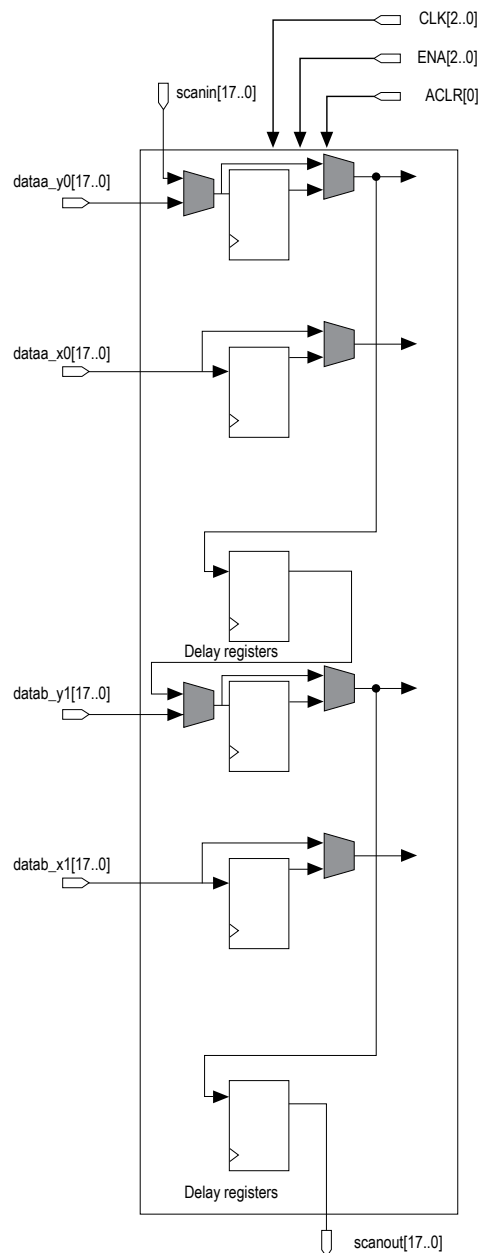
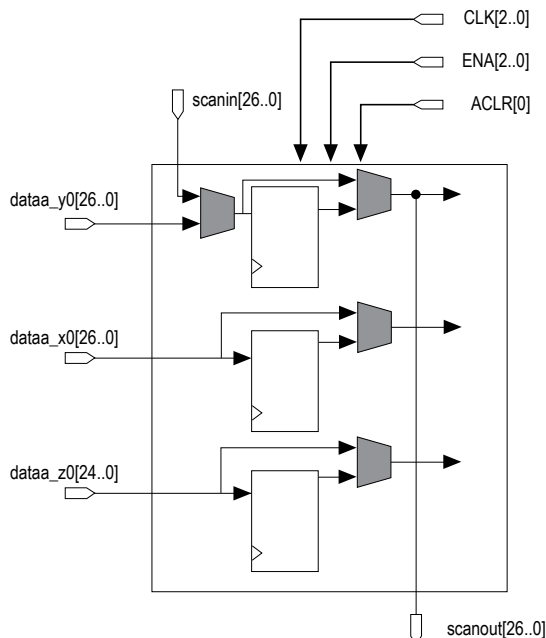
Figure 3-7: Input Register of a Variable Precision DSP Block in 18 x 18 Mode for Arria V GZ Devices

Figure 3-8: Input Register of a Variable Precision DSP Block in 27 x 27 Mode for Arria V GZ Devices

Pre-Adder

Arria V GX, GT, SX, and ST Devices

Each variable precision DSP block has two 19-bit pre-adders. You can configure these pre-adders in the following configurations:

- Two independent 19-bit pre-adders
- One 27-bit pre-adder

The pre-adder supports both addition and subtraction in the following input configurations:

- 18-bit (signed) addition or subtraction for 18 x 19 mode
- 17-bit (unsigned) addition or subtraction for 18 x 19 mode
- 26-bit addition or subtraction for 27 x 27 mode

Arria V GZ Devices

Each variable precision DSP block has two 18-bit pre-adders. You can configure these pre-adders in the following configurations:

- Two independent 18-bit adders
- One 26-bit adder

The pre-adder supports both addition and subtraction in the following input configurations:

- 17-bit addition or subtraction for 18-bit applications
- 25-bit addition or subtraction for 27-bit applications

Internal Coefficient

The Arria V variable precision DSP block has the flexibility of selecting the multiplicand from either the dynamic input or the internal coefficient.

The internal coefficient can support up to eight constant coefficients for the multiplicands in 18-bit and 27-bit modes. When you enable the internal coefficient feature, COEFSELA/COEFSELB are used to control the selection of the coefficient multiplexer.

Multipliers

A single variable precision DSP block can perform many multiplications in parallel, depending on the data width of the multiplier.

There are two multipliers per variable precision DSP block.

You can configure these two multipliers to the following operational modes:

- For Arria V GX, GT, SX, and ST devices:
 - One 27 x 27 multiplier
 - Two 18 (signed)/(unsigned) x 19 (signed) multipliers
 - Three 9 x 9 multipliers
- For Arria V GZ devices:
 - One 27 x 27 multiplier
 - Two individual 16 x 16 multipliers
 - Two individual 18 x 18 partial multipliers, with only 32-bit LSB multiplication result for each multiplication
 - One individual 18 x 18 multiplier, with full 36-bit multiplication result
 - One Individual 27 x 27 multiplier
 - One Individual 36 x 18 multiplier
 - Three Individual 9 x 9 multipliers

For Arria V GZ devices, you can use two adjacent DSP blocks to construct an individual 36-bit multiplier.

For more information about the operational modes of the multipliers, refer to [Operational Mode Descriptions](#).

Adder

You can use the adder in various sizes, depending on the operational mode:

- One 64-bit adder with the 64-bit accumulator
- Two 18 x 19 modes—the adder is divided into two 37-bit adders to produce the full 37-bit result of each independent 18 x 19 multiplication
- Three 9 x 9 modes—you can use the adder as three 18-bit adders to produce three 9 x 9 multiplication results independently

Accumulator and Chainout Adder

The Arria V variable precision DSP block supports a 64-bit accumulator and a 64-bit adder.

For Arria V GX, GT, SX, and ST devices, the accumulator and chainout adder features are not supported in two independent 18 x 19 modes and three independent 9 x 9 modes.

For Arria V GZ devices, you can use the 64-bit adder as full adder.

The following signals can dynamically control the function of the accumulator:

- NEGATE
- LOADCONST
- ACCUMULATE

Table 3-3: Dynamic Control Signals for 64-Bit Accumulator in Arria V Devices

This table lists the dynamic signals settings and description for each function. In this table, X denotes a "don't care" value.

Function	Description	NEGATE	LOADCONST	ACCUMULATE
Zeroing	Disables the accumulator.	0	0	0
Preload	Loads an initial value to the accumulator. Only one bit of the 64-bit preload value can be "1". It can be used as rounding the DSP result to any position of the 64-bit result.	0	1	0
Accumulation	Adds the current result to the previous accumulate result.	0	X	1
Decimation	This function takes the current result, converts it into two's complement, and adds it to the previous result.	1	X	1

Systolic Registers

There are two systolic registers per variable precision DSP block. If the variable precision DSP block is not configured in systolic FIR mode, both systolic registers are bypassed.

The first set of systolic registers consists of the following registers:

- 18-bit and 19-bit registers that are used to register the 18-bit and 19-bit inputs of the upper multiplier respectively for Arria V GX, GT, SX, and ST devices
- 18-bit registers that are used to register the 18-bit inputs of the upper multiplier for Arria V GZ devices

The second set of systolic registers are used to delay the chainout output to the next variable precision DSP block.

You must clock all the systolic registers with the same clock source as the output register bank.

Double Accumulation Register

The double accumulation register is an extra register in the feedback path of the accumulator. Enabling the double accumulation register will cause an extra clock cycle delay in the feedback path of the accumulator.

This register has the same CLK, ENA, and ACLR settings as the output register bank.

By enabling this register, you can have two accumulator channels using the same number of variable precision DSP block.

Double accumulation register is not available in Arria V GZ devices.

Output Register Bank

The positive edge of the clock signal triggers the 64-bit bypassable output register bank and is cleared after power up.

The following variable precision DSP block signals control the output register per variable precision DSP block:

- CLK[2..0]
- ENA[2..0]
- ACLR[1]

Operational Mode Descriptions

This section describes how you can configure an Arria V variable precision DSP block to efficiently support the various operational modes.

Table 3-4: Variable Precision DSP Block Operational Modes for Arria V Devices

Operational Mode	Device Variant Support
Independent Multiplier Mode	All
Independent Complex Multiplier Mode	All
Multiplier Adder Sum Mode	All
Sum of Square Mode	Arria V GZ
18 x 18 Multiplication Summed with 36-Bit Input Mode	All
Systolic FIR Mode	All

Independent Multiplier Mode

In independent input and output multiplier mode, the variable precision DSP blocks perform individual multiplication operations for general purpose multipliers.

Table 3-5: Variable Precision DSP Block Independent Multiplier Mode Configurations for Arria V Devices

Configuration	Multipliers per block	Device Variant Support
9 x 9	3	All
16 x 16	1	Arria V GZ
18 x 18 (partial)	1	Arria V GZ
18 x 18	1	Arria V GZ
18 (signed) x 18 (unsigned)	2	Arria V GX, GT, SX, ST
18 (unsigned) x 18 (unsigned)	2	Arria V GX, GT, SX, ST
18 (signed) x 19 (signed)	2	Arria V GX, GT, SX, ST
18 (unsigned) x 19 (signed)	2	Arria V GX, GT, SX, ST
18 x 25	1	Arria V GX, GT, SX, ST

Configuration	Multipliers per block	Device Variant Support
20 x 24	1	Arria V GX, GT, SX, ST
27 x 27	1	All
36 x 18	1	Arria V GZ


Table 3-6: Independent Multiplier Mode Configurations with Multiple Variable Precision DSP Blocks for Arria V Devices

Configuration	Number of DSP Blocks Required	Device Variant Support
3 independent 18 x 18 multipliers	2	Arria V GZ
36 x 36 multiplier	2	Arria V GZ

9 x 9 Independent Multiplier

Figure 3-9: Three 9 x 9 Independent Multiplier Mode per Variable Precision DSP Block for Arria V Devices

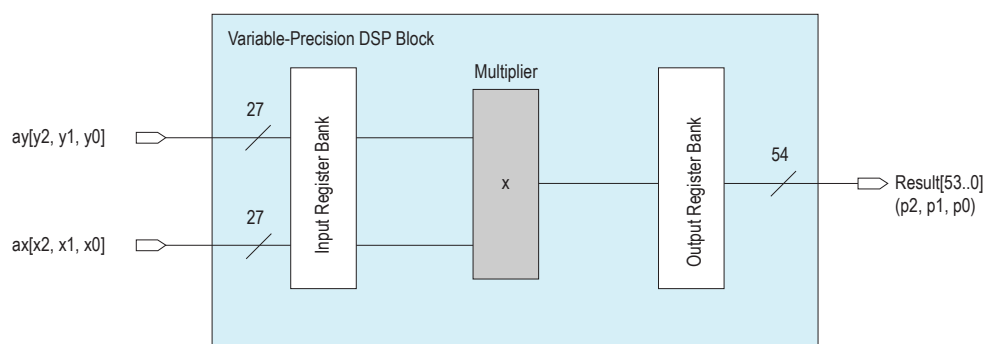Three pairs of data are packed into the `ax` and `ay` ports; `result` contains three 18-bit products.



18 x 18 Independent Multiplier

Figure 3-10: One 18 x 18 Independent Multiplier Mode with One Variable Precision DSP Block for Arria V GZ Devices


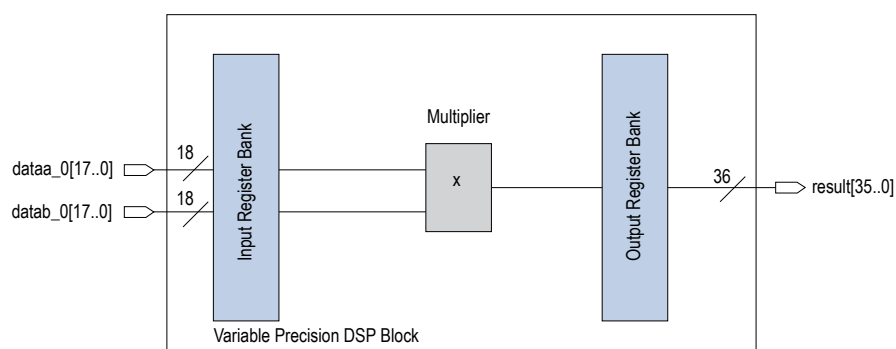


Figure 3-11: Three 18 x 18 Independent Multiplier Mode with Two Variable Precision DSP Blocks for Arria V GZ Devices

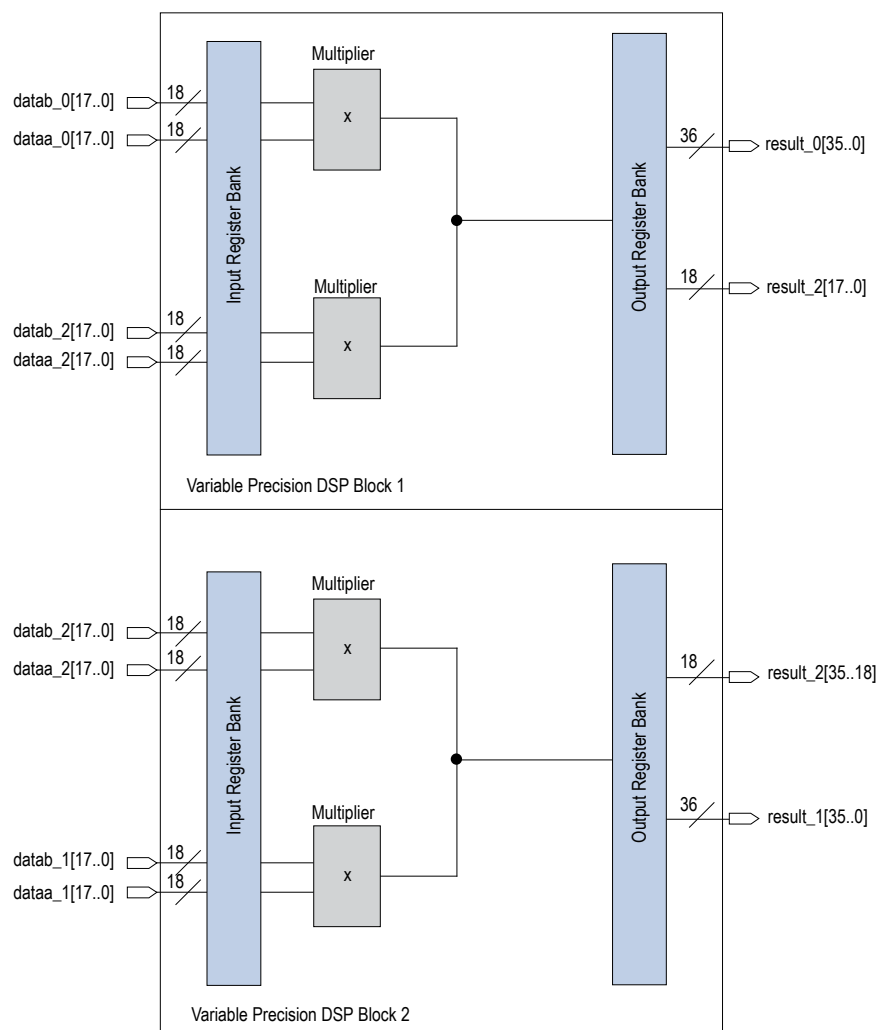


18 x 18 or 18 x 19 Independent Multiplier

Figure 3-12: Two 18 x 18 or 18 x 19 Independent Multiplier Mode per Variable Precision DSP Block for Arria V GX, GT, SX, and ST Devices

In this figure, the variables are defined as follows:

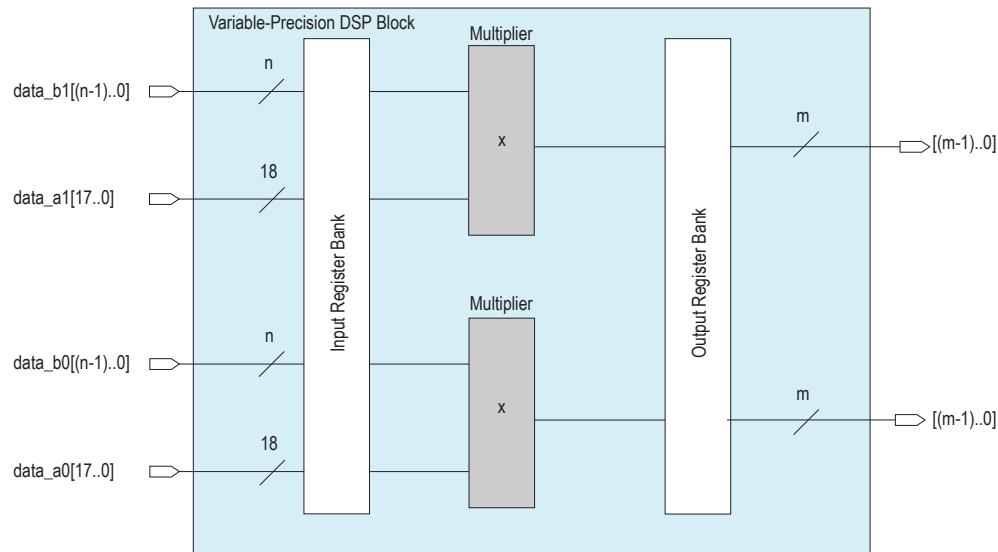- $n = 19$ and $m = 37$ for 18 x 19 mode
- $n = 18$ and $m = 36$ for 18 x 18 mode




16 x 16 Independent Multiplier or 18 x 18 Independent Partial Multiplier

Figure 3-13: Two 16 x 16 Independent Multiplier Mode or Two 18 x 18 Independent Partial Multiplier Mode for Arria V GZ Devices

In this figure, the inputs for 16-bit independent multiplier mode are `data[15..0]`. The unused input bits require padding with zero.

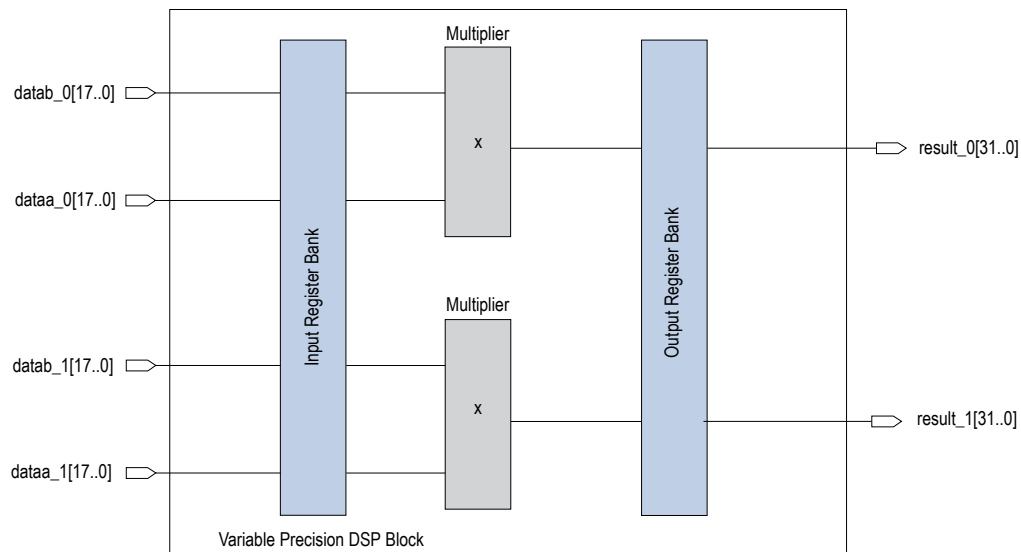
For two independent 18 x 18 partial multiplier mode, only 32-bit LSB result for each multiplication operation is routed to the output. The output has full precision if the total width of the multiplicand input is less than or equal to 32 bits for each multiplier.



18 x 25 Independent Multiplier

Figure 3-14: One 18 x 25 Independent Multiplier Mode per Variable Precision DSP Block for Arria V GX, GT, SX, and ST Devices

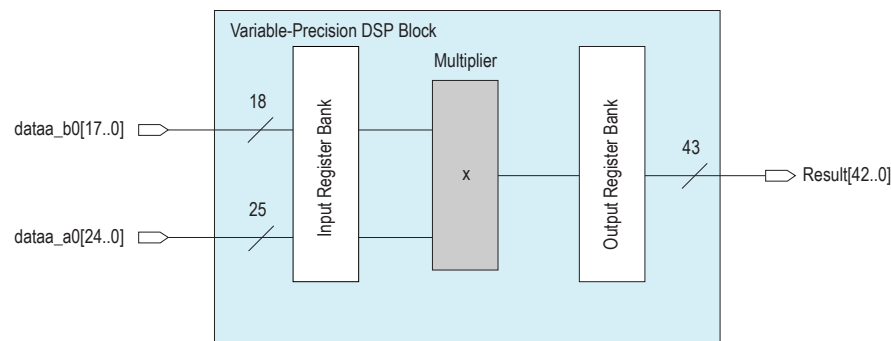
In this mode, the `result` can be up to 52 bits when combined with a chainout adder or accumulator.



20 x 24 Independent Multiplier

Figure 3-15: One 20 x 24 Independent Multiplier Mode per Variable Precision DSP Block for Arria V GX, GT, SX, and ST Devices

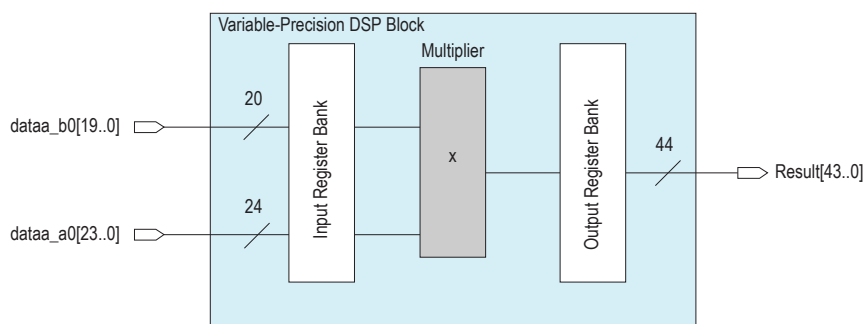
In this mode, the result can be up to 52 bits when combined with a chainout adder or accumulator.



27 x 27 Independent Multiplier


Figure 3-16: One 27 x 27 Independent Multiplier Mode per Variable Precision DSP Block for Arria V Devices

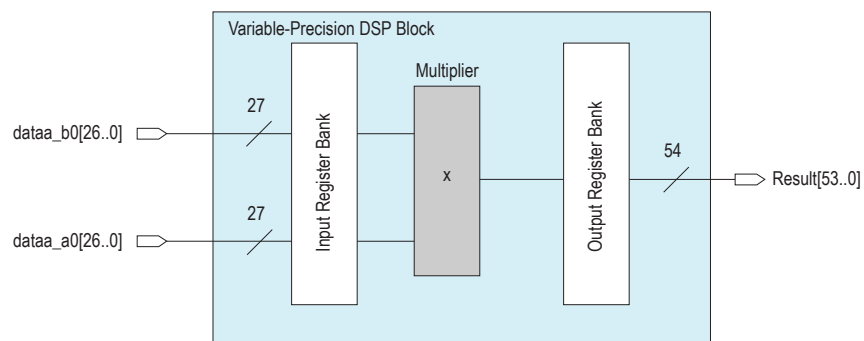In this mode, the result can be up to 64 bits when combined with a chainout adder or accumulator.



36 x 18 Independent Multiplier

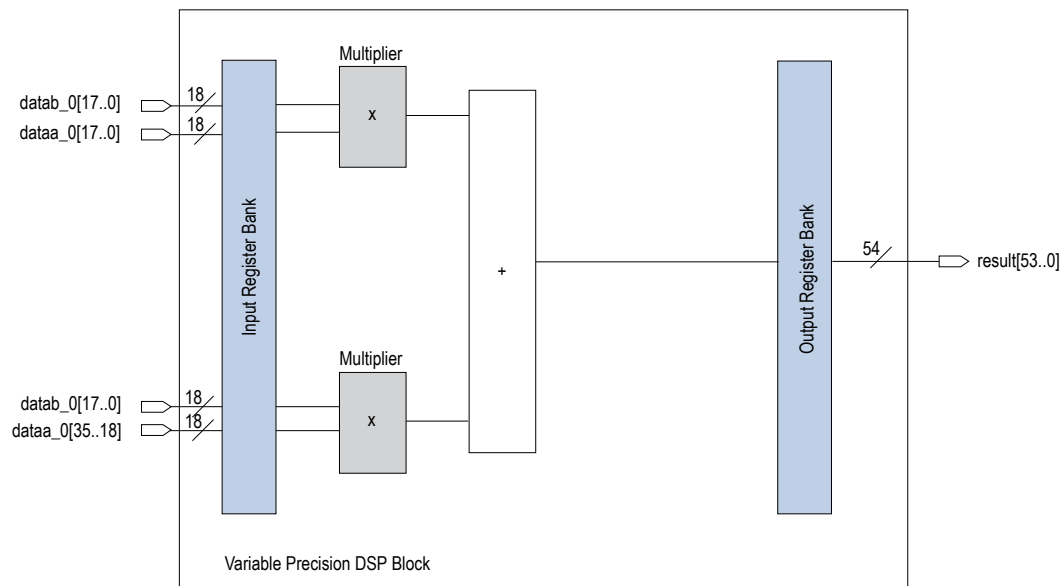Figure 3-17: One 36 x 18 Independent Multiplier Mode for Arria V GZ Devices




36-Bit Independent Multiplier

You can efficiently construct an individual 36-bit multiplier with two adjacent variable precision DSP blocks. The 36 x 36 multiplication consists of four 18 x 18 multipliers.

The 36-bit multiplier is useful for applications requiring more than 18-bit precision; for example, for the mantissa multiplication portion of very high precision fixed-point arithmetic applications.

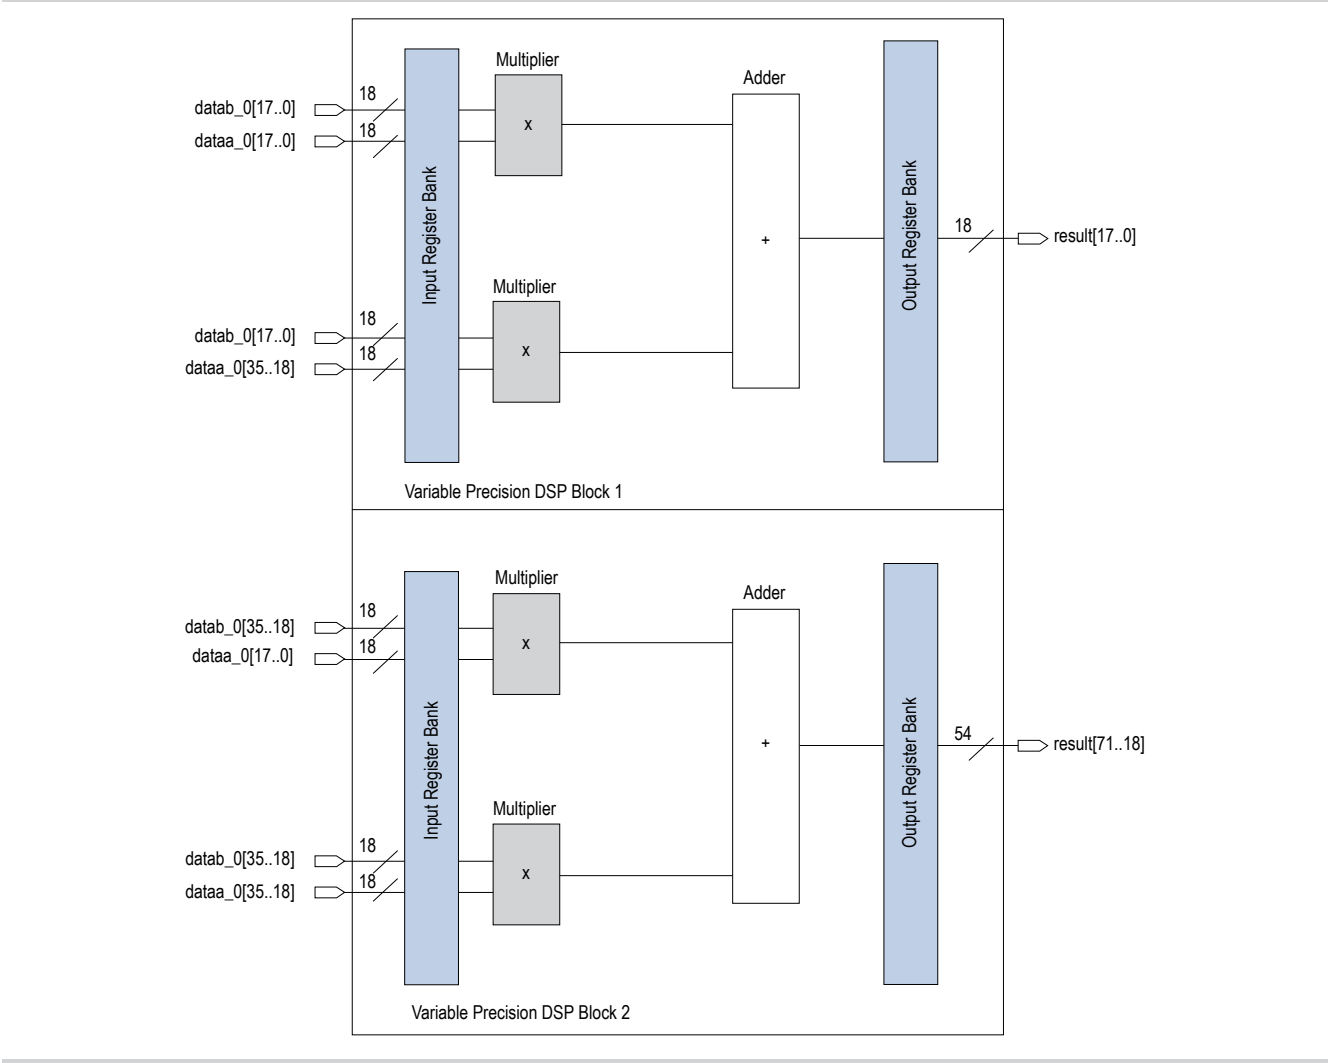Figure 3-18: 36-Bit Independent Multiplier Mode with Two Variable Precision DSP Blocks for Arria V GZ Devices



Independent Complex Multiplier Mode

The Arria V variable precision DSP block provides the means for a complex multiplication.

Figure 3-19: Sample of Complex Multiplication Equation

$$(a + jb) \times (c + jd) = [(a \times c) - (b \times d)] + j[(a \times d) + (b \times c)]$$

Table 3-7: Variable Precision DSP Block Independent Complex Multiplier Mode Configurations for Arria V Devices


Configuration	Number of DSP Blocks Required	Device Variant Support
18 x 18	2	Arria V GZ
18 x 19	2	Arria V GX, GT, SX, ST
18 x 25	3	Arria V GZ
27 x 27	4	Arria V GZ

18 x 18 Complex Multiplier

For 18 x 18 complex multiplication mode, you require two variable precision DSP blocks to perform this multiplication.

You can implement the imaginary part $[(a \times d) + (b \times c)]$ in the first variable precision DSP block, and you can implement the real part $[(a \times c) - (b \times d)]$ in the second variable precision DSP block.

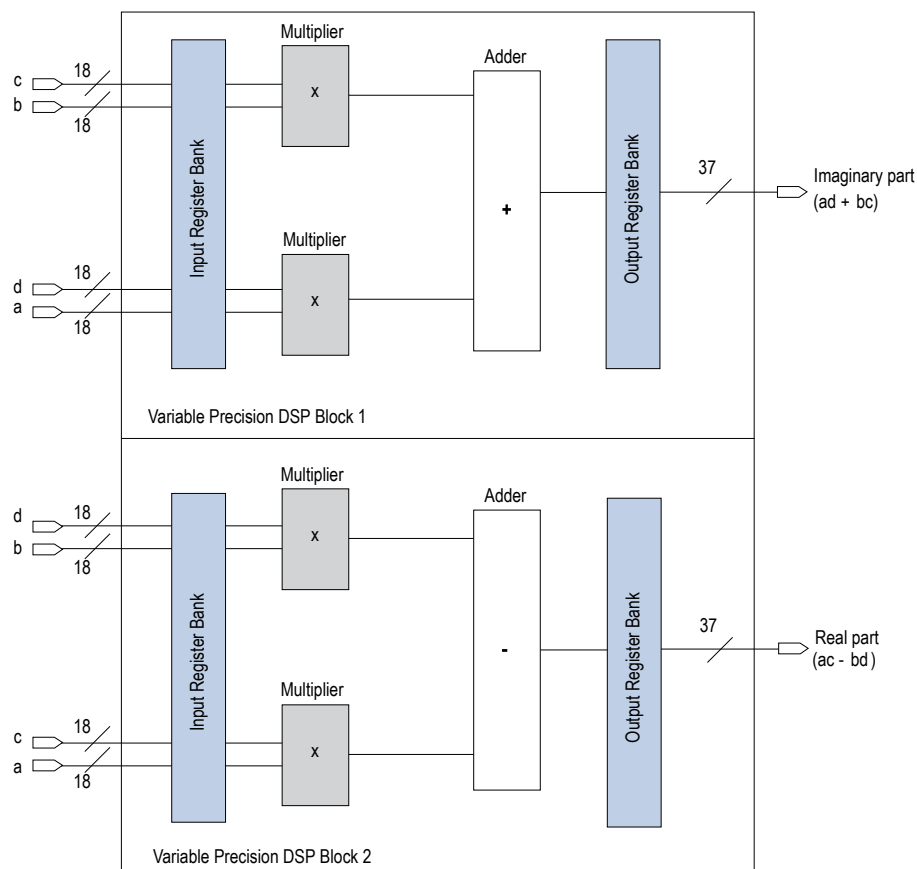Figure 3-20: 18 x 18 Complex Multiplier with Two Variable Precision DSP Blocks for Arria V GZ Devices




18 x 19 Complex Multiplier

For 18 x 19 complex multiplication mode, you require two variable precision DSP blocks to perform this multiplication.

The imaginary part $[(a \times d) + (b \times c)]$ is implemented in the first variable precision DSP block, while the real part $[(a \times c) - (b \times d)]$ is implemented in the second variable precision DSP block.

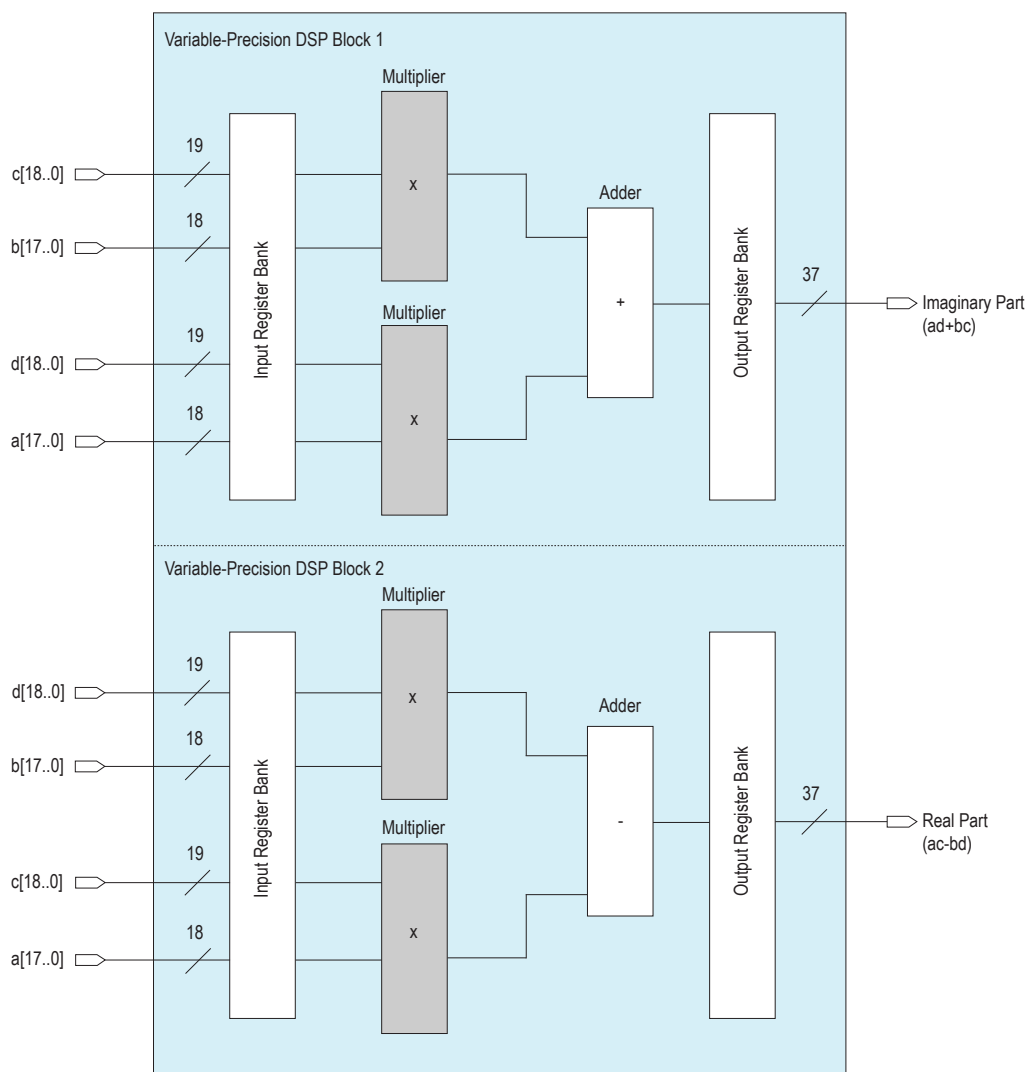Figure 3-21: One 18 x 19 Complex Multiplier with Two Variable Precision DSP Blocks for Arria V GX, GT, SX, and ST Devices



18 x 25 Complex Multiplier


Arria V GZ devices support an individual 18 x 25 complex multiplication mode.

A 27 x 27 multiplier allows you to implement an individual 18 x 25 complex multiplication mode with three variable precision DSP blocks only. The pre-adder feature is automatically enabled for you to implement an individual 18 x 25 complex multiplication mode efficiently.

Figure 3-22: 18 x 25 Complex Multiplication Equation

$$(a + jb) \times (c + jd) = (c - d) \times a + (a - b) \times d + j[(c \times d) \times b + (a - c) \times d]$$

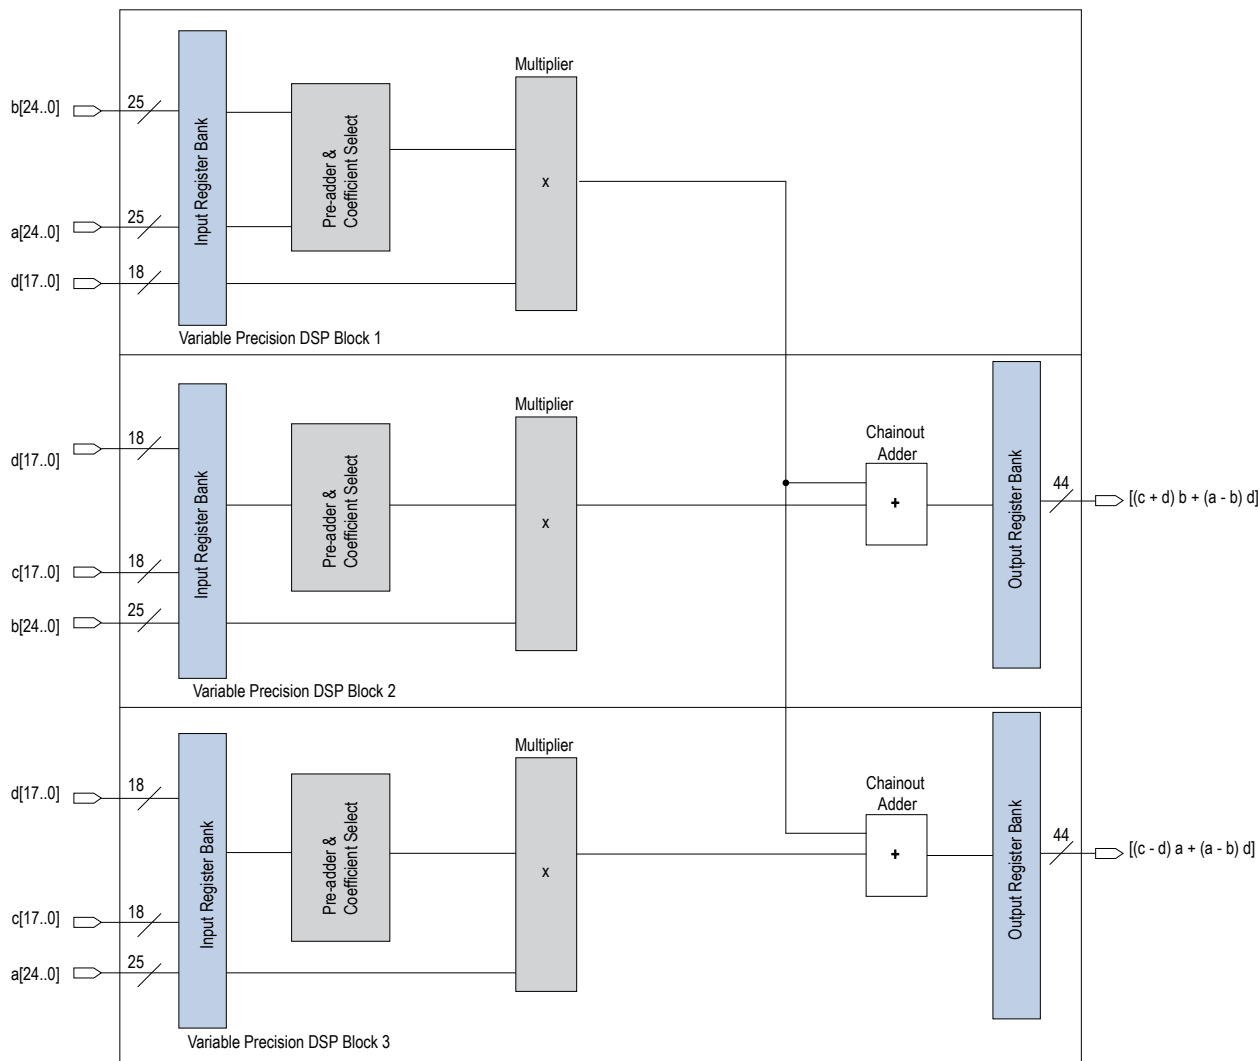Figure 3-23: 18 x 25 Complex Multiplier with Three Variable Precision DSP Blocks for Arria V GZ Devices




27 x 27 Complex Multiplier

Arria V GZ devices support an individual 27 x 27 complex multiplication mode. You require four variable precision DSP blocks to implement an individual 27 x 27 complex multiplication mode.

You can implement the imaginary part $[(a \times d) + (b \times c)]$ in the first and second variable precision DSP blocks, and you can implement the real part $[(a \times c) - (b \times d)]$ in the third and fourth variable precision DSP blocks.

You can achieve the difference of two 27 x 27 multiplications by enabling the `NEGATE` control signal in the fourth variable precision DSP block.

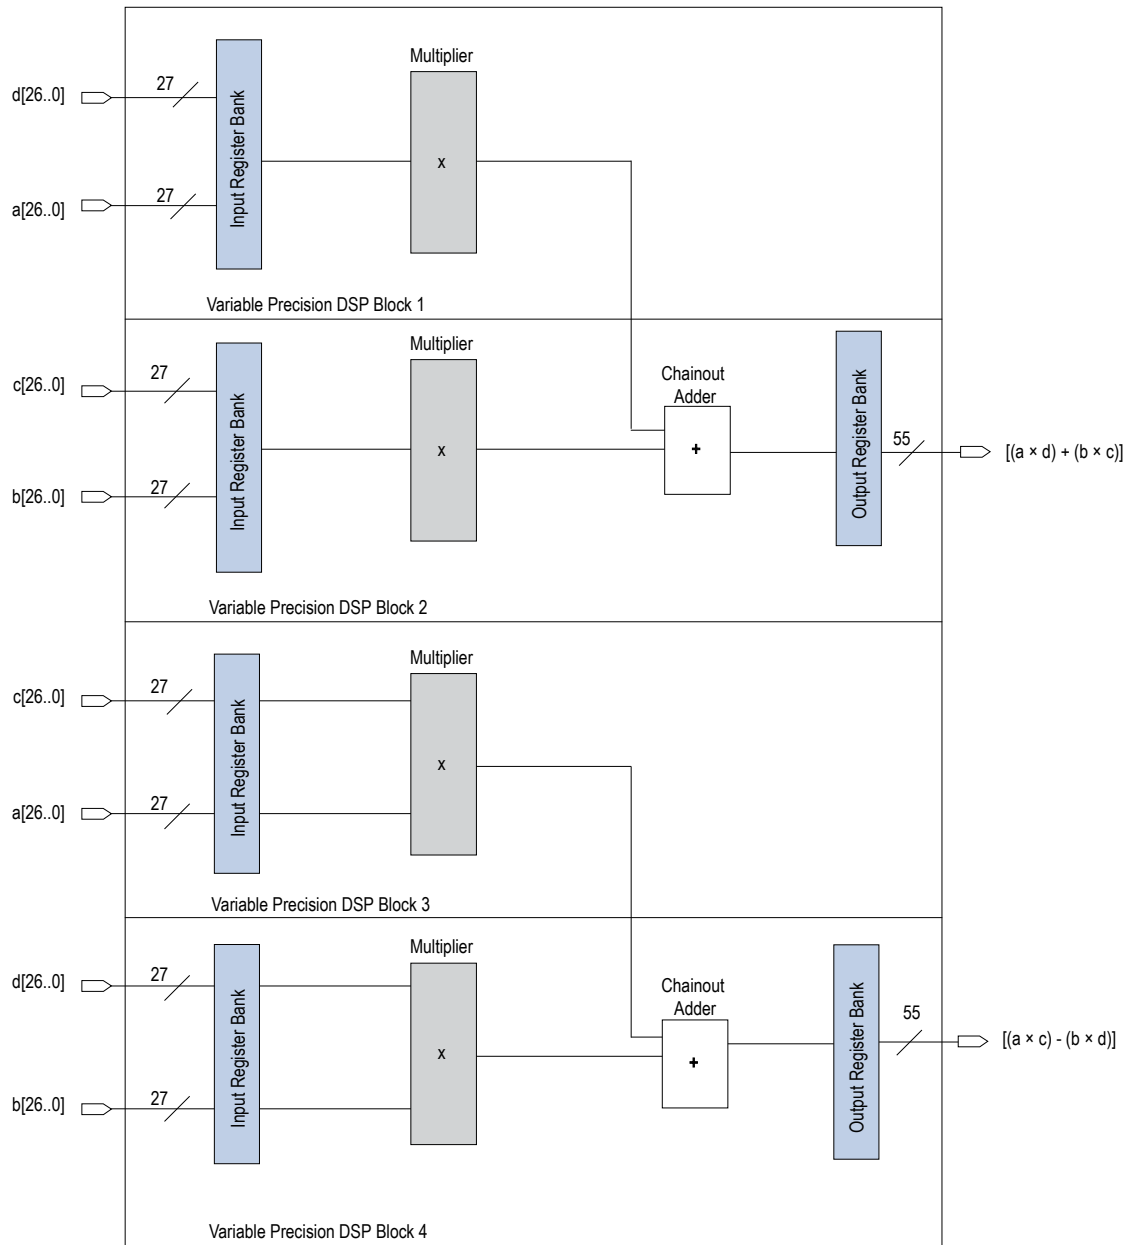Figure 3-24: 27 x 27 Complex Multiplier with Four Variable Precision Blocks for Arria V GZ Devices



Multiplier Adder Sum Mode

Table 3-8: Variable Precision DSP Block Multiplier Adder Sum Mode Configurations for Arria V Devices


Mode	Configuration	Number of DSP Blocks Required	Device Variant Support
Two-multiplier Adder Sum	16 x 16	1	Arria V GZ
	18 x 18	1	Arria V GZ
	18 x 19	1	Arria V GX, GT, SX, ST
	27 x 27	2	Arria V GZ
	36 x 18	2	Arria V GZ
Four-multiplier Adder Sum	18 x 18	2	Arria V GZ

One Sum of Two 18 x 18 Multipliers or Two 16 x 16 Multipliers

Figure 3-25: One Sum of Two 18 x 18 Multipliers or Two 16 x 16 Multipliers with One Variable Precision DSP Block for Arria V GZ Devices


In this figure, for 18-bit multiplier adder sum mode, the input data width is 18 bits and the output data width is 37 bits.

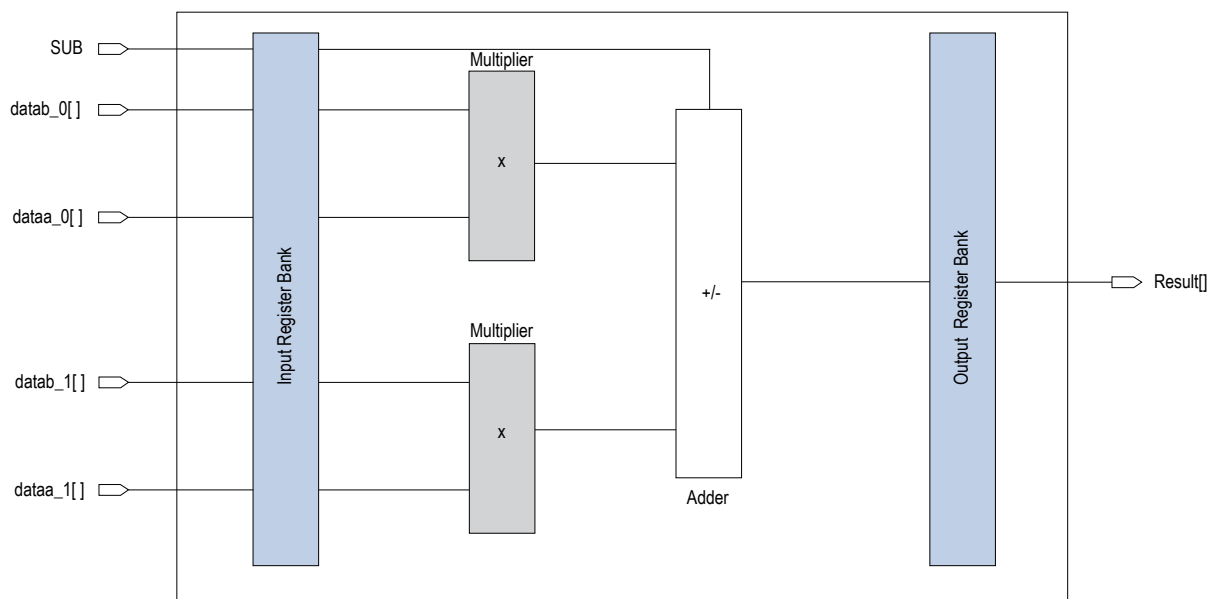For 16-bit multiplier adder sum mode, the input data width is 16 bits and the unused input bit requires padding with zeroes. The output data width is 33 bits.




One Sum of Two 18 x 19 Multipliers

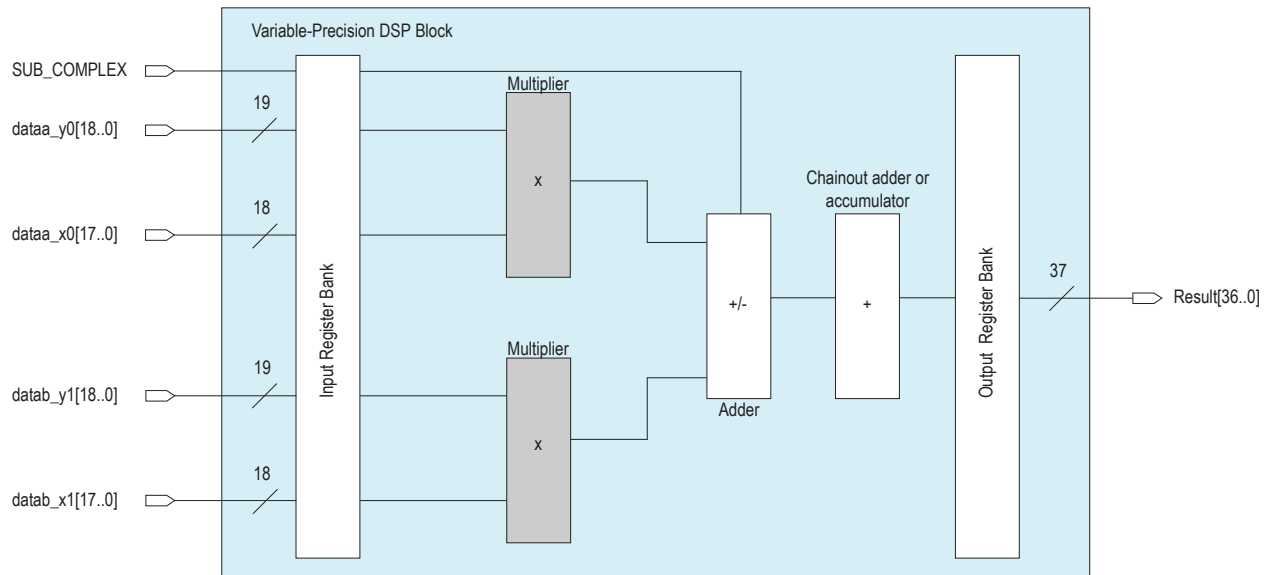Figure 3-26: One Sum of Two 18 x 19 Multipliers with One Variable Precision DSP Block for Arria V GX, GT, SX, and ST Devices




One Sum of Two 27 x 27 Multipliers

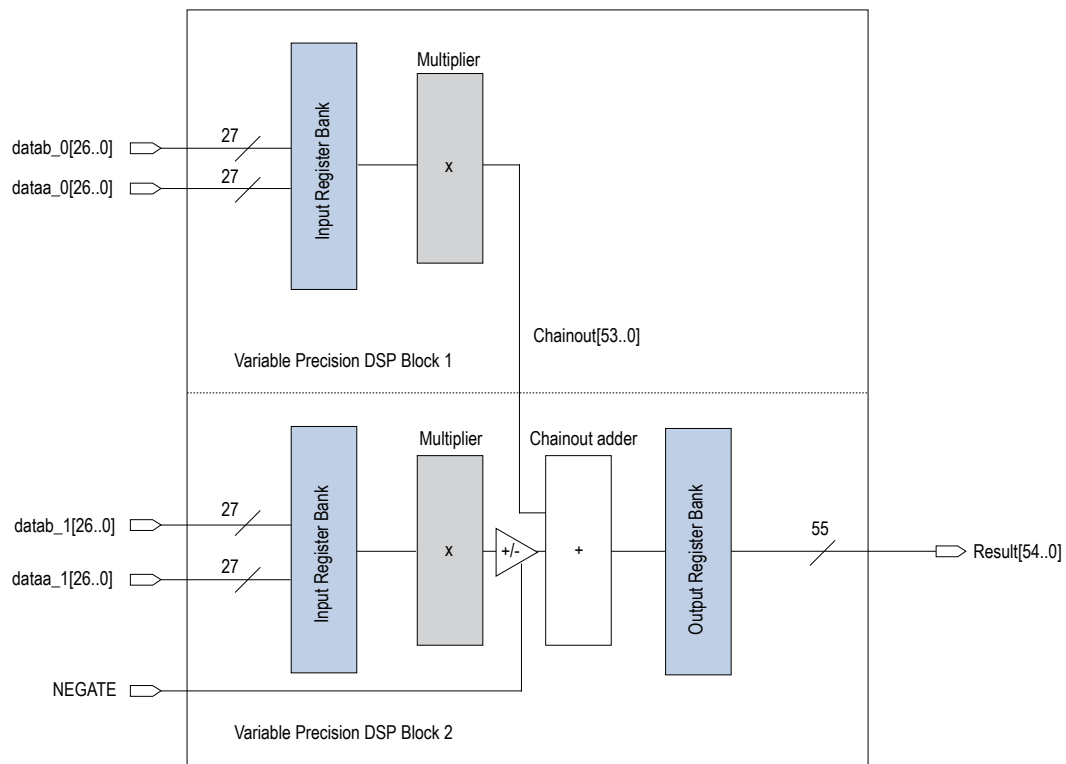Figure 3-27: One Sum of Two 27 x 27 Multipliers with Two Variable Precision DSP Blocks for Arria V GZ Devices




One Sum of Two 36 x 18 Multipliers

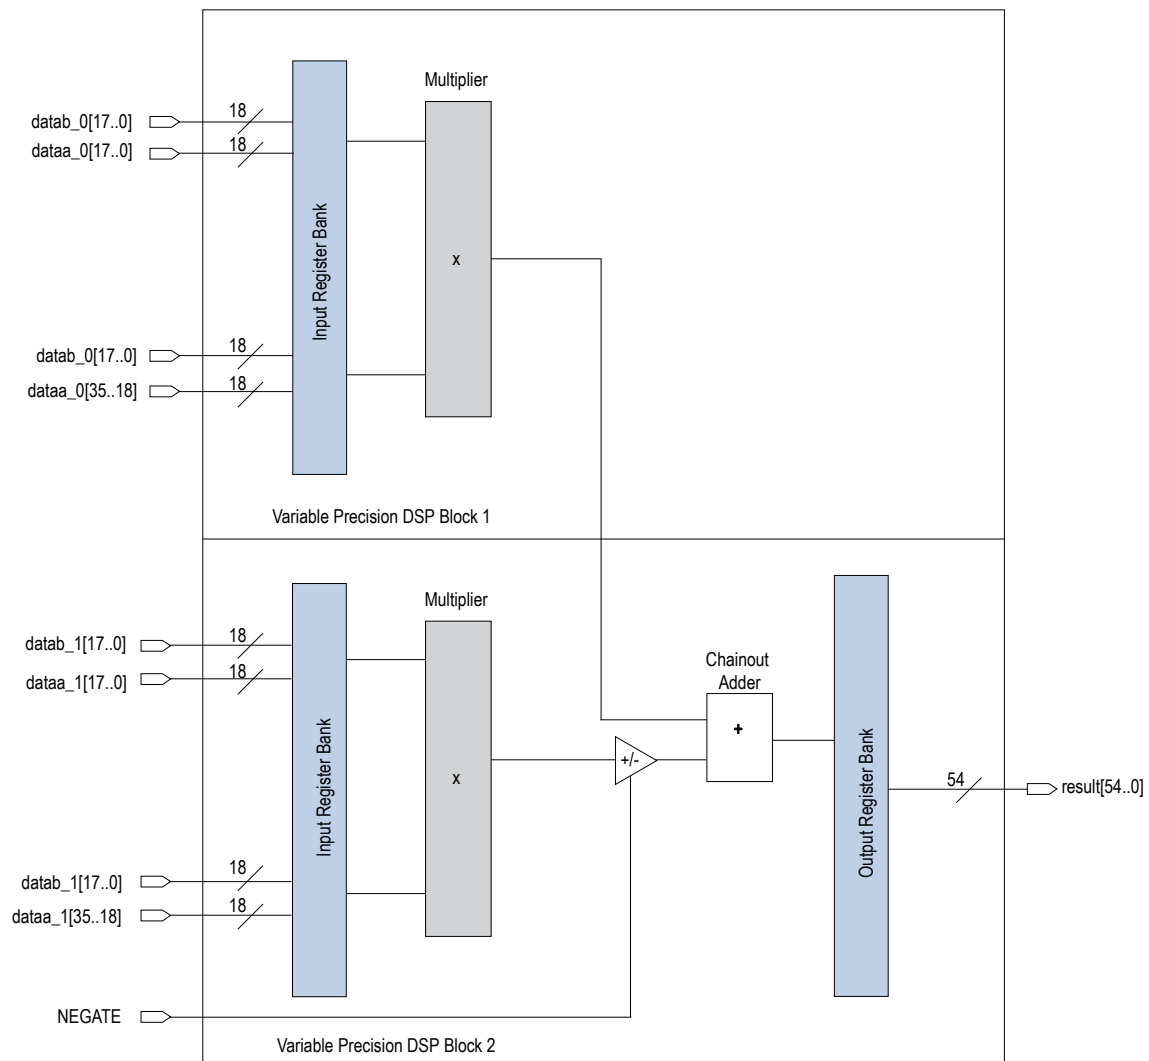Figure 3-28: One Sum of Two 36 x 18 Multipliers with Two Variable Precision DSP Blocks for Arria V GZ Devices



One Sum of Four 18 x 18 Multipliers

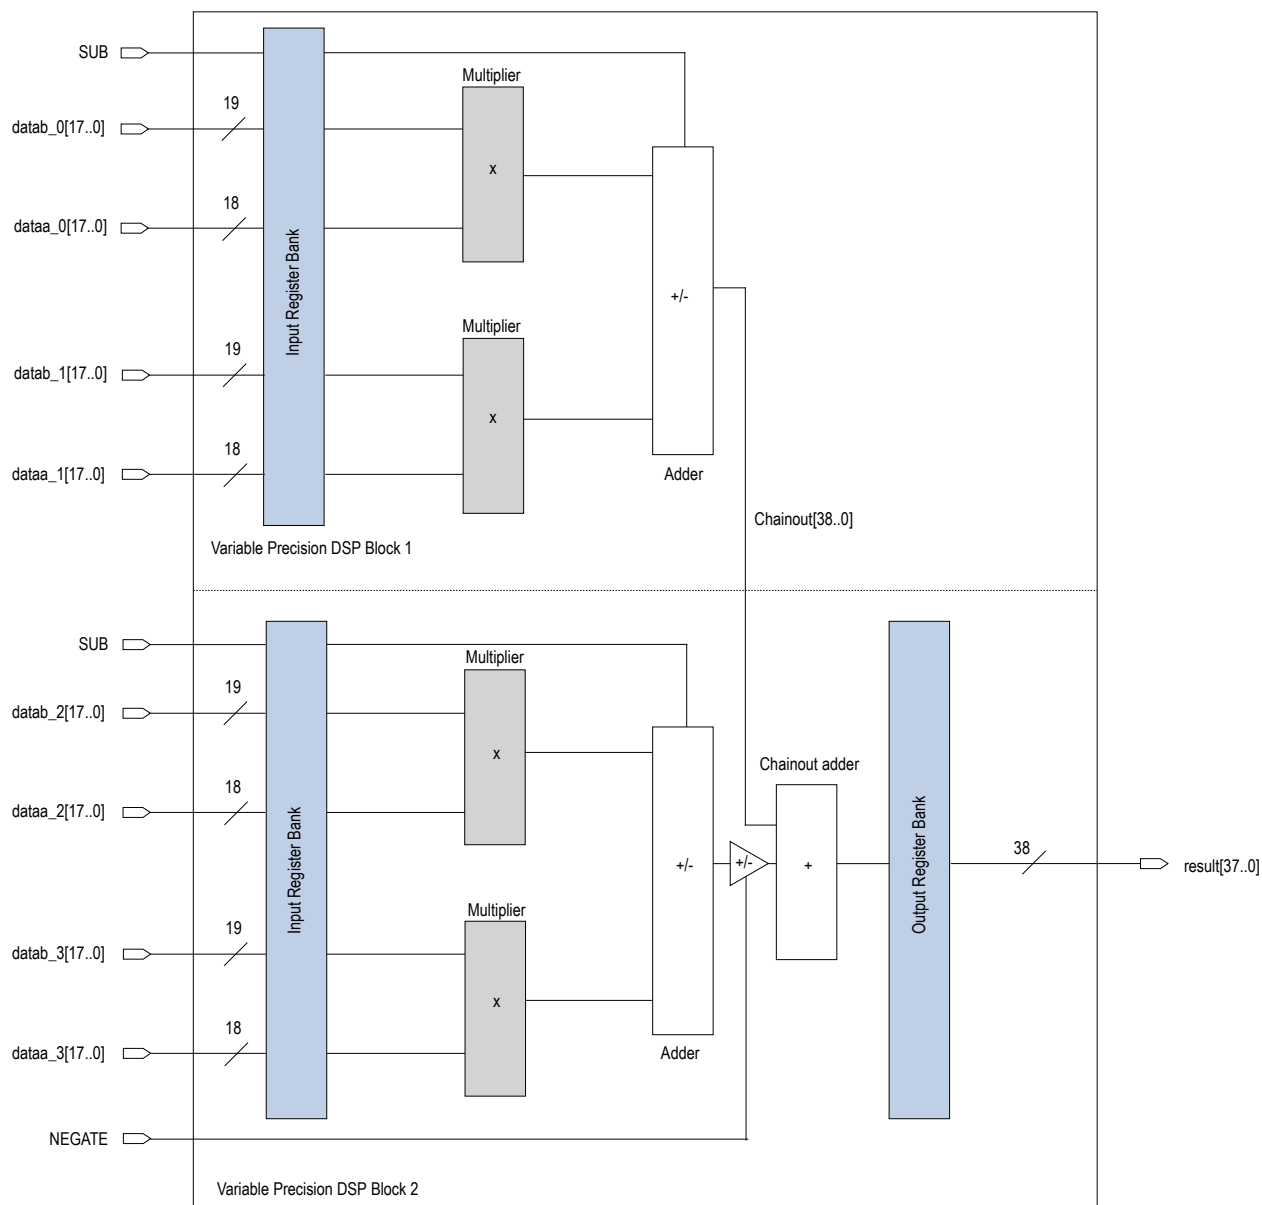Figure 3-29: One Sum of Four 18 x 18 Multipliers with Two Variable Precision DSP Blocks for Arria V GZ Devices



Sum of Square Mode

The Arria V variable precision DSP block can implement one sum of square mode.


Figure 3-30: One Sum of Square Mode Equation

$$(a \pm b)^2 \times (c \pm d)^2$$

You can feed the four 18-bit inputs into the pre-adder block to convert b and d input as two's complement numbers to perform subtraction, if required.

You can feed each 18-bit pre-adder block output into both multiplicand and multiplier inputs of an 18 x 18 multiplier to generate a square result.

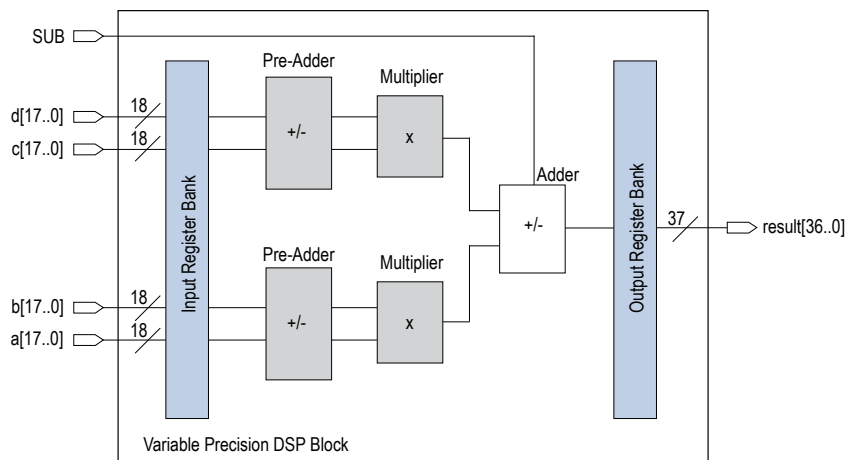Figure 3-31: One Sum of Square Mode in a Variable Precision DSP Block for Arria V GZ Devices



18 x 18 Multiplication Summed with 36-Bit Input Mode

Arria V variable precision DSP blocks support one 18 x 18 multiplication summed to a 36-bit input.

Use the upper multiplier to provide the input for an 18 x 18 multiplication, while the bottom multiplier is bypassed.

The following signals are concatenated to produce a 36-bit input:

- Arria V GX, GT, SX, and ST devices: `dataab_y1[17..0]` and `dataab_y1[35..18]`
- Arria V GZ devices: `data1[17..0]` and `data1[35..18]`

Figure 3-32: One 18 x 18 Multiplication Summed with 36-Bit Input Mode for Arria V GX, GT, SX, and ST Devices


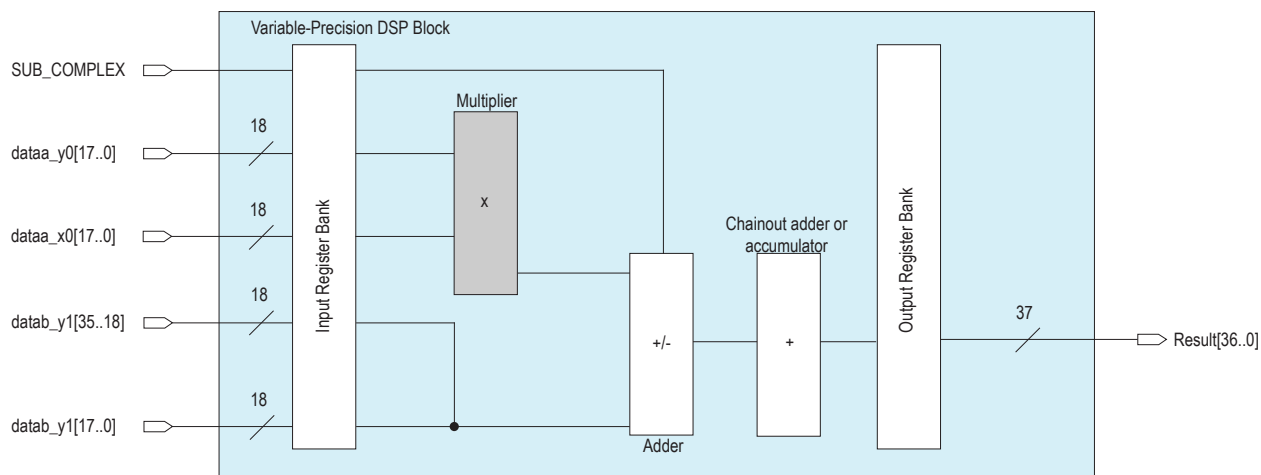


Figure 3-33: One 18 x 18 Multiplication Summed with 36-Bit Input Mode for Arria V GZ Devices

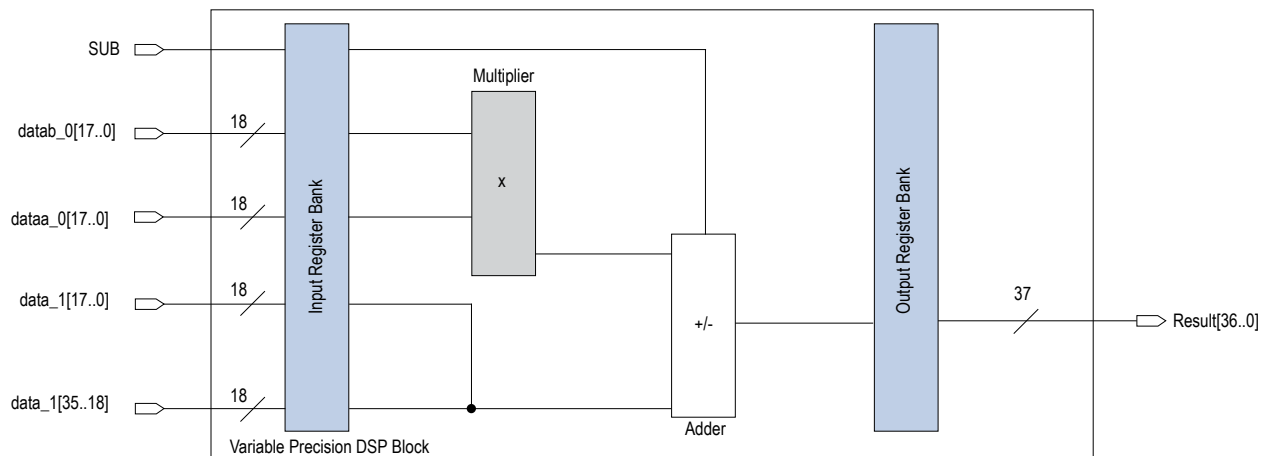

Systolic FIR Mode


The basic structure of a FIR filter consists of a series of multiplications followed by an addition.

Figure 3-34: Basic FIR Filter Equation

$$y[n] = \sum_{i=1}^k c[i]x[n-i-1]$$

Depending on the number of taps and the input sizes, the delay through chaining a high number of adders can become quite large. To overcome the delay performance issue, the systolic form is used with additional delay elements placed per tap to increase the performance at the cost of increased latency.

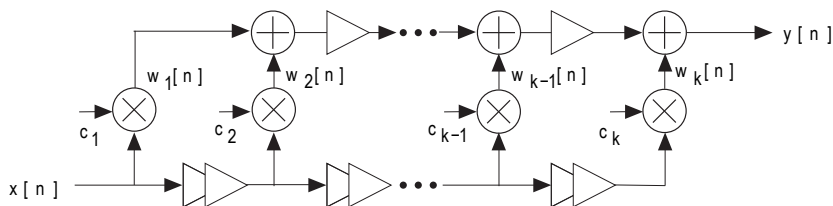Figure 3-35: Systolic FIR Filter Equivalent Circuit



Arria V variable precision DSP blocks support the following systolic FIR structures:

- 18-bit
- 27-bit


In systolic FIR mode, the input of the multiplier can come from four different sets of sources:

- Two dynamic inputs
- One dynamic input and one coefficient input
- One coefficient input and one pre-adder output
- One dynamic input and one pre-adder output (for Arria V GX, GT, SX, and ST devices only)

18-Bit Systolic FIR Mode

In 18-bit systolic FIR mode, the adders are configured as dual 44-bit adders, thereby giving 8 bits of overhead when using an 18-bit operation (36-bit products). This allows a total of 256 multiplier products.

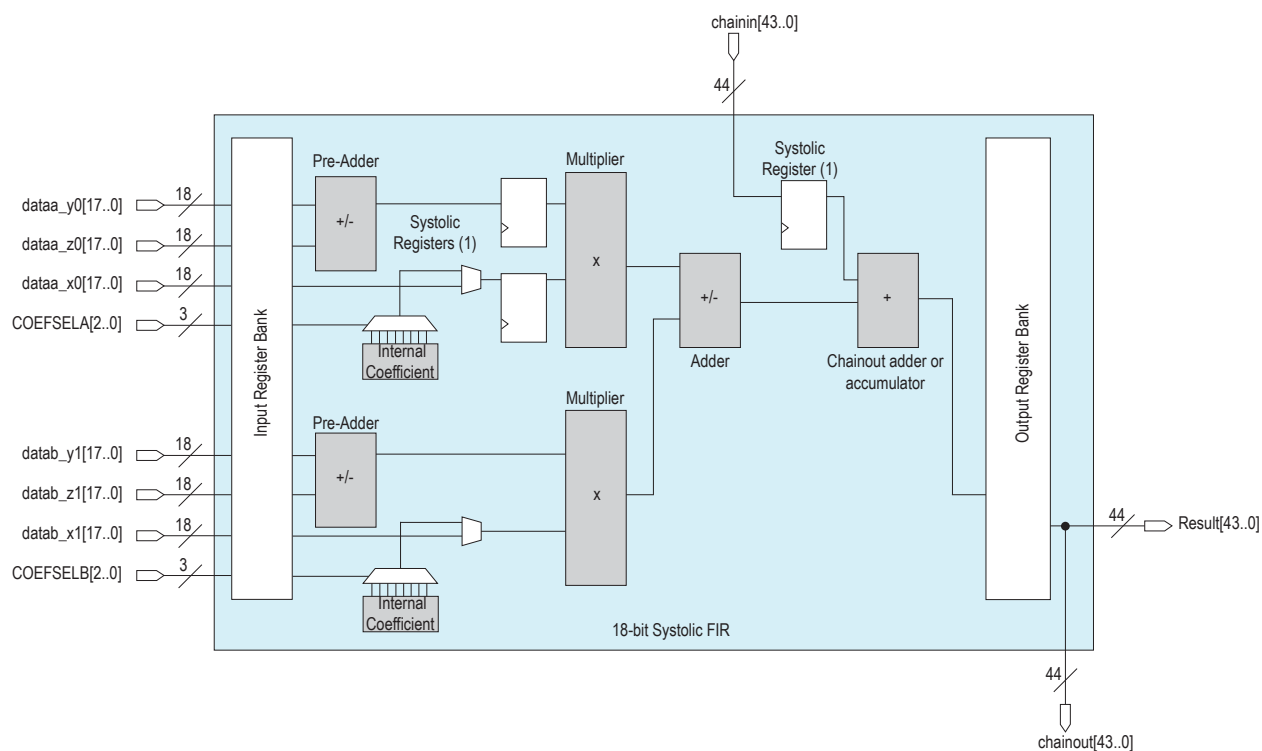
Figure 3-36: 18-Bit Systolic FIR Mode for Arria V GX, GT, SX, and ST Devices



Note:

1. The systolic registers have the same clock source as the output register bank.

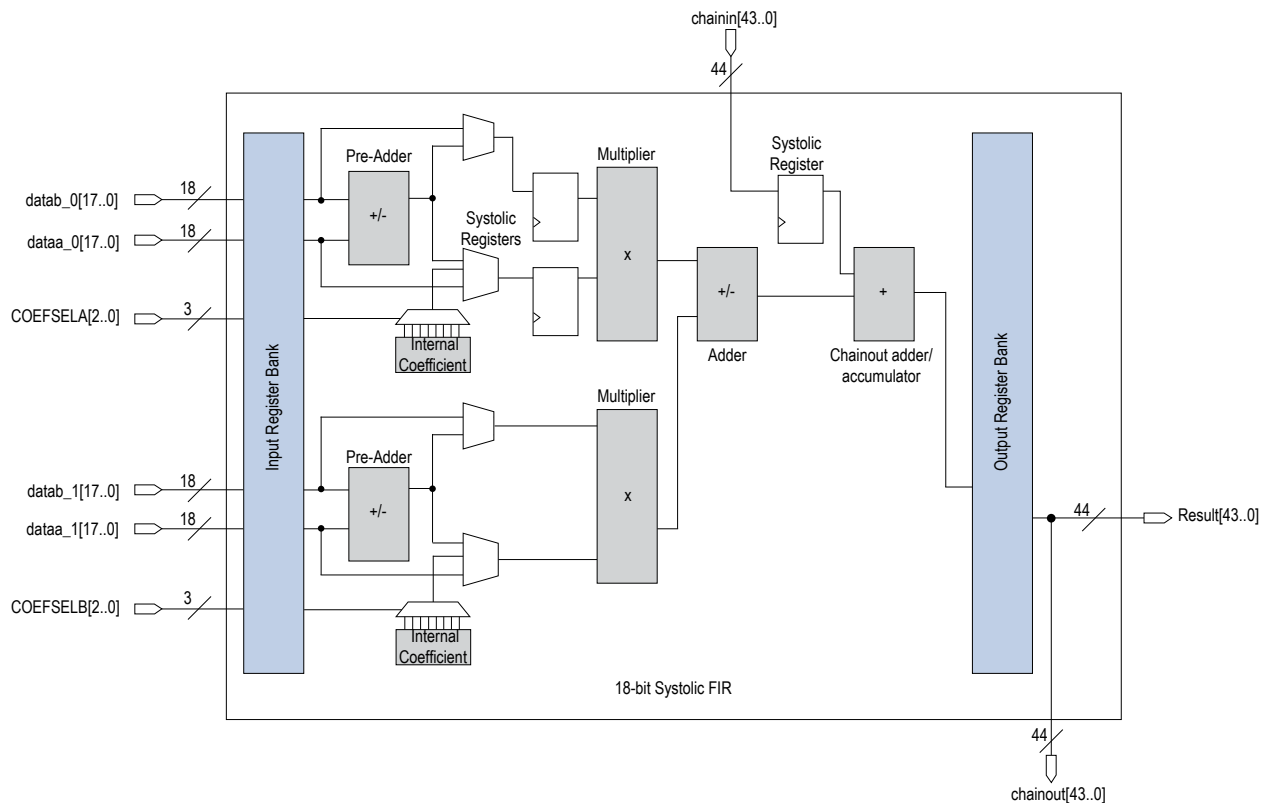Figure 3-37: 18-Bit Systolic FIR Mode with Two Dynamic Inputs for Arria V GZ Devices



27-Bit Systolic FIR Mode

In 27-bit systolic FIR mode, the chainout adder or accumulator is configured for a 64-bit operation, providing 10 bits of overhead when using a 27-bit data (54-bit products). This allows a total of 1,024 multiplier products.

The 27-bit systolic FIR mode allows the implementation of one stage systolic filter per DSP block.

Figure 3-38: 27-Bit Systolic FIR Mode for Arria V GX, GT, SX, and ST Devices


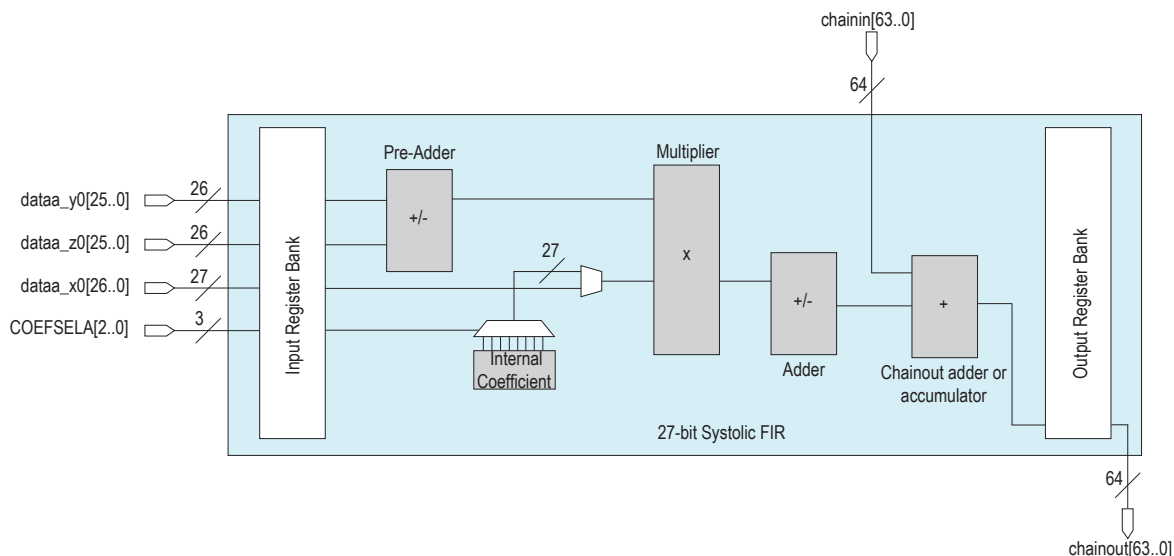


Figure 3-39: 27-Bit Systolic FIR Mode for Arria V GZ Devices

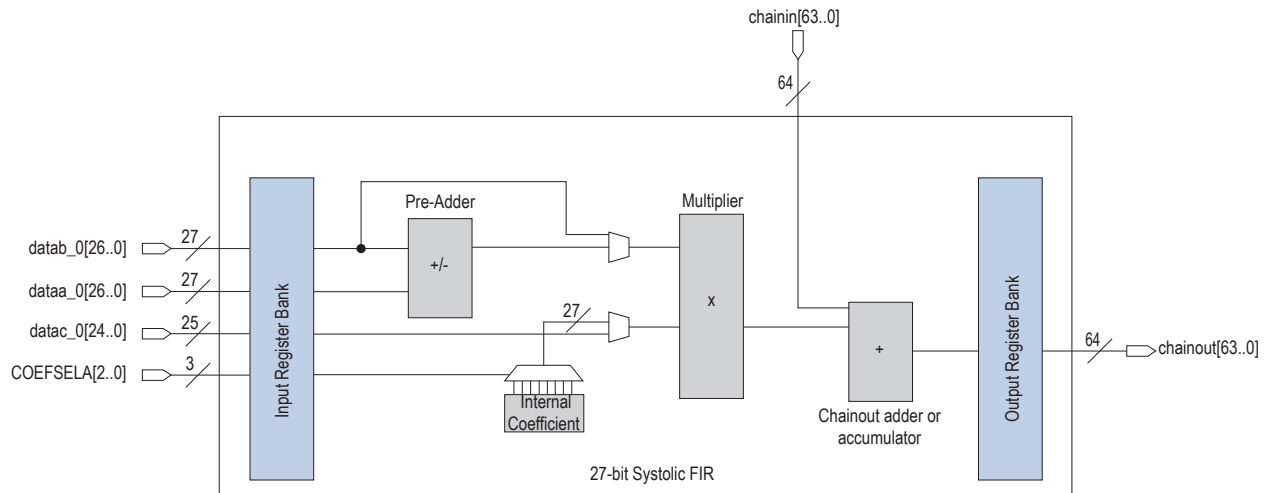

Document Revision History

Date	Version	Changes
November 2012	2012.11.19	- Updated the features list. - Added supported operational modes for Arria V GZ devices. - Updated design considerations for Arria V GZ devices. - Added DSP block architecture in 27 x 27 mode for Arria V GX, GT, SX, and ST devices. - Added DSP block architecture in 18 x 18 and 27 x 27 modes for Arria V GZ devices. - Updated DSP block architecture information on input register bank, pre-adder, multipliers, accumulator and chainout adder, and systolic registers for Arria V GZ devices. - Added 16 x 16, 18 x 18 (partial), 18 x 18, 36 x 18, and 36-bit independent multiplier modes for Arria V GZ devices. - Added 18 x 18, 18 x 25, and 27 x 27 independent complex multiplier modes for Arria V GZ devices. - Added 16 x 16, 18 x 18, 27 x 27, and 36 x 18 multiplier adder sum modes for Arria V GZ devices. - Added sum of square mode for Arria V GZ devices. - Added 18 x 18 multiplication summed with 36-bit input mode for Arria V GZ devices. - Added 18-bit and 27-bit systolic FIR modes for Arria V GZ devices. - Reorganized content and updated template.

Date	Version	Changes
June 2012	2.0	Updated for the Quartus II software v12.0 release: • Restructured chapter. • Added “Design Considerations”, “Adder”, and “Double Accumulation Register” sections. • Updated Figure 3–1 and Figure 3–13. • Added Table 3–3. • Updated “Systolic Registers” and “Systolic FIR Mode” sections. • Added Equation 3–2. • Added Figure 3–12.
November 2011	1.1	Restructured chapter.
May 2011	1.0	Initial release.

2012.11.19

AV-52004

 [Subscribe](#)

 [Feedback](#)

This chapter describes the advanced features of hierarchical clock networks and phase-locked loops (PLLs) in Arria® V devices. The Quartus® II software enables the PLLs and their features without external devices.

Clock Networks

The Arria V devices contain the following clock networks that are organized into a hierarchical structure:

- Global clock networks (GCLKs)
- Regional clock networks (RCLKs)
- Periphery clock networks (PCLKs)

Note: Internally-generated GCLKs, RCLKs, or PCLKs cannot drive the Arria V PLLs. The input clock to the PLL must be driven by dedicated clock input pins, PLL-fed GCLKs, or PLL-fed RCLKs.

Note: When used as single-ended clock inputs, the `CLKn` pins drive the PLLs over global or regional clock networks. The `CLKn` pins do not have dedicated routing paths to the PLLs.

Note: The figures in this chapter represent the top view of the silicon die that corresponds to a reverse view of the device package.

Clock Resources in Arria V Devices

The clock networks provide up to 352 unique clock domains. The Arria V devices allow up to 100 unique GCLK, RCLK, and PCLK clock sources (16 GCLKs + 22 RCLKs + 62 PCLKs) per device quadrant.

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered

Table 4-1: Clock Resources in Arria V Devices—Preliminary

Clock Resource	Number of Resources Available	Source of Clock Resource
Clock input pins	40 Single-ended (20 Differential) ³	CLK[0..7]p, CLK[12..23]p, CLK[0..7]n, and CLK[12..23]n pins ³
	48 Single-ended (24 Differential) ⁴	CLK[0..23]p and CLK[0..23]n pins ⁴
GCLK networks	16	CLK[0..23]p and CLK[0..23]n pins, PLL clock outputs, and logic array
RCLK networks	88 and 92 ⁵	CLK[0..23]p and CLK[0..23]n pins, PLL clock outputs, and logic array
PCLK networks	120,184, 210, 224, 248, and 282 ⁶	DPA clock outputs, PLD-transceiver interface clocks, I/O pins, and logic array
GCLKs and RCLKs per quadrant	38 ⁷	16 GCLKs + 22 RCLKs ⁷
	39 ⁸	16 GCLKs + 23 RCLKs ⁸
GCLKs and RCLKs per device	104 ⁷	16 GCLKs + 88 RCLKs ⁷
	108 ⁸	16 GCLKs + 92 RCLKs ⁸

For more information about the clock input pins connections, refer to [Arria V Device Family Pin Connection Guidelines](#).

Types of Clock Networks

The Arria V devices contain the following types of clock networks:

- Global Clock Networks
- Regional Clock Networks
- Periphery Clock Networks

Global Clock Networks

The Arria V devices provide up to 16 GCLKs that can drive throughout the device. The GCLKs serve as low-skew clock sources for functional blocks such as adaptive logic modules (ALMs), digital signal processing (DSP), embedded memory, and PLLs. The Arria V I/O elements (IOEs) and internal logic can also drive GCLKs to create internally generated global clocks and other high fan-out control signals; such as synchronous or asynchronous clear and clock enable signals.

³ This only applies to Arria V GX A1 and A3 devices, and Arria V GT C3 device.


⁴ This applies to all Arria V devices except for Arria V GX A1 and A3 devices, and Arria V GT C3 device.

⁵ There are 88 RCLKs in all Arria V devices except for Arria V GZ devices, and 92 RCLKs in Arria V GZ devices.

⁶ There are 120 PCLKs in Arria V GX A1 and A3 devices, and Arria V GT C3 device, 184 PCLKs in Arria V GX A5 and A7 devices, and Arria V GT C7 device, 210 PCLKs in Arria V GZ E1 and E3 devices, 224 PCLKs in Arria V GX B1 and B3 devices, and Arria V GT D3 device, 248 PCLKs in Arria V GX B5 and B7 devices, and Arria V GT D7 device, and 282 PCLKs in Arria V GZ E5 and E7 devices.

⁷ This applies to all Arria V devices except for Arria V GZ devices.

⁸ This only applies to Arria V GZ devices.

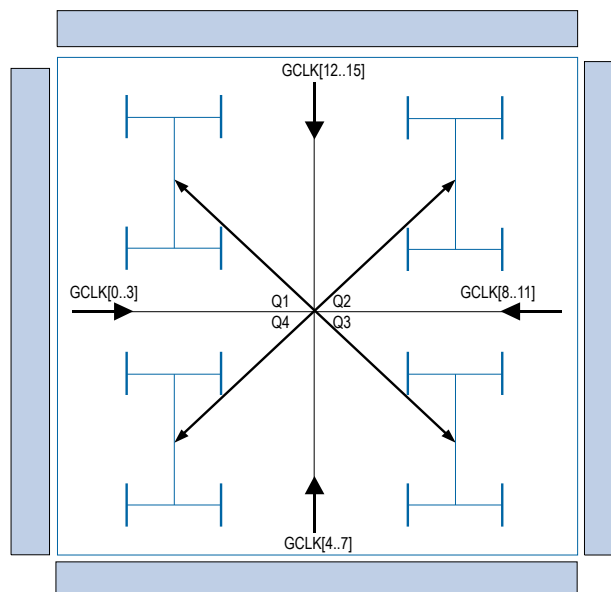Figure 4-1: GCLK Networks in Arria V Devices

Regional Clock Networks

RCLK networks are only applicable to the quadrant they drive into. RCLK networks provide the lowest clock insertion delay and skew for logic contained within a single device quadrant. The Arria V IOEs and internal logic within a given quadrant can also drive RCLKs to create internally generated regional clocks and other high fan-out control signals; for example, synchronous or asynchronous clears and clock enables.


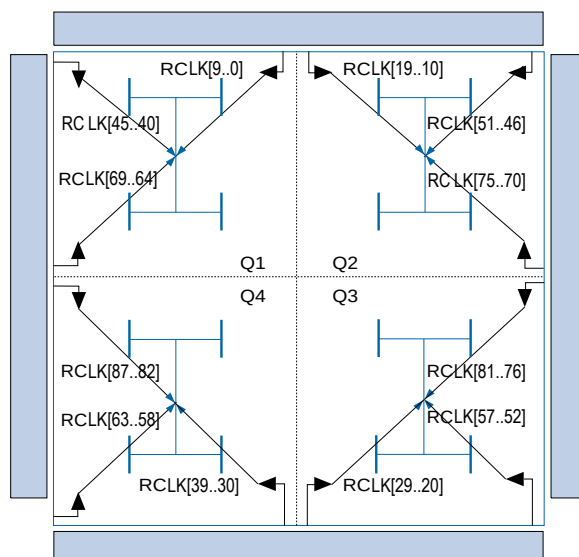
Figure 4-2: RCLK Networks in Arria V GX and GT Devices

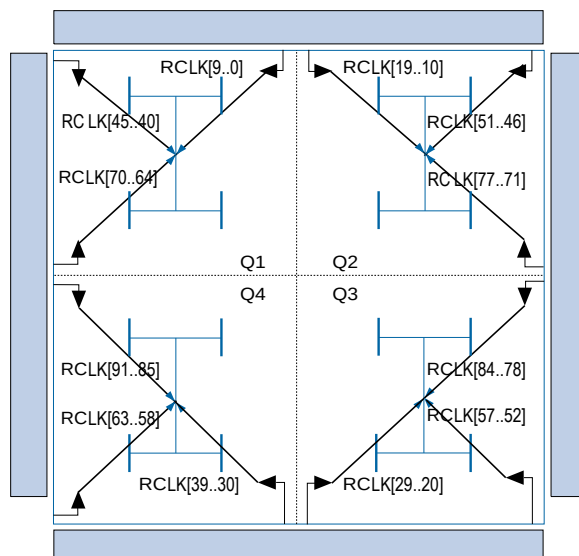Figure 4-3: RCLK Networks in Arria V GZ Devices




Periphery Clock Networks

Depending on the routing direction, the Arria V devices provide vertical PCLKs from the top and bottom periphery and horizontal PCLKs from the left and right periphery. Clock outputs from the dynamic phase aligner (DPA) block, programmable logic device (PLD)-transceiver interface clocks, I/O pins, and internal logic can drive the PCLK networks.

PCLKs have higher skew when compared with GCLK and RCLK networks. You can use PCLKs for general purpose routing to drive signals into and out of the Arria V device.

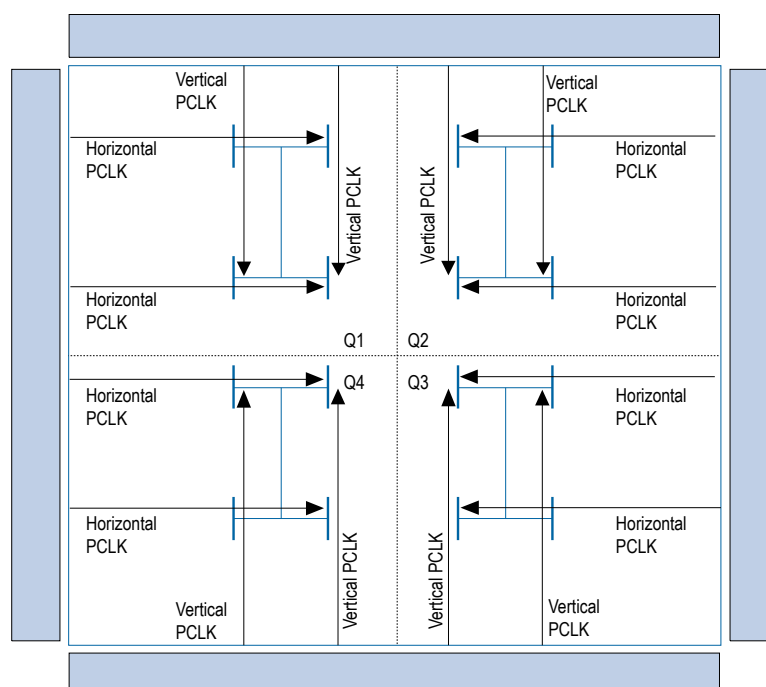Figure 4-4: PCLK Networks in Arria V Devices




Clock Sources Per Quadrant

The Arria V devices provide 30 section clock networks (SCLK) in each spine clock per quadrant that can drive six row clocks in each logic array block (LAB) row, nine column I/O clocks, and two core reference clocks. The SCLKs are the clock resources to the core functional blocks, PLLs, and I/O interfaces of the device.

A spine clock is another layer of routing between the GCLKs, RCLKs, and PCLK networks before each clock is connected to the clock routing for each LAB row. The settings for spine clocks are transparent. The Quartus II software automatically routes the spine clock based on the GCLK, RCLK, and PCLK networks.

The following figure shows SCLKs driven by the GCLK, RCLK, PCLK, or the PLL feedback clock networks in each spine clock per quadrant. The GCLK, RCLK, PCLK, and PLL feedback clocks share the same routing to the SCLKs. To ensure successful design fitting in the Quartus II software, the total number of clock resources must not exceed the SCLK limits in each region.

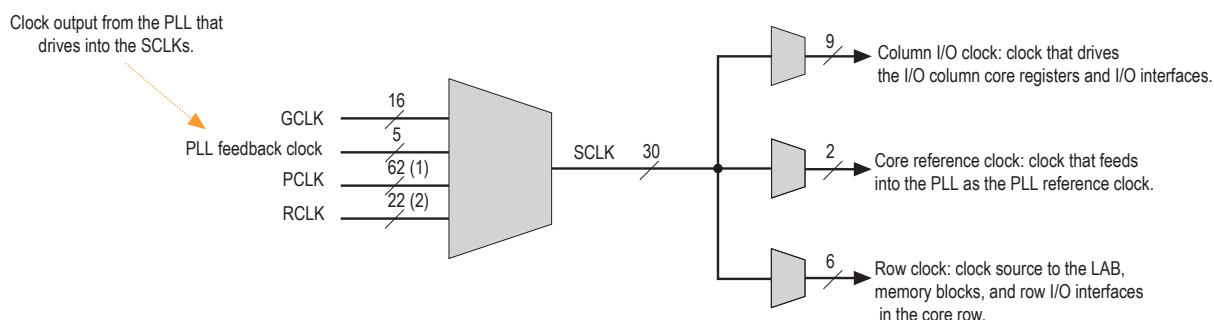Figure 4-5: Hierarchical Clock Networks in Each Spine Clock Per Quadrant



Notes:

1. There are up to 62 PCLKs that can drive the SCLKs in each spine clock per quadrant in the largest device.
2. There are up to 22 RCLKs that can drive the SCLKs in each spine clock per quadrant in the largest device.

Types of Clock Regions

This section describes the following types of clock regions in Arria V devices:

- Entire device clock region
- Regional clock region
- Dual-regional clock region

Entire Device Clock Region

To form the entire device clock region, a source drives a GCLK network that can be routed through the entire device. The source is not necessarily a clock signal. This clock region has the maximum insertion delay when compared with other clock regions, but allows the signal to reach every destination in the device. It is a good option for routing global reset and clear signals or routing clocks throughout the device.


Regional Clock Region

To form a regional clock region, a source drives a signal RCLK network that you can route throughout one quadrant of the device. This clock region provides the lowest skew in a quadrant. It is a good option if all the destinations are in a single quadrant.

Dual-Regional Clock Region

To form a dual-regional clock region, a single source (a clock pin or PLL output) generates a dual-regional clock by driving two RCLK networks (one from each quadrant). This technique allows destinations across two adjacent device quadrants to use the same low-skew clock. The routing of this signal on an entire side has approximately the same delay as a RCLK region. Internal logic can also drive a dual-regional clock network.

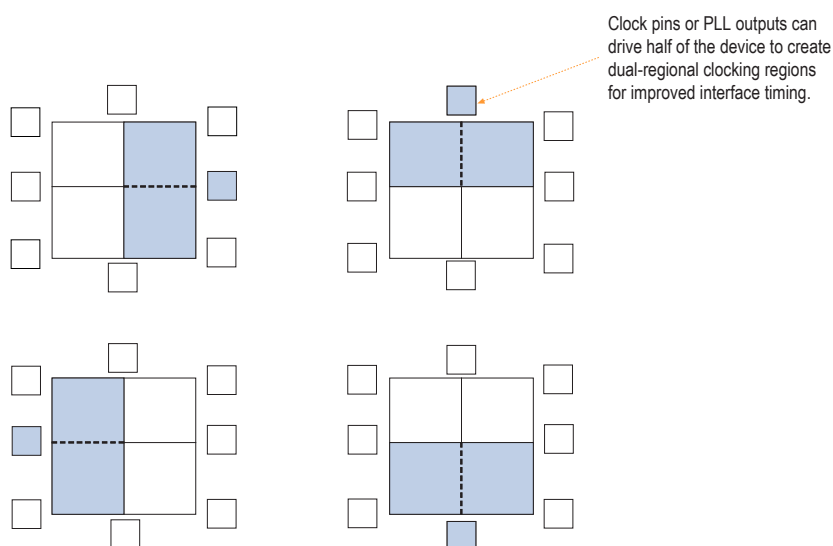Figure 4-6: Dual-Regional Clock Region for Arria V Devices



Clock Network Sources

In Arria V devices, clock input pins, PLL outputs, high-speed serial interface (HSSI) outputs, DPA outputs, and internal logic can drive the GCLK and RCLK networks.

For connectivity between the dedicated clock pins, GCLK, and RCLK networks, refer to [Table 4-2: Clock Input Pin Connectivity to the GCLK Networks for Arria V Devices—Preliminary](#) on page 7, [Table 4-3: Clock Input Pin Connectivity to the RCLK Networks for Arria V GX and GT Devices—Preliminary](#) on page 7, and [Table 4-4: Clock Input Pin Connectivity to the RCLK Networks for Arria V GZ Devices—Preliminary](#) on page 8.

Dedicated Clock Input Pins

CLK pins can be either differential clocks or single-ended clocks. The Arria V devices support up to 24 differential clock inputs or 48 single-ended clock inputs. You can also use dedicated clock input pins CLK[23..0] for high fan-out control signals such as asynchronous clears, presets, and clock enables for protocol signals through the GCLK or RCLK networks. When used as single-ended clock inputs, the CLKn pins drive PLLs over global or regional clock networks.

Internal Logic

You can drive each GCLK, RCLK, and horizontal PCLK network using LAB-routing and row clock to enable internal logic to drive a high fan-out, low-skew signal.

Note: Arria V PLLs cannot be driven by internally generated GCLKs, RCLKs, or horizontal PCLKs. The input clock to the PLL has to come from dedicated clock input pins or pin/PLL-fed GCLKs or RCLKs.

DPA Outputs

Every DPA generates one PCLK to the core.

HSSI Outputs

Every three HSSI outputs generate a group of six PCLKs to the core.

For more information about DPA and HSSI outputs, refer to the [High-Speed Differential I/O Interfaces and DPA in Arria V Devices](#) chapter.

PLL Clock Outputs

The Arria V PLL clock outputs can drive both GCLK and RCLK networks.

Clock Input Pin Connections to GCLK and RCLK Networks

The following table lists the connection between the dedicated clock input pins and GCLKs.

Table 4-2: Clock Input Pin Connectivity to the GCLK Networks for Arria V Devices—Preliminary

Clock Resources	CLK (p/n Pins)
GCLK [0, 1, 2, 3]	CLK [0, 1, 2, 3, 20, 21, 22, 23]
GCLK [4, 5, 6, 7]	CLK [4, 5, 6, 7]
GCLK [8, 9, 10, 11]	CLK [8, 9, 10, 11] ⁹ and CLK [12, 13, 14, 15]
GCLK [12, 13, 14, 15]	CLK [16, 17, 18, 19]

[Table 4-3: Clock Input Pin Connectivity to the RCLK Networks for Arria V GX and GT Devices—Preliminary](#) on page 7 and [Table 4-4: Clock Input Pin Connectivity to the RCLK Networks for Arria V GZ Devices—Preliminary](#) on page 8 list the connectivity between the dedicated clock input pins and RCLKs in Arria V devices. A given clock input pin can drive two adjacent RCLK networks to create a dual-regional clock network.

Table 4-3: Clock Input Pin Connectivity to the RCLK Networks for Arria V GX and GT Devices—Preliminary

Clock Resources	CLK (p/n Pins)
RCLK [58, 59, 60, 61, 62, 63, 64, 68, 82, 86]	CLK0
RCLK [58, 59, 60, 61, 62, 63, 65, 69, 83, 87]	CLK1
RCLK [58, 59, 60, 61, 62, 63, 66, 84]	CLK2
RCLK [58, 59, 60, 61, 62, 63, 67, 85]	CLK3
RCLK [20, 24, 28, 30, 34, 38]	CLK4
RCLK [21, 25, 29, 31, 35, 39]	CLK5
RCLK [22, 26, 32, 36]	CLK6
RCLK [23, 27, 33, 37]	CLK7
RCLK [52, 53, 54, 55, 56, 57, 70, 74, 76, 80]	CLK8 ¹⁰

⁹ This applies to all Arria V devices except for Arria V GX A1 and A3 devices, and Arria V GT C3 device.

¹⁰ This applies to all Arria V GX and GT devices except for Arria V GX A1 and A3 devices, and Arria V GT C3 device.

Clock Resources	CLK (p/n Pins)
RCLK[52, 53, 54, 55, 56, 57, 71, 75, 77, 81]	CLK9 ¹⁰
RCLK[52, 53, 54, 55, 56, 57, 72, 78]	CLK10 ¹⁰
RCLK[52, 53, 54, 55, 56, 57, 73, 79]	CLK11 ¹⁰
RCLK[46, 47, 48, 49, 50, 51, 70, 74, 76, 80]	CLK12 ¹¹
RCLK[46, 47, 48, 49, 50, 51, 71, 75, 77, 81]	CLK13 ¹¹
RCLK[46, 47, 48, 49, 50, 51, 72, 78]	CLK14 ¹¹
RCLK[46, 47, 48, 49, 50, 51, 73, 79]	CLK15 ¹¹
RCLK[0, 4, 8, 10, 14, 18]	CLK16
RCLK[1, 5, 9, 11, 15, 19]	CLK17
RCLK[2, 6, 12, 16]	CLK18
RCLK[3, 7, 13, 17]	CLK19
RCLK[40, 41, 42, 43, 44, 45, 64, 68, 82, 86]	CLK20
RCLK[40, 41, 42, 43, 44, 45, 65, 69, 83, 87]	CLK21
RCLK[40, 41, 42, 43, 44, 45, 66, 84]	CLK22
RCLK[40, 41, 42, 43, 44, 45, 67, 85]	CLK23

Table 4-4: Clock Input Pin Connectivity to the RCLK Networks for Arria V GZ Devices—Preliminary

Clock Resources	CLK (p/n pins)
RCLK[58, 59, 60, 61, 62, 63, 64, 68, 85, 89]	CLK0
RCLK[58, 59, 60, 61, 62, 63, 65, 69, 86, 90]	CLK1
RCLK[58, 59, 60, 61, 62, 63, 66, 70, 87, 91]	CLK2
RCLK[58, 59, 60, 61, 62, 63, 67, 88]	CLK3
RCLK[20, 24, 28, 30, 34, 38]	CLK4
RCLK[21, 25, 29, 31, 35, 39]	CLK5
RCLK[22, 26, 32, 36]	CLK6
RCLK[23, 27, 33, 37]	CLK7
RCLK[52, 53, 54, 55, 56, 57, 71, 75, 78, 82]	CLK8
RCLK[52, 53, 54, 55, 56, 57, 72, 76, 79, 83]	CLK9
RCLK[52, 53, 54, 55, 56, 57, 73, 77, 80, 84]	CLK10
RCLK[52, 53, 54, 55, 56, 57, 74, 81]	CLK11
RCLK[46, 47, 48, 49, 50, 51, 71, 75, 78, 82]	CLK12
RCLK[46, 47, 48, 49, 50, 51, 72, 76, 79, 83]	CLK13
RCLK[46, 47, 48, 49, 50, 51, 73, 77, 80, 84]	CLK14

¹¹ Arria V GX A1 and A3 devices, and Arria V GT C3 device do not support RCLK[46 . . 51].

Clock Resources	CLK (p/n pins)
RCLK[46, 47, 48, 49, 50, 51, 74, 81]	CLK15
RCLK[0, 4, 8, 10, 14, 18]	CLK16
RCLK[1, 5, 9, 11, 15, 19]	CLK17
RCLK[2, 6, 12, 16]	CLK18
RCLK[3, 7, 13, 17]	CLK19
RCLK[40, 41, 42, 43, 44, 45, 64, 68, 85, 89]	CLK20
RCLK[40, 41, 42, 43, 44, 45, 65, 69, 86, 90]	CLK21
RCLK[40, 41, 42, 43, 44, 45, 66, 70, 87, 91]	CLK22
RCLK[40, 41, 42, 43, 44, 45, 67, 88]	CLK23

Clock Output Connections

For Arria V PLL connectivity to GCLK and RCLK networks, refer to [PLL Connectivity to GCLK and RCLK Networks for Arria V Devices](#).

Clock Control Block

Every GCLK, RCLK, and PCLK network has its own clock control block. The control block provides the following features:

- Clock source selection (dynamic selection available only for GCLKs)
- Global clock multiplexing
- Clock power down (static or dynamic clock enable or disable available only for GCLKs and RCLKs)

Pin Mapping in Arria V Devices

Table 4-5: Mapping Between the Input Clock Pins, PLL Counter Outputs, and Clock Control Block Inputs


Clock	Fed by
inclk[0] and inclk[1]	Any of the four dedicated clock pins on the same side of the Arria V device.
inclk[2]	PLL counters C0 and C2 from the two center PLLs on the same side of the Arria V devices.
inclk[3]	PLL counters C1 and C3 from the two center PLLs on the same side of the Arria V devices.

Caution: You cannot use corner PLLs for dynamic clock control selection.

GCLK Control Block

You can select the clock source for the GCLK select block either statically or dynamically using internal logic to drive the multiplexer-select inputs. When selecting the clock source dynamically, you can select either PLL outputs (such as C0 or C1) or a combination of clock pins or PLL outputs.

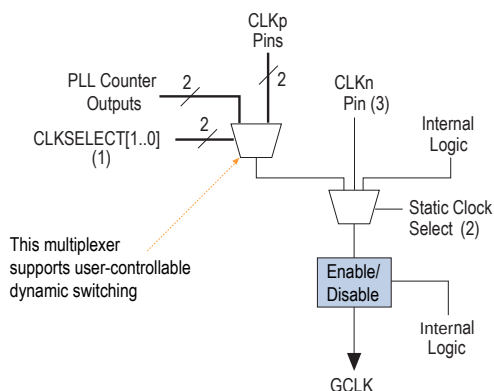Figure 4-7: GCLK Control Block for Arria V Devices




Notes:

1. When the device is in user mode, you can dynamically control the clock select signals through internal logic.
2. When the device is in user mode, you can only set the clock select signals through a configuration file (SRAM object file [.sof] or programmer object file [.pof]) because the signals cannot be controlled dynamically.
3. The CLKn pin is not a dedicated clock input when used as a single-ended PLL clock input. The CLKn pin can drive the PLL using the GCLK.

RCLK Control Block

You can only control the clock source selection for the RCLK select block statically using configuration bit settings in the configuration file (.sof or .pof) generated by the Quartus II software.

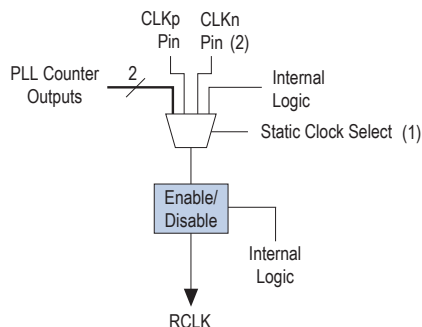Figure 4-8: RCLK Control Block for Arria V Devices



Notes:


1. When the device is in user mode, you can only set the clock select signals through a configuration file (.sof or .pof); they cannot be controlled dynamically.
2. The CLKn pin is not a dedicated clock input when used as a single-ended PLL clock input. The CLKn pin can drive the PLL using the RCLK.

You can set the input clock sources and the `clkena` signals for the GCLK and RCLK network multiplexers through the Quartus II software using the `ALTCLKCTRL` megafunction.

For more information about `ALTCLKCTRL` megafunction, refer to [Clock Control Block \(ALTCLKCTRL\) Megafunction User Guide](#).


PCLK Control Block

You can select the HSSI output or internal logic to drive the HSSI horizontal PCLK control block. Alternatively, you can also use the DPA clock output or internal logic to drive the DPA vertical PCLK. You can only use the DPA clock output to generate the vertical PCLK to the core.

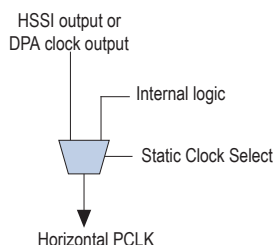Figure 4-9: Horizontal PCLK Control Block for Arria V Devices

External PLL Clock Output Control Block

You can enable or disable the dedicated external clock output pins using the ALTCLKCTRL megafunction.

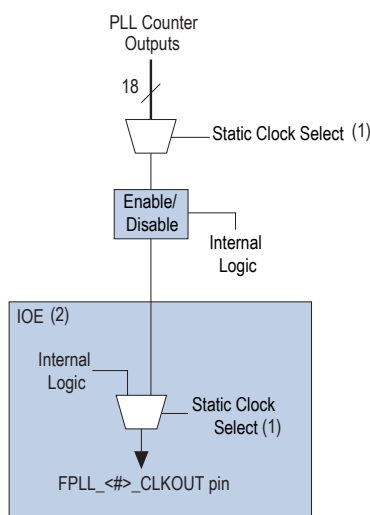Figure 4-10: External PLL Output Clock Control Block for Arria V Devices

Notes:

1. When the device is in user mode, you can only set the clock select signals through a configuration file (.sof or .pof); they cannot be controlled dynamically.
2. The clock control block feeds to a multiplexer within the FPLL_<#>_CLKOUT pin's IOE. The FPLL_<#>_CLKOUT pin is a dual-purpose pin. Therefore, this multiplexer selects either an internal signal or the output of the clock control block.

Clock Power Down

You can power down the Arria V GCLK and RCLK clock networks using both static and dynamic approaches.

When a clock network is powered down, all the logic fed by the clock network is in off-state, thereby reducing the overall power consumption of the device. The unused GCLK, RCLK, and PCLK networks are automatically powered down through configuration bit settings in the configuration file (.sof or .pof) generated by the Quartus II software.

The dynamic clock enable or disable feature allows the internal logic to control power-up or power-down synchronously on the GCLK and RCLK networks, including dual-regional clock regions.


Note: You cannot dynamically enable or disable GCLK or RCLK networks that drive PLLs.

Clock Enable Signals

The following figure shows the implementation of the clock enable and disable circuit of the clock control block in Arria V devices.

You cannot use the clock enable and disable circuit of the clock control block if the GCLK or RCLK output drives the input of a PLL.

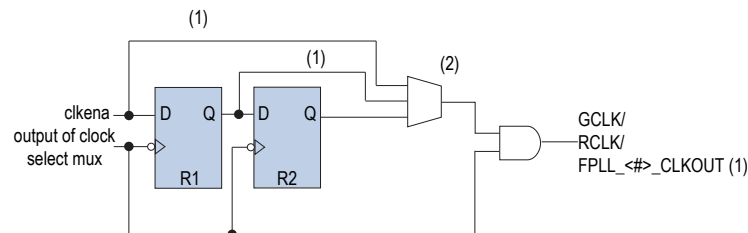Figure 4-11: `clk_ena` Implementation with Clock Enable and Disable Circuit




Notes:

1. The R1 and R2 bypass paths are not available for the PLL external clock outputs.
2. The select line is statically controlled by a bit setting in the .sof or .pof.

In Arria V devices, the `clk_ena` signals are supported at the clock network level instead of at the PLL output counter level. This allows you to gate off the clock even when you are not using a PLL. You can also use the `clk_ena` signals to control the dedicated external clocks from the PLLs.

Figure 4-12: Example of `clk_ena` Signals

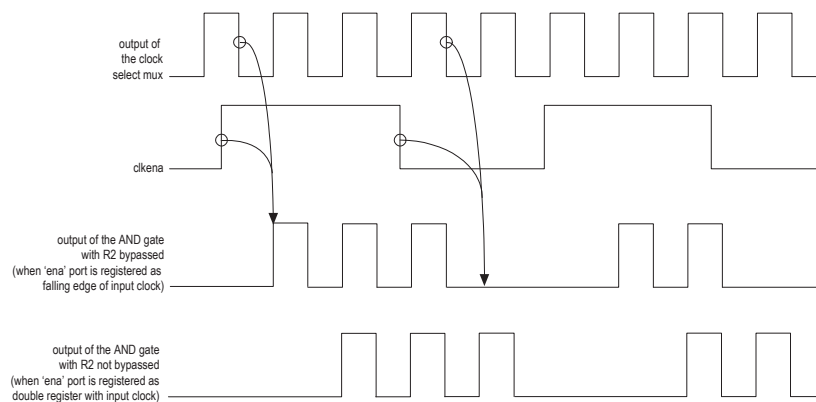This figure shows a waveform example for a clock output enable. The `clk_ena` signal is synchronous to the falling edge of the clock output.



Note:

1. Use the `clk_ena` signals to enable or disable the GCLK and RCLK networks or the FPLL_<#>_CLKOUT pins.

The Arria V devices have an additional metastability register that aids in asynchronous enable and disable of the GCLK and RCLK networks. You can optionally bypass this register in the Quartus II software.

The PLL can remain locked, independent of the `clk_ena` signals because the loop-related counters are not affected. This feature is useful for applications that require a low-power or sleep mode. The `clk_ena` signal can also disable clock outputs if the system is not tolerant of frequency overshoot during resynchronization.

Arria V PLLs

PLLs provide robust clock management and synthesis for device clock management, external system clock management, and high-speed I/O interfaces.

The Arria V device family contains fractional PLLs in addition to the existing integer PLLs. Two adjacent fractional PLLs share 18 output counters that support integer or fractional frequency synthesis. The Arria V devices offer up to 16 fractional PLLs in the larger densities. All Arria V fractional PLLs have the same core analog structure and features support.

Table 4-6: PLL Features in Arria V Devices —Preliminary

Feature	Support
Integer PLL	Yes
Fractional PLL	Yes
C output counters	18
M, N, C counter sizes	1 to 512
Dedicated external clock outputs	4 single-ended or 2 single-ended and 1 differential
Dedicated clock input pins	4 single-ended or 4 differential
External feedback input pin	Single-ended or differential
Spread-spectrum input clock tracking	Yes ¹²
Source synchronous compensation	Yes
Direct compensation	Yes
Normal compensation	Yes
Zero-delay buffer compensation	Yes
External feedback compensation	Yes
LVDS compensation	Yes
VCO output drives the DPA clock	Yes
Phase shift resolution	78.125 ps ¹³
Programmable duty cycle	Yes

PLL Locations in Arria V Devices

Figure 4-13: PLL Locations for Arria V GX A1 and A3 Devices, and Arria V GT C3 Device on page 14 through *Figure 4-18: PLL Locations for Arria V GZ E5 and E7 Devices* on page 17 show the physical locations of the fractional PLLs. Every index represents one fractional PLL in the device. The physical locations of the fractional PLLs correspond to the coordinates in the Quartus II Chip Planner.


¹² Provided input clock jitter is within input jitter tolerance specifications and the modulation frequency of the input clock is below the PLL bandwidth which is specified in the Fitter report.

¹³ The smallest phase shift is determined by the voltage-controlled oscillator (VCO) period divided by eight. For degree increments, the Arria V device can shift all output frequencies in increments of at least 45°. Smaller degree increments are possible depending on the frequency and divide parameters.

For single-ended clock inputs, only the CLK<#>p pin has a dedicated connection to the PLL. If you use the CLK<#>n pin, a global or regional clock is used.

Note: Driving a PLL over a global or regional clock can lead to higher jitter at the PLL input, and the PLL will not be able to fully compensate for the global or regional clock. Altera® recommends to use the CLKp pin for optimal performance when you use single-ended clock inputs to drive the PLLs.

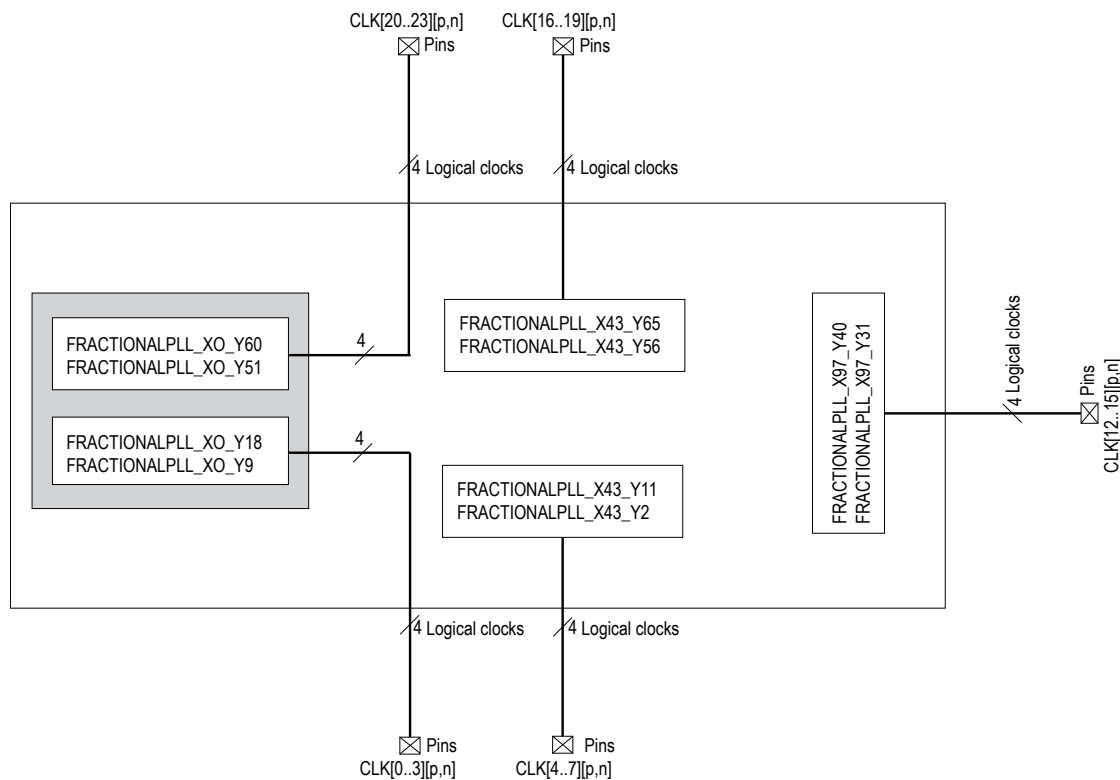
Figure 4-13: PLL Locations for Arria V GX A1 and A3 Devices, and Arria V GT C3 Device



Note:

1. Fractional PLL coordinates for Arria V GT C3 device will be finalized in the future release of the Quartus II software.

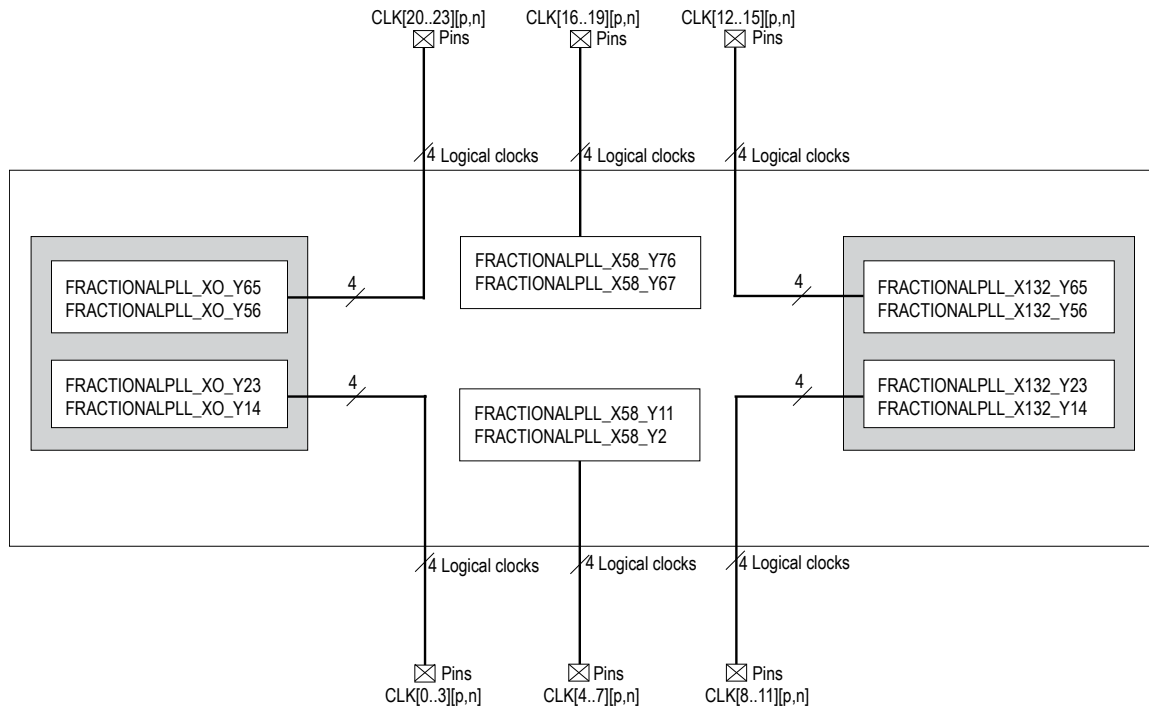Figure 4-14: PLL Locations for Arria V GX A5 and A7 Devices, and Arria V GT C7 Device



Note:

1. Fractional PLL coordinates for Arria V GT C7 device will be finalized in the future release of the Quartus II software.

Figure 4-15: PLL Locations for Arria V GX B1 and B3 Devices, and Arria V GT D3 Device

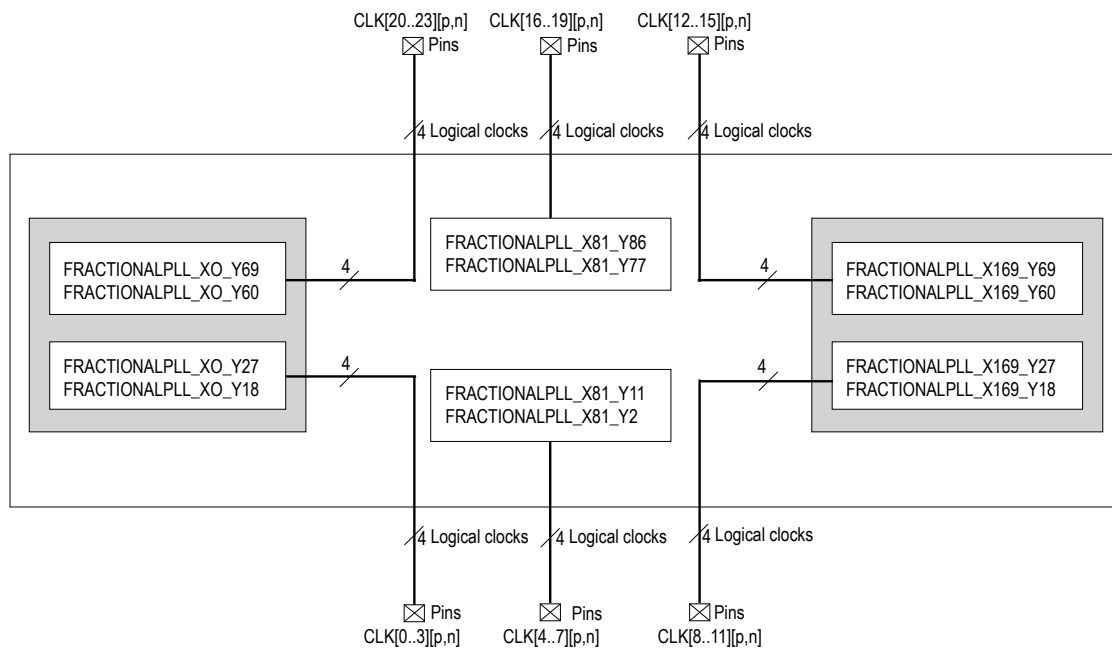


Figure 4-16: PLL Locations for Arria V GX B5 and B7 Devices, and Arria V GT D7 Device


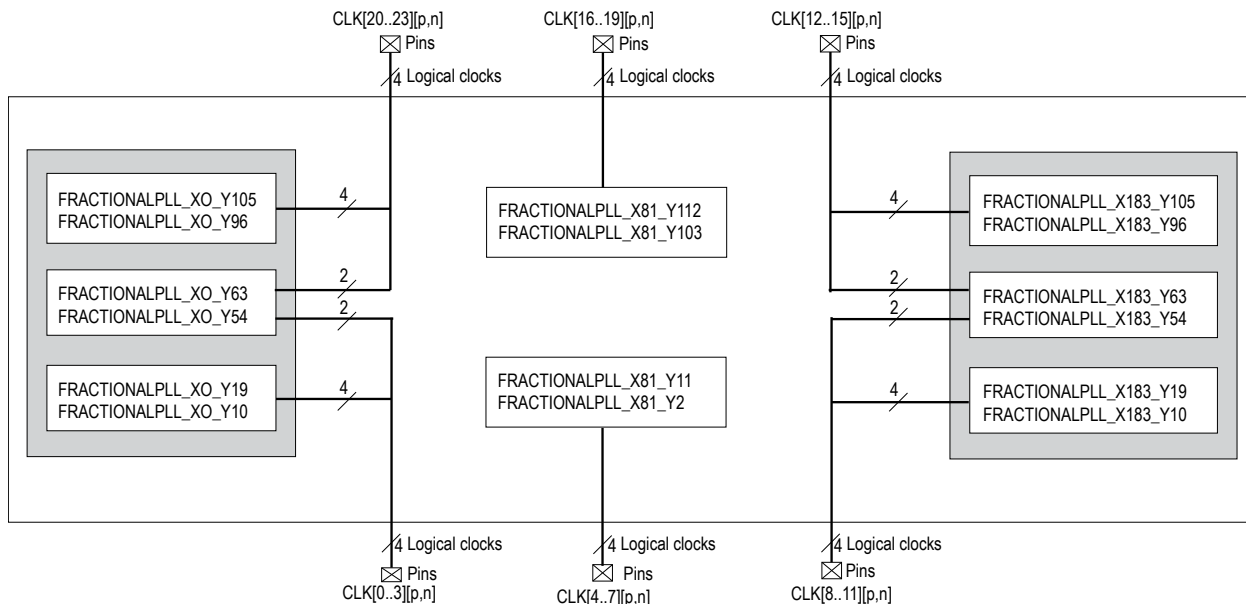



Figure 4-17: PLL Locations for Arria V GZ E1 and E3 Devices

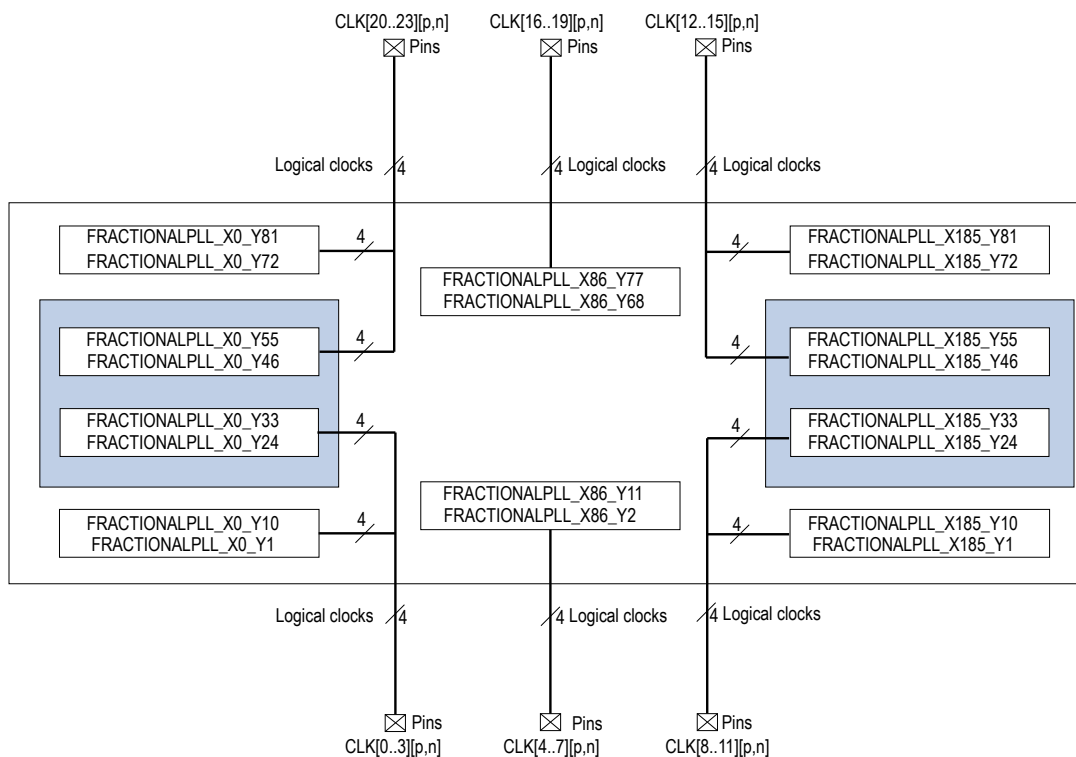

1. CLK0, CLK1, CLK22, and CLK23 clock pins feed into fractional PLL LR_X0_Y46 and fractional PLL LR_X0_Y55.
2. CLK8, CLK9, CLK14, and CLK15 clock pins feed into fractional PLL LR_X202_Y46 and fractional PLL LR_X202_Y55.

Fractional PLL Architecture

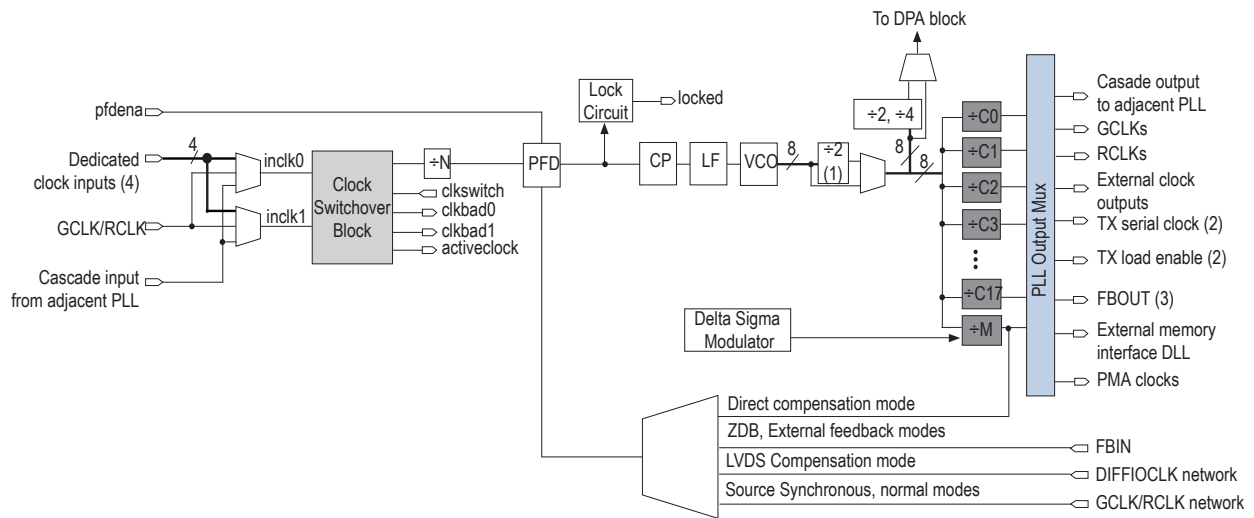Figure 4-19: Fractional PLL High-Level Block Diagram for Arria V Devices



Notes:

1. This is the VCO post-scale counter K.
2. Only C0, C2, C15, and C17 can drive the TX serial clock and C1, C3, C14, and C16 can drive the TX load enable.
3. This FBOUT port is fed by the M counter in the Arria V PLLs.
4. For single-ended clock inputs, only the CLK<#>p pin has a dedicated connection to the PLL. If you use the CLK<#>n pin, a global or regional clock is used.

Fractional PLL Usage

You can configure the fractional PLL to function either in the integer or in the enhanced fractional mode. One fractional PLL can use up to 18 output counters and all external clock outputs.

Fractional PLLs can be used as follows:

- Reduce the number of required oscillators on the board
- Reduce the clock pins used in the FPGA by synthesizing multiple clock frequencies from a single reference clock source
- Clock network delay compensation
- Zero delay buffering
- Transmit clocking for transceivers


PLL External Clock I/O Pins

Two adjacent fractional PLLs share four dual-purpose clock I/O pins, organized as one of the following combinations:

- Four single-ended clock outputs
- Two single-ended outputs and one differential clock output
- Four single-ended clock outputs and two single-ended feedback inputs within the I/O driver feedback for zero delay buffer (ZDB) mode support
- Two single-ended clock outputs and two single-ended feedback inputs for single-ended external feedback (EFB) mode support
- One differential clock output and one differential feedback input for differential EFB support (only one of the two adjacent fractional PLLs can support differential EFB while the other fractional PLL can be used for general-purpose clocking)

Note: The center fractional PLLs on the left and right sides of Arria V GX B5 and B7 devices, and Arria V GT D7 device do not support external clock outputs.

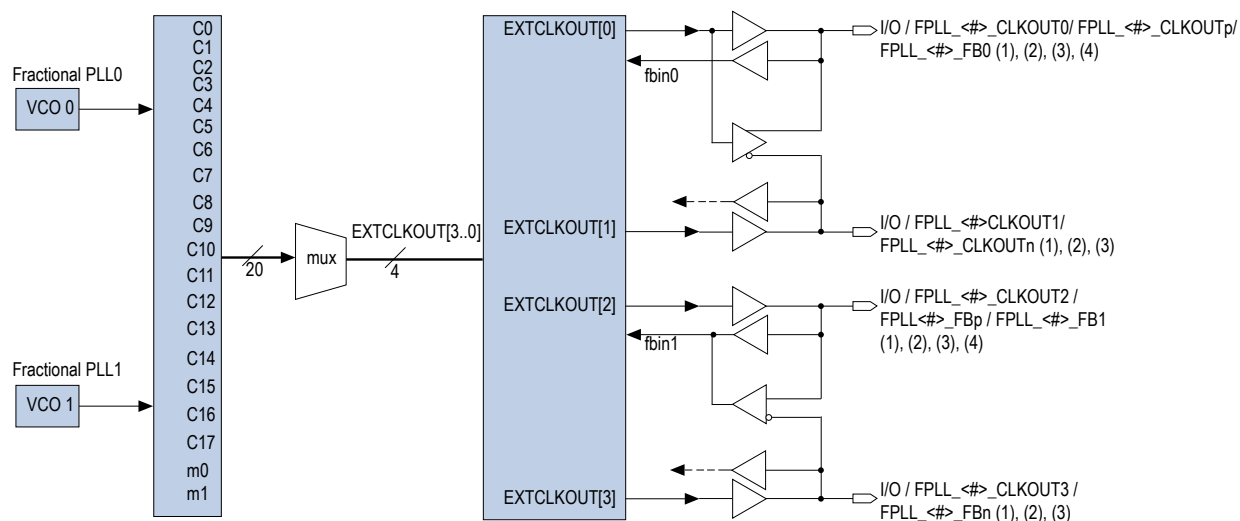Figure 4-20: Dual-Purpose Clock I/O Pins Associated with PLL for Arria V Devices



Notes:

1. You can feed these clock output pins using any one of the C[17..0] or M counters. When not used as external clock outputs, these clock output pins can be used as regular user I/Os.
2. The FPLL_<#>_CLKOUT0, FPLL_<#>_CLKOUT1, FPLL_<#>_CLKOUT2, and FPLL_<#>_CLKOUT3 pins are single-ended clock output pins.
3. The FPLL_<#>_CLKOUTp and FPLL_<#>_CLKOUTn pins are differential output pins while the FPLL_<#>_FBp and FPLL_<#>_FBn pins are differential feedback input pins to support differential EFB only in VCO 1.
4. The FPLL_<#>_FB0 and FPLL_<#>_FB1 pins are single-ended feedback input pins.

Figure 4-20: Dual-Purpose Clock I/O Pins Associated with PLL for Arria V Devices on page 19 shows that any of the output counters (C[17..0]) on the PLLs or the M counter can feed the dedicated external clock outputs. Therefore, one counter or frequency can drive all output pins available from a given PLL.

Each pin of a single-ended output pair can be either in-phase or 180° out-of-phase. The Quartus II software places the NOT gate in the design into the IOE to implement the 180° phase with respect to the other pin in the pair.

The clock output pin pairs support the same I/O standards as standard output pins as well as LVDS, differential high-speed transceiver logic (HSTL), and differential SSTL. Arria V PLLs can also drive out to any regular I/O pin through the GCLK or RCLK network. You can also use the external clock output pins as user I/O pins if you do not require external PLL clocking.

For more information about I/O standards supported by the PLL clock input and output pins, refer to *I/O Features in Arria V Devices* chapter.

PLL Control Signals

You can use the `pfdena`, `areset`, and `locked` signals to control and observe PLL operation and resynchronization.

pfdena

The `pfdena` signal controls the phase frequency detector (PFD) output with a programmable gate.

Use the `pfdena` signal to maintain the most recent locked frequency so that your system has time to store its current settings before shutting down. If you disable PFD, the VCO operates at its most recent set value of control voltage and frequency, with some long-term drift to a lower frequency. The PLL continues running even if it goes out-of-lock or the input clock is disabled.

You can use either your own control signal or the control signals available from the clock switchover circuit (`activeclock`, `clkbad[0]`, or `clkbad[1]`) to control `pfdena`.

areset

The `areset` signal is the reset or resynchronization input for each PLL. The device input pins or internal logic can drive these input signals.

When `areset` is driven high, the PLL counters reset, clearing the PLL output and placing the PLL out-of-lock. The VCO is then set back to its nominal setting. When `areset` is driven low again, the PLL resynchronizes to its input as it re-locks.

You must assert the `areset` signal every time the PLL loses lock to guarantee the correct phase relationship between the PLL input and output clocks. You can set up the PLL to automatically reset (self reset) after a loss-of-lock condition using the Quartus II MegaWizard™ Plug-In Manager. You must include the `areset` signal if either of the following conditions is true:

- PLL reconfiguration or clock switchover is enabled in the design
- Phase relationships between the PLL input and output clocks must be maintained after a loss-of-lock condition

Note: If the input clock to the PLL is not toggling or is unstable after power up, assert the `areset` signal after the input clock is stable and within specifications.

locked

The `locked` signal output of the PLL indicates that the PLL has locked onto the reference clock and the PLL clock outputs are operating at the desired phase and frequency set in the MegaWizard Plug-In Manager. The lock detection circuit provides a signal to the core logic that gives an indication when the feedback clock has locked onto the reference clock both in phase and frequency.

Altera recommends using the `areset` and `locked` signals in your designs to control and observe the status of your PLL.

Clock Feedback Modes

This section describes the following clock feedback modes:

- Source synchronous
- LVDS compensation
- Direct compensation
- Normal
- ZDB
- EFB

Each mode allows clock multiplication and division, phase shifting, and programmable duty cycle.

The input and output delays are fully compensated by a PLL only when using the dedicated clock input pins associated with a given PLL as the clock source.

When a RCLK or GCLK network drives the PLL or the PLL is driven by a dedicated clock pin that is not associated with the PLL, the input and output delays may not be fully compensated in the Quartus II software.


For example, when you configure a PLL in ZDB mode, the PLL input is driven by an associated dedicated clock input pin. In this configuration, a fully compensated clock path results in zero delay between the clock input and one of the clock outputs from the PLL. However, if the PLL input is fed by a non-dedicated input (using the GCLK network), the clock output may not be perfectly aligned with the input clock.

Source Synchronous Mode

If the data and clock arrive at the same time on the input pins, the same phase relationship is maintained at the clock and data ports of any IOE input register. Data and clock signals at the IOE experience similar buffer delays as long as you use the same I/O standard.

Altera recommends source synchronous mode for source-synchronous data transfers.

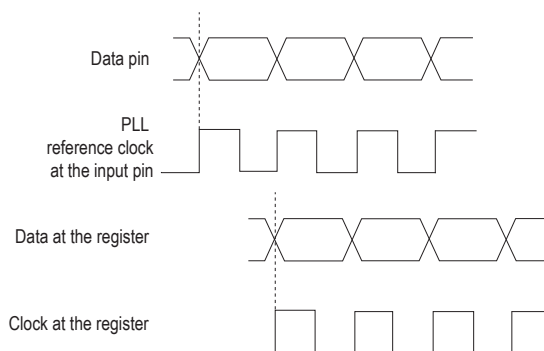Figure 4-21: Example of Phase Relationship Between Clock and Data in Source Synchronous Mode



Source synchronous mode compensates for the delay of the clock network used and any difference in the delay between the following two paths:

- Data pin to the IOE register input
- Clock input pin to the PLL PFD input


The Arria V PLL can compensate multiple pad-to-input-register paths, such as a data bus when it is set to use source-synchronous compensation mode.

Source Synchronous Mode for LVDS Compensation

The purpose of source synchronous mode is to maintain the same data and clock timing relationship seen at the pins of the internal serializer/deserializer (SERDES) capture register, except that the clock is inverted (180° phase shift). Thus, source synchronous mode ideally compensates for the delay of the LVDS clock network including the difference in delay between the following two paths:

- Data pin-to-SERDES capture register
- Clock input pin-to-SERDES capture register. In addition, the output counter must provide the 180° phase shift

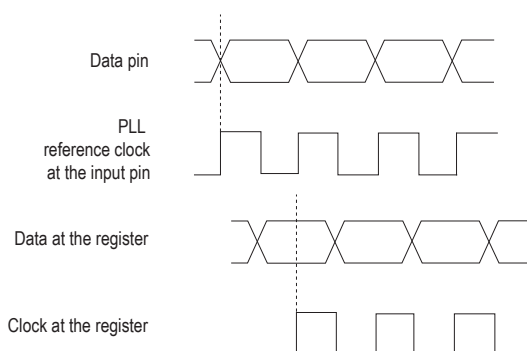
Figure 4-22: Example of Phase Relationship Between the Clock and Data in LVDS Mode



Direct Compensation Mode

In direct compensation mode, the PLL does not compensate for any clock networks. This mode provides better jitter performance because the clock feedback into the PFD passes through less circuitry. Both the PLL internal- and external-clock outputs are phase-shifted with respect to the PLL clock input.

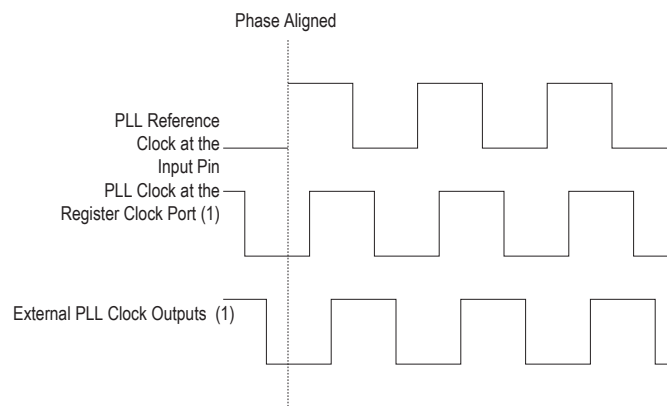Figure 4-23: Example of Phase Relationship Between the PLL Clocks in Direct Compensation Mode




Note:
1. The PLL clock outputs lag the PLL input clocks depending on routing delays.

Normal Mode

An internal clock in normal mode is phase-aligned to the input clock pin. The external clock-output pin has a phase delay relative to the clock input pin if connected in this mode. The Quartus II TimeQuest Timing Analyzer reports any phase difference between the two. In normal mode, the delay introduced by the GCLK or RCLK network is fully compensated.

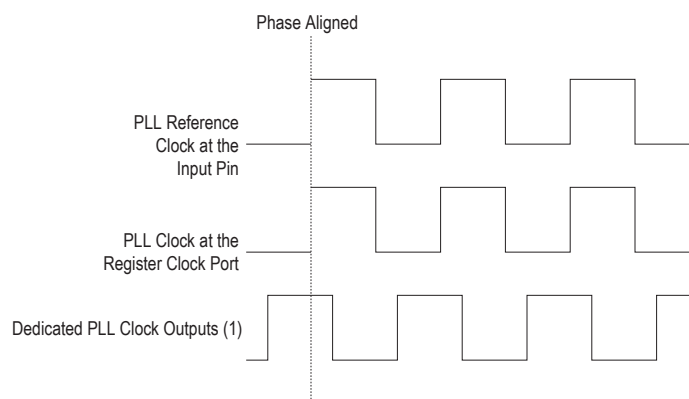Figure 4-24: Example of Phase Relationship Between the PLL Clocks in Normal Mode



Note:
1. The external clock output can lead or lag the PLL internal clock signals.

Zero-Delay Buffer Mode

In ZDB mode, the external clock output pin is phase-aligned with the clock input pin for zero delay through the device.

When using this mode, you must use the same I/O standard on the input clocks and clock outputs to guarantee clock alignment at the input and output pins. You cannot use differential I/O standards on the PLL clock input or output pins. In Arria V devices, ZDB mode can support up to four single-ended clock outputs.

For more information about PLL clock outputs, refer to [PLL External Clock I/O Pins](#).

To ensure phase alignment between the `clk` pin and the external clock output (`CLKOUT`) pin in ZDB mode, along with single-ended I/O standards, instantiate a bidirectional I/O pin in the design to serve as the feedback path connecting the `fbout` and `fbin` ports of the PLL. The PLL uses this bidirectional I/O pin to mimic, and compensate for, the output delay from the clock output port of the PLL to the external clock output pin.

Note: The bidirectional I/O pin that you instantiate in your design must always be assigned a single-ended I/O standard.

Note: To avoid signal reflection when using ZDB mode, do not place board traces on the bidirectional I/O pin.

Figure 4-25: ZDB Mode in Arria V PLLs

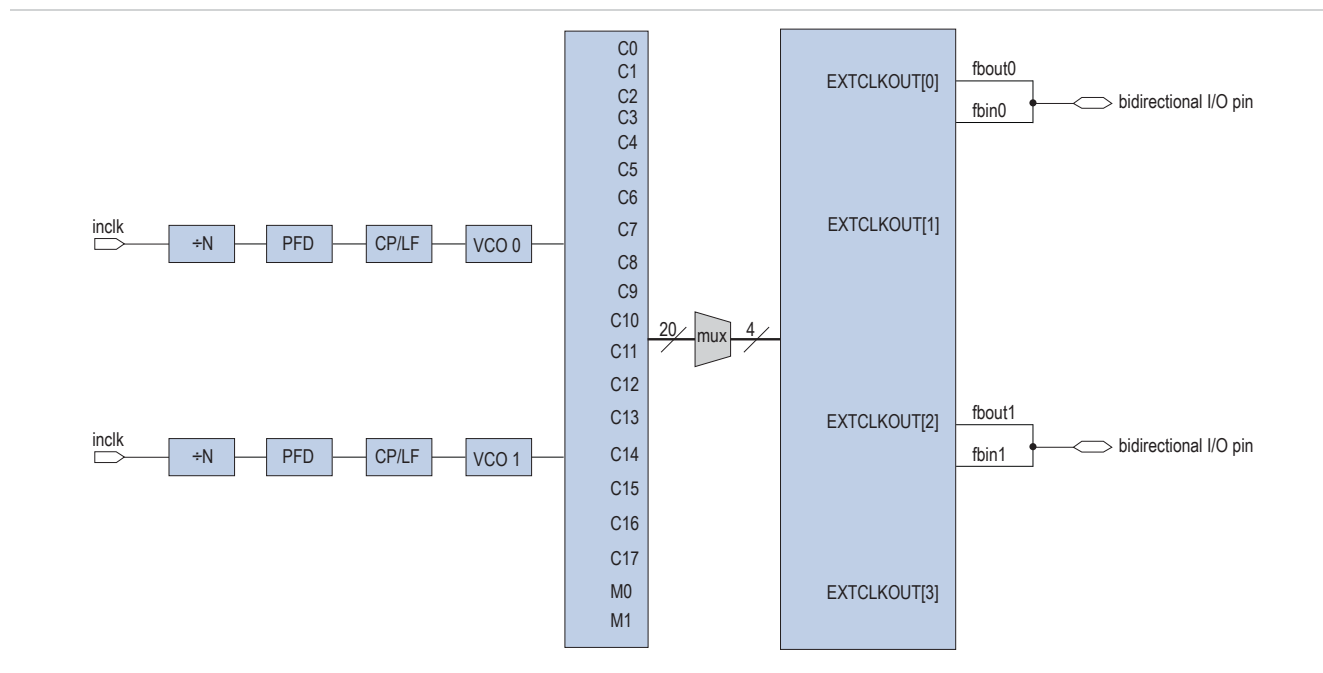
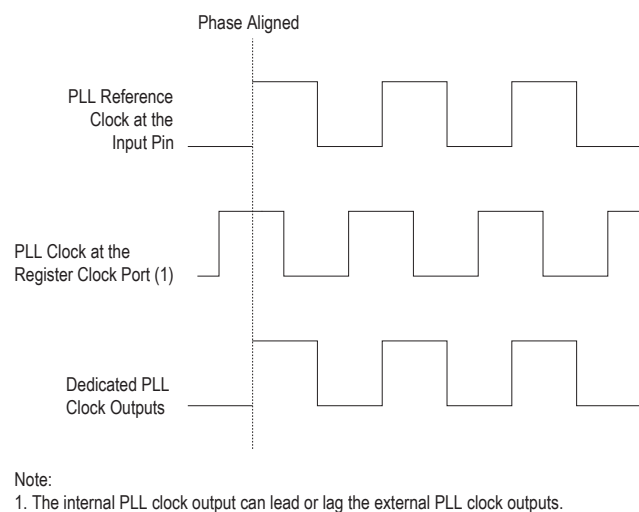


Figure 4-26: Example of Phase Relationship Between the PLL Clocks in ZDB Mode


External Feedback Mode

In EFB mode, the output of the M counter (f_{bout}) feeds back to the PLL f_{bin} input (using a trace on the board) and becomes part of the feedback loop.

One of the dual-purpose external clock outputs becomes the f_{bin} input pin in this mode. The external feedback input pin, f_{bin} is phase-aligned with the clock input pin. Aligning these clocks allows you to remove clock delay and skew between devices.

When using EFB mode, you must use the same I/O standard on the input clock, feedback input, and clock outputs.

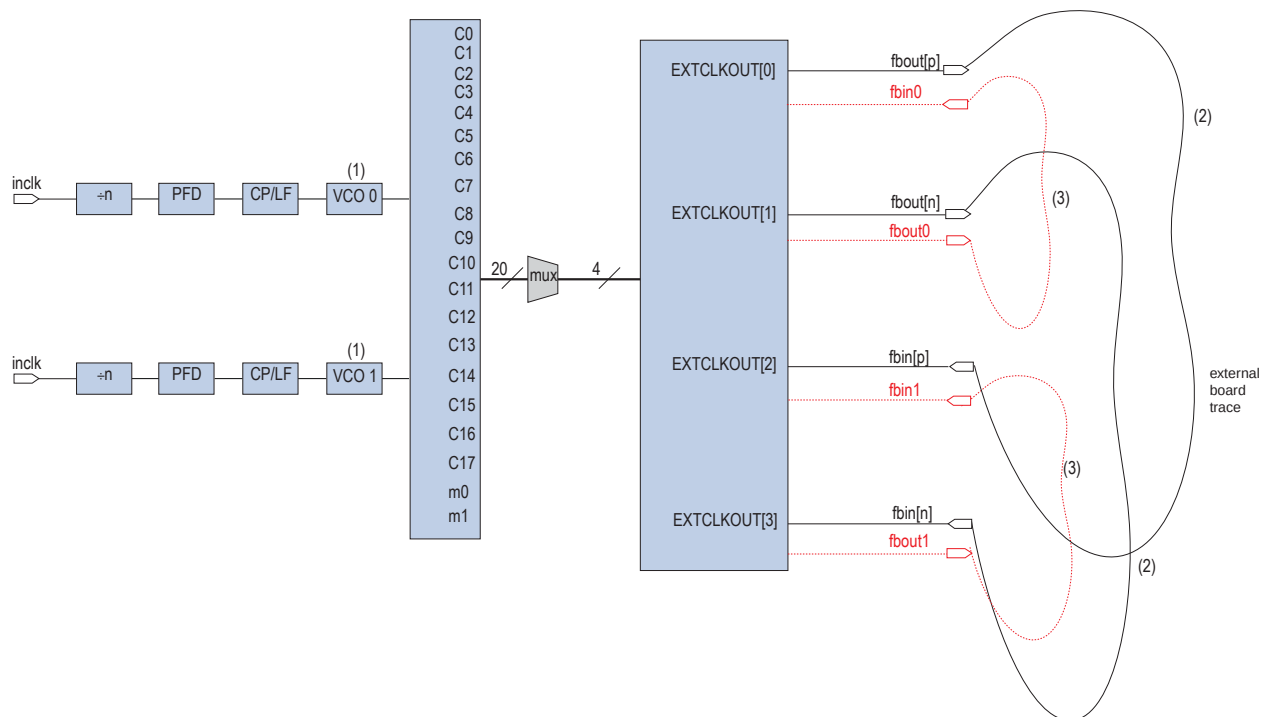
Figure 4-27: EFB Mode in Arria V Devices



Notes:

1. Only one of the two VCOs can support differential EFB mode at one time while you can use the other VCO for general purpose clocking.
2. External board connection for one differential clock output and one differential feedback input for differential EFB support.
3. External board connection for two single-ended clock outputs and two single-ended feedback inputs for single-ended EFB support.

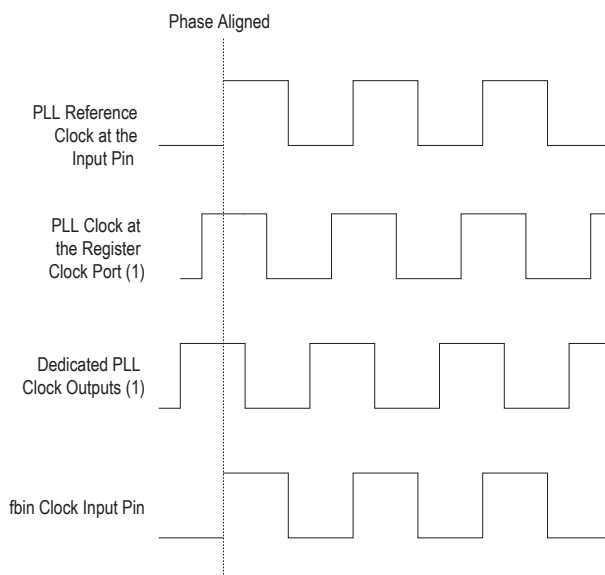Figure 4-28: Example of Phase Relationship Between the PLL Clocks in EFB Mode



Note:

1. The PLL clock outputs can lead or lag the fbin clock input.

Clock Multiplication and Division

Each Arria V PLL provides clock synthesis for PLL output ports using the $(K \times M)/(N \times C)$ scaling factors. The input clock is divided by a pre-scale factor, N , and is then multiplied by the K and M feedback factors. The control loop drives the VCO to match $f_{in} \times (K \times M/N)$.

A post-scale counter, K , is inserted after the VCO. When you enable the VCO post-scale counter, the counter divides the VCO frequency by two. When the K counter is bypassed, the VCO frequency goes to the output port without being divided by two.

Each output port has a unique post-scale counter, C , that divides down the output from the K counter. For multiple PLL outputs with different frequencies, the VCO is set to the least common multiple of the output frequencies that meets its frequency specifications. For example, if the output frequencies required from one PLL are 33 and 66 MHz, the Quartus II software sets the VCO to 660 MHz (the least common multiple of 33 and 66 MHz within the VCO range). Then the post-scale counters, C , scale down the VCO frequency for each output port.

Each PLL has one pre-scale counter, N , and one multiply counter, M , with a range of 1 to 512 for both M and N . For PLL operating in integer mode, M is an integer value. The delta-sigma modulator (DSM) is used together with M multiply counter to enable the PLL to operate in fractional mode. The DSM dynamically changes the M counter divide value on a cycle to cycle basis. The different M counter values let the "average" M counter value to be a non-integer. In fractional mode, the M counter divide value equals to the sum of the "clock high" count, "clock low" count, and the fractional value. The fractional value is equal to $K[X \dots 0] / 2^X$, ($X = 8, 16, 24$, or 32). The PLL operates in integer mode when DSM is disabled.

The N counter does not use duty-cycle control because the only purpose of this counter is to calculate frequency division. The post-scale counters range from 1 to 512 with a 50% duty cycle setting. The high- and low-count values for each counter range from 1 to 256. The sum of the high- and low-count values chosen for a design selects the divide value for a given counter.

The Quartus II software automatically chooses the appropriate scaling factors according to the input frequency, multiplication, and division values entered into the ALTERA_PLL megafunction.

Programmable Duty Cycle

The programmable duty cycle allows PLLs to generate clock outputs with a variable duty cycle. This feature is supported on the PLL post-scale counters.

The duty-cycle setting is achieved by a low and high time-count setting for the post-scale counters. To determine the duty cycle choices, the Quartus II software uses the frequency input and the required multiply or divide rate.

The post-scale counter value determines the precision of the duty cycle. The precision is defined as 50% divided by the post-scale counter value. For example, if the $C0$ counter is 10, steps of 5% are possible for duty-cycle choices from 5% to 90%.

If the PLL is in external feedback mode, set the duty cycle for the counter driving the f_{bin} pin to 50%. Combining the programmable duty cycle with programmable phase shift allows the generation of precise non-overlapping clocks.

Clock Switchover

The clock switchover feature allows the PLL to switch between two reference input clocks. Use this feature for clock redundancy or for a dual-clock domain application such as in a system that turns on the redundant clock if the previous clock stops running. The design can perform clock switchover automatically when the clock is no longer toggling or based on a user control signal, `clkswitch`.

The following clock switchover modes are supported in Arria V PLLs:


- Automatic switchover—The clock sense circuit monitors the current reference clock and if it stops toggling, automatically switches to the other `inclk0` or `inclk1` clock.
- Manual clock switchover—Clock switchover is controlled using the `clkswitch` signal. When the `clkswitch` signal goes from logic low to logic high, and stays high for at least three clock cycles, the reference clock to the PLL is switched from `inclk0` to `inclk1`, or vice-versa.
- Automatic switchover with manual override—This mode combines automatic switchover and manual clock switchover. When the `clkswitch` signal goes high, it overrides the automatic clock switchover function. As long as the `clkswitch` signal is high, further switchover action is blocked.

Automatic Switchover

Arria V PLLs support a fully configurable clock switchover capability.

Figure 4-29: Automatic Clock Switchover Circuit Block Diagram

This figure shows a block diagram of the automatic switchover circuit built into the PLL.

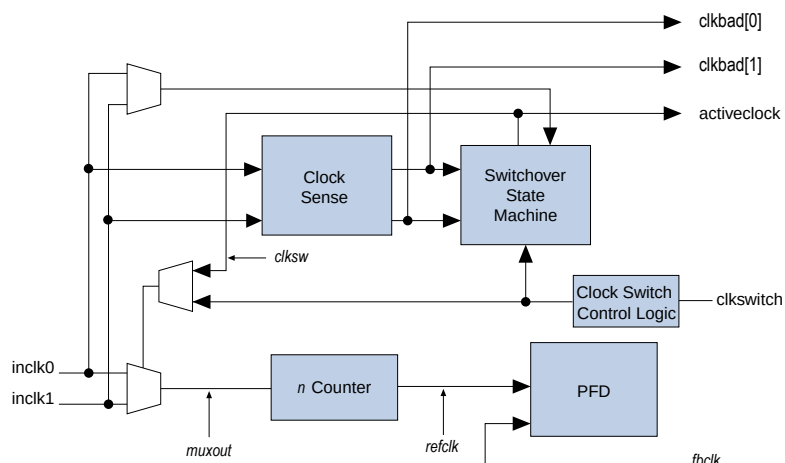

When the current reference clock is not present, the clock sense block automatically switches to the backup clock for PLL reference. The clock switchover circuit also sends out three status signals—`clkbad[0]`, `clkbad[1]`, and `activeclock`—from the PLL to implement a custom switchover circuit in the logic array. You can select a clock source as the backup clock by connecting it to the `inclk1` port of the PLL in your design.

Use the switchover circuitry to automatically switch between `inclk0` and `inclk1` when the current reference clock to the PLL stops toggling. You can switch back and forth between `inclk0` and `inclk1` any number of times when one of the two clocks fails and the other clock is available.

For example, in applications that require a redundant clock with the same frequency as the reference clock, the switchover state machine generates a signal (`clksw`) that controls the multiplexer select input, as shown in [Figure 4-29: Automatic Clock Switchover Circuit Block Diagram](#) on page 27. In this case, `inclk1` becomes the reference clock for the PLL.

When using automatic clock switchover mode, the following requirements must be satisfied:

- Both clock inputs must be running
- The period of the two clock inputs can differ by no more than 20%

If the current clock input stops toggling while the other clock is also not toggling, switchover is not initiated and the `clkbad[0..1]` signals are not valid. Also, if both clock inputs are not the same frequency, but

their period difference is within 20%, the clock sense block detects when a clock stops toggling, but the PLL may lose lock after the switchover is completed and needs time to relock.

Note: Altera recommends resetting the PLL using the `areset` signal to maintain the phase relationships between the PLL input and output clocks when using clock switchover.


In automatic switchover mode, the `clkbad[0]` and `clkbad[1]` signals indicate the status of the two clock inputs. When they are asserted, the clock sense block has detected that the corresponding clock input has stopped toggling. These two signals are not valid if the frequency difference between `inclk0` and `inclk1` is greater than 20%.

The `activesclock` signal indicates which of the two clock inputs (`inclk0` or `inclk1`) is being selected as the reference clock to the PLL. When the frequency difference between the two clock inputs is more than 20%, the `activesclock` signal is the only valid status signal.

Note: Glitches in the input clock may cause the frequency difference between the input clocks to be more than 20%.

Figure 4-30: Automatic Switchover After Loss of Clock Detection

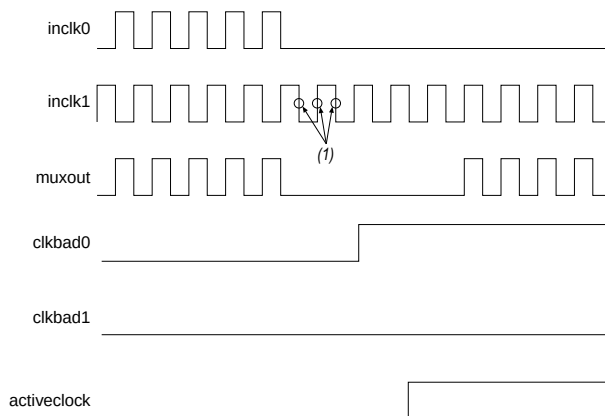This figure shows an example waveform of the switchover feature when using automatic switchover mode. In this example, the `inclk0` signal is stuck low. After the `inclk0` signal is stuck at low for approximately two clock cycles, the clock sense circuitry drives the `clkbad[0]` signal high. Also, because the reference clock signal is not toggling, the switchover state machine controls the multiplexer through the `clkswitch` signal to switch to the backup clock, `inclk1`.



Note:

1. Switchover is enabled on the falling edge of `inclk0` or `inclk1`, depending on which clock is available. In this figure, switchover is enabled on the falling edge of `inclk1`.

Automatic Switchover with Manual Override

In automatic switchover with manual override mode, you can use the `clkswitch` input for user- or system-controlled switch conditions. You can use this mode for same-frequency switchover, or to switch between inputs of different frequencies.


For example, if `inclk0` is 66 MHz and `inclk1` is 200 MHz, you must control switchover using `clkswitch` because the automatic clock-sense circuitry cannot monitor clock input (`inclk0` and `inclk1`) frequencies with a frequency difference of more than 100% (2×).

This feature is useful when the clock sources originate from multiple cards on the backplane, requiring a system-controlled switchover between the frequencies of operation.

You must choose the backup clock frequency and set the M, N, C, and K counters accordingly so that the VCO operates within the recommended operating frequency range. The ALTERA_PLL MegaWizard Plug-in Manager notifies you if a given combination of `inclk0` and `inclk1` frequencies cannot meet this requirement.

Figure 4-31: Clock Switchover Using the `clkswitch` (Manual) Control

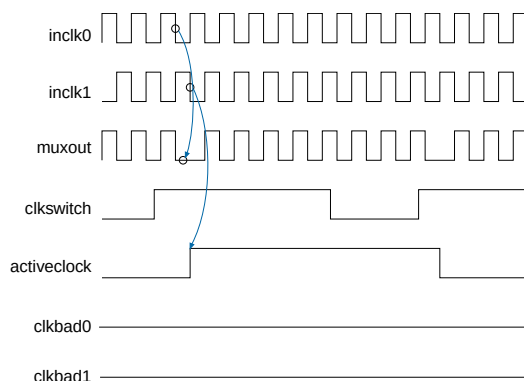This figure shows a clock switchover waveform controlled by `clkswitch`. In this case, both clock sources are functional and `inclk0` is selected as the reference clock; `clkswitch` goes high, which starts the switchover sequence. On the falling edge of `inclk0`, the counter's reference clock, `muxout`, is gated off to prevent clock glitching. On the falling edge of `inclk1`, the reference clock multiplexer switches from `inclk0` to `inclk1` as the PLL reference and the `activeclock` signal changes to indicate which clock is currently feeding the PLL.



Note:

1. To initiate a manual clock switchover event, both `inclk0` and `inclk1` must be running when the `clkswitch` signal goes high.

In automatic override with manual switchover mode, the `activeclock` signal mirrors the `clkswitch` signal. As both clocks are still functional during the manual switch, neither `clkbad` signal goes high. Because the switchover circuit is positive-edge sensitive, the falling edge of the `clkswitch` signal does not cause the circuit to switch back from `inclk1` to `inclk0`. When the `clkswitch` signal goes high again, the process repeats. `clkswitch` and automatic switch only work if the clock being switched to is available. If the clock is not available, the state machine waits until the clock is available.

Manual Clock Switchover

In manual clock switchover mode, the `clkswitch` signal controls whether `inclk0` or `inclk1` is selected as the input clock to the PLL. By default, `inclk0` is selected.


A low-to-high transition on `clkswitch` and `clkswitch` being held high for at least three `inclk` cycles initiate a clock switchover event.

You must bring `clkswitch` back low again to perform another switchover event in the future. If you do not require another switchover event in the future, you can leave `clkswitch` in a logic high state after the initial switch.

Pulsing `clkswitch` high for at least three `inclk` cycles performs another switchover event.

If `inclk0` and `inclk1` are different frequencies and are always running, the `clkswitch` minimum high time must be greater than or equal to three of the slower frequency `inclk0` and `inclk1` cycles.

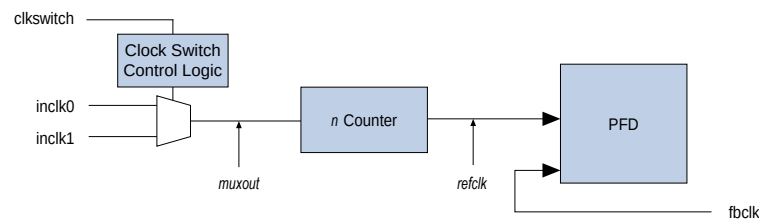Figure 4-32: Manual Clock Switchover Circuitry in Arria V PLLs



You can delay the clock switchover action by specifying the switchover delay in the `ALTERA_PLL` megafunction. When you specify the switchover delay, the `clkswitch` signal must be held high for at least three `inclk` cycles plus the number of the delay cycles that has been specified to initiate a clock switchover.

For more information about PLL software support in the Quartus II software, refer to the [Altera Phase-Locked Loop \(ALTERA_PLL\) Megafunction User Guide](#).

Guidelines


When implementing clock switchover in Arria V PLLs, use the following guidelines:

- Automatic clock switchover requires that the `inclk0` and `inclk1` frequencies be within 20% of each other. Failing to meet this requirement causes the `clkbad[0]` and `clkbad[1]` signals to not function properly.
- When using manual clock switchover, the difference between `inclk0` and `inclk1` can be more than 100% (2×). However, differences in frequency, phase, or both, of the two clock sources will likely cause the PLL to lose lock. Resetting the PLL ensures that the correct phase relationships are maintained between the input and output clocks.

Note: Both `inclk0` and `inclk1` must be running when the `clkswitch` signal goes high to initiate the manual clock switchover event. Failing to meet this requirement causes the clock switchover to not function properly.

- Applications that require a clock switchover feature and a small frequency drift must use a low-bandwidth PLL. The low-bandwidth PLL reacts more slowly than a high-bandwidth PLL to reference input clock changes. When switchover happens, a low-bandwidth PLL propagates the stopping of the clock to the output more slowly than a high-bandwidth PLL. However, be aware that the low-bandwidth PLL also increases lock time.
- After a switchover occurs, there may be a finite resynchronization period for the PLL to lock onto a new clock. The exact amount of time it takes for the PLL to relock depends on the PLL configuration.
- The phase relationship between the input clock to the PLL and the output clock from the PLL is important in your design. Assert `areset` for at least 10 ns after performing a clock switchover. Wait for the locked signal to go high and be stable before re-enabling the output clocks from the PLL.
- The following figure shows how the VCO frequency gradually decreases when the current clock is lost and then increases as the VCO locks on to the backup clock.

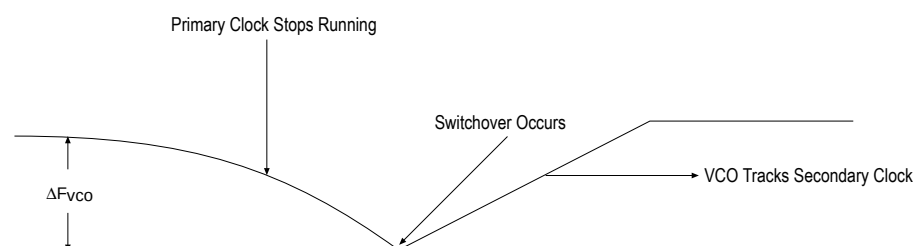Figure 4-33: VCO Switchover Operating Frequency



- Disable the system during clock switchover if it is not tolerant of frequency variations during the PLL resynchronization period. You can use the `clkbad[0]` and `clkbad[1]` status signals to turn off the PFD (`PFDENA = 0`) so the VCO maintains its most recent frequency. You can also use the state machine to switch over to the secondary clock. When the PFD is re-enabled, output clock-enable signals (`clkena`) can disable clock outputs during the switchover and resynchronization period. When the lock indication is stable, the system can re-enable the output clocks.

PLL Reconfiguration and Dynamic Phase Shift

For more information about PLL reconfiguration and dynamic phase shifting, refer to [AN661: Implementing Fractional PLL Reconfiguration with ALTERA_PLL and ALTERA_PLL_RECONFIG Megafunctions](#).

Document Revision History

Date	Version	Changes
November 2012	2012.11.19	• Added note to indicate that the figures shown are the top view of the silicon die. • Updated clock resources for Arria V GZ devices. • Added RCLK networks diagram for Arria V GZ devices. • Restructured tables for clock input pin connectivity to the GCLK and RCLK networks. • Added table for clock input pin connectivity to the RCLK networks for Arria V GZ devices. • Updated PCLK control block information. • Added PLL locations diagrams for Arria V GZ E1, E3, E5, and E7 devices. • Removed information on PLL Compensation assignment in the Quartus II software. • Updated the fractional value for PLL in fractional mode. • Reorganized content and updated template.
June 2012	2.0	• Restructured chapter. • Updated Figure 4-4, Figure 4-6, Figure 4-7, Figure 4-11, Figure 4-12, Figure 4-13, Figure 4-14, Figure 4-15, Figure 4-16, Figure 4-18, and Figure 4-19. • Updated Table 4-1, Table 4-2, Table 4-3, Table 4-4, and Table 4-5. • Added “Clock Regions”, “Clock Network Sources”, “Clock Output Connections”, “Clock Enable Signals”, “PLL Control Signals”, “Clock Multiplication and Division”, “Programmable Duty Cycle”, “Clock Switchover”, and “PLL Reconfiguration and Dynamic Phase Shift”.
November 2011	1.1	Restructured chapter.
May 2011	1.0	Initial release.

2012.11.19

AV-52005

 [Subscribe](#)

 [Feedback](#)

This chapter provides details about the features of the Arria[®] V I/O elements (IOEs) and how the IOEs work in compliance with current and emerging I/O standards and requirements.

The Arria V I/Os support the following features:

- Single-ended, non-voltage-referenced, and voltage-referenced I/O standards
- Low-voltage differential signaling (LVDS), RSDS, mini-LVDS, HSTL, HSUL, and SSTL I/O standards
- Serializer/deserializer (SERDES)
- Programmable output current strength
- Programmable slew-rate
- Programmable bus-hold
- Programmable pull-up resistor
- Programmable pre-emphasis
- Programmable I/O delay
- Programmable voltage output differential (V_{OD})
- Open-drain output
- On-chip series termination (R_S OCT)
- On-chip parallel termination (R_T OCT)
- On-chip differential termination (R_D OCT)

Note: The information in this chapter is applicable to all Arria V variants, unless noted otherwise.

I/O Resources Per Package for Arria V Devices

The following package plan tables for the different Arria V variants list the maximum I/O resources available for each package.

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered

Table 5-1: Package Plan for Arria V GX Devices—Preliminary

Member Code	F672 (27 mm)		F896 ¹⁴ (31 mm)		F1152 (35 mm)		F1517 (40 mm)	
	GPIO	XCVR	GPIO	XCVR	GPIO	XCVR	GPIO	XCVR
A1	336	9	416	9	—	—	—	—
A3	336	9	416	9	—	—	—	—
A5	336	9	384	18	544	24	—	—
A7	336	9	384	18	544	24	—	—
B1	—	—	384	18	544	24	704	24
B3	—	—	384	18	544	24	704	24
B5	—	—	—	—	544	24	704	36
B7	—	—	—	—	544	24	704	36

Table 5-2: Package Plan for Arria V GT Devices—Preliminary

Member Code	F672 (27 mm)			F896 (31 mm)			F1152 (35 mm)			F1517 (40 mm)		
	GPIO	XCVR		GPIO	XCVR		GPIO	XCVR		GPIO	XCVR	
		6-Gbps	10-Gbps		6-Gbps	10-Gbps		6-Gbps	10-Gbps		6-Gbps	10-Gbps
C3	336	3 (9)	4	416	3 (9)	4	—	—	—	—	—	—
C7	—	—	—	384	6 (18)	8	544	6 (24)	12	—	—	—
D3	—	—	—	384	6 (18)	8	544	6 (24)	12	704	6 (24)	12
D7	—	—	—	—	—	—	544	6 (24)	12	704	6 (36)	20

Table 5-3: Package Plan for Arria V GZ Devices—Preliminary

Member Code	H780 (29 mm)		F1152 (35 mm)		F1517 (40 mm)	
	GPIO	XCVR	GPIO	XCVR	GPIO	XCVR
E1	342	12	414	24	—	—
E3	342	12	414	24	—	—
E5	—	—	534	24	674	36
E7	—	—	534	24	674	36

¹⁴ In the F896 package, the PCIe hard IP block on the right side of the Arria V GX A5, A7, B1, and B3 devices support x1 for Gen1 and Gen2 data rates.

Table 5-4: Package Plan for Arria V SX Devices—Preliminary

Member Code	F896 (31 mm)			F1152 (35 mm)			F1517 (40 mm)		
	FPGA GPIO	HPS I/O	XCVR	FPGA GPIO	HPS I/O	XCVR	FPGA GPIO	HPS I/O	XCVR
B3	250	210	12	385	210	18	540	210	30
B5	250	210	12	385	210	18	540	210	30

Table 5-5: Package Plan for Arria V ST Devices—Preliminary

Member Code	F896 (31 mm)				F1152 (35 mm)				F1517 (40 mm)			
	FPGA GPIO	HPS I/O	XCVR		FPGA GPIO	HPS I/O	XCVR		FPGA GPIO	HPS I/O	XCVR	
			6 Gbps	10 Gbps			6 Gbps	10 Gbps			6 Gbps	10 Gbps
D3	250	210	12	4	385	210	18	8	540	210	30	16
D5	250	210	12	4	385	210	18	8	540	210	30	16

For more information about each device variant, refer to the [Arria V Device Overview](#).

For the number of LVDS channels in each device package, refer to the [High-Speed Differential I/O Interfaces and DPA in Arria V Devices](#) chapter.

I/O Vertical Migration for Arria V Devices

Figure 5-1: Vertical Migration Capability Across Arria V Device Packages and Densities—Preliminary

The arrows indicate the vertical migration paths. Some packages have several migration paths. The devices included in each vertical migration path are shaded. You can also migrate your design across device densities in the same package option if the devices have the same dedicated pins, configuration pins, and power pins.

Variant	Member Code	Package				
		F672	F780	F896	F1152	F1517
Arria V GX	A1					
	A3					
	A5					
	A7					
	B1					
	B3					
	B5					
	B7					
Arria V GT	C3					
	C7					
	D3					
	D7					
Arria V GZ	E1					
	E3					
	E5					
	E7					
Arria V SX	B3					
	B5					
Arria V ST	D3					
	D5					

You can achieve the vertical migration shaded in red if you use only up to 320 GPIOs, up to nine 6 Gbps transceiver channels, and up to four 10 Gbps transceiver (for Arria V GT devices). This migration path is not shown in the Quartus II software Pin Migration View.

Note: To verify the pin migration compatibility, use the Pin Migration View window in the Quartus® II software Pin Planner. For more information, refer to the [“I/O Management”](#) chapter in the *Quartus II Handbook*.

Verifying Pin Migration Compatibility

You can use the Pin Migration View window in the Quartus® II software Pin Planner to assist you in verifying whether your pin assignments migrate to a different device successfully. You can vertically migrate to a

device with a different density while using the same device package, or migrate between packages with different densities and ball counts.

1. Open **Assignments > Pin Planner** and create pin assignments.
2. If necessary, perform one of the following options to populate the Pin Planner with the node names in the design:
 - Analysis & Elaboration
 - Analysis & Synthesis
 - Fully compile the design
3. Then, on the menu, click **View > Pin Migration View**.
4. To select or change migration devices:
 - a. Click **Device** to open the **Device** dialog box.
 - b. Under **Migration compatibility** click **Migration Devices**.
5. To show more information about the pins:
 - a. Right-click anywhere in the **Pin Migration View** window and select **Show Columns**.
 - b. Then, click the pin feature you want to display.
6. If you want to view only the pins, in at least one migration device, that have a different feature than the corresponding pin in the migration result, turn on **Show migration differences**.
7. Click **Pin Finder** to open the **Pin Finder** dialog box and find and highlight pins with specific functionality. If you want to view only the pins found and highlighted by the most recent query in the **Pin Finder** dialog box, turn on **Show only highlighted pins**.
8. To export the pin migration information to a Comma-Separated Value File (.csv), click **Export**.

I/O Standards Support in Arria V Devices

This section lists the I/O standards supported in the FPGA I/Os and HPS I/Os of Arria V devices, the typical power supply values for each I/O standard, and the MultiVolt I/O interface feature.

I/O Standards Support for FPGA I/O in Arria V Devices

Table 5-6: Supported I/O Standards in FPGA I/O for Arria V Devices

I/O Standard	Device Variant Support	Standard Support
3.3 V LVTTL/3.3 V LVCMOS	All	JESD8-B
3.0 V LVTTL/3.0 V LVCMOS	GX, GT, SX, and ST	JESD8-B
3.0 V PCI	GX, GT, SX, and ST	PCI Rev. 2.2
3.0 V PCI-X ¹⁵	GX, GT, SX, and ST	PCI-X Rev. 1.0
2.5 V LVCMOS	All	JESD8-5
1.8 V LVCMOS	All	JESD8-7
1.5 V LVCMOS	All	JESD8-11
1.2 V LVCMOS	All	JESD8-12
SSTL-2 Class I	All	JESD8-9B

¹⁵ PCI-X does not meet the PCI-X I V curve requirement at the linear region.

I/O Standard	Device Variant Support	Standard Support
SSTL-2 Class II	All	JESD8-9B
SSTL-18 Class I	All	JESD8-15
SSTL-18 Class II	All	JESD8-15
SSTL-15 Class I	All	—
SSTL-15 Class II	All	—
1.8 V HSTL Class I	All	JESD8-6
1.8 V HSTL Class II	All	JESD8-6
1.5 V HSTL Class I	All	JESD8-6
1.5 V HSTL Class II	All	JESD8-6
1.2 V HSTL Class I	All	JESD8-16A
1.2 V HSTL Class II	All	JESD8-16A
Differential SSTL-2 Class I	All	JESD8-9B
Differential SSTL-2 Class II	All	JESD8-9B
Differential SSTL-18 Class I	All	JESD8-15
Differential SSTL-18 Class II	All	JESD8-15
Differential SSTL-15 Class I	All	—
Differential SSTL-15 Class II	All	—
Differential 1.8 V HSTL Class I	All	JESD8-6
Differential 1.8 V HSTL Class II	All	JESD8-6
Differential 1.5 V HSTL Class I	All	JESD8-6
Differential 1.5 V HSTL Class II	All	JESD8-6
Differential 1.2 V HSTL Class I	All	JESD8-16A
Differential 1.2 V HSTL Class II	All	JESD8-16A
LVDS	All	ANSI/TIA/EIA-644
RSDS ¹⁶	All	—
Mini-LVDS ¹⁷	All	—
LVPECL	All	—
SSTL-15	All	JESD79-3D
SSTL-135	All	—
SSTL-125	All	—
SSTL-12	GZ only	—

¹⁶ The Arria V devices support true RSDS output standard with data rates of up to 230 Mbps using true LVDS output buffer types on all I/O banks.

¹⁷ The Arria V devices support true mini-LVDS output standard with data rates of up to 340 Mbps using true LVDS output buffer types on all I/O banks.

I/O Standard	Device Variant Support	Standard Support
HSUL-12	All	—
Differential SSTL-15	All	JESD79-3D
Differential SSTL-135	All	—
Differential SSTL-125	All	—
Differential SSTL-12	GZ only	—
Differential HSUL-12	All	—

I/O Standards Support for HPS I/O in Arria V Devices

Table 5-7: Supported I/O Standards in HPS I/O for Arria V SX and ST Devices

I/O Standard	Standard Support	HPS Column I/O	HPS Row I/O
3.3 V LVTTTL/3.3 V LVCMOS	JESD8-B	Yes	—
3.0 V LVTTTL/3.0 V LVCMOS	JESD8-B	Yes	—
2.5 V LVCMOS	JESD8-5	Yes	—
1.8 V LVCMOS	JESD8-7	Yes	Yes
1.5 V LVCMOS	JESD8-11	Yes	—
SSTL-18 Class I	JESD8-15	—	Yes
SSTL-18 Class II	JESD8-15	—	Yes
SSTL-15 Class I	—	—	Yes
SSTL-15 Class II	—	—	Yes
1.5 V HSTL Class I	JESD8-6	Yes	—
1.5 V HSTL Class II	JESD8-6	Yes	—
SSTL-135	—	—	Yes
SSTL-125	—	—	Yes
HSUL-12	—	—	Yes

I/O Standards Voltage Levels in Arria V Devices

Table 5-8: Arria V I/O Standards Voltage Levels

This table lists the typical power supplies for each supported I/O standards in Arria V devices.

I/O Standard	Device Variant Support	V _{CCIO} (V)		V _{CCPD} (V) (Pre-Driver Voltage)	V _{REF} (V) ¹⁸ (Input Ref Voltage)	V _{TT} (V) (Board Termination Voltage)
		Input ¹⁹	Output			
3.3 V LVTTL/3.3 V LVCMOS	All	3.3/3.0/2.5	3.3	3.3	—	—
3.0 V LVTTL/3.0 V LVCMOS	GX, GT, SX, and ST	3.0/2.5	3.0	3.0	—	—
3.0 V PCI		3.0	3.0	3.0	—	—
3.0 V PCI-X		3.0	3.0	3.0	—	—
2.5 V LVCMOS	All	3.0/2.5	3.0	3.0	—	—
1.8 V LVCMOS	All	1.8/1.5	2.0	3.0	—	—
1.5 V LVCMOS	All	1.8/1.5	2.0	3.0	—	—
1.2 V LVCMOS	All	1.2	1.0	3.0	—	—
SSTL-2 Class I	All	V _{CCPD}	2.5	2.5	1.25	1.25
SSTL-2 Class II	All	V _{CCPD}	2.5	2.5	1.25	1.25
SSTL-18 Class I	All	V _{CCPD}	1.8	2.5	0.9	0.9
SSTL-18 Class II	All	V _{CCPD}	1.8	2.5	0.9	0.9
SSTL-15 Class I	All	V _{CCPD}	1.5	2.5	0.75	0.75
SSTL-15 Class II	All	V _{CCPD}	1.5	2.5	0.75	0.75
1.8 V HSTL Class I	All	V _{CCPD}	1.8	2.5	0.9	0.9
1.8 V HSTL Class II	All	V _{CCPD}	1.8	2.5	0.9	0.9
1.5 V HSTL Class I	All	V _{CCPD}	1.5	2.5	0.75	0.75
1.5 V HSTL Class II	All	V _{CCPD}	1.5	2.5	0.75	0.75
1.2 V HSTL Class I	All	V _{CCPD}	1.2	2.5	0.6	0.6
1.2 V HSTL Class II	All	V _{CCPD}	1.2	2.5	0.6	0.6
Differential SSTL-2 Class I	All	V _{CCPD}	2.5	2.5	—	1.25
Differential SSTL-2 Class II	All	V _{CCPD}	2.5	2.5	—	1.25

¹⁸ You cannot assign SSTL, HSTL, and HSUL outputs on V_{REF} pins, even if there are no SSTL, HSTL, and HSUL inputs in the bank.

¹⁹ Input for the SSTL, HSTL, Differential SSTL, Differential HSTL, LVDS, RSDS, Mini-LVDS, LVPECL, HSUL, and Differential HSUL are powered by V_{CCPD}

I/O Standard	Device Variant Support	V _{CCIO} (V)		V _{CCPD} (V) (Pre-Driver Voltage)	V _{REF} (V) ¹⁸ (Input Ref Voltage)	V _{TT} (V) (Board Termination Voltage)
		Input ¹⁹	Output			
Differential SSTL-18 Class I	All	V _{CCPD}	1.8	2.5	—	0.9
Differential SSTL-18 Class II	All	V _{CCPD}	1.8	2.5	—	0.9
Differential SSTL-15 Class I	All	V _{CCPD}	1.5	2.5	—	0.75
Differential SSTL-15 Class II	All	V _{CCPD}	1.5	2.5	—	0.75
Differential 1.8 V HSTL Class I	All	V _{CCPD}	1.8	2.5	—	0.9
Differential 1.8 V HSTL Class II	All	V _{CCPD}	1.8	2.5	—	0.9
Differential 1.5 V HSTL Class I	All	V _{CCPD}	1.5	2.5	—	0.75
Differential 1.5 V HSTL Class II	All	V _{CCPD}	1.5	2.5	—	0.75
Differential 1.2 V HSTL Class I	All	V _{CCPD}	1.2	2.5	—	0.6
Differential 1.2 V HSTL Class II	All	V _{CCPD}	1.2	2.5	—	0.6
LVDS	All	V _{CCPD}	2.5	2.5	—	—
RSDS	All	V _{CCPD}	2.5	2.5	—	—
Mini-LVDS	All	V _{CCPD}	2.5	2.5	—	—
LVPECL (Differential clock input only)	All	V _{CCPD}	—	2.5	—	—
SSTL-15	All	V _{CCPD}	1.5	2.5	0.75	Typically does not require board termination
SSTL-135	All	V _{CCPD}	1.35	2.5	0.675	
SSTL-125	All	V _{CCPD}	1.25	2.5	0.625	
SSTL-12	GZ only	V _{CCPD}	1.2	2.5	0.6	
HSUL-12	All	V _{CCPD}	1.2	2.5	0.6	

¹⁸ You cannot assign SSTL, HSTL, and HSUL outputs on V_{REF} pins, even if there are no SSTL, HSTL, and HSUL inputs in the bank.

¹⁹ Input for the SSTL, HSTL, Differential SSTL, Differential HSTL, LVDS, RSDS, Mini-LVDS, LVPECL, HSUL, and Differential HSUL are powered by V_{CCPD}

I/O Standard	Device Variant Support	V _{CCIO} (V)		V _{CCPD} (V) (Pre-Driver Voltage)	V _{REF} (V) ¹⁸ (Input Ref Voltage)	V _{TT} (V) (Board Termination Voltage)
		Input ¹⁹	Output			
Differential SSTL-15	All	V _{CCPD}	1.5	2.5	—	Typically does not require board termination
Differential SSTL-135	All	V _{CCPD}	1.35	2.5	—	
Differential SSTL-125	All	V _{CCPD}	1.25	2.5	—	
Differential SSTL-12	GZ only	V _{CCPD}	1.2	2.5	—	
Differential HSUL-12	All	V _{CCPD}	1.2	2.5	—	

Note: In the Arria V GZ devices, Differential HSTL, SSTL, and HSUL outputs are not true differential outputs. These outputs use two single-ended outputs with the second output programmed as inverted. Differential HSTL, SSTL, and HSUL inputs use LVDS differential input buffers with R_D support.

MultiVolt I/O Interface in Arria V Devices

The MultiVolt I/O interface feature allows Arria V devices in all packages to interface with systems of different supply voltages.

Table 5-9: MultiVolt I/O Support in Arria V Devices

V _{CCIO} (V)	Device Variant Support	V _{CCPD} (V)	Input Signal (V)	Output Signal (V)
1.2	All	2.5	1.2	1.2
1.25	All	2.5	1.25	1.25
1.35	All	2.5	1.35	1.35
1.5	All	2.5	1.5, 1.8	1.5
1.8	All	2.5	1.5, 1.8	1.8
2.5	All	2.5	2.5, 3.0, 3.3	2.5
3.0	All	3.0	2.5, 3.0, 3.3	3.0
3.3	GX, GT, SX, and ST	3.3	2.5, 3.0, 3.3	3.3

The pin current may be slightly higher than the default value. Verify that the V_{OL} maximum and V_{OH} minimum voltages of the driving device do not violate the applicable V_{IL} maximum and V_{IH} minimum voltage specifications of the Arria V device.

The V_{CCPD} power pins must be connected to a 2.5 V, 3.0 V, or 3.3 V power supply. Using these power pins to supply the pre-driver power to the output buffers increases the performance of the output pins.

Note: Altera recommends using the on-chip clamp diode on the I/O pins when the input signal is 3.0 V or 3.3 V.

¹⁸ You cannot assign SSTL, HSTL, and HSUL outputs on V_{REF} pins, even if there are no SSTL, HSTL, and HSUL inputs in the bank.

¹⁹ Input for the SSTL, HSTL, Differential SSTL, Differential HSTL, LVDS, RSLS, Mini-LVDS, LVPECL, HSUL, and Differential HSUL are powered by V_{CCPD}

I/O Design Guidelines for Arria V Devices

There are several considerations that require your attention to ensure the success of your designs. Unless noted otherwise, these design guidelines apply to all variants of this device family.

Mixing Voltage-Referenced and Non-Voltage-Referenced I/O Standards

The following sections provide guidelines for mixing non-voltage-referenced and voltage-referenced I/O standards in the devices.

Non-Voltage-Referenced I/O Standards

Each Arria V I/O bank has its own V_{CCIO} pins and supports only one V_{CCIO} of 1.2, 1.25, 1.35, 1.5, 1.8, 2.5, 3.0, or 3.3 V²⁰. An I/O bank can simultaneously support any number of input signals with different I/O standard assignments if the I/O standards support the V_{CCIO} level of the I/O bank.

For output signals, a single I/O bank supports non-voltage-referenced output signals that drive at the same voltage as V_{CCIO} . Because an I/O bank can only have one V_{CCIO} value, it can only drive out the value for non-voltage-referenced signals.

For example, an I/O bank with a 2.5-V V_{CCIO} setting can support 2.5-V standard inputs and outputs, and 3.0-V LVCMOS inputs only.

Voltage-Referenced I/O Standards

To accommodate voltage-referenced I/O standards, each Arria V GX, GT, SX, or ST I/O bank contains a dedicated V_{REF} pin. Each Arria V GZ I/O bank supports multiple dedicated V_{REF} pins feeding a common V_{REF} bus. Each bank can have only a single V_{CCIO} voltage level and a single voltage reference (V_{REF}) level.

An I/O bank featuring single-ended or differential standards can support different voltage-referenced standards if the V_{CCIO} and V_{REF} are the same levels.

For performance reasons, voltage-referenced input standards use their own V_{CCPD} level as the power source. This feature allows you to place voltage-referenced input signals in an I/O bank with a V_{CCIO} of 2.5 V or below. For example, you can place HSTL-15 input pins in an I/O bank with 2.5 V V_{CCIO} . However, the voltage-referenced input with R_T OCT enabled requires the V_{CCIO} of the I/O bank to match the voltage of the input standard. R_T OCT cannot be supported for the HSTL-15 I/O standard when V_{CCIO} is 2.5 V.

Voltage-referenced bidirectional and output signals must be the same as the V_{CCIO} voltage of the I/O bank. For example, you can place only SSTL-2 output pins in an I/O bank with a 2.5-V V_{CCIO} .

Mixing Voltage-Referenced and Non-Voltage Referenced I/O Standards

An I/O bank can support voltage-referenced and non-voltage-referenced pins by applying each of the rule sets individually.

Examples:

- An I/O bank can support SSTL-18 inputs and outputs, and 1.8-V inputs and outputs with a 1.8-V V_{CCIO} and a 0.9-V V_{REF} .
- An I/O bank can support 1.5-V standards, 1.8-V inputs (but not outputs), and 1.5-V HSTL I/O standards with a 1.5-V V_{CCIO} and 0.75-V V_{REF} .

²⁰ Arria V GZ devices do not support 3.3 V

Guideline: Use the Same V_{CCPD} for All I/O Banks in a Group

One V_{CCPD} pin is shared in a group of I/O banks. If one I/O bank in a group uses 3.3 V V_{CCPD} , other I/O banks in the same group must also use 3.3 V V_{CCPD} .

The I/O banks with the same bank number form a group. For example, I/O banks 8A, 8B, 8C, and 8D form a group and share the same V_{CCPD} pin. This sharing is applicable to all I/O banks, with the following exceptions:

- Arria V GX, GT, SX, and ST devices—No V_{CCPD} pin sharing in bank 4A and 7A. Each of these I/O banks has their own individual V_{CCPD} pin.
- Arria V GZ devices—No V_{CCPD} pin sharing across banks 3A, 3B, 3C, and 3D. Banks 3A and 3B form a group with one V_{CCPD} pin while bank 3C (if available) and 3D form another group with its own V_{CCPD} pin.

For the Arria V GZ devices, if you are using an output or bidirectional pin with the 3.3 V LVTTTL or 3.3 V LVCMOS I/O standard, you must adhere to this restriction manually with location assignments.

For the lists of available I/O banks in each device package, refer to [I/O Banks Groups in Arria V Devices](#) on page 14.

Guideline: Ensure Compatible V_{CCIO} and V_{CCPD} Voltage in the Same Bank

When planning I/O bank usage for Arria V GX, GT, SX, and ST devices, you must ensure the V_{CCIO} voltage is compatible with the V_{CCPD} voltage of the same bank. Some banks may share the same V_{CCPD} power pin. This limits the possible V_{CCIO} voltages that can be used on banks that share V_{CCPD} power pins.

Examples:

- $V_{CCPD4BCD}$ is connected to 2.5 V— V_{CCIO} pins for banks 4B, 4C, and 4D can be connected 1.2 V, 1.25 V, 1.35 V, 1.5 V, 1.8 V, or 2.5 V.
- $V_{CCPD4BCD}$ is connected to 3.0 V— V_{CCIO} pins for banks 4B, 4C, and 4D must be connected to 3.0 V.

Guideline: V_{REF} Pin Restrictions

For the Arria V GX, GT, SX, and ST devices, consider the following V_{REF} pins guidelines:

- You cannot assign shared V_{REF} pins as LVDS or external memory interface pins.
- SSTL, HSTL, and HSUL I/O standards do not support shared V_{REF} pins. For example, if a particular B1p or B1n pin is a shared V_{REF} pin, the corresponding B1p/B1n pin pair do not have LVDS transmitter support.
- Shared V_{REF} pins will have reduced performance when used as normal I/Os.
- You must perform signal integrity analysis using your board design when using a shared V_{REF} pin to determine the F_{MAX} for your system.

For information about the pin capacitance of the V_{REF} pins, refer to the [Arria V Device Datasheet](#).

Guideline: Observe Device Absolute Maximum Rating for 3.3-V Interfacing

To ensure device reliability and proper operation when you use the device for 3.3-V I/O interfacing, do not violate the absolute maximum ratings of the device. For more information about absolute maximum rating and maximum allowed overshoot during transitions, refer to the [Arria V Device Datasheet](#).

Tip: Perform IBIS or SPICE simulations to make sure the overshoot and undershoot voltages are within the specifications.

Transmitter Application

If you use the Arria V device as a transmitter, use slow slew-rate and series termination to limit the overshoot and undershoot at the I/O pins. Transmission line effects that cause large voltage deviations at the receiver are associated with an impedance mismatch between the driver and the transmission lines. By matching the impedance of the driver to the characteristic impedance of the transmission line, you can significantly reduce overshoot voltage. You can use a series termination resistor placed physically close to the driver to match the total driver impedance to the transmission line impedance.

Receiver Application

If you use the Arria V device as a receiver, to limit the overshoot and undershoot voltage at the I/O pins:

- Arria V GX, GT, SX, or ST—use the on-chip clamping diode.
- Arria V GZ device—use an off-chip clamping diode.

The 3.3-V I/O standard is supported using the bank supply voltage (V_{CCIO}) at 3.0 V and a V_{CCPD} voltage of 3.0 V. In this method, the clamping diode can sufficiently clamp overshoot voltage to within the DC and AC input voltage specifications. The clamped voltage is expressed as the sum of the V_{CCIO} and the diode forward voltage.

Guideline: Use PLL Integer Mode for LVDS Applications

For LVDS applications, you must use the phase-locked loops (PLLs) in integer PLL mode.

For more information about the LVDS channels in Arria V devices, refer to the [High-Speed Differential I/O Interfaces and DPA in Arria V Devices](#) chapter.

I/O Banks Locations in Arria V Devices

The number of Arria V I/O banks in a particular device depends on the device density. Each I/O bank can simultaneously support multiple I/O standards.

Figure 5-2: I/O Banks for Arria V GX A1 and A3 Devices, and Arria V GT C3 Devices—Preliminary

This figure represents the top view of the silicon die that corresponds to a reverse view of the device package.

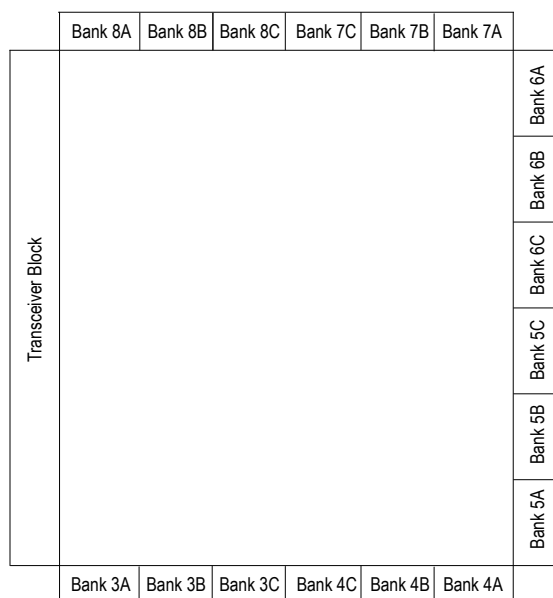


Figure 5-3: I/O Banks for Arria V GX A5, A7, B1, B3, B5, and B7 Devices, Arria V GT C7, D3, and D7 Devices, and Arria V GZ Devices—Preliminary

This figure represents the top view of the silicon die that corresponds to a reverse view of the device package.


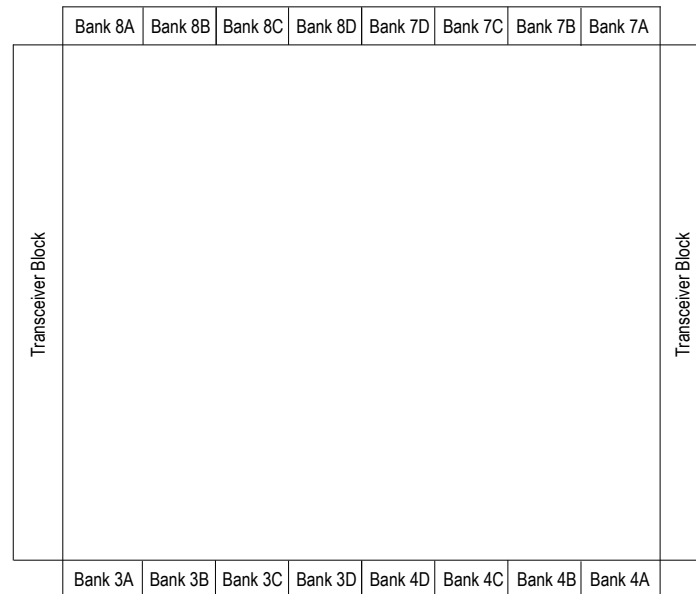


Figure 5-4: I/O Banks for Arria V SX B3 and B5 Devices, and Arria V ST D3 and D5 Devices—Preliminary

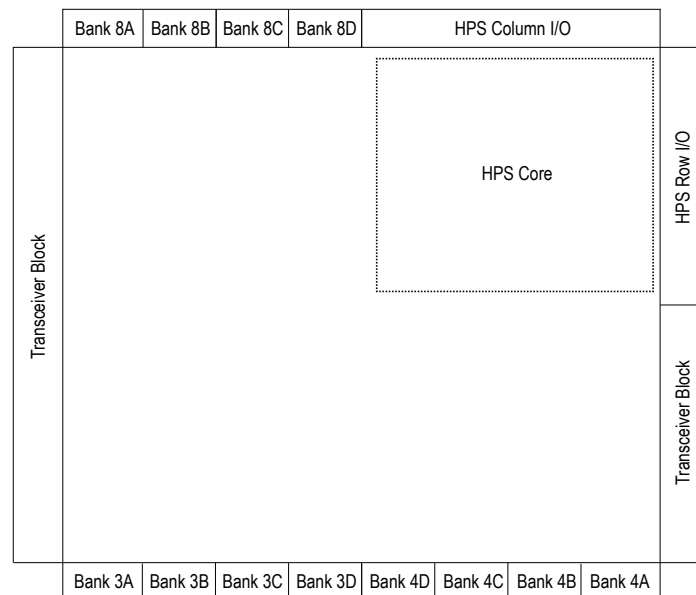This figure represents the top view of the silicon die that corresponds to a reverse view of the device package.



I/O Banks Groups in Arria V Devices

The I/O pins in Arria V devices are arranged in groups called modular I/O banks.

Modular I/O Banks for Arria V GX Devices

Table 5-10: Modular I/O Banks for Arria V GX A1, A3, A5, and A7 Devices—Preliminary

Member Code		A1		A3		A5			A7		
Package		F672	F896	F672	F896	F672	F896	F1152	F672	F896	F1152
Bank	3A	24	32	24	32	24	32	48	24	32	48
	3B	—	—	—	—	—	—	32	—	—	32
	3C	—	—	—	—	—	—	32	—	—	32
	3D	32	32	32	32	20	32	32	20	32	32
	4A	16	16	16	16	28	32	32	28	32	32
	4B	—	16	—	16	32	32	32	32	32	32
	4C	32	32	32	32	32	32	32	32	32	32
	4D	32	32	32	32	32	32	32	32	32	32
	5A	32	48	32	48	—	—	—	—	—	—
	6A	32	48	32	48	—	—	—	—	—	—
	7A	16	16	16	16	28	32	32	28	32	32
	7B	—	16	—	16	32	32	32	32	32	32
	7C	32	32	32	32	32	32	32	32	32	32
	7D	32	32	32	32	32	32	32	32	32	32
	8A	24	32	24	32	24	32	48	24	32	48
	8B	—	—	—	—	—	—	32	—	—	32
	8C	—	—	—	—	—	—	32	—	—	32
	8D	32	32	32	32	20	32	32	20	32	32
Total		336	416	336	416	336	384	544	336	384	544

Table 5-11: Modular I/O Banks for Arria V GX B1, B3, B5, and B7 Devices—Preliminary

Member Code		B1			B3			B5		B7	
Package		F896	F1152	F1517	F896	F1152	F1517	F1152	F1517	F1152	F1517
Bank	3A	32	48	48	32	48	48	48	48	48	48
	3B	—	32	32	—	32	32	32	32	32	32
	3C	—	32	48	—	32	48	32	48	32	48
	3D	32	32	48	32	32	48	32	48	32	48
	4A	32	32	48	32	32	48	32	48	32	48
	4B	32	32	48	32	32	48	32	48	32	48
	4C	32	32	32	32	32	32	32	32	32	32
	4D	32	32	48	32	32	48	32	48	32	48
	7A	32	32	48	32	32	48	32	48	32	48
	7B	32	32	48	32	32	48	32	48	32	48
	7C	32	32	32	32	32	32	32	32	32	32
	7D	32	32	48	32	32	48	32	48	32	48
	8A	32	48	48	32	48	48	48	48	48	48
	8B	—	32	32	—	32	32	32	32	32	32
	8C	—	32	48	—	32	48	32	48	32	48
	8D	32	32	48	32	32	48	32	48	32	48
Total		384	544	704	384	544	704	544	704	544	704

Modular I/O Banks for Arria V GT Devices

Table 5-12: Modular I/O Banks for Arria V GT Devices—Preliminary

Member Code		C3		C7		D3			D7	
Package		F672	F896	F896	F1152	F896	F1152	F1517	F1152	F1517
Bank	3A	24	32	32	48	32	48	48	48	48
	3B	—	—	—	32	—	32	32	32	32
	3C	—	—	—	32	—	32	48	32	48
	3D	32	32	32	32	32	32	48	32	48
	4A	16	16	32	32	32	32	48	32	48
	4B	—	16	32	32	32	32	48	32	48
	4C	32	32	32	32	32	32	32	32	32
	4D	32	32	32	32	32	32	48	32	48
	5A	32	48	—	—	—	—	—	—	—
	6A	32	48	—	—	—	—	—	—	—
	7A	16	16	32	32	32	32	48	32	48
	7B	—	16	32	32	32	32	48	32	48
	7C	32	32	32	32	32	32	32	32	32
	7D	32	32	32	32	32	32	48	32	48
	8A	24	32	32	48	32	48	48	48	48
	8B	—	—	—	32	—	32	32	32	32
	8C	—	—	—	32	—	32	48	32	48
	8D	32	32	32	32	32	32	48	32	48
Total		336	416	384	544	384	544	704	544	704

Modular I/O Banks for Arria V GZ Devices

Table 5-13: Modular I/O Banks for Arria V GZ Devices—Preliminary

Member Code		E1		E3		E5		E7	
Package		F780	F1152	F780	F1152	F1152	F1517	F1152	F1517
Bank	3A	36	36	36	36	36	36	36	36
	3B	48	48	48	48	48	48	48	48
	3C	—	—	—	—	48	48	48	48
	3D	24	24	24	24	24	48	24	48
	4A	24	24	24	24	24	24	24	24
	4B	—	48	—	48	48	48	48	48
	4C	—	—	—	—	48	48	48	48
	4D	24	24	24	24	24	48	24	48
	7A	24	24	24	24	24	24	24	24
	7B	—	24	—	24	48	48	48	48
	7C	48	48	48	48	48	48	48	48
	7D	36	36	36	36	36	48	36	48
	8A	24	24	24	24	24	36	24	36
	8B	—	—	—	—	—	48	—	48
	8C	48	48	48	48	48	48	48	48
	8D	24	24	24	24	24	48	24	48
Total		360	432	360	432	552	696	552	696

Modular I/O Banks for Arria V SX Devices

Table 5-14: Modular I/O Banks for Arria V SX Devices—Preliminary

Member Code		B3			B5		
Package		F896	F1152	F1517	F896	F1152	F1517
FPGA I/O Bank	3A	44	44	48	44	44	48
	3B	28	28	32	28	28	32
	3C	—	38	48	—	38	48
	3D	13	13	48	13	13	48
	4A	42	42	48	42	42	48
	4B	—	38	48	—	38	48
	4C	—	26	32	—	26	32
	4D	—	32	48	—	32	48

Member Code		B3			B5		
Package		F896	F1152	F1517	F896	F1152	F1517
HPS Row I/O Bank	6A	56	56	56	56	56	56
	6B	44	44	44	44	44	44
HPS Column I/O Bank	7A	32	32	32	32	32	32
	7B	22	22	22	22	22	22
	7C	12	12	12	12	12	12
	7D	20	20	20	20	20	20
	7E	8	8	8	8	8	8
	7G	—	—	12	—	—	12
FPGA I/O Bank	8A	44	44	48	44	44	48
	8B	28	28	32	28	28	32
	8C	38	38	48	38	38	48
	8D	13	14	48	13	14	48
Total		444	579	734	444	579	734

Modular I/O Banks for Arria V ST Devices

Table 5-15: Modular I/O Banks for Arria V ST Devices—Preliminary

Member Code		D3			D5		
Package		F896	F1152	F1517	F896	F1152	F1517
FPGA I/O Bank	3A	44	44	48	44	44	48
	3B	28	28	32	28	28	32
	3C	—	38	48	—	38	48
	3D	13	13	48	13	13	48
	4A	42	42	48	42	42	48
	4B	—	38	48	—	38	48
	4C	—	26	32	—	26	32
	4D	—	32	48	—	32	48
HPS Row I/O Bank	6A	56	56	56	56	56	56
	6B	44	44	44	44	44	44

Member Code		D3			D5		
Package		F896	F1152	F1517	F896	F1152	F1517
HPS Column I/O Bank	7A	32	32	32	32	32	32
	7B	22	22	22	22	22	22
	7C	12	12	12	12	12	12
	7D	20	20	20	20	20	20
	7E	8	8	8	8	8	8
	7G	—	—	12	—	—	12
FPGA I/O Bank	8A	44	44	48	44	44	48
	8B	28	28	32	28	28	32
	8C	38	38	48	38	38	48
	8D	13	14	48	13	14	48
Total		444	579	734	444	579	734

I/O Element Structure in Arria V Devices

The I/O elements (IOEs) in Arria V devices contain a bidirectional I/O buffer and I/O registers to support a complete embedded bidirectional single data rate (SDR) or double data rate (DDR) transfer.

The IOEs are located in I/O blocks around the periphery of the Arria V device.

The Arria V SX and ST devices also have I/O elements for the HPS.

I/O Buffer and Registers in Arria V Devices

I/O registers are composed of the input path for handling data from the pin to the core, the output path for handling data from the core to the pin, and the output enable (OE) path for handling the OE signal to the output buffer. These registers allow faster source-synchronous register-to-register transfers and resynchronization.


Table 5-16: Input and Output Paths in Arria V Devices

This table summarizes the input and output path in the Arria V devices.

Input Path	Output Path
Consists of: • DDR input registers • Alignment and synchronization registers • Half data rate blocks	Consists of: • Output or OE registers • Alignment registers • Half data rate blocks
You can bypass each block in the input path. The input path uses the deskew delay to adjust the input register clock delay across process, voltage, and temperature (PVT) variations.	You can bypass each block of the output and OE paths.

Figure 5-5: IOE Structure for Arria V Devices

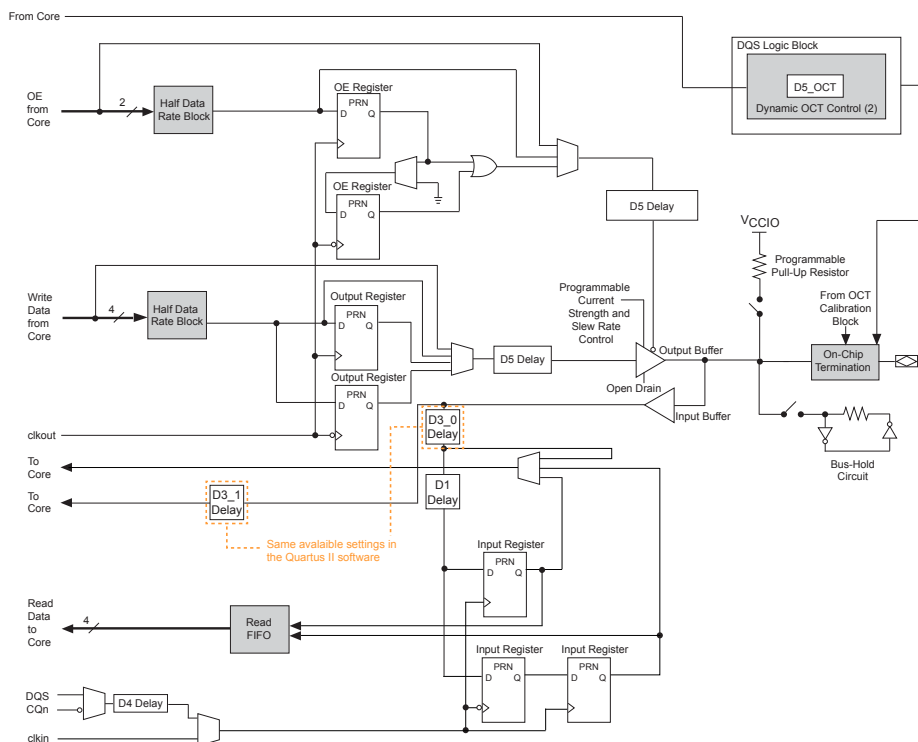This figure shows the Arria V FPGA IOE structure. In the figure, one dynamic on-chip termination (OCT) control is available for each DQ/DQS group.



Programmable IOE Features in Arria V Devices

Table 5-17: Summary of Supported Arria V Programmable IOE Features and Settings

Feature	Device Variant Support	Setting (Default setting in bold)	Condition	Supported in HPS I/O (Arria V SX and ST Only)
Slew Rate Control	All	0 = Slow, 1 = Fast	Disabled if you use the RS OCT feature.	Yes
I/O Delay	All	Refer to the Arria V Device Datasheet	—	—
Open-Drain Output	All	On, Off	—	Yes
Bus-Hold	All	On, Off	Disabled if you use the weak pull-up resistor feature.	Yes
Weak Pull-up Resistor	All	On, Off	Disabled if you use the bus-hold feature.	Yes
Pre-Emphasis	All	0 = Disabled, 1 = Enabled	—	—

Feature	Device Variant Support	Setting (Default setting in bold)	Condition	Supported in HPS I/O (Arria V SX and ST Only)
Differential Output Voltage	All	- Arria V GX, GT, SX, and ST—0 = low, 1 = medium, 2 = high - Arria V GZ—0 = low, 1 = medium low, 2 = medium high, 3 = high	—	—
On-Chip Clamp Diode	GX, GT, SX, and ST	On, Off	—	Yes

Note: The on-chip clamp diode is available on all general purpose I/O (GPIO) pins in the Arria V GX, GT, SX, and ST device variants.

Programmable Current Strength

You can use the programmable current strength to mitigate the effects of high signal attenuation that is caused by a long transmission line or a legacy backplane.

Table 5-18: Programmable Current Strength Settings for Arria V Devices

The output buffer for each Arria V device I/O pin has a programmable current strength control for the I/O standards listed in this table.

I/O Standard	I _{OH} / I _{OL} Current Strength Setting (mA) (Default setting in bold)		Supported in HPS (Arria V SX and ST Only)
	Arria V GX, GT, SX, and ST	Arria V GZ	
3.3-V LVTTL	8 , 4	16, 12 , 8, 4	Yes
3.3-V LVCMOS	2	16, 12 , 8, 4	Yes
3.0-V LVTTL/3.0-V LVCMOS	16, 12 , 8, 4	—	Yes
2.5-V LVCMOS	16, 12 , 8, 4	16, 12 , 8, 4	Yes
1.8-V LVCMOS	12 , 10, 8, 6, 4, 2	12 , 10, 8, 6, 4, 2	Yes
1.5-V LVCMOS	12 , 10, 8, 6, 4, 2	12 , 10, 8, 6, 4, 2	Yes
1.2-V LVCMOS	8 , 6, 4, 2	8 , 6, 4, 2	—
SSTL-2 Class I	12, 10, 8	12, 10, 8	—
SSTL-2 Class II	16	16	—
SSTL-18 Class I	12, 10, 8 , 6, 4	12, 10, 8 , 6, 4	Yes
SSTL-18 Class II	16	16 , 8	Yes
SSTL-15 Class I	12, 10, 8 , 6, 4	12, 10, 8 , 6, 4	Yes

I/O Standard	I_{OH} / I_{OL} Current Strength Setting (mA) (Default setting in bold)		Supported in HPS (Arria V SX and ST Only)
	Arria V GX, GT, SX, and ST	Arria V GZ	
SSTL-15 Class II	16	16 , 8	Yes
1.8-V HSTL Class I	12, 10, 8 , 6, 4	12, 10, 8 , 6, 4	—
1.8-V HSTL Class II	16	16	—
1.5-V HSTL Class I	12, 10, 8 , 6, 4	12, 10, 8 , 6, 4	Yes
1.5-V HSTL Class II	16	16	Yes
1.2-V HSTL Class I	12, 10, 8 , 6, 4	12, 10, 8 , 6, 4	—
1.2-V HSTL Class II	16	16	—

For the Arria V GZ devices, the 3.3 V LVTTTL and 3.3 V LVCMOS I/O standards are supported using V_{CCIO} and V_{CCPD} at 3.0 V.

Note: Altera recommends that you perform IBIS or SPICE simulations to determine the best current strength setting for your specific application.

Programmable Output Slew-Rate Control

The programmable output slew-rate control in the output buffer of each regular- and dual-function I/O pin allows you to configure the following:

- Fast slew-rate—provides high-speed transitions for high-performance systems.
- Slow slew-rate—reduces system noise and crosstalk but adds a nominal delay to the rising and falling edges.

You can specify the slew-rate on a pin-by-pin basis because each I/O pin contains a slew-rate control.

Note: Altera recommends that you perform IBIS or SPICE simulations to determine the best slew rate setting for your specific application.

Programmable IOE Delay

You can activate the programmable IOE delays to ensure zero hold times, minimize setup times, or increase clock-to-output times. This feature helps read and write timing margins because it minimizes the uncertainties between signals in the bus.

Each pin can have a different input delay from pin-to-input register or a delay from output register-to-output pin values to ensure that the signals within a bus have the same delay going into or out of the device.

Output Buffer Delay

The delay chains are built inside the single-ended output buffer.

There are four levels of output buffer delay settings. By default, there is no delay.

The following actions allow you to independently control the rising and falling edge delays of the output buffer:

- Adjust the output-buffer duty cycle
- Compensate channel-to-channel skew
- Reduce simultaneous switching output (SSO) noise by deliberately introducing channel-to-channel skew
- Improve high-speed memory-interface timing margins

Programmable Pre-Emphasis

The V_{OD} setting and the output impedance of the driver set the output current limit of a high-speed transmission signal. At a high frequency, the slew rate may not be fast enough to reach the full V_{OD} level before the next edge, producing pattern-dependent jitter. With pre-emphasis, the output current is boosted momentarily during switching to increase the output slew rate.

Pre-emphasis increases the amplitude of the high-frequency component of the output signal, and thus helps to compensate for the frequency-dependent attenuation along the transmission line. The overshoot introduced by the extra current happens only during a change of state switching to increase the output slew rate and does not ring, unlike the overshoot caused by signal reflection. The amount of pre-emphasis required depends on the attenuation of the high-frequency component along the transmission line.

Figure 5-6: Programmable Pre-Emphasis

This figure shows the LVDS output with pre-emphasis.

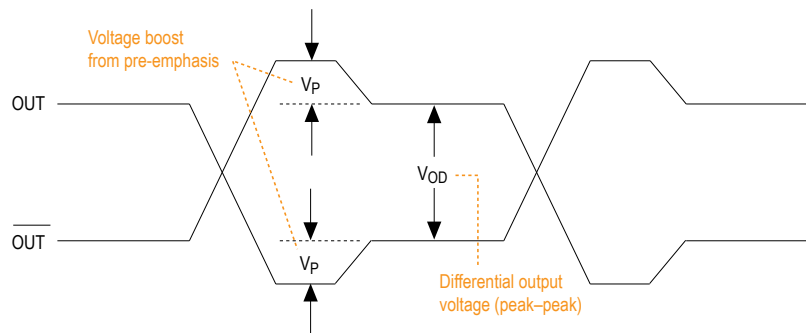


Table 5-19: Quartus II Software Assignment Editor—Programmable Pre-Emphasis

This table lists the assignment name for programmable pre-emphasis and its possible values in the Quartus II software Assignment Editor.


Field	Assignment
To	tx_out
Assignment name	Programmable Pre-emphasis
Allowed values	0 (disable) and 1 (enable)

Programmable Differential Output Voltage

The programmable V_{OD} settings allow you to adjust the output eye opening to optimize the trace length and power consumption. A higher V_{OD} swing improves voltage margins at the receiver end, and a smaller V_{OD} swing reduces power consumption. You can statically adjust the V_{OD} of the differential signal by changing the V_{OD} settings in the Quartus II software Assignment Editor.

Figure 5-7: Differential V_{OD}

This figure shows the V_{OD} of the differential LVDS output.

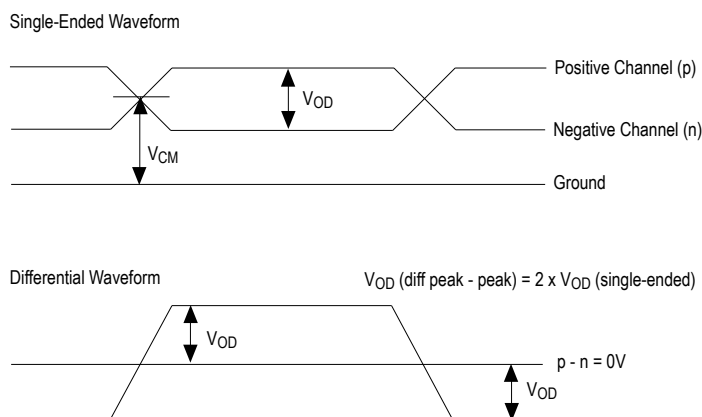**Table 5-20: Quartus II Software Assignment Editor—Programmable V_{OD}**

This table lists the assignment name for programmable V_{OD} and its possible values in the Quartus II software Assignment Editor. Value "0" is available for the RSDS I/O standard only and is not available for the LVDS I/O standard.

Field	Assignment
To	tx_out
Assignment name	Programmable Differential Output Voltage (V_{OD})
Allowed values	- Arria V GX, GT, SX, and ST—0 (low), 1 (medium—default), 2 (high) - Arria V GZ—0 (low), 1 (medium low—default), 2 (medium high), 3 (high)

I/O Pins Features for Arria V Devices

Open-Drain Output

The optional open-drain output for each I/O pin is equivalent to an open collector output. If it is configured as an open drain, the logic value of the output is either high-Z or logic low.

Use an external resistor to pull the signal to a logic high.

Bus-Hold Circuitry

Each I/O pin provides an optional bus-hold feature that is active only after configuration. When the device enters user mode, the bus-hold circuit captures the value that is present on the pin by the end of the configuration.

The bus-hold circuitry uses a resistor with a nominal resistance (R_{BH}), approximately 7 k Ω , to weakly pull the signal level to the last-driven state of the pin. The bus-hold circuitry holds this pin state until the next input signal is present. Because of this, you do not require an external pull-up or pull-down resistor to hold a signal level when the bus is tri-stated.

For each I/O pin, you can individually specify that the bus-hold circuitry pulls non-driven pins away from the input threshold voltage—where noise can cause unintended high-frequency switching. To prevent over-driving signals, the bus-hold circuitry drives the voltage level of the I/O pin lower than the V_{CCIO} level.

If you enable the bus-hold feature, you cannot use the programmable pull-up option. To configure the I/O pin for differential signals, disable the bus-hold feature.

Pull-up Resistor

Each I/O pin provides an optional programmable pull-up resistor during user mode. The pull-up resistor, typically 25 k Ω , weakly holds the I/O to the V_{CCIO} level.

The Arria V device supports programmable weak pull-up resistors only on user I/O pins but not on dedicated configuration pins, JTAG pins, or dedicated clock pins.

If you enable this option, you cannot use the bus-hold feature.

On-Chip I/O Termination in Arria V Devices

Dynamic R_S and R_T OCT provides I/O impedance matching and termination capabilities. OCT maintains signal quality, saves board space, and reduces external component costs.

The Arria V devices support OCT in all FPGA I/O banks. For the HPS I/Os, the column I/Os do not support OCT.

Table 5-21: OCT Schemes Supported in Arria V Devices

Direction	OCT Schemes	Supported in HPS Row I/Os
Output	R_S OCT with calibration	Yes
	R_S OCT without calibration	Yes
Input	R_T OCT with calibration	Yes
	R_D OCT (LVDS I/O standard only)	—
Bidirectional	Dynamic R_S OCT and R_T OCT	Yes

R_S OCT without Calibration in Arria V Devices

The Arria V devices support R_S OCT for single-ended and voltage-referenced I/O standards. R_S OCT without calibration is supported on output only.

Table 5-22: Selectable I/O Standards for R_S OCT Without Calibration

This table lists the output termination settings for uncalibrated OCT on different I/O standards.

I/O Standard	Device Variant Support	Uncalibrated OCT (Output)
		R_S (Ω)
3.3 V LVTTL/3.3 V LVCMOS	GZ only	25/50
3.0 V LVTTL/3.0 V LVCMOS	GX, GT, SX, and ST	25/50
2.5 V LVCMOS	All	25/50
1.8 V LVCMOS	All	25/50


I/O Standard	Device Variant Support	Uncalibrated OCT (Output)
		R_S (Ω)
1.5 V LVCMOS	All	25/50
1.2 V LVCMOS	All	25/50
SSTL-2 Class I	All	50
SSTL-2 Class II	All	25
SSTL-18 Class I	All	50
SSTL-18 Class II	All	25
SSTL-15 Class I	All	50
SSTL-15 Class II	All	25
1.8 V HSTL Class I	All	50
1.8 V HSTL Class II	All	25
1.5 V HSTL Class I	All	50
1.5 V HSTL Class II	All	25
1.2 V HSTL Class I	All	50
1.2 V HSTL Class II	All	25
Differential SSTL-2 Class I	All	50
Differential SSTL-2 Class II	All	25
Differential SSTL-18 Class I	All	50
Differential SSTL-18 Class II	All	25
Differential SSTL-15 Class I	All	50
Differential SSTL-15 Class II	All	25
Differential 1.8 V HSTL Class I	All	50
Differential 1.8 V HSTL Class II	All	25
Differential 1.5 V HSTL Class I	All	50
Differential 1.5 V HSTL Class II	All	25
Differential 1.2 V HSTL Class I	All	50
Differential 1.2 V HSTL Class II	All	25
SSTL-15	GZ only	25, 34, 40, 50
SSTL-135	GZ only	34, 40
SSTL-125	GZ only	34, 40
SSTL-12	GZ only	40, 60, 240
HSUL-12	GZ only	34.3, 40, 48, 60, 80

Driver-impedance matching provides the I/O driver with controlled output impedance that closely matches the impedance of the transmission line. As a result, you can significantly reduce signal reflections on PCB traces.

If you select matching impedance, current strength is no longer selectable.

Figure 5-8: R_S OCT Without Calibration

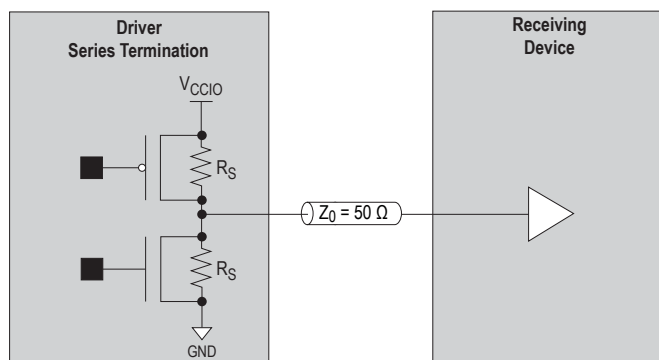This figure shows the R_S as the intrinsic impedance of the output transistors.



R_S OCT with Calibration in Arria V Devices

The Arria V devices support R_S OCT with calibration in all banks.

Table 5-23: Selectable I/O Standards for R_S OCT With Calibration

This table lists the output termination settings for calibrated OCT on different I/O standards.

I/O Standard	Device Variant Support	Calibrated OCT (Output)	
		R_S (Ω)	RZQ (Ω)
3.3 V LVTTL/3.3 V LVCMOS	GZ only	25/50	100
3.0 V LVTTL/3.0 V LVCMOS	GX, GT, SX, and ST	25/50	100
2.5 V LVCMOS	All	25/50	100
1.8 V LVCMOS	All	25/50	100
1.5 V LVCMOS	All	25/50	100
1.2 V LVCMOS	All	25/50	100
SSTL-2 Class I	All	50	100
SSTL-2 Class II	All	25	100
SSTL-18 Class I	All	50	100
SSTL-18 Class II	All	25	100
SSTL-15 Class I	All	50	100
SSTL-15 Class II	All	25	100
1.8 V HSTL Class I	All	50	100
1.8 V HSTL Class II	All	25	100
1.5 V HSTL Class I	All	50	100
1.5 V HSTL Class II	All	25	100
1.2 V HSTL Class I	All	50	100
1.2 V HSTL Class II	All	25	100

I/O Standard	Device Variant Support	Calibrated OCT (Output)	
		R_S (Ω)	RZQ (Ω)
Differential SSTL-2 Class I	All	50	100
Differential SSTL-2 Class II	All	25	100
Differential SSTL-18 Class I	All	50	100
Differential SSTL-18 Class II	All	25	100
Differential SSTL-15 Class I	All	50	100
Differential SSTL-15 Class II	All	25	100
Differential 1.8 V HSTL Class I	All	50	100
Differential 1.8 V HSTL Class II	All	25	100
Differential 1.5 V HSTL Class I	All	50	100
Differential 1.5 V HSTL Class II	All	25	100
Differential 1.2 V HSTL Class I	All	50	100
Differential 1.2 V HSTL Class II	All	25	100
SSTL-15	All	25, 50 ²¹	100
	All	34, 40 ²¹	240
SSTL-135	All	34, 40 ²¹	240
SSTL-125	All	34, 40 ²¹	240
SSTL-12	GZ only	40, 60, 240 ²¹	240
HSUL-12	All	34, 40, 48, 60, 80 ²¹	240
Differential SSTL-15	All	25, 50 ²¹	100
	All	34, 40 ²¹	240
Differential SSTL-135	All	34, 40 ²¹	240
Differential SSTL-125	All	34, 40 ²¹	240
Differential SSTL-12	GZ only	40, 60, 240 ²¹	240
Differential HSUL-12	All	34, 40, 48, 60, 80 ²¹	240


The R_S OCT calibration circuit compares the total impedance of the I/O buffer to the external reference resistor connected to the RZQ pin and dynamically enables or disables the transistors until they match.

Calibration occurs at the end of device configuration. When the calibration circuit finds the correct impedance, the circuit powers down and stops changing the characteristics of the drivers.

²¹ Pending silicon characterization for Arria V GZ devices.

Figure 5-9: R_S OCT with Calibration

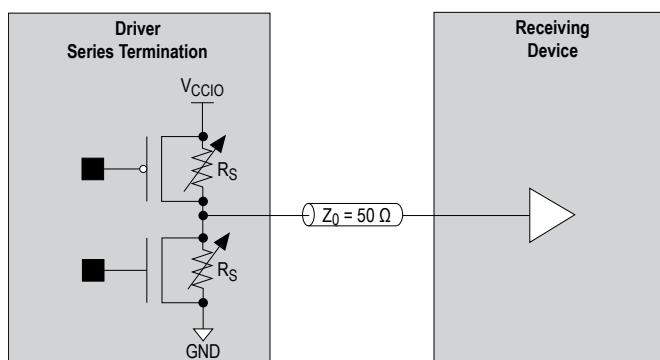This figure shows the R_S as the intrinsic impedance of the output transistors.



R_T OCT With Calibration in Arria V Devices

The Arria V devices support R_T OCT with calibration in all banks. R_T OCT with calibration is available only for configuration of input and bidirectional pins. Output pin configurations do not support R_T OCT with calibration. If you use R_T OCT, the V_{CCIO} of the bank must match the I/O standard of the pin where you enable the R_T OCT.

Table 5-24: Selectable I/O Standards for R_T OCT With Calibration

This table lists the input termination settings for calibrated OCT on different I/O standards.

I/O Standard	Device Variant Support	Calibrated OCT (Input)	
		R_T (Ω)	RZQ (Ω)
SSTL-2 Class I	All	50	100
SSTL-2 Class II	All	50	100
SSTL-18 Class I	All	50	100
SSTL-18 Class II	All	50	100
SSTL-15 Class I	GX, GT, SX, and ST	20, 25, 30, 40, 50, 60, 120	100
	GZ only	50	100
SSTL-15 Class II	GX, GT, SX, and ST	20, 25, 30, 40, 50, 60, 120	100
	GZ only	50	100
1.8 V HSTL Class I	All	50	100
1.8 V HSTL Class II	All	50	100
1.5 V HSTL Class I	All	50	100
1.5 V HSTL Class II	All	50	100
1.2 V HSTL Class I	All	50	100
1.2 V HSTL Class II	All	50	100
Differential SSTL-2 Class I	All	50	100
Differential SSTL-2 Class II	All	50	100


I/O Standard	Device Variant Support	Calibrated OCT (Input)	
		R_T (Ω)	RZQ (Ω)
Differential SSTL-18 Class I	All	50	100
Differential SSTL-18 Class II	All	50	100
Differential SSTL-15 Class I	All	50	100
Differential SSTL-15 Class II	All	50	100
Differential 1.8 V HSTL Class I	All	50	100
Differential 1.8 V HSTL Class II	All	50	100
Differential 1.5 V HSTL Class I	All	50	100
Differential 1.5 V HSTL Class II	All	50	100
Differential 1.2 V HSTL Class I	All	50	100
Differential 1.2 V HSTL Class II	All	50	100
SSTL-15	GX, GT, SX, and ST	20, 25, 30, 40, 50, 60, 120	240
	GZ only	20, 30, 40, 60, 120 ²²	240
SSTL-135	All	20, 30, 40, 60, 120 ²²	240
SSTL-125	All	20, 30, 40, 60, 120 ²²	240
SSTL-12	GZ only	60, 120 ²²	240
HSUL-12	GZ only	TBD ²²	TBD
Differential SSTL-15	GX, GT, SX, and ST	20, 25, 30, 40, 50, 60, 120	240
	GZ only	20, 30, 40, 60, 120 ²²	240
Differential SSTL-135	All	20, 30, 40, 60, 120 ²²	240
Differential SSTL-125	All	20, 30, 40, 60, 120 ²²	240
Differential SSTL-12	GZ only	60, 120 ²²	240
Differential HSUL-12	GZ only	TBD ²²	TBD

The R_T OCT calibration circuit compares the total impedance of the I/O buffer to the external resistor connected to the RZQ pin. The circuit dynamically enables or disables the transistors until the total impedance of the I/O buffer matches the external resistor.

²² Pending silicon characterization for Arria V GZ devices.

Calibration occurs at the end of the device configuration. When the calibration circuit finds the correct impedance, the circuit powers down and stops changing the characteristics of the drivers.

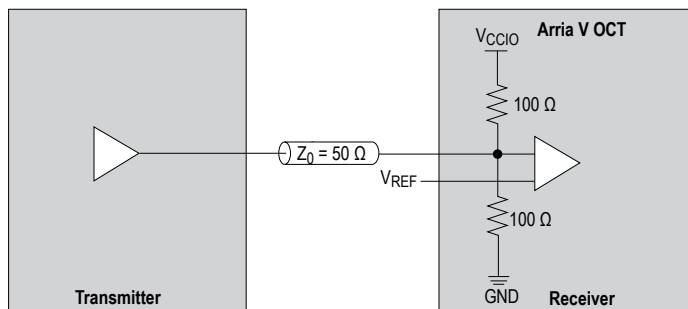Figure 5-10: R_T OCT with Calibration



Dynamic OCT in Arria V Devices

Dynamic OCT is useful for terminating a high-performance bidirectional path by optimizing the signal integrity depending on the direction of the data.


Note: If you use the SSTL-15, SSTL-135, and SSTL-125 I/O standards with the DDR3 memory interface, Altera recommends that you use dynamic OCT with these I/O standards to save board space and cost. Dynamic OCT reduces the number of external termination resistors used.

Table 5-25: Dynamic OCT Based on Bidirectional I/O

Dynamic R_T OCT or R_S OCT is enabled or disabled based on whether the bidirectional I/O acts as a receiver or driver.

Dynamic OCT	Bidirectional I/O	State
Dynamic R_T OCT	Acts as a receiver	Enabled
	Acts as a driver	Disabled
Dynamic R_S OCT	Acts as a receiver	Disabled
	Acts as a driver	Enabled

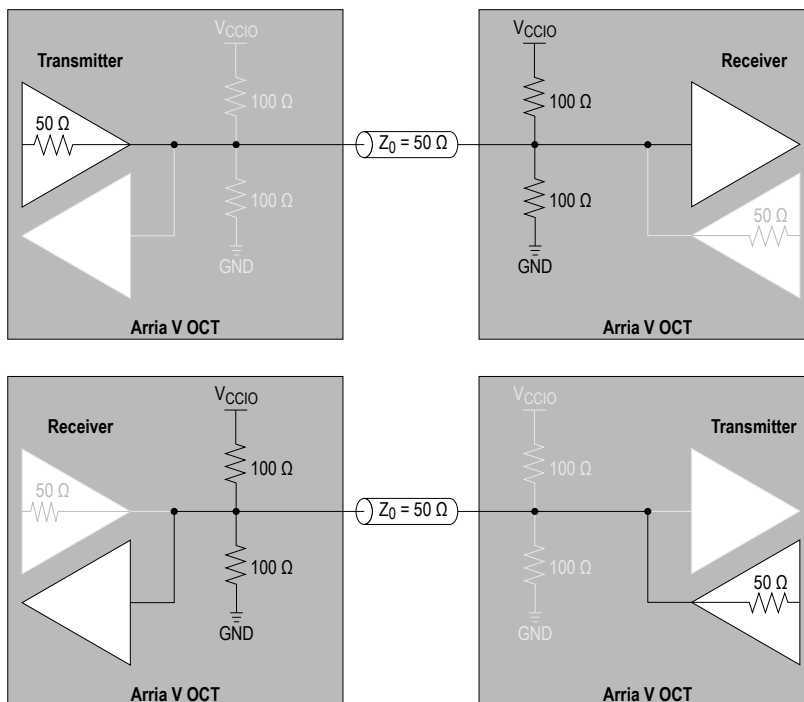Figure 5-11: Dynamic R_T OCT in Arria V Devices




LVDS Input R_D OCT in Arria V Devices

The Arria V devices support R_D OCT in all I/O banks.

You can use R_D OCT if you set the V_{CCIO} and V_{CCPD} to 2.5 V.

Figure 5-12: Differential Input OCT

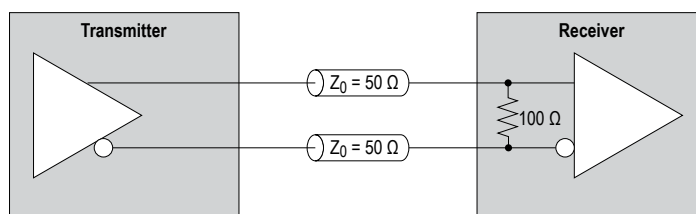The Arria V devices support OCT for differential LVDS input buffers with a nominal resistance value of 100 Ω , as shown in this figure.



OCT Calibration Block in Arria V Devices

You can calibrate the OCT using any of the available four OCT calibration blocks for each device. Each calibration block contains one RZQ pin.

You can use R_S and R_T OCT in the same I/O bank for different I/O standards if the R_S and R_T OCT use the same V_{CCIO} supply voltage. You cannot configure the R_S OCT and the programmable current strength for the same I/O buffer.


Connect the RZQ pin to the GND pin through a resistor with the specified value. The RZQ pin shares the same V_{CCIO} supply voltage with the I/O bank where the pin is located.

Arria V devices support calibrated R_S and calibrated R_T on all I/O pins except for dedicated configuration pins.

Calibration Block Locations in Arria V Devices

Figure 5-13: OCT Calibration Block and RZQ Pin Location—Preliminary

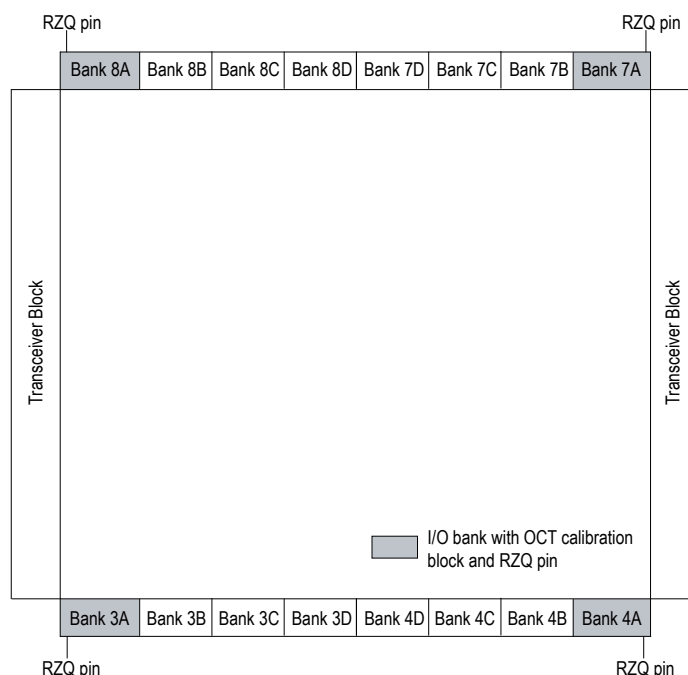This figure shows the location of I/O banks with OCT calibration blocks and RZQ pins in the Arria V device. This figure represents the top view of the silicon die that corresponds to a reverse view of the device package and illustrates the highest density device in the device family.



Sharing an OCT Calibration Block on Multiple I/O Banks

An OCT calibration block has the same V_{CCIO} as the I/O bank that contains the block. All I/O banks with the same V_{CCIO} can share one OCT calibration block, even if that particular I/O bank has an OCT calibration block.


I/O banks that do not have calibration blocks share the calibration blocks in the I/O banks that have calibration blocks.

All I/O banks support OCT calibration with different V_{CCIO} voltage standards, up to the number of available OCT calibration blocks.

You can configure the I/O banks to receive calibration codes from any OCT calibration block with the same V_{CCIO} . If a group of I/O banks has the same V_{CCIO} voltage, you can use one OCT calibration block to calibrate the group of I/O banks placed around the periphery.

Figure 5-14: Example of Calibrating Multiple I/O Banks with One Shared OCT Calibration Block—Preliminary

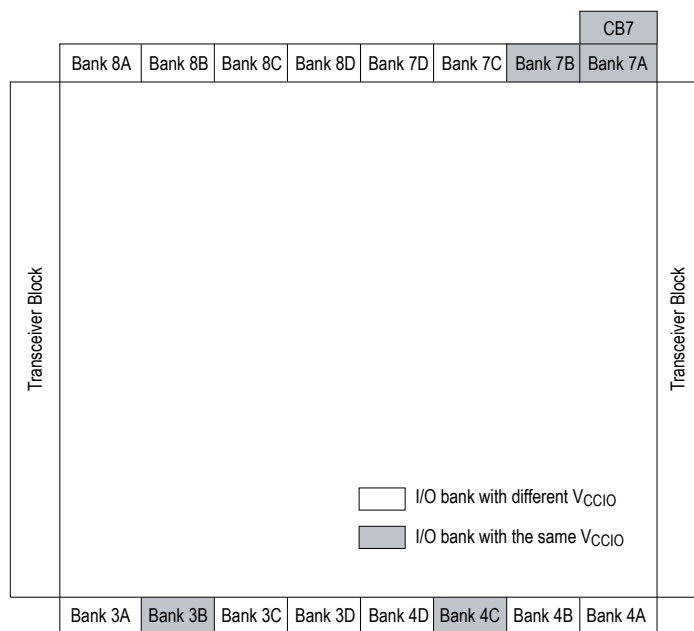As an example, this figure shows a group of I/O banks that has the same V_{CCIO} voltage. The figure does not show transceiver calibration blocks. This figure represents the top view of the silicon die that corresponds to a reverse view of the device package and illustrates the highest density device in the device family.



Because banks 3B, 4C, and 7B have the same V_{CCIO} as bank 7A, you can calibrate all four I/O banks (3B, 4C, 7A, and 7B) with the OCT calibration block (CB7) located in bank 7A.

To enable this calibration, serially shift out the R_S OCT calibration codes from the OCT calibration block in bank 7A to the I/O banks around the periphery.

For more information about the OCT calibration block, refer to the [Dynamic Calibrated On-Chip Termination \(ALTOCT\) Megafunction User Guide](#).

External I/O Termination for Arria V Devices

Table 5-26: External Termination Schemes for Different I/O Standards

I/O Standard	External Termination Scheme
3.3-V LVTTL/3.3-V LVCMOS	No external termination required
3.0-V LVVTTL/3.0-V LVCMOS	
3.0-V PCI	
3.0-V PCI-X	
2.5-V LVCMOS	
1.8-V LVCMOS	
1.5-V LVCMOS	
1.2-V LVCMOS	

I/O Standard	External Termination Scheme
SSTL-2 Class I	Single-Ended SSTL I/O Standard Termination
SSTL-2 Class II	
SSTL-18 Class I	
SSTL-18 Class II	
SSTL-15 Class I	
SSTL-15 Class II	
1.8-V HSTL Class I	Single-Ended HSTL I/O Standard Termination
1.8-V HSTL Class II	
1.5-V HSTL Class I	
1.5-V HSTL Class II	
1.2-V HSTL Class I	
1.2-V HSTL Class II	
Differential SSTL-2 Class I	Differential SSTL I/O Standard Termination
Differential SSTL-2 Class II	
Differential SSTL-18 Class I	
Differential SSTL-18 Class II	
Differential SSTL-15 Class I	
Differential SSTL-15 Class II	
Differential 1.8-V HSTL Class I	Differential HSTL I/O Standard Termination
Differential 1.8-V HSTL Class II	
Differential 1.5-V HSTL Class I	
Differential 1.5-V HSTL Class II	
Differential 1.2-V HSTL Class I	
Differential 1.2-V HSTL Class II	
LVDS	LVDS I/O Standard Termination
RSDS	RSDS/mini-LVDS I/O Standard Termination
Mini-LVDS	
LVPECL	Differential LVPECL I/O Standard Termination

I/O Standard	External Termination Scheme
SSTL-15 ²³	No external termination required
SSTL-135 ²³	
SSTL-125 ²³	
SSTL-12	
HSUL-12	
Differential SSTL-15 ²³	
Differential SSTL-135 ²³	
Differential SSTL-125 ²³	
Differential SSTL-12	
Differential HSUL-12	

Single-ended I/O Termination

Voltage-referenced I/O standards require an input V_{REF} and a termination voltage (V_{TT}). The reference voltage of the receiving device tracks the termination voltage of the transmitting device.

The supported I/O standards such as SSTL-15, SSTL-135, SSTL-125, and SSTL-12 typically do not require external board termination.

Altera recommends that you use dynamic OCT with these I/O standards to save board space and cost. Dynamic OCT reduces the number of external termination resistors used.

Note: You cannot use R_S and R_T OCT simultaneously. For more information, refer to [Dynamic OCT in Arria V Devices](#) on page 32.

²³ Altera recommends that you use dynamic OCT with these I/O standards to save board space and cost. Dynamic OCT reduces the number of external termination resistors used.

Figure 5-15: SSTL I/O Standard Termination

This figure shows the details of SSTL I/O termination on Arria V devices.


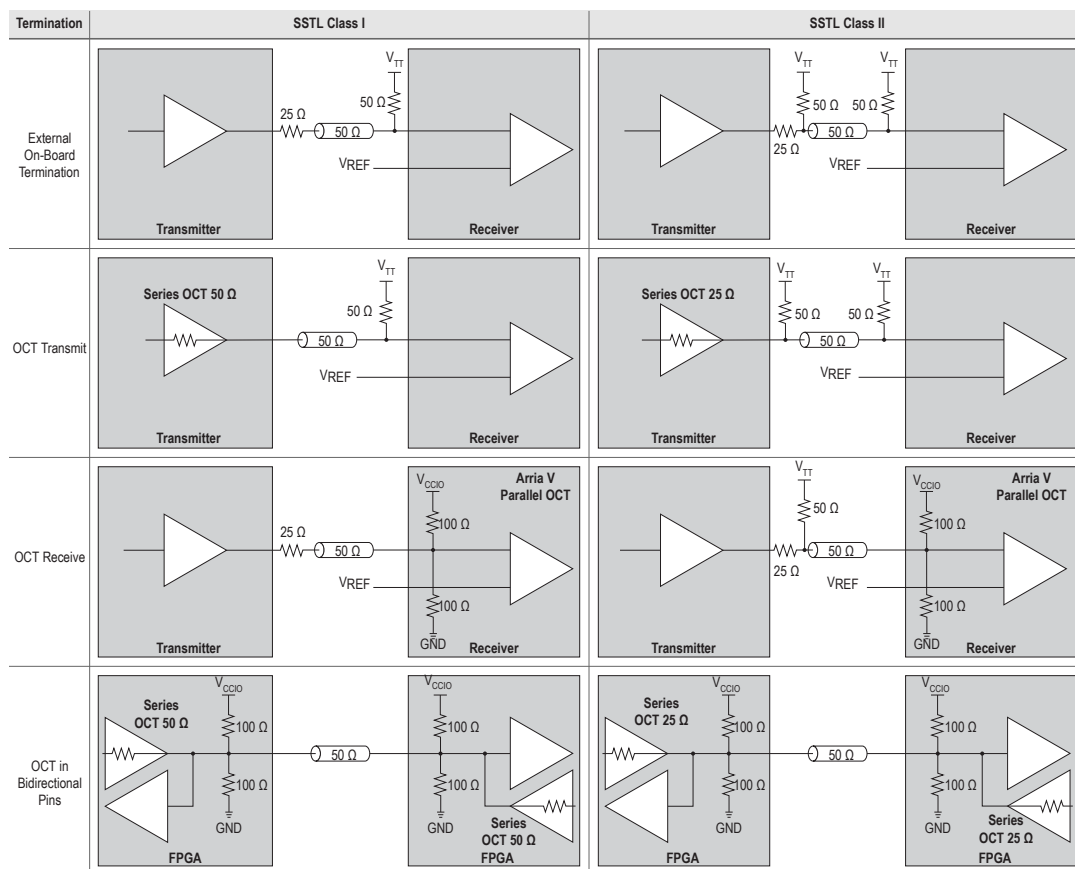


Figure 5-16: HSTL I/O Standard Termination

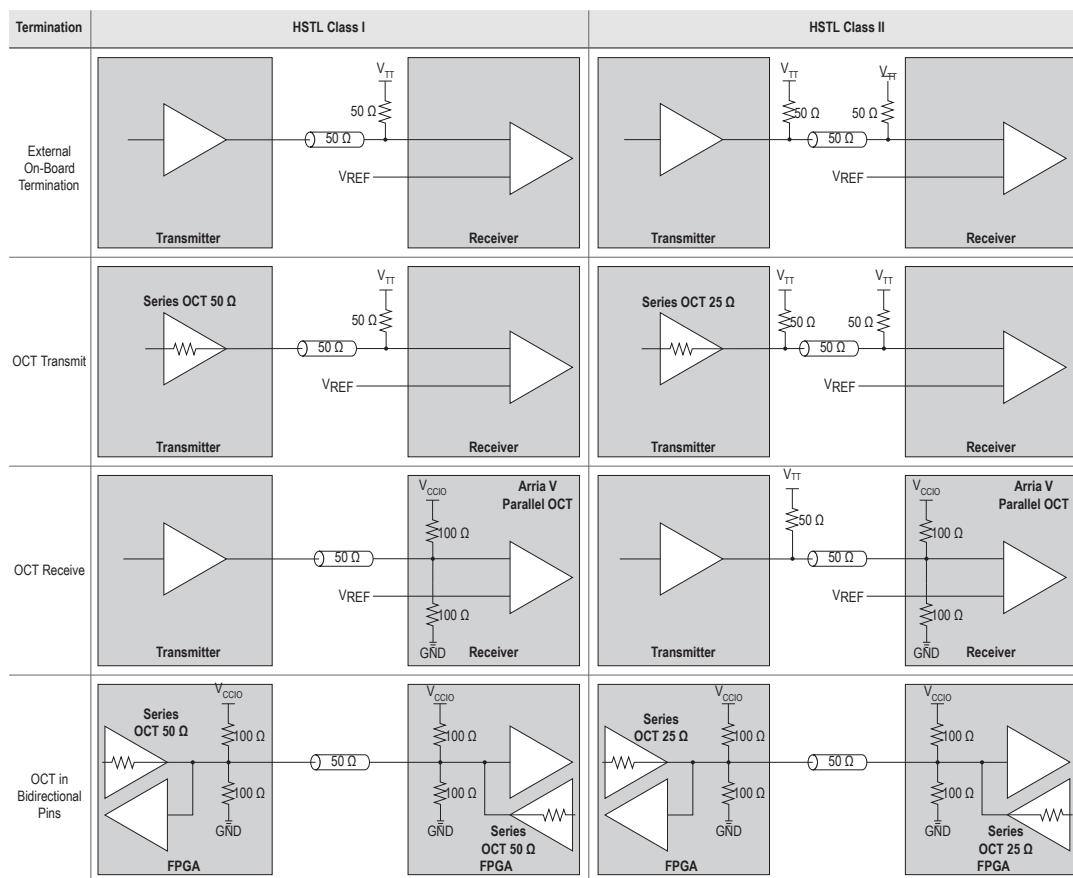This figure shows the details of HSTL I/O termination on the Arria V devices.



Differential I/O Termination

The I/O pins are organized in pairs to support differential I/O standards. Each I/O pin pair can support differential input and output buffers.

The supported I/O standards such as Differential SSTL-12, Differential SSTL-15, Differential SSTL-125, and Differential SSTL-135 typically do not require external board termination.

Altera recommends that you use dynamic OCT with these I/O standards to save board space and cost. Dynamic OCT reduces the number of external termination resistors used.


Differential HSTL, SSTL, and HSUL Termination

Differential HSTL, SSTL, and HSUL inputs use LVDS differential input buffers. However, R_D support is only available if the I/O standard is LVDS.


Differential HSTL, SSTL, and HSUL outputs are not true differential outputs. These I/O standards use two single-ended outputs with the second output programmed as inverted.

Figure 5-17: Differential SSTL I/O Standard Termination

This figure shows the details of Differential SSTL I/O termination on Arria V devices.

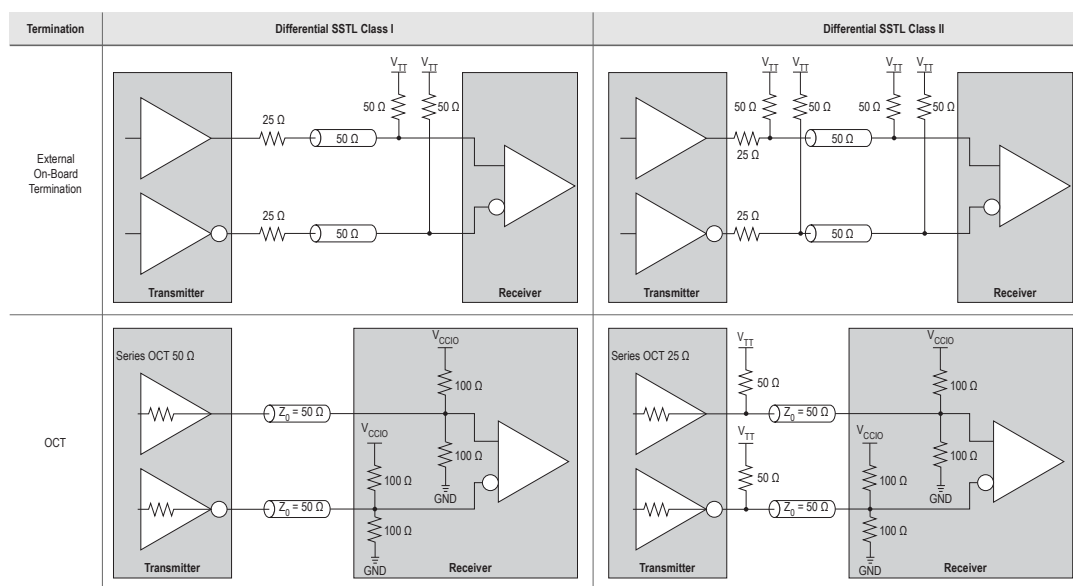**Figure 5-18: Differential HSTL I/O Standard Termination**

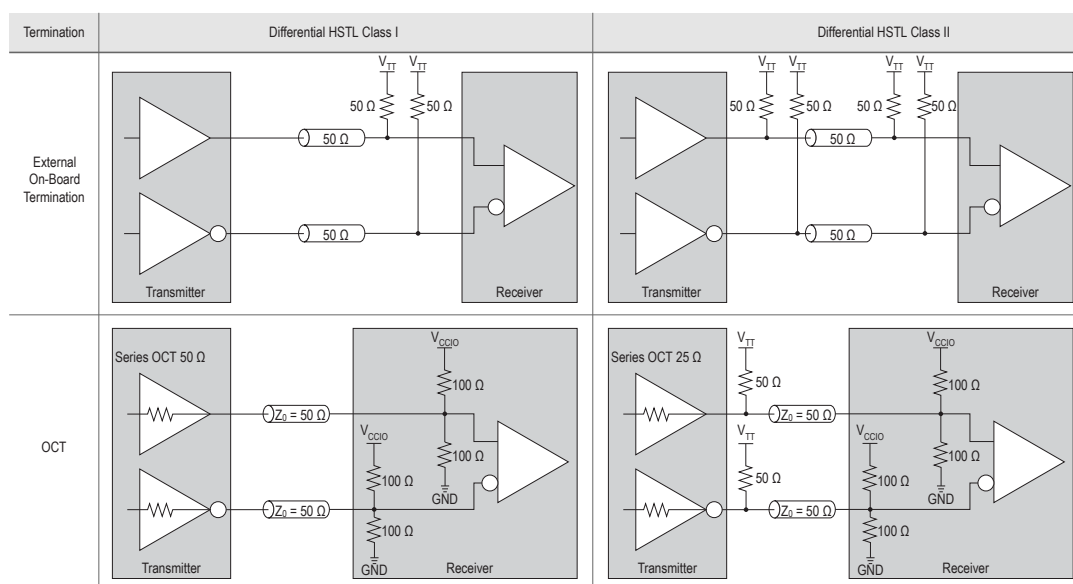This figure shows the details of Differential HSTL I/O standard termination on Arria V devices.




LVDS, RSDS, and Mini-LVDS Termination

All I/O banks have dedicated circuitry to support the true LVDS, RSDS, and mini-LVDS I/O standards by using true LVDS output buffers without resistor networks.

Figure 5-19: LVDS I/O Standard Termination

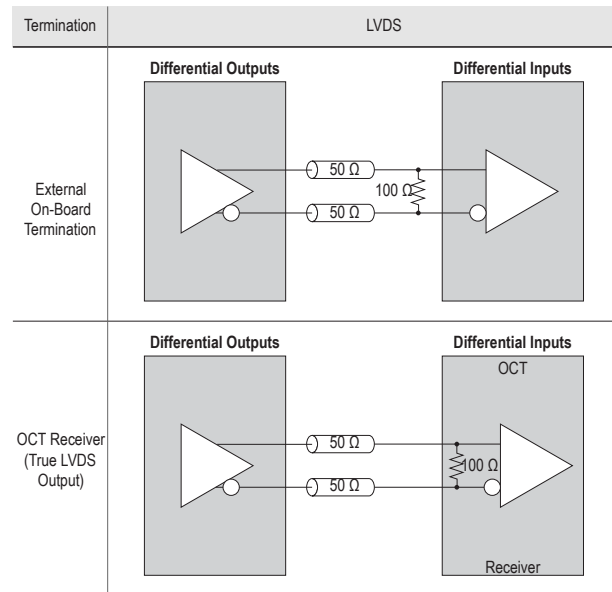This figure shows the LVDS I/O standard termination. The on-chip differential resistor is available in all I/O banks.




Emulated LVDS, RSDS, and Mini-LVDS Termination

The I/O banks also support emulated LVDS, RSDS, and mini-LVDS I/O standards.

Emulated LVDS, RSDS and mini-LVDS output buffers use two single-ended output buffers with either an external single resistor or an external three-resistor network, and can be tri-stated.

Figure 5-20: Emulated LVDS, RSDS, or Mini-LVDS I/O Standard Termination

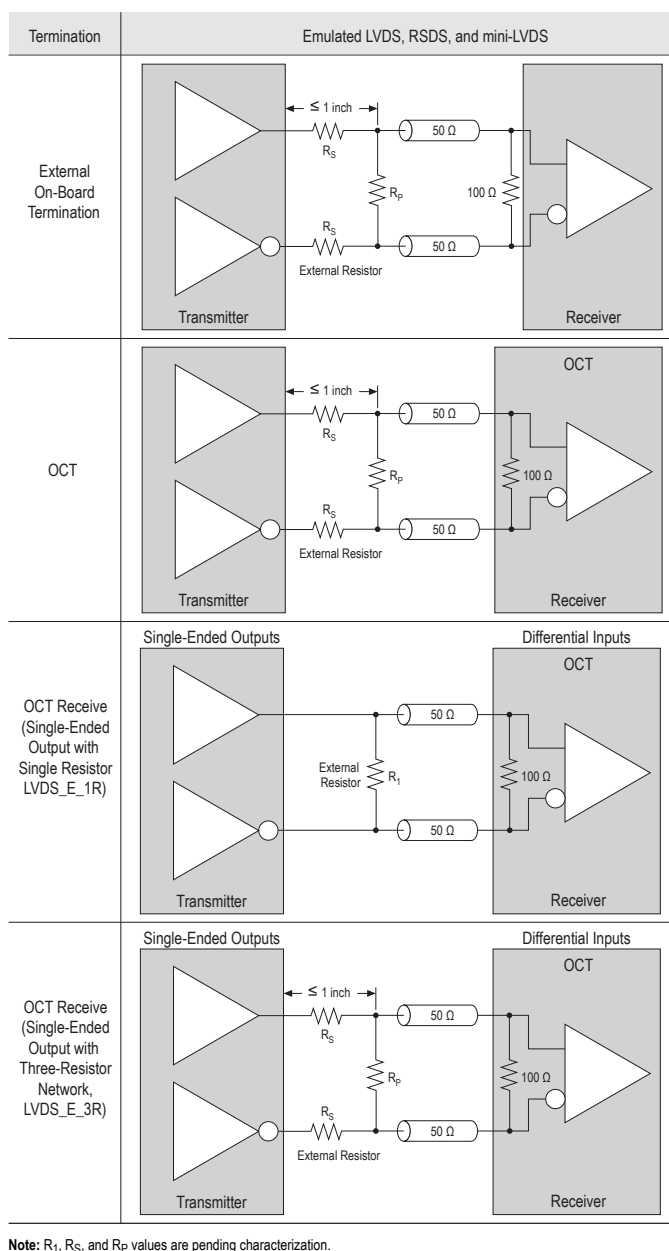The output buffers are available in all I/O banks, as shown in this figure.



Note: R_1 , R_S , and R_P values are pending characterization.

To meet the RSDS or mini-LVDS specifications, you require a resistor network to attenuate the output-voltage swing.

You can modify the three-resistor network values to reduce power or improve the noise margin. Choose resistor values that satisfy the following equation.

Figure 5-21: Resistor Network Calculation

$$\frac{R_S \times \frac{R_P}{2}}{R_S + \frac{R_P}{2}} = 50 \, \Omega$$

Note: Altera recommends that you perform additional simulations with IBIS or SPICE models to validate that the custom resistor values meet the RSDS or mini-LVDS I/O standard requirements.

For information about the data rates supported for external single resistor or three-resistor network, refer to the [Arria V Device Datasheet](#).


For more information about the RSDS I/O standard, refer to the RSDS Specification document available on the National Semiconductor web site (www.national.com).

LVPECL Termination

The Arria V devices support the LVPECL I/O standard on input clock pins only. LVPECL output operation is not supported. Use LVDS input buffers to support the LVPECL input operation.


Use AC coupling if the LVPECL common-mode voltage of the output buffer does not match the LVPECL input common-mode voltage.

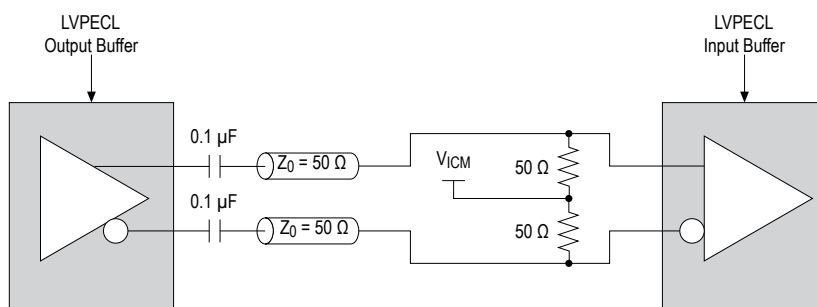Figure 5-22: LVPECL AC-Coupled Termination²⁴



Support for DC-coupled LVPECL is available if the LVPECL output common mode voltage is within the Arria V LVPECL input buffer specification.

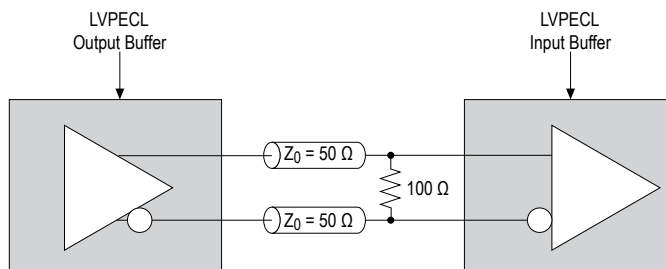Figure 5-23: LVPECL DC-Coupled Termination²⁴



For information about the V_{ICM} specification, refer to the [Arria V Device Datasheet](#).

²⁴ The LVPECL AC/DC-coupled termination is applicable only when you use an Altera® FPGA transmitter.

Document Revision History

Date	Version	Changes
November 2012	2012.11.19	• Reorganized content and updated template. • Added the I/O resources per package and I/O vertical migration sections for easy reference. • Added the steps to verify pin migration compatibility using the Quartus II software. • Updated the I/O standards support table with Arria V GZ and HPS I/O information. • Updated the guideline about mixing voltage-referenced and non-voltage-referenced I/O standards to include Arria V GZ information. • Updated the guideline about observing device absolute maximum rating for 3.3 V interfacing, specifically the off-chip clamping diode usage for Arria V GZ. • Updated the VREF pin restrictions guideline to specify that it applies only to Arria V GX, GT, SX, and ST, but not Arria V GZ. • Added the I/O bank locations for Arria V GZ devices. • Rearranged the I/O banks groups tables for easier reference. • Added modular I/O banks for Arria V GZ devices. • Restructured the information in the topic about I/O buffers and registers to improve clarity and for faster reference. • Added Arria V GZ and HPS information to the topic on programmable IOE features. • Rearranged the tables about on-chip I/O termination for clarity and topic-based reference. • Added Arria V GZ OCT information to all on-chip I/O termination tables. • Added all I/O standards and external termination schemes supported by all Arria V devices to the external I/O termination table.
June 2012	2.0	• Updated for the Quartus II software v12.0 release: • Restructured chapter. • Added “Design Considerations”, “VCCIO Restriction”, “LVDS Channels”, “Modular I/O Banks”, and “OCT Calibration Block” sections. • Added Figure 5–1, Figure 5–2, and Figure 5–3 • Updated Table 5–1, Table 5–6, and Table 5–8. • Updated Figure 5–19 with emulated LVDS with external single resistor.
February 2012	1.2	Updated Table 5–3.
November 2011	1.1	• Restructured chapter. • Updated Table 5–3.

Date	Version	Changes
May 2011	1.0	Initial release.

High-Speed Differential I/O Interfaces and DPA in Arria V Devices

6

2012.11.19

AV-52006


 [Subscribe](#)

 [Feedback](#)

The high-speed differential I/O interfaces and DPA features in Arria V devices provide advantages over single-ended I/Os and contribute to the achievable overall system bandwidth. Arria V devices support the LVDS, Mini-LVDS, and reduced swing differential signaling (RSDS) differential I/O standards.

The following figure shows the I/O bank support for high-speed differential I/O in the Arria V devices.

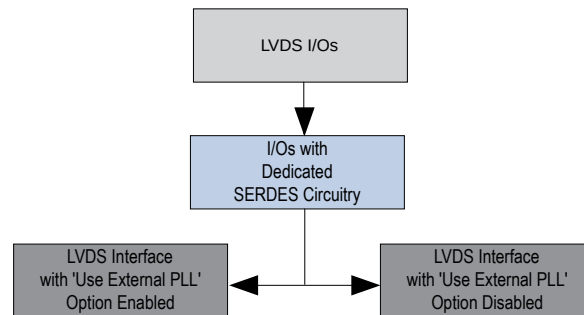Figure 6-1: I/O Bank Support for High-Speed Differential I/O



For information about the supported differential I/O standards, refer to the [I/O Features in Arria V Devices](#) chapter.

Dedicated High-Speed Circuitries in Arria V Devices

The following dedicated circuitries are available in the Arria V device family to support high-speed differential I/O:

- Differential I/O buffer
- Transmitter serializer
- Receiver deserializer
- Data realignment
- DPA
- Synchronizer (FIFO buffer)
- Phase-locked loops (PLLs)

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered

SERDES and DPA Bank Locations in Arria V Devices

The dedicated serializer/deserializer (SERDES) and DPA circuitry that supports high-speed differential I/Os is located in the top and bottom banks of the Arria V devices.

The following figures show the high-level location of SERDES/DPA in the Arria V devices.

Figure 6-2: High-Speed Differential I/Os with DPA Locations in Arria V GX A1 and A3 Devices, and Arria V GT C3 Device.

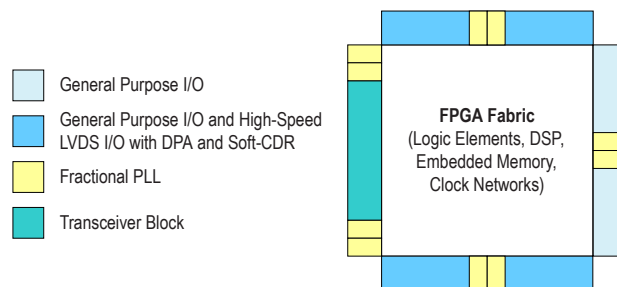


Figure 6-3: High-Speed Differential I/Os with DPA Locations in Arria V GX A5, A7, B1, and B3 Devices, and Arria V GT C7, D3, and D7 Devices

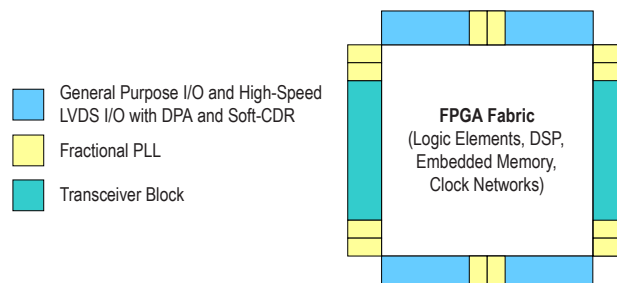


Figure 6-4: High-Speed Differential I/Os with DPA Locations in Arria V GX B5 and B7 Devices


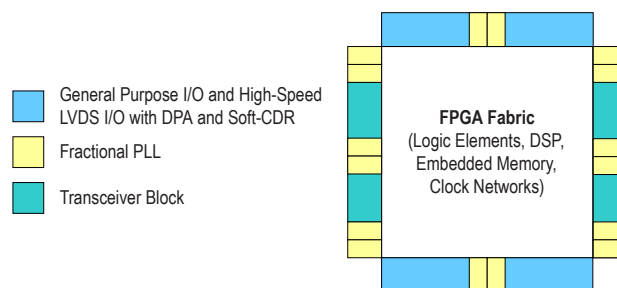


Figure 6-5: High-Speed Differential I/Os with DPA Locations in Arria V GZ Devices

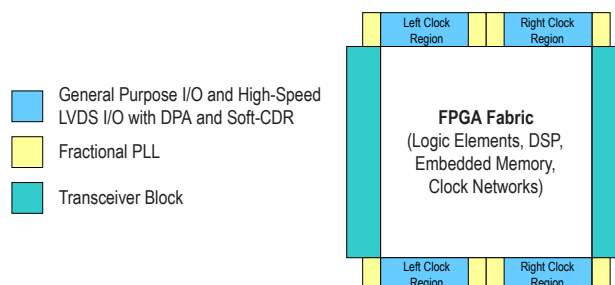


LVDS SERDES Circuitry

The Arria V devices have built-in serializer/deserializer (SERDES) circuitry that supports high-speed LVDS interfaces at data rates of up to 1.6 Gbps. You can configure the SERDES circuitry to support source-synchronous communication protocols such as RapidIO[®], XSBI, serial peripheral interface (SPI), and asynchronous protocols such as Gigabit Ethernet (GbE).

The following figure shows a transmitter and receiver block diagram for the LVDS SERDES circuitry with the interface signals of the transmitter and receiver datapaths.

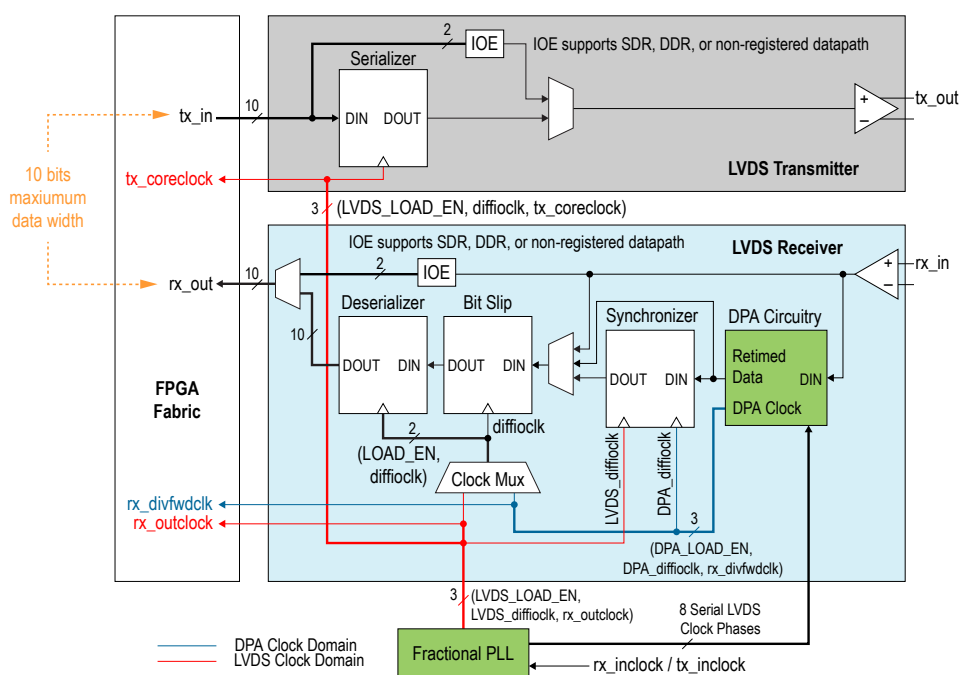Figure 6-6: LVDS SERDES



The preceding figure shows a shared PLL between the transmitter and receiver. If the transmitter and receiver do not share the same PLL, you require two fractional PLLs. In single data rate (SDR) and double data rate (DDR) modes, the data width is 1 and 2 bits, respectively.

The ALTLVDS transmitter and receiver requires various clock and load enable signals from a fractional PLL. The Quartus II software configures the PLL settings automatically. The software is also responsible for generating the various clock and load enable signals based on the input reference clock and selected data rate.

For a list of the LVDS transmitter and receiver ports and settings using ALTLVDS, refer to the [LVDS SERDES Transmitter/Receiver \(ALTLVDS_TX and ALTLVDS_RX\) Megafunction User Guide](#).

True LVDS Buffers in Arria V Devices

The following tables list the number of true LVDS buffers supported in Arria V devices with these conditions:

- The LVDS channel count does not include dedicated clock pins.
- Dedicated SERDES and DPA is available for top and bottom banks only.
- Each I/O sub-bank can support up to two independent ALTLVDS interfaces. For example, you can place two ALTLVDS interfaces in bank 8A driven by two different PLLs, provided that the LVDS channels are not interleaved.
- You can use unutilized true LVDS TX and RX buffer pairs as emulated LVDS output buffers (eTX).

Table 6-1: LVDS Channels Supported in Arria V GX Devices

Member Code	Package	Side	TX	RX
A1 and A3 ²⁵	672-pin FineLine BGA, Flip Chip	Top	28	34
		Bottom	29	34
	896-pin FineLine BGA, Flip Chip	Top	33	40
		Bottom	34	40
A5 and A7	672-pin FineLine BGA, Flip Chip	Top	34	44
		Bottom	34	44
	896-pin FineLine BGA, Flip Chip	Top	42	48
		Bottom	42	48
	1152-pin FineLine BGA, Flip Chip	Top	60	68
		Bottom	60	68
B1 and B3	896-pin FineLine BGA, Flip Chip	Top	42	48
		Bottom	42	48
	1152-pin FineLine BGA, Flip Chip	Top	60	68
		Bottom	60	68
	1517-pin FineLine BGA, Flip Chip	Top	80	88
		Bottom	80	88
B5 and B7	1152-pin FineLine BGA, Flip Chip	Top	60	68
		Bottom	60	68
	1517-pin FineLine BGA, Flip Chip	Top	80	88
		Bottom	80	88

²⁵ In these devices, the right side I/O banks do not contain true LVDS output buffer. However, emulated LVDS output buffer (eTX) is supported.

Table 6-2: LVDS Channels Supported in Arria V GT Devices

Member Code	Package	Side	TX	RX
C3	672-pin FineLine BGA, Flip Chip	Top	26	34
		Bottom	26	34
	896-pin FineLine BGA, Flip Chip	Top	34	40
		Bottom	34	40
C7	896-pin FineLine BGA, Flip Chip	Top	42	48
		Bottom	42	48
	1152-pin FineLine BGA, Flip Chip	Top	60	68
		Bottom	60	68
D3	896-pin FineLine BGA, Flip Chip	Top	42	48
		Bottom	42	48
	1152-pin FineLine BGA, Flip Chip	Top	60	68
		Bottom	60	68
	1517-pin FineLine BGA, Flip Chip	Top	80	88
		Bottom	80	88
D7	1152-pin FineLine BGA, Flip Chip	Top	60	68
		Bottom	60	68
	1517-pin FineLine BGA, Flip Chip	Top	80	88
		Bottom	80	88

Table 6-3: LVDS Channels Supported in Arria V GZ Devices

Member Code	Package	Side	TX	RX
E1 and E3	780-pin FineLine BGA, Flip Chip	Top	42	51
		Bottom	39	39
	1152-pin FineLine BGA, Flip Chip	Top	48	57
		Bottom	51	51
E5 and E7	1152-pin FineLine BGA, Flip Chip	Top	54	63
		Bottom	75	75
	1517-pin FineLine BGA, Flip Chip	Top	80	82
		Bottom	87	87

Table 6-4: LVDS Channels Supported in Arria V SX Devices

Member Code	Package	Side	TX	RX
B3 and B5	896-pin FineLine BGA, Flip Chip	Top	42	48
		Bottom	42	48
	1152-pin FineLine BGA, Flip Chip	Top	60	68
		Bottom	60	68
	1517-pin FineLine BGA, Flip Chip	Top	80	88
		Bottom	80	88

Table 6-5: LVDS Channels Supported in Arria V ST Devices

Member Code	Package	Side	TX	RX
D3 and D5	896-pin FineLine BGA, Flip Chip	Top	42	48
		Bottom	42	48
	1152-pin FineLine BGA, Flip Chip	Top	60	68
		Bottom	60	68
	1517-pin FineLine BGA, Flip Chip	Top	80	88
		Bottom	80	88

High-Speed I/O Design Guidelines for Arria V Devices

There are several considerations that require your attention to ensure the success of your designs. Unless noted otherwise, these design guidelines apply to all variants of this device family.

For information about the PLL locations available for each Arria V device, refer to [SERDES and DPA Bank Locations in Arria V Devices](#) on page 2.

PLLs and Clocking for Arria V Devices

To generate the parallel clocks (`rx_outclock` and `tx_outclock`) and high-speed clocks (`diffiocl`), the Arria V devices provide fractional PLLs in the high-speed differential I/O receiver and transmitter channels. For the locations of the fractional PLLs, refer to [SERDES and DPA Bank Locations in Arria V Devices](#) on page 2.

Guideline: Use PLLs in Integer PLL Mode for LVDS

To drive the LVDS channels, you must use the PLLs in integer PLL mode. The center or corner PLLs can drive the LVDS receiver and driver channels. However, the clock tree network cannot cross over to different I/O regions. For example, the top left corner PLL cannot cross over to drive the LVDS receiver and driver channels on the top right I/O bank.

For more information about the fractional PLL clocking restrictions, refer to [Pin Placement Guidelines for DPA and Non-DPA Differential Channels](#) on page 10.

Guideline: Use High-Speed Clock from PLL to Clock LVDS SERDES Only

The high-speed clock generated from the PLL is intended to clock the LVDS SERDES circuitry only. Do not use the high-speed clock to drive other logic because the allowed frequency to drive the core logic is restricted by the PLL F_{OUT} specification.

For more information about the F_{OUT} specification, refer to the [Arria V Device Datasheet](#).

LVDS Interface with External PLL Mode

The MegaWizard Plug-In Manager provides an option for implementing the LVDS interface with the **Use External PLL** option. With this option enabled you can control the PLL settings, such as dynamically reconfiguring the PLL to support different data rates, dynamic phase shift, and other settings. You also must instantiate the appropriate megafunction to generate the various clock and load enable signals.

If you enable the **Use External PLL** option with the ALTLVDS transmitter and receiver, the following signals are required from the Altera_PLL megafunction:

- Serial clock input to the SERDES of the ALTLVDS transmitter and receiver
- Load enable to the SERDES of the ALTLVDS transmitter and receiver
- Parallel clock used to clock the transmitter FPGA fabric logic and parallel clock used for the receiver rx_synclock port and receiver FPGA fabric logic
- Asynchronous PLL reset port of the ALTLVDS receiver

Altera_PLL Signal Interface with ALTLVDS Megafunction

The following table lists the signal interface between the output ports of the Altera_PLL megafunction and the input ports of the ALTLVDS transmitter and receiver.

Table 6-6: Signal Interface Between Altera_PLL and ALTLVDS Megafunctions

From the Altera_PLL Megafunction	To the ALTLVDS Transmitter	To the ALTLVDS Receiver
Serial clock output (outclk0) The serial clock output (outclk0) can only drive tx_inclock on the ALTLVDS transmitter, and rx_inclock and rx_dpaclock on the ALTLVDS receiver. This clock cannot drive the core logic.	tx_inclock (serial clock input to the transmitter)	rx_inclock (serial clock input) rx_dpaclock
Load enable output (outclk1)	tx_enable (load enable to the transmitter)	rx_enable (load enable for the deserializer)
Parallel clock output (outclk2)	Parallel clock used inside the transmitter core logic in the FPGA fabric	rx_synclock (parallel clock input) and parallel clock used inside the receiver core logic in the FPGA fabric

From the Altera_PLL Megafunction	To the ALTLVDS Transmitter	To the ALTLVDS Receiver
~(locked)	—	pll_areset (asynchronous PLL reset port) The pll_areset signal is automatically enabled for the LVDS receiver in external PLL mode. This signal does not exist for LVDS transmitter instantiation when the external PLL option is enabled.

As an example, the table lists the serial clock output, load enable output, and parallel clock output generated on ports outclk0, outclk1, and outclk2, along with the locked signal of the Altera_PLL instance. You can choose any of the PLL output clock ports to generate the interface clocks.

Altera_PLL Parameter Values for External PLL Mode

The following examples show the clocking requirements to generate output clocks for ALTLVDS_TX and ALTLVDS_RX using the Altera_PLL megafunction. The examples set the phase shift with the assumption that the clock and data are edge aligned at the pins of the device.

Note: For other clock and data phase relationships, Altera recommends that you first instantiate your ALTLVDS_RX and ALTLVDS_TX interface without using the external PLL mode option. Compile the megafunctions in the Quartus II software and take note of the frequency, phase shift, and duty cycle settings for each clock output. Enter these settings in the Altera_PLL megafunction parameter editor and then connect the appropriate output to the ALTLVDS_RX and ALTLVDS_TX megafunctions.

Example: Generating Output Clocks Using an Altera_PLL Megafunction (No DPA and Soft-CDR Mode)

The following table lists the parameter values that you can set in the Altera_PLL parameter editor to generate three output clocks using an Altera_PLL megafunction if you are not using DPA and soft-CDR mode.

Table 6-7: Altera_PLL Parameter Values to Generate Three Output Clocks (No DPA and Soft-CDR)

Parameter	outclk0 (Connects to the tx_in-clock port of ALTLVDS_TX and the rx_inclock port of ALTLVDS_RX)	outclk1 (Connects to the tx_enable port of ALTLVDS_TX and the rx_enable port of ALTLVDS_RX)	outclk2 (Used as the core clock for the parallel data registers for both transmitter and receiver, and connects to the rx_syn-clock port of ALTLVDS_RX)
Frequency	data rate	data rate/serialization factor	data rate/serialization factor
Phase shift	–180°	$[(\text{deserialization factor} - 2) / \text{deserialization factor}] \times 360^\circ$	–180/serialization factor (outclk0 phase shift divided by the serialization factor)
Duty cycle	50%	100/serialization factor	50%

Example: Generating Output Clocks Using an Altera_PLL Megafunction (With DPA and Soft-CDR Mode)

The following table lists the parameter values that you can set in the Altera_PLL parameter editor to generate four output clocks using an Altera_PLL megafunction if you are using DPA and soft-CDR mode.

Table 6-8: Altera_PLL Parameter Values to Generate Four Output Clocks (With DPA and Soft-CDR)

Parameter	outclk0 (Connects to the tx_inclock port of ALTLVDS_TX and the rx_inclock port of ALTLVDS_RX)	outclk1 (Connects to the tx_enable port of ALTLVDS_TX and the rx_enable port of ALTLVDS_RX)	outclk2 (Used as the core clock for the parallel data registers for both transmitter and receiver, and connects to the rx_synclock port of ALTLVDS_RX)	outclk3 (Connects to the rx_dpaclock port of ALTLVDS_RX)
Frequency	data rate	data rate/serialization factor	data rate/serialization factor	data rate
Phase shift	-180°	$[(\text{deserialization factor} - 2) / \text{deserialization factor}] \times 360^\circ$	-180/serialization factor (outclk0 phase shift divided by the serialization factor)	-180°
Duty cycle	50%	100/serialization factor	50%	50%

The locked output port of Altera_PLL must be inverted and connected to the pll_aset port of the ALTLVDS_RX megafunction if you are using DPA and soft-CDR mode.

Connection between Altera_PLL and ALTLVDS

Figure 6-7: LVDS Interface with the Altera_PLL Megafunction (Without DPA and Soft-CDR Mode)

This figure shows the connections between the Altera_PLL and ALTLVDS megafunction if you are not using DPA and soft-CDR mode. Instantiation of pll_aset is optional.


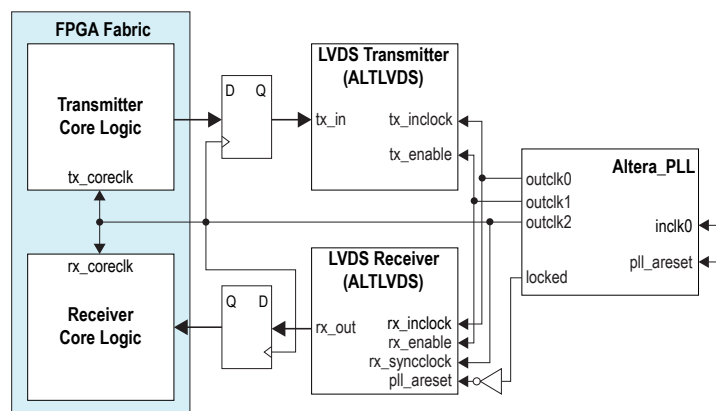
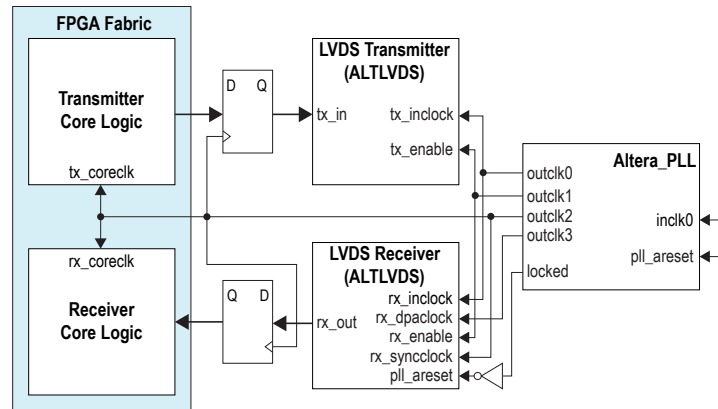


Figure 6-8: LVDS Interface with the Altera_PLL Megafunction (With DPA)

This figure shows the connections between the Altera_PLL and ALTLVDS megafunction if you are using DPA. The `locked` output port must be inverted and connected to the `pll_areset` port.

**Figure 6-9: LVDS Interface with the Altera_PLL Megafunction (With Soft-CDR Mode)**

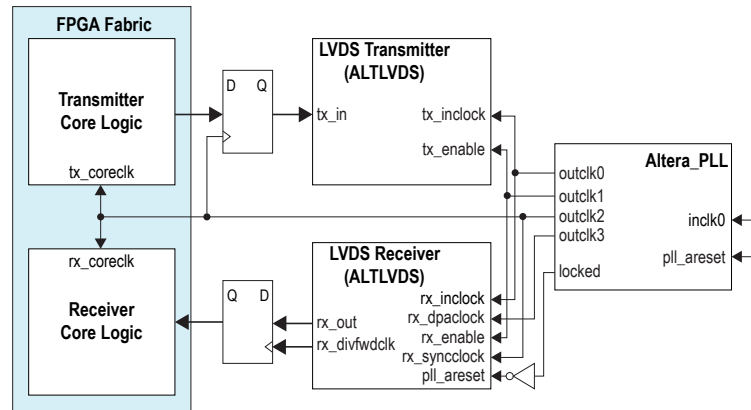This figure shows the connections between the Altera_PLL and ALTLVDS megafunction if you are using soft-CDR mode. The `locked` output port must be inverted and connected to the `pll_areset` port.



When generating the Altera_PLL megafunction, the **Left/Right PLL** option is configured to set up the PLL in LVDS mode.

The `rx_syncclock` port is automatically enabled in an LVDS receiver in external PLL mode. The Quartus II compiler output error messages if this port is not connected as shown in the preceding figures.

Pin Placement Guidelines for DPA and Non-DPA Differential Channels

DPA usage adds some constraints on the placement of high-speed differential channels. If DPA-enabled or DPA-disabled differential channels²⁶ in the differential banks are used, you must adhere to the differential pin placement guidelines to ensure the proper high-speed operation. The Quartus II compiler automatically checks the design and issues an error message if the guidelines are not followed.

²⁶ DPA-enabled differential channels refer to DPA mode or soft-CDR mode while DPA disabled channels refer to non-DPA mode.

Note: The figures in this section show guidelines for using corner and center PLLs but do not necessarily represent the exact locations of the high-speed LVDS I/O banks.

Guideline: Using DPA-Enabled Differential Channels

Each differential receiver in an I/O block has a dedicated DPA circuit to align the phase of the clock to the data phase of its associated channel. If you enable a DPA channel in a bank, you can use both single-ended I/Os and differential I/O standards in the bank.


You can place double data rate I/O (DDIO) output pins within I/O modules that have the same pad group number as a SERDES differential channel. However, you cannot place SDR I/O output pins within I/O modules that have the same pad group number as a receiver SERDES differential channel. You must implement the input register within the FPGA fabric logic.

If you use DPA-enabled channels in differential banks, adhere to the following guidelines.

Using Center and Corner PLLs

If two PLLs drive the DPA-enabled channels in a bank—the corner and center PLL drive one group each—there must be at least one row of separation between the two groups of DPA-enabled channels, as shown in the following figure.

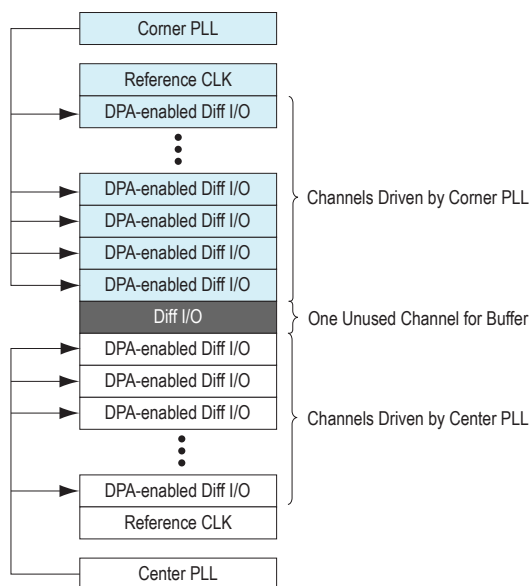Figure 6-10: Center and Corner PLLs Driving DPA-enabled Differential I/Os in the Same Bank



This separation prevents noise mixing because the two groups can operate at independent frequencies. No separation is necessary if a single PLL is driving both the DPA-enabled channels and DPA-disabled channels.

Using Both Center PLLs

You can use center PLLs to drive DPA-enabled channels simultaneously, if they drive these channels in their adjacent banks only, as shown in the previous figure. If one of the center PLLs drives the DPA-enabled channels in the upper and lower I/O banks, you cannot use the other center PLL for DPA-enabled channels. If the upper center PLL drives the DPA-enabled channels in the lower I/O bank, the lower center PLL cannot drive the DPA-enabled channels in the upper I/O bank, and vice versa. The center PLLs cannot drive cross-banks simultaneously. Refer to the following figures.

Figure 6-11: Center PLLs Driving DPA-enabled Differential I/Os


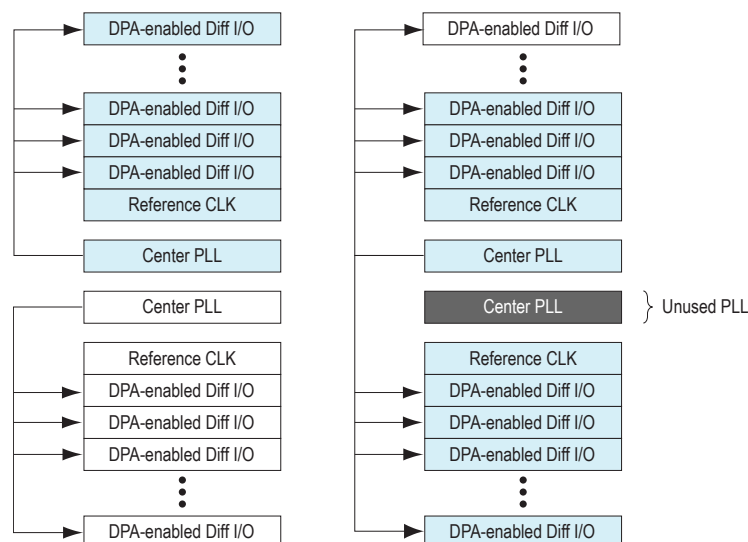


Figure 6-12: Invalid Placement of DPA-enabled Differential I/Os Driven by Both Center PLLs

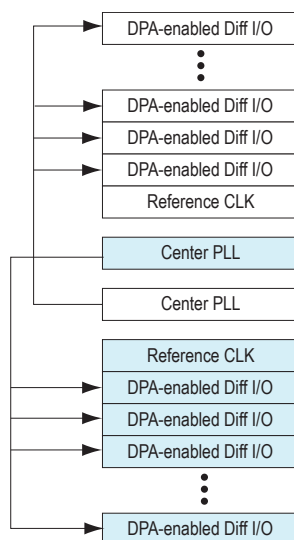


Using Both Corner PLLs

You can use both corner PLLs to drive DPA-enabled channels simultaneously, if they drive the channels in their adjacent banks only. There must be at least one row of separation between the two groups of DPA-enabled channels.

If one of the corner PLLs drives DPA-enabled channels in the upper and lower I/O banks, you cannot use the center PLLs. You can use the other corner PLL to drive DPA-enabled channels in their adjacent bank only. There must be at least one row of separation between the two groups of DPA-enabled channels.

If the upper corner PLL drives DPA-enabled channels in the lower I/O bank, the lower corner PLL cannot drive DPA-enabled channels in the upper I/O bank, and vice versa. In other words, the corner PLLs cannot drive cross-banks simultaneously, as shown in the following figure.

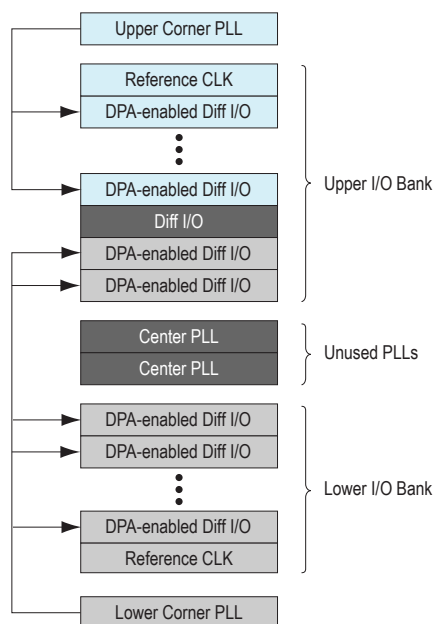Figure 6-13: Corner PLLs Driving DPA-enabled Differential I/Os

DPA Restrictions for Arria V GZ Devices

Because there is only a single DPA clock bus, a PLL drives a continuous series of DPA channels.

To prevent noise mixing, use one row of separation between two groups of DPA channels. The two PLLs operate using different reference clocks (same base frequency with PPM differences or an entirely different frequencies).

Guideline: Using DPA-Disabled Differential Channels



If you use DPA-disabled channels, adhere to the following guidelines.

DPA-Disabled Channel Driving Distance

Each PLL can drive all the DPA-disabled channels in the entire bank.


Using Corner and Center PLLs

You can use a corner PLL to drive all transmitter channels and a center PLL to drive all DPA-disabled receiver channels in the same I/O bank. You can drive a transmitter channel and a receiver channel in the same LAB row by two different PLLs. A corner PLL and a center PLL can drive duplex channels in the same I/O bank if the channels that are driven by each PLL are not interleaved. You do not require separation between the group of channels that are driven by the corner and center, left and right PLLs. Refer to the following figures.

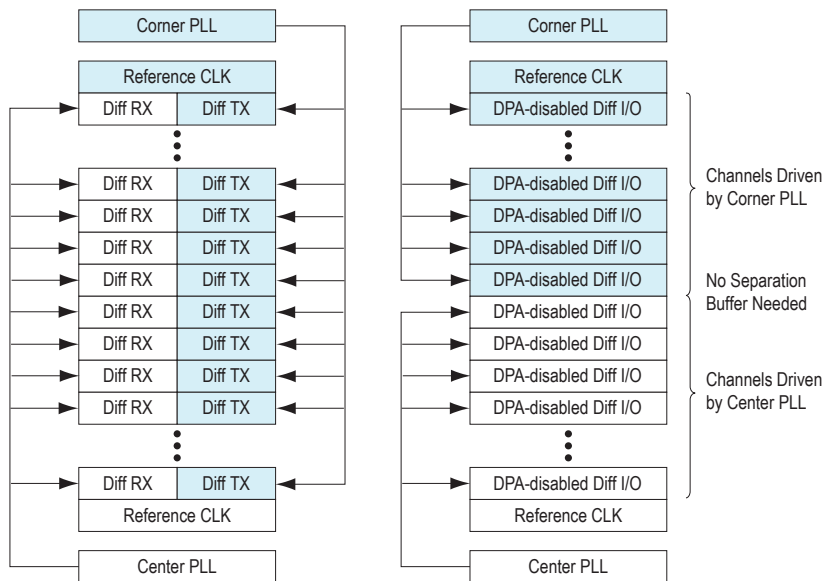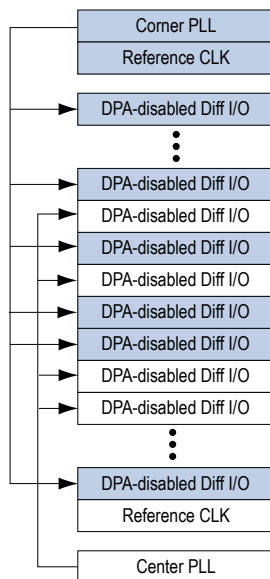Figure 6-14: Corner and Center PLLs Driving DPA-Disabled Differential I/Os in the Same Bank**Figure 6-15: Invalid Placement of DPA-disabled Differential I/Os Due to Interleaving of Channels Driven by the Corner and Center PLLs**

Using Both Center PLLs

You can use both center PLLs simultaneously to drive DPA-disabled channels on upper and lower I/O banks. Unlike DPA-enabled channels, the center PLLs can drive DPA-disabled channels cross-banks. For example, the upper center PLL can drive the lower I/O bank at the same time the lower center PLL is driving the upper I/O bank, and vice versa, as shown in the following figure.

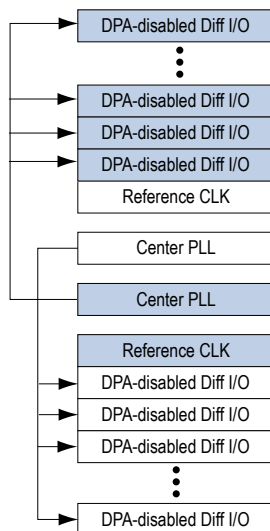Figure 6-16: Both Center PLLs Driving Cross-Bank DPA-Disabled Channels Simultaneously

Using Both Corner PLLs

You can use both corner PLLs to drive DPA-disabled channels simultaneously. You can use a corner PLL to drive all the transmitter channels and the other corner PLL to drive all the DPA-disabled receiver channels in the same I/O bank. Both corner PLLs can drive duplex channels in the same I/O bank if the channels that are driven by each PLL are not interleaved. You do not require separation between the groups of channels that are driven by both corner PLLs.

Differential Transmitter in Arria V Devices

The Arria V transmitter contains dedicated circuitry to support LVDS signaling. The differential transmitter buffers support the following features:

- LVDS signaling that can drive out LVDS, mini-LVDS, and RSDS signals
- Programmable V_{OD} and programmable pre-emphasis


Transmitter Blocks

The dedicated circuitry consists of a true differential buffer, a serializer, and fractional PLLs that you can share between the transmitter and receiver. The serializer takes up to 10 bits wide parallel data from the FPGA fabric, clocks it into the load registers, and serializes it using shift registers that are clocked by the fractional PLL before sending the data to the differential buffer. The MSB of the parallel data is transmitted first.

Note: To drive the LVDS channels, you must use the PLLs in integer PLL mode.

The following figure shows a block diagram of the transmitter. In SDR and DDR modes, the data width is 1 and 2 bits, respectively.

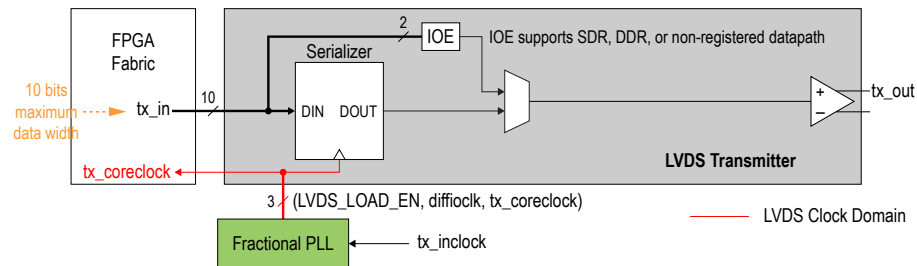Figure 6-17: LVDS Transmitter



Transmitter Clocking

The fractional PLL generates the load enable (`LVDS_LOAD_EN`) signal and the `diffioclk` signal (the clock running at serial data rate) that clocks the load and shift registers. You can statically set the serialization factor to x3, x4, x5, x6, x7, x8, x9, or x10 using the Quartus® II software. The load enable signal is derived from the serialization factor setting.

You can configure any Arria V transmitter data channel to generate a source-synchronous transmitter clock output. This flexibility allows the placement of the output clock near the data outputs to simplify board layout and reduce clock-to-data skew.

Different applications often require specific clock-to-data alignments or specific data-rate-to-clock-rate factors. You can specify these settings statically in the Quartus II MegaWizard™ Plug-In Manager:


The transmitter can output a clock signal at the same rate as the data—with a maximum output clock frequency that each speed grade of the device supports.

You can divide the output clock by a factor of 1, 2, 4, 6, 8, or 10, depending on the serialization factor.

You can set the phase of the clock in relation to the data at 0° or 180° (edge- or center-aligned). The fractional PLLs provide additional support for other phase shifts in 45° increments.

The following figure shows the transmitter in clock output mode. In clock output mode, you can use an LVDS channel as a clock output channel.

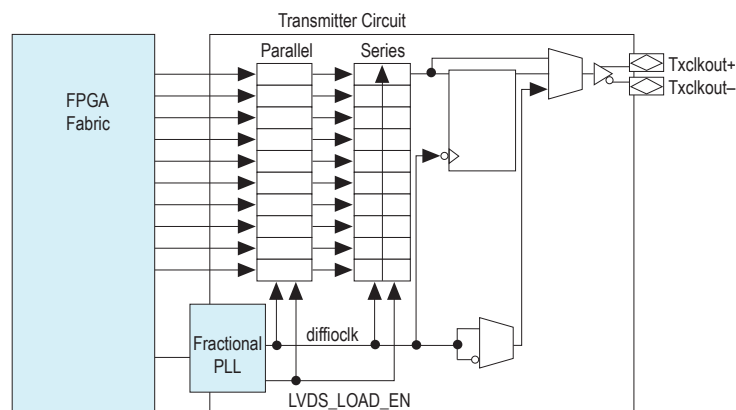Figure 6-18: Transmitter in Clock Output Mode



Field	Assignment
Assignment name	Programmable Differential Output Voltage (V_{OD})
Allowed values	- Arria V GX, GT, SX, and ST—0 (low), 1 (medium—default), 2 (high) - Arria V GZ—0 (low), 1 (medium low—default), 2 (medium high), 3 (high)

Programmable Pre-Emphasis

The V_{OD} setting and the output impedance of the driver set the output current limit of a high-speed transmission signal. At a high frequency, the slew rate may not be fast enough to reach the full V_{OD} level before the next edge, producing pattern-dependent jitter. With pre-emphasis, the output current is boosted momentarily during switching to increase the output slew rate.

Pre-emphasis increases the amplitude of the high-frequency component of the output signal, and thus helps to compensate for the frequency-dependent attenuation along the transmission line. The overshoot introduced by the extra current happens only during a change of state switching to increase the output slew rate and does not ring, unlike the overshoot caused by signal reflection. The amount of pre-emphasis required depends on the attenuation of the high-frequency component along the transmission line.

Figure 6-21: Programmable Pre-Emphasis

This figure shows the LVDS output with pre-emphasis.

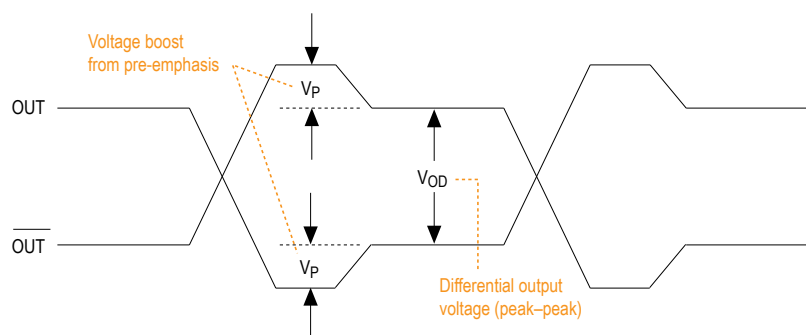


Table 6-10: Quartus II Software Assignment Editor—Programmable Pre-Emphasis

This table lists the assignment name for programmable pre-emphasis and its possible values in the Quartus II software Assignment Editor.

Field	Assignment
To	tx_out
Assignment name	Programmable Pre-emphasis
Allowed values	0 (disable) and 1 (enable)


Differential Receiver in Arria V Devices

The receiver has a differential buffer and fractional PLLs that you can share among the transmitter and receiver, a DPA block, a synchronizer, a data realignment block, and a deserializer. The differential buffer can receive LVDS, mini-LVDS, and RSDS signal levels. You can statically set the I/O standard of the receiver pins to LVDS, mini-LVDS, or RSDS in the Quartus II software Assignment Editor.

To drive the LVDS channels, you must use the PLLs in integer PLL mode.

The following figure shows the hardware blocks of the receiver. In SDR and DDR modes, the data width from the IOE is 1 and 2 bits, respectively. The deserializer includes shift registers and parallel load registers, and sends a maximum of 10 bits to the internal logic.

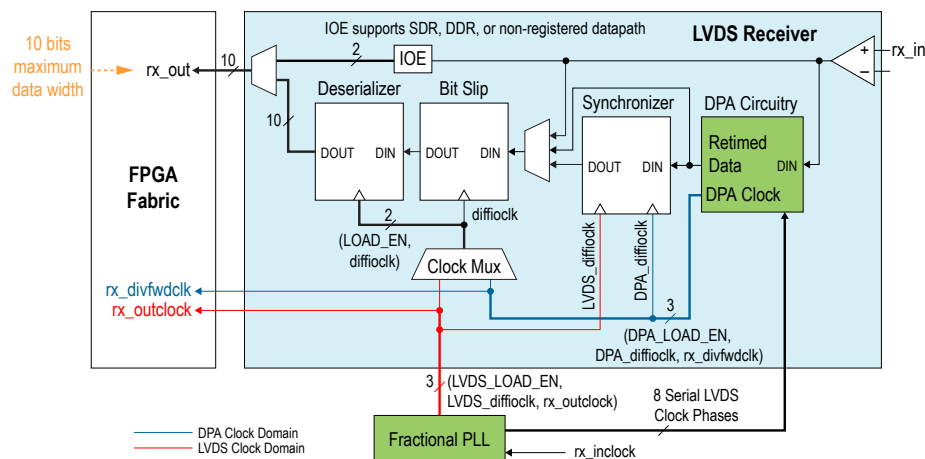Figure 6-22: Receiver Block Diagram



Receiver Blocks in Arria V Devices

The Arria V differential receiver has the following hardware blocks:


- DPA block
- Synchronizer
- Data realignment block (bit slip)
- Deserializer

DPA Block

The DPA block takes in high-speed serial data from the differential input buffer and selects one of the eight phases that the fractional PLLs generate to sample the data. The DPA chooses a phase closest to the phase of the serial data. The maximum phase offset between the received data and the selected phase is $1/8$ UI, which is the maximum quantization error of the DPA. The eight phases of the clock are equally divided, offering a 45° resolution.

The following figure shows the possible phase relationships between the DPA clocks and the incoming serial data.

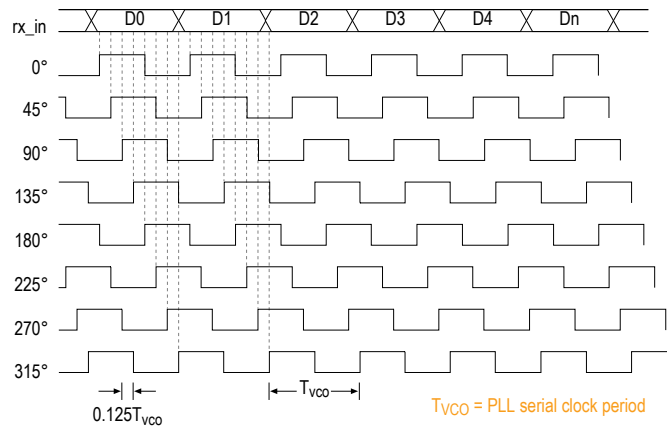Figure 6-23: DPA Clock Phase to Serial Data Timing Relationship



The DPA block continuously monitors the phase of the incoming serial data and selects a new clock phase if it is required. You can prevent the DPA from selecting a new clock phase by asserting the optional `RX_DPLL_HOLD` port, which is available for each channel.

DPA circuitry does not require a fixed training pattern to lock to the optimum phase out of the eight phases. After reset or power up, the DPA circuitry requires transitions on the received data to lock to the optimum phase. An optional output port, `RX_DPA_LOCKED`, is available to indicate an initial DPA lock condition to the optimum phase after power up or reset. This signal is not deasserted if the DPA selects a new phase out of the eight clock phases to sample the received data. Do not use the `rx_dpa_locked` signal to determine a DPA loss-of-lock condition. Use data checkers such as a cyclic redundancy check (CRC) or diagonal interleaved parity (DIP-4) to validate the data.

An independent reset port, `RX_RESET`, is available to reset the DPA circuitry. You must retrain the DPA circuitry after reset.

Note: The DPA block is bypassed in non-DPA mode.

Synchronizer

The synchronizer is a 1 bit wide and 6 bit deep FIFO buffer that compensates for the phase difference between `DPA_diffioclk`—the optimal clock that the DPA block selects—and the `LVDS_diffioclk` that the fractional PLLs produce. The synchronizer can only compensate for phase differences, not frequency differences, between the data and the receiver's input reference clock.

An optional port, `RX_FIFO_RESET`, is available to the internal logic to reset the synchronizer. The synchronizer is automatically reset when the DPA first locks to the incoming data. Altera recommends using `RX_FIFO_RESET` to reset the synchronizer when the data checker indicates corrupted, received data.

Note: The synchronizer circuit is bypassed in non-DPA and soft-CDR mode.

Data Realignment Block (Bit Slip)


Skew in the transmitted data along with skew added by the link causes channel-to-channel skew on the received serial data streams. If you enable the DPA, the received data is captured with different clock phases on each channel. This difference may cause misalignment of the received data from channel to channel. To compensate for this channel-to-channel skew and establish the correct received word boundary at each channel, each receiver channel has a dedicated data realignment circuit that realigns the data by inserting bit latencies into the serial stream.

An optional `RX_CHANNEL_DATA_ALIGN` port controls the bit insertion of each receiver independently controlled from the internal logic. The data slips one bit on the rising edge of `RX_CHANNEL_DATA_ALIGN`. The requirements for the `RX_CHANNEL_DATA_ALIGN` signal include the following items:

- The minimum pulse width is one period of the parallel clock in the logic array.
- The minimum low time between pulses is one period of the parallel clock.
- The signal is an edge-triggered signal.
- The valid data is available two parallel clock cycles after the rising edge of `RX_CHANNEL_DATA_ALIGN`.

The following figure shows receiver output (`RX_OUT`) after one bit slip pulse with the deserialization factor set to 4.

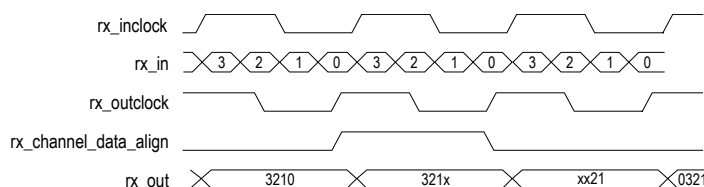
Figure 6-24: Data Realignment Timing



The data realignment circuit can have up to 11 bit-times of insertion before a rollover occurs. The programmable bit rollover point can be from 1 to 11 bit-times, independent of the deserialization factor. Set the programmable bit rollover point equal to, or greater than, the deserialization factor—allowing enough depth in the word alignment circuit to slip through a full word. You can set the value of the bit rollover point using the MegaWizard Plug-In Manager. An optional status port, `RX_CDA_MAX`, is available to the FPGA fabric from each channel to indicate the reaching of the preset rollover point.

The following figure shows a preset value of four bit-times before rollover occurs. The `rx_cda_max` signal pulses for one `rx_outclock` cycle to indicate that rollover has occurred.

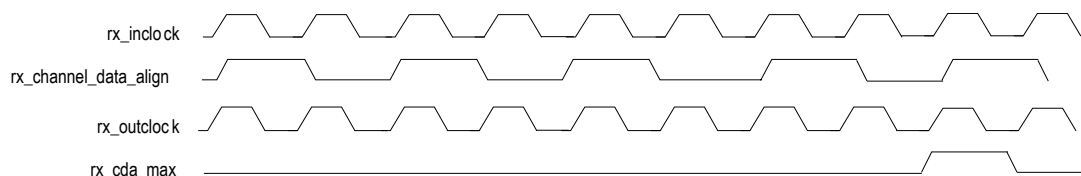
Figure 6-25: Receiver Data Realignment Rollover



Deserializer

You can statically set the deserialization factor to x3, x4, x5, x6, x7, x8, x9, or x10 by using the Quartus II software. You can bypass the deserializer in the Quartus II MegaWizard Plug-In Manager to support DDR (x2) or SDR (x1) operations, as shown in the following figure.

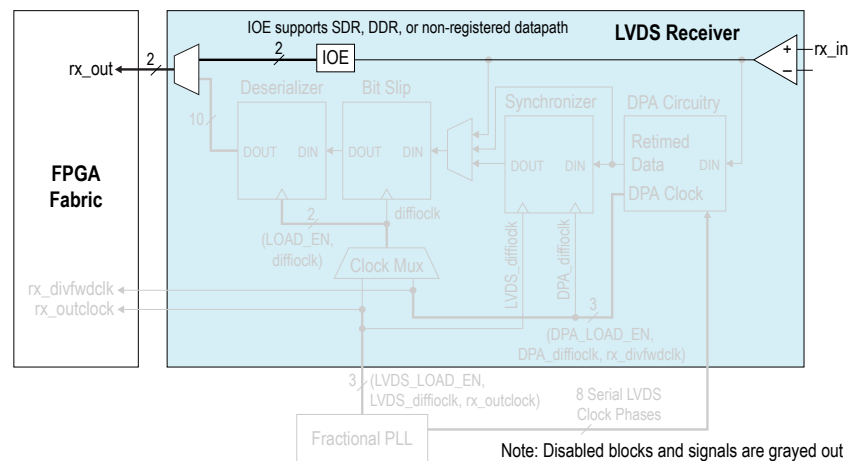Figure 6-26: Deserializer Bypass



The IOE contains two data input registers that can operate in DDR or SDR mode. In DDR mode, `rx_inclock` clocks the IOE register. In SDR mode, data is directly passed through the IOE. In SDR and DDR modes, the data width from the IOE is 1 and 2 bits, respectively.

You cannot use the DPA and data realignment circuit when you bypass the deserializer.

Receiver Modes in Arria V Devices

The Arria V devices support the following receiver modes:

- Non-DPA mode
- DPA mode
- Soft-CDR mode


Non-DPA Mode

The non-DPA mode disables the DPA and synchronizer blocks. Input serial data is registered at the rising edge of the serial LVDS `diffiocl` clock that is produced by the left and right PLLs.

You can select the rising edge option with the Quartus II MegaWizard Plug-In Manager. The LVDS_diffioclk clock that is generated by the left and right PLLs clocks the data realignment and deserializer blocks.

The following figure shows the non-DPA datapath block diagram. In SDR and DDR modes, the data width from the IOE is 1 and 2 bits, respectively.

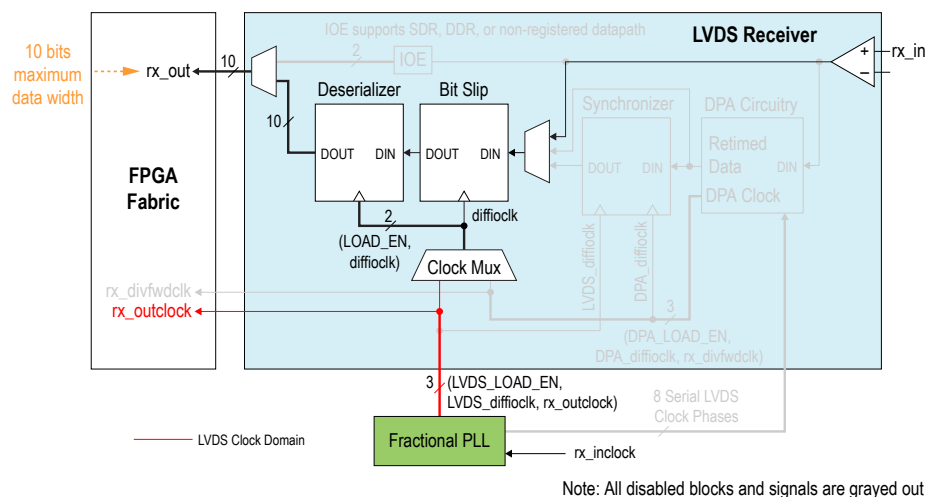Figure 6-27: Receiver Data Path in Non-DPA Mode




DPA Mode

The DPA block chooses the best possible clock (DPA_diffioclck) from the eight fast clocks that the fractional PLL sent. This serial DPA_diffioclck clock is used for writing the serial data into the synchronizer. A serial LVDS_diffioclck clock is used for reading the serial data from the synchronizer. The same LVDS_diffioclck clock is used in data realignment and deserializer blocks.

The following figure shows the DPA mode datapath. In the figure, all the hardware blocks that are described in *Receiver Blocks in Arria V Devices* on page 19 are active. In SDR and DDR modes, the data width from the IOE is 1 and 2 bits, respectively.

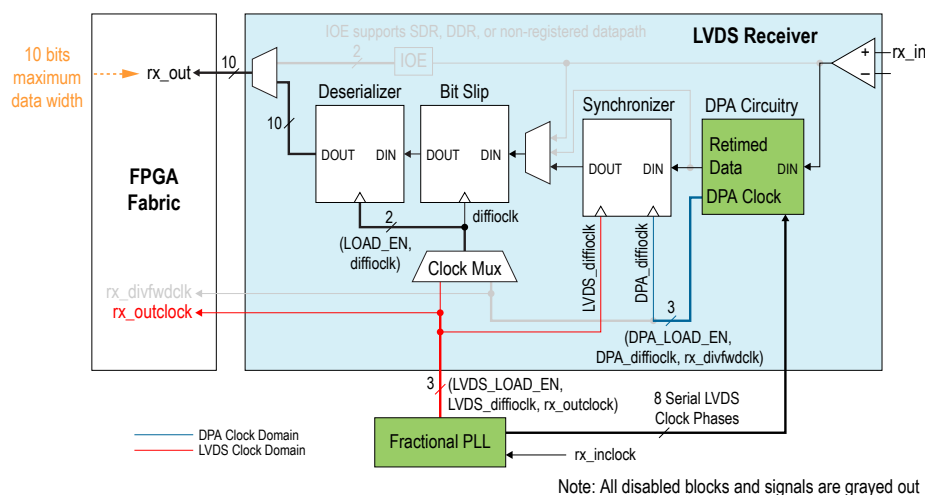Figure 6-28: Receiver Datapath in DPA Mode




Soft-CDR Mode

The Arria V LVDS channel offers the soft-CDR mode to support the GbE and SGMII protocols. A receiver PLL uses the local clock source for reference.

The following figure shows the soft-CDR mode datapath. In SDR and DDR modes, the data width from the IOE is 1 and 2 bits, respectively.

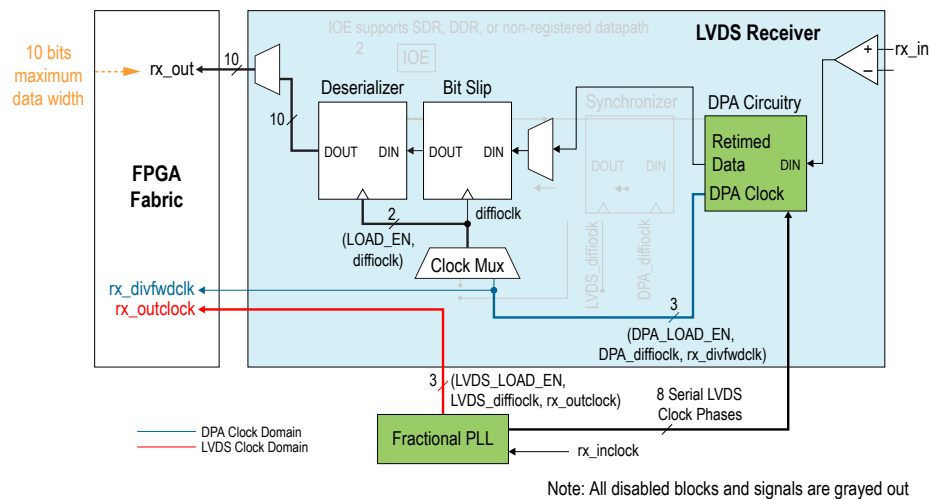Figure 6-29: Receiver Datapath in Soft-CDR Mode



In soft-CDR mode, the synchronizer block is inactive. The DPA circuitry selects an optimal DPA clock phase to sample the data. Use the selected DPA clock for bit-slip operation and deserialization. The DPA block also forwards the selected DPA clock, divided by the deserialization factor called `rx_divfwdclk`, to the FPGA fabric, along with the deserialized data. This clock signal is put on the periphery clock (PCLK) network.

If you use the soft-CDR mode, do not assert the `rx_reset` port after the DPA has trained. The DPA continuously chooses new phase taps from the PLL to track parts per million (PPM) differences between the reference clock and incoming data.

You can use every LVDS channel in soft-CDR mode and drive the FPGA fabric using the PCLK network in the Arria V device family. The `rx_dpa_locked` signal is not valid in soft-CDR mode because the DPA continuously changes its phase to track PPM differences between the upstream transmitter and the local receiver input reference clocks. The parallel clock, `rx_outclock`, generated by the left and right PLLs, is also forwarded to the FPGA fabric.

For more information about PCLK networks, refer to the [Clock Networks and PLLs in Arria V Devices](#) chapter.

Receiver Clocking for Arria V Devices

The fractional PLL receives the external clock input and generates different phases of the same clock. The DPA block automatically chooses one of the clocks from the fractional PLL and aligns the incoming data on each channel.

The synchronizer circuit is a 1 bit wide by 6 bit deep FIFO buffer that compensates for any phase difference between the DPA clock and the data realignment block. If necessary, the user-controlled data realignment circuitry inserts a single bit of latency in the serial bit stream to align to the word boundary.

The physical medium connecting the transmitter and receiver LVDS channels may introduce skew between the serial data and the source-synchronous clock. The instantaneous skew between each LVDS channel and the clock also varies with the jitter on the data and clock signals as seen by the receiver. The three different modes—non-DPA, DPA, and soft-CDR—provide different options to overcome skew between the source synchronous clock (non-DPA, DPA) /reference clock (soft-CDR) and the serial data.

Non-DPA mode allows you to statically select the optimal phase between the source synchronous clock and the received serial data to compensate skew. In DPA mode, the DPA circuitry automatically chooses the best phase to compensate for the skew between the source synchronous clock and the received serial data.

Soft-CDR mode provides opportunities for synchronous and asynchronous applications for chip-to-chip and short reach board-to-board applications for SGMII protocols.

Note: Only the non-DPA mode requires manual skew adjustment.


Differential I/O Termination for Arria V Devices

The Arria V devices provide a 100 Ω , on-chip differential termination option on each differential receiver channel for LVDS standards. On-chip termination saves board space by eliminating the need to add external resistors on the board. You can enable on-chip termination in the Quartus II software Assignment Editor.

All I/O pins and dedicated clock input pins support on-chip differential termination.

The following figure shows device on-chip termination.

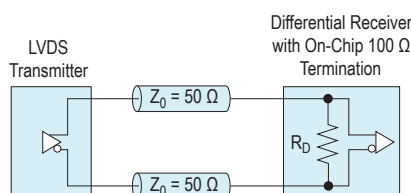Figure 6-30: On-Chip Differential I/O Termination



The following table lists the assignment name for on-chip differential termination in the Quartus II software Assignment Editor.

Table 6-11: Quartus II Software Assignment Editor—On-Chip Differential Termination

Field	Assignment
To	rx_in
Assignment name	Input Termination
Value	Differential

Source Synchronous Timing Budget

The topics in this section describe the timing budget, waveforms, and specifications for source-synchronous signaling in the Arria V device family.

The LVDS I/O standards enable the transmission of data at a high speed. This high transmission rate of data results in better overall system performance. To take advantage of fast system performance, you must understand how to analyze timing for these high-speed signals. Timing analysis for the differential block is different from traditional synchronous timing analysis techniques.


The basis of the source synchronous timing analysis is the skew between the data and the clock signals instead of the clock-to-output setup times. High-speed differential data transmission requires the use of timing parameters provided by IC vendors and is strongly influenced by board skew, cable skew, and clock jitter. This section defines the source-synchronous differential data orientation timing parameters, the timing budget definitions for the Arria V device family, and how to use these timing parameters to determine the maximum performance of a design.

Differential Data Orientation

There is a set relationship between an external clock and the incoming data. For operations at 1 Gbps and a serialization factor of 10, the external clock is multiplied by 10. You can set phase-alignment in the PLL to coincide with the sampling window of each data bit. The data is sampled on the falling edge of the multiplied clock.

The following figure shows the data bit orientation of the x10 mode.

 Figure 6-31: Bit Orientation in the Quartus II Software




Differential I/O Bit Position

Data synchronization is necessary for successful data transmission at high frequencies.

The following figure shows the data bit orientation for a channel operation and is based on the following conditions:

- The serialization factor is equal to the clock multiplication factor.
- The phase alignment uses edge alignment.
- The operation is implemented in hard SERDES.

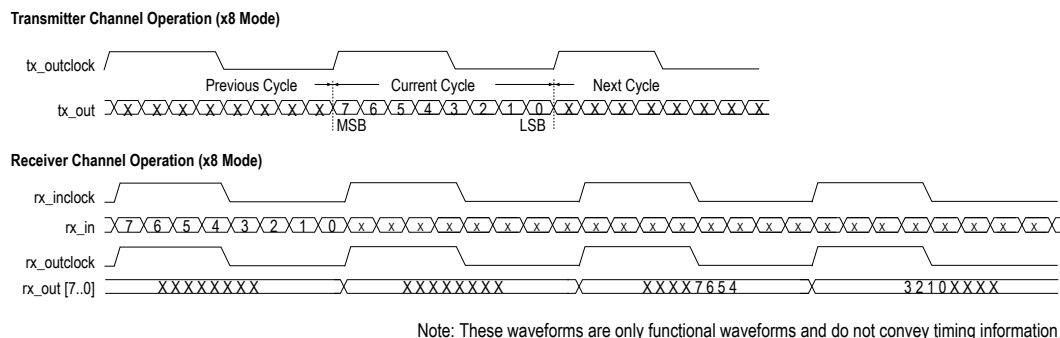Figure 6-32: Bit-Order and Word Boundary for One Differential Channel (1)



For other serialization factors, use the Quartus II software tools to find the bit position within the word.

Differential Bit Naming Conventions

The following table lists the conventions for differential bit naming for 18 differential channels. The MSB and LSB positions increase with the number of channels used in a system.

Table 6-12: Differential Bit Naming

Receiver Channel Data Number	Internal 8-Bit Parallel Data	
	MSB Position	LSB Position
1	7	0
2	15	8

Receiver Channel Data Number	Internal 8-Bit Parallel Data	
	MSB Position	LSB Position
3	23	16
4	31	24
5	39	32
6	47	40
7	55	48
8	63	56
9	71	64
10	79	72
11	87	80
12	95	88
13	103	96
14	111	104
15	119	112
16	127	120
17	135	128
18	143	136

Transmitter Channel-to-Channel Skew

The receiver skew margin calculation uses the transmitter channel-to-channel skew (TCCS)—an important parameter based on the Arria V transmitter in a source-synchronous differential interface:

- TCCS is the difference between the fastest and slowest data output transitions, including the T_{CO} variation and clock skew.
- For LVDS transmitters, the TimeQuest Timing Analyzer provides the TCCS value in the TCCS report (`report_TCCS`) in the Quartus II compilation report, which shows TCCS values for serial output ports.
- You can also get the TCCS value from the [Arria V Device Datasheet](#).

For the Arria V GZ devices, perform PCB trace compensation to adjust the trace length of each LVDS channel to improve channel-to-channel skew when interfacing with non-DPA receivers at data rate above 840 Mbps. The Quartus II software Fitter Report panel reports the amount of delay you must add to each trace for the Arria V GZ device. You can use the recommended trace delay numbers published under the LVDS Transmitter/Receiver Package Skew Compensation panel and manually compensate the skew on the PCB board trace to reduce channel-to-channel skew, thus meeting the timing budget between LVDS channels.

For more information about the LVDS Transmitter/Receiver Package Skew Compensation report panel, refer to the [LVDS SERDES Transmitter/Receiver \(ALTLVDS_RX and ALTLVDS_TX_Megafunction User Guide\)](#).

Receiver Skew Margin for Non-DPA Mode

Different modes of LVDS receivers use different specifications, which can help in deciding the ability to sample the received serial data correctly:

- In DPA mode, use DPA jitter tolerance instead of the receiver skew margin (RSKM).
- In non-DPA LVDS mode, use RSKM, TCCS, and sampling window (SW) specifications for high-speed source-synchronous differential signals in the receiver data path.

The following equation expresses the relationship between RSKM, TCCS, and SW.

Figure 6-33: RSKM Equation

$$RSKM = \frac{TUI - SW - TCCS}{2}$$


Conventions used for the equation:

- RSKM—the timing margin between the receiver's clock input and the data input sampling window.
- Time unit interval (TUI)—time period of the serial data.
- SW—the period of time that the input data must be stable to ensure that data is successfully sampled by the LVDS receiver. The SW is a device property and varies with device speed grade.
- TCCS—the timing difference between the fastest and the slowest output edges, including tCO variation and clock skew, across channels driven by the same PLL. The clock is included in the TCCS measurement.

You must calculate the RSKM value to decide whether the LVDS receiver can sample the data properly or not, given the data rate and device. A positive RSKM value indicates that the LVDS receiver can sample the data properly, whereas a negative RSKM indicates that it cannot sample the data properly.

The following figure shows the relationship between the RSKM, TCCS, and the SW of the receiver.

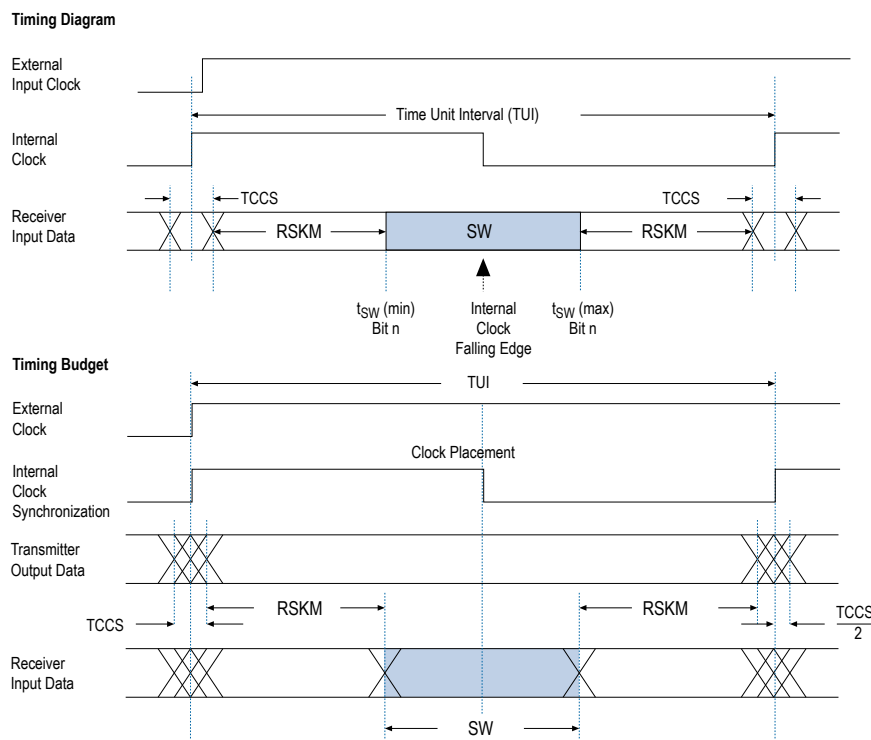Figure 6-34: Differential High-Speed Timing Diagram and Timing Budget for Non-DPA Mode



For LVDS receivers, the Quartus II software provides an RSKM report showing the SW, TUI, and RSKM values for non-DPA LVDS mode:

- You can generate the RSKM report by executing the `report_RSKM` command in the TimeQuest Timing Analyzer. You can find the RSKM report in the Quartus II compilation report in the TimeQuest Timing Analyzer section.
- To obtain the RSKM value, assign the input delay to the LVDS receiver through the constraints menu of the TimeQuest Timing Analyzer. The input delay is determined according to the data arrival time at the LVDS receiver port, with respect to the reference clock.
- If you set the input delay in the settings parameters for the **Set Input Delay** option, set the clock name to the clock that reference the source synchronous clock that feeds the LVDS receiver.
- If you do not set any input delay in the TimeQuest Timing Analyzer, the receiver channel-to-channel skew defaults to zero.
- You can also directly set the input delay in a Synopsys Design Constraint file (.sdc) using the `set_input_delay` command.

For more information about the RSKM equation and calculation, refer to the [LVDS SERDES Transmitter/Receiver \(ALTLVDS_RX and ALTLVDS_TX_Megafunction User Guide\)](#).

For more information about .sdc commands and the TimeQuest Timing Analyzer, refer to the [Quartus II TimeQuest Timing Analyzer](#) chapter in the *Quartus II Development Software Handbook*.

Assigning Input Delay to LVDS Receiver Using TimeQuest Timing Analyzer

To obtain the RSKM value, assign an appropriate input delay to the LVDS receiver from the TimeQuest Timing Analyzer constraints menu.

1. On the menu in the TimeQuest Timing Analyzer, select **Constraints > Set Input Delay**.
2. In the **Set Input Delay** window, select the desired clock using the pull-down menu. The clock name must reference the source synchronous clock that feeds the LVDS receiver.
3. Click the **Browse** button (next to the **Targets** field).
4. In the **Name Finder** window, click **List** to view a list of all available ports. Select the LVDS receiver serial input ports according to the input delay you set, and click **OK**.
5. In the **Set Input Delay** window, set the appropriate values in the **Input delay** options and **Delay value** fields.
6. Click **Run** to incorporate these values in the TimeQuest Timing Analyzer.
7. Repeat from step 1 on page 30 to assign the appropriate delay for all the LVDS receiver input ports. If you have already assigned Input Delay and you need to add more delay to that input port, turn on the **Add Delay** option.

Document Revision History

Date	Version	Changes
November 2012	2012.11.19	• Reorganized content and updated template. • Added Arria V GZ information. • Added Altera_PLL settings for external PLL usage in DPA and non-DPA modes. • Updated clocking examples. Altera_PLL now supports entering negative phase shift. • Rearranged the LVDS channel counts table into several tables according to device variant for ease of reference. • Updated the Arria V GX A1 and A3 LVDS channel counts, and added the channel counts for Arria V GZ. • Removed references to ALTPLL and added information about Altera_PLL. Altera_PLL now replaces ALTPLL for Arria V devices. • Added design guidelines for using LVDS interface with the external PLL mode. These include information on the signal interfaces, the parameter values, and the connection between Altera_PLL and ALTPLVDS in external PLL mode. • Updated the programmable V_{OD} allowed values for Arria V GX, GT, SX, and ST, and added the values for Arria V GZ. • Moved the PLL and clocking section into design guideline topics. • Added steps to assign input delay to LVDS receiver using the TimeQuest Timing Analyzer.
June 2012	2.0	• Restructured the chapter. • Updated Table 6–1. • Updated Figure 6–1 and Figure 6–2. • Added Figure 6–3. • Added “Design Considerations” section. • Updated the “Differential Pin Placement” section.

Date	Version	Changes
November 2011	1.1	• Updated Table 6–1. • Restructured chapter.
May 2011	1.0	Initial release.

External Memory Interfaces in Arria V Devices

7

2012.11.19

AV-52007

 [Subscribe](#)

 [Feedback](#)

The Arria® V devices provide an efficient architecture that allows you to fit wide external memory interfaces to support a high level of system bandwidth within the small modular I/O bank structure. The I/Os are designed to provide high-performance support for existing and emerging external memory standards.

Table 7-1: Supported External Memory Standards in Arria V Devices

Memory Standard	Hard Memory Controller	Soft Memory Controller	
	Arria V GX, GT, SX, and ST	Arria V GX, GT, SX, and ST	Arria V GZ
DDR3 SDRAM	Full rate	Half rate and quarter rate	Half rate and quarter rate
DDR2 SDRAM	Full rate	Half rate	Full rate and half rate
LPDDR2 SDRAM	—	Half rate	—
RLDRAM 3	—	—	Half rate and quarter rate
RLDRAM II	—	Half rate	Full rate and half rate
QDR II+ SRAM	—	Half rate	Full rate and half rate
QDR II SRAM	—	Half rate	Full rate and half rate

To estimate the external memory system performance specification, use Altera's External Memory Interface Spec Estimator tool. For more information, refer to the [External Memory Interface Spec Estimator](#) page on the Altera website.

For more information about the memory types supported, board design guidelines, timing analysis, simulation, and debugging information, refer to the [External Memory Interface Handbook](#).

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered

External Memory Performance

Table 7-2: External Memory Interface Performance in Arria V Devices

Interface	Voltage (V)	Hard Controller (MHz)	Soft Controller (MHz)	
		Arria V GX, GT, SX, and ST	Arria V GX, GT, SX, and ST	Arria V GZ
DDR3 SDRAM	1.5	533	667	800
	1.35	533	667	800
DDR2 SDRAM	1.8	400	400	400
LPDDR2 SDRAM	1.2	—	400	—
RLDRAM 3	1.2	—	—	667
RLDRAM II	1.8	—	400	533
	1.5	—	400	533
QDR II+ SRAM	1.8	—	400	500
	1.5	—	400	500
QDR II SRAM	1.8	—	400	333
	1.5	—	400	333
DDR II+ SRAM ²⁷	1.8	—	400	—
	1.5	—	400	—

HPS External Memory Performance

Table 7-3: HPS External Memory Interface Performance

The hard processor system (HPS) is available in Arria V SoC FPGA devices only.

Interface	Voltage (V)	HPS Hard Controller (MHz)
DDR3 SDRAM	1.5	533
	1.35	533
DDR2 SDRAM	1.8	400
	1.5	400
LPDDR2 SDRAM	1.2	333

Memory Interface Pin Support in Arria V Devices

In the Arria V devices, the memory interface circuitry is available in every I/O bank that does not support transceivers. The devices offer differential input buffers for differential read-data strobe and clock operations.

²⁷ Not available as Altera® IP.

If you do not use any of these pins for memory interfacing, you can use these pins as user I/Os. In addition, you can use the DQSn or CQn pins that are not used for clocking as DQ pins.

The memory clock pins are generated with double data rate input/output (DDRIO) registers. For more information about which pins to use for memory clock pins and pin location requirements, refer to the [Planning Pin and FPGA Resources](#) chapter of the *External Memory Interface Handbook*.

Guideline: Using DQ/DQS Pins

The following list provides guidelines on using the DQ/DQS pins:

- The devices support DQ and DQS signals with DQ bus modes of x4/x8/x9, x16/x18, or x32/x36.
- You can use the DQSn or CQn pins that are not used for clocking as DQ pins.
- If you do not use the DQ/DQS pins for memory interfacing, you can use these pins as user I/Os. However, unused HPS DQ/DQS pins on the Arria V SX and ST devices cannot be used as user I/Os.
- Some pins have multiple functions such as RZQ or DQ. If you need extra RZQ pins, you can use some of the DQ pins as RZQ pins instead. In this case, for the x8, x16/x18, or x32/x36 DQ/DQS groups whose members are used as RZQ pins, Altera recommends that you assign the DQ and DQS pins manually. Otherwise, the Quartus II software might not be able to place the DQ and DQS pins, resulting in a “no-fit” error.

For the maximum number of DQ pins and the exact number per group for a particular Arria V device, refer to the pin table in the [Arria V Device Pin-Out Files](#) page of the Altera website. In the pin tables, the DQS and DQSn pins denote the differential data strobe/clock pin pairs, while the CQ and CQn pins denote the complementary echo clock signals. The pin table lists the parity, DM, BWSn, NWSn, ECC, and QVLD pins as DQ pins.

For more information about read clock pins usage for QDR II and QDR II+ SRAM, and RLDRAM II interfaces in Arria V GX, GT, SX, and ST devices, refer to the [Planning Pin and FPGA Resources](#) chapter in the *External Memory Interface Handbook*.

DQ/DQS Bus Mode Pins for Arria V Devices

The following tables list the pin support per DQ/DQS bus mode, including the DQS/CQ/CQn/QK# and DQSn pins. The maximum number of data pins per group listed in the tables may vary according to the following conditions:

- Single-ended DQS signaling—the maximum number of DQ pins includes parity, data mask, and QVLD pins connected to the DQS bus network.
- Differential or complementary DQS signaling—the maximum number of data pins per group decreases by one. This number may vary per DQ/DQS group in a particular device. Check the pin table for the exact number per group.
- DDR3 and DDR2 interfaces—the maximum number of pins is further reduced for an interface larger than x8 because you require one DQS pin for each x8/x9 group to form the x16/x18 and x32/x36 groups.

Table 7-4: DQ/DQS Bus Mode Pins for Arria V GX, GT, SX, and ST Devices

Mode	DQSn Support	CQn Support	Parity or Data Mask (Optional)	QVLD ²⁸ (Optional)	Data Pins per Group		Notes
					Typical	Maximum	
x4/x8/x9	Yes	Yes	Yes	Yes	4, 8, or 9	11	The x4 mode uses x8/x9 groups.
x16/x18	Yes	Yes	Yes	Yes	16 or 18	23	Two x8 DQ/DQS groups are stitched to create a x16/x18 group, so there are 24 pins in this group.
x32/x36	Yes	Yes	Yes	Yes	32 or 36	47	Four x8 DQ/DQS groups are stitched to create a x32/x36 group, so there are 48 pins in this group.

Table 7-5: DQ/DQS Bus Mode Pins for Arria V GZ Devices

Mode	DQSn Support	CQn Support	Parity or Data Mask (Optional)	QVLD ²⁸ (Optional)	Data Pins per Group		Notes
					Typical	Maximum	
x4	Yes	—	—	—	4	5	If you do not use differential DQS and the group does not have additional signals, the data mask (DM) pin is supported.
x8/x9	Yes	Yes	Yes	Yes	8 or 9	11	Two x4 DQ/DQS groups are stitched to create a x8/x9 group, so there are a total of 12 pins in this group.
x16/x18	Yes	Yes	Yes	Yes	16 or 18	23	Four x4 DQ/DQS groups are stitched to create a x16/x18 group; so there are a total of 24 pins in this group.
x32/x36	Yes	Yes	Yes	Yes	32 or 36	47	Eight x4 DQ/DQS groups are stitched to create a x32/x36 group, so there are a total of 48 pins in this group.

²⁸ The QVLD pin is not used in the UniPHY megafunction.

DQ/DQS Groups in Arria V GX

Table 7-6: Number of DQ/DQS Groups Per Side in Arria V GX Devices

This table lists the DQ/DQS groups for the soft memory controller. For the hard memory controller, you can get the DQ/DQS groups from the pin table of the specific device at [Arria V Device Pin-Out Files](#) page.

Member Code	Package	Side	x8/x9	x16/x18	x32/x36
A1	672-pin FineLine BGA, Flip Chip	Top	8	3	—
		Bottom	8	3	—
		Right	4	2	—
	896-pin FineLine BGA, Flip Chip	Top	12	6	2
		Bottom	12	6	2
		Right	6	2	—
A3	672-pin FineLine BGA, Flip Chip	Top	8	3	—
		Bottom	8	3	—
		Right	4	2	—
	896-pin FineLine BGA, Flip Chip	Top	12	6	2
		Bottom	12	6	2
		Right	6	2	—
A5	672-pin FineLine BGA, Flip Chip	Top	8	3	1
		Bottom	8	3	1
	896-pin FineLine BGA, Flip Chip	Top	12	5	1
		Bottom	12	5	1
	1152-pin FineLine BGA, Flip Chip	Top	17	8	2
		Bottom	17	8	2
A7	672-pin FineLine BGA, Flip Chip	Top	8	3	1
		Bottom	8	3	1
	896-pin FineLine BGA, Flip Chip	Top	12	5	1
		Bottom	12	5	1
	1152-pin FineLine BGA, Flip Chip	Top	17	8	2
		Bottom	17	8	2
B1	896-pin FineLine BGA, Flip Chip	Top	12	5	1
		Bottom	12	5	1
	1517-pin FineLine BGA, Flip Chip	Top	22	10	4
		Bottom	22	10	4
	1152-pin FineLine BGA, Flip Chip	Top	17	8	2
		Bottom	17	8	2

Member Code	Package	Side	x8/x9	x16/x18	x32/x36
B3	896-pin FineLine BGA, Flip Chip	Top	12	5	1
		Bottom	12	5	1
	1152-pin FineLine BGA, Flip Chip	Top	17	8	2
		Bottom	17	8	2
	1517-pin FineLine BGA, Flip Chip	Top	22	10	4
		Bottom	22	10	4
B5	1152-pin FineLine BGA, Flip Chip	Top	17	8	2
		Bottom	17	8	2
	1517-pin FineLine BGA, Flip Chip	Top	22	10	4
		Bottom	22	10	4
B7	1152-pin FineLine BGA, Flip Chip	Top	17	8	2
		Bottom	17	8	2
	1517-pin FineLine BGA, Flip Chip	Top	22	10	4
		Bottom	22	10	4

DQ/DQS Groups in Arria V GT

Table 7-7: Number of DQ/DQS Groups Per Side in Arria V GT Devices

This table lists the DQ/DQS groups for the soft memory controller. For the hard memory controller, you can get the DQ/DQS groups from the pin table of the specific device at [Arria V Device Pin-Out Files](#) page.

Member Code	Package	Side	x8/x9	x16/x18	x32/x36
D3	896-pin FineLine BGA, Flip Chip	Top	12	5	1
		Bottom	12	5	1
	1152-pin FineLine BGA, Flip Chip	Top	17	8	2
		Bottom	17	8	2
	1517-pin FineLine BGA, Flip Chip	Top	22	10	4
		Bottom	22	10	4
D7	1152-pin FineLine BGA, Flip Chip	Top	17	8	2
		Bottom	17	8	2
	1517-pin FineLine BGA, Flip Chip	Top	22	10	4
		Bottom	22	10	4

DQ/DQS Groups in Arria V GZ

Table 7-8: Number of DQ/DQS Groups Per Side in Arria V GZ Devices

Member Code	Package	Side	x4	x8/x9	x16/x18	x32/x36
E1	780-pin FineLine BGA, Flip Chip	Top	28	13	6	2
		Bottom	26	13	6	1
	1152-pin FineLine BGA, Flip Chip	Top	32	15	7	2
		Bottom	34	17	8	2
E3	780-pin FineLine BGA, Flip Chip	Top	28	13	6	2
		Bottom	26	13	6	1
	1152-pin FineLine BGA, Flip Chip	Top	32	15	7	2
		Bottom	34	17	8	2
E5	1152-pin FineLine BGA, Flip Chip	Top	36	17	8	3
		Bottom	50	25	12	4
	1517-pin FineLine BGA, Flip Chip	Top	52	26	12	6
		Bottom	58	29	14	6
E7	1152-pin FineLine BGA, Flip Chip	Top	36	17	8	3
		Bottom	50	25	12	4
	1517-pin FineLine BGA, Flip Chip	Top	52	26	12	6
		Bottom	58	29	14	6

DQ/DQS Groups in Arria V SX

Table 7-9: Number of DQ/DQS Groups Per Side in Arria V SX Devices

This table lists the DQ/DQS groups for the soft memory controller. For the hard memory controller, you can get the DQ/DQS groups from the pin table of the specific device at [Arria V Device Pin-Out Files](#) page.

Member Code	Package	Side	x8/x9	x16/x18	x32/x36
B3	896-pin FineLine BGA, Flip Chip	Top	8	3	1
		Bottom	8	3	1
	1152-pin FineLine BGA, Flip Chip	Top	8	3	1
		Bottom	18	8	3
	1517-pin FineLine BGA, Flip Chip	Top	12	5	2
		Bottom	22	10	4

Member Code	Package	Side	x8/x9	x16/x18	x32/x36
B5	896-pin FineLine BGA, Flip Chip	Top	8	3	1
		Bottom	8	3	1
	1152-pin FineLine BGA, Flip Chip	Top	8	3	1
		Bottom	18	8	3
	1517-pin FineLine BGA, Flip Chip	Top	12	5	2
		Bottom	22	10	4

DQ/DQS Groups in Arria V ST

Table 7-10: Number of DQ/DQS Groups Per Side in Arria V ST Devices

This table lists the DQ/DQS groups for the soft memory controller. For the hard memory controller, you can get the DQ/DQS groups from the pin table of the specific device at [Arria V Device Pin-Out Files](#) page.

Member Code	Package	Side	x8/x9	x16/x18	x32/x36
D3	896-pin FineLine BGA, Flip Chip	Top	8	3	1
		Bottom	8	3	1
	1152-pin FineLine BGA, Flip Chip	Top	8	3	1
		Bottom	18	8	3
	1517-pin FineLine BGA, Flip Chip	Top	12	5	2
		Bottom	22	10	4
D5	896-pin FineLine BGA, Flip Chip	Top	8	3	1
		Bottom	8	3	1
	1152-pin FineLine BGA, Flip Chip	Top	8	3	1
		Bottom	18	8	3
	1517-pin FineLine BGA, Flip Chip	Top	12	5	2
		Bottom	22	10	4

External Memory Interface Features in Arria V Devices

The Arria V I/O elements (IOE) provide built-in functionality required for a rapid and robust implementation of external memory interfacing. The following device features are used for external memory interfaces:

- DQS phase-shift circuitry
- PHY Clock (PHYCLK) networks
- DQS logic block
- Dynamic on-chip termination (OCT) control
- IOE registers

- Delay chain
- Hard memory controllers (Arria V GX, GT, SX, and ST only)
- Read- and write-leveling support (Arria V GZ only)

UniPHY IP

The high-performance memory interface solution includes the self-calibrating UniPHY IP that is optimized to take advantage of the Arria V I/O structure and the Quartus II software TimeQuest Timing Analyzer. The UniPHY IP helps set up the physical interface (PHY) best suited for your system. This provides the total solution for the highest reliable frequency of operation across process, voltage, and temperature (PVT) variations.

The UniPHY IP instantiates a PLL to generate related clocks for the memory interface. The UniPHY IP can also dynamically choose the number of DQS delay chains that are required for the system. The amount of delay is equal to the sum of the intrinsic delay of the delay element and the product of the number of delay steps and the value of the delay steps.


The UniPHY IP and the Altera memory controller MegaCore[®] functions can run at half the frequency of the I/O interface of the memory devices, allowing better timing management in high-speed memory interfaces. The Arria V devices contain built-in circuitry in the IOE to convert data from full rate (the I/O frequency) to half rate (the controller frequency) and vice versa.

For more information about the UniPHY megafunction, refer to the [Reference Material](#) volume of the *External Memory Interface Handbook*.

External Memory Interface Datapath


The following figures show overviews of the memory interface datapath that uses the Arria V I/O elements. In the figures, the DQ/DQS read and write signals may be bidirectional or unidirectional, depending on the memory standard. If the signal is bidirectional, it is active during read and write operations.

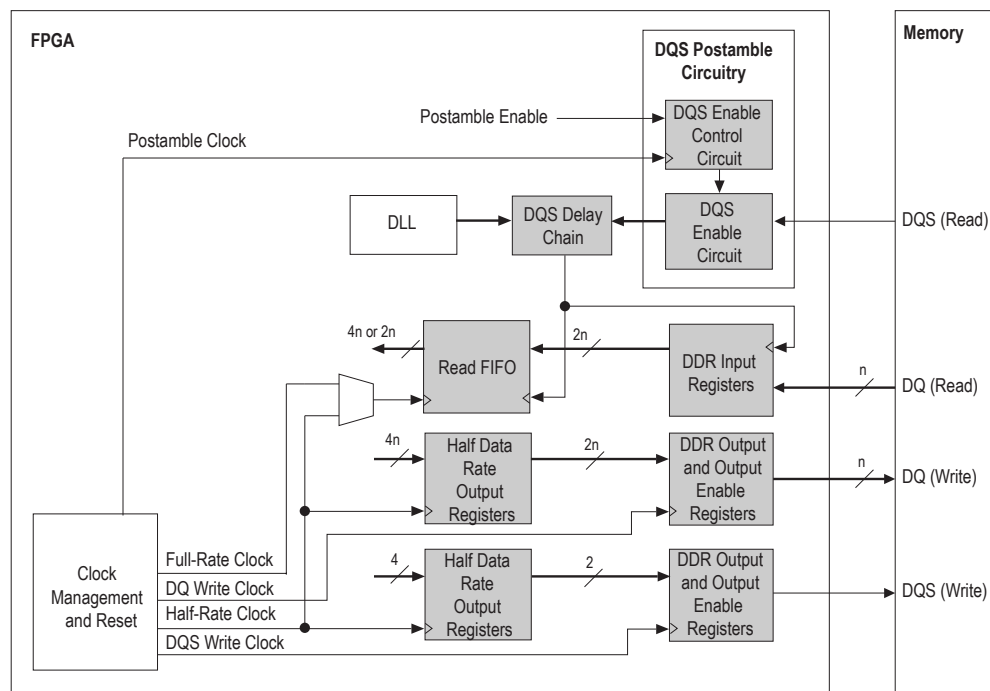Figure 7-1: External Memory Interface Datapath Overview for Arria V GX, GT, SX, and ST Devices



Note: There are slight block differences for different memory interface standards. The shaded blocks are part of the I/O elements.

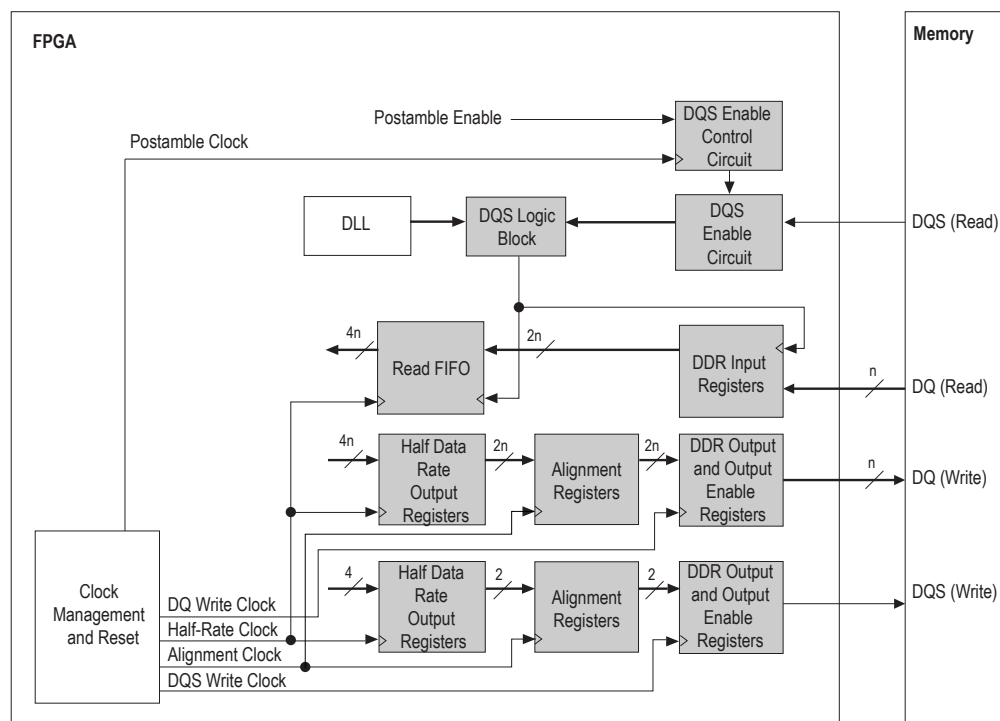Figure 7-2: External Memory Interface Datapath Overview for Arria V GZ Devices



Note: There are slight block differences for different memory interface standards. The shaded blocks are part of the I/O elements.

DQS Phase-Shift Circuitry

The Arria V DLL provides phase shift to the DQS/CQ/CQn/QK# pins on read transactions if the DQS/CQ/CQn/QK# pins are acting as input clocks or strobes to the FPGA.

The following figures show how the DLLs are connected to the DQS/CQ/CQn/QK# pins in the various Arria V variants.

Figure 7-3: DQS/CQ/CQn/QK# Pins and DLLs in Arria VGX (A1 and A3) Devices

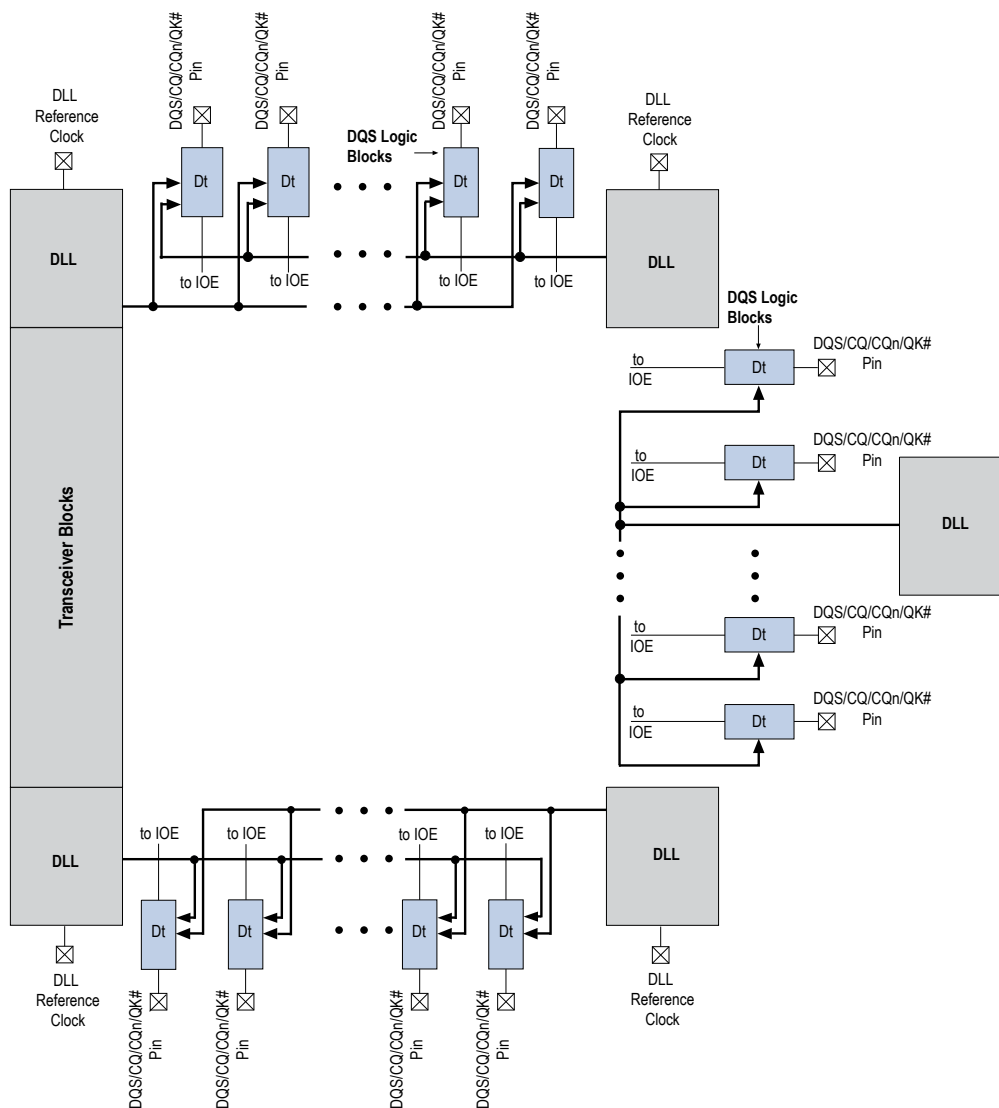


Figure 7-4: DQS/CQ/CQn/QK# Pins and DLLs in Arria V GX (A5, A7, B1, B3, B5, and B7), GT, and GZ Devices


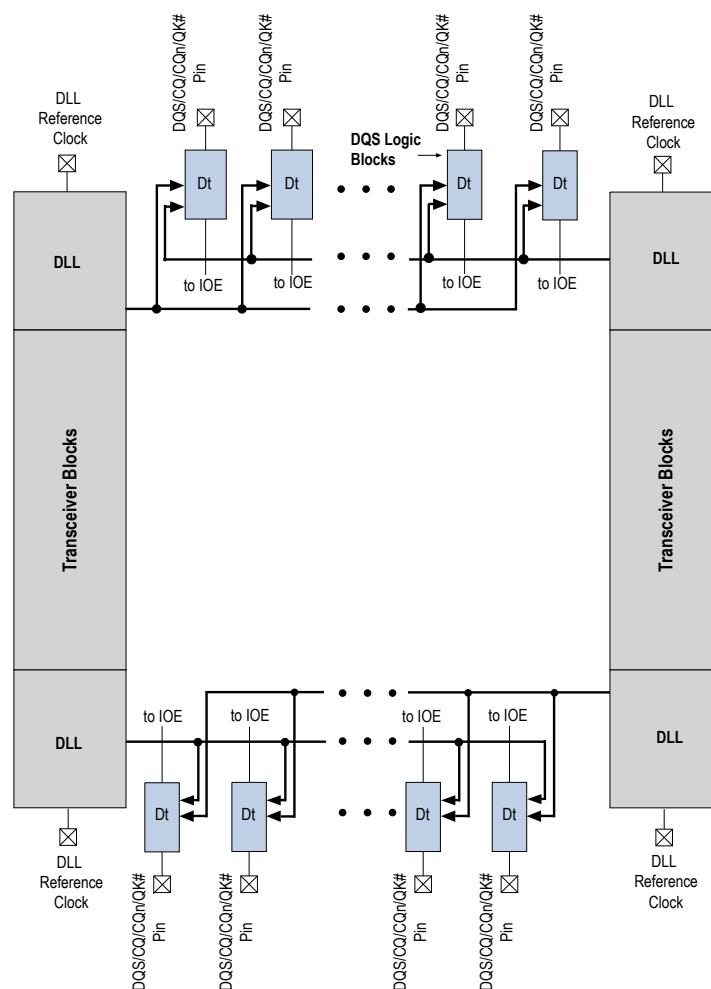


Figure 7-5: DQS/CQ/CQn/QK# Pins and DLLs in Arria V SX and ST Devices

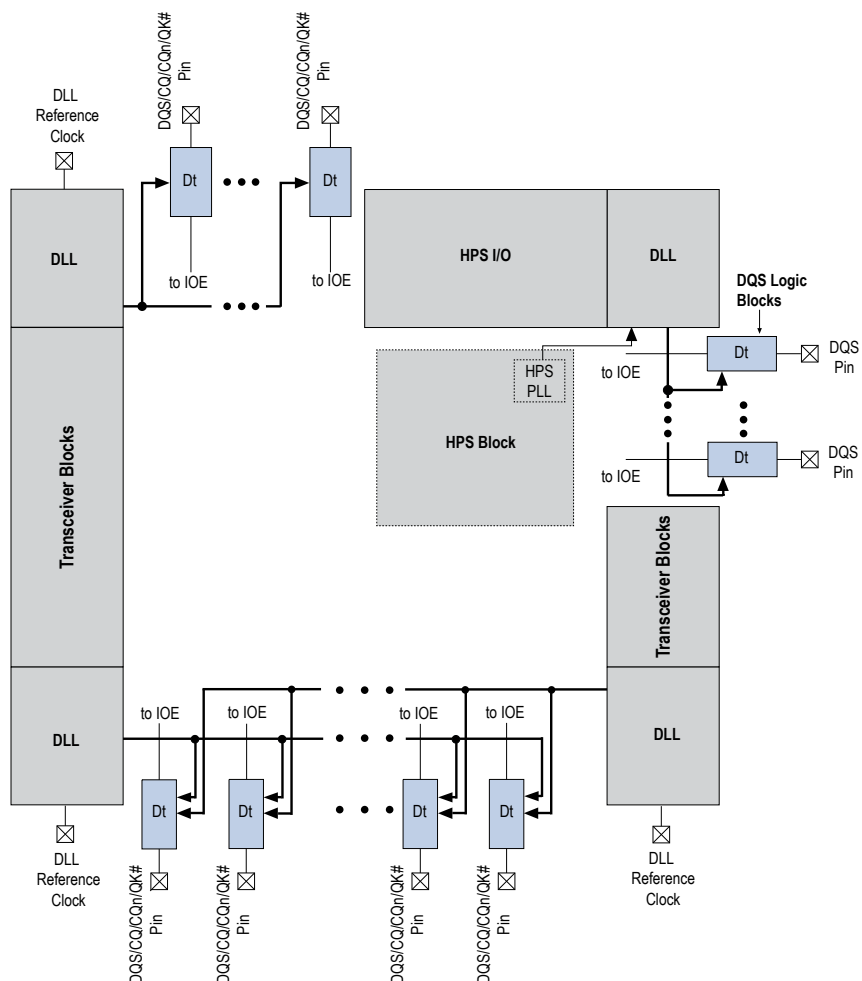

Delay-Locked Loop

The delay-locked loop (DLL) uses a frequency reference to dynamically generate control signals for the delay chains in each of the DQS/CQ/CQn/QK# pins, allowing the delay to compensate for process, voltage, and temperature (PVT) variations. The DQS delay settings are Gray-coded to reduce jitter if the DLL updates the settings.

There are a maximum of four DLLs, located in each corner of the Arria V devices. You can clock each DLL using different frequencies.

Some of the DLLs can access the two adjacent sides from its location in the device. You can have two different interfaces with the same frequency on the two sides adjacent to a DLL, where the DLL controls the DQS delay settings for both interfaces.

I/O banks between two DLLs have the flexibility to create multiple frequencies and multiple-type interfaces. These banks can use settings from either or both adjacent DLLs. For example, DQS1R can get its phase-shift settings from DLL_TR, while DQS2R can get its phase-shift settings from DLL_BR.

The reference clock for each DLL may come from the PLL output clocks or clock input pins.

DLL Phase-Shift

The DLL can shift the incoming DQS signals by 0° or 90° by using two delay cells in the DQS logic block. The shifted DQS signal is then used as the clock for the DQ IOE input registers.

All DQS/CQ/CQn/QK# pins, referenced to the same DLL, can have their input signal phase shifted by a different degree amount but all must be referenced at one particular frequency.

The 7-bit DQS delay settings from the DLL vary with PVT to implement the phase-shift delay.

For example, with a 0° shift, the DQS/CQ/CQn/QK# signal bypasses both the DLL and DQS logic blocks. The Quartus II software automatically sets the DQ input delay chains, so that the skew between the DQ and DQS/CQ/CQn/QK# pins at the DQ IOE registers is negligible if a 0° shift is implemented. You can feed the DQS delay settings to the DQS logic block and logic array.

The shifted DQS/CQ/CQn/QK# signal goes to the DQS bus to clock the IOE input registers of the DQ pins. The signal can also go into the logic array for resynchronization if you are not using IOE read FIFO for resynchronization.

For Arria V SX and ST devices, you can feed the hard processor system (HPS) DQS delay settings to the HPS DQS logic block only.

The following figures show simple block diagrams of the DLL in the Arria V devices. All features of the DQS phase-shift circuitry are accessible from the UniPHY megafunction in the Quartus II software.

Figure 7-6: Simplified Diagram of the DQS Phase-Shift Circuitry of the Arria V GX, GT, SX, and ST Devices

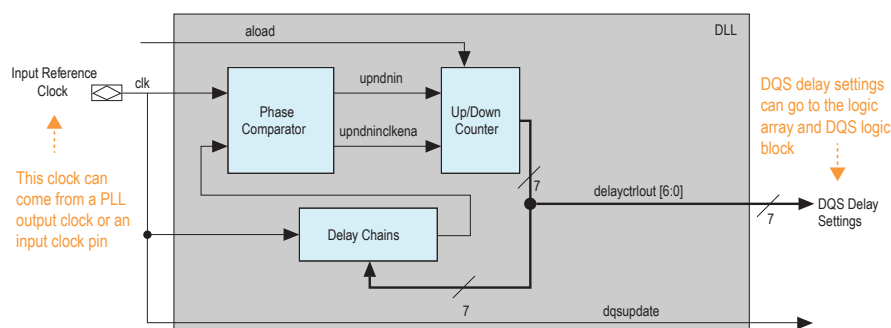
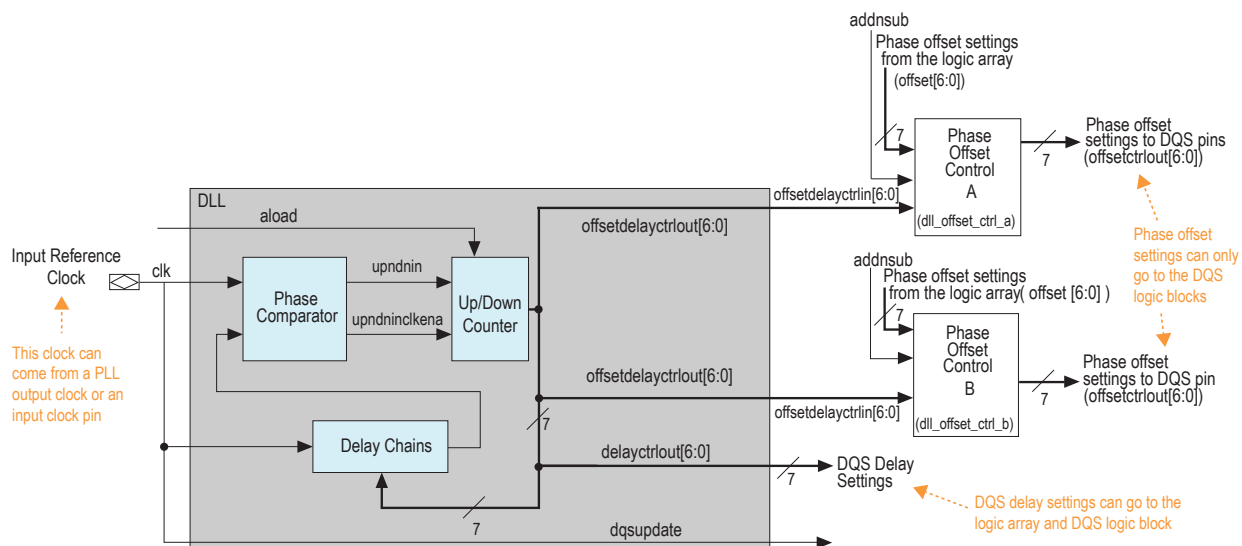


Figure 7-7: Simplified Diagram of the DQS Phase-Shift Circuitry of the Arria V GZ Devices

The input reference clock goes into the DLL to a chain of up to eight delay elements. The phase comparator compares the signal coming out of the end of the delay chain block to the input reference clock. The phase comparator then issues the `updnin` signal to the Gray-code counter. This signal increments or decrements a 7-bit delay setting (DQS delay settings) that increases or decreases the delay through the delay element chain to bring the input reference clock and the signals coming out of the delay element chain in phase.

The DLL can be reset from either the logic array or a user I/O pin. Each time the DLL is reset, you must wait for 2,560 clock cycles for the DLL to lock before you can capture the data properly. The DLL phase comparator requires 2,560 clock cycles to lock and calculate the correct input clock period.

Phase Offset Control for Arria V GZ Devices

Each DLL in the Arria V GZ devices has two phase-offset modules and can provide two separate DQS delay settings with independent offsets, one for the top and bottom I/O bank and one for the left and right I/O bank, so you can fine-tune the DQS phase-shift settings between two different sides of the device. Even though you have independent phase offset control, the frequency of the interface using the same DLL must be the same. Use the phase offset control module for making small shifts to the input signal and use the DQS phase-shift circuitry for larger signal shifts. For example, if the DLL only offers a multiple of a 45° phase shift, but your interface must have a 97.5° phase shift on the DQS signal, you can use two delay chains in the DQS logic blocks to give you a 90° phase shift and use the phase offset control feature to implement the extra 7.5° phase shift.

You can use either a static phase offset or a dynamic phase offset to implement the additional phase shift. The available additional phase shift is implemented in 2's complement in Binary-code between settings -128 to +127. An additional bit indicates whether the setting has a positive or negative value. The settings are linear, each phase offset setting adds a specified delay amount. The DQS phase shift is the sum of the DLL delay settings and the user-selected phase offset settings whose top setting is 128, so the actual physical offset setting range is 128 subtracted by the DQS delay settings from the DLL.

When using this feature, you must monitor the DQS delay settings to know how many offsets you can add and subtract in the system. The DQS delay settings output by the DLL are also Gray coded.

For example, if the DLL determines that DQS delay settings of 28 is required to achieve a 30° phase shift, you can subtract up to 28 phase offset settings and you can add up to 99 phase offset settings to achieve the optimal delay that you require.

For more information about the value for each step and the specified delay amounts for the phase offset setting, refer to the [Arria V Device Datasheet](#).

When using static phase offset, you can specify the phase offset amount in the UniPHY megafunction as a positive number for addition or a negative number for subtraction. You can also have a dynamic phase offset that is always added to, subtracted from, or both added to and subtracted from the DLL phase shift. When you add or subtract, you can dynamically input the phase offset amount into the `offset[6..0]` port. When you want to both add and subtract dynamically, you control the `addnsub` signal in addition to the `offset[6..0]` signals. The phase offset is not PVT-compensated.

PHY Clock (PHYCLK) Networks

The PHYCLK network is a dedicated high-speed, low-skew balanced clock tree designed for a high-performance external memory interface.

The top and bottom sides of the Arria V devices have up to four PHYCLK networks. There are up to two PHYCLK networks on the left and right side I/O banks. Each PHYCLK network spans across one I/O bank and is driven by one of the PLLs located adjacent to the I/O bank.

The following figures show the PHYCLK networks available in the Arria V devices.

Figure 7-8: PHYCLK Networks in Arria V GX A1 and A3 Devices

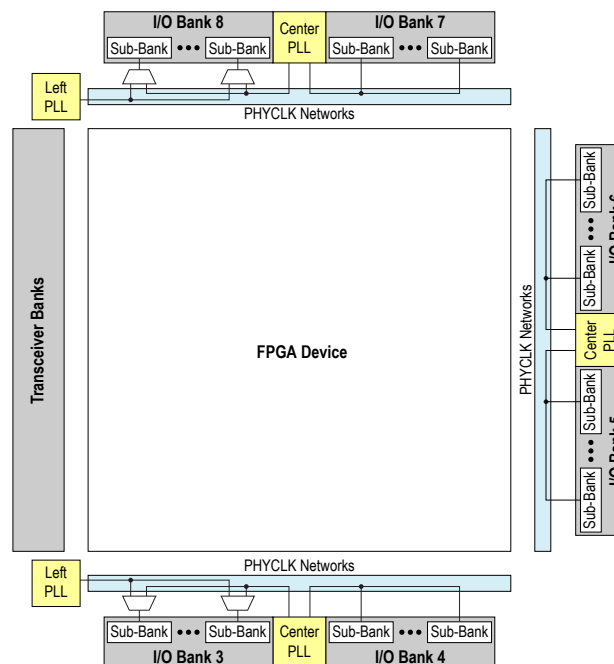


Figure 7-9: PHYCLK Networks in Arria V GX A5, A7, B1, B3, B5, and B7 Devices, and Arria V GZ E1, E3, E5, and E7 Devices


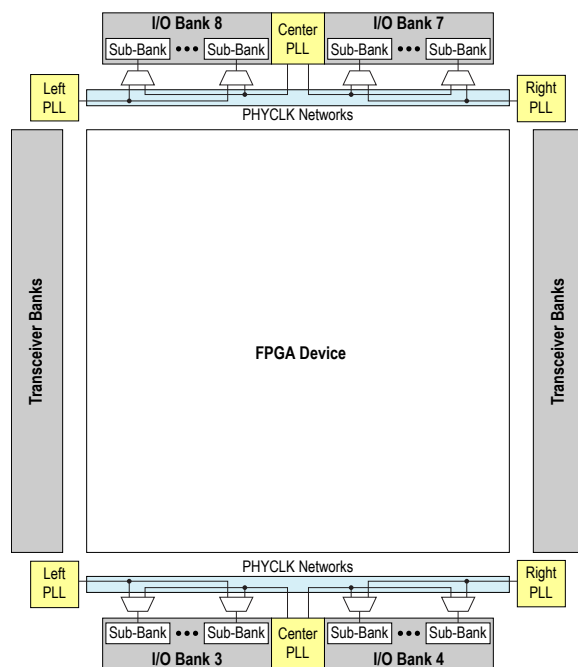


Figure 7-10: PHYCLK Networks in Arria V SX B3 and B5 Devices, and Arria V ST D3 and D5 Devices

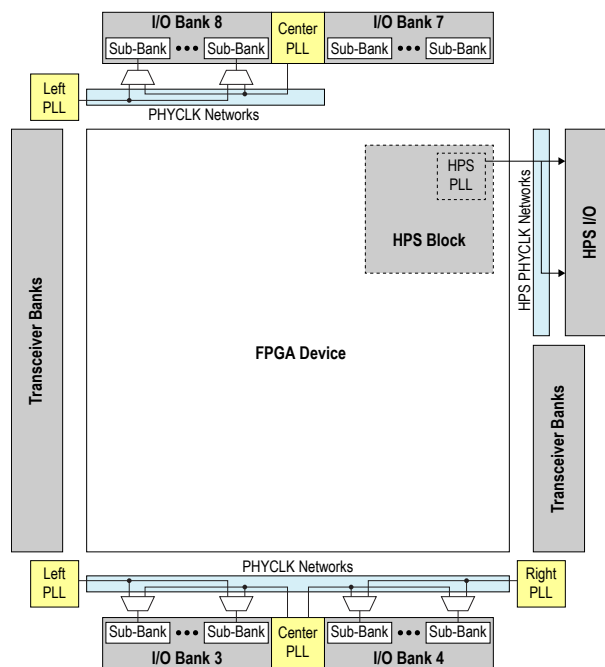

DQS Logic Block

Each DQS/CQ/CQn/QK# pin is connected to a separate DQS logic block, which consists of the update enable circuitry, DQS delay chains, and DQS postamble circuitry.

The following figure shows the DQS logic block.

Figure 7-11: DQS Logic Block in Arria V GX, GT, SX, and ST Devices


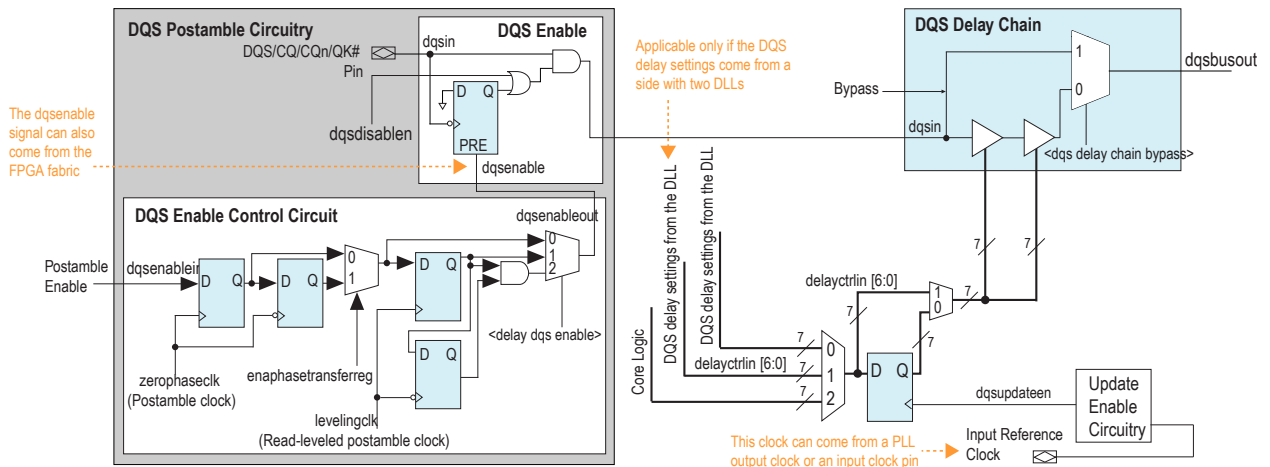


Figure 7-12: DQS Logic Block in Arria V GZ Devices

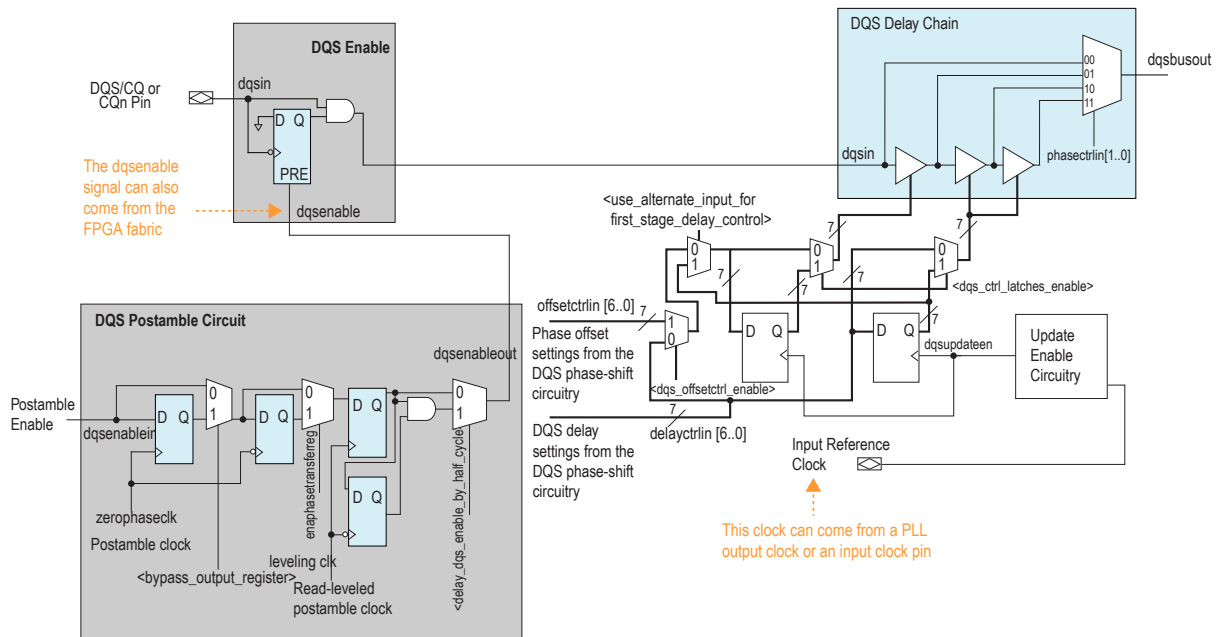


Update Enable Circuitry

The update enable circuitry enables the registers to allow enough time for the DQS delay settings to travel from the DQS phase-shift circuitry or core logic to all the DQS logic blocks before the next change.

Both the DQS delay settings and the phase-offset settings pass through a register before going into the DQS delay chains. The registers are controlled by the update enable circuitry to allow enough time for any changes in the DQS delay setting bits to arrive at all the delay elements, which allows them to be adjusted at the same time.

The circuitry uses the input reference clock or a user clock from the core to generate the update enable output. The UniPHY intellectual property (IP) uses this circuit by default.

The following figure shows an example waveform of the update enable circuitry output.

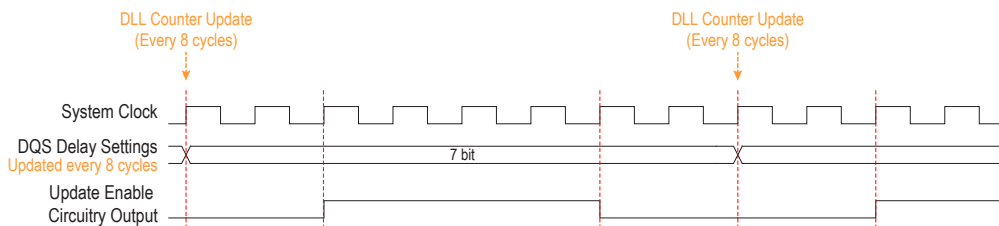Figure 7-13: DQS Update Enable Waveform

DQS Delay Chain

The DQS/CQ/CQn/QK# pin is shifted by the DQS delay settings.

DQS delay chains consist of a set of variable delay elements to allow the input DQS/CQ/CQn/QK# signals to be shifted by the amount specified by the DQS phase-shift circuitry or the logic array.

There are two delay elements in the DQS delay chain that have the same characteristics:

- delay elements in the DQS logic block
- delay elements in the DLL

The number of delay chains required is transparent because the UniPHY IP automatically sets it when you choose the operating frequency.

In Arria V GX, GT, and GZ devices, if you do not use the DLL to control the DQS delay chains, you can input your own Gray-coded 7 bit settings using the `delayctrlin[6..0]` signals available in the UniPHY IP.

In the Arria V SX and ST devices, the DQS delay chain is controlled by the DQS phase-shift circuitry only.

DQS Postamble Circuitry

There are preamble and postamble specifications for both read and write operations in DDR3 and DDR2 SDRAM. The DQS postamble circuitry ensures that data is not lost if there is noise on the DQS line during the end of a read operation that occurs while DQS is in a postamble state.

The Arria V devices contain dedicated postamble registers that you can control to ground the shifted DQS signal that is used to clock the DQ input registers at the end of a read operation. This function ensures that any glitches on the DQS input signal during the end of a read operation and occurring while DQS is in a postamble state do not affect the DQ IOE registers:

- For preamble state, the DQS is low, just after a high-impedance state.
- For postamble state, the DQS is low, just before it returns to a high-impedance state.

For external memory interfaces that use a bidirectional read strobe (DDR3 and DDR2 SDRAM), the DQS signal is low before going to or coming from a high-impedance state.

Half Data Rate Block


The Arria V devices contain a half data rate (HDR) block in the postamble enable circuitry. This scheme allows half-a-clock cycle latency for `dqsenable` assertion and zero latency for `dqsenable` deassertion.

The HDR block is clocked by the half-rate resynchronization clock, which is the output of the I/O clock divider circuit. There is an AND gate after the postamble register outputs to avoid postamble glitches from a previous read burst on a non-consecutive read burst.

Using the HDR block as the first stage capture register in the postamble enable circuitry block is optional. Altera recommends using these registers if the controller is running at half the frequency of the I/Os.

The following figure shows how to avoid postamble glitches using the HDR block.

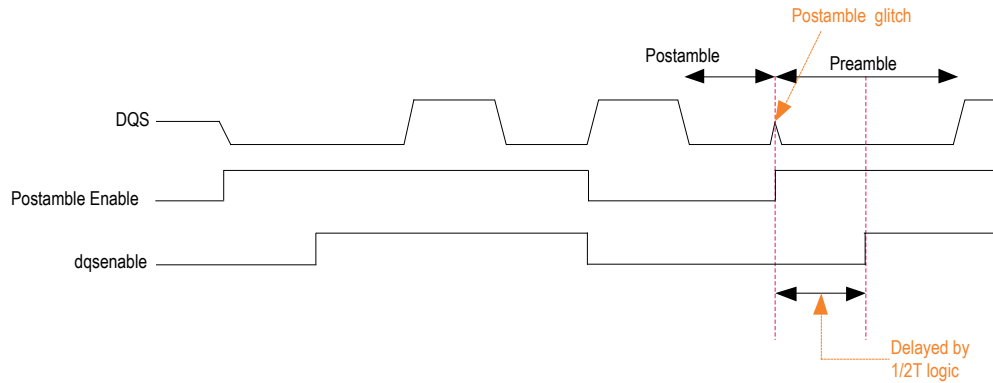Figure 7-14: Avoiding Glitch on a Non-Consecutive Read Burst Waveform




Leveling Circuitry for Arria V GZ Devices

DDR3 SDRAM unbuffered modules use a fly-by clock distribution topology for better signal integrity. This means that the CK/CK# signals arrive at each DDR3 SDRAM device in the module at different times. The difference in arrival time between the first DDR3 SDRAM device and the last device on the module can be as long as 1.6 ns.

The following figure shows the clock topology in DDR3 SDRAM unbuffered modules.

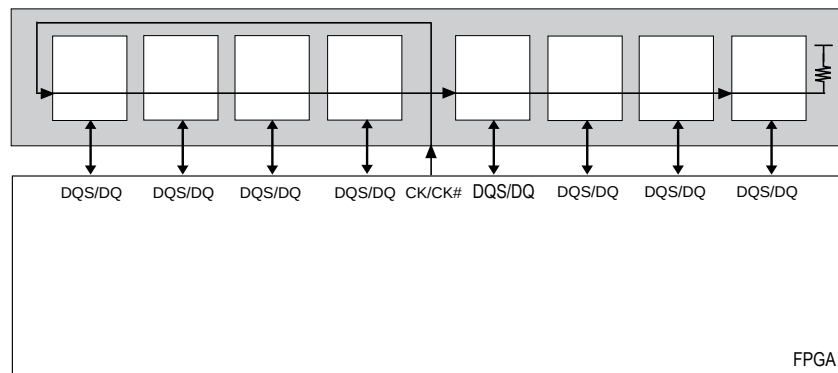Figure 7-15: DDR3 SDRAM Unbuffered Module Clock Topology



Because the data and read strobe signals are still point-to-point, take special care to ensure that the timing relationship between the CK/CK# and DQS signals (t_{DQSS} , t_{DSS} , and t_{DSH}) during a write is met at every device on the modules. In a similar way, read data coming back into the FPGA from the memory is also staggered.

The Arria V GZ devices have leveling circuitry to address these two situations. There is one leveling circuit per I/O sub-bank (for example, I/O sub-bank 1A, 1B, and 1C each has one leveling circuitry). These delay chains are PVT-compensated by the same DQS delay settings as the DLL and DQS delay chains.

The DLL uses eight delay chains, such that each delay chain generates a 45° delay. The generated clock phases are distributed to every DQS logic block that is available in the I/O sub-bank. The delay chain taps then feed


a multiplexer controlled by the UniPHY megafunction to select which clock phases are to be used for that x4 or x 8 DQS group. Each group can use a different tap output from the read-leveling and write-leveling delay chains to compensate for the different CK/CK# delay going into each device on the module.

Dynamic OCT Control

The dynamic OCT control block includes all the registers that are required to dynamically turn the on-chip parallel termination (R_T OCT) on during a read and turn R_T OCT off during a write.

The following figure shows the dynamic OCT control block.

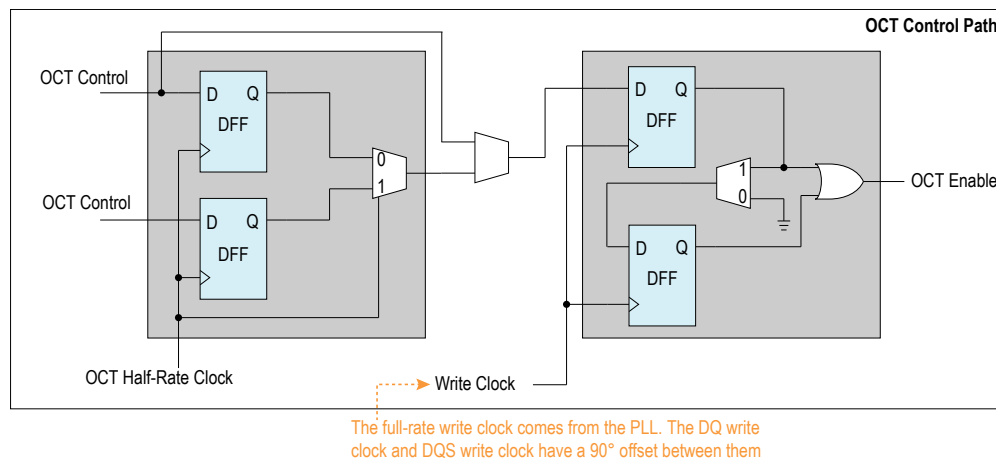Figure 7-16: Dynamic OCT Control Block for Arria V Devices



For more information about dynamic OCT control, refer to the *I/O Features in Arria V Devices* chapter.

IOE Registers

The IOE registers are expanded to allow source-synchronous systems to have faster register-to-FIFO transfers and resynchronization. All top, bottom, and right IOEs have the same capability.

Input Registers


The input path consists of the DDR input registers and the read FIFO block. You can bypass each block of the input path.

There are three registers in the DDR input registers block. Registers A and B capture data on the positive and negative edges of the clock while register C aligns the captured data. Register C uses the same clock as Register A.

The read FIFO block resynchronizes the data to the system clock domain and lowers the data rate to half rate.

The following figure shows the registers available in the Arria V input path. For DDR3 and DDR2 SDRAM interfaces, the DQS and DQSn signals must be inverted. If you use Altera's memory interface IPs, the DQS and DQSn signals are automatically inverted.

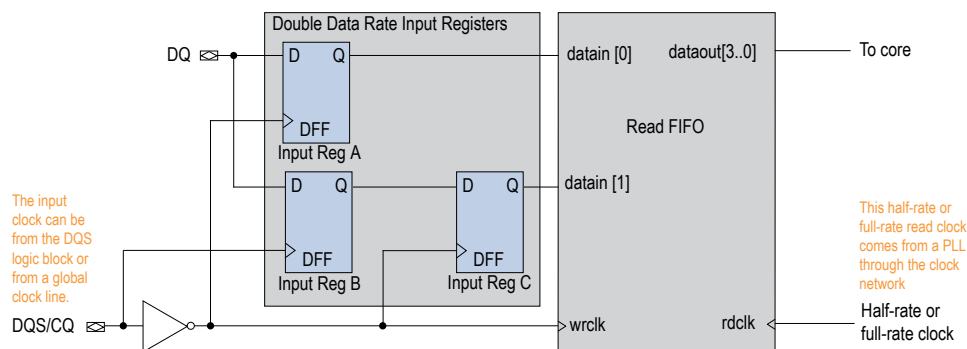Figure 7-17: IOE Input Registers for Arria V Devices



Output Registers


The Arria V output and output-enable path is divided into the HDR block, and output and output-enable registers. The device can bypass each block of the output and output-enable path.

The output path is designed to route combinatorial or registered single data rate (SDR) outputs and full-rate or half-rate DDR outputs from the FPGA core. Half-rate data is converted to full-rate with the HDR block, clocked by the half-rate clock from the PLL.

The output-enable path has a structure similar to the output path—ensuring that the output-enable path goes through the same delay and latency as the output path.


The following figure shows the registers available in the Arria V GX, GT, SX, and ST output and output-enable paths.

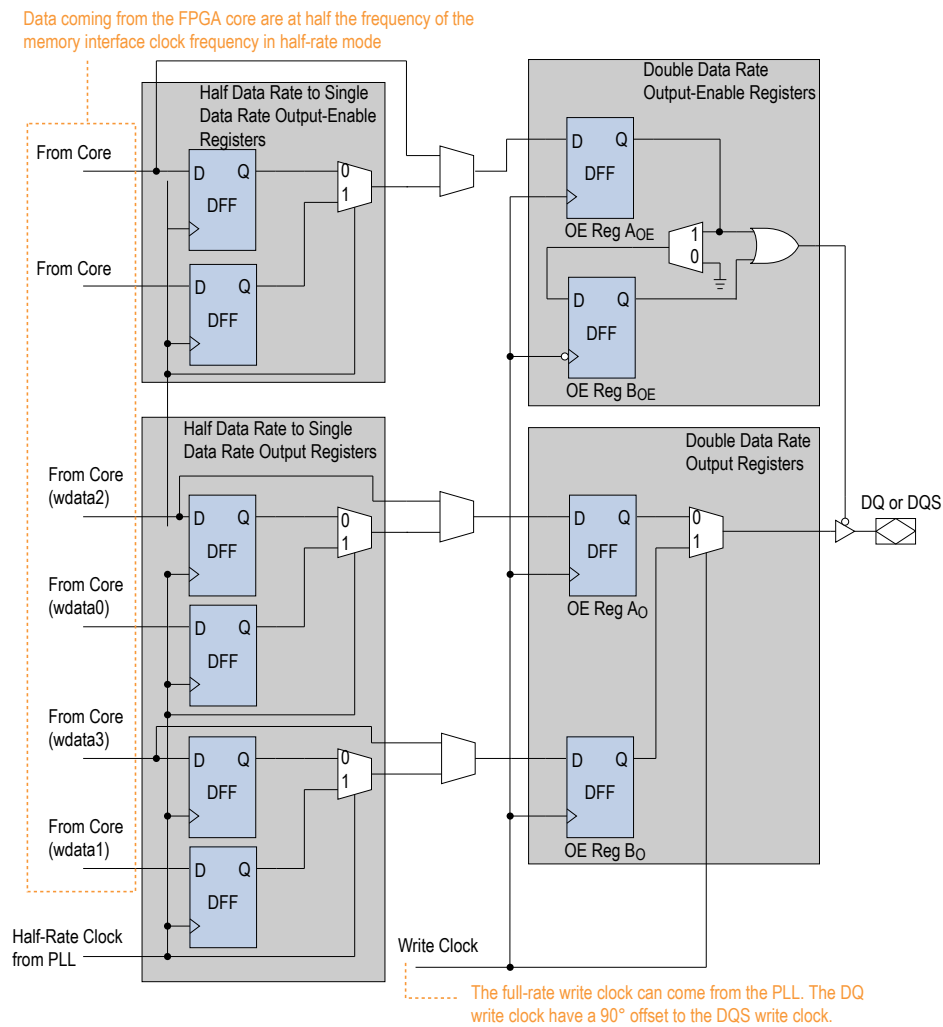Figure 7-18: IOE Output and Output-Enable Path Registers for Arria V GX, GT, SX, and ST Devices



The following figure shows the registers available in the Arria V GZ output and output-enable paths. You can bypass each register block of the output and output-enable paths.

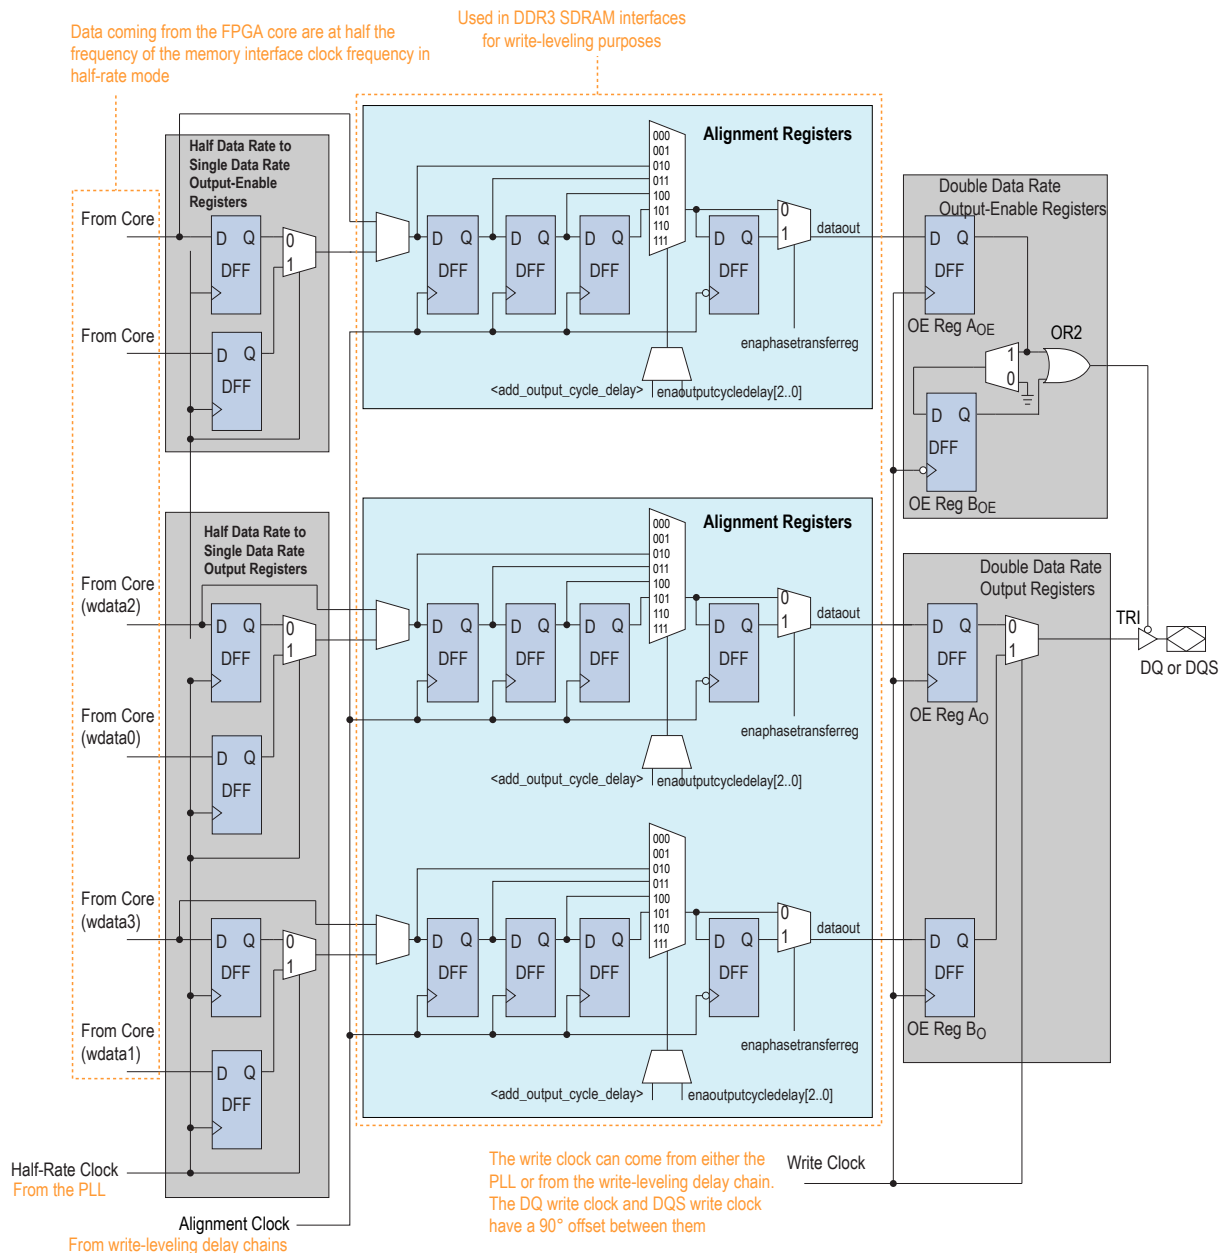Figure 7-19: IOE Output and Output-Enable Path Registers for Arria V GZ Devices



Delay Chain


The Arria V devices contain run-time adjustable delay chains in the I/O blocks and the DQS logic blocks. You can control the delay chain setting through the I/O or the DQS configuration block output.

Every I/O block contains a delay chain between the following elements:

- The output registers and output buffer
- The input buffer and input register
- The output enable and output buffer
- The R_T OCT enable-control register and output buffer


The following figure shows the delay chains in an I/O block in the Arria V GX, GT, SX, and ST devices.

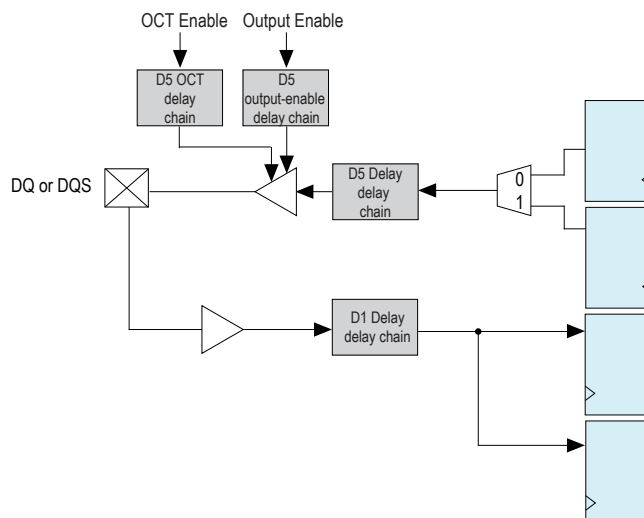Figure 7-20: Delay Chains in an I/O Block Arria V GX, GT, SX, and ST Devices




The following figure shows the delay chains in an I/O block in the Arria V GZ devices.

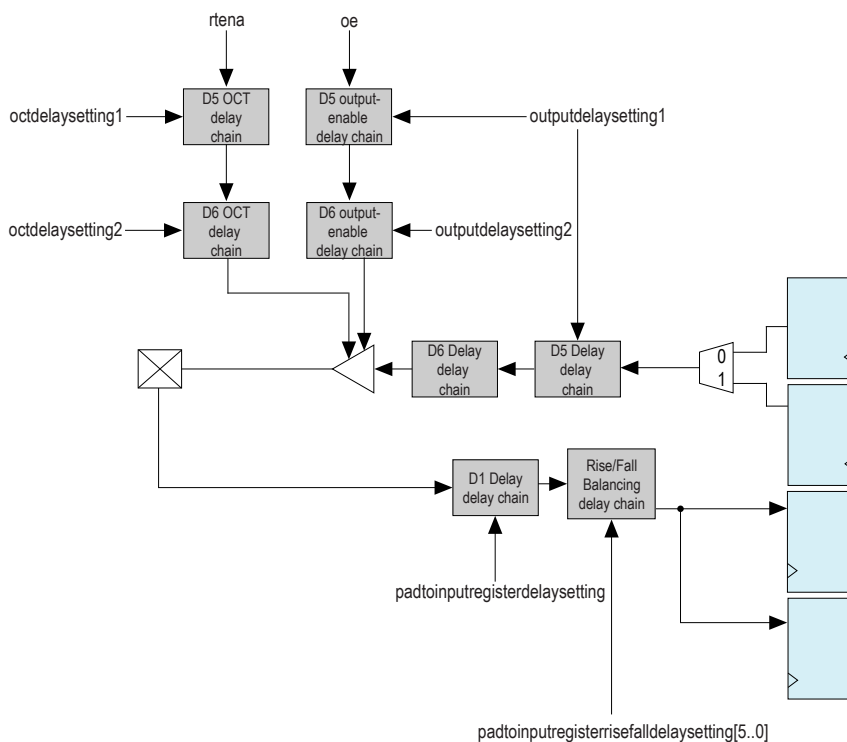Figure 7-21: Delay Chains in an I/O Block Arria V GZ Devices



Each DQS logic block contains a delay chain after the `dqsbusout` output and another delay chain before the `dqsenable` input. The following figure shows the delay chains in the DQS input path.

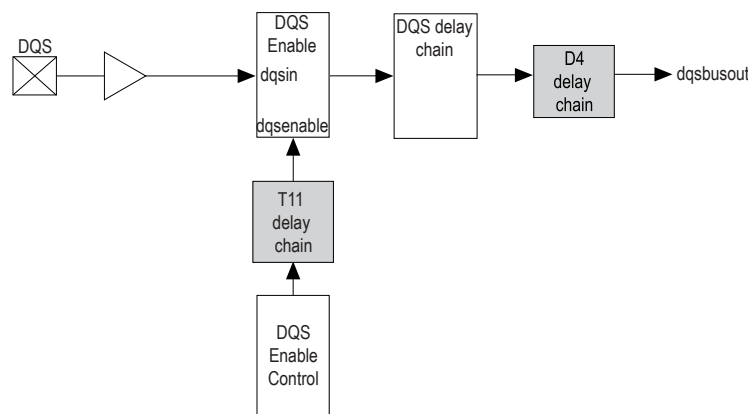Figure 7-22: Delay Chains in the DQS Input Path



Hard Memory Controller

The Arria V GX, GT, SX, and ST devices feature dedicated hard memory controllers. You can use the hard memory controllers for DDR2 and DDR3 SDRAM interfaces. Compared to the memory controllers implemented using core logic, the hard memory controllers allow support for higher memory interface frequencies with shorter latency cycles.

The hard memory controllers use dedicated I/O pins as data, address, command, control, and clock pins for the SDRAM interface. If you do not use the hard memory controllers, you can use these dedicated pins as regular I/O pins.

Note: There is no hard memory controller in the Arria V GZ devices.

The hard memory controller is functionally similar to the High-Performance Controller II (HPC II). For more information, refer to the [Functional Description—HPC II Controller](#) chapter of the *External Memory Interface Handbook*.

For detailed information about application of the hard memory interface, refer to the [Functional Description—Hard Memory Interface](#) chapter of the *External Memory Interface Handbook*.

Features of the Hard Memory Controller

Table 7-11: Features of the Arria V Hard Memory Controller

Feature	Description
Memory Interface Data Width	8, 16, and 32 bit data 16 bit data + 8 bit ECC 32 bit data + 8bit ECC
Memory Density	The controller supports up to four gigabits density parts and two chip selects.
Memory Burst Length	- DDR3—Burst length of 8 and burst chop of 4 - DDR2—Burst lengths of 4 and 8


Feature	Description
Command and Data Reordering	The controller increases efficiency through the support for out-of-order execution of DRAM commands—with address collision detection-and in-order return of results.
Starvation Control	A starvation counter ensures that all requests are served after a predefined time-out period. This function ensures that data with low priority access are not left behind when reordering data for efficiency.
User-Configurable Priority Support	When the controller detects a high priority request, it allows the request to bypass the current queuing request. This request is processed immediately and thus reduces latency.
Avalon [®] -MM Data Slave Local Interface	By default, the controller supports the Avalon Memory-Mapped protocol.
Bank Management	By default, the controller provides closed-page bank management on every access. The controller intelligently keeps a row open based on incoming traffic. This feature improves the efficiency of the controller especially for random traffic.
Streaming Reads and Writes	The controller can issue reads or writes continuously to sequential addresses every clock cycle if the bank is open. This function allows for very high efficiencies with large amounts of data.
Bank Interleaving	The controller can issue reads or writes continuously to 'random' addresses.
Predictive Bank Management	The controller can issue bank management commands early so that the correct row is open when the read or write occurs. This increases efficiency.
Multiport Interface	The interface allows you to connect up to six data masters to access the memory controller through the local interface. You can update the multiport scheduling configuration without interrupting traffic on a port.
Built-in Burst Adaptor	The controller can accept bursts of arbitrary sizes on its local interface and map these bursts to efficient memory commands.
Run-time Configuration of the Controller	This feature provides support for updates to the timing parameters without requiring reconfiguration of the FPGA, apart from the standard compile-time setting of the timing parameters.
On-Die Termination	The controller controls the on-die termination (ODT) in the memory, which improves signal integrity and simplifies your board design.
User-Controlled Refresh Timing	You can optionally control when refreshes occur—allowing the refreshes to avoid clashing of important reads or writes with the refresh lock-out time.
Low Power Modes	You can optionally request the controller to put the memory into the self-refresh or deep power-down modes.
Partial Array Self-Refresh	You can select the region of memory to refresh during self-refresh through the mode register to save power.

Feature	Description
ECC	Standard Hamming single error correction, double error detection (SEDED) error correction code (ECC) support: 32 bit data + 8 bit ECC 16 bit data + 8 bit ECC
Additive Latency	With additive latency, the controller can issue a READ/WRITE command after the ACTIVATE command to the bank prior to t_{RCD} to increase the command efficiency. Caution: Efficiency degradation may occur when using the additive latency feature with the hard memory controller for DDR3 SDRAM interfaces at 533 MHz.
Write Acknowledgment	The controller supports write acknowledgment on the local interface.
User Control of Memory Controller Initialization	The controller supports initialization of the memory controller under the control of user logic—for example, through the software control in the user system if a processor is present.
Controller Bonding Support	You can bond two controllers to achieve wider data width for higher bandwidth applications.

Multi-Port Front End

The multi-port front end (MPFE) and its associated fabric interface provide up to six command ports, four read-data ports and four write-data ports, through which user logic can access the hard memory controller. The following figure shows a simplified diagram of the Arria V hard memory interface with the MPFE.

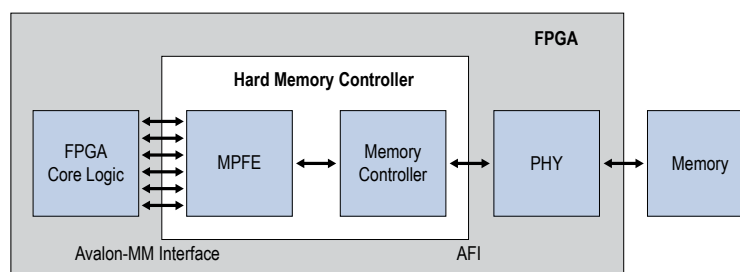Figure 7-23: Simplified Diagram of the Arria V Hard Memory Interface



Bonding Support


You can bond one port of any data width (64, 128, or 256 bits) from two hard memory controllers to support wider data widths. When you bond two hard memory controllers, the data going out of the controllers to the user logic is synchronized. However, the data going out of the controllers to the memory is not synchronized.

The bonding controllers are not synchronized and remain independent with two separate address buses and two independent command buses. These buses are calibrated separately.

Note: Only one bonding feature is available per package through the core fabric. A memory interface that uses the bonding feature has higher average latency.


The following figure shows the bonding of two opposite hard memory controllers through the core fabric.

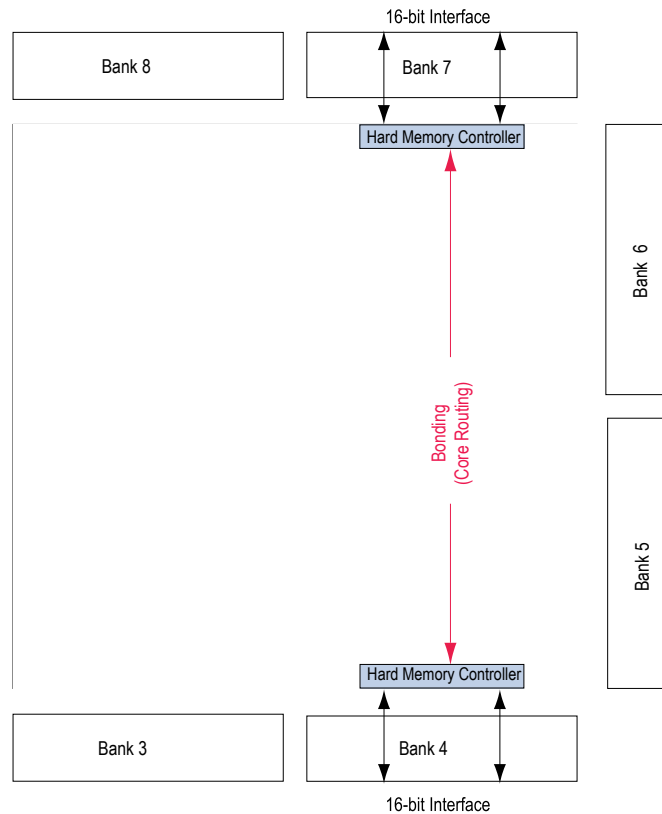Figure 7-24: Hard Memory Controllers Bonding Support in Arria V GX A1 and A3 Devices




The following figure shows the bonding of opposite and same side hard memory controllers through the core fabric.

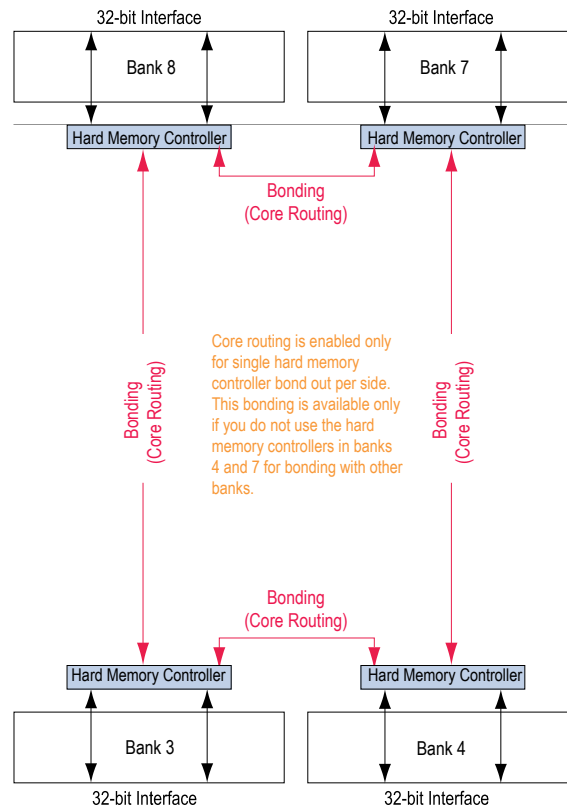Figure 7-25: Hard Memory Controllers Bonding Support in Arria V GX A5, A7, B1, B3, B5, and B7 devices, and Arria V GT D3 and D7 Devices



The following figure shows the bonding of opposite and same side hard memory controllers through the core fabric.

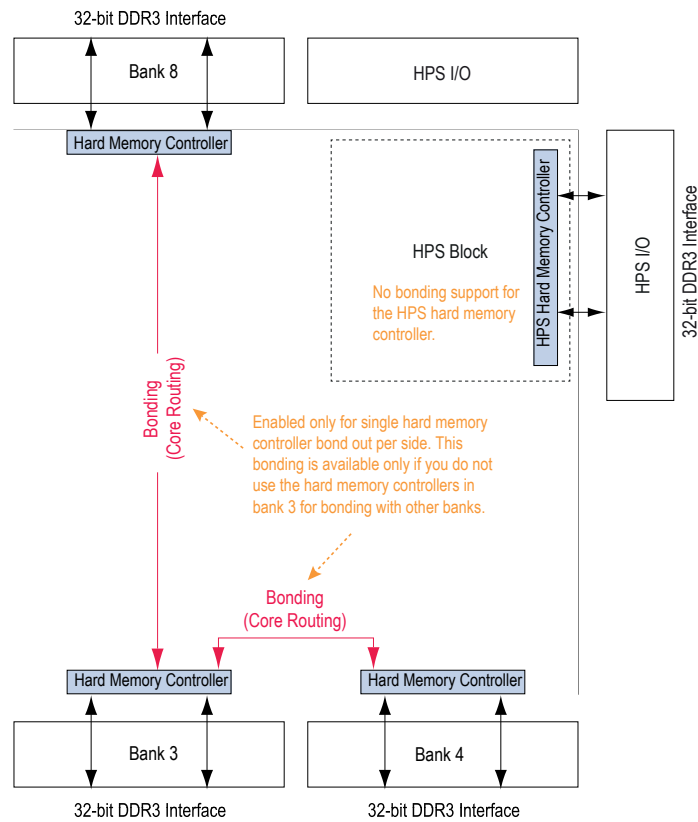Figure 7-26: Hard Memory Controllers in Arria V SX B3 and B5 Devices, and Arria V ST D3 and D5 Devices



For more information about the dedicated pins, refer to the [Arria V Device Family Pin Connection Guidelines](#).

Document Revision History

Date	Version	Changes
November 2012	2012.11.19	• Reorganized content and updated template. • Added information for Arria V GZ, including a topic on the leveling circuitry. • Added a list of supported external memory interface standards using the hard memory controller and soft memory controller. • Added performance information for external memory interfaces and the HPS external memory interfaces. • Separated the DQ/DQS groups tables into separate topics for each device variant for easy reference. • Moved the PHYCLK networks pin placement guideline to the Planning Pin and FPGA Resources chapter of the <i>External Memory Interface Handbook</i>. • Moved information from the "Design Considerations" section into relevant topics. • Removed the "DDR2 SDRAM Interface" and "DDR3 SDRAM DIMM" sections. Refer to the relevant sections in the External Memory Interface Handbook for the information. • Updated the diagram for DQS/CQ/CQn/QK# pins and DLLs in Arria V GX A1 and A3 devices to add DLLs on the right, top left, and bottom left, and update the DLL connections to the pins. • Updated the term "Multiport logic" to "multi-port front end" (MPFE).
June 2012	2.0	Updated for the Quartus II software v12.0 release: • Restructured chapter. • Updated "Design Considerations", "DQS Postamble Circuitry", and "IOE Registers" sections. • Added SoC devices information. • Added Figure 7–4, Figure 7–8, and Figure 7–20.
November 2011	1.1	• Updated Table 7–2. • Added "PHY Clock (PHYCLK) Networks" and "UniPHY IP" sections. • Restructured chapter.
May 2011	1.0	Initial release.

Configuration, Design Security, and Remote System Upgrades in Arria V Devices

8

2012.11.19

AV-52008

 [Subscribe](#)

 [Feedback](#)

This chapter describes the configuration schemes, design security, and remote system upgrade that are supported by the Arria® V devices.

For more information about the following topics, refer to the following documents:

- For the configuration features supported for each configuration scheme, refer to the [Arria V Device Overview](#).
- For the CvP configuration scheme, refer to the [Configuration via Protocol \(CvP\) Implementation in Altera FPGAs User Guide](#).
- For the Configuration via HPS configuration scheme, refer to the [Hard Processor System Technical Reference Manual](#).
- For details about partial reconfiguration, refer to the [Design Planning for Partial Reconfiguration](#) chapter in the Quartus II handbook.
- For the estimated uncompressed Raw Binary File (.rbf) sizes, FPP DCLK-to-DATA [] ratio, and timing parameters, refer to the [Arria V Device Datasheet](#).

Enhanced Configuration and Configuration via Protocol

Table 8-1: Configuration Modes and Features of Arria V Devices

Arria V devices support 1.8 V, 2.5 V, 3.0 V, and 3.3 V²⁹ programming voltages and several configuration modes.

Mode	Data Width	Max Clock Rate (MHz)	Max Data Rate (Mbps)	Decompression	Design Security	Partial Reconfiguration	Remote System Update
AS through the EPCS and EPCQ serial configuration device	1 bit, 4 bits	100	—	Yes	Yes	—	Yes

²⁹ Arria V GZ does not support 3.3 V.

Mode	Data Width	Max Clock Rate (MHz)	Max Data Rate (Mbps)	Decompression	Design Security	Partial Reconfiguration	Remote System Update
PS through CPLD or external microcontroller	1 bit	125	125	Yes	Yes	—	—
FPP	8 bits	125	—	Yes	Yes	—	Parallel flash loader
	16 bits	125	—	Yes	Yes	Yes ³⁰	
	32 bits ³¹	100	—	Yes	Yes	—	
CvP (PCIe)	x1, x2, x4, and x8 lanes	—	—	Yes	Yes	Yes	—
JTAG	1 bit	33	33	—	—	—	—
Configuration via HPS	16 bits	125	—	Yes	Yes	Yes ³⁰	Parallel flash loader
	32 bits	100	—	Yes	Yes	—	

Instead of using an external flash or ROM, you can configure the Arria V devices through PCIe using CvP. The CvP mode offers the fastest configuration rate and flexibility with the easy-to-use PCIe hard IP block interface. The Arria V CvP implementation conforms to the PCIe 100 ms power-up-to-active time requirement.

Note: For PCIe Gen3, which is supported in Arria V GZ devices, CvP supports update mode only.

For more information about CvP, refer to the [Configuration via Protocol \(CvP\) Implementation in Altera FPGAs User Guide](#).

MSEL Pin Settings

To select a configuration scheme, hardwire the MSEL pins to V_{CCPGM} or GND without pull-up or pull-down resistors.

Note: Do not drive the MSEL pins with a microprocessor or another device.

³⁰ Supported at a clock rate of 50-62.5 MHz.

³¹ Arria V GZ only

Table 8-2: MSEL Pin Settings for Each Configuration Scheme of Arria V Devices

Configuration Scheme	Compression Feature	Design Security Feature	V _{CCPGM} (V) ³²	Power-On Reset (POR) Delay	Valid MSEL[4..0]	Device Variant Support
FPP x8	Disabled	Disabled	1.8/2.5/3.0/3.3	Fast	10100	All
				Standard	11000	All
	Disabled	Enabled	1.8/2.5/3.0/3.3	Fast	10101	All
				Standard	11001	All
	Enabled	Enabled/Disabled	1.8/2.5/3.0/3.3	Fast	10110	All
				Standard	11010	All
FPP x16	Disabled	Disabled	1.8/2.5/3.0/3.3	Fast	00000	All
				Standard	00100	All
	Disabled	Enabled	1.8/2.5/3.0/3.3	Fast	00001	All
				Standard	00101	All
	Enabled	Enabled/Disabled	1.8/2.5/3.0/3.3	Fast	00010	All
				Standard	00110	All
FPP x32	Disabled	Disabled	1.8/2.5/3.0	Fast	01000	Arria V GZ
				Standard	01100	Arria V GZ
	Disabled	Enabled	1.8/2.5/3.0	Fast	01001	Arria V GZ
				Standard	01101	Arria V GZ
	Enabled	Enabled/Disabled	1.8/2.5/3.0	Fast	01010	Arria V GZ
				Standard	01110	Arria V GZ
PS	Enabled/Disabled	Enabled/Disabled	1.8/2.5/3.0/3.3	Fast	10000	All
				Standard	10001	All
AS (x1 and x4)	Enabled/Disabled	Enabled/Disabled	3.0/3.3	Fast	10010	All
				Standard	10011	All
JTAG-based configuration	Disabled	Disabled	—	—	Use any valid MSEL pin settings above	All


Note: You must also select the configuration scheme in the **Configuration** page of the **Device and Pin Options** dialog box in the Quartus® II software. Based on your selection, the option bit in the programming file is set accordingly.

Configuration Sequence

Describes the configuration sequence and each configuration stage.

³² The Arria V GZ device does not support 3.3 V.

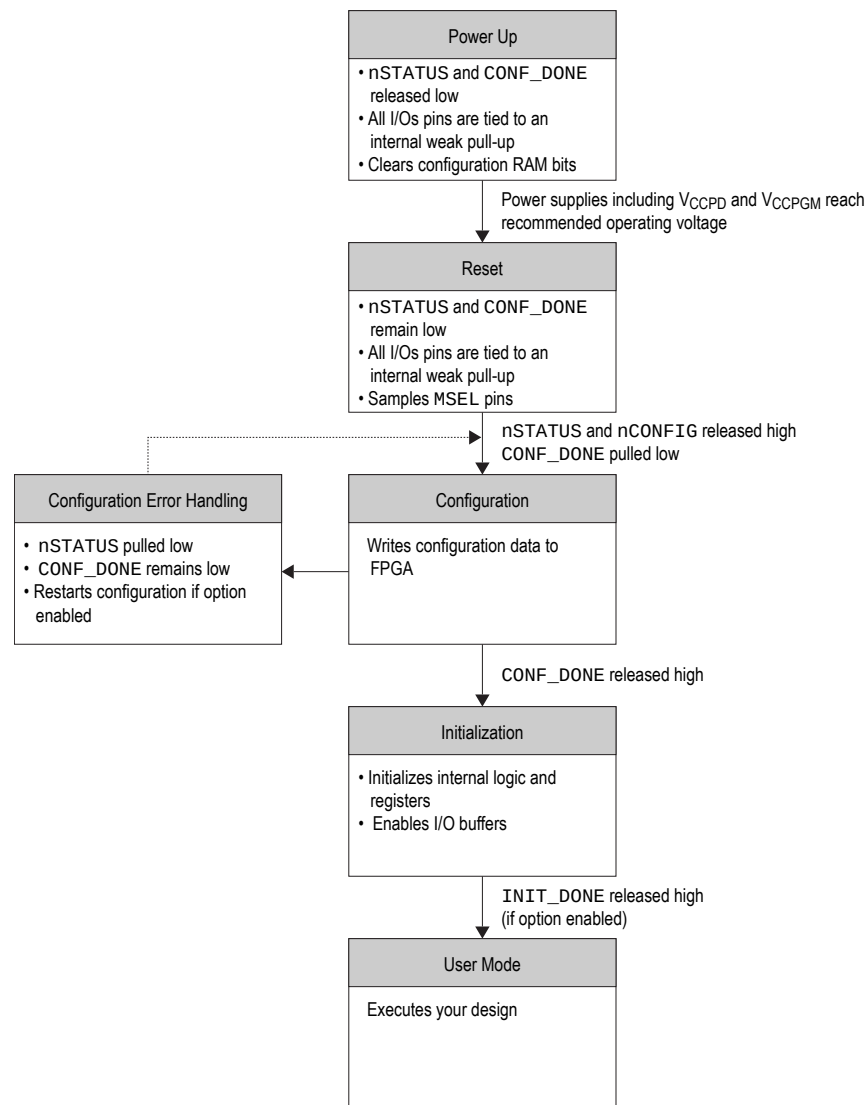Figure 8-1: Configuration Sequence for Arria V Devices



You can initiate reconfiguration at any stage by pulling the nCONFIG pin low to at least the minimum t_{CFG} low-pulse width. When this pin is pulled low, the nSTATUS and CONF_DONE pins are pulled low and all I/O pins are tied to an internal weak pull-up.

Power Up

Power up all the power supplies that are monitored by the POR circuitry. All power supplies, including VCCPGM and VCCPD, must ramp up from 0 V to the recommended operating voltage level within the ramp-up time specification. Otherwise, hold the nCONFIG pin low until all the power supplies reach the recommended voltage level.

For more information about the ramp-up time specifications, refer to the [Power Management in Arria V Devices](#) chapter.

V_{CCPGM} Pin

The configuration input buffers do not have to share power lines with the regular I/O buffers in Arria V devices.

The operating voltage for the configuration input pin is independent of the I/O banks power supply, V_{CCIO}, during configuration. Therefore, Arria V devices do not require configuration voltage constraints on V_{CCIO}.

For more information about configuration pin connections, refer to the [Arria V Device Family Pin Connection Guidelines](#).

V_{CCPD} Pin

Use the V_{CCPD} pin, a dedicated programming power supply, to power the I/O pre-drivers and JTAG I/O pins (TCK, TMS, TDI, and TDO). The supported configuration voltages are 2.5, 3.0, and 3.3 V for all Arria V devices except for Arria V GZ devices. The supported configuration voltages for Arria V GZ devices are 2.5 and 3.3 V.

If V_{CCIO} of the bank is set to 2.5 V or lower, V_{CCPD} must be powered up at 2.5 V. If V_{CCIO} is set greater than 2.5 V, V_{CCPD} must be greater than V_{CCIO}. For example, when V_{CCIO} is set to 3.0 V, V_{CCPD} must be set at 3.0 V or above. When V_{CCIO} is set to 3.3 V, V_{CCPD} must be set at 3.3 V.

For more information about the configuration pins, refer to [Device Configuration Pins](#).

Reset

POR delay is the time frame between the time when all the power supplies monitored by the POR circuitry reach the recommended operating voltage and when nSTATUS is released high and the Arria V device is ready to begin configuration.

Set the POR delay using the MSEL pins. For the MSEL pin settings, refer to [MSEL Pin Settings](#) on page 2.

The user I/O pins are tied to an internal weak pull-up until the device is configured. For the POR delay specification, refer to the [Arria V Device Datasheet](#).

Configuration

For more information about the DATA [] pins for each configuration scheme, refer to the appropriate configuration scheme.

Configuration Error Handling

To restart configuration automatically, turn on the **Auto-restart configuration after error** option in the **General** page of the **Device and Pin Options** dialog box in the Quartus II software.

If you do not turn on this option, you can monitor the nSTATUS pin to detect errors. To restart configuration, pull the nCONFIG pin high for at least the duration of t_{CFG}.

For more information about t_{STATUS} and t_{CFG} timing parameters, refer to the [Arria V Device Datasheet](#).

Initialization

The initialization clock source is from the internal oscillator, CLKUSR pin, or DCLK pin. By default, the internal oscillator is the clock source for initialization. If you use the internal oscillator, the Arria V device will be provided with enough clock cycles for proper initialization.

Note: If you use the optional CLKUSR pin as the initialization clock source and the nCONFIG pin is pulled low to restart configuration during device initialization, ensure that the CLKUSR or DCLK pin continues toggling until the nSTATUS pin goes low and then goes high again.

The CLKUSR pin provides you with the flexibility to synchronize initialization of multiple devices or to delay initialization. Supplying a clock on the CLKUSR pin during initialization does not affect configuration. After the CONF_DONE pin goes high, the CLKUSR or DCLK pin is enabled after the time specified by t_{CD2CU} . When this time period elapses, Arria V devices require a minimum number of clock cycles as specified by T_{init} to initialize properly and enter user mode as specified by the t_{CD2UMC} parameter.

For more information about t_{CD2CU} , t_{init} , and t_{CD2UMC} timing parameters, and initialization clock source, refer to the [Arria V Device Datasheet](#).

User Mode

You can enable the optional INIT_DONE pin to monitor the initialization stage. After the INIT_DONE pin is pulled high, initialization completes and your design starts executing. The user I/O pins will then function as specified by your design.

Device Configuration Pins

Configuration Pins Summary

The following table lists the Arria V configuration pins and their power supply.

Note: The TDI, TMS, TCK, and TDO pins are powered by V_{CCPD} of the bank in which the pin resides.

Note: The CLKUSR, DEV_OE, DEV_CLRN, DATA[15..5], and DATA[31..16] pins are powered by V_{CCPGM} during configuration and by V_{CCIO} of the bank in which the pin resides if you use it as a user I/O pin.

Table 8-3: Configuration Pin Summary for Arria V Devices

Configuration Pin	Configuration Scheme	Input/Output	User Mode	Powered By
TDI	JTAG	Input	—	V_{CCPD}
TMS	JTAG	Input	—	V_{CCPD}
TCK	JTAG	Input	—	V_{CCPD}
TDO	JTAG	Output	—	V_{CCPD}
CLKUSR	All schemes	Input	I/O	V_{CCPGM}/V_{CCIO}
CRC_ERROR	Optional, all schemes	Output	I/O	Pull-up
CONF_DONE	All schemes	Bidirectional	—	$V_{CCPGM}/\text{Pull-up}$
DCLK	FPP and PS	Input	—	V_{CCPGM}
	AS	Output	—	V_{CCPGM}
DEV_OE	Optional, all schemes	Input	I/O	V_{CCPGM}/V_{CCIO}
DEV_CLRN	Optional, all schemes	Input	I/O	V_{CCPGM}/V_{CCIO}

Configuration Pin	Configuration Scheme	Input/Output	User Mode	Powered By
INIT_DONE	Optional, all schemes	Output	I/O	Pull-up
MSEL[4..0]	All schemes	Input	—	V _{CCPGM}
nSTATUS	All schemes	Bidirectional	—	V _{CCPGM} /Pull-up
nCE	All schemes	Input	—	V _{CCPGM}
nCEO	All schemes	Output	I/O	Pull-up
nCONFIG	All schemes	Input	—	V _{CCPGM}
DATA[15..5]	FPP x8 and x16	Input	I/O	V _{CCPGM} /V _{CCIO}
DATA[31..16] ³³	FPP x32	Input	I/O	V _{CCPGM} /V _{CCIO}
DATA[4..0] ³³	FPP x8, x16, and x32	Input	I/O	V _{CCPGM} /V _{CCIO}
nCSO/DATA4 ³⁴	AS	Output	—	V _{CCPGM}
	FPP	Input	—	V _{CCPGM}
AS_DATA[3..1]/DATA[3..1] ³⁴	AS	Bidirectional	—	V _{CCPGM}
	FPP	Input	—	V _{CCPGM}
AS_DATA0/DATA0/ASDO ³⁴	AS	Bidirectional	—	V _{CCPGM}
	FPP and PS	Input	—	V _{CCPGM}
AS_DATA0/ASDO ³³	AS	Bidirectional	—	V _{CCPGM}
AS_DATA[3..1] ³³	AS	Bidirectional	—	V _{CCPGM}

For details about each configuration pin, refer to the [Arria V Device Family Pin Connection Guidelines](#).

Configuration Pin Options in the Quartus II Software

The following table lists the dual-purpose configuration pins available in the **Device and Pin Options** dialog box in the Quartus II software.

Table 8-4: Configuration Pin Options

Configuration Pin	Category Page	Option
CLKUSR	General	Enable user-supplied start-up clock (CLKUSR)

³³ These pins are applicable for Arria V GZ devices only.

³⁴ These pins are applicable for all Arria V devices except for Arria V GZ devices.

Configuration Pin	Category Page	Option
DEV_CLRn	General	Enable device-wide reset (DEV_CLRn)
DEV_OE	General	Enable device-wide output enable (DEV_OE)
INIT_DONE	General	Enable INIT_DONE output
nCEO	General	Enable nCEO pin
CRC_ERROR	Error Detection CRC	Enable Error Detection CRC_ERROR pin
		Enable open drain on CRC_ERROR pin
		Enable internal scrubbing
PR_REQUEST	General	Enable PR_REQUEST pin
PR_READY	General	Enable PR_READY pin
PR_ERROR	General	Enable PR_ERROR pin
PR_DONE	General	Enable PR_DONE pin

For more information about the device and pin options dialog box setting, refer to the [Reviewing Printed Circuit Board Schematics with the Quartus II Software](#) chapter in volume 2 of the Quartus II Handbook.

Fast Passive Parallel Configuration

The FPP configuration scheme uses an external host, such as a microprocessor, MAX[®] II device, or MAX V device. This scheme is the fastest method to configure Arria V devices. The FPP configuration scheme supports 8- and 16-bits data width.

You can use an external host to control the transfer of configuration data from an external storage such as flash memory to the FPGA. The design that controls the configuration process resides in the external host. You can store the configuration data in **.rbf**, Hexadecimal (Intel-Format) File (**.hex**), or Tabular Text File (**.ttf**) formats.

You can use the PFL megafunction with a MAX II or MAX V device to read configuration data from the flash memory device and configure the Arria V device.


For details about the PFL megafunction, refer to the [Parallel Flash Loader Megafunction User Guide](#).

Note: Two DCLK falling edges are required after the CONF_DONE pin goes high to begin the initialization of the device for both uncompressed and compressed configuration data in an FPP configuration.

Fast Passive Parallel Single-Device Configuration

To configure an Arria V device, connect the device to an external host as shown in the following figure.

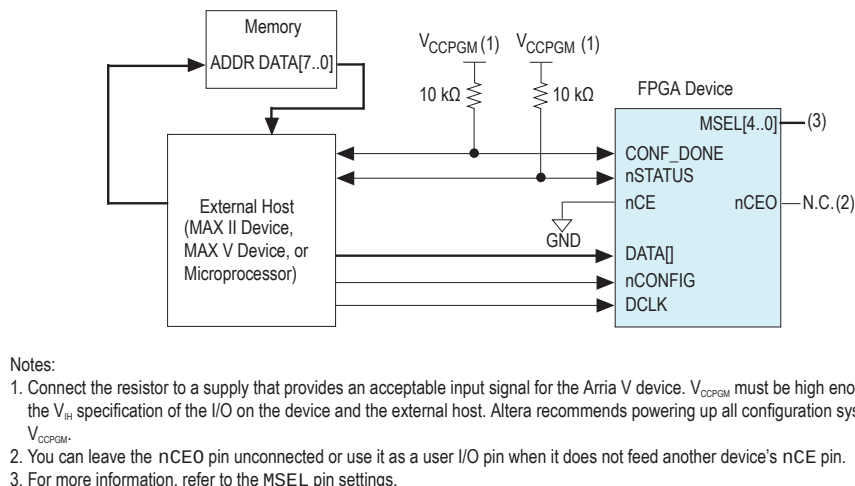Figure 8-2: Single Device FPP Configuration Using an External Host



Fast Passive Parallel Multi-Device Configuration

You can configure multiple Arria V devices that are connected in a chain.

Pin Connections and Guidelines

Observe the following pin connections and guidelines for this configuration setup:

- Tie the following pins of all devices in the chain together:
 - nCONFIG
 - nSTATUS
 - DCLK
 - DATA []
 - CONF_DONE


By tying the CONF_DONE and nSTATUS pins together, the devices initialize and enter user mode at the same time. If any device in the chain detects an error, configuration stops for the entire chain and you must reconfigure all the devices. For example, if the first device in the chain flags an error on the nSTATUS pin, it resets the chain by pulling its nSTATUS pin low.

- Ensure that DCLK and DATA [] are buffered for every fourth device to prevent signal integrity and clock skew problems.
- All devices in the chain must use the same data width.
- If you are configuring the devices in the chain using the same configuration data, the devices must be of the same package and density.

Using Multiple Configuration Data

To configure multiple Arria V devices in a chain using multiple configuration data, connect the devices to an external host as shown in the following figure.

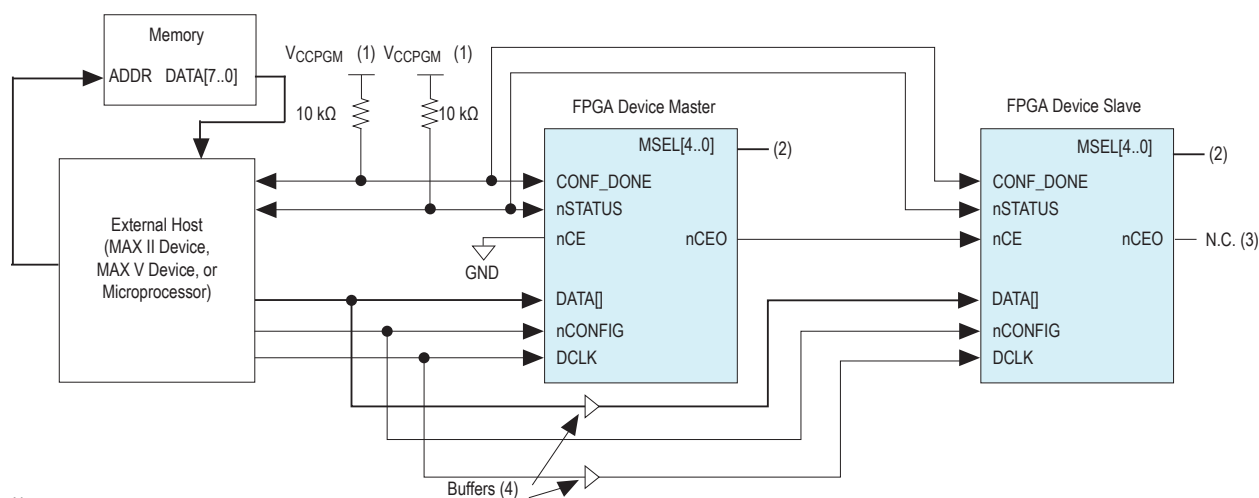Figure 8-3: Multiple Device FPP Configuration Using an External Host When Both Devices Receive a Different Set of Configuration Data



Notes:


1. Connect the resistor to a supply that provides an acceptable input signal for the Arria V device. V_{CCPGM} must be high enough to meet the V_{IH} specification of the I/O on the device and the external host. Altera recommends powering up all configuration system I/Os with V_{CCPGM} .
2. For more information, refer to the MSEL pin settings.
3. You can leave the nCEO pin unconnected or use it as a user I/O pin when it does not feed another device's nCE pin.
4. Connect the repeater buffers between the Arria V master and slave device for DATA[] and DCLK for every fourth device.

When a device completes configuration, its nCEO pin is released low to activate the nCE pin of the next device in the chain. Configuration automatically begins for the second device in one clock cycle.

Using One Configuration Data

To configure multiple Arria V devices in a chain using one configuration data, connect the devices to an external host as shown in the following figure.

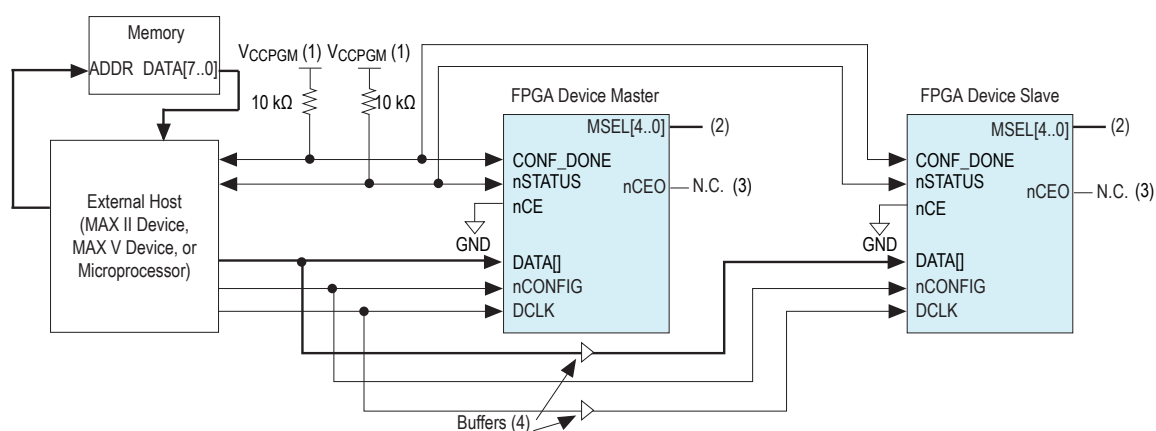Figure 8-4: Multiple Device FPP Configuration Using an External Host When Both Devices Receive the Same Data



Notes:

1. Connect the resistor to a supply that provides an acceptable input signal for the Aria V device. V_{CCPGM} must be high enough to meet the V_{IH} specification of the I/O on the device and the external host. Altera recommends powering up all configuration system I/Os with V_{CCPGM} .
2. For more information, refer to the MSEL pin settings.
3. You can leave the nCE0 pin unconnected or use it as a user I/O pin when it does not meet another device's nCE pin.
4. Connect the repeater buffers between the Aria V master and slave device for DATA[] and DCLK for every fourth device.

The `nCE` pins of the device in the chain are connected to GND, allowing configuration for these devices to begin and end at the same time.

Active Serial Configuration

The AS configuration scheme supports AS x1 (1-bit data width) and AS x4 (4-bit data width) modes. The AS x4 mode provides four times faster configuration time than the AS x1 mode. In the AS configuration scheme, the Arria V device controls the configuration interface.

DATA Clock (DCLK)

Arria V devices generate the serial clock, DCLK, that provides timing to the serial interface. In the AS configuration scheme, Arria V devices drive control signals on the falling edge of DCLK and latch the configuration data on the following falling edge of this clock pin.

The maximum DCLK frequency supported by the AS configuration scheme is 100 MHz except for the AS multi-device configuration scheme. You can source DCLK using CLKUSR or the internal oscillator. If you use the internal oscillator, you can choose a 12.5, 25, 50, or 100 MHz clock under the **Device and Pin Options** dialog box, in the **Configuration** page of the Quartus II software.

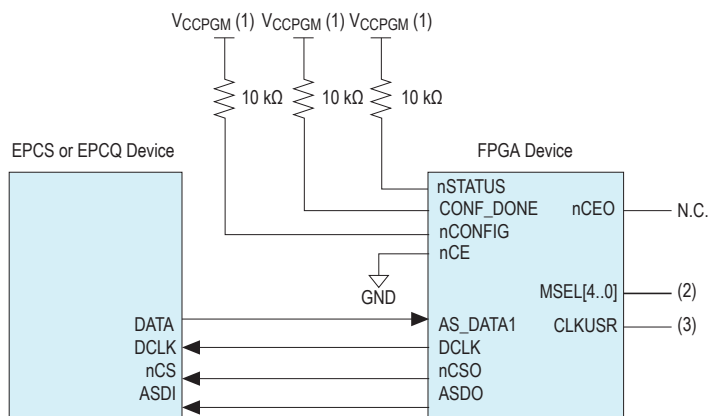
After power-up, DCLK is driven by a 12.5 MHz internal oscillator by default. The Arria V device determines the clock source and frequency to use by reading the option bit in the programming file.

For details about the DCLK frequency specification in the AS configuration scheme, refer to the [Arria V Device Datasheet](#).

Active Serial Single-Device Configuration

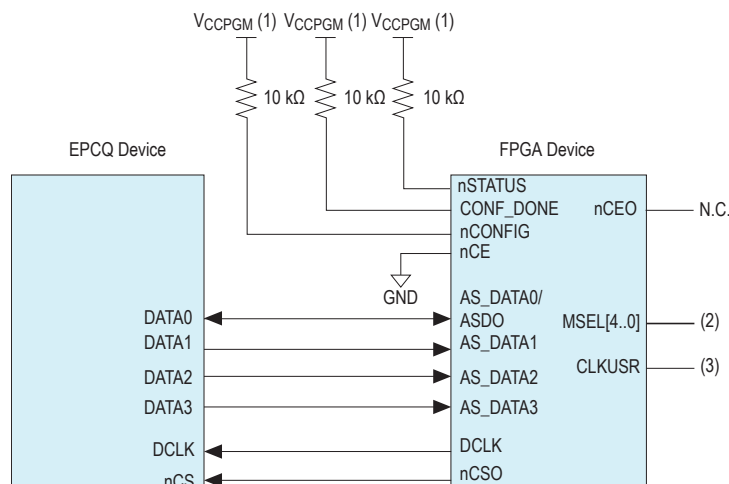
To configure an Arria V device, connect the device to a serial configuration (EPCS) device or quad-serial configuration (EPCQ) device, as shown in the following figures.

Figure 8-5: Single Device AS x1 Mode Configuration



Notes:

1. Connect the pull-up resistors to VCCPGM at 3.0- or 3.3-V power supply.
2. For more information, refer to the MSEL pin settings.
3. Use the CLKUSR pin to supply the external clock source to drive DCLK during configuration.

Figure 8-6: Single Device AS x4 Mode Configuration**Notes:**

1. Connect the pull-up resistors to VCCPGM at 3.0- or 3.3-V power supply.
2. For more information, refer to the MSEL pin settings.
3. Use the CLKUSR pin to supply the external clock source to drive DCLK during configuration.

Active Serial Multi-Device Configuration

You can configure multiple Arria V devices that are connected to a chain. Only AS x1 mode supports multi-device configuration.

The first device in the chain is the configuration master. Subsequent devices in the chain are configuration slaves.

Pin Connections and Guidelines

Observe the following pin connections and guidelines for this configuration setup:

- Hardwire the MSEL pins of the first device in the chain to select the AS configuration scheme. For subsequent devices in the chain, hardwire their MSEL pins to select the PS configuration scheme. Any other Altera® devices that support the PS configuration can also be part of the chain as a configuration slave.
- Tie the following pins of all devices in the chain together:
 - nCONFIG
 - nSTATUS
 - DCLK
 - DATA []
 - CONF_DONE


By tying the CONF_DONE, nSTATUS, and nCONFIG pins together, the devices initialize and enter user mode at the same time. If any device in the chain detects an error, configuration stops for the entire chain and you must reconfigure all the devices. For example, if the first device in the chain flags an error on the nSTATUS pin, it resets the chain by pulling its nSTATUS pin low.

- Ensure that DCLK and DATA [] are buffered every fourth device to prevent signal integrity and clock skew problems.

Using Multiple Configuration Data

To configure multiple Arria V devices in a chain using multiple configuration data, connect the devices to an EPCS or EPCQ device, as shown in the following figure.

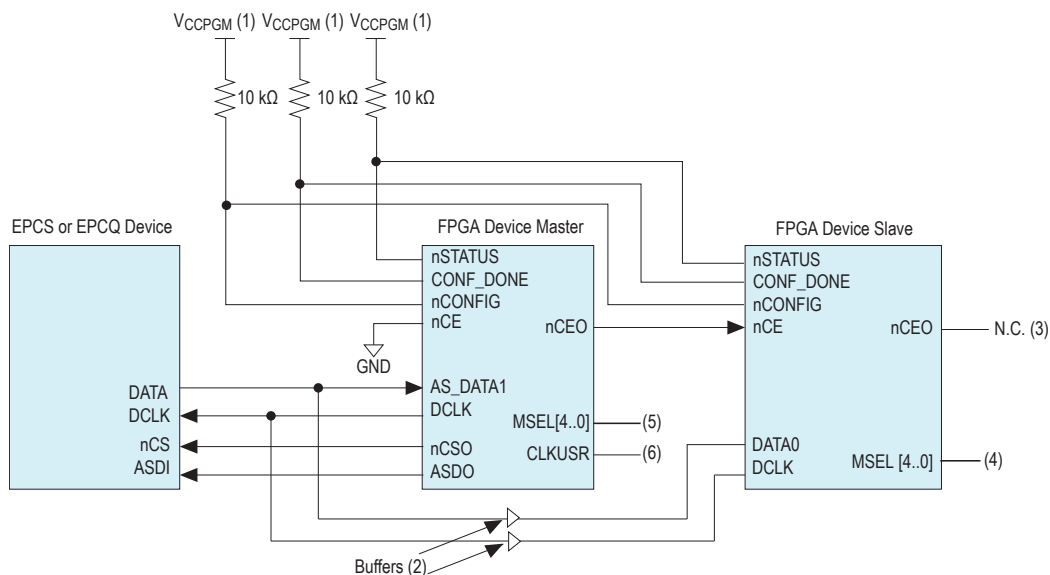Figure 8-7: Multiple Device AS Configuration When Both Devices in the Chain Receive Different Sets of Configuration Data



Notes:


1. Connect the pull-up resistors to V_{CCPGM} at a 3.0- or 3.3-V power supply.
2. Connect the repeater buffers between the Arria V master and slave device for AS_DATA1 or DATA0 and DCLK for every fourth device.
3. You can leave the nCEO pin unconnected or use it as a user I/O pin when it does not feed another device's nCE pin.
4. For the appropriate MSEL settings based on POR delay settings, set the slave device MSEL setting to the PS scheme.
5. For more information, refer to the MSEL pin settings.
6. Use the CLKUSR pin to supply the external clock source to drive DCLK during configuration.
7. For 50 MHz frequency, delay DCLK in reference to DATA0 by a minimum of 5 ns and a maximum of 10 ns.

When a device completes configuration, its nCEO pin is released low to activate the nCE pin of the next device in the chain. Configuration automatically begins for the second device in one clock cycle.

Using One Configuration Data

To configure multiple Arria V devices in a chain using one configuration data, connect the devices to an EPCS or EPCQ device, as shown in the following figure.

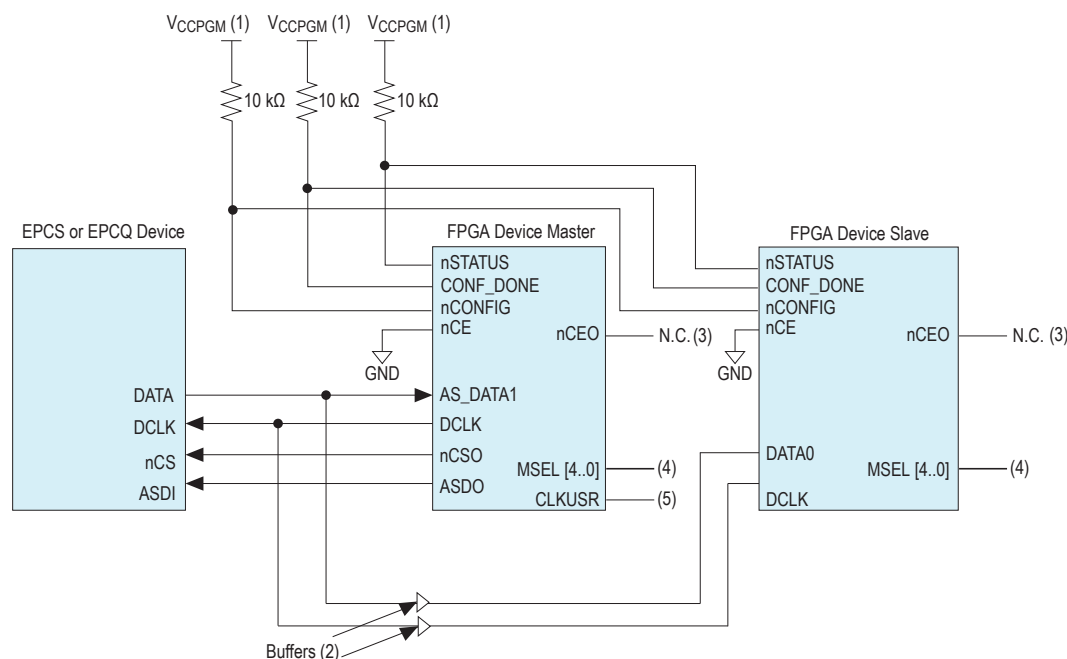Figure 8-8: Multiple Device AS Configuration When the Devices Receive the Same Data



Notes:

1. Connect the pull-up resistors to V_{CCPGM} at a 3.0- or 3.3-V power supply.
2. Connect the repeater buffers between the Arria V master and slave device for AS_DATA1 or DATA0 and DCLK for every fourth device.
3. You can leave the nCEO pin unconnected or use it as a user I/O pin when it does not feed another device's nCE pin.
4. For more information, refer to the MSEL pin settings.
5. Use the CLKUSR pin to supply the external clock source to drive DCLK during configuration.
6. For 50 MHz frequency, delay DCLK in reference to DATA0 by a minimum of 5 ns and a maximum of 10 ns.

Estimating the Active Serial Configuration Time

The AS configuration time is mostly the time it takes to transfer the configuration data from an EPCS or EPCQ device to the Arria V device.

Use the following equations to estimate the configuration time:

- AS x1 mode
 $\text{.rbf Size} \times (\text{minimum DCLK period} / 1 \text{ bit per DCLK cycle}) = \text{estimated minimum configuration time.}$
- AS x4 mode
 $\text{.rbf Size} \times (\text{minimum DCLK period} / 4 \text{ bits per DCLK cycle}) = \text{estimated minimum configuration time.}$

Compressing the configuration data reduces the configuration time. The amount of reduction varies depending on your design.

Using EPCS and EPCQ Devices

EPCS devices support AS x1 mode and EPCQ devices support AS x1 and AS x4 modes.

For more information about EPCS and EPCQ devices, refer to the following documents:

- *Serial Configuration (EPCS) Devices Datasheet*
- *Quad-Serial Configuration (EPCQ) Devices Datasheet*

Controlling EPCS and EPCQ Devices

During configuration, Arria V devices enable the EPCS or EPCQ device by driving its `nCS0` output pin low, which connects to the chip select (`nCS`) pin of the EPCS or EPCQ device. Arria V devices use the `DCLK` and `ASDO` pins to send operation commands and read address signals to the EPCS or EPCQ device. The EPCS or EPCQ device provides data on its serial data output (`DATA [ ]`) pin, which connects to the `AS_DATA [ ]` input of the Arria V devices.

Note: If you wish to gain control of the EPCS pins, hold the `nCONFIG` pin low and pull the `nCE` pin high. This causes the device to reset and tri-state the AS configuration pins.

Trace Length and Loading

The maximum trace length and loading apply to both single- and multi-device AS configuration setups as listed in the following table. The trace length is the length from the Arria V device to the EPCS or EPCQ device.

Table 8-5: Maximum Trace Length and Loading for AS x1 and x4 Configurations for Arria V Devices

Arria V Device AS Pins	Maximum Board Trace Length (Inches)		Maximum Board Load (pF)
	12.5/ 25/ 50 MHz	100 MHz	
DCLK	10	6	5
DATA [3 . . 0]	10	6	10
nCS0	10	6	10

Programming EPCS and EPCQ Devices

You can program EPCS and EPCQ devices in-system using a USB-Blaster™, EthernetBlaster, EthernetBlaster II, or ByteBlaster™ II download cable. Alternatively, you can program the EPCS or EPCQ using a microprocessor with the SRunner software driver.


In-system programming (ISP) offers you the option to program the EPCS or EPCQ either using an AS programming interface or a JTAG interface. Using the AS programming interface, the configuration data is programmed into the EPCS by the Quartus II software or any supported third-party software. Using the JTAG interface, an Altera IP called the serial flash loader (SFL) must be downloaded into the Arria V device to form a bridge between the JTAG interface and the EPCS or EPCQ. This allows the EPCS or EPCQ to be programmed directly using the JTAG interface.

For details about SFL and SRunner software driver, refer to the following documents:

- [AN 370: Using the Serial FlashLoader with the Quartus II Software](#)
- [AN 418: SRunner: An Embedded Solution for Serial Configuration Device Programming](#)

Programming EPCS Using the JTAG Interface

To program an EPCS device using the JTAG interface, connect the device as shown in the following figure.

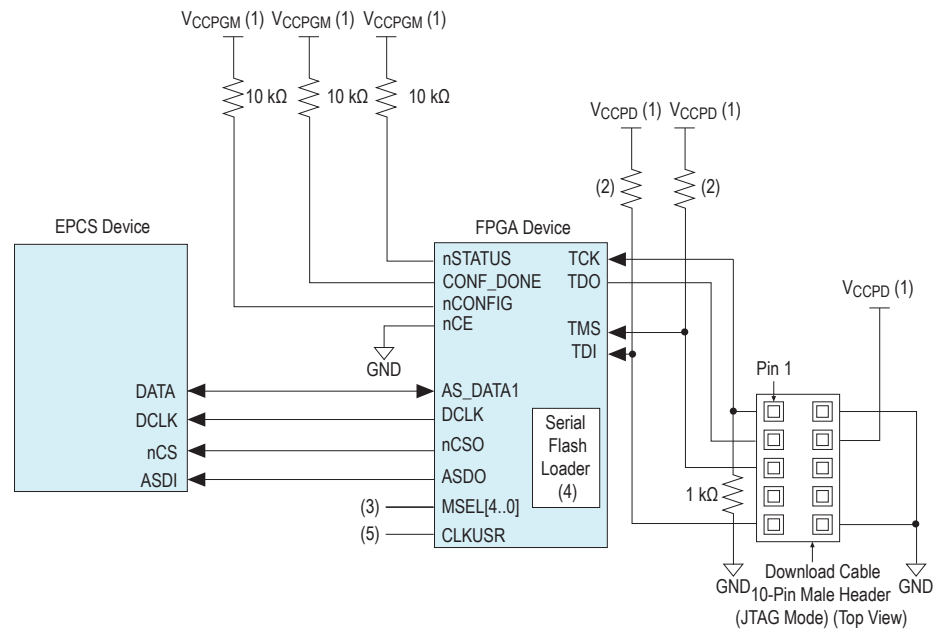
Figure 8-9: Connection Setup for Programming the EPCS Using the JTAG Interface**Notes:**

1. Connect the pull-up resistors to VCCPGM at a 3.0- or 3.3-V power supply.
2. The resistor value can vary from 1 kΩ to 10 kΩ. Perform signal integrity analysis to select the resistor value for your setup.
3. For more information, refer to the MSEL pin settings.
4. Instantiate SFL in your design to form a bridge between the EPCS and the Arria V device.
5. Use the CLKUSR pin to supply the external clock source to drive DCLK during configuration.

Programming EPCQ Using the JTAG Interface

To program an EPCQ device using the JTAG interface, connect the device as shown in the following figure.

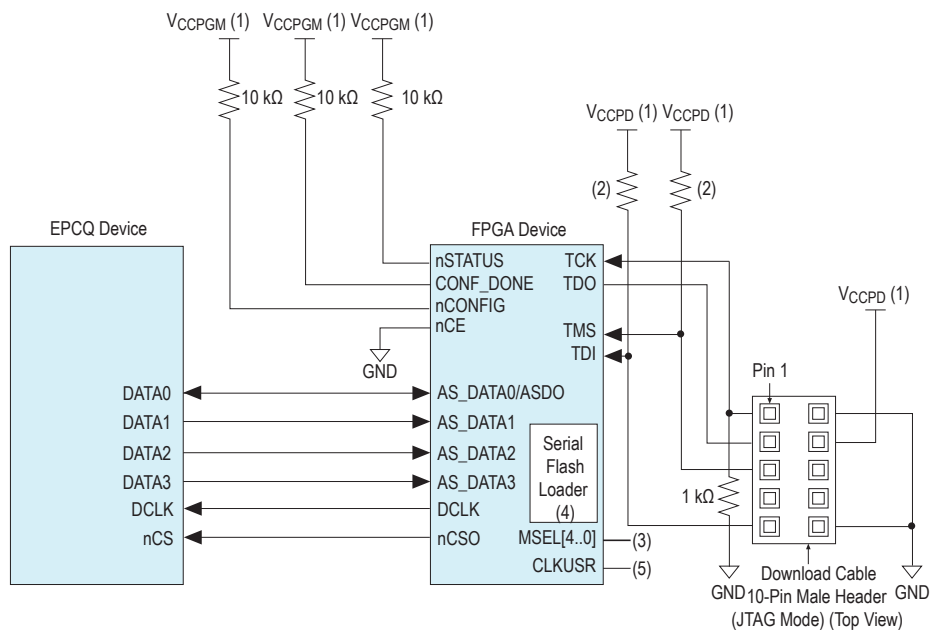Figure 8-10: Connection Setup for Programming the EPCQ Using the JTAG Interface




Notes:

1. Connect the pull-up resistors to VCCPGM at a 3.0- or 3.3-V power supply.
2. The resistor value can vary from 1 k Ω to 10 k Ω . Perform signal integrity analysis to select the resistor value for your setup.
3. For more information, refer to the MSEL pin settings.
4. Instantiate SFL in your design to form a bridge between the EPCS and the Arria V device.
5. Use the CLKUSR pin to supply the external clock source to drive DCLK during configuration.

Programming EPCS Using the Active Serial Interface

To program an EPCS device using the AS interface, connect the device as shown in the following figure.

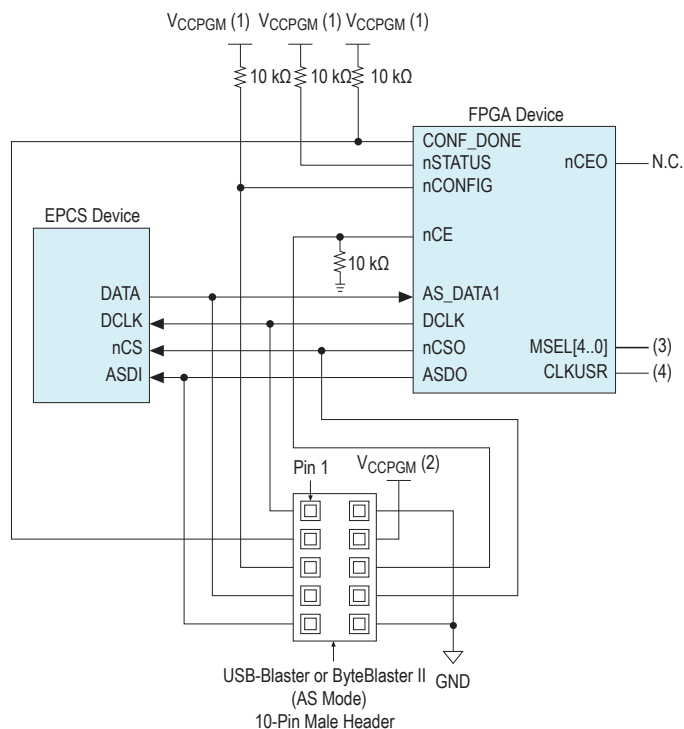
Figure 8-11: Connection Setup for Programming the EPCS Using the AS Interface**Notes:**

1. Connect the pull-up resistors to VCCPGM at a 3.0- or 3.3-V power supply.
2. Power up the USB-Blaster, ByteBlaster II, EthernetBlaster, or EthernetBlaster II cable's V_{CC(Trgt)} to VCCPGM.
3. For more information, refer to the MSEL pin settings.
4. Use the CLKUSR pin to supply the external clock source to drive DCLK during configuration.

Programming EPCQ Using the Active Serial Interface

To program an EPCQ device using the AS interface, connect the device as shown in the following figure.

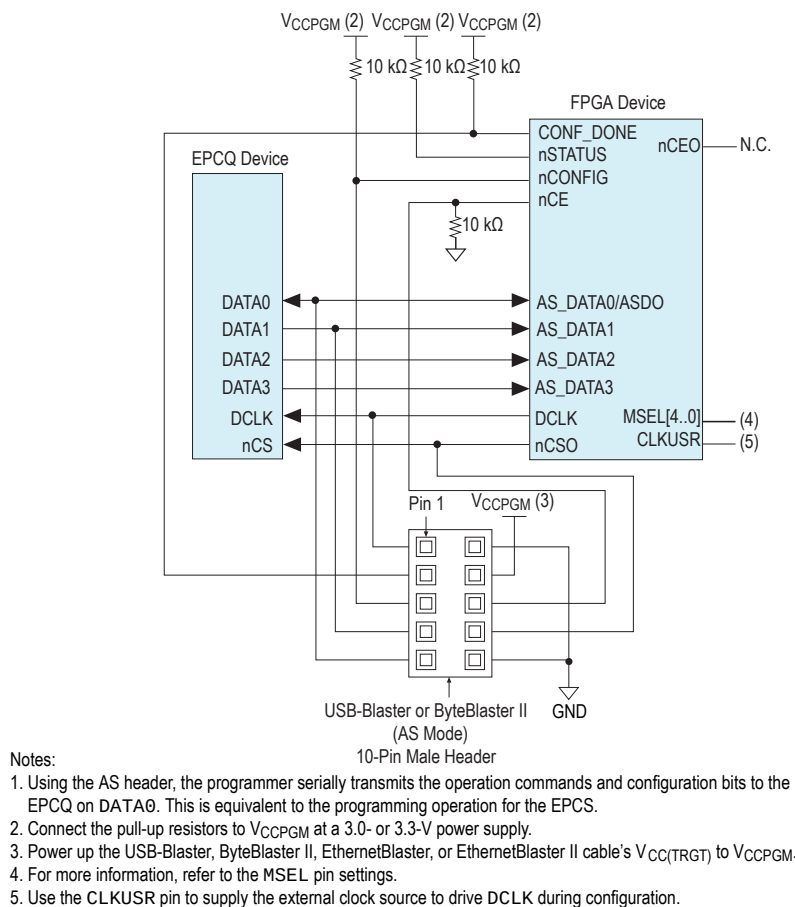Figure 8-12: Connection Setup for Programming the EPCQ Using the AS Interface



When programming the EPCS and EPCQ devices, the download cable disables access to the AS interface by driving the `nCE` pin high. The `nCONFIG` line is also pulled low to hold the Arria V device in the reset stage. After programming completes, the download cable releases `nCE` and `nCONFIG`, allowing the pull-down and pull-up resistors to drive the pin to GND and VCCPGM, respectively.

During the EPCQ programming using the download cable, DATA0 transfers the programming data, operation command, and address information from the download cable into the EPCQ. During the EPCQ verification using the download cable, DATA1 transfers the programming data back to the download cable.

Passive Serial Configuration

The PS configuration scheme uses an external host. You can use a microprocessor, MAX II device, MAX V device, or a host PC as the external host.

You can use an external host to control the transfer of configuration data from an external storage such as flash memory to the FPGA. The design that controls the configuration process resides in the external host.

You can store the configuration data in Programmer Object File (**.pof**), **.rbf**, **.hex**, or **.ttf**. If you are using configuration data in **.rbf**, **.hex**, or **.ttf**, send the LSB of each data byte first. For example, if the **.rbf** contains the byte sequence 02 1B EE 01 FA, the serial data transmitted to the device must be 0100-0000 1101-1000 0111-0111 1000-0000 0101-1111.

You can use the PFL megafunction with a MAX II or MAX V device to read configuration data from the flash memory device and configure the Arria V device.

For details, refer to the *Parallel Flash Loader Megafunction User Guide*.

For a PC host, connect the PC to the device using a download cable such as the Altera USB-Blaster USB port, ByteBlaster II parallel port, EthernetBlaster, and EthernetBlaster II download cables.


The configuration data is shifted serially into the DATA0 pin of the device.

If you are using the Quartus II programmer and the CLKUSR pin is enabled, you do not need to provide a clock source for the pin to initialize your device.

Passive Serial Single-Device Configuration Using an External Host

To configure an Arria V device, connect the device to an external host, as shown in the following figure.

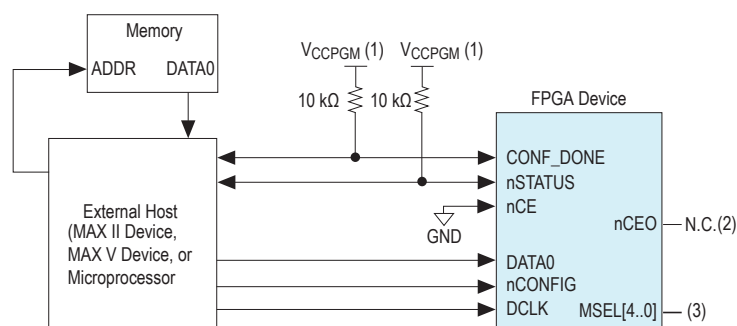Figure 8-13: Single Device PS Configuration Using an External Host




Notes:

1. Connect the resistor to a power supply that provides an acceptable input signal for the Arria V device. V_{CCPGM} must be high enough to meet the V_{IH} specification of the I/O on the device and the external host. Altera recommends powering up all the configuration system I/Os with V_{CCPGM} .
2. You can leave the $nCE0$ pin unconnected or use it as a user I/O pin when it does not feed another device's nCE pin.
3. For more information, refer to the MSEL pin settings.

Passive Serial Single-Device Configuration Using an Altera Download Cable

To configure an Arria V device, connect the device to a download cable, as shown in the following figure.

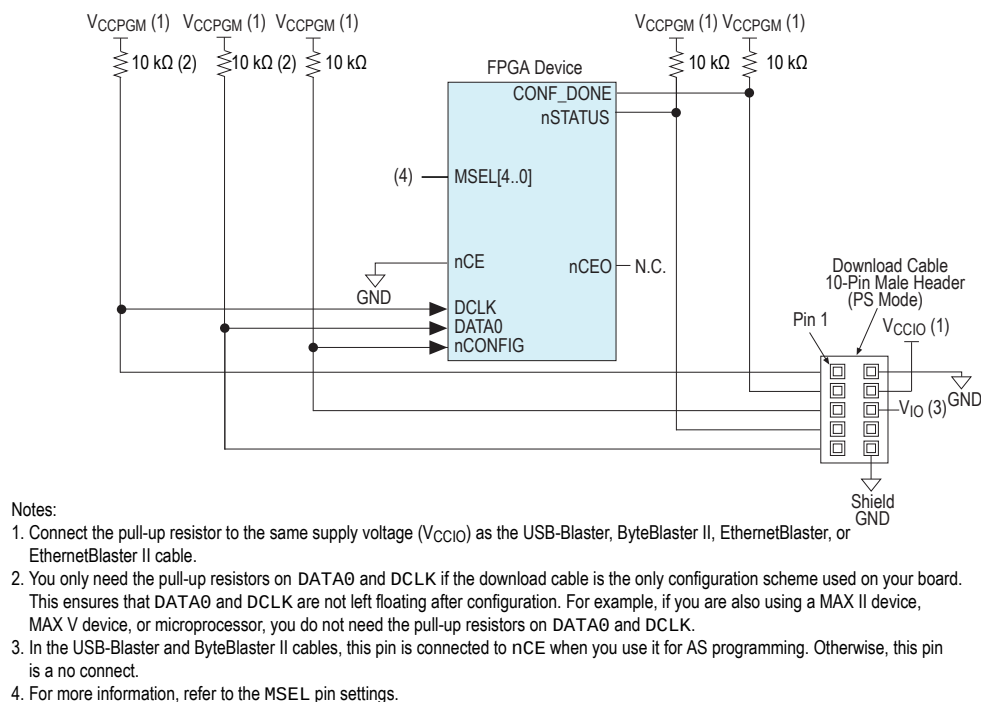Figure 8-14: Single Device PS Configuration Using an Altera Download Cable

Passive Serial Multi-Device Configuration

You can configure multiple Arria V devices that are connected in a chain.

Pin Connections and Guidelines

Observe the following pin connections and guidelines for this configuration setup:

- Tie the following pins of all devices in the chain together:
 - nCONFIG
 - nSTATUS
 - DCLK
 - DATA0
 - CONF_DONE


By tying the CONF_DONE and nSTATUS pins together, the devices initialize and enter user mode at the same time. If any device in the chain detects an error, configuration stops for the entire chain and you must reconfigure all the devices. For example, if the first device in the chain flags an error on the nSTATUS pin, it resets the chain by pulling its nSTATUS pin low.

- If you are configuring the devices in the chain using the same configuration data, the devices must be of the same package and density.

Using Multiple Configuration Data

To configure multiple Arria V devices in a chain using multiple configuration data, connect the devices to the external host as shown in the following figure.

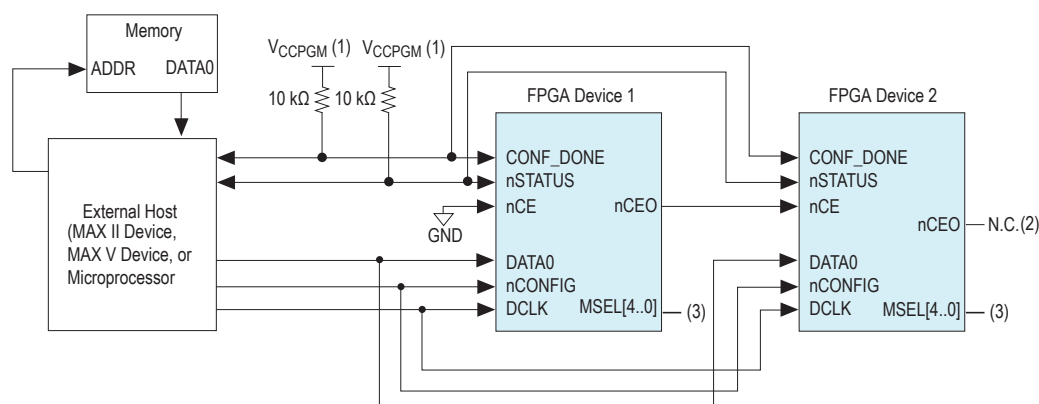Figure 8-15: Multiple Device PS Configuration when Both Devices Receive Different Sets of Configuration Data



Notes:


1. Connect the resistor to a power supply that provides an acceptable input signal for the Arria V device. V_{CCPGM} must be high enough to meet the V_{IH} specification of the I/O on the device and the external host. Altera recommends powering up all the configuration system I/Os with V_{CCPGM} .
2. You can leave the $nCEO$ pin unconnected or use it as a user I/O pin when it does not feed another device's nCE pin.
3. For more information, refer to the MSEL pin settings.

After a device completes configuration, its nCEO pin is released low to activate the nCE pin of the next device in the chain. Configuration automatically begins for the second device in one clock cycle.

Using One Configuration Data

To configure multiple Arria V devices in a chain using one configuration data, connect the devices to an external host, as shown in the following figure.

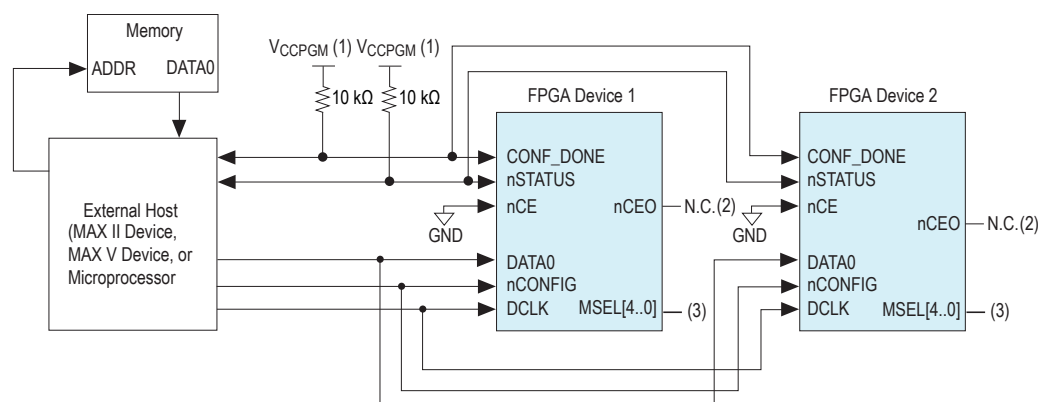Figure 8-16: Multiple Device PS Configuration When Both Devices Receive the Same Set of Configuration Data



Notes:


1. Connect the resistor to a power supply that provides an acceptable input signal for the Arria V device. V_{CCPGM} must be high enough to meet the V_{IH} specification of the I/O on the device and the external host. Altera recommends powering up all the configuration system I/Os with V_{CCPGM} .
2. You can leave the nCEO pin unconnected or use it as a user I/O pin.
3. For more information, refer to the MSEL pin settings.

The `nCE` pins of the devices in the chain are connected to GND, allowing configuration for these devices to begin and end at the same time.

Using PC Host and Download Cable

To configure multiple Arria V devices, connect the devices to a download cable, as shown in the following figure.

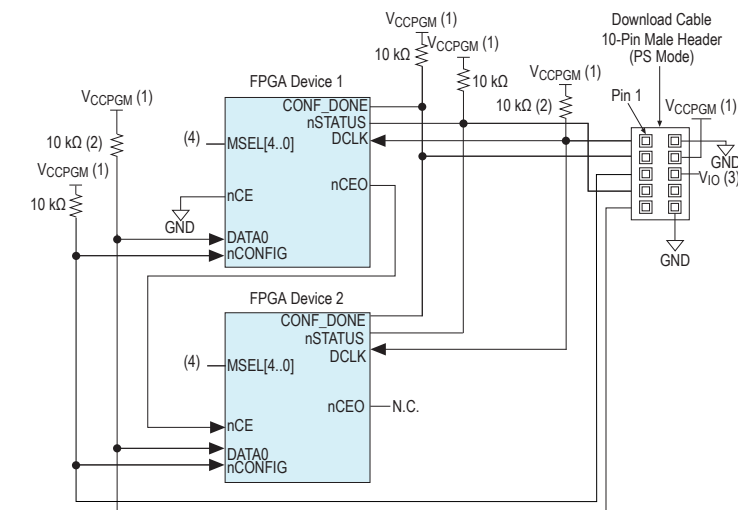Figure 8-17: Multiple Device PS Configuration Using an Altera Download Cable



Notes:

1. Connect the pull-up resistor to the same supply voltage (`VCCIO`) as the USB-Blaster, ByteBlaster II, EthernetBlaster, or EthernetBlaster II cable.
2. You only need the pull-up resistors on `DATA0` and `DCLK` if the download cable is the only configuration scheme used on your board. This ensures that `DATA0` and `DCLK` are not left floating after configuration. For example, if you are also using a configuration device, you do not need the pull-up resistors on `DATA0` and `DCLK`.
3. In the USB-Blaster and ByteBlaster II cables, this pin is connected to `nCE` when you use it for AS programming. Otherwise, this pin is a no connect.
4. For more information, refer to the MSEL pin settings.

When a device completes configuration, its `nCEO` pin is released low to activate the `nCE` pin of the next device. Configuration automatically begins for the second device.

JTAG Configuration

In Arria V devices, JTAG instructions take precedence over other configuration schemes.

The Quartus II software generates an SRAM Object File (`.sof`) that you can use for JTAG configuration using a download cable in the Quartus II software programmer. Alternatively, you can use the JRunner software with `.rbf` or a JAM™ Standard Test and Programming Language (STAPL) Format File (`.jam`) or JAM Byte Code File (`.jbc`) with other third-party programmer tools.

For detailed information about JTAG configuration pins and JTAG secure mode, refer to [Device Configuration Pins](#) on page 6 and [JTAG Secure Mode](#) on page 33.

For more information about JTAG and the supported download cables, refer to the following documents:

- [AN 425: Using Command-Line Jam STAPL Solution for Device Programming](#)
- [JTAG Boundary-Scan Testing in Arria V Devices](#) chapter
- [Programming Support for Jam STAPL Language](#) page
- [USB-Blaster Download Cable User Guide](#)
- [ByteBlaster II Download Cable User Guide](#)
- [EthernetBlaster Communications Cable User Guide](#)
- [EthernetBlaster II Communications Cable User Guide](#)

JTAG Single-Device Configuration

To configure a single device in a JTAG chain, the programming software sets the other devices to the bypass mode. A device in a bypass mode transfers the programming data from the TDI pin to the TDO pin through a single bypass register. The configuration data is available on the TDO pin one clock cycle later.


The Quartus II software can use the CONF_DONE pin to verify the completion of the configuration process through the JTAG port:

- CONF_DONE pin is low—indicates that configuration has failed.
- CONF_DONE pin is high—indicates that configuration was successful.

After the configuration data is transmitted serially using the JTAG TDI port, the TCK port is clocked an additional 1,222 cycles to perform device initialization.

To configure an Arria V device using a download cable, connect the device as shown in the following figure.

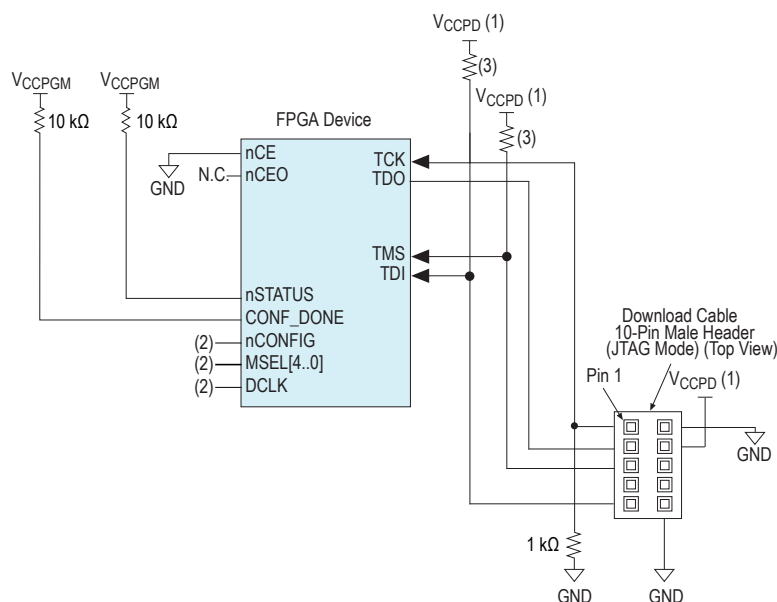Figure 8-18: JTAG Configuration of a Single Device Using a Download Cable




Notes:

1. Connect the pull-up resistor V_{CCPD} .
2. If you only use the JTAG configuration, connect nCONFIG to V_{CCPD} and MSEL [4..0] to GND. Pull DCLK either high or low, whichever is convenient on your board. If you are using JTAG in conjunction with another configuration scheme, connect MSEL [4..0], nCONFIG, and DCLK based on the selected configuration scheme.
3. The resistor value can vary from 1 kΩ to 10 kΩ. Perform signal integrity analysis to select the resistor value for your setup.
4. You must connect nCE to GND or drive it low for successful JTAG configuration.

To configure an Arria V device using a microprocessor, connect the device as shown in the following figure. You can use JRunner as your software driver.

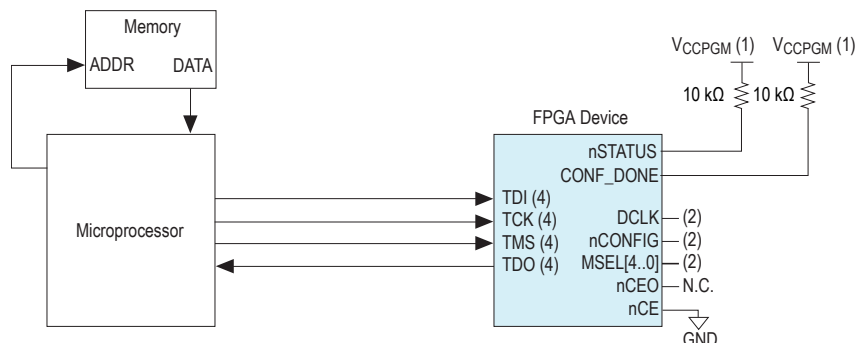Figure 8-19: JTAG Configuration of a Single Device Using a Microprocessor



Notes:

1. Connect the pull-up resistor to a supply that provides an acceptable input signal for all Arria V devices in the chain. V_{CCPGM} must be high enough to meet the V_{IH} specification of the I/O on the device.
2. If you only use the JTAG configuration, connect $nCONFIG$ to V_{CCPGM} and $MSEL[4..0]$ to GND. Pull $DCLK$ high or low. If you are using JTAG in conjunction with another configuration scheme, set the $MSEL[4..0]$ pins and tie $nCONFIG$ and $DCLK$ based on the selected configuration scheme.
3. Connect nCE to GND or drive it low.
4. The microprocessor must use the same I/O standard as V_{CCPD} to drive the JTAG pins.

For details about the JRunner software driver, refer to [AN 414: The JRunner Software Driver: An Embedded Solution for PLD JTAG Configuration](#).

JTAG Multi-Device Configuration

You can configure multiple devices in a JTAG chain.

Pin Connections and Guidelines


Observe the following pin connections and guidelines for this configuration setup:

- Isolate the $CONF\_DONE$ and $nSTATUS$ pins to allow each device to enter user mode independently.
- One JTAG-compatible header is connected to several devices in a JTAG chain. The number of devices in the chain is limited only by the drive capability of the download cable.
- If you have four or more devices in a JTAG chain, buffer the TCK , TDI , and TMS pins with an on-board buffer. You can also connect other Altera devices with JTAG support to the chain.
- JTAG-chain device programming is ideal when the system contains multiple devices or when testing your system using the JTAG boundary-scan testing (BST) circuitry.

Using a Download Cable

The following figure shows a multi-device JTAG configuration.

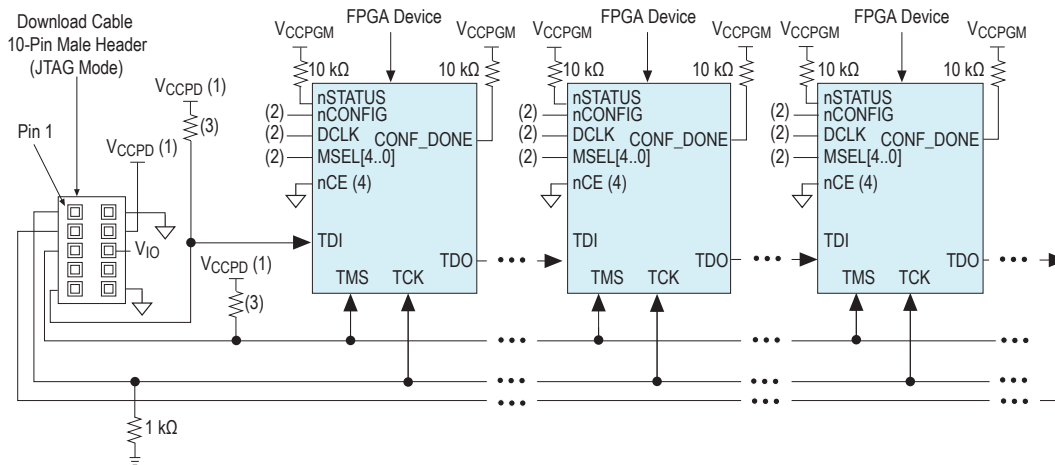Figure 8-20: JTAG Configuration of Multiple Devices Using a Download Cable



Notes:

1. Connect the pull-up resistor V_{CCPD} .
2. If you only use the JTAG configuration, connect $nCONFIG$ to V_{CCPGM} and $MSEL[4..0]$ to GND. Pull $DCLK$ either high or low, whichever is convenient on your board. If you are using JTAG in conjunction with another configuration scheme, connect $MSEL[4..0]$, $nCONFIG$, and $DCLK$ based on the selected configuration scheme.
3. The resistor value can vary from 1 kΩ to 10 kΩ. Perform signal integrity analysis to select the resistor value for your setup.
4. You must connect nCE to GND or drive it low for successful JTAG configuration.

For detailed information about combining the JTAG configuration with other configuration schemes, refer to [AN 656: Combining Multiple Configuration Schemes](#).

CONFIG_IO JTAG Instruction

The `CONFIG_IO` JTAG instruction allows you to configure the I/O buffers using the JTAG port before or during device configuration. When you issue this instruction, it interrupts configuration and allows you to issue all JTAG instructions. Otherwise, you can only issue the `BYPASS`, `IDCODE`, and `SAMPLE` JTAG instructions.

You can use the `CONFIG_IO` JTAG instruction to interrupt configuration and perform board-level testing. After the board-level testing is completed, you must reconfigure your device. Use the following methods to reconfigure your device:

- JTAG interface—issue the `PULSE_NCONFIG` JTAG instruction.
- FPP, PS, or AS configuration scheme—pulse the `nCONFIG` pin low.

Configuration Data Compression

Arria V devices can receive compressed configuration bitstream and decompress the data in real-time during configuration. Preliminary data indicates that compression typically reduces the configuration file size by 30% to 55% depending on the design.

Decompression is supported in all configuration schemes except the JTAG configuration scheme.

You can enable compression before or after design compilation.

Enabling Compression Before Design Compilation

To enable compression before design compilation, follow these steps:

1. On the Assignment Menu, click **Device**.
2. Select your Arria V device and then click **Device and Pin Options**.
3. In the **Device and Pin Options** window, select **Configuration** under the **Category** list and turn on **Generate compressed bitstreams**.

Enabling Compression After Design Compilation

To enable compression after design compilation, follow these steps:


1. On the File menu, click **Convert Programming Files**.
2. Select the programming file type (**.pof**, **.sof**, **.hex**, **.hexout**, **.rbf**, or **.tff**). For POF output files, select a configuration device.
3. Under the **Input files to convert** list, select **SOF Data**.
4. Click **Add File** and select an Arria V device **.sof**.
5. Select the name of the file you added to the **SOF Data** area and click **Properties**.
6. Turn on the **Compression** check box.

Using Compression in Multi-Device Configuration

The following figure shows a chain of two Arria V devices. Compression is only enabled for the first device.

This setup is supported by the AS or PS multi-device configuration only.

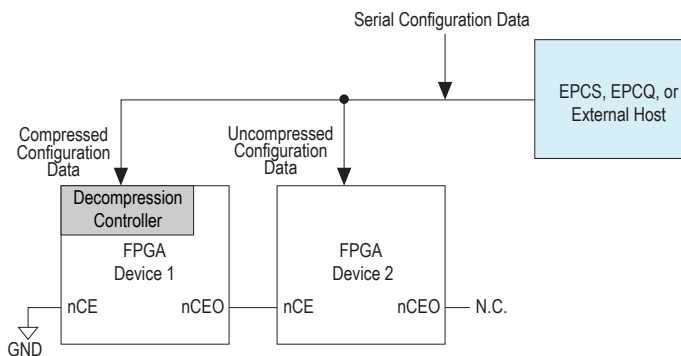
Figure 8-21: Compressed and Uncompressed Serial Configuration Data in the Same Configuration File



For the FPP configuration scheme, a combination of compressed and uncompressed configuration in the same multi-device configuration chain is not allowed because of the difference on the DCLK-to-DATA [] ratio.

Remote System Upgrades

Arria V devices contain dedicated remote system upgrade circuitry. You can use this feature to upgrade your system from a remote location.

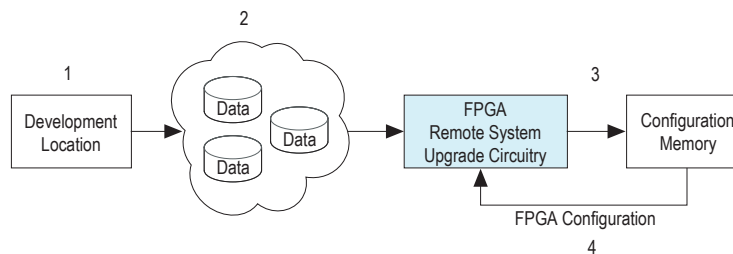Figure 8-22: Arria V Remote System Upgrade Block Diagram

You can design your system to manage remote upgrades of the application configuration images in the configuration device. The following list is the sequence of the remote system upgrade:

1. The logic (embedded processor or user logic) in the Arria V device receives a configuration image from a remote location. You can connect the device to the remote source using communication protocols such as TCP/IP, PCI, user datagram protocol (UDP), UART, or a proprietary interface.
2. The logic stores the configuration image in non-volatile configuration memory.
3. The logic starts reconfiguration cycle using the newly received configuration image.
4. When an error occurs, the circuitry detects the error, reverts to a safe configuration image, and provides error status to your design.

Configuration Images

Each Arria V device in your system requires one factory image. The factory image is a user-defined configuration image that contains logic to perform the following:

- Processes errors based on the status provided by the dedicated remote system upgrade circuitry.
- Communicates with the remote host, receives new application images, and stores the images in the local non-volatile memory device.
- Determines the application image to load into the Arria V device.
- Enables or disables the user watchdog timer and loads its time-out value.
- Instructs the dedicated remote system upgrade circuitry to start a reconfiguration cycle.


You can also create one or more application images for the device. An application image contains selected functionalities to be implemented in the target device.

Store the images at the following locations in the EPCS or EPCQ devices:

- Factory configuration image—PGM[23..0] = 24'h000000 start address on the EPCS or EPCQ device.
- Application configuration image—any sector boundary. Altera recommends that you store only one image at one sector boundary.

Configuration Sequence in the Remote Update Mode

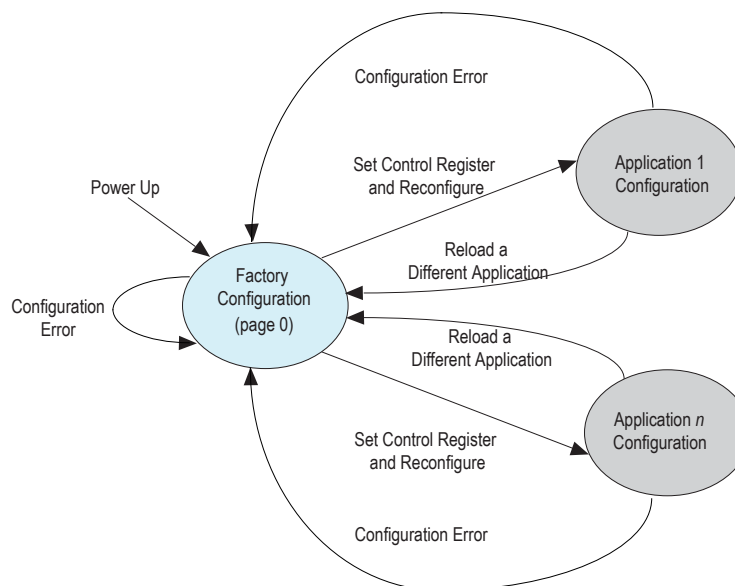Figure 8-23: Transitions Between Factory and Application Configurations in Remote Update Mode




Refer to *"Remote System Upgrade State Machine"* for a detailed description of this sequence.

Remote System Upgrade Circuitry

The remote system upgrade circuitry contains the remote system upgrade registers, watchdog timer, and a state machine that controls these components.

Note: If you are using the ALTREMOTE_UPDATE megafunction, the megafunction controls the RU_DOUT, RU_SHIFTnLD, RU_CAPTnUPDT, RU_CLK, RU_DIN, RU_nCONFIG, and RU_nRSTIMER signals internally to perform all the related remote system upgrade operations.

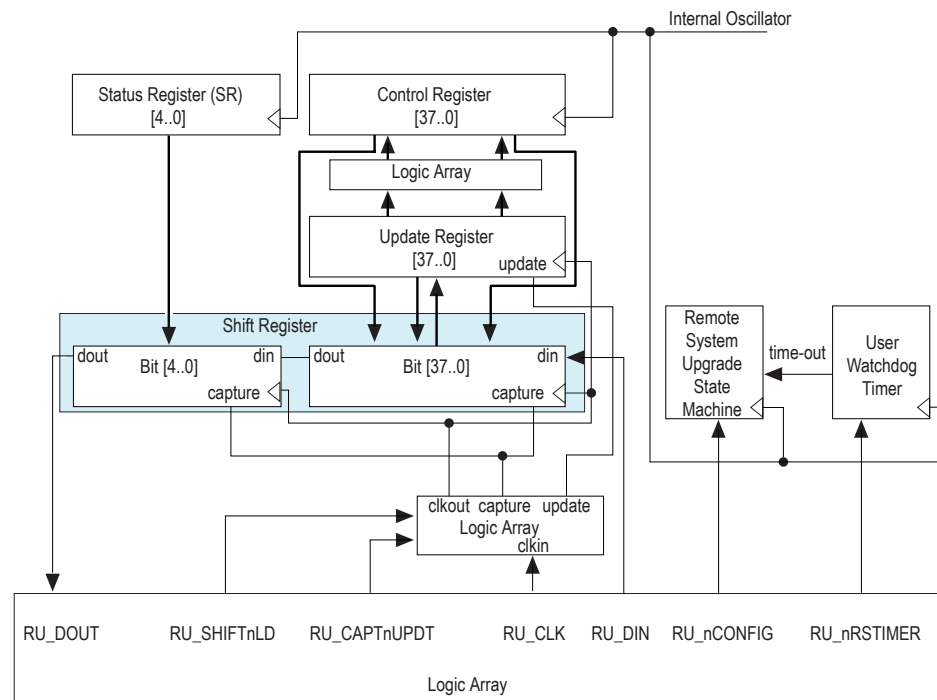Figure 8-24: Remote System Upgrade Circuitry



For more information about remote system upgrade circuitry timing specifications, refer to the [Arria V Device Datasheet](#).

Enabling Remote System Upgrade Circuitry

To enable the remote system upgrade feature, follow these steps:

1. Select **Active Serial x1** or **Configuration Device** from the Configuration scheme list in the **Configuration** page of the **Device and Pin Options** dialog box in the Quartus II software.
2. Select **Remote** from the Configuration mode list in the **Configuration** page of the **Device and Pin Options** dialog box in the Quartus II software.

Enabling this feature automatically turns on the **Auto-restart configuration after error** option.

Altera-provided ALTREMOTE_UPDATE megafunction provides a memory-like interface to the remote system upgrade circuitry and handles the shift register read and write protocol in the Arria V device logic.

For more information about the ALTREMOTE_UPDATE megafunction, refer to the [Remote System Upgrade \(ALTREMOTE_UPDATE\) Megafunction User Guide](#).

Remote System Upgrade Registers

Table 8-6: Remote System Upgrade Registers

Register	Description
Shift	Accessible by the logic array and clocked by RU_CLK. • Bits[4..0]—Contents of the status register are shifted into these bits. • Bits[37..0]—Contents of the update and control registers are shifted into these bits.

Register	Description
Control	For the fields description, refer to Control Register on page 31. This register is clocked by the 10-MHz internal oscillator. The contents of this register are shifted to the shift register for the user logic in the application configuration to read. When reconfiguration is triggered, this register is updated with the contents of the update register.
Update	For the fields description, refer to Status Register on page 31. This register is clocked by RU_CLK. The factory configuration updates this register by shifting data into the shift register and issuing an update. When reconfiguration is triggered, the contents of the update register are written to the control register.
Status	After each reconfiguration, the remote system upgrade circuitry updates this register to indicate the event that triggered the reconfiguration. This register is clocked by the 10-MHz internal oscillator.

Control Register

Table 8-7: Control Register Bits

Bit	Name	Reset Value ³⁵	Description
0	AnF	1'b0	Application not Factory bit. Indicates the configuration image type currently loaded in the device; 0 for factory image and 1 for application image. When this bit is 1 , the access to the control register is limited to read only and the watchdog timer is enabled. Factory configuration design must set this bit to 1 before triggering reconfiguration using an application configuration image.
1..24	PGM[0..23]	24'h000000	AS configuration start address (StAdd[23..0])
25	Wd_en	1'b0	User watchdog timer enable bit. Set this bit to 1 to enable the watchdog timer.
26..37	Wd_timer[11..0]	12b0000000000	User watchdog time-out value.

Status Register

Table 8-8: Status Register Bits

Bit	Name	Reset Value ³⁶	Description
0	CRC	1'b0	When set to 1 , indicates CRC error during application configuration.

³⁵ This is the default value after the device exits POR and during reconfiguration back to the factory configuration image.

³⁶ After the device exits POR and power-up, the status register content is 5'b00000.

Bit	Name	Reset Value ³⁶	Description
1	nSTATUS	1'b0	When set to 1 , indicates that nSTATUS is asserted by an external device due to error.
2	Core_nCONFIG	1'b0	When set to 1 , indicates that reconfiguration has been triggered by the logic array of the device.
3	nCONFIG	1'b0	When set to 1 , indicates that nCONFIG is asserted.
4	Wd	1'b0	When set to 1 , indicates that the user watchdog time-out.

Remote System Upgrade State Machine

The operation of the remote system upgrade state machine is as follows:

1. After power-up, the remote system upgrade registers are reset to **0** and the factory configuration image is loaded.
2. The user logic sets the AnF bit to **1** and the start address of the application image to be loaded. The user logic also writes the watchdog timer settings.
3. When the configuration reset (RU_CONFIG) goes low, the state machine updates the control register with the contents of the update register, and triggers reconfiguration using the application configuration image.
4. If error occurs, the state machine falls back to the factory image. The control and update registers are reset to **0**, and the status register is updated with the error information.
5. After successful reconfiguration, the system stays in the application configuration.

User Watchdog Timer

The user watchdog timer prevents a faulty application configuration from stalling the device indefinitely. You can use the timer to detect functional errors when an application configuration is successfully loaded into the device. The timer is automatically disabled in the factory configuration; enabled in the application configuration.

Note: If you do not want this feature in the application configuration, you need to turn off this feature by setting the Wd_en bit to **1'b0** in the update register during factory configuration user mode operation. You cannot disable this feature in the application configuration.

The counter is 29 bits wide and has a maximum count value of 2^{29} . When specifying the user watchdog timer value, specify only the most significant 12 bits. The granularity of the timer setting is 2^{17} cycles. The cycle time is based on the frequency of the user watchdog timer internal oscillator.

For more information about the operating range of the user watchdog internal oscillator's frequency, refer to the [Arria V Device Datasheet](#).

The timer begins counting as soon as the application configuration enters user mode. When the timer expires, the remote system upgrade circuitry generates a time-out signal, updates the status register, and triggers the loading of the factory configuration image. To reset the time, assert RU_nRSTIMER.

³⁶ After the device exits POR and power-up, the status register content is 5'b00000.

Design Security

The Arria V design security feature supports the following capabilities:

- Enhanced built-in advanced encryption standard (AES) decryption block to support 256-bit key industry-standard design security algorithm (FIPS-197 Certified)
- Volatile and non-volatile key programming support
- Secure operation mode for both volatile and non-volatile key through tamper protection bit setting
- Limited accessible JTAG instruction during power-up in the JTAG secure mode
- Supports board-level testing
- Supports in-socket key programming for non-volatile key
- Available in all configuration schemes except JTAG
- Supports both remote system upgrades and compression features

The Arria V design security feature provides the following security protection for your designs:

- Security against copying—the security key is securely stored in the Arria V device and cannot be read out through any interface. In addition, as configuration file read-back is not supported in Arria V devices, your design information cannot be copied.
- Security against reverse engineering—reverse engineering from an encrypted configuration file is very difficult and time consuming because the Arria V configuration file formats are proprietary and the file contains millions of bits that require specific decryption.
- Security against tampering—After you set the tamper protection bit, the Arria V device can only accept configuration files encrypted with the same key. Additionally, programming through the JTAG interface and configuration interface is blocked.

When you use compression with the design security feature, the configuration file is first compressed and then encrypted using the Quartus II software. During configuration, the device first decrypts and then decompresses the configuration file.

When you use design security with Arria V devices in an FPP configuration scheme, it requires a different DCLK-to-DATA [] ratio.

JTAG Secure Mode

When you enable the tamper-protection bit, Arria V devices are in the JTAG secure mode after power-up. During this mode, many JTAG instructions are disabled. Arria V devices only allow mandatory JTAG 1149.1 instructions to be exercised. These JTAG instructions are SAMPLE/PRELOAD, BYPASS, EXTEST, and optional instructions such as IDCODE and SHIFT_EDERROR_REG.

To enable the access of other JTAG instructions such as USERCODE, HIGHZ, CLAMP, PULSE_nCONFIG, and CONFIG_IO, you must issue the UNLOCK instruction to deactivate the JTAG secure mode. You can issue the LOCK instruction to put the device back into JTAG secure mode. You can only issue both the LOCK and UNLOCK JTAG instructions during user mode.

For more information about JTAG binary instruction code related to the LOCK and UNLOCK instructions, refer to the [JTAG Boundary-Scan Testing in Arria V Devices](#) chapter.

Security Key Types

Arria V devices offer two types of keys—volatile and non-volatile. The following table lists the differences between the volatile key and non-volatile keys.

Table 8-9: Security Key Types

Key Types	Key Programmability	Power Supply for Key Storage	Programming Method
Volatile	- Reprogrammable - Erasable	Required external battery, V_{CCBAT} ³⁷	On-board
Non-volatile	One-time programming	Does not require an external battery	On-board and in-socket programming ³⁸

Both non-volatile and volatile key programming offers protection from reverse engineering and copying. If you set the tamper-protection bit, the design is also protected from tampering.

You can perform key programming through the JTAG pins interface. Ensure that the `nSTATUS` pin is released high before any key-programming attempts.

Note: To clear the volatile key, issue the `KEY_CLR_VREG` JTAG instruction. To verify the volatile key has been cleared, issue the `KEY_VERIFY` JTAG instruction.

For more information about the following topics, refer to the following documents:

- For detailed information about the `KEY_CLR_VREG` and `KEY_VERIFY` JTAG instructions, refer to the [JTAG Boundary-Scan Testing in Arria V Devices](#) chapter.
- For the V_{CCBAT} pin connection recommendations, refer to the [Arria V Device Family Pin Connection Guidelines](#).
- For detailed information about battery specifications, refer to the [Arria V Device Datasheet](#).

Security Modes

Table 8-10: Supported Security Modes

Security Mode	Tamper Protection Bit Setting	Device Accepts Unencrypted File	Device Accepts Encrypted File	Security Level
No key	—	Yes	No	—
Volatile Key	—	Yes	Yes	Secure
Volatile Key with Tamper Protection Bit Set	Set	No	Yes	Secure with tamper resistant
Non-volatile Key	—	Yes	Yes	Secure
Non-volatile Key with Tamper Protection Bit Set	Set	No	Yes	Secure with tamper resistant

The use of unencrypted configuration bitstream in the volatile key and non-volatile key security modes is supported for board-level testing only.

³⁷ V_{CCBAT} is a dedicated power supply for volatile key storage. V_{CCBAT} continuously supplies power to the volatile register regardless of the on-chip supply condition.


³⁸ Third-party vendors offer in-socket programming.

Note: For the volatile key with tamper protection bit set security mode, Arria V devices do not accept the encrypted configuration file if the volatile key is erased. If the volatile key is erased and you want to reprogram the key, you must use the volatile key security mode.

Enabling the tamper protection bit disables the test mode in Arria V devices and disables programming through the JTAG interface. This process is irreversible and prevents Altera from carrying out failure analysis.

Design Security Implementation Steps

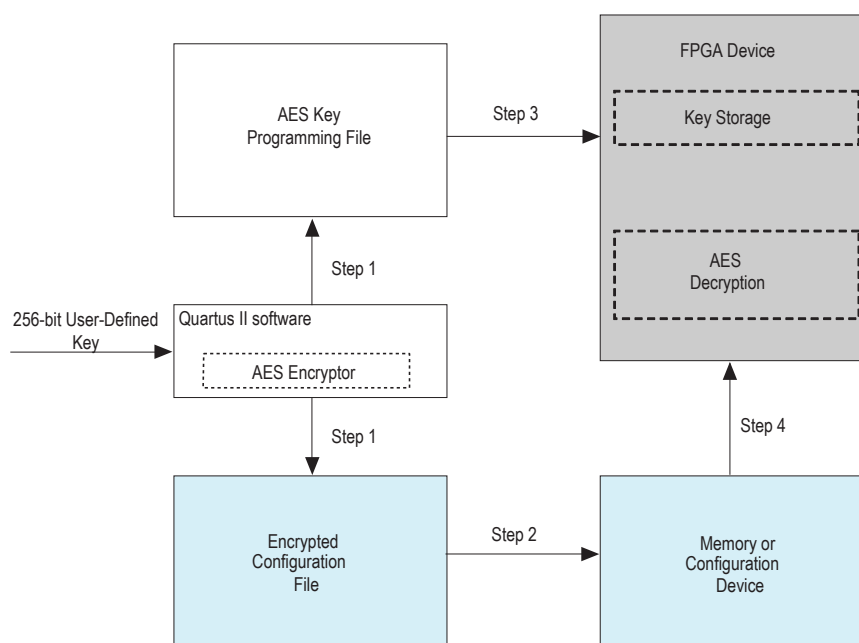Figure 8-25: Design Security Implementation Steps



To carry out secure configuration, follow these steps:

1. The Quartus II software generates the design security key programming file and encrypts the configuration data using the user-defined 256-bit security key.
2. Store the encrypted configuration file in the external memory.
3. Program the AES key programming file into the Arria V device through a JTAG interface.
4. Configure the Arria V device. At the system power-up, the external memory device sends the encrypted configuration file to the Arria V device.

Document Revision History

Date	Version	Changes
November 2012	2012.11.19	- Added configuration modes and features for Arria V devices. - Added FPP x32 for Arria V GZ devices. - Added DATA[31..16] for Arria V GZ devices. - Reorganized content and updated template.
June 2012	2.0	Restructured the chapter.
November 2011	1.1	Minor text edits.

Date	Version	Changes
October 2011	1.0	Initial release.

2012.11.19

AV-52009

 [Subscribe](#)

 [Feedback](#)

This chapter describes the error detection features in Arria® V devices. You can use these features to mitigate single event upset (SEU) or soft errors.

Error Detection Features

The on-chip error detection CRC circuitry allows you to perform the following operations without any impact on the fitting or performance of the device:

- Auto-detection of CRC errors during configuration.
- Optional CRC error detection and identification in user mode.
- Optional internal scrubbing in user mode. When enabled, this feature corrects single-bit and double-adjacent errors automatically.
- Testing of error detection functions by deliberately injecting errors through the JTAG interface.

Configuration Error Detection

When the Quartus II software generates the configuration bitstream, the software also computes a 16-bit CRC value for each frame. A configuration bitstream can contain more than one CRC values depending on the number of data frames in the bitstream. The length of the data frame varies for each device.

When a data frame is loaded into the FPGA during configuration, the precomputed CRC value shifts into the CRC circuitry. At the same time, the CRC engine in the FPGA computes the CRC value for the data frame and compares it against the precomputed CRC value. If both CRC values do not match, the `nSTATUS` pin is set to low to indicate a configuration error.

You can test the capability of this feature by modifying the configuration bitstream or intentionally corrupting the bitstream during configuration.

User Mode Error Detection

In user mode, the contents of the configured CRAM bits may be affected by soft errors. These soft errors, which are caused by an ionizing particle, are not common in Altera devices. However, high-reliability applications that require the device to operate error-free may require that your designs account for these errors.

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered

You can enable the error detection circuitry to detect soft errors. Each data frame stored in the CRAM contains a 32-bit precomputed CRC value. When this feature is enabled, the error detection circuitry continuously computes a 32-bit CRC value for each frame in the CRAM and compares the CRC value against the precomputed value.


- If the CRC values match, the 32-bit CRC signature in the `syndrome` register is set to zero to indicate that no error is detected.
- Otherwise, the resulting 32-bit CRC signature in the `syndrome` register is non-zero to indicate a CRC error. The `CRC_ERROR` pin is pulled high, and the error type and location are identified.

Within a frame, the error detection circuitry can detect all single-, double-, triple-, quadruple-, and quintuple-bit errors. When a single-bit or double-adjacent error is detected, the error detection circuitry reports the bit location and determines the error type for single-bit and double-adjacent errors. The probability of other error patterns is very low and the reporting of bit location is not guaranteed. The probability of more than five CRAM bits being flipped by soft errors is very low. In general, the probability of detection for all error patterns is 99.9999%. The process of error detection continues until the device is reset by setting the `nCONFIG` signal low.

Internal Scrubbing

Internal scrubbing is the ability to internally correct soft errors in user mode. This feature corrects single-bit and double-adjacent errors detected in each data frame without the need to reconfigure the device.

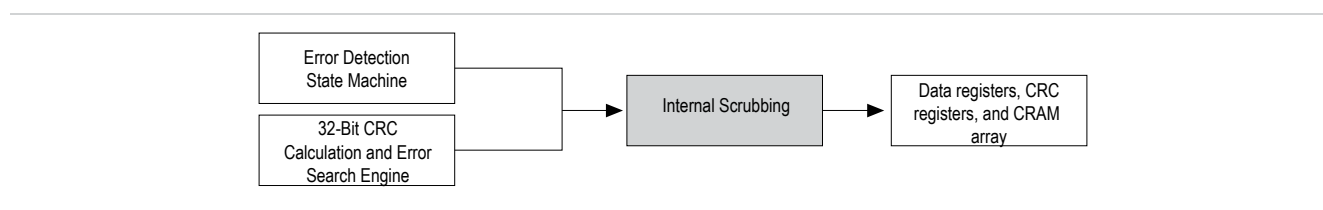Figure 9-1: Block Diagram



Specifications

This section lists the EMR update interval, error detection frequencies, and CRC calculation time for error detection in user mode.

Minimum EMR Update Interval

The interval between each update of the error message register depends on the device and the frequency of the error detection clock. Using a lower clock frequency increases the interval time, hence increasing the time required to recover from a single event upset (SEU).

Table 9-1: Estimated Minimum EMR Update Interval in Arria V Devices—Preliminary

Variant	Member Code	Timing Interval (μs)
Arria V GX	A1	2.55
	A3	2.55
	A5	2.87
	A7	2.87
	B1	3.13
	B3	3.13
	B5	3.83
	B7	3.83
Arria V GT	C3	2.55
	C7	2.87
	D3	3.13
	D7	3.83
Arria V GZ	E1	2.43
	E3	2.43
	E5	2.99
	E7	2.99
Arria V SX	B3	3.83
	B5	3.83
Arria V ST	D3	3.83
	D5	3.83

Error Detection Frequency

You can control the speed of the error detection process by setting the division factor of the clock frequency in the Quartus II software. The divisor is 2^n , where n can be any value listed in the following table.

The speed of the error detection process for each data frame is determined by the following equation:

Figure 9-2: Error Detection Frequency Equation

$$\text{Error Detection Frequency} = \frac{\text{Internal Oscillator Frequency}}{2^n}$$

Table 9-2: Error Detection Frequency Range for Arria V Devices

The following table lists the frequencies and valid values of n.

Internal Oscillator Frequency	Error Detection Frequency		n	Divisor Range
	Maximum	Minimum		
100 MHz	100 MHz	390 kHz	0, 1, 2, 3, 4, 5, 6, 7, 8	1 – 256

CRC Calculation Time

The time taken by the error detection circuitry to calculate the CRC for each frame is determined by the device in use and the frequency of the error detection clock.

Table 9-3: CRC Calculation Time in Arria V Devices—Preliminary

The following table lists the minimum and maximum time taken to calculate the CRC value:

- The minimum time is derived using the maximum clock frequency with a divisor of 0.
- The maximum time is derived using the minimum clock frequency with a divisor of 8.

Variant	Member Code	Minimum Time (ms)	Maximum Time (s)
Arria V GX	A1	13.74	8.80
	A3	13.74	8.80
	A5	21.42	13.71
	A7	21.42	13.71
	B1	30.45	19.49
	B3	30.45	19.49
	B5	40.70	26.05
	B7	40.70	26.05
Arria V GT	C3	13.74	8.80
	C7	21.42	13.71
	D3	30.45	19.49
	D7	40.70	26.05
Arria V GZ	E1	43.00	22.29
	E3	67.00	34.81
	E5	67.00	34.81
	E7	67.00	34.81
Arria V SX	B3	40.70	26.05
	B5	40.70	26.05
Arria V ST	D3	40.70	26.05
	D5	40.70	26.05

Using Error Detection Features in User Mode

This section describes the pin, registers, process flow, and procedures for error detection in user mode.

Enabling Error Detection and Internal Scrubbing

To enable user mode error detection and internal scrubbing in the Quartus II software, follow these steps:

1. On the Assignments menu, click **Device**.
2. In the Device dialog box, click **Device and Pin Options**
3. In the **Category** list, click **Error Detection CRC**.
4. Turn on **Enable Error Detection CRC_ERROR pin**.
5. To set the CRC_ERROR pin as output open drain, turn on **Enable open drain on CRC_ERROR pin**. Turning off this option sets the CRC_ERROR pin as output.
6. To enable the on-chip error correction feature, turn on **Enable internal scrubbing**.
7. In the **Divide error check frequency by** list, select a valid divisor.
8. Click OK.

CRC_ERROR Pin

Table 9-4: Pin Description


Pin Name	Pin Type	Description
CRC_ERROR	I/O or output/output open-drain	An active-high signal, when driven high indicates that an error is detected in the CRAM bits. This pin is only used when you enable error detection in user mode. Otherwise, the pin is used as a user I/O pin. When using the WYSIWYG function, you can route the <code>crcerror</code> port from the WYSIWYG atom to the dedicated CRC_ERROR pin or any user I/O pin. To route the <code>crcerror</code> port to a user I/O pin, insert a D-type flipflop between them

Error Detection Registers

This section describes the registers used in user mode.


Figure 9-3: Block Diagram for Error Detection in User Mode

The block diagram shows the registers and data flow in user mode.

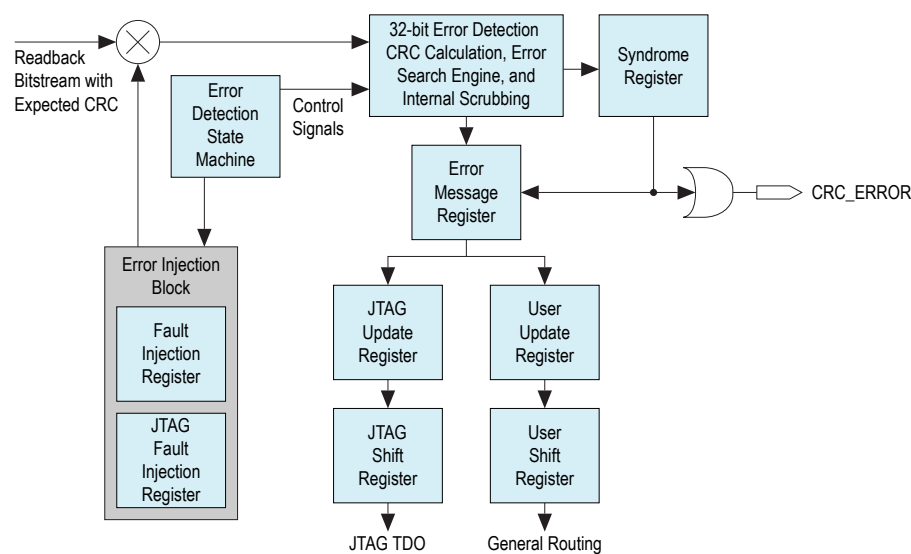**Table 9-5: Error Detection Registers**

Name	Width (Bits)	Description
Syndrome register	32	Contains the 32-bit CRC signature calculated for the current frame. If the CRC value is 0, the <code>CRC_ERROR</code> pin is driven low to indicate no error. Otherwise, the pin is pulled high.
Error message register (EMR)	67	Contains error details for single-bit and double-adjacent errors. The error detection circuitry updates this register each time the circuitry detects an error. Figure 9-4: Error Message Register Map on page 7 shows the fields in this register and Table 9-6: Error Type in EMR on page 7 lists the possible error types.
JTAG update register	67	This register is automatically updated with the contents of the EMR one clock cycle after the content of this register is validated. The JTAG update register includes a clock enable, which must be asserted before its contents are written to the JTAG shift register. This requirement ensures that the JTAG update register is not overwritten when its contents are being read by the JTAG shift register.
JTAG shift register	67	This register allows you to access the contents of the JTAG update register via the JTAG interface using the <code>SHIFT_EDERROR_REG</code> JTAG instruction.
User update register	67	This register is automatically updated with the contents of the EMR one clock cycle after the contents of this register are validated. The user update register includes a clock enable, which must be asserted before its contents are written to the user shift register. This requirement ensures that the user update register is not overwritten when its contents are being read by the user shift register.
User shift register	67	This register allows user logic to access the contents of the user update register via the core interface.

Name	Width (Bits)	Description
JTAG fault injection register	46	You can use this register with the <code>EDERROR_INJECT_JTAG</code> instruction to inject errors in the bitstream. Table 9-7: JTAG Fault Injection Register Map on page 7 lists the fields in this register.
Fault injection register	46	This register is updated with the contents of the JTAG fault injection register.

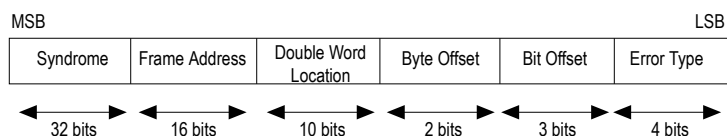Figure 9-4: Error Message Register Map**Table 9-6: Error Type in EMR**

The following table lists the possible error types reported in the error type field in the EMR.

Error Type				Description
Bit 3	Bit 2	Bit 1	Bit 0	
0	0	0	0	No CRC error.
0	0	0	1	Location of a single-bit error is identified.
0	0	1	0	Location of a double-adjacent error is identified.
1	1	1	1	Error types other than single-bit and double-adjacent errors.


Table 9-7: JTAG Fault Injection Register Map

Field Name	Bit Range				Description
Error Byte Value	31:0				Contains the location of the bit error that corresponds to the error injection type to this field.
Byte Location	41:32				Contains the location of the injected error in the first data frame.
Error Type	45:42				Specifies the following error types.
	Bit 45	Bit 44	Bit 43	Bit 42	
	0	0	0	0	No error
	0	0	0	1	Single-bit error
	0	0	1	0	Double adjacent error

Error Detection Process

When enabled, the user mode error detection process activates automatically when the FPGA enters user mode. The process continues to run until the device is reset even when an error is detected in the current frame.

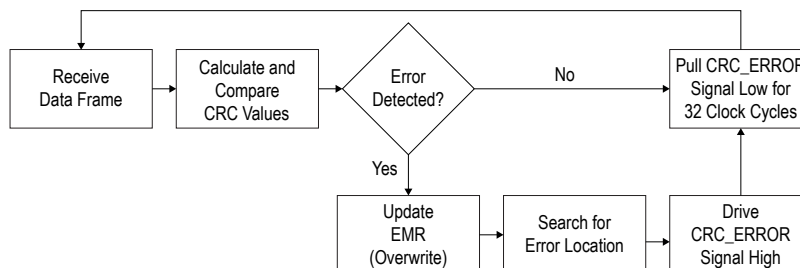Figure 9-5: Error Detection Process Flow in User Mode




Refer to [Error Detection Frequency](#) on page 3 for the minimum and maximum error detection frequencies in Arria V devices.

Timing

The CRC_ERROR pin is always driven low during CRC calculation for a minimum of 32 clock cycles. When an error occurs, the pin is driven high once the EMR is updated or 32 clock cycles have lapsed, whichever comes last. Therefore, you can start retrieving the contents of the EMR at the rising edge of the CRC_ERROR pin. The pin stays high until the current frame is read and then driven low again for a minimum of 32 clock cycles. To ensure information integrity, complete the read operation within one frame of the CRC verification. The following diagram shows the timing of these events.

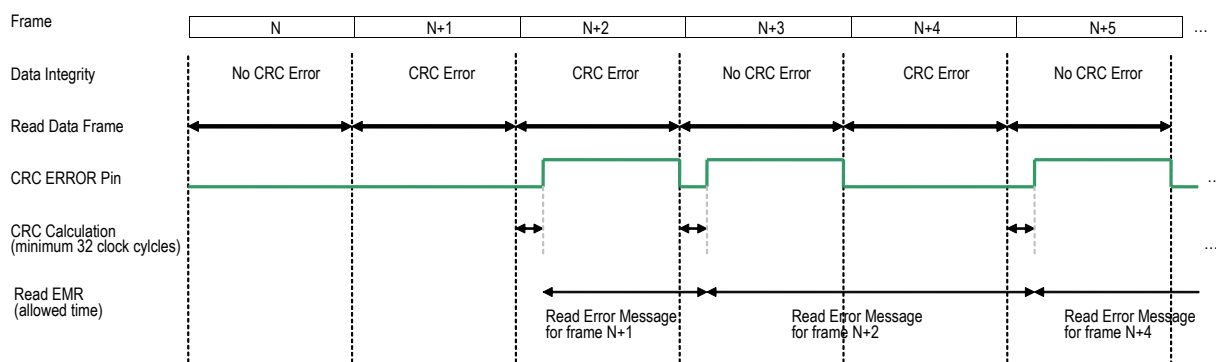Figure 9-6: Timing Requirements



[Minimum EMR Update Interval](#) on page 2 lists the duration for the various Arria V devices.

Retrieving Error Information

You can retrieve the error information via the core interface or the JTAG interface using the SHIFT_EDERROR_REG JTAG instruction. For detailed examples, refer to [Test Methodology of Error Detection and Recovery using CRC in Altera FPGA Devices](#).

Recovering from CRC Errors

The system that hosts the FPGA must control device reconfiguration. To recover from a CRC error, drive the nCONFIG signal low. The system waits for a safe time before reconfiguring the device. When reconfiguration completes successfully, the FPGA operates as intended.

Testing the Error Detection Block

You can inject errors into the configuration data to test the error detection block. This error injection methodology provides design verification and system fault tolerance characterization.

For detailed steps and examples on how to test the block, refer to [Test Methodology of Error Detection and Recovery using CRC in Altera FPGA Devices](#).

Testing via the JTAG Interface

You can intentionally inject single or double-adjacent errors into the configuration data using the EDERROR_INJECT JTAG instruction.

Table 9-8: EDERROR_INJECT instruction

JTAG Instruction	Instruction Code	Description
EDERROR_INJECT	00 0001 0101	Use this instruction to inject errors into the configuration data. This instruction controls the JTAG fault injection register, which contains the error you want to inject into the bitstream.

You can only inject errors into the first frame of the configuration data. However, you can monitor the error information at any time. Altera recommends that you reconfigure the FPGA after the test completes.

Automating the Testing Process

You can automate the testing process by creating a Jam™ file (.jam). Using this file, you can verify the CRC functionality in-system and on-the-fly without reconfiguring the device. You can then switch to the CRC circuitry to check for real errors caused by an SEU.

Document Revision History

Date	Version	Changes
November 2012	2012.11.19	- Added the following specifications for Arria V GZ—Minimum EMR update interval, error detection frequency, and CRC calculation time. - Updated the width of the JTAG fault injection and fault injection registers. - Reorganized content and updated template.
June 2012	2.0	- Added the “Basic Description”, “Error Detection Features”, “Types of ErrorDetection”, “Error Detection Components”, “Using the Error Detection Feature”, and “Testing the Error Detection Block” sections. - Updated Table 9–4, Table 9–5, and Table 9–6. - Restructured the chapter.
November 2011	1.1	Restructured chapter.
May 2011	1.0	Initial release.

JTAG Boundary-Scan Testing in Arria V Devices 10

2012.11.19

AV-52010



Subscribe



Feedback

This chapter describes the boundary-scan test (BST) features in Arria® V devices.

BST Operation Control

Arria V GX, GT, SX, and ST devices support IEEE Std. 1149.1 BST. Arria V GZ devices support IEEE Std. 1149.1 and IEEE Std. 1149.6 BST. You can perform BST on Arria V devices before, after, and during configuration.

IDCODE

The IDCODE is unique for each Arria V device. Use this code to identify the devices in a JTAG chain.

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered

Table 10-1: IDCODE Information for Arria V Devices

Variant	Member Code	IDCODE (32 Bits)			
		Version (4 Bits)	Part Number (16 Bits)	Manufacture Identity (11 Bits)	LSB (1 Bit)
Arria V GX	A1	0000	0010 1010 0001 0001	000 0110 1110	1
	A3	0000	0010 1010 0000 0001	000 0110 1110	1
	A5	0000	0010 1010 0001 0010	000 0110 1110	1
	A7	0000	0010 1010 0000 0010	000 0110 1110	1
	B1	0000	0010 1010 0001 0011	000 0110 1110	1
	B3	0000	0010 1010 0000 0011	000 0110 1110	1
	B5	0000	0010 1010 0001 0110	000 0110 1110	1
	B7	0000	0010 1010 0000 0110	000 0110 1110	1
Arria V GT	C3	0000	0010 1010 0000 0001	000 0110 1110	1
	C7	0000	0010 1010 0000 0010	000 0110 1110	1
	D3	0000	0010 1010 0000 0011	000 0110 1110	1
	D7	0000	0010 1010 0000 0110	000 0110 1110	1
Arria V GZ	E1	0000	0010 1001 0011 0001	000 0110 1110	1
	E3	0000	0010 1001 0111 0001	000 0110 1110	1
	E5	0000	0010 1001 0111 0111	000 0110 1110	1
	E7	0000	0010 1001 1111 0111	000 0110 1110	1
Arria V SX	B3	0000	0010 1101 0001 0011	000 0110 1110	1
	B5	0000	0010 1101 0000 0011	000 0110 1110	1

Variant	Member Code	IDCODE (32 Bits)			
		Version (4 Bits)	Part Number (16 Bits)	Manufacture Identity (11 Bits)	LSB (1 Bit)
Arria V ST	D3	0000	0010 1101 0001 0011	000 0110 1110	1
	D5	0000	0010 1101 0000 0011	000 0110 1110	1

Supported JTAG Instruction

Table 10-2: JTAG Instructions Supported by Arria V Devices

JTAG Instruction	Instruction Code	Description
SAMPLE/PRELOAD	00 0000 0101	- Allows you to capture and examine a snapshot of signals at the device pins during normal device operation and permits an initial data pattern to be an output at the device pins. - Use this instruction to preload the test data into the update registers before loading the EXTEST instruction. - Used by the SignalTap™ II Embedded Logic Analyzer.
EXTEST	00 0000 1111	- Allows you to test the external circuit and board-level interconnects by forcing a test pattern at the output pins, and capturing the test results at the input pins. Forcing known logic high and low levels on output pins allows you to detect opens and shorts at the pins of any device in the scan chain. - The high-impedance state of EXTEST is overridden by bus hold and weak pull-up resistor features.
BYPASS	11 1111 1111	Places the 1-bit bypass register between the TDI and TDO pins. During normal device operation, the 1-bit bypass register allows the BST data to pass synchronously through the selected devices to adjacent devices.

JTAG Instruction	Instruction Code	Description
USERCODE	00 0000 0111	- Examines the user electronic signature (UES) within the devices along a JTAG chain. - Selects the 32-bit USERCODE register and places it between the TDI and TDO pins to allow serial shifting of USERCODE out of TDO. - The UES value is set to default value before configuration and is only user-defined after the device is configured.
IDCODE	00 0000 0110	- Identifies the devices in a JTAG chain. If you select IDCODE, the device identification register is loaded with the 32-bit vendor-defined identification code. - Selects the IDCODE register and places it between the TDI and TDO pins to allow serial shifting of IDCODE out of TDO. - IDCODE is the default instruction at power up and in the TAP RESET state. Without loading any instructions, you can go to the SHIFT_DR state and shift out the JTAG device ID.
HIGHZ	00 0000 1011	- Sets all user I/O pins to an inactive drive state. - Places the 1-bit bypass register between the TDI and TDO pins. During normal operation, the 1-bit bypass register allows the BST data to pass synchronously through the selected devices to adjacent devices while tri-stating all I/O pins until a new JTAG instruction is executed. - If you are testing the device after configuration, the programmable weak pull-up resistor or the bus hold feature overrides the HIGHZ value at the pin.

JTAG Instruction	Instruction Code	Description
CLAMP	00 0000 1010	- Places the 1-bit bypass register between the TDI and TDO pins. During normal operation, the 1-bit bypass register allows the BST data to pass synchronously through the selected devices to adjacent devices while holding the I/O pins to a state defined by the data in the boundary-scan register. - If you are testing the device after configuration, the programmable weak pull-up resistor or the bus hold feature overrides the CLAMP value at the pin. The CLAMP value is the value stored in the update register of the boundary-scan cell (BSC).
PULSE_NCONFIG ³⁹	00 0000 0001	Emulates pulsing the nCONFIG pin low to trigger reconfiguration even though the physical pin is not affected.
CONFIG_IO ³⁹	00 0000 1101	Allows I/O reconfiguration (after or during reconfigurations) through the JTAG ports using I/O configuration shift register (IOCSR) for JTAG testing. You can issue the CONFIG_IO instruction only after the nSTATUS pin goes high.
LOCK ³⁹	01 1111 0000	Put the device in JTAG secure mode. In this mode, only BYPASS, SAMPLE/PRELOAD, EXTEST, IDCODE, SHIFT_EDERROR_REG, and UNLOCK instructions are supported. This instruction can only be accessed through JTAG core access in user mode. It cannot be accessed through external JTAG pins in test or user mode.

³⁹ For more information about this instruction mode, refer to the [Configuration, Design Security, and Remote System Upgrades in Arria V Devices](#) chapter.

JTAG Instruction	Instruction Code	Description
UNLOCK ³⁹	11 0011 0001	Release the device from the JTAG secure mode to enable access to all other JTAG instructions. This instruction can only be accessed through JTAG core access in user mode. It cannot be accessed through external JTAG pins in test or user mode.
KEY_CLR_VREG	00 0010 1001	Clears the non-volatile key.
KEY_VERIFY	00 0001 0011	Verifies the non-volatile key has been cleared.
EXTEST_PULSE ⁴⁰	00 1000 1111	Enables board-level connectivity checking between the transmitters and receivers that are AC coupled by generating three output transitions: • Driver drives data on the falling edge of TCK in the UPDATE_IR/DR state. • Driver drives inverted data on the falling edge of TCK after entering the RUN_TEST/IDLE state. • Driver drives data on the falling edge of TCK after leaving the RUN_TEST/IDLE state.
EXTEST_TRAIN ⁴⁰	00 0100 1111	Behaves the same as the EXTEST_PULSE instruction except that the output continues to toggle on the TCK falling edge as long as the TAP controller is in the RUN_TEST/IDLE state.

Note: If the device is in a reset state and the nCONFIG or nSTATUS signal is low, the device IDCODE might not be read correctly. To read the device IDCODE correctly, you must issue the IDCODE JTAG instruction only when the nCONFIG and nSTATUS signals are high.

JTAG Secure Mode

If you enable the tamper-protection bit, the Arria V device is in JTAG secure mode after power up. In the JTAG secure mode, the JTAG pins support only the BYPASS, SAMPLE/PRELOAD, EXTEST, IDCODE, SHIFT_EDERROR_REG, and UNLOCK instructions. Issue the UNLOCK JTAG instruction to enable support for other JTAG instructions.

⁴⁰ This instruction is only supported by Arria V GZ devices.

JTAG Private Instruction

Caution: Never invoke the following instruction codes. These instructions can damage and render the device unusable:

- 1100010000
- 0011001001
- 0000101011⁴¹
- 1100010111
- 1100010011⁴²
- 1010100001
- 0101011110

I/O Voltage for JTAG Operation

An Arria V device operating in IEEE Std. 1149.1 BST mode uses four dedicated JTAG pins—T_{DI}, T_{DO}, T_{MS}, and T_{CK}. Arria V devices do not support the optional TR_{ST} pin. The T_{CK} pin has an internal weak pull-down resistor, while the T_{DI} and T_{MS} pins have internal weak pull-up resistors. The 3.3-, 3.0-, or 2.5-V V_{CCPD} supply of I/O bank 3A powers the T_{DO}, T_{DI}, T_{MS}, and T_{CK} pins. All user I/O pins are tri-stated during JTAG configuration.

The JTAG chain supports several different devices. Use the supported T_{DO} and T_{DI} voltage combinations listed in the following table if the JTAG chain contains devices that have different V_{CCIO} levels. The output voltage level of the T_{DO} pin must meet the specification of the T_{DI} pin it drives.

Note: Arria V GZ devices do not support 3.3-V V_{CCPD} supply.

Table 10-3: Supported TDO and TDI Voltage Combinations

The T_{DO} output buffer for V_{CCPD} of 3.3 V or 3.0 V meets V_{OH} (MIN) of 2.4 V, and the T_{DO} output buffer for V_{CCPD} of 2.5 V meets V_{OH} (MIN) of 2.0 V.

Device	TDI Input Buffer Power (V)	Arria V TDO V _{CCPD}		
		V _{CCPD} = 3.3 V	V _{CCPD} = 3.0 V	V _{CCPD} = 2.5 V
Arria V	V _{CCPD} = 3.3	Yes	Yes	Yes
	V _{CCPD} = 3.0	Yes	Yes	Yes
	V _{CCPD} = 2.5	Yes	Yes	Yes
Non-Arria V ⁴³	V _{CC} = 3.3	Yes	Yes	Yes
	V _{CC} = 2.5	Yes	Yes	Yes
	V _{CC} = 1.8	Yes	Yes	Yes
	V _{CC} = 1.5	Yes	Yes	Yes

⁴¹ This JTAG private instruction is not applicable for Arria V GZ devices.

⁴² This JTAG private instruction is only applicable for Arria V GZ devices.

⁴³ The input buffer must be tolerant to the TDO V_{CCPD} voltage.

Performing BST

You can issue `BYPASS`, `IDCODE`, and `SAMPLE` JTAG instructions before, after, or during configuration without having to interrupt configuration.

To issue other JTAG instructions, follow these guidelines:

- To perform testing before configuration, hold the `nCONFIG` pin low.
- To perform BST during configuration, issue `CONFIG_IO` JTAG instruction to interrupt configuration. While configuration is interrupted, you can issue other JTAG instructions to perform BST. After BST is completed, issue the `PULSE_CONFIG` JTAG instruction or pulse `nCONFIG` low to reconfigure the device.

The chip-wide reset (`DEV_CLRn`) and chip-wide output enable (`DEV_OE`) pins on Arria V devices do not affect JTAG boundary-scan or configuration operations. Toggling these pins does not disrupt BST operation (other than the expected BST behavior).

If you design a board for JTAG configuration of Arria V devices, consider the connections for the dedicated configuration pins.

For information about pin connections, refer to the [Arria V Device Family Pin Connection Guidelines](#).

For information about JTAG configuration, refer to the [Configuration, Design Security, and Remote System Upgrades in Arria V Devices](#) chapter.

For details about JTAG configuration timing, refer to the [Arria V Device Datasheet](#).

Enabling and Disabling IEEE Std. 1149.1 BST Circuitry

The IEEE Std. 1149.1 BST circuitry is enabled after the Arria V device powers up. However for Arria V SoC FPGAs, you must power up both HPS and FPGA to perform BST.

To ensure that you do not inadvertently enable the IEEE Std. 1149.1 circuitry when it is not required, disable the circuitry permanently with pin connections as listed in the following table.

Table 10-4: Pin Connections to Permanently Disable the IEEE Std. 1149.1 Circuitry for Arria V Devices

JTAG Pins ⁴⁴	Connection for Disabling
TMS	V _{CCPD} supply of Bank 3A
TCK	GND
TDI	V _{CCPD} supply of Bank 3A
TDO	Leave open

⁴⁴ The JTAG pins are dedicated. Software option is not available to disable JTAG in Arria V devices.

Guidelines for IEEE Std. 1149.1 Boundary-Scan Testing

Consider the following guidelines when you perform BST with IEEE Std. 1149.1 devices:

- If the “10...” pattern does not shift out of the instruction register through the TDO pin during the first clock cycle of the `SHIFT_IR` state, the TAP controller did not reach the proper state. To solve this problem, try one of the following procedures:
 - Verify that the TAP controller has reached the `SHIFT_IR` state correctly. To advance the TAP controller to the `SHIFT_IR` state, return to the `RESET` state and send the 01100 code to the TMS pin.
 - Check the connections to the VCC, GND, JTAG, and dedicated configuration pins on the device.
- Perform a `SAMPLE/PRELOAD` test cycle before the first `EXTEST` test cycle to ensure that known data is present at the device pins when you enter `EXTEST` mode. If the `OEJ` update register contains 0, the data in the `OUTJ` update register is driven out. The state must be known and correct to avoid contention with other devices in the system.
- Do not perform `EXTEST` testing during in-circuit reconfiguration because `EXTEST` is not supported during in-circuit reconfiguration. To perform testing, wait for the configuration to complete or issue the `CONFIG_IO` instruction to interrupt configuration.
- After configuration, you cannot test any pins in a differential pin pair. To perform BST after configuration, edit and redefine the BSC group that correspond to these differential pin pairs as an internal cell.


For details about the BSC group definitions, refer to the [IEEE 1149.1 BSDL Files](#) page on the Altera website.

IEEE Std. 1149.1 Boundary-Scan Register

The boundary-scan register is a large serial shift register that uses the TDI pin as an input and the TDO pin as an output. The boundary-scan register consists of 3-bit peripheral elements that are associated with Arria V I/O pins. You can use the boundary-scan register to test external pin connections or to capture internal data.

Figure 10-1: Boundary-Scan Register

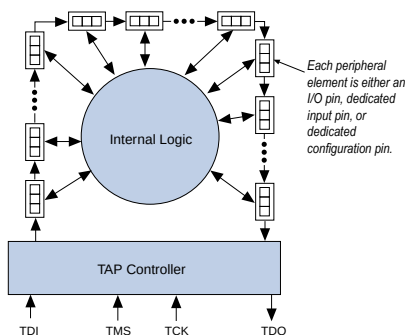This figure shows how test data is serially shifted around the periphery of the IEEE Std. 1149.1 device.



Boundary-Scan Cells of an Arria V Device I/O Pin


The Arria V device 3-bit BSC consists of the following registers:

- Capture registers—Connect to internal device data through the `OUTJ`, `OEJ`, and `PIN_IN` signals.
- Update registers—Connect to external data through the `PIN_OUT` and `PIN_OE` signals.

The TAP controller generates the global control signals for the IEEE Std. 1149.1 BST registers (shift, clock, and update) internally. A decode of the instruction register generates the MODE signal.

The data signal path for the boundary-scan register runs from the serial data in (SDI) signal to the serial data out (SDO) signal. The scan register begins at the TDI pin and ends at the TDO pin of the device.

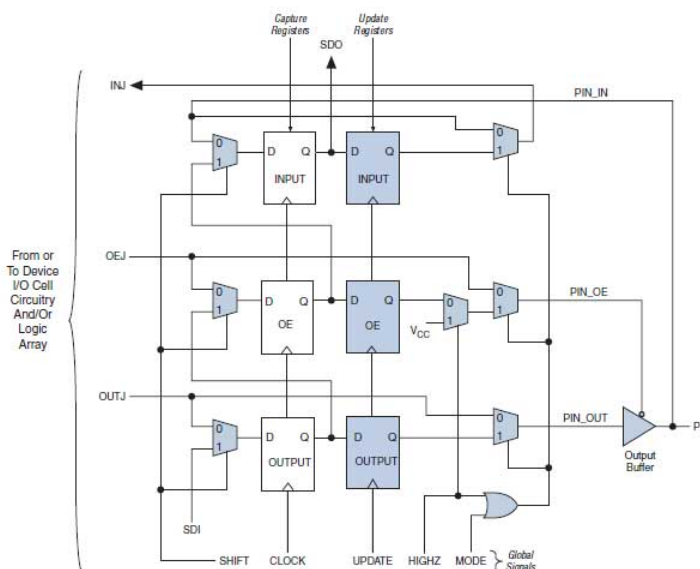Figure 10-2: User I/O BSC with IEEE Std. 1149.1 BST Circuitry for Arria V Devices



Note: TDI, TDO, TMS, and TCK pins, all VCC and GND pin types, and VREF pins do not have BSCs.

Table 10-5: Boundary-Scan Cell Descriptions for Arria V Devices

This table lists the capture and update register capabilities of all BSCs within Arria V devices.

Pin Type	Captures			Drives			Comments
	Output Capture Register	OE Capture Register	Input Capture Register	Output Update Register	OE Update Register	Input Update Register	
User I/O pins	OUTJ	OEJ	PIN_IN	PIN_OUT	PIN_OE	INJ	—
Dedicated clock input	0	1	PIN_IN	No Connect (N.C.)	N.C.	N.C.	PIN_IN drives to the clock network or logic array
Dedicated input ⁴⁵	0	1	PIN_IN	N.C.	N.C.	N.C.	PIN_IN drives to the control logic

⁴⁵ This includes the nCONFIG, MSEL0, MSEL1, MSEL2, MSEL3, MSEL4, and nCE pins.

Pin Type	Captures			Drives			Comments
	Output Capture Register	OE Capture Register	Input Capture Register	Output Update Register	OE Update Register	Input Update Register	
Dedicated bidirectional (open drain) ⁴⁶	0	OEJ	PIN_IN	N.C.	N.C.	N.C.	PIN_IN drives to the configuration control
Dedicated bidirectional ⁴⁷	OUTJ	OEJ	PIN_IN	N.C.	N.C.	N.C.	PIN_IN drives to the configuration control and OUTJ drives to the output buffer
Dedicated output ⁴⁸	OUTJ	0	0	N.C.	N.C.	N.C.	OUTJ drives to the output buffer

IEEE Std. 1149.6 Boundary-Scan Register

The BSCs for HSSI transmitters (GXB_TX[p, n]) and receivers/input clock buffers (GXB_RX[p, n])/(REFCLK[p, n]) in Arria V GZ devices are different from the BSCs for the I/O pins.

⁴⁶ This includes the CONF_DONE and nSTATUS pins.

⁴⁷ This includes the DCLK pin.

⁴⁸ This includes the nCEO pin.

Figure 10-3: HSSI Transmitter BSC with IEEE Std. 1149.6 BST Circuitry for Arria V GZ Devices


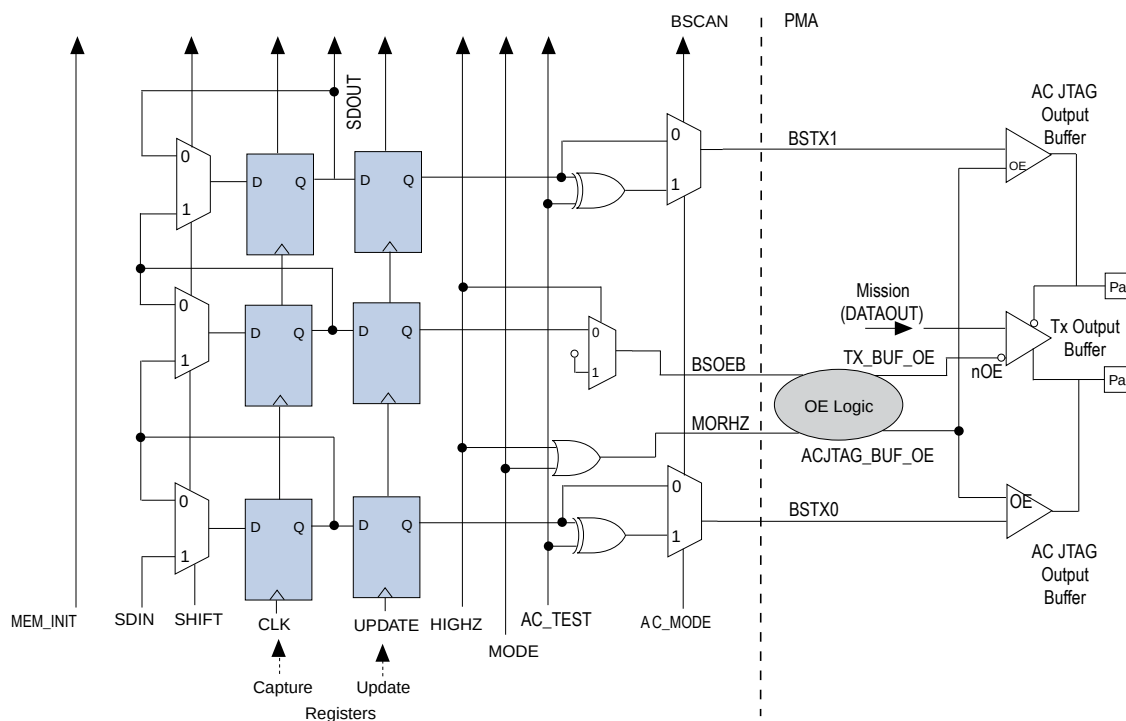


Figure 10-4: HSSI Receiver/Input Clock Buffer with IEEE Std. 1149.6 BST Circuitry for Arria V GZ Devices

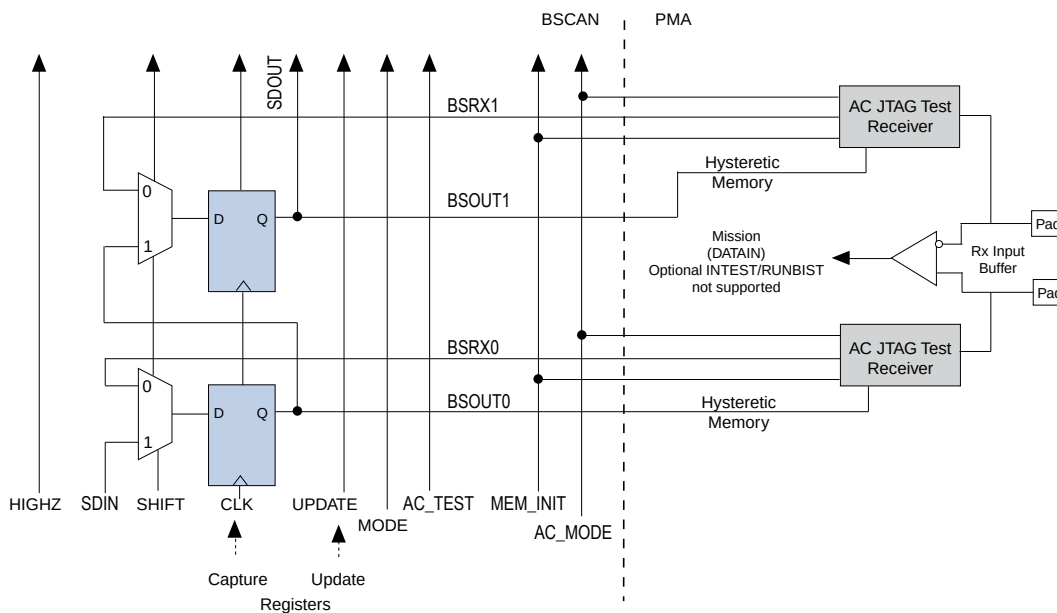

Document Revision History

Date	Version	Changes
November 2012	2012.11.19	- Added IDCODE for Arria V GZ devices. - Added EXTEST_PULSE and EXTEST_TRAIN JTAG instructions for Arria V GZ devices. - Added the IEEE Std. 1149.6 Boundary-Scan Register section for Arria V GZ devices. - Reorganized content and updated template.
June 2012	2.0	- Restructured the chapter. - Updated Table 10-1 and Table 10-2.
February 2012	1.2	Updated Table 10-2.
November 2011	1.1	Minor text edits.
May 2011	1.0	Initial release.

Power Management in Arria V Devices 11

2012.11.19

AV-52011

 [Subscribe](#)

 [Feedback](#)

This chapter describes the hot-socketing feature, power-on reset (POR) requirements, power-up sequencing recommendation, internal temperature sensing diode (TSD), and their implementation in Arria® V devices.

For more information about the following topics, refer to the following documents:

- For information about the Quartus®II PowerPlay Power Analyzer tool, refer to the [PowerPlay Power Analysis](#) chapter in volume 3 of the Quartus II Handbook.
- For the recommended operating conditions of each power supply, refer to the [Arria V Device Datasheet](#).
- For detailed information about power supply pin connection guidelines and power regulator sharing, refer to the [Arria V Device Family Pin Connection Guidelines](#).
- For detailed information about power supply design requirements, refer to the [Board Design Resource Center](#) page.

Power Consumption

The total power consumption of an Arria V device consists of the following components:

- Static power—the power that the configured device consumes when powered up but no clocks are operating.
- Dynamic power—the power that the configured device consumes when in operation.

Dynamic Power Equation

Figure 11-1: Dynamic Power

The following equation shows how to calculate dynamic power where P is power, C is the load capacitance, and V is the supply voltage level.

$$P = \frac{1}{2} CV^2 \times frequency$$

The equation shows that power is design-dependent and is determined by the operating frequency of your design. Arria V devices minimize static and dynamic power using advanced process optimizations. This technology allows Arria V designs to meet specific performance requirements with the lowest possible power.

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered

Programmable Power Technology

Arria V GZ devices offer the ability to configure portions of the core, called tiles, for high-speed or low-power mode of operation performed by the Quartus II software without user intervention. Setting a tile to high-speed or low-power mode is accomplished with on-chip circuitry and does not require extra power supplies brought into the Arria V GZ device. In a design compilation, the Quartus II software determines whether a tile must be in high-speed or low-power mode based on the timing constraints of the design.

An Arria V GZ tile consists of the following:

- Memory logic array block (MLAB)/ logic array block (LAB) pairs with routing to the pair
- MLAB/LAB pairs with routing to the pair and to adjacent digital signal processing (DSP)/ memory block routing
- TriMatrix memory blocks
- DSP blocks
- PCI Express® (PCIe®) hard IP
- Physical Coding Sublayer (PCS)

All blocks and routing associated with the tile share the same setting of either high-speed or low-power mode. By default, tiles that include DSP blocks or memory blocks are set to high-speed mode for optimum performance. Unused DSP blocks and memory blocks are set to low-power mode to minimize static power. Clock networks do not support programmable power technology.

With programmable power technology, faster speed grade FPGAs may require less power because there are fewer high-speed MLAB and LAB pairs, when compared with slower speed grade FPGAs. The slower speed grade device may have to use more high-speed MLAB and LAB pairs to meet performance requirements with MLAB and LAB pairs in low-power mode.

The Quartus II software sets unused device resources in the design to low-power mode to reduce the static power. It also sets the following resources to low-power mode when they are not used in the design:

- LABs and MLABs
- TriMatrix memory blocks
- DSP blocks

If a phase-locked loop (PLL) is instantiated in the design, you may assert the `areset` pin high to keep the PLL in low-power mode.

Table 11-1: Programmable Power Capabilities for Arria V GZ Devices

This table lists the available Arria V GZ programmable power capabilities. Speed grade considerations can add to the permutations to give you flexibility in designing your system.

Feature	Programmable Power Technology
LAB	Yes
Routing	Yes
Memory Blocks	Fixed setting ⁴⁹
DSP Blocks	Fixed setting ⁴⁹
Global Clock Networks	No

⁴⁹ Tiles with DSP blocks and memory blocks that are used in the design are always set to high-speed mode. By default, unused DSP blocks and memory blocks are set to low-power mode.

Temperature Sensing Diode

All Arria V devices support internal TSD only except for Arria V GZ devices that support both internal and external TSDs.

Internal Temperature Sensing Diode

Arria V devices feature an internal TSD with built-in analog-to-digital converter (ADC) circuitry that self-monitors the die's junction temperature. You can also use the TSD with external circuitry for other activities like controlling air flow to the Arria V device.

Monitoring the junction temperature is crucial for thermal management. You can calculate junction temperature by using ambient or case temperature, junction-to-ambient (ja) or junction-to-case (jc) thermal resistance, and device power consumption.

You can use the Arria V internal TSD in the following operations:

- Power-up mode—to read the die's temperature during configuration, enable the ALTTEMP_SENSE megafunction in your design.
- User mode—to read the die's temperature during user mode, assert the `clken` signal to the internal TSD circuitry.

Note: To reduce power consumption, disable the Arria V internal TSD when you are not using it.


For more information, refer to the following documents:

- For information about using the ALTTEMP_SENSE megafunction, refer to the [Temperature Sensor \(ALTTEMP_SENSE\) Megafunction User Guide](#).
- For information about the Arria V internal TSD specification, refer to the [Arria V Device Datasheet](#).

External Temperature Sensing Diode

The Arria V GZ external TSD requires two pins for voltage reference. The following figure shows how to connect the external TSD with an external temperature sensor device, allowing external sensing of the Arria V GZ die temperature. As an example, you can connect external temperature sensing devices, such as MAX1619, MAX1617A, MAX6627, and ADT7411 to the two external TSD pins for Arria V GZ device die temperature reading.

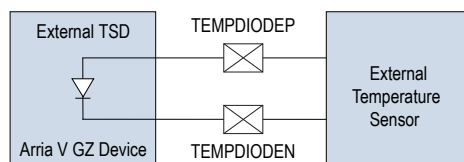Figure 11-2: TSD External Pin Connections for Arria V GZ Devices



For details about the external TSD specification, refer to the [Arria V Device Datasheet](#).

The TSD is a very sensitive circuit that can be influenced by noise coupled from other traces on the board or within the device package itself, depending on your device usage. The interfacing signal from the Arria V GZ device to the external temperature sensor is based on millivolts (mV) of difference, as seen at the external TSD pins. Switching the I/O near the TSD pins can affect the temperature reading. Altera recommends

taking temperature readings during periods of inactivity in the device or use the internal TSD with built-in ADC circuitry.

The following are board connection guidelines for the TSD external pin connections:

- The maximum trace lengths for the TEMPDIODE_P/TEMPDIODE_N traces must be less than eight inches.
- Route both traces in parallel and place them close to each other with grounded guard tracks on each side.
- Altera recommends 10-mils width and space for both traces.
- Route traces through a minimum number of vias and crossunders to minimize the thermocouple effects.
- Ensure that the number of vias are the same on both traces.
- Ensure both traces are approximately the same length.
- Avoid coupling with toggling signals (for example, clocks and I/O) by having the GND plane between the diode traces and the high frequency signals.
- For high-frequency noise filtering, place an external capacitor (close to the external chip) between the TEMPDIODE_P/TEMPDIODE_N trace. For Maxim devices, use an external capacitor between 2200 pF to 3300 pF.
- Place a 0.1 uF bypass capacitor close to the external device.
- You can use internal TSD with built-in ADC circuitry and external TSD at the same time.
- If you only use internal ADC circuitry, the external TSD pins (TEMPDIODE_P/TEMPDIODE_N) can be connected to GND because the external TSD pins are not used.

For details about the TEMPDIODE_P/TEMPDIODE_N pin connection when you are not using an external TSD, refer to the [Arria V Device Family Pin Connection Guidelines](#).

For details about device specification and connection guidelines, refer to the external temperature sensor device datasheet from the device manufacturer.

Hot-Socketing Feature

Arria V devices support hot socketing—also known as hot plug-in or hot swap. The hot-socketing circuitry in Arria V GX, GT, SX, and ST devices monitors the V_{CCIO}, V_{CCPD}, V_{CC}, and V_{CCP} power supplies and all V_{CCIO} and V_{CCPD} banks. The hot-socketing circuitry in Arria V GZ devices monitors the V_{CCIO}, V_{CCPD}, and V_{CC} power supplies and all V_{CCIO} and V_{CCPD} banks. You can power up or power down these power supplies in any sequence.

During the hot-socketing operation, the I/O pin capacitance is less than 15 pF and the clock pin capacitance is less than 20 pF.

The hot-socketing capability removes some of the difficulty that designers face when using the Arria V devices on PCBs that contain a mixture of devices with different voltage requirements.

The hot-socketing capability in Arria V devices provides the following advantages:

- You can drive signals into the I/O, dedicated input, and dedicated clock pins before or during power up or power down without damaging the device. External input signals to the I/O pins of the unpowered device will not power the power supplies through internal paths within the device.
- The output buffers are tri-stated during system power up or power down. Because the Arria V device does not drive signals out before or during power up, the device does not affect the other operating buses.
- You can insert or remove an Arria V device from a powered-up system board without damaging or interfering with the system board's operation. This capability allows you to avoid sinking current through the device signal pins to the device power supply, which can create a direct connection to GND that causes power supply failures.
- During hot socketing, Arria V devices are immune to latch up that can occur when a device is hot-socketed into an active system.

Altera uses GND as a reference for hot-socketing and I/O buffer circuitry designs. To ensure proper operation, connect GND between boards before connecting the power supplies. This prevents GND on your board from being pulled up inadvertently by a path to power through other components on your board. A pulled up GND could otherwise cause an out-of-specification I/O voltage or over current condition in the Altera® device.

For information about the Arria V hot-socketing specifications, refer to the [Arria V Device Datasheet](#).


Hot-Socketing Implementation

The hot-socketing feature tri-state the output buffer during power up and power down of the V_{CCIO} , V_{CCPD} , V_{CC} , and V_{CCP} power supplies for Arria V GX, GT, SX, and ST devices, and V_{CCIO} , V_{CCPD} , and V_{CC} power supplies for Arria V GZ devices. When these power supplies are below the threshold voltage, the hot-socketing circuitry generates an internal `HOTSKT` signal.

Hot-socketing circuitry prevents excess I/O leakage during power up. When the voltage ramps up very slowly, I/O leakage is still relatively low, even after the release of the POR signal and configuration is complete.

Note: The output buffer cannot flip from the state set by the hot-socketing circuitry at very low voltage. To allow the `CONF_DONE` and `nSTATUS` configuration pins in bank 8A of the Arria V device to operate during configuration, the hot-socketing feature is not applied to these configuration pins. Therefore, these pins will drive out during power up and power down.

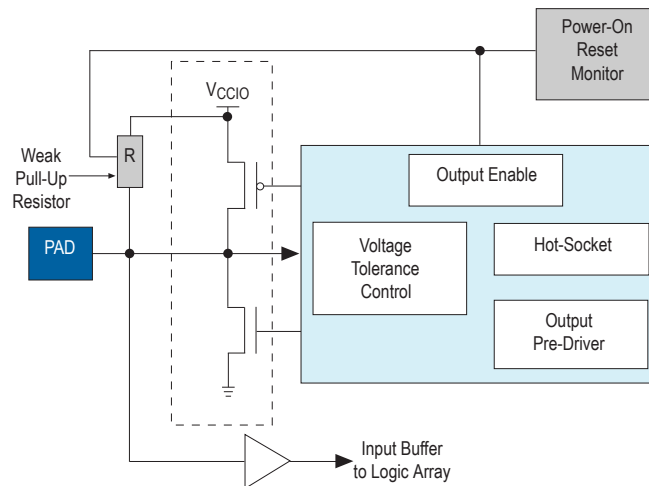Figure 11-3: Hot-Socketing Circuitry for Arria V Devices



The POR circuitry monitors the voltage level of the power supplies and keeps the I/O pins tri-stated until the device is in user mode. The weak pull-up resistor (R) in the Arria V input/output element (IOE) is enabled during configuration download to keep the I/O pins from floating. The 3.3-V tolerance control circuit allows the I/O pins to be driven by 3.3 V before the V_{CC} , V_{CCP} , V_{CCPD} , and V_{CCIO} power supplies for the Arria V GX, GT, SX, and ST devices, and V_{CC} , V_{CCPD} , and V_{CCIO} power supplies for the Arria V GZ devices are powered and prevents the I/O pins from driving out before the device enters user mode.


Arria V GX and GT Power-Up Sequence

The Arria V GX B1, B3, B5, and B7 devices, and Arria V GT D3 and D7 devices are required to follow the power-up sequence as shown in the following figure.

Caution: Failure to follow the required power-up sequence in the Arria V GX B1, B3, B5, and B7 devices, and Arria V GT D3 and D7 devices may result in additional current consumption or functionality issue.

For the rest of the Arria V devices, follow the power-up sequence as recommended to ensure minimum current drawn during device power-up.

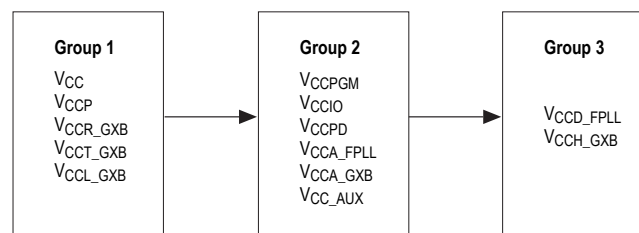Figure 11-4: Power-Up Sequence Requirement for Arria V GX B1, B3, B5, and B7, and Arria V GT D3 and D7 Devices



Notes:

1. Power up V_{CCBAT} at any time.
2. Ramp up the power rails in each group to a minimum of 80% of their full rail before the next group starts.
3. Power up V_{CCP} , V_{CCR_GXB} , V_{CCT_GXB} , and V_{CCL_GXB} together with V_{CC} .

The table lists the current transient that you may observe at the indicated power rails after powering up the Arria V device, and before configuration starts. These transients have a finite duration bounded by the time at which the device enters configuration mode.

For details about the minimum current requirements, refer to the PowerPlay Early Power Estimator (EPE), and compare to the information listed in the the following table. If the current transient exceeds the minimum current requirements in the PowerPlay EPE, you need to take the information into consideration for your power regulator design.

For the PowerPlay EPE support for Arria V devices, refer to the [PowerPlay Early Power Estimators \(EPE\) and Power Analyzer](#) page.

Table 11-2: Maximum Power Supply Current Transient and Typical Duration

Power Rail	Maximum Power Supply Current Transient (mA)	Typical Duration (μ s)
$V_{CCPD}^{50, 51}$	1250	50
$V_{CCIO}^{51, 52}$	350	200
$V_{CC\_AUX}^{53}$	450	10
V_{CC}^{53}	700	100

Arria V GZ Power-Up Sequence

The Arria V GZ devices require a power-up sequence as shown in the following figure to prevent excessive inrush current. This power-up sequence is divided into four power groups. Group 1 contains the first power rails to ramp. The V_{CC} , V_{CCHIP} , and V_{CCHSSI} power rails in this group must ramp to a minimum of 80% of their full rail before any other power rails may start. Group 1 power rails can continue to ramp to full rail. The power rails in Group 2 and Group 4 can start to ramp in any order after Group 1 has reached its minimum 80% threshold. When the last power rail in Group 2 reaches 80% of its full rail, the remaining power rails in Group 3 may start their ramp. During this time, Group 2 power rails may continue to ramp to full rail. Power rails in Group 3 may ramp in any order. All power rails must ramp monotonically. The complete power-up sequence must meet either the standard or fast POR delay time, depending on the POR delay setting that is used.


⁵⁰ You may observe the current transient at V_{CCPD} only when you do not follow the recommended power-up sequence. To avoid the current transient at V_{CCPD} , follow the recommended power-up sequence.

⁵¹ The maximum current for V_{CCIO} and V_{CCPD} applies to all voltage levels supported by the Arria V device.

⁵² You may observe the current transient at V_{CCIO} if you power up V_{CCIO} before V_{CCPD} . To avoid the current transient at V_{CCIO} , follow the recommended power-up sequence by powering up V_{CCIO} and V_{CCPD} together.

⁵³ You may observe the current transient at V_{CC_AUX} and V_{CC} with any power-up sequence.

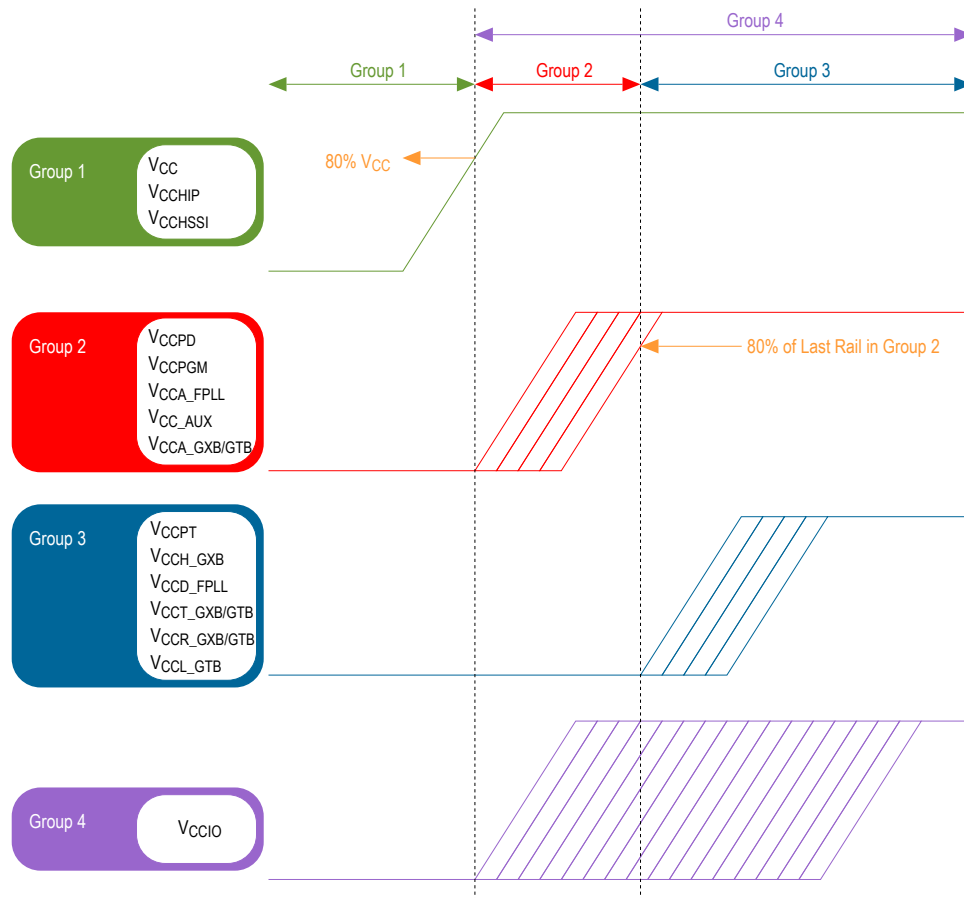Figure 11-5: Power-Up Sequence Requirement for Arria V GZ Devices



Notes:


1. Power up VCCBAT at any time.
2. If VCC, VCCR_GXB, and VCC_T_GXB have the same voltage level, they can be powered by the same regulator in Group 1 and ramp simultaneously.
3. All rails can start power-down simultaneously but must reach 0 V within 100 ms.

Arria V GZ devices may power down all power rails simultaneously. However, all rails must reach 0 V within 100 ms from the start of power-down.

Power-On Reset Circuitry

The POR circuitry keeps the Arria V device in the reset state until the power supply outputs are within the recommended operating range.

A POR event occurs when you power up the Arria V device until the power supplies reach the recommended operating range within the maximum power supply ramp time, t_{RAMP} . If t_{RAMP} is not met, the Arria V device I/O pins and programming registers remain tri-stated, during which device configuration could fail.

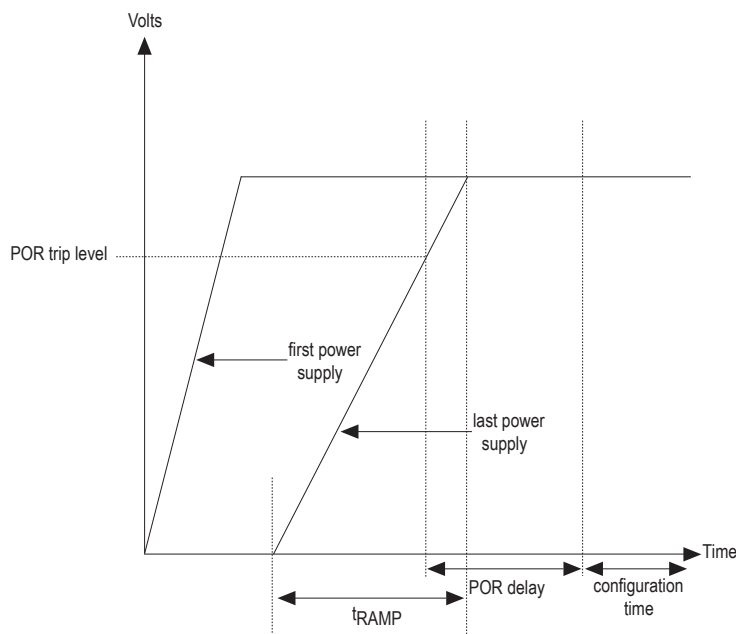
Figure 11-6: Relationship Between t_{RAMP} and POR Delay

For more information about the POR delay specification and t_{RAMP} , refer to the [Arria V Device Datasheet](#).

The Arria V POR circuitry uses an individual detecting circuitry to monitor each of the configuration-related power supplies independently. The main POR circuitry is gated by the outputs of all the individual detectors. The main POR signal is asserted when the power starts to ramp up. This signal is released after the last ramp-up power reaches the POR trip level during power up.

In user mode, the main POR signal is asserted when any of the monitored power goes below its POR trip level. Asserting the POR signal forces the device into the reset state.

The POR circuitry checks the functionality of the I/O level shifters powered by the V_{CCPD} and V_{CCPGM} power supplies during power-up mode. The main POR circuitry waits for all the individual POR circuitries to release the POR signal before allowing the control block to start programming the device.

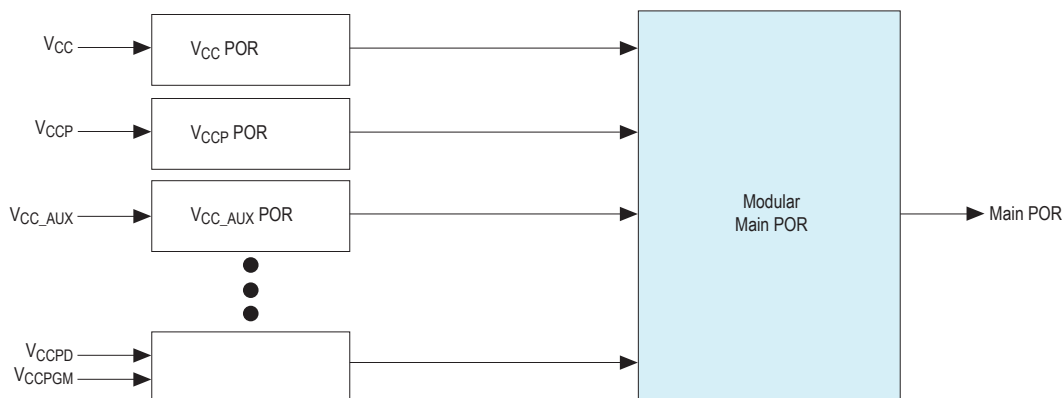Figure 11-7: Simplified POR Diagram for Arria V Devices

Power Supplies Monitored and Not Monitored by the POR Circuitry

Table 11-3: Power Supplies Monitored and Not Monitored by the Arria V POR Circuitry

Devices	Power Supplies Monitored	Power Supplies Not Monitored
Arria V GX and GT	• V_{CC_AUX} • V_{CCBAT} • V_{CC} • V_{CCP} • V_{CCPD} • V_{CCPGM}	• V_{CCT_GXB} • V_{CCH_GXB} • V_{CCR_GXB} • V_{CCA_GXB} • V_{CCL_GXB} • V_{CCA_FPLL} • V_{CCD_FPLL} • V_{CCIO}
Arria V GZ	• V_{CC_AUX} • V_{CCBAT} • V_{CC} • V_{CCPT} • V_{CCPD} • V_{CCPGM}	• V_{CCT_GXB} • V_{CCH_GXB} • V_{CCR_GXB} • V_{CCA_GXB} • V_{CCA_FPLL} • V_{CCD_FPLL} • V_{CCIO} • V_{CCHIP}
Arria V SX and ST	• V_{CC_AUX} • V_{CCBAT} • V_{CC} • V_{CCP} • V_{CCPD} • V_{CCPGM} • V_{CC_HPS} • V_{CCPD_HPS} • V_{CCRSTCLK_HPS}	• V_{CCT_GXB} • V_{CCH_GXB} • V_{CCR_GXB} • V_{CCA_GXB} • V_{CCL_GXB} • V_{CCA_FPLL} • V_{CCD_FPLL} • V_{CCIO} • V_{CCIO_HPS} • V_{CCPLL_HPS}

Note: For the device to exit POR, you must power the V_{CCBAT} power supply even if you do not use the volatile key.

For information about the MSEL pin settings for each POR delay, refer to the [Configuration, Design Security, and Remote System Upgrades in Arria V Devices](#) chapter.

Document Revision History

Date	Version	Changes
November 2012	2012.11.19	- Added the Programmable Power Technology section for Arria V GZ devices. - Added the External TSD section for Arria V GZ devices. - Added the Power-up sequence section for Arria V GZ devices. - Added the power supplies monitored and not monitored by the Arria V GZ devices. - Reorganized content and updated template.
June 2012	2.1	Updated the "Power-Up Sequence" section.
June 2012	2.0	- Restructured the chapter. - Added the "Power-Up Sequencing" section.
February 2012	1.3	Updated V_{CCP} description.
December 2011	1.2	- Added V_{CCP} information. - Updated Table 11-1.
November 2011	1.1	Restructured chapter.
May 2011	1.0	Initial release.

Arria V Device Handbook

Volume 2: Transceivers

Contents

Transceiver Architecture in Arria V Devices.....	1-1
Architecture Overview.....	1-2
Transceiver Banks.....	1-2
PMA Architecture.....	1-8
Transmitter PMA Datapath.....	1-8
Receiver PMA Datapath.....	1-13
Transmitter PLL.....	1-21
Clock Divider.....	1-23
Calibration Block.....	1-24
PCS Architecture.....	1-25
Transmitter PCS Datapath for Arria V GX/GT Devices and Arria V GZ Standard	
PCS.....	1-26
Receiver PCS Datapath for Arria V GX/GT Devices and Arria V GZ Standard PCS.....	1-30
10G PCS Architecture for Arria V GZ Devices.....	1-43
PCIe Gen 3 PCS Architecture.....	1-49
Channel Bonding.....	1-51
Bonded Channel Configurations.....	1-51
Non-Bonded Channel Configurations.....	1-51
PLL Sharing.....	1-51
Document Revision History.....	1-52
 Transceiver Clocking in Arria V Devices.....	 2-1
Input Reference Clocking.....	2-1
Reference Clock Network.....	2-2
Dual-Purpose RX/refclk Pin.....	2-3
Fractional PLL (fPLL).....	2-3
Internal Clocking.....	2-4
Transmitter Clock Network.....	2-5
Transmitter Clocking.....	2-11
Receiver Clocking.....	2-20
FPGA Fabric–Transceiver Interface Clocking.....	2-25
Transceiver Datapath Interface Clocking.....	2-27
Transmitter Datapath Interface Clocking.....	2-28
Receiver Datapath Interface Clock.....	2-31
Document Revision History.....	2-36

Transceiver Reset Control in Arria V Devices.....3-1

PHY IP Embedded Reset Controller.....	3-1
Embedded Reset Controller Signals.....	3-2
Resetting the Transceiver with the PHY IP Embedded Reset Controller during Device	
Power-Up.....	3-4
Resetting the Transceiver with the PHY IP Embedded Reset Controller during Device	
Operation.....	3-5
User-Controlled Reset Controller.....	3-5
User-Controlled Reset Controller Signals.....	3-6
Resetting the Transmitter with the User-Controlled Reset Controller during Device	
Power-Up	3-7
Resetting the Transmitter with the User-Controlled Reset Controller during Device	
Operation.....	3-9
Resetting the Receiver with the User-Controlled Reset Controller during Device Power-Up	
Configuration.....	3-10
Resetting the Receiver with the User-Controlled Reset Controller during Device	
Operation.....	3-11
Transceiver Reset Using Avalon Memory Map Registers.....	3-12
Transceiver Reset Control Signals Using Avalon Memory Map Registers.....	3-12
Reset Sequence for CDR in Manual Lock Mode.....	3-13
Control Settings for CDR in Manual Lock Mode.....	3-13
Resetting the Transceiver when the CDR is in Manual Lock Mode.....	3-13
Resetting the Transceiver During Dynamic Reconfiguration.....	3-14
Guidelines for Dynamic Reconfiguration if Transmitter Duty Cycle Distortion Calibration	
is Required during Device Operation.....	3-14
Transceiver Blocks Affected by the Reset and Powerdown Signals.....	3-14
Transceiver Power-Down.....	3-17
Document Revision History.....	3-17

Transceiver Protocol Configurations in Arria V Devices.....4-1

PCI Express.....	4-2
PIPE Transceiver Datapath.....	4-3
PCIe Supported Features.....	4-4
PIPE Transceiver Channel Placement Guidelines.....	4-7
PCIe Supported Configurations and Placement Guidelines.....	4-8
PIPE Transceiver Clocking.....	4-11
Gigabit Ethernet.....	4-14
Gigabit Ethernet Transceiver Datapath.....	4-16
XAUI.....	4-19

Transceiver Datapath in a XAUI Configuration.....	4-20
XAUI Supported Features.....	4-22
Transceiver Clocking and Channel Placement Guidelines in XAUI Configuration.....	4-25
10GBASE-R.....	4-26
10GBASE-R Transceiver Datapath Configuration.....	4-28
10GBASE-R Supported Features.....	4-29
10GBASE-R Transceiver Clocking.....	4-31
Serial Digital Interface.....	4-31
Configurations Supported in SDI Mode.....	4-31
Serial Digital Interface Transceiver Datapath.....	4-32
Gigabit-Capable Passive Optical Network (GPON).....	4-33
Serial Data Converter (SDC) JESD204.....	4-34
SATA and SAS Protocols.....	4-35
Deterministic Latency Protocols—CPRI and OBSAI.....	4-36
Latency Uncertainty Removal with the Phase Compensation FIFO in Register Mode.....	4-37
Channel PLL Feedback for Deterministic Relationship.....	4-37
CPRI and OBSAI.....	4-37
CPRI Enhancements.....	4-39
Serial RapidIO.....	4-40
Document Revision History.....	4-41
Transceiver Custom Configurations in Arria V Devices.....	5-1
Standard PCS Configuration.....	5-1
Custom Configuration Channel Options.....	5-2
Rate Match FIFO in Custom Configuration.....	5-4
Standard PCS in Low Latency Configuration.....	5-9
Low Latency Custom Configuration Channel Options.....	5-10
PMA Direct.....	5-11
Document Revision History.....	5-12
Transceiver Configurations in Arria V GZ Devices.....	6-1
10GBASE-R and 10GBASE-KR.....	6-2
10GBASE-R and 10GBASE-KR Transceiver Datapath Configuration.....	6-3
10GBASE-R and 10GBASE-KR Supported Features.....	6-7
1000BASE-X and 1000BASE-KX Transceiver Datapath.....	6-9
1000BASE-X and 1000BASE-KX Supported Features.....	6-10
Synchronization State Machine Parameters in 1000BASE-X and 1000BASE-KX	
Configurations.....	6-12
Transceiver Clocking in 10GBASE-R, 10GBASE-KR, 1000BASE-X, and 1000BASE-KX	
Configurations.....	6-13

Interlaken.....	6-13
Transceiver Datapath Configuration.....	6-14
Supported Features.....	6-15
Transceiver Clocking.....	6-17
PCI Express (PCIe)—Gen1, Gen2, and Gen3.....	6-18
Transceiver Datapath Configuration.....	6-19
Supported Features for PCIe Configurations.....	6-22
Supported Features for PCIe Gen3.....	6-26
Transceiver Clocking and Channel Placement Guidelines.....	6-29
Transceiver Clocking for PCIe Gen3.....	6-37
XAUI.....	6-42
Transceiver Datapath in a XAUI Configuration.....	6-43
Supported Features.....	6-44
Transceiver Clocking and Channel Placement Guidelines.....	6-47
CPRI and OBSAI—Deterministic Latency Protocols.....	6-48
Transceiver Datapath Configuration.....	6-48
Phase Compensation FIFO in Register Mode.....	6-50
Channel PLL Feedback.....	6-50
CPRI and OBSAI.....	6-50
Transceiver Configurations.....	6-52
Standard PCS Configurations—Custom Datapath.....	6-53
Standard PCS Configurations—Low Latency Datapath.....	6-57
Transceiver Channel Placement Guidelines.....	6-62
10G PCS Configurations.....	6-64
Merging Instances.....	6-69
Native PHY IP Configuration.....	6-70
Protocols and Transceiver PHY IP Support.....	6-70
Native PHY Transceiver Datapath Configuration.....	6-75
Standard PCS Features.....	6-77
10G PCS Supported Features.....	6-78
10G Datapath Configurations with Native PHY IP.....	6-80
PMA Direct Supported Features.....	6-83
Channel and PCS Datapath Dynamic Switching Reconfiguration.....	6-83
Document Revision History.....	6-84
Transceiver Loopback Support in Arria V Devices.....	7-1
Serial Loopback.....	7-1
PIPE Reverse Parallel Loopback.....	7-2
Reverse Serial Loopback.....	7-3
Reverse Serial Pre-CDR Loopback.....	7-4

Document Revision History.....	7-5
Dynamic Reconfiguration in Arria V Devices.....	8-1
Dynamic Reconfiguration Features.....	8-1
Offset Cancellation.....	8-2
Transmitter Duty Cycle Distortion Calibration.....	8-3
PMA Analog Controls Reconfiguration.....	8-3
Dynamic Reconfiguration of Loopback Modes.....	8-3
Transceiver PLL Reconfiguration	8-4
Transceiver Channel Reconfiguration.....	8-4
Transceiver Interface Reconfiguration	8-5
Reduced .mif Reconfiguration	8-5
On-Chip Signal Quality Monitoring (EyeQ).....	8-6
Adaptive Equalization.....	8-6
Decision Feedback Equalization.....	8-6
Unsupported Reconfiguration Modes.....	8-7
Document Revision History.....	8-7

Transceiver Architecture in Arria V Devices

1

2012.11.19

AV53001

 [Subscribe](#)

 [Feedback](#)

Describes the Arria® V transceiver architecture, channels, and transmitter and receiver channel datapaths.

Altera® 28-nm Arria V FPGAs provide integrated transceivers with the lowest power requirement at 12.5-, 10-, and 6-Gigabits per second (Gbps). These transceivers comply with a wide range of protocols and data rate standards.

Table 1-1: Arria V Variants

Variants	Hard Processor System (HPS)	Up to 6.5536 Gbps	Beyond 6.5536 Gbps
GX	—	Backplane	—
GT	—	Backplane	Up to 10.3125 Gbps chip-to-chip and chip-to-module
GZ	—	Backplane	Up to 12.5 Gbps with backplane support
SX	Yes	Backplane	—
ST	Yes	Backplane	Up to 10.3125 Gbps chip-to-chip and chip-to-module


© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered



Architecture Overview

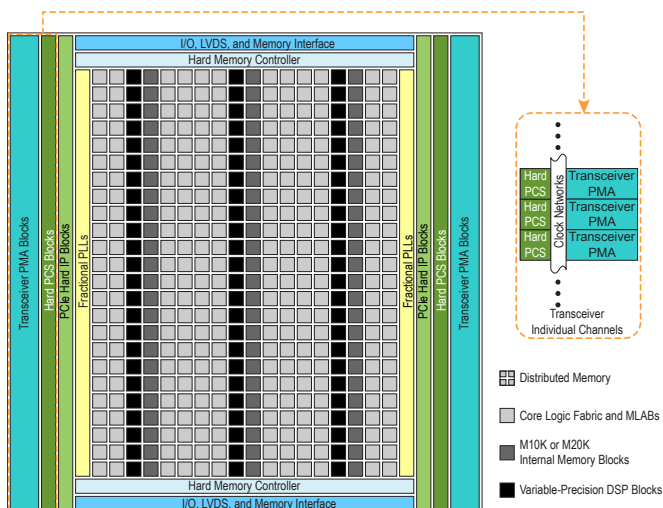Figure 1-1: Basic Layout of Transceivers in Arria Devices



Notes to figure:

1. This figure represents one variant of an Arria V device. Other variants may have transceivers and PCI Express (PCIe) hard IP only on the left side of the device.
2. This figure is a graphical representation of a top view of the silicon die, which corresponds to a reverse view for flip chip packages.

The Arria V hard IP for PCIe implements the PCIe protocol stack including the following layers:

- Physical interface/media access control (PHY/MAC) layer
- Data link layer
- Transaction layer

The embedded hard IP saves significant FPGA resources, reduces design risk, and reduces the time required to achieve timing closure. The hard IP complies with the PCI Express Base Specification 1.1, 2.0, and 3.0 for Gen1, Gen2, and Gen3 signaling data rates, respectively. In addition, the Arria V GZ variant supports PCI Express Base Specification 3.0 for Gen3 signaling data rates.

See the Related Links for more information about the PCIe hard IP block architecture.


Related Links

[Arria V Hard IP for PCI Express User Guide](#)

Transceiver Banks

The columns of Arria V transceivers are categorized in banks of six channels. The transceiver bank boundaries are important for clocking resources, bonding channels, and fitting. [Figure 1-2: Transceiver Bank and PCIe HIP Location for GX Devices \(1\)](#) on page 3, [Figure 1-3: Transceiver Bank and PCIe HIP Location for GT Devices\(1\)](#) on page 3, and [Figure 1-4: Transceiver Bank and PCIe HIP Location for GZ Devices](#) on page 4 show the location of the transceiver banks in Arria V devices. In some package variations, some transceiver banks are reduced to three channels. In the Arria V GX/GT/SX/ST, there are fundamentally two types of transceiver channels; 6-Gbps and 10-Gbps. By contrast, every Arria V GZ transceiver channel supports operation up to 12.5 Gbps data rates.

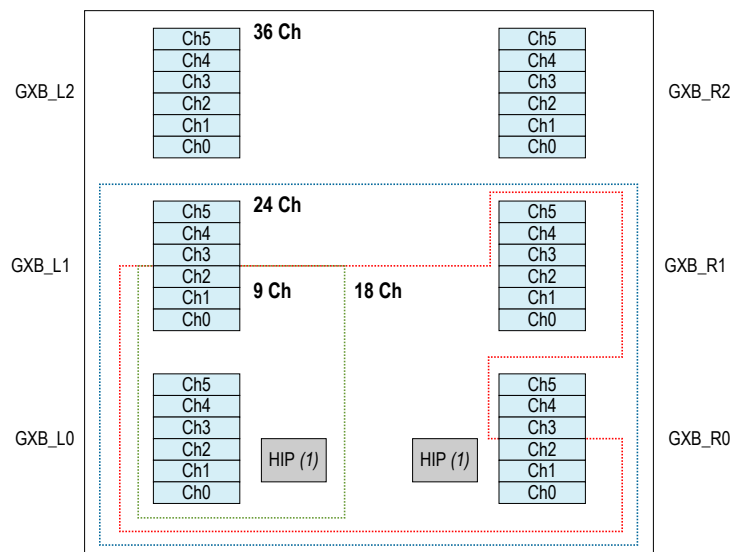Figure 1-2: Transceiver Bank and PCIe HIP Location for GX Devices⁽¹⁾




Notes to figure:

1. PCIe HIP availability varies with device variants.
2. Blue blocks are 6 Gbps channels.

Table 1-2: HIP and Channel Resources in GX Variants

GX Variants	Left HIP	Right HIP	Total Channels
Base	None	None	9
Mainstream	1	None	9, 18
Extended Feature	1	1	24, 36

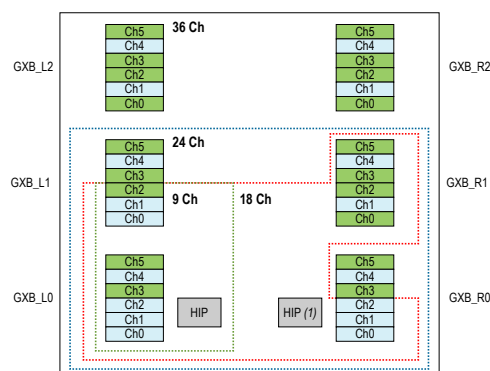Figure 1-3: Transceiver Bank and PCIe HIP Location for GT Devices⁽¹⁾




Notes to figure:

1. PCIe HIP availability varies with device variants.
2. Green blocks are 10 Gbps, blue 6 Gbps channels.

Table 1-3: HIP and Channel Resources in GT Variants

GT Variants	Left HIP	Right HIP	Total Channels
Mainstream	1	None	9, 18
Extended Feature	1	1	24, 36

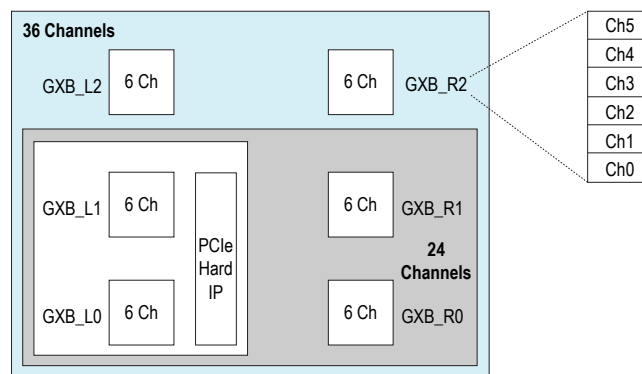
Figure 1-4: Transceiver Bank and PCIe HIP Location for GZ Devices



Notes to figure:

- 12-channel devices use banks L0 and L1.
- All channels capable of backplane support up to 12.5 Gbps.

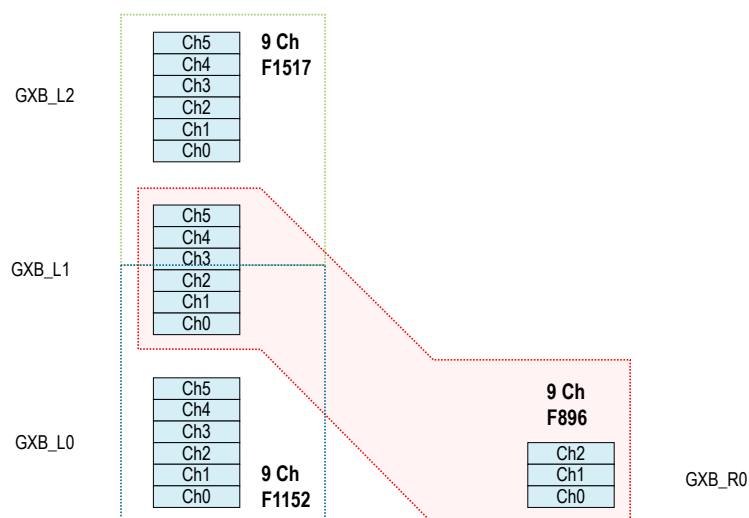
Figure 1-5: Transceiver Bank and PCIe HIP Location for SX Devices (9 channels)



Note to figure:

- Green blocks are 10 Gbps, blue are 6 Gbps channels.

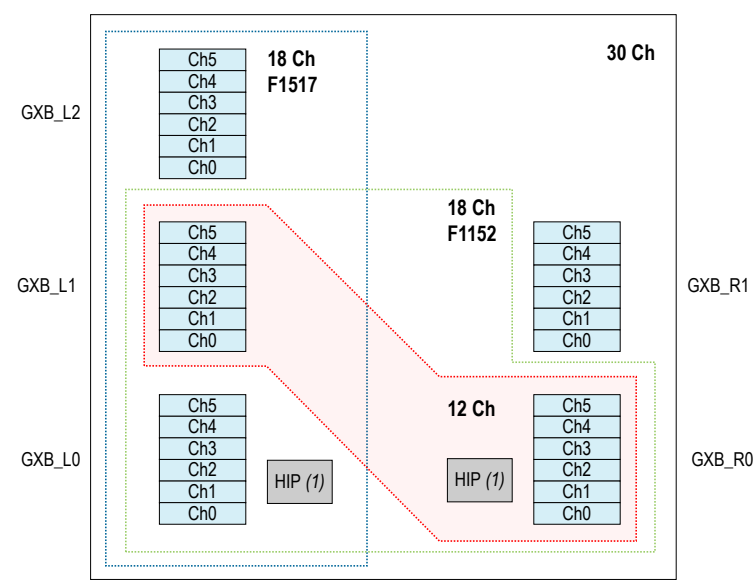
Figure 1-6: Transceiver Bank and PCIe HIP Location for SX Devices (12,18, 30 channels) ⁽¹⁾



- Notes to figure:
- 1. PCIe HIP availability varies with device variants.
 - 2. Blue blocks are 6 Gbps channels.

Table 1-4: HIP and Channel Resources in SX Variants

SX Variants	Left HIP	Right HIP	Total Channels
Mainstream	None	1	12
	1	None	18 (F1517 package)
Extended Feature	1	1	18 (F1152 package)
	1	1	30

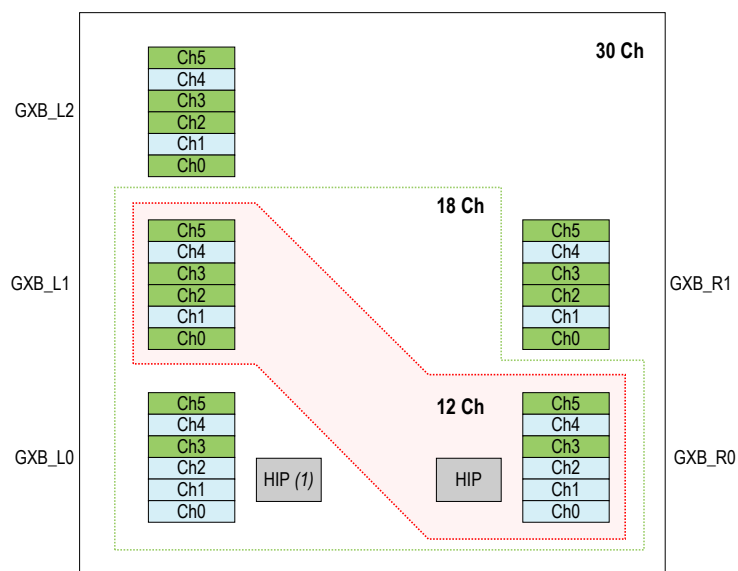Figure 1-7: Transceiver Bank and PCIe HIP Location for ST Devices⁽¹⁾

Notes to figure:

1. PCIe HIP availability varies with device variants.
2. Green blocks are 10 Gbps, blue are 6 Gbps channels.

Table 1-5: HIP and Channel Resources in ST Variants

ST Variants	Left HIP	Right HIP	Total Channels
Mainstream	None	1	12
Extended Feature	1	1	18
	1	1	30

The 10-Gbps transceivers in Arria V GT devices are compliant to SFF8431 specification. Adhere to all of the following requirements to achieve a SFF8431 compliant interface to SFP+ module for serial data rates up to 10.3125-Gbps:

- Use only one 10-Gbps channel to implement the SFP+ interface in a bank. Other than the CMU PLL used for the SFP+ interface, other remaining channels in the same bank must be left unused
- Use only the CMU PLL directly adjacent to the 10-Gbps channel for SFP+ interface
- The CMU PLL must be driven only by its dedicated input reference clock pin, with frequency that results in lowest $M \times L$ value of CMU PLL (for example 614.4 MHz for 9830.4 Mbps SFP+ interface)


Table 1-6: Usage Restrictions on Specific Channels Across Device Variants

Device Variants	Channel Location	Usage Restriction
GX, SX	Ch1, Ch2 of GXB_L0 Ch1, Ch2 of GXB_R0	No support for PCS with phase compensation FIFO in registered mode (for example, CPRI or deterministic latency)

Device Variants	Channel Location	Usage Restriction
GT, ST	Ch1, Ch2 of GXB_L0 Ch0, Ch1, Ch2 of GXB_R0	No support for PCS with phase compensation FIFO in registered mode (for example, CPRI or deterministic latency) No PMA Direct Support

The Arria V transceivers are comprised of a transmitter and receiver that can operate individually or simultaneously—providing a full-duplex physical layer implementation for high-speed serial interfacing. Each transmitter and receiver are divided into two blocks: PMA and PCS. The PMA block connects the FPGA to the channel, generates the required clocks, and converts the data from parallel to serial or serial to parallel. The PCS block performs digital processing logic between the PMA and the FPGA core.

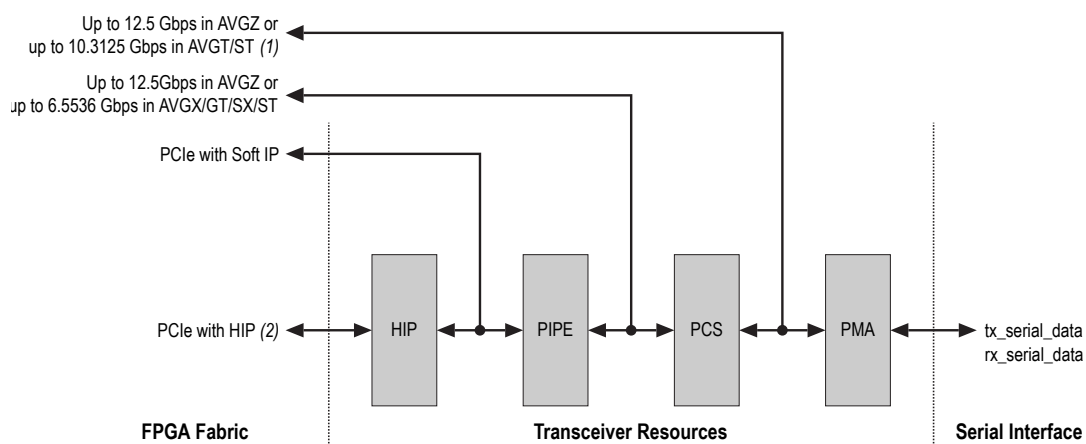Figure 1-8: Full Duplex Channel Interface Architecture



Notes to figure:

1. 10-Gbps channel is available in GT and ST variants.
2. See the Related Links for specific channels that support interfaces with the HIP.
3. GX and GT can support up to 6.5536 Gbps.
4. GZ can support up to 12.5 Gbps.

Table 1-7: Architecture Differences Between 6- and 10-Gbps Arria V GT/ST Channels and Arria V GZ Channels

Architecture Differences	6-Gbps Channel	10-Gbps Channel ⁽¹⁾	Arria V GZ Channel
Transmitter/Receiver PCS Capability	Up to 6.5536 Gbps	Up to 6.5536 Gbps	Up to 12.5 Gbps
Transmitter/Receiver PMA Capability	Up to 6.5536 Gbps	Up to 10.3125 Gbps	Up to 12.5 Gbps
PMA Direct (PMA-Fabric Interface)	Not supported	Supported	Supported
Serialization Factor	8, 10, 16, 20	8, 10, 16, 20, 64, 80	8, 10, 16, 20, 32, 40, 64, 80

Note to table:

1. 10-Gbps channel is only available in GT and ST variants.


Related Links

[Arria V Hard IP for PCI Express User Guide](#)

PMA Architecture

The PMA includes the transmitter and receiver datapaths, CMU PLL (configured from the channel PLL), the ATX PLL, and the clock divider. The analog circuitry and differential on-chip termination (OCT) in the PMA requires the calibration block to compensate for process, voltage, and temperature variations (PVT).

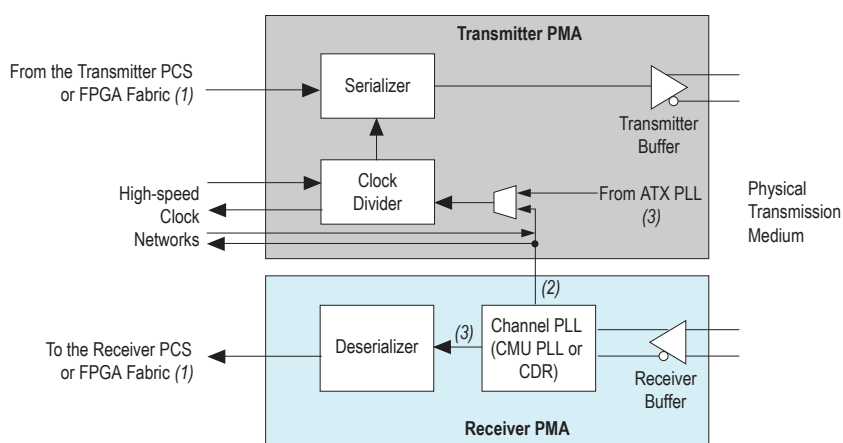Figure 1-9: Transceiver Channel PMA for Arria V Devices



Notes to figure:

1. The channel PLL provides the serial clock when configured as a CMU PLL.
2. The channel PLL recovers the clock and serial data stream when configured as a CDR.
3. ATX PLL available only in GZ devices.

Transmitter PMA Datapath

Table 1-8: Functional Blocks in the Transmitter PMA Datapath

Block	Functionality
Serializer	- Converts the incoming low-speed parallel data from the transmitter PCS to high-speed serial data and sends the data LSB first to the transmitter buffer. - Supports 8-, 10-, 16-, and 20-bit serialization factors. - Supports the optional polarity inversion and bit reversal features. - Additionally supports the 64- and 80-bit serialization factor for 10-Gbps transceiver channels. - Additionally supports the 32, 40, 64 and 80-bit serialization factor in Arria V GZ devices. - Additionally supports the 32-bit and 40-bit serialization factor in Arria V GZ devices.

Block	Functionality
Transmitter Buffer	• The 1.4-V (Arria V GZ Only) and 1.5-V pseudo current mode logic (PCML) output buffer conditions the high-speed serial data for transmission into the physical medium, as shown in Figure 1-10: Transmitter Buffer in Arria V Devices on page 10. Arria GZ supports 1.4 and 1.5V PCML. • Supports the following features: • Programmable differential output voltage (VOD) • Programmable pre-emphasis • Programmable V_{CM} current strength • Programmable slew rate • On-chip biasing for common-mode voltage (TX V_{CM}) • Differential OCT (85, 100, 120 and 150 Ω) • Transmitter output tristate • Receiver detect (for the PCIe receiver detection function)

Serializer

The serializer provides parallel-to-serial data conversion and sends the data LSB first from the transmitter physical coding sublayer (PCS) to the transmitter buffer. Additionally, the serializer provides the polarity inversion and bit reversal features.

Polarity Inversion

The positive and negative signals of a serial differential link might accidentally be swapped during board layout.

The polarity inversion feature of the transmitter corrects this error without requiring a board respin or major updates to the logic in the FPGA fabric. The polarity inversion feature inverts the polarity of every bit at the input to the serializer, which has the same effect as swapping the positive and negative signals of the serial differential link.

Polarity inversion is controlled dynamically with the `tx_invpolarity` register. When you enable the polarity inversion feature, it may cause initial disparity errors at the receiver with 8B/10B-coded data. The downstream system at the receiver must be able to tolerate these disparity errors.

Caution: Enabling polarity inversion midway through a serialized word corrupts the word.

Bit Reversal

You can reverse the transmission bit order to achieve MSB-to-LSB ordering using the bit reversal feature at the transmitter.

Table 1-9: Bit Reversal Feature

Bit Reversal Option	Transmission Bit Order	
	8- or 10-bit Serialization Factor	16- or 20-bit Serialization Factor
Disabled (default)	LSB to MSB	LSB to MSB

Bit Reversal Option	Transmission Bit Order	
	8- or 10-bit Serialization Factor	16- or 20-bit Serialization Factor
Enabled	MSB to LSB For example: 8-bit—D[7:0] rewired to D[0:7] 10-bit—D[9:0] rewired to D[0:9]	MSB to LSB For example: 16-bit—D[15:0] rewired to D[0:15] 20-bit—D[19:0] rewired to D[0:19]

Transmitter Buffer

The transmitter buffer includes additional circuitry to improve signal integrity, such as the programmable differential output voltage (V_{OD}), programmable three-tap pre-emphasis circuitry, internal termination circuitry, and PCIe receiver detect capability to support a PCIe configuration.

Modifying programmable values within transmitter output buffers can be performed by a single reconfiguration controller for the entire FPGA, or multiple reconfiguration controllers if desired. Within each transceiver bank a maximum of two reconfiguration controllers is allowed; one for the three-transceiver triplet in the upper-half of the bank, and one for the lower-half. This is due to a single slave interface to all PLLs and PMAs within each triplet. Therefore, many triplets can be connected to a single reconfiguration controller, but only one reconfiguration controller can be connected to the three transceivers within any triplet.

Note: A maximum of one reconfiguration controller is allowed per transceiver bank upper-half or lower-half triplet.

Note: The Stratix V GT transmitter buffer has only two taps for the pre-emphasis.

Figure 1-10: Transmitter Buffer in Arria V Devices

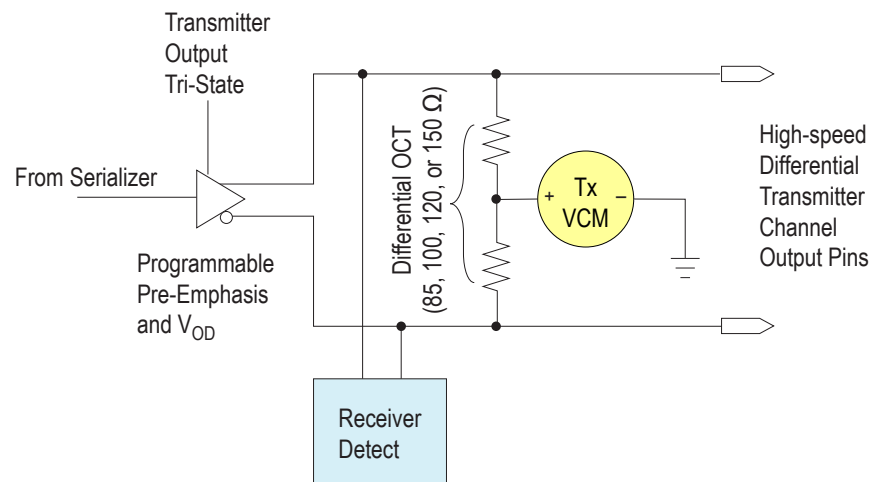



Table 1-10: Description of the Transmitter Buffer Features on page 11 lists the features provided by the Pseudo Current Mode Logic (PCML) output buffer to the integrated circuitry.

Table 1-10: Description of the Transmitter Buffer Features

Category	Features	Description
Improve Signal Integrity	Programmable Differential Output Voltage (V_{OD})	Controls the current mode drivers for signal amplitude to handle different trace lengths, various backplanes, and receiver requirements. The actual V_{OD} level is a function of the current setting and the transmitter termination value.
	Programmable Pre-Emphasis	Boosts the high-frequency components of the transmitted signal, which may be attenuated when propagating through the transmission medium. The physical transmission medium can be represented as a low-pass filter in the frequency domain. Variation in the signal frequency response that is caused by attenuation significantly increases the data-dependent jitter and other intersymbol interference (ISI) effects at the receiver end. Using the pre-emphasis feature maximizes the data opening at the far-end receiver. Arria V GZ channels provide three pre-emphasis taps: pre-tap (16 settings), first post-tap (32 settings), and second post-tap (16 settings). The pre-tap sets the pre-emphasis on the data bit before the transition. The first post-tap and second post-tap set the pre-emphasis on the transition bit and the following bit, respectively. The pre-tap and second post-tap also provide inversion control, shown by negative values. <i>Figure 1-11: Example of Pre-Emphasis Effect on Signal Transmission at Transmitter Output</i> on page 12 shows the signal transmission at the transmitter output with and without applying pre-emphasis post-tap for a 5 Gigabit per second (Gbps) signal with an alternating data pattern of five 1s and five 0s.
	Programmable Slew Rate	Controls the rate of change for the signal transition.
Save Board Space and Cost	On-Chip Biasing	Establishes the required transmitter common-mode voltage (V_{CM}) level at the transmitter output. The circuitry is available only if you enable on-chip termination (OCT). When you disable OCT, you must implement off-chip biasing circuitry to establish the required V_{CM} level.
	Differential OCT	The termination resistance is adjusted by the calibration circuitry, which compensates for the process, voltage, and temperature variations (PVT). You can disable OCT and use external termination. However, you must implement off-chip biasing circuitry to establish the required V_{CM} level. V_{CM} is tri-stated when using external termination.
Reduce Power	Programmable V_{CM} Current Strength	Controls the impedance of V_{CM} . A higher impedance setting reduces current consumption from the on-chip biasing circuitry.


Category	Features	Description
Protocol-Specific Function	Transmitter Output Tri-State	Enables the transmitter differential pair voltages to be held constant at the same value determined by the TX V_{CM} level with the transmitter in the high impedance state. The transmitter output tri-state feature is compliant with differential and common-mode voltage levels and operation time requirements for transmitter electrical idle, as specified in the PCI Express Base Specification 2.0 for Gen1 and Gen2 signaling rates, and PCI Express Base Specification 3.0 for Gen3 signaling rates (Arria V GZ only).
	Receiver Detect	Provides link partner detection capability at the transmitter end using an analog mechanism for the receiver detection sequence during link initialization in the Detect state of the PCI Express® (PCIe) Link Training and Status State Machine (LTSSM) states. The circuit detects if there is a receiver downstream by changing the transmitter V_{CM} to create a step voltage and measuring the resulting voltage rise time. For proper functionality, the series capacitor (AC-coupled link) and receiver termination values must comply with the PCI Express Base Specification 2.0 for Gen1 and Gen2 signaling rates and PCI Express Base Specification 3.0 for Gen3 signaling rates (Arria V GZ only). The circuit is clocked using <code>fixedclk</code> and requires that the transmitter OCT be enabled with the output tri-stated.

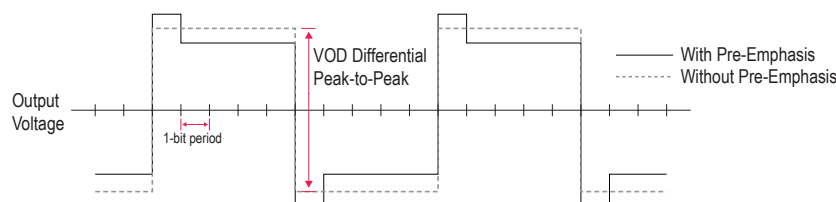Figure 1-11: Example of Pre-Emphasis Effect on Signal Transmission at Transmitter Output



The receiver can be AC- or DC-coupled to a transmitter. In an AC-coupled link, the AC-coupling capacitor blocks the transmitter V_{CM} . At the receiver end, the termination and biasing circuitry restores the V_{CM} level that is required by the receiver.

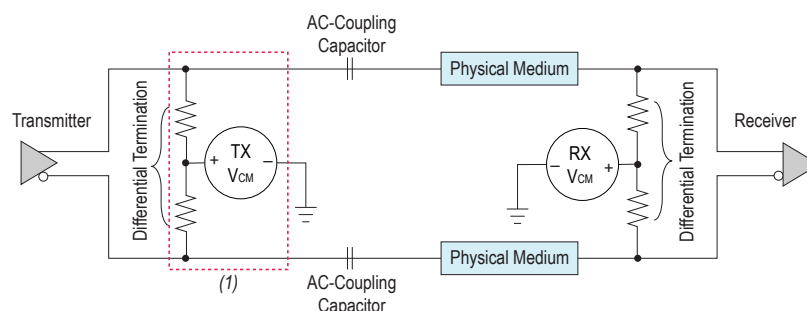Figure 1-12: AC-Coupled Link with Arria V Transmitter




Notes to figure:

1. When you disable OCT, you must implement external termination and off-chip biasing circuitry to establish the required TX V_{CM} level.
2. PCIe spec requires that you enable transmitter OCT for receiver detect operation.

When used in a DC-coupled link, the transmitter V_{cm} is fixed to 0.7V. The receiver V_{cm} is required to be at 0.7V. DC coupling is supported for serial data rates up to 3.2 Gbps.

You can DC-couple the Arria V GZ channel transmitter only to another Arria V GZ channel receiver for the entire datarate range from 600 Mbps to 12.5 Gbps so long as the same V_{CM} value is observed.

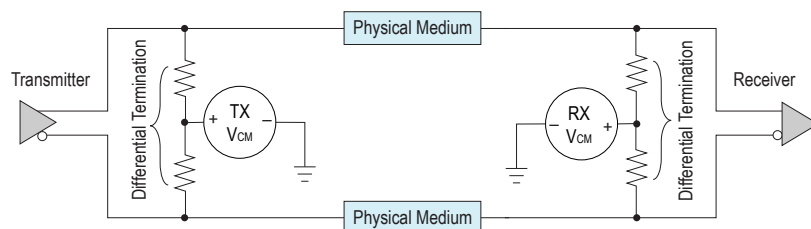Figure 1-13: DC-Coupled Link with Arria V Transmitter



Related Links

[Arria V Device Datasheet](#)

[Altera Transceiver PHY IP Core User Guide](#)

Receiver PMA Datapath

Describes the receiver buffer, channel phase-locked loop (PLL) configured for clock data recovery (CDR) operation, and deserializer blocks in the receiver PMA datapath.

Table 1-11: Functional Blocks in the Receiver PMA Datapath


Block	Functionality
Receiver Buffer	- Receives the serial data stream and feeds the stream to the channel PLL if you configure the channel PLL as a CDR, as shown in Figure 1-14: Receiver Buffer on page 14 - Supports the following features: - Programmable CTLE (Continuous Time Linear Equalization) - Programmable DC gain - Programmable V_{CM} current strength - On-chip biasing for common-mode voltage (RX V_{CM}) - I/O standard (1.4 V (Arria V GZ), PCML, 1.5 V PCML, 2.5 V PCML, LVDS, LVPECL) - Differential OCT (85, 100, 120 and 150 Ω) - Signal detect

Channel PLL	- Recovers the clock and serial data stream if you configure the channel PLL as a CDR. - Requires offset cancellation to correct the analog offset voltages. - If you do not use the channel PLL as a CDR, you can configure the channel PLL as a CMU PLL for clocking the transceivers. For more information about the channel PLL configured as a CMU PLL, refer to CMU PLL on page 22.
Deserializer	- Converts the incoming high-speed serial data from the receiver buffer to low-speed parallel data for the receiver PCS. - Receives serial data in LSB-to-MSB order. - Supports 8-, 10-, 16-, and 20-bit deserialization factors. - Supports the optional clock-slip feature for applications with stringent latency uncertainty requirement. - Additionally supports the 64- and 80-bit serialization factor for 10-Gbps transceiver channels. - Additionally supports the 32-, 40-, 64- and 80-bit serialization factor for 12.5 Gbps transceiver channels in Arria V GZ devices. - Additionally supports the 32-bit and 40-bit deserialization factor in Arria V GZ devices.

Receiver Buffer

The receiver input buffer receives serial data from the `rx_serial_data` port and feeds the serial data to the channel PLL configured as a CDR PLL.

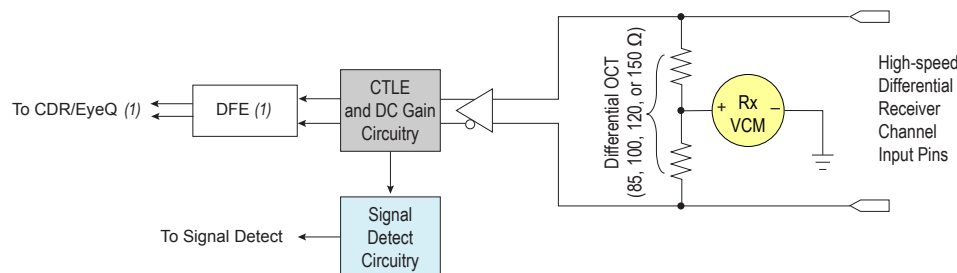Figure 1-14: Receiver Buffer



Note to figure:

1. Available only in Arria V GZ devices.

Modifying programmable values within receiver input buffers can be performed by a single reconfiguration controller for the entire FPGA, or multiple reconfiguration controllers if desired. Within each transceiver bank a maximum of two reconfiguration controllers is allowed; one for the three-transceiver triplet in the upper-half of the bank, and one for the lower-half. This is due to a single slave interface to all PLLs and PMAs within each triplet. Therefore, many triplets can be connected to a single reconfiguration controller, but only one reconfiguration controller can be connected to the three transceivers within any triplet.

Note: A maximum of one reconfiguration controller is allowed per transceiver bank upper-half or lower-half triplet.

See the Related Links for more information about the Receiver Buffer and Electrical Specifications.

Receiver Analog Settings


Arria V GZ channels have two receiver analog modes: half-bandwidth and full-bandwidth. The half-bandwidth data rate is up to 6.25 Gbps; the full-bandwidth data rate is from 6.25 Gbps to 12.5 Gbps. You can select which mode to use in the Assignment Editor of the Quartus II software (Receiver Equalizer Gain Bandwidth Select).

Table 1-12: Arria V Receiver Buffer Features

Category	Features	Description
Improve Signal Integrity	Programmable CTLE (Continuous Time Linear Equalization)	Boosts the high-frequency components of the received signal, which may be attenuated when propagating through the transmission medium. The physical transmission medium can be represented as a low-pass filter in the frequency domain. Variation in the signal frequency response that is caused by attenuation leads to data-dependent jitter and other ISI effects, causing incorrect sampling on the input data at the receiver. The amount of the high-frequency boost required at the receiver to overcome signal attenuation depends on the loss characteristics of the physical medium.
	Programmable DC Gain	Provides equal boost to the received signal across the frequency spectrum.
	Decision Feedback Equalization (DFE)	The decision feedback equalization feature consists of a 5-tap equalizer, which boosts the high frequency components of a signal without noise amplification by compensating for inter-symbol interference (ISI). There are two decision feedback equalization modes: manual and auto-adaptation. The DFE is supported only in Arria V GZ devices.
	EyeQ	The EyeQ feature is a debug and diagnosis tool that helps you analyze the received data by measuring the horizontal and vertical eye opening. The EyeQ is supported only in Arria V GZ devices. <i>Figure 1-15: Receiver and EyeQ Architecture</i> on page 16 shows the receiver and EyeQ architecture. There are two multiplexers for the data and clock which select one path to feed to the deserializer.
Save Board Space and Cost	On-Chip Biasing	Establishes the required receiver common-mode voltage ($RX V_{CM}$) level at the receiver input. The circuitry is available only if you enable OCT. When you disable OCT, you must implement off-chip biasing circuitry to establish the required $RX V_{CM}$ level.
	Differential OCT	The termination resistance is adjusted by the calibration circuitry, which compensates for the PVT. You can disable OCT and use external termination. However, you must implement off-chip biasing circuitry to establish the required $RX V_{CM}$ level. $RX V_{CM}$ is tri-stated when using external termination.
Reduce Power	Programmable V_{CM} Current Strength	Controls the impedance of V_{CM} . A higher impedance setting reduces current consumption from the on-chip biasing circuitry.

Category	Features	Description
Protocol-Specific Function	Signal Detect	Senses if the signal level present at the receiver input is above or below the threshold voltage that you specified. The detection circuitry has a hysteresis response that asserts the status signal only when a number of data pulses exceeding the threshold voltage are detected and deasserts the status signal when the signal level below the threshold voltage is detected for a number of recovered parallel clock cycles. The circuitry requires the input data stream to be 8B/10B-coded. Signal detect is compliant to the threshold voltage and detection time requirements for electrical idle detection conditions as specified in the PCI Express Base Specification 2.0 for Gen1 and Gen2 signaling rates and PCI Express Base Specification 3.0 for Gen3 signaling rates (Arria V GZ only).

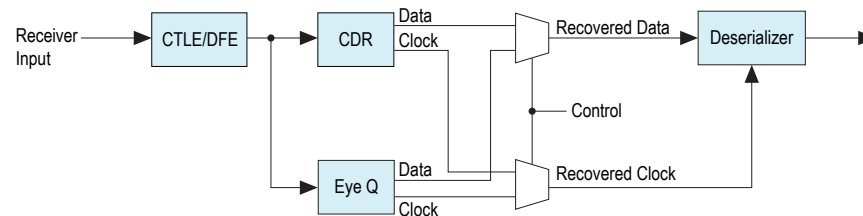
Figure 1-15: Receiver and EyeQ Architecture



See the Related Links for more information about the EyeQ feature.

The receiver can be AC- or DC-coupled to a transmitter. In an AC-coupled link, the AC-coupling capacitor blocks the transmitter V_{CM} . At the receiver end, the termination and biasing circuitry restores the V_{CM} level that is required by the receiver.

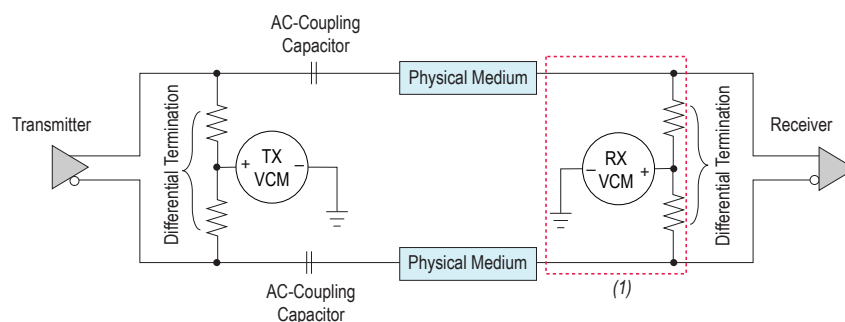Figure 1-16: AC-Coupled Link with Arria V Receiver




Note to figure:

1. When you disable OCT, you must implement external termination and off-chip biasing circuitry to establish the required RX VCM level.

When used in a DC-coupled link, the transmitter V_{cm} is fixed to 0.7V. The receiver V_{cm} is required to be at 0.7V. DC coupling is supported for serial data rates up to 3.2 Gbps.

You can DC-couple the Arria V GZ channel transmitter only to another Arria V GZ channel receiver for the entire datarate range from 600 Mbps to 12.5 Gbps so long as the same V_{CM} value is observed.

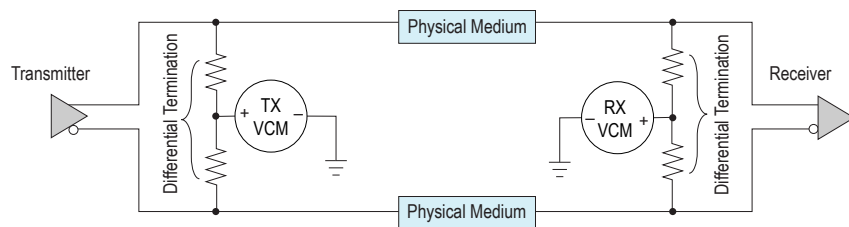Figure 1-17: DC-Coupled Link with Arria V Receiver



Receiver Analog Settings

Related Links

[Altera Transceiver PHY IP Core User Guide](#)

[Arria V Device Datasheet](#)

Continuous Time Linear Equalization (CTLE)

Each receiver buffer has five independently programmable equalization circuits that boost the high-frequency gain of the incoming signal, thereby compensating for the low-pass characteristics of the physical medium. The CTLE operates in two modes: manual mode and adaptive equalization (AEQ) mode

Manual Mode

Manual mode allows you to manually adjust the continuous time linear equalization to improve signal integrity. You can statically set the equalizer settings in the IP or you can dynamically change the equalizer settings with the reconfiguration controller IP.

Adaptive Equalization Mode

AEQ mode eliminates the need for manual tuning by enabling the Arria V device to automatically tune the receiver equalization settings based on the frequency content of the incoming signal and comparing that with internally generated reference signals. The AEQ block resides within the PMA of the receiver channel and is available on all GX channels.

Note: AEQ mode is not supported in GT channels.

There are three AEQ modes: continuous, one-time, and powerdown:

- Continuous mode—The AEQ continuously monitors the frequency content of the received signal and adapts to the received signal by providing dynamically changing equalizer settings to the receiver.
- One-time mode—The AEQ finds a stable setting of the receiver equalizer and locks to that value. After the stable setting is locked, the equalizer values do not.
- Powerdown mode—The AEQ of the specific channel is placed in standby mode and the CTLE uses the manually set value. Note that the CTLE cannot be bypassed.

You can dynamically switch between these modes.

See the Related Links for more information about enabling different options and using them to control the AEQ hardware.

Related Links

Channel PLL


If you configure the channel PLL as a CDR PLL, the channel PLL recovers the clock and data from the serial data stream. If you do not use the channel PLL as a CDR PLL, you can configure it as a clock multiplier unit (CMU) PLL for clocking the transceivers.

Refer to [CMU PLL](#) on page 22 for more information about the channel PLL operation when configured as a CMU PLL.

Channel PLL Architecture

The channel PLL supports operation in either lock-to-reference (LTR) or lock-to-data (LTD) mode.

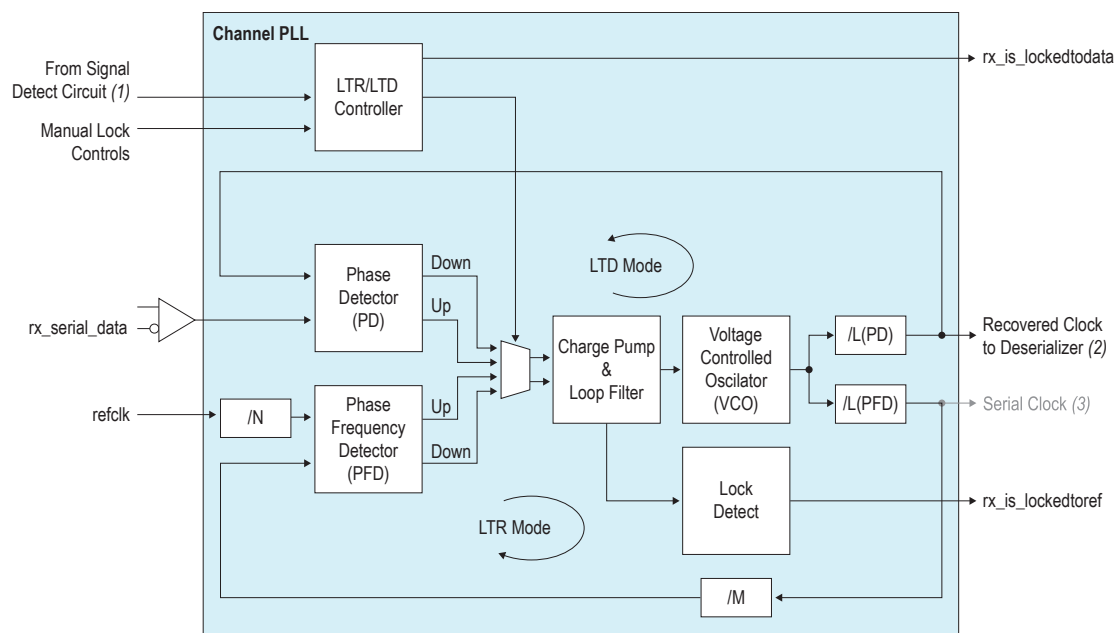Figure 1-18: Channel PLL Block Diagram



Notes to figure:

1. Applicable only in a PCIe configuration.
2. Applicable when configured as a CDR PLL.
3. Applicable when configured as a CMU PLL.
4. The PCIe rateswitch control allows dynamic switching between Gen3, Gen2, and Gen1 line rates in a PCIe Gen2 and Gen3 design. In addition, the Arria V GZ PCIe rateswitch control allows dynamic switching between Gen3, Gen2, and Gen1 line rates in a PCIe Gen3 design.

In LTR mode, the channel PLL tracks the input reference clock. The phase-frequency detector (PFD) compares the phase and frequency of the voltage controlled oscillator (VCO) output and the input reference clock. The resulting PFD output controls the VCO output frequency to half the data rate with the appropriate counter (M or L) value given an input reference clock frequency. The lock detect determines whether the PLL has achieved lock to the phase and frequency of the input reference clock.

In LTD mode, the channel PLL tracks the incoming serial data. The phase detector compares the phase of the VCO output and the incoming serial data. The resulting phase detector output controls the VCO output to continuously match the phase of the incoming serial data.

Use the LTR/LTD controller only when you configure the channel PLL as a CDR PLL.

Channel PLL Counters

Table of Channel PLL Counters, their descriptions, and values.

Table 1-13: Channel PLL Counters

Counter	Description	Values
N	Pre-scale counter to divide the input reference clock frequency to the PFD by the N factor	1, 2, 4, 8
M	Feedback loop counter to multiply the VCO frequency above the input reference frequency to the PFD by the M factor	1, 4, 5, 8, 10, 12, 16, 20, 25
L (PFD)	VCO post-scale counter to divide the VCO output frequency by the L factor in the LTR loop	1, 2, 4, 8
L (phase detector)	VCO post-scale counter to divide the VCO output frequency by the L factor in the LTD loop	1, 2, 4, 8

Note to table:

- The Quartus[®] II software automatically selects the appropriate counter values for each transceiver configuration.

CDR PLL Operation

Description of Arria V CDR PLL operation modes.

The CDR PLL independently recovers the clock and data from the incoming serial data and sends the clock and data to the deserializer. The CDR PLL supports the full range of data rates.

The CDR PLL requires offset cancellation to correct the analog offset voltages that may exist from process variations between the positive and negative differential signals in the CDR circuitry.

Note: See the Related Links for a detailed description of the offset cancellation process.

The CDR PLL operates either in LTR mode or LTD mode. After power-up or reset of the receiver PMA, the CDR PLL must first operate in LTR mode to keep the VCO output frequency close to the optimum recovered clock rate.

In LTR mode, the phase detector is not active. When the CDR PLL locks to the input reference clock, you can switch the CDR PLL to LTD mode to recover the clock and data from the incoming serial data.

In LTD mode, the PFD output is not valid and may cause the lock detect status indicator to toggle randomly. When there is no transition on the incoming serial data for an extended duration, you must switch the CDR PLL to LTR mode to wait for the real serial data.

The time needed for the CDR PLL to lock to data depends on the transition density and jitter of the incoming serial data and the parts per million (ppm) difference between the receiver input reference clock and the upstream transmitter reference clock. The receiver PCS must be held in reset until the CDR PLL locks to data and produces a stable recovered clock.

The LTR/LTD controller directs the CDR PLL transition between the LTR and LTD modes. The controller supports operation in both automatic lock mode and manual lock mode.

Related Links

[Dynamic Reconfiguration in Arria V Devices](#)

CDR PLL in Automatic Lock Mode

In automatic lock mode, the LTR/LTD controller directs the transition between the LTR and LTD modes when a set of conditions are met to ensure proper CDR PLL operation. The mode transitions are indicated by the `rx_is_lockedtodata` signal. In Arria V GZ devices, the mode transitions are indicated by the `pma_rx_is_lockedtodata` signal.

After power-up or reset of the receiver PMA, the CDR PLL is directed into LTR mode. The controller transitions the CDR PLL from LTR to LTD mode when all the following conditions are met:

- The frequency of the CDR PLL output clock and input reference clock is within the configured ppm frequency threshold setting.
- The phase of the CDR PLL output clock and input reference clock is within approximately 0.08 unit interval (UI) of difference.
- In PCIe configurations only—the signal detect circuitry must also detect the presence of the signal level at the receiver input above the threshold voltage specified in the PCI Express Base Specification 2.0 and PCI Express Base Specification 3.0 (Arria V GZ only).

The controller transitions the CDR PLL from LTD to LTR mode when either of the following conditions is met:

- The difference in between frequency of the CDR PLL output clock and input reference clock exceeds the configured ppm frequency threshold setting.
- In PCIe configurations only—the signal detect circuitry detects the signal level at the receiver input below the threshold voltage specified in the PCI Express Base Specification 2.0 and PCI Express Base Specification 3.0 (Arria V GZ only).
- In Arria V GZ, after switching to LTD mode, the `rx_is_lockedtodata` status signal is asserted. Lock to data takes a minimum of 4 μ s, however the actual lock time depends on the transition density of the incoming data and the parts per million (ppm) difference between the receiver input reference clock and the upstream transmitter reference clock. The receiver PCS logic must be held in reset until the CDR produces a stable recovered clock.

If there is no transition on the incoming serial data for an extended duration, the CDR output clock may drift to a frequency exceeding the configured ppm threshold when compared with the input reference clock. In such a case, the LTR/LTD controller transitions the CDR PLL from LTD to LTR mode.

CDR PLL in Manual Lock Mode

In manual lock mode, the LTR/LTD controller directs the transition between the LTR and LTD modes based on user-controlled settings in the `pma_rx_set_locktodata` and `pma_rx_set_locktoref` registers. Manual lock mode provides the flexibility to manually control the CDR PLL mode transitions bypassing the ppm detection as required by certain applications that include, but not limited to, the following:

- Link with frequency differences between the upstream transmitter and the local receiver clocks exceeding the CDR PLL ppm threshold detection capability. For example, a system with asynchronous spread-spectrum clocking (SSC) downspread of -0.5% where the SSC modulation results in a ppm difference of up to 5000.
- Link that requires a faster CDR PLL transition to LTD mode, avoiding the duration incurred by the ppm detection in automatic lock mode.

In manual lock mode, your design must include a mechanism—similar to a ppm detector—that ensures the CDR PLL output clock is kept close to the optimum recovered clock rate before recovering the clock and data. Otherwise, the CDR PLL might not achieve locking to data. If the CDR PLL output clock frequency is detected as not close to the optimum recovered clock rate in LTD mode, direct the CDR PLL to LTR mode.

Note: See the Related Links for information about the proper sequence after power-up reset

Related Links

[Transceiver Reset Control and Power-Down in Arria V Devices](#)

Deserializer

The deserializer provides serial-to-parallel data conversion and assumes the data is received LSB first from the receiver buffer. Additionally, the deserializer provides the clock-slip feature.

Clock-Slip

Word alignment in the PCS may contribute up to one parallel clock cycle of latency uncertainty. The clock-slip feature allows word alignment operation with a reduced latency uncertainty by performing the word alignment function in the deserializer. Use the clock slip feature for applications that require deterministic latency.

The deterministic latency state machine in the word aligner from the PCS automatically controls the clock-slip operation. After completing the clock-slip process, the deserialized data is word-aligned into the receiver PCS.

Transmitter PLL

In Arria V GX/GT/SX/ST devices, there are two transmitter PLL sources: CMU PLL and fPLL. In Arria V GZ devices, there are three transmitter PLL sources: ATX PLL, CMU PLL, and fPLL. [Table 1-14: Transmitter PLL Capability and Availability](#) on page 21 lists the transmitter PLL capability and availability.

Table 1-14: Transmitter PLL Capability and Availability

Transmitter PLL	Serial Data Range	Availability
ATX PLL (1)	0.600 Gbps to 12.5 Gbps	Two transceivers per bank.
CMU PLL	0.611 Gbps to 10.3125 Gbps	Every channel when not used as receiver CDR (only two per transceiver bank capable to drive other channels)
fPLL	0.611 Gbps to 3.125 Gbps	Two per transceiver bank

Note to table:

1. ATX PLL only available in Arria V GZ devices.

Auxiliary Transmit (ATX) PLL Architecture


Arria V GZ devices contain two ATX PLLs per transceiver bank that can generate the high-speed clocks for the transmitter channels.

Compared with CMU PLLs, ATX PLLs have lower jitter and do not consume a transceiver channel; however an ATX PLL's frequency range is more limited.

The serial clock from the ATX PLL is routed to the transmitter clock dividers and can be further divided down to half the data rate of the individual channels. For best performance you should use the reference clock input that resides in the same transceiver block as your channel. However, you can use any dedicated reference clocks along the same side of the device to clock the ATX PLL.

Note: All Arria V GZ channels must use ATX PLLs. The reference clock input should reside in the same transceiver block as the channel for best performance.

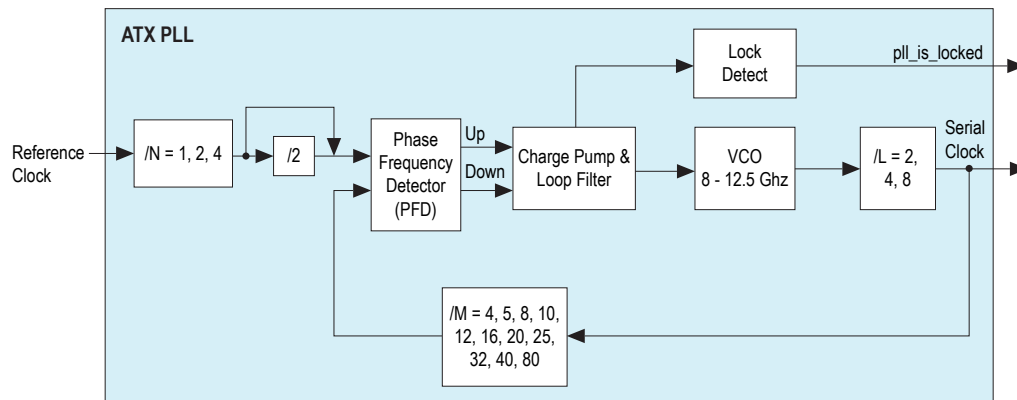Figure 1-19: ATX PLL Architecture



CMU PLL


In Arria V devices, if you do not use the channel PLL as a CDR, you can independently configure every channel PLL as a CMU PLL for clocking the transceivers.

Note: CDR functionality for the receiver is not available when you configure the channel PLL as a CMU PLL—you can use the transceiver channel only as a transmitter.

The CMU PLL operates only in lock-to-reference (LTR) mode and supports the full range of data rates.

[Figure 1-20: CMU PLL in Arria V Devices](#) on page 22 shows the Arria V channel PLL configured as a CMU PLL.

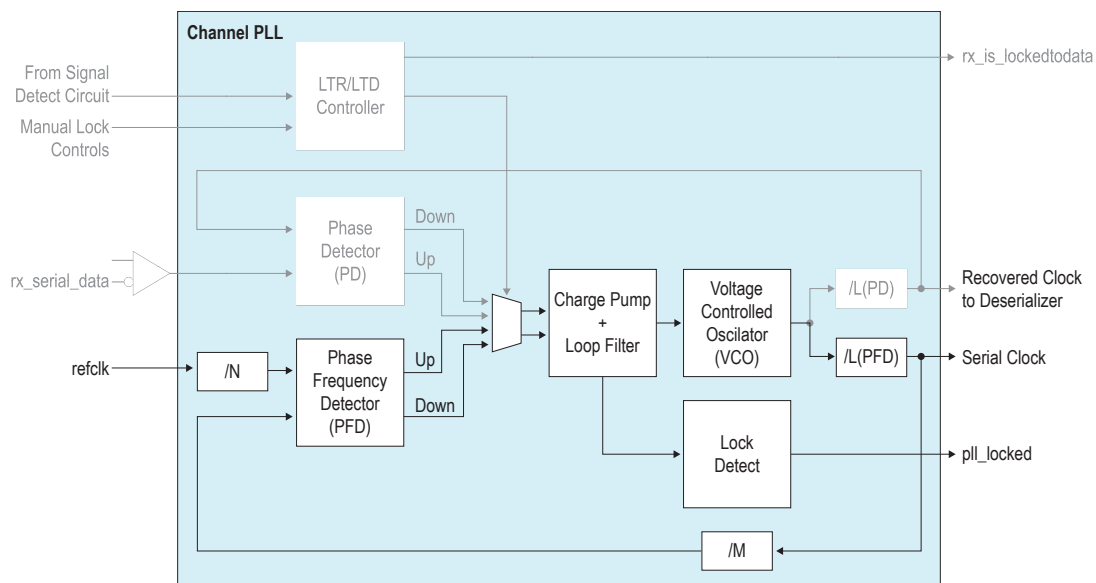Figure 1-20: CMU PLL in Arria V Devices



Note: For more information about the architecture of the channel PLL, refer to the [Arria V Receiver PMA Datapath](#).

Using the input reference clock, the CMU PLL synthesizes the serial clock with a frequency that is half of the data rate. The CMU PLL output serial clock feeds the clock divider that resides in the transmitter of the

same transceiver channel. Depending on the channel location in a transceiver bank, the CMU PLL of channels 1 and 4 feeds the output clock to the x1 clock lines.

Note: Transmitter PLLs within the upper-half or lower-half of a transceiver bank must be connected to the same Reconfiguration Controller.

See the Related Links for more information about the input reference clock and transmit PLL.

Related Links

[Transceiver Clocking in Arria V Devices](#)

fPLL as Transmitter PLL

In addition to CMU PLL, the fPLL located adjacent to the transceiver banks are available for clocking the transmitters for serial data rates up to 3.125 Gbps.

Related Links

[Clock Networks and PLLs in Arria V Devices](#)


Clock Divider

Each Arria V transmitter channel has a clock divider.

There are two types of clock dividers, depending on the channel location in a transceiver bank:

- Local clock divider—channels 0, 2, 3, and 5 provide serial and parallel clocks to the PMA
- Central clock divider—channels 1 and 4 can drive the x6 and xN clock lines

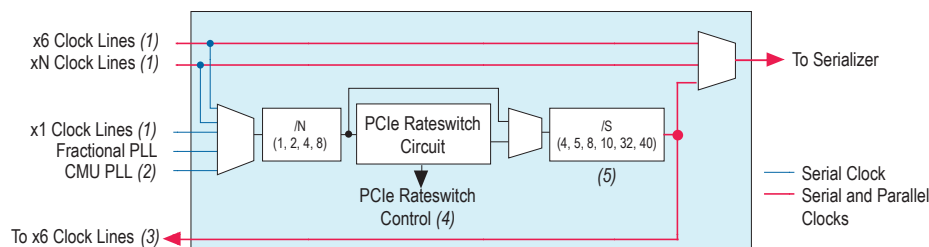Figure 1-21: Clock Divider for a Transceiver Channel in Arria V Devices



Notes to figure:

1. For information about the x1, x6, and xN clock lines, see the Related links.
2. Only from the channel PLL in the same transceiver channel configured as a CMU PLL.
3. Applicable for central clock dividers only (clock dividers in channels 1 and 4).
4. The PCIe rateswitch circuit allows dynamic switching between Gen2 and Gen1 line rates in a PCIe Gen2 design.
5. The divider settings are configured automatically depending on the serialization factor. The selected divider setting is half of the serialization factor. The 32 and 40 divider settings are only available for 10-Gbps channels.

Both types of clock dividers can divide the serial clock input to provide the parallel and serial clocks for the serializer in the channel if you use clocks from the clock lines or transmit PLLs. The central clock divider can additionally drive the x6 clock lines used to bond multiple channels.


In bonded channel configurations, both types of clock dividers can feed the serializer with the parallel and serial clocks directly, without dividing them from the x6 or xN clock lines.

Calibration Block

The calibration block calibrates the differential OCT resistance and analog circuitry in the transceiver PMA to ensure the functionality is independent of PVT. It is also used for duty cycle calibration of the clock line at serial data rates above 4.9152 Gbps.

Up to two calibration blocks are available for the Arria V transceiver PMA.

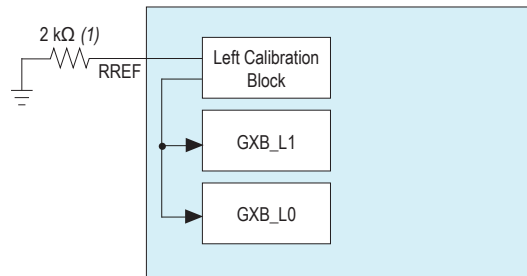
Figure 1-22: Calibration Block Location and Connections in Arria V Devices with Transceivers on the Left Side of the Device Only



Note to figure:

1. In Arria V GZ devices, you must use a 1.8 kΩ (maximum tolerance +/- 1%) external resistor.

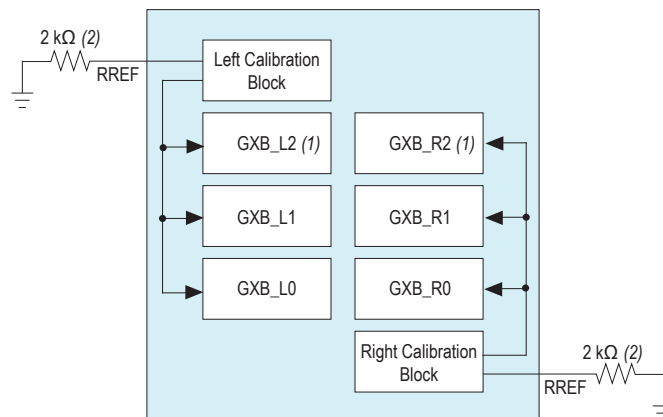Figure 1-23: Calibration Block Location and Connections in Arria V Devices with Transceivers on Both Sides of the Device



Note to figure:

1. GXB_L2 and GXB_R2 banks are only available in some device variants.
2. In Arria V GZ devices, you must use a 1.8 kΩ (maximum tolerance +/- 1%) external resistor.

The calibration block generates a constant internal reference voltage that is independent of PVT variations using the external reference resistor. The resulting reference currents are used to calibrate the transceiver banks.

Note: You must connect a separate 2 kΩ (tolerance maximum of ±1%) external resistor on each RREF pin to ground, except for Arria GZ devices. In Arria V GZ devices, you must use a 1.8 kΩ (maximum tolerance +/- 1%) external resistor. To ensure the calibration block operates properly, the RREF resistor connection in the board must be free from external noise.

Offset Cancellation in the Receiver Buffer and Receiver CDR

Process variation in smaller process silicon can lead to a V_{CM} offset between the p and n signals within the differential buffers. Arria V GZ devices have an automatic calibration in their receiver buffers to remove this V_{CM} offset.

You must use the reconfiguration controller IP for offset cancellation to take place. Calibration does not occur during transceiver reset, only during device configuration. Any signals that may appear on the receiver pin do not affect calibration because the receiver buffers are disconnected during calibration.

Note: A maximum of one reconfiguration controller is allowed per transceiver bank upper-half or lower-half triplet.

ATX PLL Calibration for Arria V GZ Devices

ATX PLL calibration optimizes the ATX PLL VCO settings for the desired output frequency. The reconfiguration controller IP must be instantiated for this calibration to run. The calibration occurs one time after device initialization.


PCS Architecture

The PCS architecture of Arria V GX/GT/SX/ST devices are slightly different from the GZ.

The GZ has three types of PCS blocks: standard PCS block, a 10G PCS block and a PCIe Gen3 PCS block.

The GX and GT devices have only one type of PCS block, which is similar to the GZ standard PCS block, except for the data rate support. The GX and GT PCS supports up to 6.5536 Gbps while the GZ supports up to 9.8 Gbps. The 10G PCS of the GZ supports 12.5 Gbps, and the PCIe Gen3 PCS supports the PCIe Gen 3 Base specification.

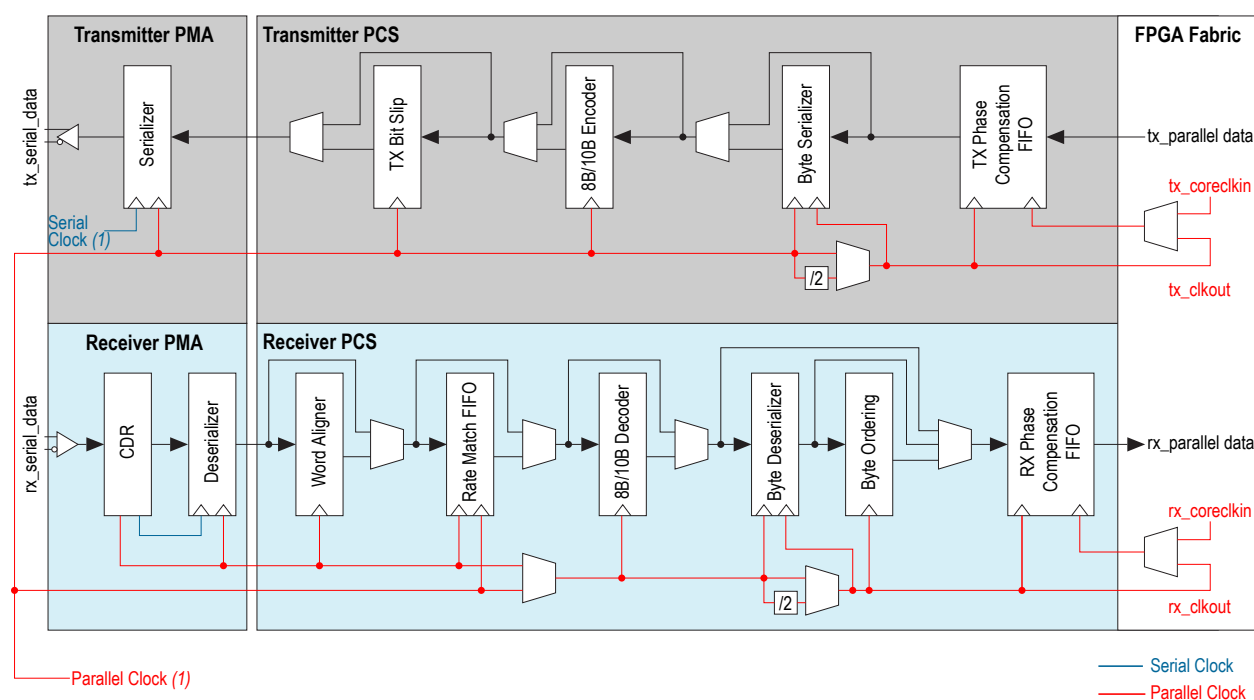Figure 1-24: Transceiver Channel PCS in Arria V Devices



Note to figure:

1. The serial and parallel clocks are sourced from the clock divider.

Note: For Arria GX and GT devices, the PCS is not available when using the 10-Gbps channels; only the PMA is available. You must implement the PCS functions required for the interface using user logic in the FPGA fabric with an 80-bit FPGA fabric-transceiver width.

Arria V GZ transceiver PCS blocks fully support data rates up to 12.5 Gbps. You have the option to bypass the PCS using the PMA direct mode.

Table 1-15: PCS Datapath Configurations on page 26 lists the two transceiver channel PCS datapath configurations based on the transceiver channel PMA-PCS width (or the SERDES factor).

Table 1-15: PCS Datapath Configurations

Parameter	Single-Width	Double-Width
PMA-PCS Interface Width	8 or 10 bit	16 or 20 bit
FPGA Fabric-Transceiver Interface Width	8 or 10 bit 16 or 20 bit ⁽¹⁾	16 or 20 bit 32 or 40 bit ⁽¹⁾
Supported configurations	PCIe Gen1, Gen2, and Gen3 XAUI Custom	Custom
Data rate range in a custom configuration	0.6 to 3.75 Gbps	1.0 to 11 Gbps

Note to table:

1. The byte serializer and deserializer are enabled.

Transmitter PCS Datapath for Arria V GX/GT Devices and Arria V GZ Standard PCS

This section describes the transmitter phase compensation FIFO, byte serializer, 8B/10B encoder, and transmitter bit-slip blocks in the transmitter PCS datapaths.

Table 1-16: Functional Blocks in the Transmitter PCS Datapath

Block	Functionality
Transmitter Phase Compensation FIFO	- Compensates for the phase difference between the low-speed parallel clock and the FPGA fabric interface clock when interfacing the transmitter PCS with the FPGA fabric directly or with the PCIe hard IP block - Supports operation in phase compensation and registered modes
Byte Serializer	- Divides the FPGA fabric-transceiver interface frequency in half at the transmitter channel by doubling the transmitter input datapath width - Allows the transmitter channel to operate at higher data rates with the FPGA fabric-transceiver interface frequency that is within the maximum limit - Supports operation in double-width modes

Block	Functionality
8B/10B Encoder	- Generates 10-bit code groups from 8-bit data and 1-bit control identifier, in compliance with Clause 36 of the IEEE 802.3 specification - Supports operation in single- and double-width modes, and running disparity control
Transmitter Bit-Slip	- Enables user-controlled, bit-level delay in the data prior to serialization for serial transmission - Supports operation in single- and double-width modes

Transmitter Phase Compensation FIFO

The transmitter phase compensation FIFO is four words deep and interfaces the control and data signals between the transmitter PCS and FPGA fabric or PCIe hard IP block.

The FIFO supports the following operations:

- Phase compensation mode with various clocking modes on the read clock and write clock
- Registered mode with only one clock cycle of datapath latency

Phase Compensation Mode

The transmitter phase compensation FIFO compensates any phase difference between the read and write clocks for the transmitter control and data signals.

The low-speed parallel clock feeds the read clock; the FPGA fabric interface clock feeds the write clock. The clocks must have 0 ppm difference in frequency or a FIFO underrun or overflow condition may result.

The transmitter phase compensation FIFO supports various clocking modes on the read and write clocks depending on the transceiver configuration.

Note: See the Related Links for a detailed description of transmitter datapath interface clocking modes when using the transmitter phase compensation FIFO.

Related Links

[Transceiver Clocking in Arria V Devices](#)

Registered Mode

To eliminate the FIFO latency uncertainty for applications with stringent datapath latency uncertainty requirements, bypass the FIFO functionality in registered mode to incur only one clock cycle of datapath latency when interfacing the transmitter channel to the FPGA fabric. Configure the FIFO to registered mode when interfacing the transmitter channel to the PCIe hard IP block to reduce datapath latency. In registered mode, the low-speed parallel clock that is used in the transmitter PCS clocks the FIFO.

Byte Serializer

The byte serializer allows the transmitter channel to operate at higher data rates in a configuration that exceeds the FPGA fabric–transceiver interface frequency limit.

The byte serializer supports operation in single- and double-width modes. The datapath clock rate at the output of the byte serializer is twice the FPGA fabric–transmitter interface clock frequency. The byte serializer forwards the least significant word first followed by the most significant word.

Note: You must use the byte serializer in configurations that exceed the maximum frequency limit of the FPGA fabric–transceiver interface.

[Table 1-17: Transmitter Input Datapath Conversion](#) on page 28 lists the byte serializer datapath conversion for the transmitter input datapath width in single- and double-width modes.

Table 1-17: Transmitter Input Datapath Conversion

Mode	Transmitter Input Datapath Width	Byte Serializer Output Datapath Width	Byte Serializer Output Ordering
Single Width	16	8	Least significant 8 bits of the 16-bit input first
	20	10	Least significant 10 bits of the 20-bit input first
Double Width	32	16	Least significant 16 bits of the 32-bit input first
	40	20	Least significant 20 bits of the 40-bit input first


8B/10B Encoder

The 8B/10B encoder supports operation in single- and double-width modes with the running disparity control feature.

8B/10B Encoder in Single-Width Mode

In single-width mode, the 8B/10B encoder generates 10-bit code groups from 8-bit data and 1-bit control identifier with proper disparity according to the PCS reference diagram in Clause 36 of the IEEE 802.3 specification. The 10-bit code groups are generated as valid data code-groups (/Dx.y/) or special control code-groups (/Kx.y/), depending on the 1-bit control identifier.

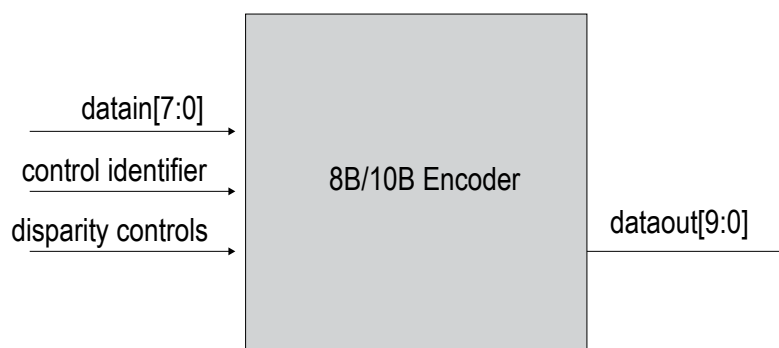Figure 1-25: 8B/10B Encoder Diagram in Single-Width Mode




The IEEE 802.3 specification identifies only 12 sets of 8-bit characters as /Kx.y/. If other sets of 8-bit characters are set to encode as special control code-groups, the 8B/10B encoder may encode the output 10-bit code as an invalid code (it does not map to a valid /Dx.y/ or /Kx.y/ code), or unintended valid /Dx.y/ code, depending on the value entered.

8B/10B Encoder in Double-Width Mode

In double-width mode, two 8B/10B encoders are cascaded to generate two sets of 10-bit code groups from 16-bit data and two 1-bit control identifiers.

When receiving the 16-bit data, the 8-bit LSByte is encoded first, followed by the 8-bit MSByte.

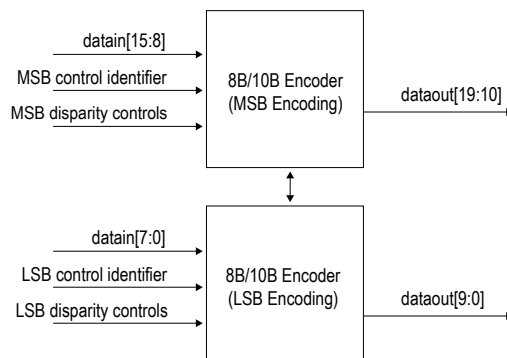Figure 1-26: 8B/10B Encoder Diagram in Double-Width Mode



Running Disparity Control

The 8B/10B encoder automatically performs calculations that meet the running disparity rules when generating the 10-bit code groups.

The running disparity control feature provides user-controlled signals (`tx_dispv1` and `tx_forcedisp`) to manually force encoding into a positive or negative current running disparity code group. When enabled, the control overwrites the current running disparity value in the encoder based on user-controlled signals, regardless of the internally-computed current running disparity in that cycle.

Note: Using the running disparity control may temporarily cause a running disparity error at the receiver.

Encoder Output During Reset Sequence

Figure 1-27: 8B/10B Encoder Output During and After Reset Conditions

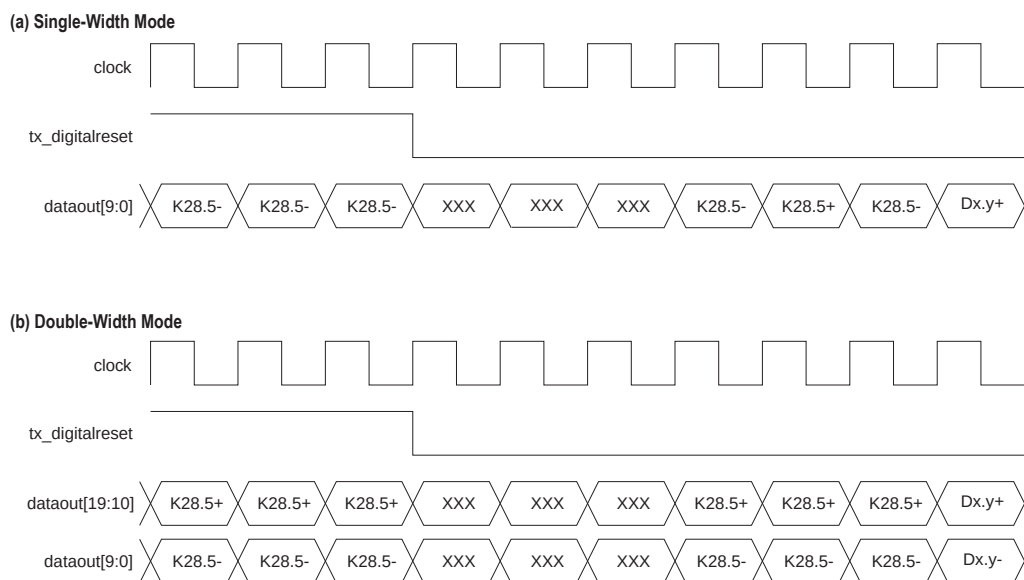


Table 1-18: 8B/10B Encoder Output During and After Reset Conditions

Operation Mode	During 8B/10B Reset	After 8B/10B Reset Release
Single Width	Continuously sends the /K28.5/ code from the RD– column	Some “don’t cares” due to pipelining in the transmitter channel, followed by three /K28.5/ codes with proper disparity—starts with negative disparity—before sending encoded 8-bit data at its input.
Double Width	Continuously sends the /K28.5/ code from the RD– column on LSByte and the /K28.5/ code from the RD+ column on MSByte	Some “don’t cares” due to pipelining in the transmitter channel, followed by: - Three /K28.5/ codes from the RD– column before sending encoded 8-bit data at its input on LSByte. - Three /K28.5/ codes from the RD+ column before sending encoded 8-bit data at its input on MSByte.

Transmitter Bit-Slip

The transmitter bit-slip enables a bit-level delay insertion to the data prior to serialization for the serial transmission. The transmitter bit-slip supports operation in single- and double-width modes. Each bit slipped at the transmitter incurs one serial bit of datapath latency.

Table 1-19: Bits Slip Allowed with the `tx_bitslipboundaryselect` Signal

Operation Mode	Maximum Bit-Slip Setting
Singe width (8- or 10-bit)	9
Double width (16- or 20-bit)	19

Receiver PCS Datapath for Arria V GX/GT Devices and Arria V GZ Standard PCS

Table 1-20: Functional Blocks in the Arria V GX/GT/SX/ST 6-Gbps Receiver PCS and Arria V GZ Standard PCS Datapaths

Block	Functionality
Word Aligner	- Searches for a predefined alignment pattern in the deserialized data to identify the correct boundary and restores the word boundary during link synchronization - Supports an alignment pattern length of 7, 8, 10, 16, 20, or 32 bits - Supports operation in four modes—manual alignment, bit-slip, automatic synchronization state machine, and deterministic latency state machine—in single- and double-width configurations - Supports the optional programmable run-length violation detection, polarity inversion, bit reversal, and byte reversal features
Rate Match FIFO	- Compensates for small clock frequency differences of up to ± 300 ppm—600 ppm total—between the upstream transmitter and the local receiver clocks by inserting or deleting skip symbols when necessary - Supports operation that is compliant to the clock rate compensation function in supported protocols

Block	Functionality
8B/10B Decoder	- Receives 10-bit data and decodes the data into an 8-bit data and a 1-bit control identifier—in compliance with Clause 36 of the IEEE 802.3 specification - Supports operation in single- and double-width modes
Byte Deserializer	- Divides the FPGA fabric–transceiver interface frequency in half at the receiver channel by doubling the receiver output datapath width - Allows the receiver channel to operate at higher data rates with the FPGA fabric–transceiver interface frequency that is within the maximum limit - Supports operation in double-width modes
Byte Ordering	Searches for a predefined pattern that must be ordered to the LSByte position in the parallel data going to the FPGA fabric when you enable the byte deserializer
Receiver Phase Compensation FIFO	- Compensates for the phase difference between the low-speed parallel clock and the FPGA fabric interface clock when interfacing the receiver PCS with the FPGA fabric directly or with the PCIe hard IP block - Supports operation in phase compensation and registered modes

Word Aligner

The Word Aligner provides word boundary restoration during link synchronization.

Parallel data at the input of the receiver PCS loses the word boundary of the upstream transmitter from the serial-to-parallel conversion in the deserializer. The word aligner provides word boundary restoration during link synchronization with the following four modes:

- Manual alignment—automatic synchronization to new word boundary
- Bit-slip—manual data slip control
- Automatic synchronization state machine—automatic synchronization to a new word boundary with the programmable state machine for hysteresis control
- Deterministic latency state machine—automatic synchronization to a new word boundary for applications with a stringent latency uncertainty requirement

The word aligner searches for a predefined alignment pattern in the deserialized data to identify the correct boundary and restores the word boundary during link synchronization. The alignment pattern is predefined for standard serial protocols according to the respective protocol specifications to achieve synchronization or you can specify the settings with a custom word alignment pattern for proprietary protocol implementations. Except for bit-slip mode, after completing word alignment, the deserialized data is synchronized to have the word alignment pattern at the LSB portion of the aligned data.

In addition to restoring the word boundary, the word aligner also supports optional features.

Table 1-21: Optional Word Aligner Features

Feature	Availability
Programmable Run-Length Violation Detection	All transceiver configurations
Receiver Polarity Inversion	All transceiver configurations except PCIe
Receiver Bit Reversal	Custom single- and double-width configurations only
Receiver Byte Reversal	Custom double-width configuration only

The operation mode and alignment pattern length support varies depending on the word aligner configurations.

Table 1-22: Word Aligner Operation Mode and Pattern Length Support

PCS Mode	PMA–PCS Interface Width	Word Aligner Mode	Alignment Pattern Length
Single Width	8 bits	Manual alignment	Singe Width
		Bit-slip	16 bits
	10 bits	Manual alignment	7 or 10 bits
		Bit-slip	7 or 10 bits
		Automatic synchronization state machine	7 or 10 bits
		Deterministic latency state machine	10 bits
Double Width	16 bits	Manual alignment	8, 16, or 32 bits
		Bit-slip	8, 16, or 32 bits
		Manual alignment	7, 10, or 20 bits
	20 bits	Bit-slip	7, 10, or 20 bits
		Deterministic latency state machine	10 or 20 bits

Word Aligner in Manual Alignment Mode

In manual alignment mode, the word alignment operation is manually controlled with the `rx_enapatternalign` register.

Depending on the configuration, controlling the `rx_enapatternalign` register enables the word aligner to look for the predefined word alignment pattern in the received data stream and automatically synchronizes to the new word boundary.

Table 1-23: Word Aligner Operations in Manual Alignment Mode

PCS Mode	PMA-PCS Interface Width	Word Alignment Operation
Single Width	8 bits	1. After the <code>rx_digitalreset</code> signal deasserts, a 0-to-1 transition to the <code>rx_enapatternalign</code> register triggers the word aligner to look for the predefined word alignment pattern in the received data stream and automatically synchronize to the new word boundary. 2. Any alignment pattern found thereafter in a different word boundary does not cause the word aligner to resynchronize to this new word boundary because there is a lack of a preceding 0-to-1 transition on the <code>rx_enapatternalign</code> register. 3. To resynchronize to the new word boundary, create a 0-to-1 transition to the <code>rx_enapatternalign</code> register. 4. If you set the <code>rx_enapatternalign</code> register to 1 before the deassertion of the <code>rx_digitalreset</code> signal, the word aligner updates the word boundary when the first alignment pattern is found, even though a 0-to-1 transition was not explicitly generated. 5. To resynchronize to the new word boundary, create a 0-to-1 transition to the <code>rx_enapatternalign</code> register. 6. When the word aligner synchronizes to the new word boundary, the <code>rx_patterndetect</code> and <code>rx_syncstatus</code> signals assert for one parallel clock cycle.
	10 bits	1. After the <code>rx_digitalreset</code> signal deasserts, setting 1 to the <code>rx_enapatternalign</code> register triggers the word aligner to look for the predefined word alignment pattern, or its complement in the received data stream, and automatically synchronizes to the new word boundary. 2. Any alignment pattern found thereafter in a different word boundary causes the word aligner to resynchronize to this new word boundary if the <code>rx_enapatternalign</code> register remains set to 1. 3. If you set the <code>rx_enapatternalign</code> register to 0, the word aligner maintains the current word boundary even when it finds the alignment pattern in a new word boundary. 4. When the word aligner synchronized to the new word boundary, the <code>rx_patterndetect</code> and <code>rx_syncstatus</code> signals will assert for one parallel clock cycle.
Double Width	16 bits	1. After the <code>rx_digitalreset</code> signal deasserts, regardless of the setting in the <code>rx_enapatternalign</code> register, the word aligner synchronizes to the first predefined alignment pattern found. 2. Any alignment pattern found thereafter in a different word boundary does not cause the word aligner to resynchronize to this new word boundary. 3. To resynchronize to the new word boundary, create a 0-to-1 transition to the <code>rx_enapatternalign</code> register. 4. When the word aligner synchronizes to the new word boundary, the <code>rx_syncstatus</code> signal asserts and stays high. The <code>rx_patterndetect</code> signal asserts for one parallel clock cycle. The <code>rx_syncstatus</code> signal will deassert if the next rising edge of <code>rx_enapatternalign</code> is detected.
	20 bits	

Bit-Slip Mode

In bit-slip mode, the word alignment is achieved by manually controlling the data slip with the `rx_bitslip` signal.

Slipping the received data by one bit effectively shifts the word boundary by one bit. You can implement a controller in the FPGA fabric to iteratively control the `rx_bitslip` signal until the word aligner output matches the predefined word alignment pattern to achieve synchronization.

Table 1-24: Word Aligner in Bit-Slip Mode

PCS Mode	PMA-PCS Interface Width (bits)	Word Alignment Operation
Single Width	8	1. At every rising edge to the <code>rx_bitslip</code> signal, the word aligner slips one bit into the received data.
	10	
Double Width	16	2. When bit-slipping shifts a complete round of the data bus width, the word boundary is back to the original boundary.
	20	
		3. Use the <code>rx_patterndetect</code> signal assertion or check the data output to indicate completion of alignment process—where the word aligner output matches the predefined alignment pattern.

Note: For every bit slipped in the word aligner, the earliest bit received is lost.

Word Aligner in Automatic Synchronization State Machine Mode

In automatic synchronization state machine mode, a programmable state machine determines the moment that the word aligner has either achieved synchronization or lost synchronization.

You can configure the state machine to provide hysteresis control during link synchronization and throughout normal link operation. Depending on your protocol configurations, the state machine parameters are automatically configured so they are compliant with the synchronization state machine in the respective protocol specification.

Table 1-25: State Machine Parameters for the Word Aligner in Automatic Synchronization State Machine Mode

Parameter	Values
Number of valid synchronization code groups or ordered sets received to achieve synchronization	1–256
Number of erroneous code groups received to lose synchronization	1–64
Number of continuous good code groups received to reduce the error count by one	1–256

Table 1-26: Word Aligner Operation in Automatic Synchronization State Machine Mode

PCS Mode	PMA–PCS Interface Width	Word Alignment Operation
Single Width	10 bits	1. After the <code>rx_digitalreset</code> signal deasserts, the word aligner starts looking for the predefined word alignment pattern, or its complement, in the received data stream and automatically aligns to the new word boundary. 2. Synchronization is achieved only after the word aligner receives the programmed number of valid synchronization code groups in the same word boundary and is indicated by the assertion of the <code>rx_syncstatus</code> signal. 3. After assertion and achieving synchronization, the <code>rx_syncstatus</code> signal remains asserted until the word aligner loses synchronization. 4. Loss of synchronization occurs when the word aligner receives the programmed number of erroneous code groups without receiving the intermediate good code groups and is indicated by the deassertion of the <code>rx_syncstatus</code> signal. 5. The word aligner may achieve synchronization again after receiving a new programmed number of valid synchronization code groups in the same word boundary.

Word Aligner in Deterministic Latency State Machine Mode

In deterministic latency state machine mode, word alignment is achieved by performing a clock-slip in the deserializer until the deserialized data coming into the receiver PCS is word-aligned.

The state machine controls the clock-slip process in the deserializer after the word aligner has found the alignment pattern and identified the word boundary. Deterministic latency state machine mode offers a reduced latency uncertainty in the word alignment operation for applications that require deterministic latency.

PCS Mode	PMA–PCS Interface Width	Word Alignment Operation
Single Width	10 bits	1. After the <code>rx_digitalreset</code> signal deasserts, a 0-to-1 transition to the <code>rx_enapatternalign</code> register triggers the word aligner to look for the predefined word alignment pattern or its complement in the received data stream. 2. After the pattern is found and the word boundary is identified, the state machine controls the deserializer to clock-slip the boundary-indicated number of serial bits. 3. When the clock-slip is complete, the deserialized data coming into the receiver PCS is word-aligned and is indicated by the assertion of the <code>rx_syncstatus</code> signal.
Double Width	20 bits	

Programmable Run-Length Violation Detection

The programmable run-length violation detection circuit detects if the number of consecutive 1s or 0s in the received data exceeds the user-specified threshold.

Table 1-27: Detection Capabilities of the Run-Length Violation Circuit

PCS Mode	PMA–PCS Interface Width (bits)	Run-Length Violation Detector Range	
		Minimum	Maximum
Single Width	8	4	128
	10	5	160
Double Width	16	8	512
	20	10	640

Receiver Polarity Inversion

The positive and negative signals of a serial differential link might erroneously be swapped during board layout. Solutions such as board re-spin or major updates to the PLD logic can be expensive. The polarity inversion feature at the receiver corrects the swapped signal error without requiring board respin or major updates to the logic in the FPGA fabric. The polarity inversion feature inverts the polarity of every bit at the input to the word aligner, which has the same effect as swapping the positive and negative signals of the serial differential link.

Inversion is controlled dynamically with the `rx_invpolarity` register. When you enable the polarity inversion feature, initial disparity errors may occur at the receiver with the 8B/10B-coded data. The receiver must be able to tolerate these disparity errors.

Caution: If you enable polarity inversion midway through a word, the word will be corrupted.

Bit Reversal

You can reverse the bit order at the output of the word aligner for receiving a MSB-to-LSB transmission using the bit reversal feature at the receiver.

Table 1-28: Bit Reversal Feature

Bit Reversal Option	Transmission Bit Order	
	8- or 10-bit Serialization Factor	16- or 20-bit Serialization Factor
Disabled (default)	LSB to MSB	LSB to MSB
Enabled	MSB to LSB For example: 8-bit—D[7:0] rewired to D[0:7] 10-bit—D[9:0] rewired to D[0:9]	MSB to LSB For example: 16-bit—D[15:0] rewired to D[0:15] 20-bit—D[19:0] rewired to D[0:19]

Note: When receiving the MSB-to-LSB transmission, the word aligner receives the data in reverse order. The word alignment pattern must be reversed accordingly to match the MSB-first incoming data ordering.

You can dynamically control the bit reversal feature using the `rx_bitreversal_enable` register with the word aligner in bit-slip mode. When you dynamically enable the bit reversal feature in bit-slip mode,

you can ignore the pattern detection function in the word aligner because the word alignment pattern cannot be dynamically reversed to match the MSB-first incoming data ordering.

Receiver Byte Reversal

The two symbols of incoming data at the receiver in double-width mode may be accidentally swapped during transmission.

For a 16-bit input data width at the word aligner, the two symbols are `bits[15:8]` and `bits[7:0]`. For a 20-bit input data width at the word aligner, the two symbols are `bits[19:10]` and `bits[9:0]`. The byte reversal feature at the word aligner output can correct this error by swapping the two symbols in double-width mode at the word aligner output.

Table 1-29: Byte Reversal Feature

Byte Reversal Option	Word Aligner Output	
	16-bit Data Width	20-bit Data Width
Disabled	D[15:0]	D[19:0]
Enabled	D[7:0], D[15:8]	D[9:0], D[19:10]

The reversal is controlled dynamically using the `rx_bytereversal_enable` register. Enabling the byte reversal option may cause initial disparity errors at the receiver with 8B/10B-coded data. The receiver must be able to tolerate these disparity errors.

Note: When receiving swapped symbols, the word alignment pattern must be byte-reversed to match the incoming byte-reversed data.

Rate Match FIFO

The Rate Match FIFO compensates for the small clock frequency differences between the upstream transmitter and the local receiver clocks.

In a link where the upstream transmitter and local receiver can be clocked with independent reference clock sources, the data can be corrupted by any frequency differences (in ppm count) when crossing the data from the recovered clock domain—the same clock domain as the upstream transmitter reference clock—to the local receiver reference clock domain.

The rate match FIFO is 20 words deep, which compensates for the small clock frequency differences of up to ± 300 ppm (600 ppm total) between the upstream transmitter and the local receiver clocks by performing symbol insertion or deletion, depending on the ppm difference on the clocks.

The rate match FIFO operation requires that the transceiver channel is in duplex configuration (both transmit and receive functions) and a predefined 20-bit pattern (consisting of a 10-bit control pattern and a 10-bit skip pattern). The 10-bit skip pattern must be chosen from a code group with neutral disparity.

The FIFO operates by looking for the 10-bit control pattern, followed by the 10-bit skip pattern in the data after the word aligner has restored the word boundary. After finding the pattern, the FIFO performs the following operations to ensure the FIFO does not underflow or overflow:

- Inserts the 10-bit skip pattern when the local receiver reference clock frequency is greater than the upstream transmitter reference clock frequency
- Deletes the 10-bit skip pattern when the local receiver reference clock frequency is less than the upstream transmitter reference clock frequency

The rate match FIFO supports operations in single- and double-width modes. You can define the 20-bit pattern for custom configurations. For protocol configurations, the FIFO is automatically configured to support a clock rate compensation function as required by the following specifications:

- The PCIe protocol per clock tolerance compensation requirement, as specified in the PCI Express Base Specification 2.0 for Gen1 and Gen2 signaling rates and PCI Express Base Specification 3.0 for Gen1, Gen2, and Gen3 signaling rates (Arria V GZ only).
- The Gbps Ethernet (GbE) protocol per clock rate compensation requirement using an idle ordered set, as specified in Clause 36 of the IEEE 802.3 specification

See the Related Links for more information about the rate match FIFO operation in custom and protocol-specific configurations.

Related Links

[Transceiver Custom Configurations in Arria V Devices](#)

[Transceiver Protocol Configurations in Arria V Devices](#)

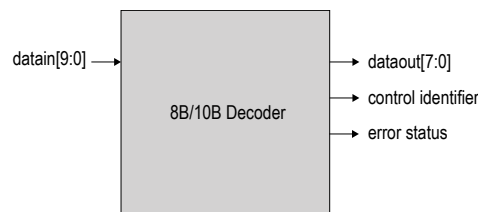
8B/10B Decoder

The 8B/10B decoder supports operation in single- and double-width modes.

8B/10B Decoder in Single-Width Mode

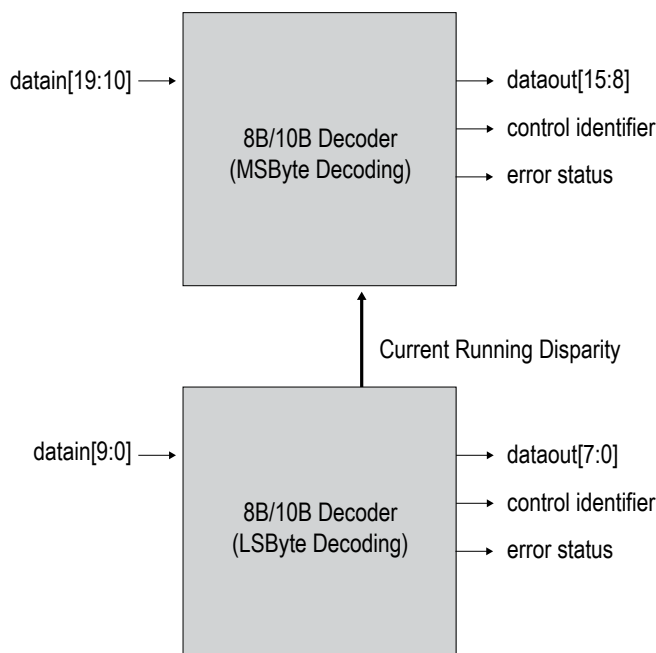
In single-width mode, the 8B/10B decoder decodes the received 10-bit code groups into an 8-bit data and a 1-bit control identifier in compliance with Clause 36 in the IEEE 802.3 specification. The 1-bit control identifier indicates if the decoded 8-bit code is a valid data or special control code.

Figure 1-28: 8B/10B Decoder Block Diagram in Single-Width Mode



8B/10B Decoder in Double-Width Mode

In double-width mode, two 8B/10B decoders are cascaded to decode the 20-bit code groups into two sets of 8-bit data and two 1-bit control identifiers. When receiving the 20-bit code group, the 10-bit LSByte is decoded first and the ending running disparity is forwarded to the other 8B/10B decoder for decoding the 10-bit MSByte.

Figure 1-29: 8B/10B Decoder Block Diagram in Double-Width Mode

Byte Deserializer

The byte deserializer allows the receiver channel to operate at higher data rates in a configuration that exceeds the FPGA fabric–transceiver interface frequency limit.

The byte deserializer supports operation in single- and double-width modes. The datapath clock rate at the input of the byte deserializer is twice the FPGA fabric–receiver interface clock frequency.

Note: You must use the byte deserializer in configurations that exceed the maximum frequency limit of the FPGA fabric–transceiver interface.

After byte deserialization, the word alignment pattern may be ordered in the MSByte or LSByte position.

For applications that require deterministic latency, you can configure the byte deserializer to order the word alignment pattern only in the LSByte position after byte deserialization. To achieve this, the data byte prior to the alignment pattern is dropped if the word alignment pattern is found in the MSByte position. In this configuration, there is no latency uncertainty in the byte deserializer operation.

[Table 1-30: Byte Deserializer Input Datapath Width Conversion](#) on page 39 lists the byte deserializer conversion for the byte deserializer input datapath width in single- and double-width modes. The data is assumed to be received as LSByte first—the least significant 8 or 10 bits in single-width mode or the least significant 16 or 20 bits in double-width mode.

Table 1-30: Byte Deserializer Input Datapath Width Conversion

Mode	Byte Deserializer Input Datapath Width	Receiver Output Datapath Width
Single Width	8	16
	10	20

Mode	Byte Deserializer Input Datapath Width	Receiver Output Datapath Width
Double Width	16	32
	20	40

Byte Ordering

When you enable the byte deserializer, the output byte order may not match the originally transmitted ordering. For applications that require a specific pattern to be ordered at the LSByte position of the data, byte ordering can restore the proper byte order of the byte-deserialized data before forwarding it to the FPGA fabric.

Byte ordering operates by inserting a predefined pad pattern to the byte-deserialized data if the predefined byte ordering pattern found is not in the LSByte position.

Byte ordering requires the following:

- A receiver with the byte deserializer enabled
- A predefined byte ordering pattern that must be ordered at the LSByte position of the data
- A predefined pad

Byte ordering supports operation in single- and double-width modes. Both modes support operation in word aligner-based and manual ordering modes.

Byte Ordering in Single-Width Mode

Byte ordering is supported only when you enable the byte deserializer.


Table 1-31: Byte Ordering Operation in Single-Width Mode

PMA-PCS Interface Width	FPGA Fabric-Transceiver Interface Width	8B/10B Decoder	Byte Ordering Pattern Length	Pad Pattern Length
8 bits	16 bits	Disabled	8 bits	8 bits
10 bits	16 bits	Enabled	9 bits ⁽¹⁾	9 bits ⁽¹⁾
	20 bits	Disabled	10 bits	10 bits

Note to table:

1. The MSB of the 9-bit pattern represents the 1-bit control identifier of the 8B/10B-decoded data. The lower 8 bits represent the 8-bit decoded code.

Figure 1-30: Byte Ordering Operation Example in Single-Width Mode on page 41 shows an example of a byte ordering operation in single-width mode (8-bit PMA-PCS interface width) where A is the predefined byte ordering pattern and P is the predefined pad pattern.

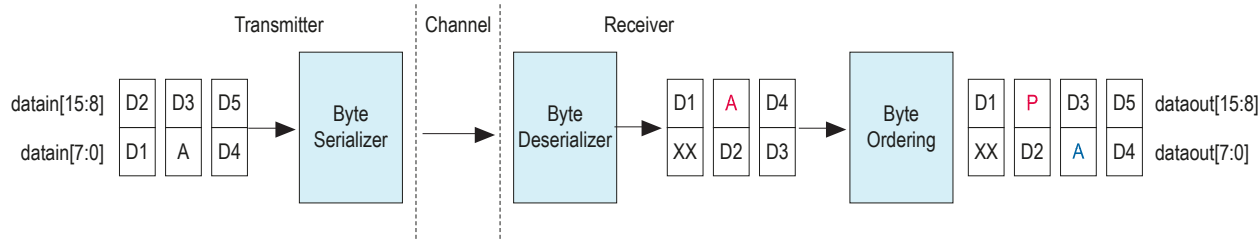Figure 1-30: Byte Ordering Operation Example in Single-Width Mode


Byte Ordering in Double-Width Mode

Byte ordering is supported only when you enable the byte deserializer.


Table 1-32: Byte Ordering Operation in Double-Width Mode

PMA-PCS Interface Width	FPGA Fabric-Transceiver Interface Width	8B/10B Decoder	Byte Ordering Pattern Length	Pad Pattern Length
16 bits	32 bits	Disabled	8 or 16 bits	8 bits
20 bits	32 bits	Enabled	9 ⁽¹⁾ or 18 bits ⁽²⁾	9 bits ⁽¹⁾
	40 bits	Disabled	10 or 20 bits	10 bits

Notes to table:

1. The MSB of the 9-bit pattern represents the 1-bit control identifier of the 8B/10B-decoded data. The lower 8 bits represent the 8-bit decoded code.
2. The 18-bit pattern consists of two sets of 9-bit patterns, individually represented as in Note (1).

Figure 1-31: Byte Ordering Operation Example in Double-Width Mode on page 41 shows an example of a byte ordering operation in double-width mode (16-bit PMA-PCS interface width) where A1A2 is the predefined byte ordering pattern and P is the predefined pad pattern.

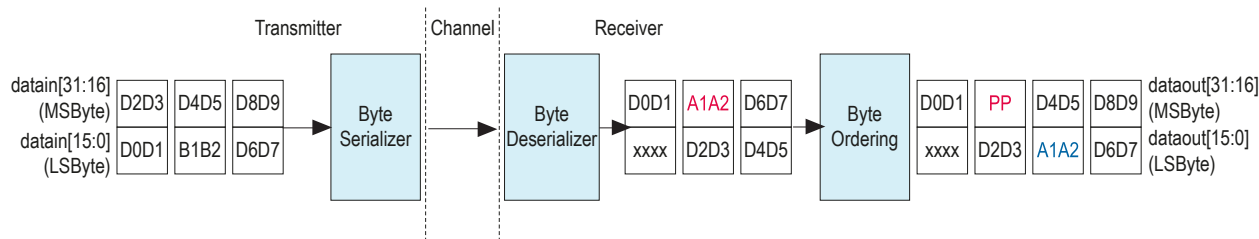Figure 1-31: Byte Ordering Operation Example in Double-Width Mode


Word Aligner-Based Ordering Mode

In word aligner-based ordering mode, the byte ordering operation is controlled by the word aligner synchronization status signal, `rx_syncstatus`.

After a rising edge on the `rx_syncstatus` signal, byte ordering looks for the byte ordering pattern in the byte-deserialized data.

When the first data byte that matches the byte ordering pattern is found, the byte ordering performs the following operations:

- If the pattern is not in the LSByte position—byte ordering inserts the appropriate number of pad patterns to push the byte ordering pattern to the LSByte position and indicates the byte alignment.
- If the pattern is in the LSByte position—byte ordering indicates the byte alignment.

Any byte misalignment found thereafter is ignored unless another rising edge on the `rx_syncstatus` signal, indicating resynchronization, is observed.

Manual Ordering Mode

In manual ordering mode, the byte ordering operation is controlled using the `rx_enabyteord` signal.

A rising edge on the `rx_enabyteord` signal triggers byte ordering to look for the byte ordering pattern in the byte-deserialized data.

When the first data byte that matches the byte ordering pattern is found, the byte ordering performs the following operations:

- If the pattern is not in the LSByte position—byte ordering inserts the appropriate number of pad patterns to push the byte ordering pattern to the LSByte position and indicates the byte alignment.
- If the pattern is in the LSByte position—byte ordering indicates the byte alignment.

Any byte misalignment found thereafter is ignored unless another rising edge on the `rx_enabyteord` signal is observed.

Receiver Phase Compensation FIFO

The receiver phase compensation FIFO is four words deep and interfaces the status and data signals between the receiver PCS and the FPGA fabric or the PCIe hard IP block. The FIFO supports the following operations:

- Phase compensation mode with various clocking modes on the read clock and write clock
- Registered mode with only one clock cycle of datapath latency

Phase Compensation Mode

The receiver phase compensation FIFO compensates for any phase difference between the read and write clocks for the receiver status and data signals.

The low-speed parallel clock feeds the write clock; the FPGA fabric interface clock feeds the read clock. The clocks must have 0 ppm difference in frequency or a FIFO underrun or overflow condition may result.

The receiver phase compensation FIFO supports various clocking modes on the read and write clocks depending on the transceiver configuration.

Note: See the Related Links for a detailed description of the receiver datapath interface clocking modes when using the receiver phase compensation FIFO.

Related Links

[Transceiver Clocking in Arria V Devices](#)

Registered Mode

To eliminate the FIFO latency uncertainty for applications with stringent datapath latency uncertainty requirements, bypass the FIFO functionality in registered mode to incur only one clock cycle of datapath latency when interfacing the receiver channel to the FPGA fabric. Configure the FIFO to registered mode when interfacing the receiver channel to the PCIe hard IP block to reduce datapath latency. In registered mode, the low-speed parallel clock that is used in the receiver PCS clocks the FIFO.


10G PCS Architecture for Arria V GZ Devices

The 10G PCS architecture offers a full duplex (transmitter and receiver) transceiver channel that supports serial data rates up to 12.5 Gbps for Arria V GZ devices.

Several functional blocks are customized for various protocols. The different datapath configurations for these protocols are available through the different PHY IPs instantiated through the MegaWizard™ Plug-In Managers. Currently, the only supported configurations for the 10G PCS are Interlaken, 10GBASE-R and low-latency 10G PCS.

Figure 1-32: 10G PCS Datapath in Arria V GZ Channels

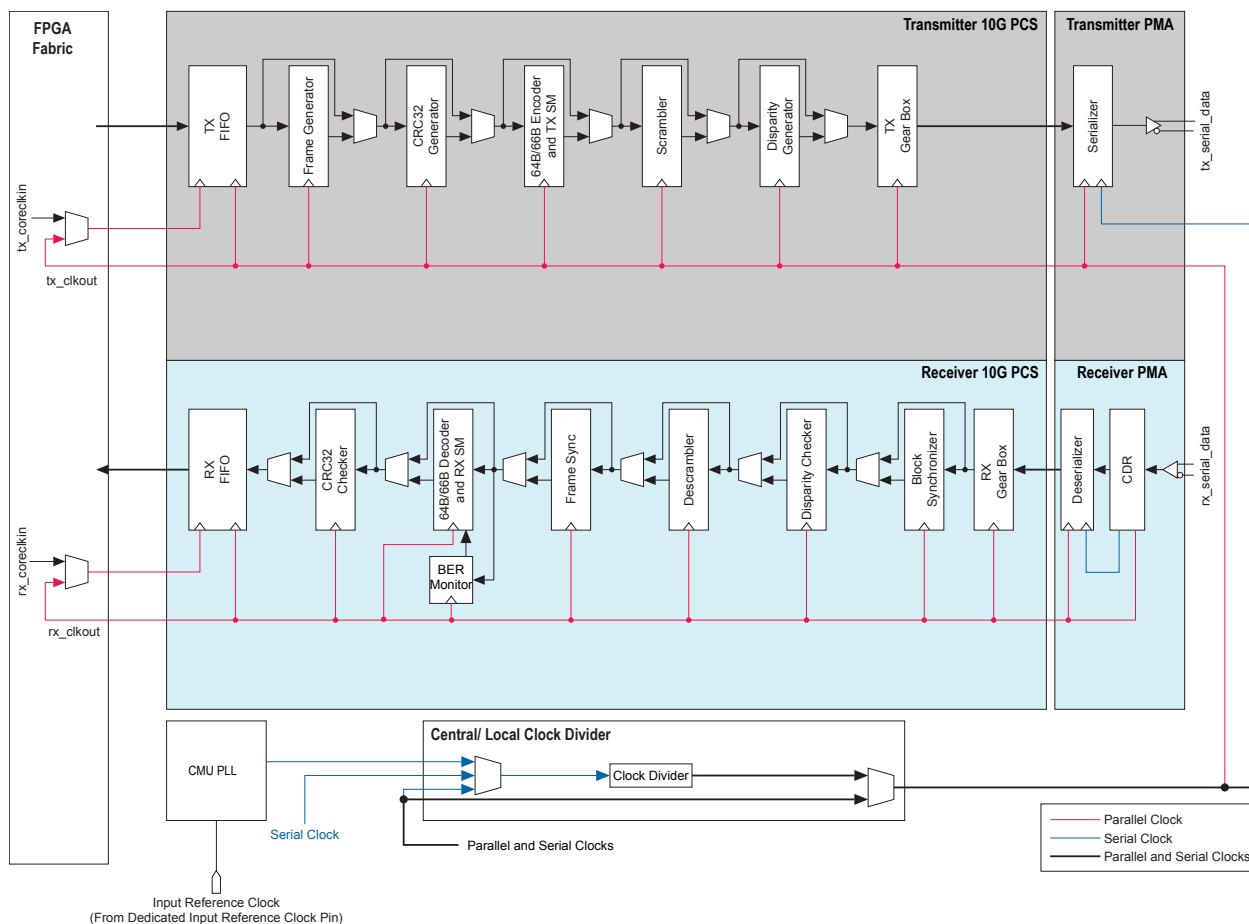Not all the blocks shown in the 10G PCS datapath are available in every configuration.



Related Links

[Altera Transceiver PHY IP Core User Guide](#)

Transmitter 10G PCS Datapath

The sub-blocks in the transmitter 10G PCS datapath are described in order from the transmitter FIFO to the transmitter gearbox.

Transmitter FIFO

The transmitter FIFO provides an interface between the transmitter channel PCS and the FPGA fabric.

In 10GBASE-R configurations, the transmitter FIFO receives data from the FPGA fabric. The data output from the transmitter FIFO block goes to the 64B/66B encoder.


In Interlaken configurations, the transmitter FIFO sends a control signal to indicate whether it is ready to receive data from the FPGA fabric. The user logic sends the data to the transmitter FIFO only if this control signal is asserted. In this configuration, data output from the transmitter FIFO block goes to the frame generator.

Frame Generator

The frame generator block supports the Interlaken protocol. The frame generator block takes the data from the transmitter FIFO and encapsulates the payload and burst/idle control words from the FPGA fabric with the framing layer's control words, such as the synchronization word, scrambler state word, skip word, and diagnostic word, to form a metaframe. The Interlaken PHY IP MegaWizard Plug-In Manager interface allows you to set the metaframe length.

Note: The frame generator is used only in Interlaken configurations.

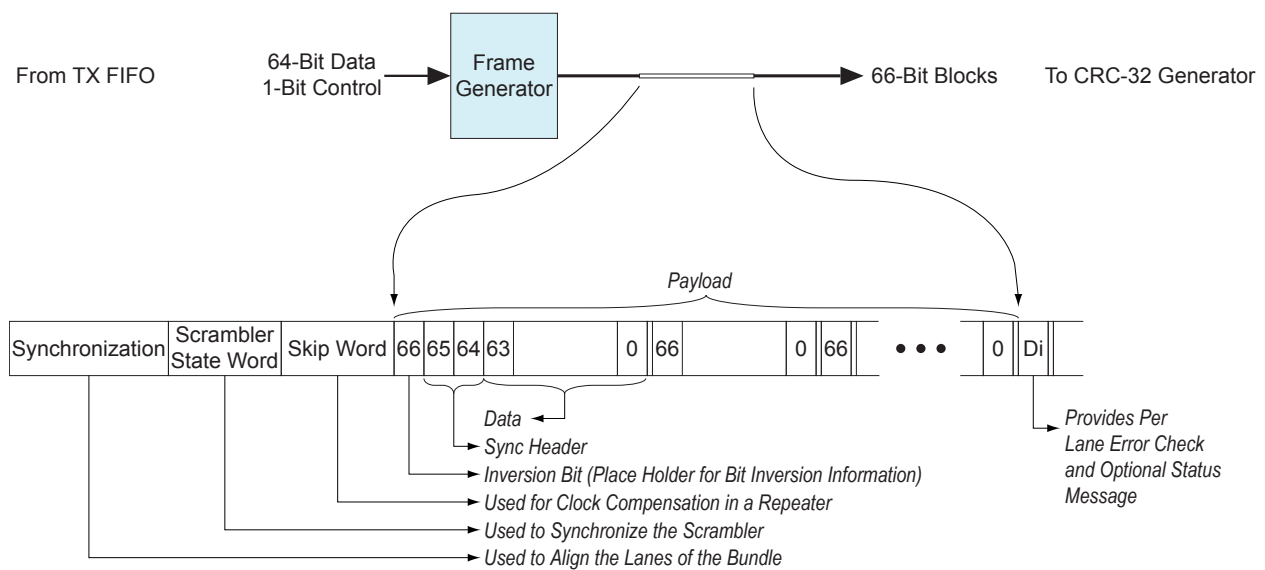Figure 1-33: Frame Generator



CRC-32 Generator


The CRC-32 generator block receives data from the frame generator and calculates the cyclic redundancy check (CRC) code for each block of data. This CRC code value is stored in the CRC32 field of the diagnostic word.

Note: The CRC-32 generator is used only in Interlaken configurations.

The CRC-32 calculation covers most of the metaframe, including the diagnostic word, except the following:

- bits [66 : 64] of each word
- 58-bit scrambler state within the scrambler state word
- 32-bit CRC-32 field within the diagnostic word

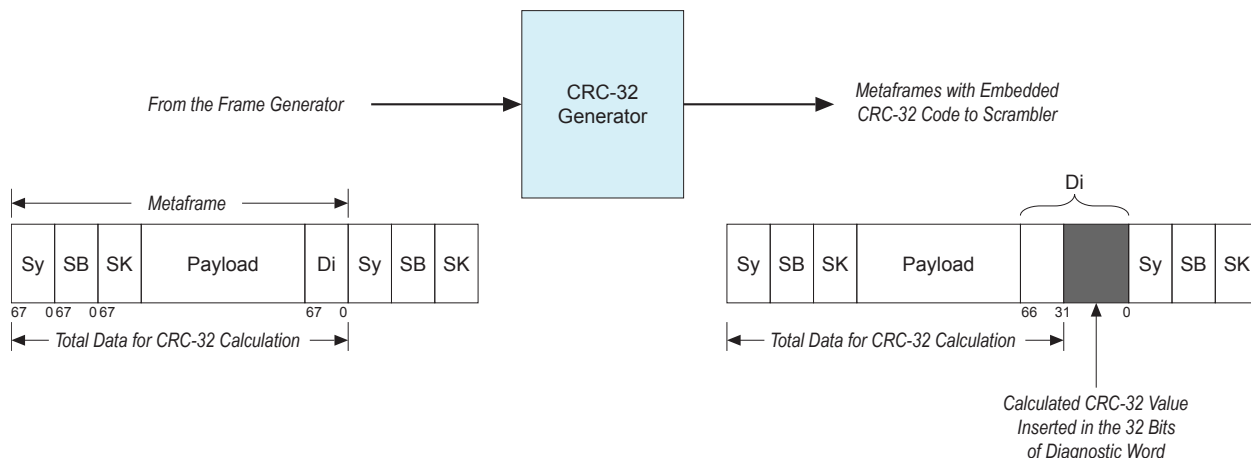Figure 1-34: CRC-32 Generator



64B/66B Encoder

The 64B/66B encoder conforms to the 10GBASE-R protocol specification as described in IEEE 802.3-2008 clause-49.

Note: The 64B/66B encoder is used only in 10GBASE-R configurations.

This block contains the 64B/66B encoder sub-block and the transmitter state machine sub-block. The 64B/66B encoder sub-block receives data from the transmitter FIFO and encodes the 64-bit data and 8-bit control characters to the 66-bit data block required by the 10GBASE-R configuration. The transmit state machine in the 64B/66B encoder sub-block checks the validity of the 64-bit data from the MAC layer and ensures proper block sequencing.

Scrambler

The scrambler operates in frame synchronous mode and self synchronous mode. Frame synchronous mode operates in Interlaken configurations. Self synchronous mode operates in 10GBASE-R configurations, as specified in IEEE 802.3-2008 clause-49.

Disparity Generator

The disparity generator block conforms to the Interlaken protocol specification and provides a DC-balanced data output. The disparity generator receives data from the scrambler and inverts the running disparity to stay within the ± 96 -bit boundary. To ensure this running disparity requirement, the disparity generator inverts bits [63:0] and sets bit [66] to indicate the inversion.

Note: The disparity generator is used only in Interlaken configurations.


Table 1-33: Interpretation of the MSB in the 67-Bit Payload for Arria V Devices

MSB	Interpretation
0	Bits [63:0] are not inverted; the disparity generator processes the word without modification
1	Bits [63:0] are inverted; the disparity generator inverts the word before processing it

Transmitter Gearbox

The transmitter gearbox adapts the PCS data width to a smaller bus width for interfacing with the PMA. Because of the transmitter gearbox, the difference in the bus widths between the PCS and the PMA is transparent to the logic in the FPGA fabric.

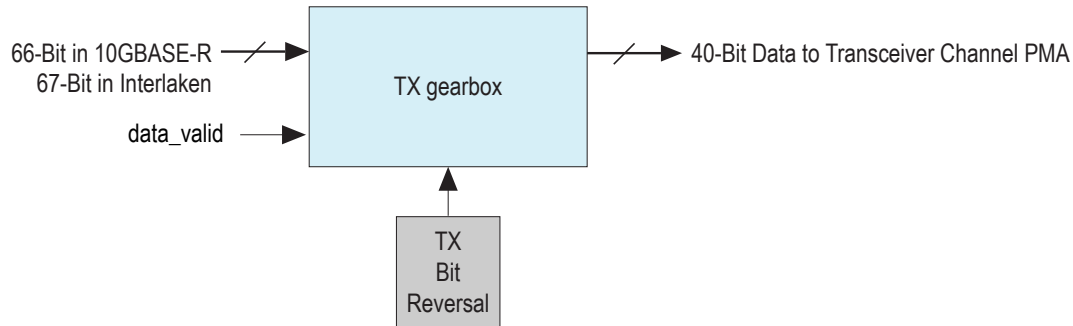Figure 1-35: Transmitter Gearbox



In addition to providing bus width adaptation, the transmitter gearbox provides the transmitter polarity inversion, bit reversal and bit-slip features.

Transmitter Bit Reversal

The transmitter gearbox can reverse the order of transmitted bits. By default, the transmitter first sends out the LSB of a word. Some protocols, such as Interlaken, require that the MSB of a word (bit 66 in a word [66:0]) is transmitted first. When you enable the transmitter bit reversal, the parallel input to the gearbox is swapped and the MSB is sent out first. The Quartus II software automatically sets the bit reversal for Interlaken configurations.

Transmitter Polarity Inversion

Transmitter polarity can be used to reverse the positive and negative differential buffer signals. This is useful if these signals are reversed on the board or backplane layout.

A high value on the `tx_invpolarity` register, which is accessed via the Avalon-MM PHY management interface, inverts the polarity of every bit of the input data word to the serializer in the transmitter datapath. Because inverting the polarity of each bit has the same effect as swapping the positive and negative signals of the differential link, correct data is sent to the receiver. Dynamically changing the `tx_invpolarity` register value might cause initial disparity errors at the receiver of an 8B/10B encoded link. The downstream system must be able to tolerate these disparity errors.

If polarity inversion is asserted midway through a serializer word, the word will be corrupted.

Transmitter Bit-Slip

The transmitter bit-slip allows you to compensate for the channel-to-channel skew between multiple transmitter channels by slipping the data sent to the PMA. The maximum number of bits slipped is controlled from the FPGA fabric and is equal to the width of the PMA-PCS interface, minus one.

Receiver 10G PCS Datapath

The sub-blocks in the receiver 10G PCS datapath are described in order from the receiver gearbox to the receiver FIFO.

Receiver Gearbox

The receiver gearbox adapts the PMA data width to a larger bus width to interface with the PCS. The PMA bus width is smaller than the PCS bus width; therefore, the receiver gearbox expands the data bus width from the PMA to the PCS. Because bus width adaptation is transparent, you can continuously feed data to the receiver gearbox. In addition to providing bus width adaptation, the receiver gearbox provides the receiver bit reversal feature.

Receiver Polarity Inversion

The receiver gearbox can invert the polarity of the incoming data. This is useful if the receive signals are reversed on the board or backplane layout.

Receiver Bit Reversal

The receiver gearbox allows bit reversal of the received data. Some protocols, such as Interlaken, require the bit reversal feature. For more information, see the Related Links

Related Links

[Transmitter Bit Reversal](#) on page 46

Block Synchronizer

The block synchronizer determines the block boundary of a 66-bit word in the case of the 10GBASE-R protocol or a 67-bit word in the case of the Interlaken protocol. The incoming data stream is slipped one bit at a time until a valid synchronization header (bits 65 and 66) is detected in the received data stream. After the predefined number of synchronization headers (as required by the protocol specification) is detected, the block synchronizer asserts the status signal to other receiver PCS blocks down the receiver datapath and to the FPGA fabric.

The block synchronizer is designed in accordance with both the Interlaken protocol specification and the 10GBASE-R protocol specification as described in IEEE 802.3-2008 clause-49.

Disparity Checker

The design of the disparity checker is based on the Interlaken protocol specifications. After word synchronization is achieved, the disparity checker monitors the status of the 67th bit of the incoming word and determines whether or not to invert bits [63:0] of the received word.

Note: The disparity checker is only used in Interlaken configurations

Table 1-34: Interpretation of the MSB in the 67-Bit Payload for Arria V Devices

MSB	Interpretation
0	Bits [63 : 0] are not inverted; the disparity checker processes the word without modification
1	Bits [63 : 0] are inverted; the disparity checker inverts the word to achieve the original word before processing it

Descrambler

The descrambler descrambles data per the protocol specifications supported by the 10G PCS. The descrambler operates either in frame synchronous or self synchronous mode.

Frame Synchronous Mode

Frame synchronous mode is used in Interlaken configurations only. When block synchronization is achieved, the descrambler uses the scrambler seed from the received scrambler state word. This block also forwards the current descrambler state to the frame synchronizer.

Self Synchronous Mode

Self synchronous mode is used in 10GBASE-R configurations only.

Frame Synchronizer

The frame synchronizer block achieves lock by looking for four synchronization words in consecutive metaframes. After synchronization, the frame synchronizer monitors the scrambler word in the metaframe and deasserts the lock signal after three consecutive mismatches and starts the synchronization process again. Lock status is available to the FPGA fabric.

Note: The frame synchronizer is only used in Interlaken configurations.

Bit-Error Rate (BER) Monitor

The BER monitor block conforms to the 10GBASE-R protocol specification as described in IEEE 802.3-2008 clause-49. After block lock is achieved, the BER monitor starts to count the number of invalid synchronization headers within a 125-ms period. If more than 16 invalid synchronization headers are observed in a 125-ms period, the BER monitor provides the status signal to the FPGA fabric, indicating a high bit error rate condition.

64B/66B Decoder

The 64B/66B decoder block contains a 64B/66B decoder sub-block and a receiver state machine sub-block. The 64B/66B decoder sub-block converts the received data from the descrambler into 64-bit data and 8-bit control characters. The receiver state machine sub-block monitors the status signal from the BER monitor. If the status signal is asserted, the receiver state machine sends local fault ordered sets to the FPGA interface.

Note: The 64B/66B encoder is used only in 10GBASE-R configurations.

The 64B/66B decoder block is designed towards the 10GBASE-R protocol specification as described in IEEE 802.3-2008 clause-49.

CRC-32 Checker

The CRC-32 checker block supports the Interlaken protocol. The CRC-32 checker calculates the CRC from the incoming data and compares the result to the CRC value sent in the diagnostic word. The CRC error signal is sent to the FPGA fabric.

Receiver FIFO

The receiver FIFO block operates in different modes based on the transceiver datapath configuration.

The Quartus II software automatically selects receiver FIFO mode for the configuration you use.

Clock Compensation Mode

The receiver FIFO is configured in clock compensation mode for the 10GBASE-R configuration. In clock compensation mode, the FIFO deletes idles or ordered sets and inserts only idles to compensate up to a ± 100 ppm clock difference between the remote transmitter and the local receiver.

Generic Mode

The receiver FIFO is configured in generic mode for the Interlaken configuration. In generic mode, the receiver FIFO provides the FIFO partially empty and FIFO full status signals to the FPGA fabric to control the read side of the FIFO.

Phase Compensation Mode

The receiver FIFO is configured in phase compensation mode for the 10G custom configuration. In phase compensation mode, the FIFO compensates for the phase difference between the FIFO write clock and the read clock.

XAUI Mode

In XAUI mode, the receiver FIFO compensates for up to ± 100 ppm (200 ppm total) difference between the upstream transmitter and the local receiver reference clock. The XAUI protocol requires the transmitter to

send /R/ (/K28.0/) code groups simultaneously on all four lanes (denoted as ||R|| column) during inter-packet gaps (IPGs), conforming to the IEEE P802.3ae specification. The receiver FIFO operation in XAUI mode is compliant with the IEEE P802.3ae specification.

PCIe Mode

In PCIe mode, the receiver FIFO compensates for up to ± 300 ppm (total 600 ppm) difference between the upstream transmitter and the local receiver. The PCIe protocol requires the transmitter to send SKP ordered sets during IPGs, conforming to the PCIe base specification 2.0. The SKP ordered set is defined as a /K28.5/ COM symbol followed by three consecutive /K28.0/ SKP symbol groups.

The PCIe protocol requires the receiver to recognize a SKP ordered set as a /K28.5/ COM symbol followed by one to five consecutive /K28.0/ SKP symbols. The rate match FIFO operation is compliant with PCIe Base Specification 2.0.


PCIe Gen 3 PCS Architecture

Arria V supports the PCIe Gen3 Base specification. The PCIe Gen3 uses a 128/130 bit block encoding/decoding scheme which is different from the 8B/10B scheme used in Gen 1 and Gen 2. The 130-bit block contains a 2-bit sync header and 128-bit data payload. For this reason, the PCIe Gen3 PCS has a separate data path as compared to the PCIe Gen1 or Gen2 PCS. The PCIe Gen3 PCS supports the PHY Interface for the PCI Express (PIPE) interface with the hard IP (HIP) enabled and with the HIP bypassed.

This PIPE interface supports the seamless switching of Data and Clock between the Gen1, Gen2, and Gen3 PCS, and provides support for PIPE 3.0 features.

The overall simplified PCIe Gen3 PCS the following architecture diagram. Note that the RX/TX Phase Comp FIFOs are physically placed in, and shared with the standard 8GB PCS.

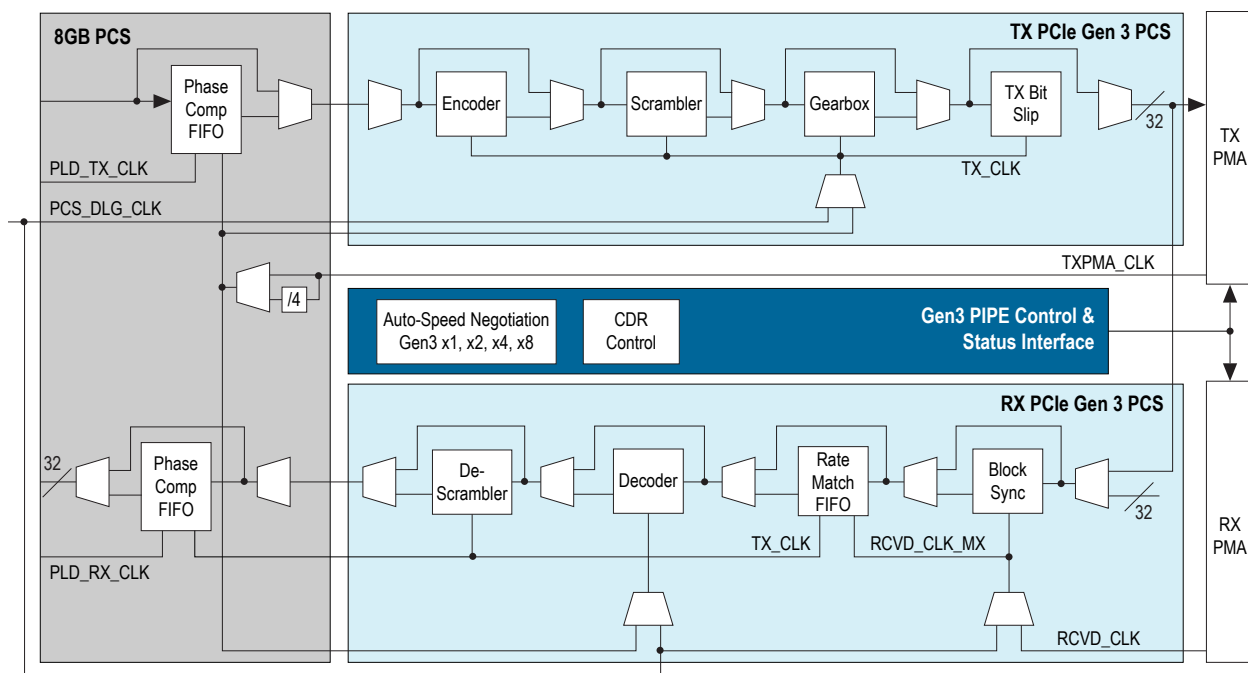Figure 1-36: PCIe Gen3 PCS Top Level Block Diagram



Transmitter PCIe Gen 3 PCS Datapath

This section describes the transmitter channel PCIe Gen 3 PCS datapath architecture.

Phase Compensation FIFO (Shared with Standard PCS)

Scrambler

The Scrambler is an additive scrambler on a per-lane basis with degree 23 polynomial linear feedback shift register (LFSR), with different taps for the 8 adjacent lanes. The scrambler is used to provide enough edge density, since there is no 8B/10B encoding in PCIe Gen 3, so that the RX PMA CDR can lock to the incoming data stream and generate the recovered clock.

Encoder

The PCIe Gen 3 base specification defines that the data packets have to be scrambled and descrambled, whereas the Ordered Set packets (except the first symbol of TS1 and TS2 Ordered Set) do not have to be scrambled or descrambled. The Encoder/Decoder continuously checks the header and payload of the packet and generates a signal to enable the scrambler/descrambler based upon whether the payload is an ordered set, or data packet. It also generates a signal to reset the scrambler/descrambler to the initial seed value if an Electrical Idle Exit Ordered Set or a Fast Training Sequence Ordered Set is received or transmitted. In addition, the encoder/decoder logic monitors the Ordered Set and the header for invalid values, and generates an error flag if they do.

Gearbox

The PCIe 3.0 base specification specifies a block size of 130 bits, with the exception of SKP Ordered Sets which can be variable length. An implementation of a 130-bit data path would take up significant resources, so the PCIe Gen 3 PCS data path is implemented as 32 bits wide. As the TX PMA data width is fixed to 32 bits, and the block size is 130 bits with variations, a gearbox is needed to convert the 130 bits to 32 bits. This gearbox has a transmitter bit-slip feature.

Receiver PCIe Gen 3 PCS Datapath

This section describes the receiver channel PCIe Gen 3 PCS datapath architecture.

Block Sync

PMA parallelization occurs at arbitrary word boundaries. Consequently, the parallel data from the RX PMA CDR needs to be realigned to meaningful character boundaries. The Block Sync module searches for the Electrical Idle Exit Sequence Ordered Set (or the last number of fast training sequences (NFTS) Ordered Set) and skip (SKP) Ordered Set to identify the correct boundary for the incoming stream and achieve the block alignment. The block is realigned to the new block boundary following the receipt of a SKP Ordered Set, as it can be of variable length.

Rate Match FIFO

The Rate Match FIFO (or clock compensation FIFO) compensates for minute frequency differences between the local clock (sometimes referred to as PLD soft IP clock, or PLD system clock) and the recovered clock. This is achieved by inserting and deleting SKP characters in the data stream to keep the FIFO from going empty or full respectively.

Decoder

The Decoder checks for decode errors in the data stream. It also enables or disables the Descrambler based on the Data and Ordered Set received.

Descrambler

The Descrambler descrambles data per the PCIe Gen 3 specification.

PIPE Interface

The PIPE Interface block provides PIPE Gen 3 compliant control and status interfaces between the high-speed serial interface (HSSI) and upper layer logic. It is PIPE 3.0 compliant.

Auto Speed Negotiation Block

The Auto Speed Negotiation block controls the operating speed of the HSSI when operating under PIPE 3.0 modes. By monitoring the rate control signal from the PhyMac, this block will change the HSSI from PCIe Gen 1 operation mode, to Gen 2 operation mode, or from PCIe Gen 1 operation mode to Gen 2 operation mode to Gen 3 operation mode, or vice versa, with all the appropriate settings.

Electrical Idle Inference Block

In conjunction with side band signals from the PLD side, the Electrical Idle Inference Block infers Electrical Idle assuming that the signal detect is not reliable. This is based on the PCIe Base Specification Revision 2.0/3.0.

Clock Data Recovery (CDR) Control Block

The CDR control block is used for Rx.L0s fast exit when operating in PIPE/PCIe Gen 3 mode. Upon detecting an Electrical Idle Ordered Set (EIOS), it takes manual control of the CDR by forcing it into a lock to reference mode. When an exit from electrical idle is detected, this block moves the CDR into lock to data mode to achieve fast data lock.

Channel Bonding

The following factors contribute to the transmitter channel-to-channel skew:

- High-speed serial and low-speed parallel clock skew between channels
- Unequal latency in the transmitter phase compensation FIFO

Bonded transmitter datapath clocking provides low channel-to-channel skew when compared with non-bonded channel configurations.

Note: See the Related Links for more information about the bonded and non-bonded channel clocking.

Related Links

[Transceiver Clocking in Arria V Devices](#)

Bonded Channel Configurations

In bonded channel configurations, the serial and parallel clocks are generated by the transmit PLL and the central clock divider.

There is equal latency in the transmitter phase compensation FIFO of all bonded channels because they share common pointers and control logic generated in the central clock divider.

The lower transceiver clock skew and equal latency in the transmitter phase compensation FIFO in all channels result in a lower channel-to-channel skew.

Note: Bonded channel configurations are available only for serial data rates up to 6.5536 Gbps in Arria V GX/GT/SX/ST devices and up to 12.5 Gbps in Arria V GZ devices. You can bond (up to) all channels on the same side.

Non-Bonded Channel Configurations

In a non-bonded channel configuration, the parallel clock in each channel is generated independently by its local clock divider.

There may be unequal latency in the transmitter phase compensation FIFO of each channel because each channel has its own pointers and control logic. The higher transceiver clock skew and unequal latency in the transmitter phase compensation FIFO in each channel may result in a higher channel-to-channel skew.

PLL Sharing

In a Quartus® II design, you can merge two different protocol configurations to share the same CMU PLL resources. These configurations must fit in the same transceiver bank. The input `refclk` and PLL output frequencies must be identical.

Document Revision History

The revision history for this chapter.

Table 1-35: Document Revision History

Date	Version	Changes
November 2012	2012.11.19	Reorganized content and updated template
June 2012	1.2	• Merged information from Transceiver Basics for Arria V Devices, version 1.1 into this chapter. • Updated • Updated and • Updated , , , and • Added
November 2011	1.1	• Updated the maximum data rate to 6.5536 Gbps. • Changed the “IP Compiler for PCI Express User Guide” links to the “Arria V Hard IP for PCI Express User Guide” links. • Updated the , “10-Gbps Transceiver Channels” , , and sections.
August 2011	1.0	Initial release.

Transceiver Clocking in Arria V Devices

2

2012.11.19


AV53002

 [Subscribe](#)

 [Feedback](#)

This chapter provides information about the Arria® V transceiver clocking architecture. The chapter describes the clocks that are required for operation, internal clocking architecture, and clocking options when the transceiver interfaces with the FPGA fabric.

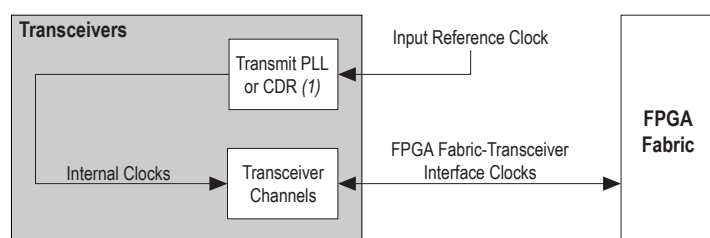Figure 2-1: Transceiver Clocking Architecture Overview



Note: (1) The transmit phase-locked loop (PLL) can be a CMU PLL (channel PLL) or a fPLL (fractional PLL Clock).

Input Reference Clocking

This section describes how the reference clock for the transmitter PLL and CDR is provided to generate the clocks required for transceiver operation.

Table 2-1: Input Reference Clock Sources


Sources	Transmitter PLL			CDR
	CMU PLL > 6.5536 Gbps ¹	CMU PLL >= 6.5536 Gbps	fPLL	
Dedicated <code>refclk</code> pin	Yes	Yes	Yes	Yes
REFCLK network	No	Yes	Yes	Yes
Dual-purpose RX/REFCLK pin	No	Yes	Yes	Yes
Fractional PLL	No	Yes	Yes	Yes

¹ Applicable for 10-Gbps channels only in GT and ST Devices.

Sources	Transmitter PLL			CDR
	CMU PLL > 6.5536 Gbps ¹	CMU PLL ≥ 6.5536 Gbps	fPLL	
Generic CLK pin	No	No	No	No
Core clock network (GCLK, RCLK, PCLK)	No	No	No	No


The following figure shows the dedicated `refclk` pin connection to channel PLL. The direct `refclk` pin connection to channel PLL (which can either be configured as CMU PLL or CDR) is only available in channel 1 and 4 in a bank.

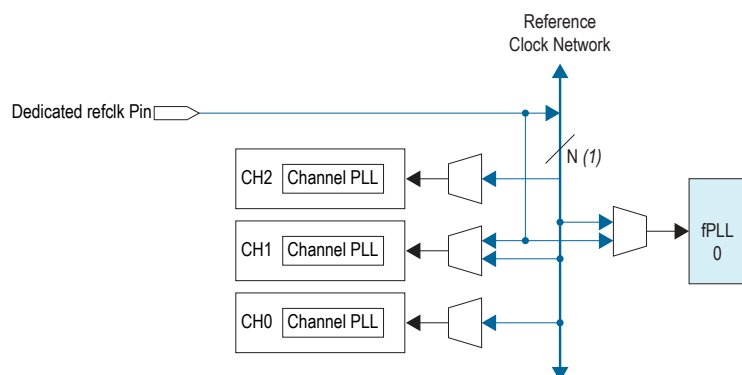Figure 2-2: Dedicated refclk Pin and Reference Clock Network



Note (1): N is the number of dedicated `refclk` pins, which is equal to the number of transceiver channels on a side divided by 3.

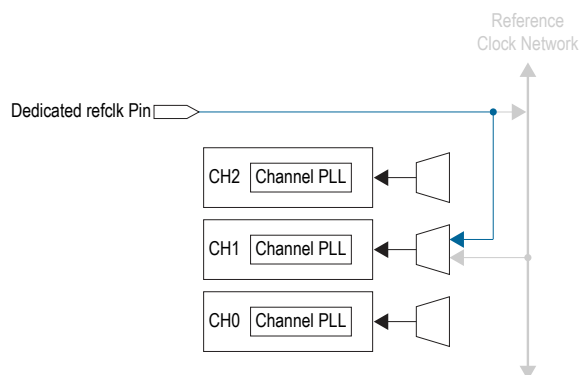Figure 2-3: Input Reference Clock Source for CMU PLL Driving Channels Operating with Serial Data Rates Beyond 6.5536 Gbps



Reference Clock Network

The dedicated `refclk` pin can provide the reference clock to multiple channel PLLs or fractional PLLs.

¹ Applicable for 10-Gbps channels only in GT and ST Devices.

Designs that use multiple transmitter PLL and CDRs with the same input reference clock frequency can share the same dedicated refclk pin. Each dedicated refclk pin can drive any transmitter PLL or CDR on the same side of device through the reference clock network.


Dual-Purpose RX/refclk Pin

When not used as receiver, an RX pin can be used as an additional input reference clock source. The clock from the RX pins feed the RX clock network that spans all the channels on one side of the device.

Only one RX pin for every Three channels can be used as input reference clock at a time. The following figure shows the use of dual-purpose RX/refclk pin as input reference clock source and the RX clock network.

Note: An RX pin from another bank can be used as an input reference clock pin.

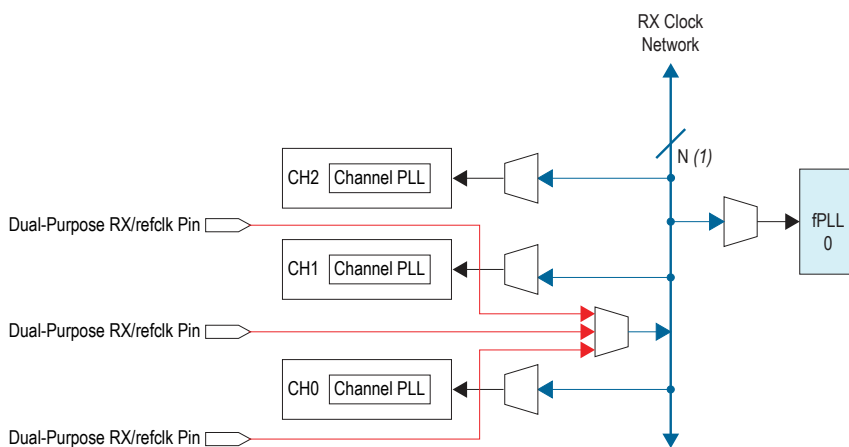Figure 2-4: Dual-Purpose RX/refclk Pin as a Input Reference Clock



Note (1): N is the number of transceiver channels on a side divided by 3.

Fractional PLL (fPLL)


The fPLL clock output can be used as input reference clock source to transmitter PLL or CDR.

Cascading the fPLL to transmitter PLL or CDR enables you to use an input reference clock that is not supported by the transmitter PLL or CDR. The fPLL synthesizes a supported input reference clock for the transmitter PLL or CDR.

A fPLL is available for each group of three transceiver channels. Each fPLL drives one of two fPLL cascade clock network lines that can provide an input reference clock to any transmitter PLL or CDR on the same side of a device. fPLLs support fractional and integer modes. The fractional mode allows you to synthesize a clock of any supported frequency, and the integer mode allows you to synthesize an output clock that is an integer multiple or factor of the input clock. For example, fPLLs allow you to take a 100 MHz clock and synthesize a clock of 50 or 200 MHz in integer mode, or 614.4 MHz in fractional mode.

Note: An fPLL can also be used as a Transmit PLL.

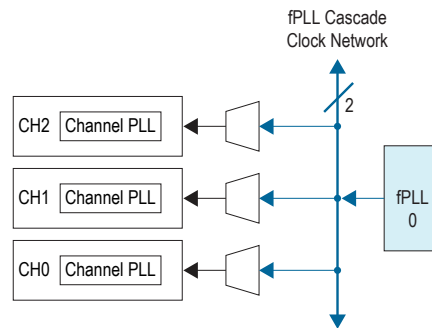Figure 2-5: fPLL Clock Output as Input Reference Clock



Internal Clocking

This section describes the clocking architecture internal to the transceiver.


Different physical coding sublayer (PCS) configurations and channel bonding options result in various transceiver clock paths.

The labels listed in the following table and shown in the figure following mark the three sections of the transceiver internal clocking.

Table 2-2: Internal Clocking Subsections

Label	Scope	Description
A	Transmitter Clock Network	Clock distribution from transmitter PLLs to channels
B	Transmitter Clocking	Clocking architecture within transmitter channel datapath
C	Receiver Clocking	Clocking architecture within receiver channel datapath

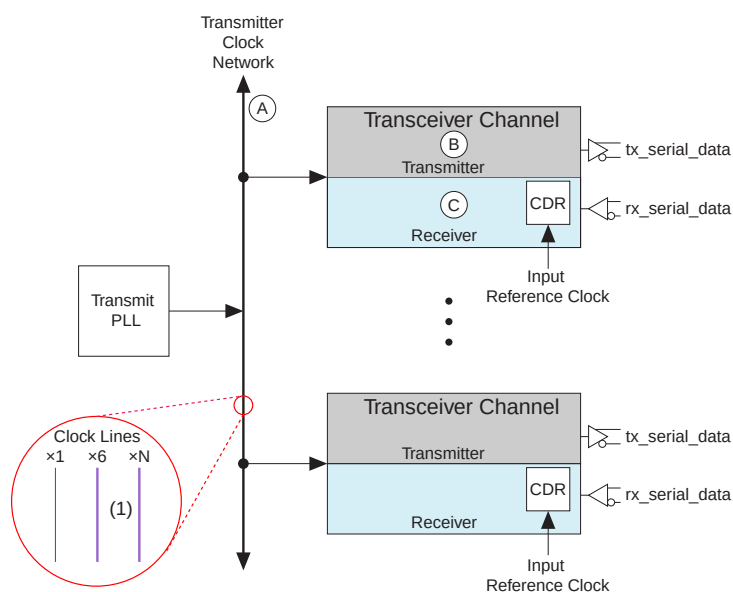Figure 2-6: Internal Clocking



Note:
(1) The x6 and xN clock lines are supported only by the Arria V 6-Gbps transceivers.

Transmitter Clock Network

The transmitter PLL is comprised of the CMU PLL and fPLL.

All CMU PLLs are identical in architecture, but vary on the following:

- Usage capability: CMU PLL in channel 1 and 4 are capable of distributing a clock with accessibility to the transmitter clock network, while the rest only are able to clock the transmitter in the same channel only
- Performance: Up to 6.5536 Gbps in GX and SX, except for the CMU PLL of channel 1 and 4 in GT and ST devices, which are capable of up to 10.3125 Gbps

Table 2-3: Usage Capability of Each CMU PLL Within a Transceiver Bank

CMU PLL Location in a Transceiver Bank	Clock Network Access	Maximum CMU PLL Performance (Gbps)		Usage Capability
		GX and SX Devices	GT and ST Devices	
CH 0	No	6.5536	6.5536	Clock transmitter within same channel only
CH 1	Yes	6.5536	10.3125	Clock transmitter within same channel only and other channels via clock network
CH 2	No	6.5536	6.5536	Clock transmitter within same channel only
CH 3	No	6.5536	6.5536	Clock transmitter within same channel only
CH 4	Yes	6.5536	10.3125	Clock transmitter within same channel only and other channels via clock network
CH 5	No	6.5536	6.5536	Clock transmitter within same channel only

The fPLLs adjacent to the transceiver banks provide an additional transmitter PLL source for clocking transceivers up to 3.125 Gbps. Two fPLLs are available as the transmitter PLL for every transceiver bank of six channels, or one fPLL for a bank of three channels.

The transmitter clock network routes the clock from the transmitter PLL to the transmitter channel. As shown in Figure 6, the transmitter clock network routes the clock from the transmit PLL to the transmitter channel. A clock divider provides two clocks to the transmitter channel:

- Serial clock—high-speed clock for the serializer
- Parallel clock—low-speed clock for the serializer and the PCS

Arria V transceivers support non-bonded and bonded transceiver clocking configurations:

- Non-bonded configuration—Only the serial clock from the transmit PLL is routed to the transmitter channel. The clock divider of each channel generates the local parallel clock. The x1 clock line is used for non-bonded configurations. This configuration is available for both the 6-Gbps and 10-Gbps transceivers.
- Bonded configuration—Both the serial clock and parallel clock are routed from the central clock divider in channel 1 or 4 to the bonded transmitter channels. The x6 and xN clock lines are used for bonded configurations. This configuration is only available for 6-Gbps transceivers.

The transmitter clock network is comprised of x1 (x1 and x1_fPLL), x6 and xN clock lines.


Table 2-4: Characteristics of x1, x6, and xN Clock Lines

Characteristics	x1	x1_fPLL	x6	x6_fPLL	xN
Clock Source	CMU PLL from CH 1 or CH 4 in a bank (serial clock only)	fPLL adjacent to transceivers (serial clock only)	Central clock divider from CH 1 or Ch 4 in a bank (serial and parallel clock)	fPLL through the x1_fPLL line. The central clock divider resource of Ch 1 or Ch 4 in a bank is used (serial and parallel clock). However, the Ch 1 or Ch 4 can still be used as the Receiver CDR.	x6 clock lines (serial and parallel clock)
Max Data Rate (Gbps)	10.3125 (GT and ST) 6.5536 (GX and SX)	3.125	6.5536	3.125	3.125
Clock Line Span	• Within a transceiver bank for data rate $\leq$ 6.5536 Gbps • Within a group of 3 channels (0, 1, 2 or 3, 4, 5) for data rate $>$ 6.5536 Gbps	Within a group of 3 channels (0, 1, 2 or 3, 4, 5)	Within a transceiver bank	Within a transceiver bank	Across all channels in the same side of device
Non-bonded Configuration	Yes	Yes	Yes	No	Yes

Characteristics	x1	x1_fPLL	x6	x6_fPLL	xN
Bonded Configuration	No	No	Yes	Yes	Yes

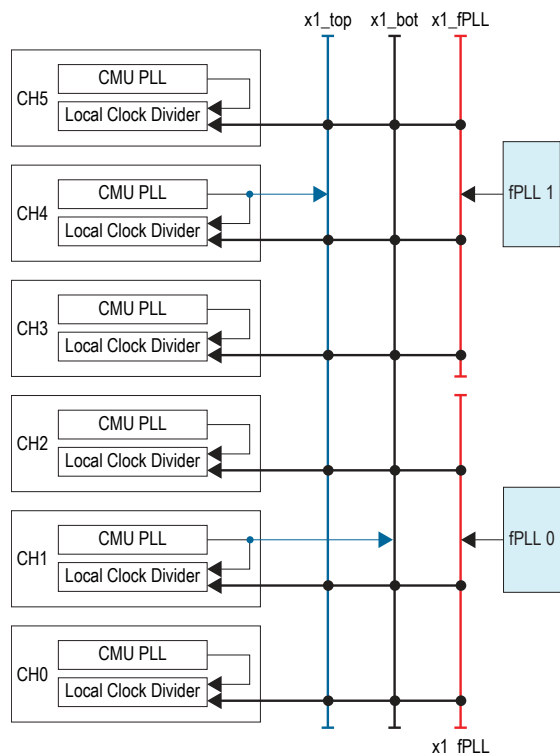Table 2-5: Characteristics of x1, x6, and xN Clock Lines for Arria V GZ Devices

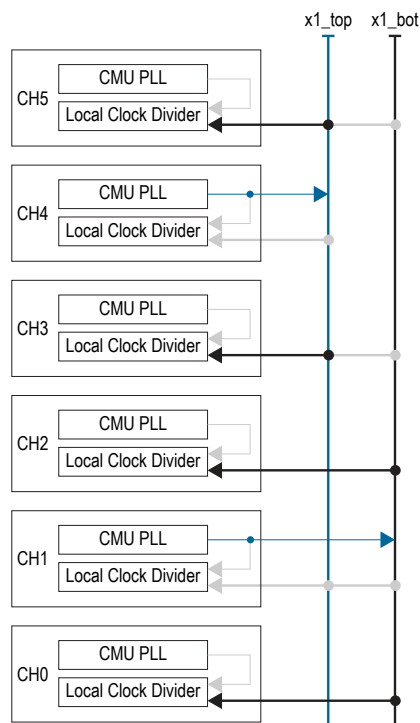
Characteristics	x1	x6	xN
Clock Source	- CMU PLL from CH 1 or CH 4 in a transceiver bank - ATX PLLs in a transceiver bank	Central clock divider from CH 1 or Ch 4 in a transceiver bank	The channel PLL provides a serial clock to the central clock dividers of Ch1 and Ch4. The central clock dividers in the transceiver bank drive the x6 clock lines. The xN clock lines receive the serial and parallel clocks from the x6 clock lines.
Max Data Rate (Gbps)	12.5	12.5	8.0
Clock Line Span	Transceiver bank	Transceiver bank	xN lines span a side of the device, but can bond only up to eight contiguous data channels.
Non-bonded Configuration	Yes	Yes	Yes
Bonded Configuration	No	Yes	Yes

Figure 2-7: x1 Clock Line Architecture (up to 6.5536 Gbps)

Note: All clock lines shown in this figure carry the serial clock only.

The x1 clock lines are driven by serial clocks of CMU PLLs from channels 1 and 4. The serial clock in the x1 clock line is then distributed to the local and central clock dividers of every channel within a transceiver bank.

The x1_fPLL clock lines are driven by the serial clocks of the adjacent fPLL. The serial clock in the x1_fPLL clock line is then distributed to the local and central clock dividers of channels within a group of three channels (0, 1, 2 or 3, 4, 5).


Figure 2-8: x1 Clock Line Architecture (more than 6.5536 Gbps)

Note: All clock lines shown in this figure carry the serial clock only.

For serial data rates beyond 6.5536 Gbps (10-Gbps channels only in GT and ST devices), the serial clock in the x1 clock line sourced from a CMU PLL can only be distributed to adjacent channels. For example, the serial clock from CMU PLL in channel 1 can only be distributed to channel 0 and 2 via the x1_bot, and serial clock from CMU PLL in channel 4 to channel 3 and 4 via x1_top.

Note: When you configure the channel PLL as a CMU PLL to drive the local clock divider, or the central clock divider of its own channel, you cannot use the channel PLL as a CDR. Without a CDR, you can use the channel only as a transmitter channel.

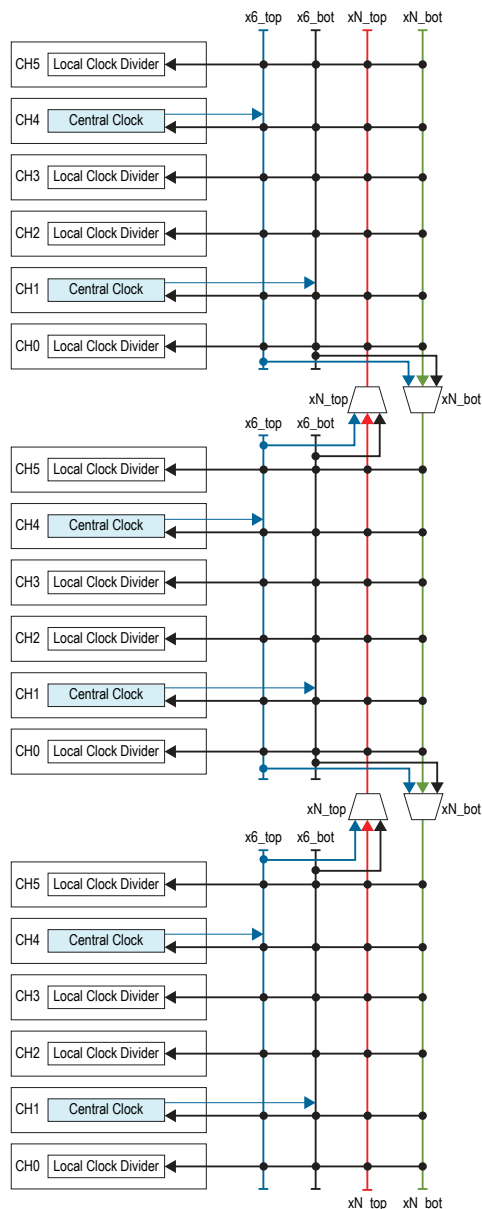Figure 2-9: x6 and xN Clock Line Architecture



Note: All the clock lines shown in this figure carry both the serial and parallel clocks.

The x6 clock lines are driven by serial and parallel clocks from the central clock divider in channels 1 and 4. For channels within a bank, the serial and parallel clocks in the x6 clock line is then distributed to every channel within a transceiver bank.

The xN clock lines extend the clocking reach of the x6 clock line to all channels within the same side of the device. To reach a xN clock line, the clocks must be provided on the x6 clock line. The serial and parallel clocks in the x6 clock line is distributed to every channel within a transceiver bank. The serial and parallel clocks are distributed to other channels beyond the bank using the xN clock line.

In bonded configurations, serial and parallel clocks from the x6 or xN clock lines are received by the clock divider of every bonded channel and fed directly to the serializer. In a non-bonded configuration, the clock divider of every non-bonded channel receives the serial clock from the x6 or xN clock lines and generates the individual parallel clock to the serializer.

Note: In a bonded configuration, bonded channels must be placed contiguously without leaving a gap between the channels, except when the gap channel is a CMU PLL.

Transmitter Clocking

Transmitter (TX) clocking refers to the clocking architecture that is internal to the TX channel of a transceiver.

The following figure shows how the clock divider provides the serial clock to the serializer, and the parallel clock to the serializer and TX PCS. When the byte serializer is not used, the parallel clock clocks all the blocks up to the read side of the TX phase compensation FIFO. For configurations with the byte serializer, the parallel clock is divided by a factor of two for the byte serializer and the read side of the TX phase compensation FIFO. The read side clock of the TX phase compensation FIFO is also forwarded to the FPGA fabric to interface the FPGA fabric with the transceiver.

Figure 2-10: Clocking Architecture for Transmitter PCS and PMA Configuration


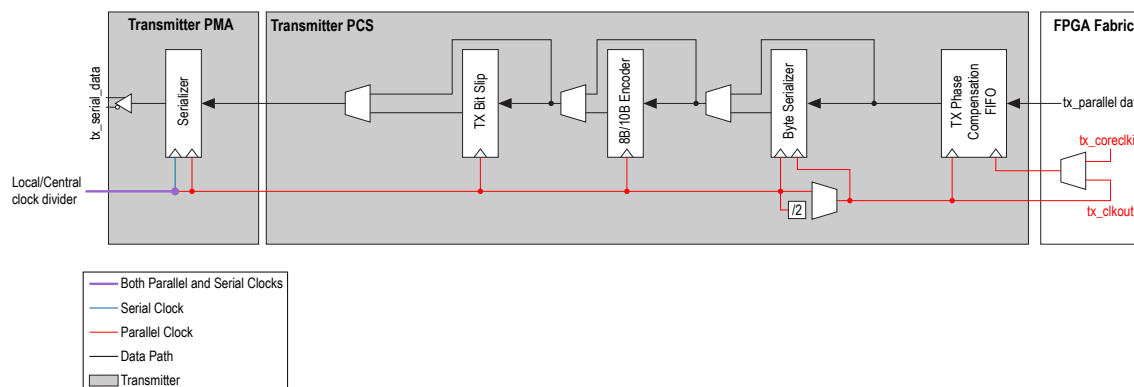


Table 2-6: Clock Sources for All TX PCS Blocks

PCS Block	Side	Clock Source
TX Phase Compensation FIFO	Write	FPGA fabric write clock, driven either by tx_clkout or tx_coreclk
	Read	Parallel clock (divided). Clock forwarded to FPGA fabric as tx_clkout
Byte Serializer	Write	Parallel clock (divided) either by factor of 1 (not enabled), or factor of 2 (enabled)
	Read	Parallel clock
8B/10B Encoder	—	Parallel clock
TX Bit Slip	—	Parallel clock

The following figure shows how the clock divider provides the serial and parallel clock to the serializer in a transmitter PMA configuration. The parallel clock is forwarded to the FPGA fabric to interface the FPGA fabric with the TX PMA directly, bypassing the PCS blocks.

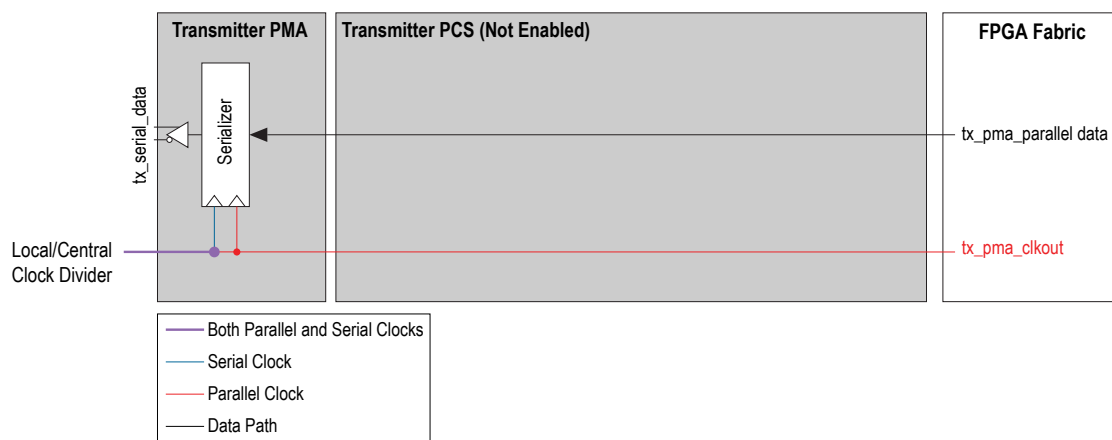Figure 2-11: Clocking Architecture for Transmitter PMA Only Configuration



Non-Bonded Channel Configurations

This section describes the clock path for non-bonded configurations.

The following table describes the clock path for non-bonded configuration with the CMU PLL and fPLL as TX PLL using various clock lines.

Table 2-7: Clock Path for Non-Bonded Configurations

Clock Line	Transmitter PLL	Clock Path
x1	CMU	CMU PLL » x1 » individual clock divider » serializer
	fPLL	CMU PLL » x1 » individual clock divider » serializer
x6, xN	CMU	CMU PLL » central clock divider » x6 » xN » individual clock divider » serializer ²
	fPLL	fPLL » x1 fPLL » central clock divider » x6 » xN » individual clock divider » serializer ³

² Non-bonded channels within same bank as TX PLL are driven by clocks from x6 clock line, and channels in other banks are driven from xN clock line.

³ Non-bonded channels within same bank as TX PLL are driven by clocks from x6 clock line, and channels in other banks are driven from xN clock line.

Figure 2-12: Three Non-Bonded Transmitter Channels Driven by CMU PLL using x1 Clock Line Within a Transceiver Bank

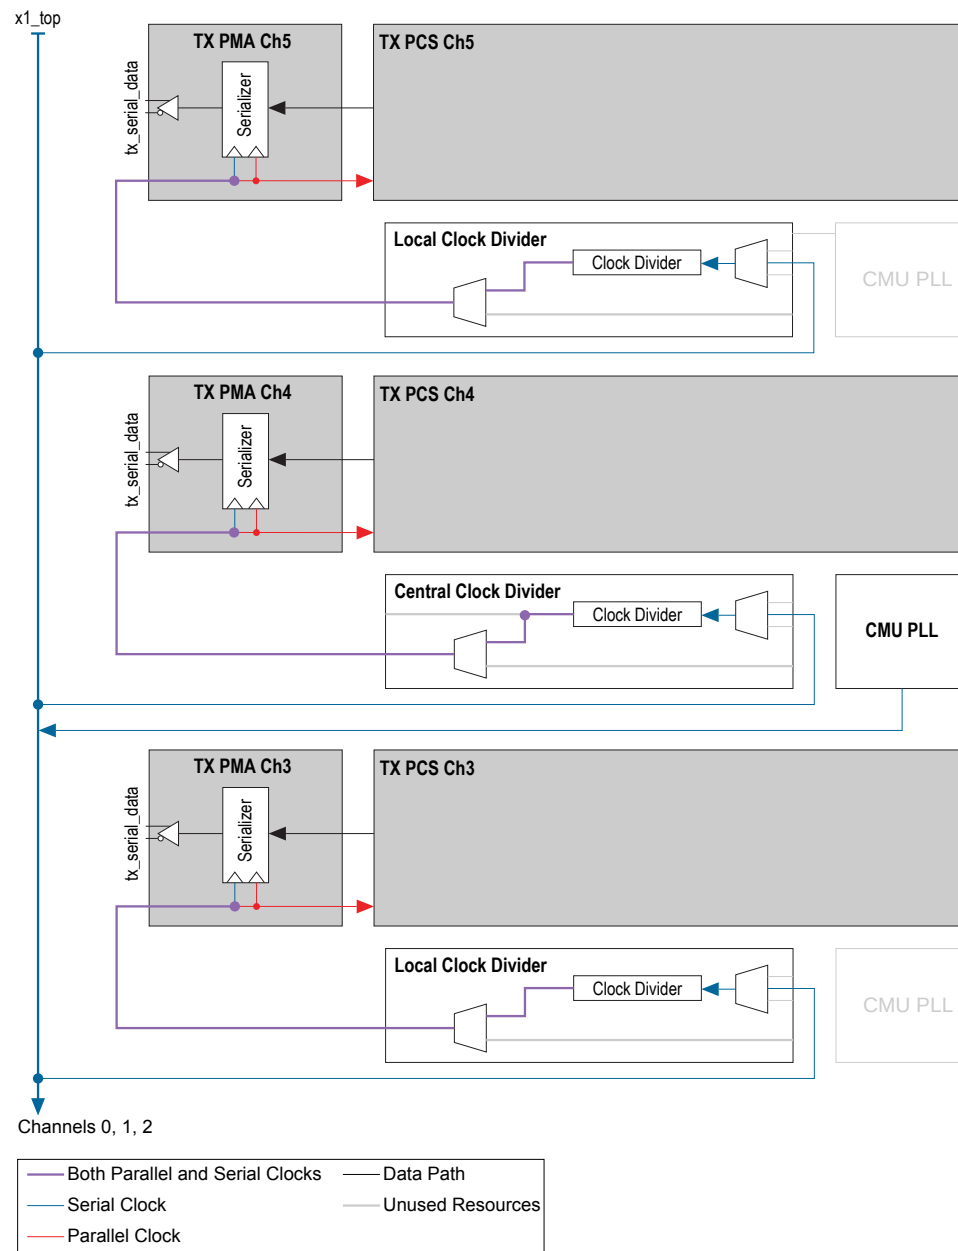


Figure 2-13: Three Non-Bonded Transmitter Channels Driven by fPLL using x1 Clock Line Within a Transceiver Bank

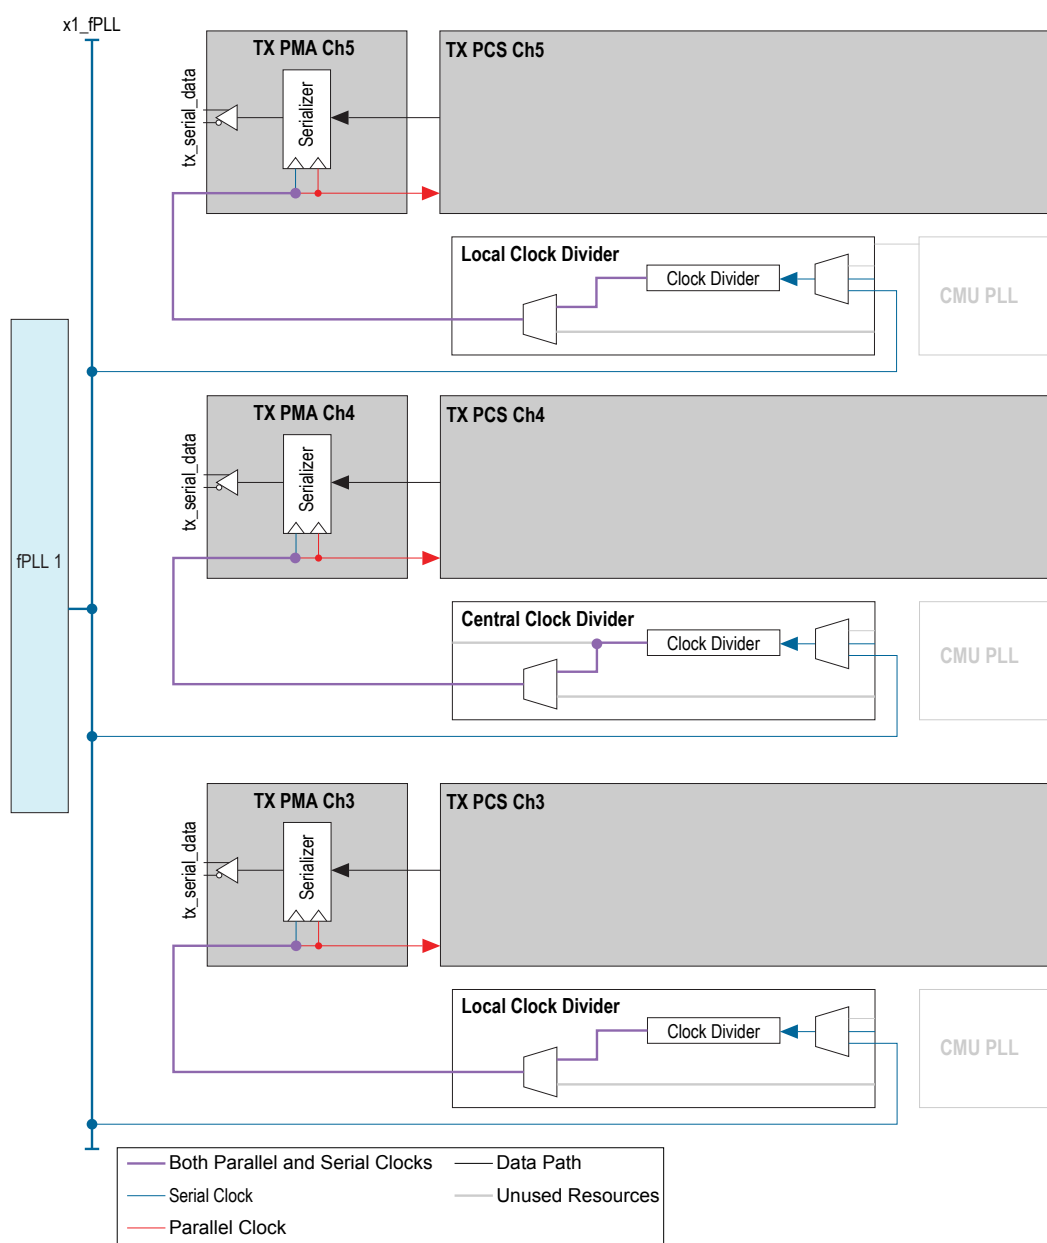


Figure 2-14: Three Non-Bonded Transmitter Channels Driven by CMU PLL using x6 and xN Clock Line Across Multiple Transceiver Banks


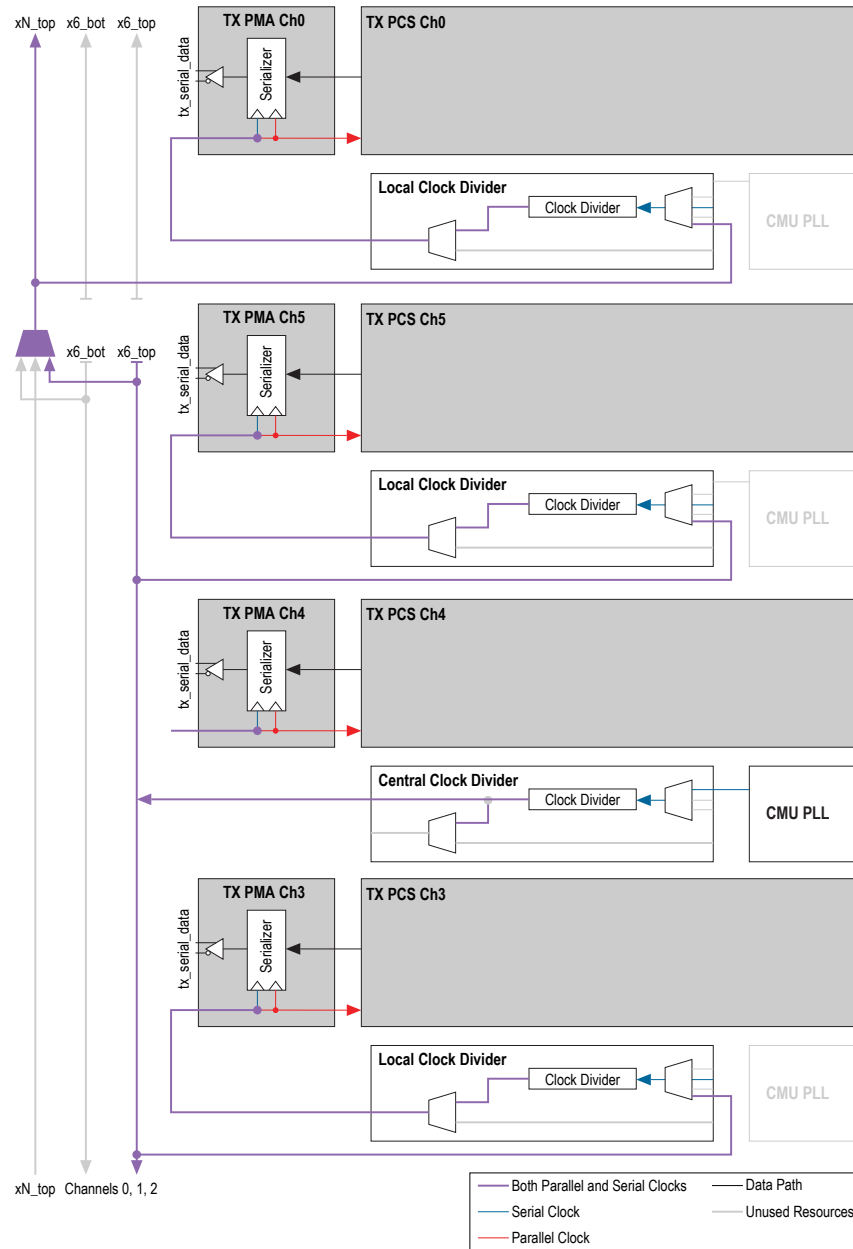


Figure 2-15: Three Non-Bonded Transmitter Channels Driven by fPLL using x6 and xN Clock Line Across Multiple Transceiver Banks

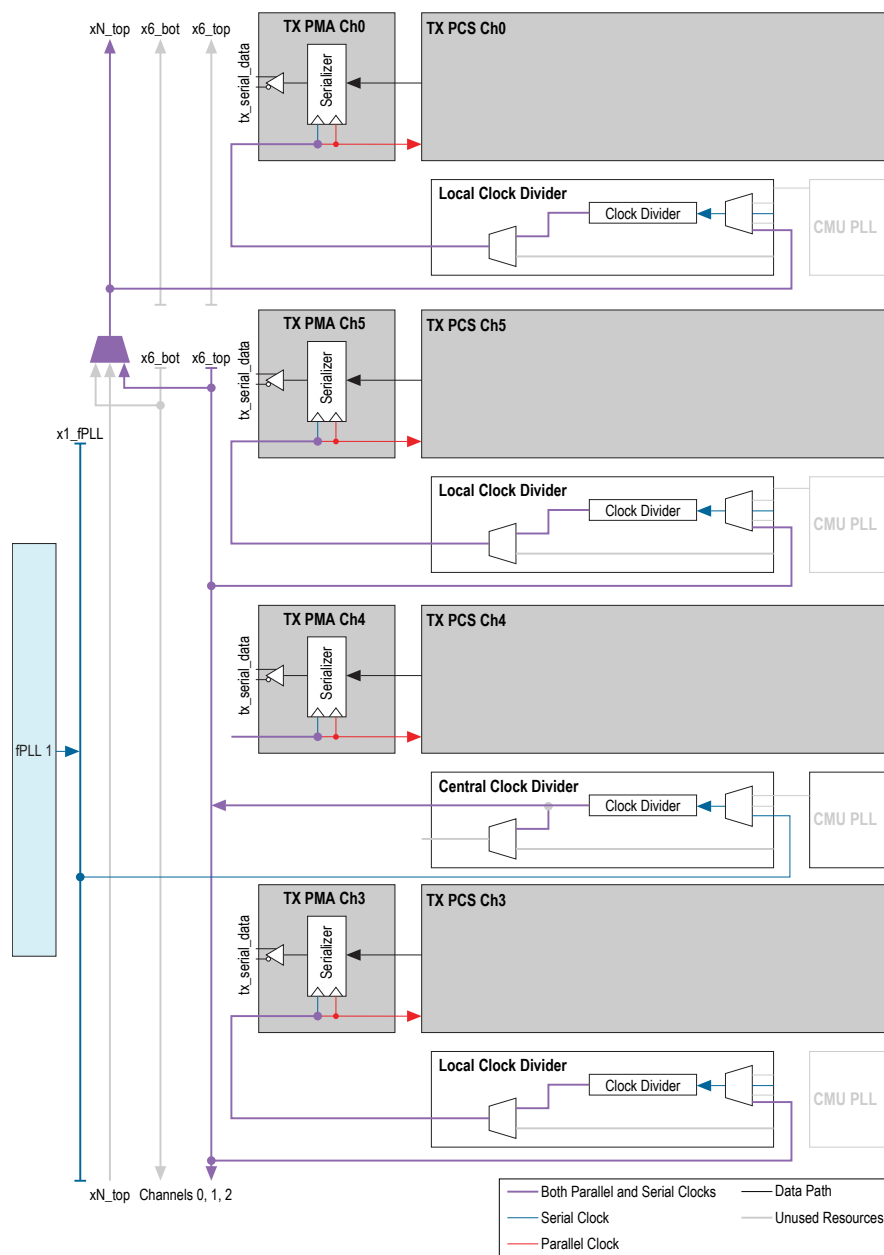

Note: When using the fPLL to drive more than three non-bonded channels, the channel where the central clock divider resides adjacent to the fPLL is unavailable for use as a transmitter. The fPLL uses a central clock divider to access the x6 clock network when driving more than three non-bonded channels, so the divider is no longer available to implement a transmitter.

Bonded Channel Configurations

This section describes the clock path for bonded configurations.

Table 2-8: Clock Path for Bonded Configurations

The following table describes the clock path for a bonded configuration with CMU PLL and fPLL as TX PLL using various clock lines.

Clock Line	Transmitter PLL	Clock Path
x6, xN	CMU	CMU PLL » central clock divider » x6 » xN » serializer ⁴
	fPLL	fPLL » x1 » fPLL » central clock divider » x6 » xN » serializer ⁵

⁴ Bonded channels within same bank as the TX PLL are driven by clocks from the x6 clock line, and channels in other banks are driven from the xN clock line.

⁵ Bonded channels within same bank as the TX PLL are driven by clocks from the x6 clock line, and channels in other banks are driven from the xN clock line.

Figure 2-16: Three Bonded Transmitter Channels Driven by CMU PLL using x6 and xN Clock Line Across Multiple Transceiver Banks


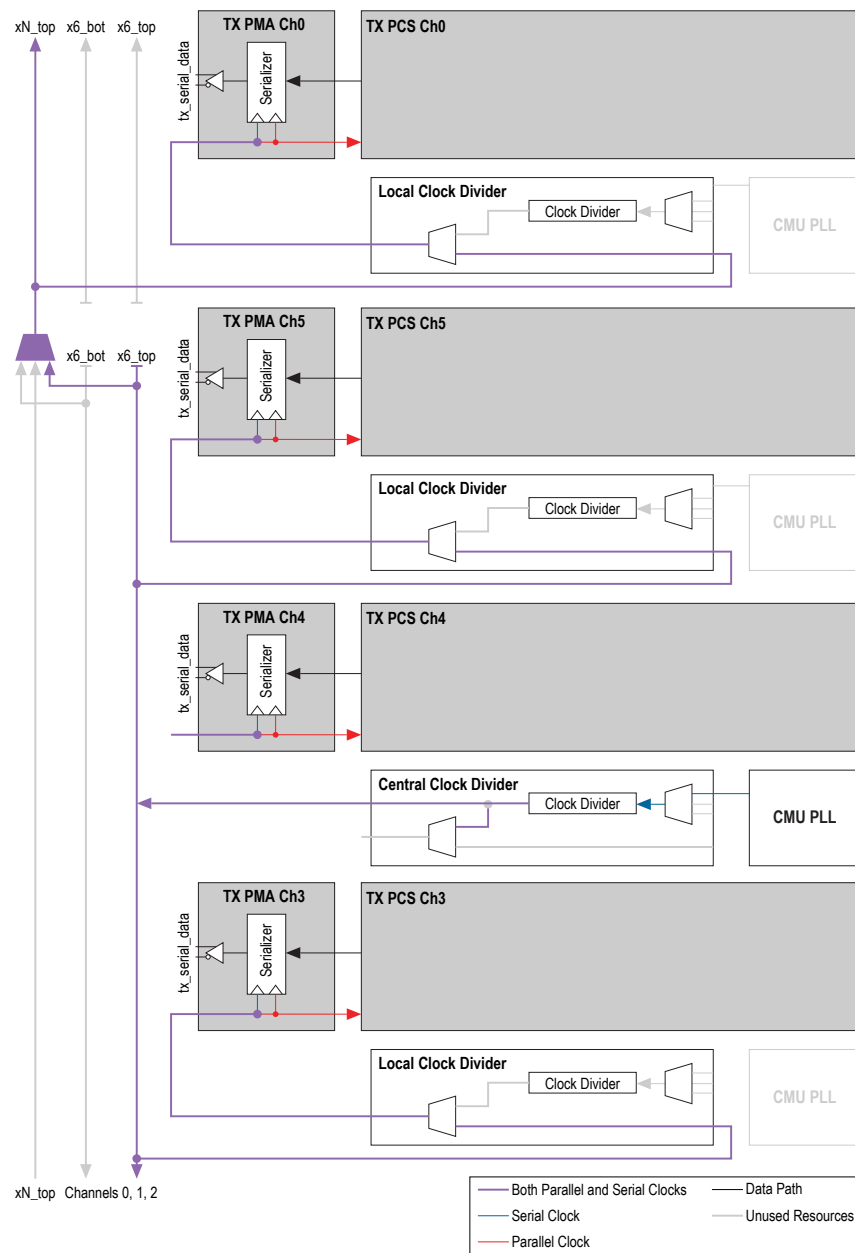


Figure 2-17: Three Bonded Transmitter Channels Driven by fPLL using x6 and xN Clock Line Across Multiple Transceiver Banks

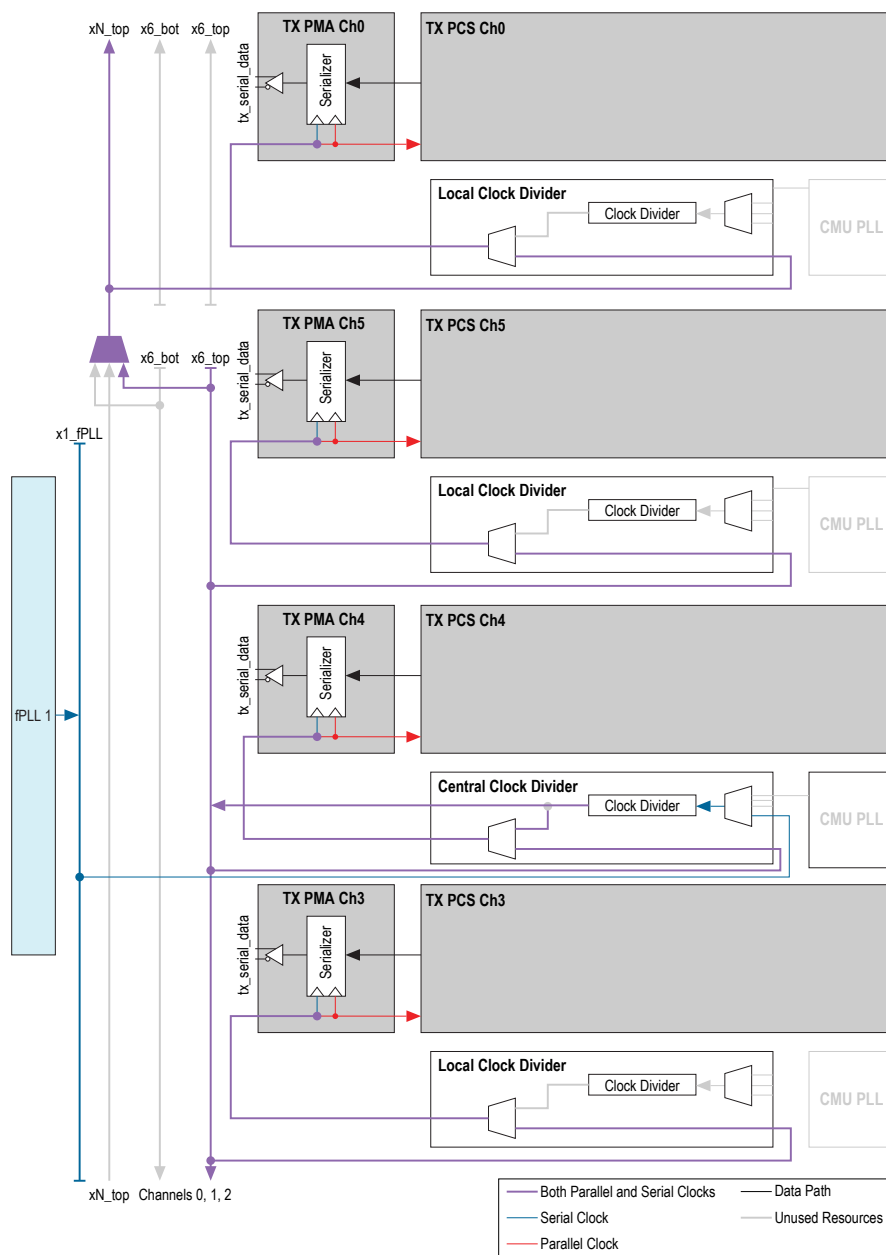


Note: When using the fPLL to drive bonded channels, assign logical channel 0 to the channel where the central clock divider is used for fPLL clocks to access the x6 clock line. Using the preceding figure as an example, assign tx_serial_data[0] to the transmitter channel 4 pin location. Channel 4 is available for use as transmitter and receiver for the bonded configuration.

Transceiver Channel Placement Guidelines for fPLL in Transmit PLL Bonded Configuration

The fPLL as transmit PLL, when configured in bonded configuration, has placement restrictions. All four channels must be placed within one transceiver bank. A link cannot span across two banks. The channel placement must also be contiguous.

The following figure shows the allowed channel placement when using a x4 bonded configuration. The logical lane 0 must be placed in either Ch1 or Ch4.

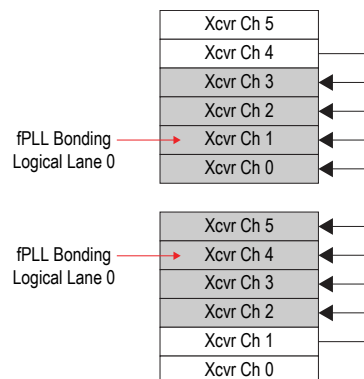Figure 2-18: Transceiver Channel Placement for fPLL in a Transmit PLL Bonded Configuration




Note: A QSF assignment statement can be used to change the Logical Lane 0 assignment to a different transceiver channel.

Receiver Clocking

Receiver clocking refers to the clocking architecture internal to the receiver channel of a transceiver.

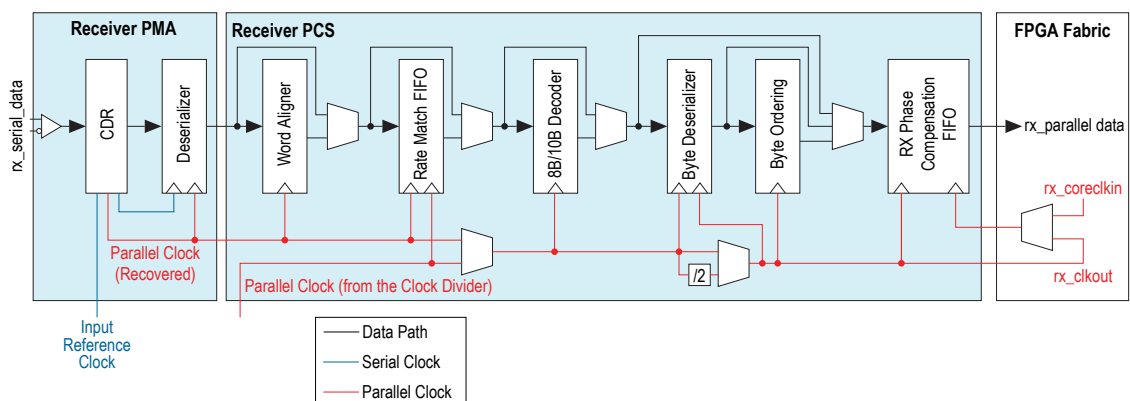Figure 2-19: Clocking Architecture for Receiver PCS and PMA Configuration



The CDR in the PMA of each channel recovers the serial clock from the incoming data and generates the parallel clock (recovered) by dividing the serial clock (recovered). The deserializer uses both clocks. The receiver PCS can use the following clocks depending on the configuration of the receiver channel:

- Parallel clock (recovered) from the CDR in the PMA
- Parallel clock from the clock divider that is used by the channel's transmitter PCS


Table 2-9: Clock Sources for All Receiver PCS Blocks

Block	Side	Clock Source
Word aligner	-	Parallel clock (recovered)
Rate match FIFO	Write	Parallel clock (recovered)
	Read	Parallel clock from the clock divider

Block	Side	Clock Source
8B/10B decoder	-	- Rate match FIFO is not used-Parallel clock (recovered) - Rate match FIFO is used-Parallel clock from the clock divider
Byte deserializer	Write	- Rate match FIFO is not used-Parallel clock (recovered) - Rate match FIFO is used-Parallel clock from the clock divider
	Read	Divided down version of the write side clock depending on the deserialization factor of 1 or 2, also called the parallel clock (divided)
Byte ordering	-	Parallel clock (divided)
Receiver (RX) phase compensation FIFO	Write	Parallel clock (divided). This clock is also forwarded to the FPGA fabric.
	Read	Clock sourced from the FPGA fabric

As shown in the following figure, the parallel recovered clock from the CDR and deserializer is forwarded to the FPGA fabric to interface FPGA fabric with the receiver PMA directly, bypassing the PCS blocks.

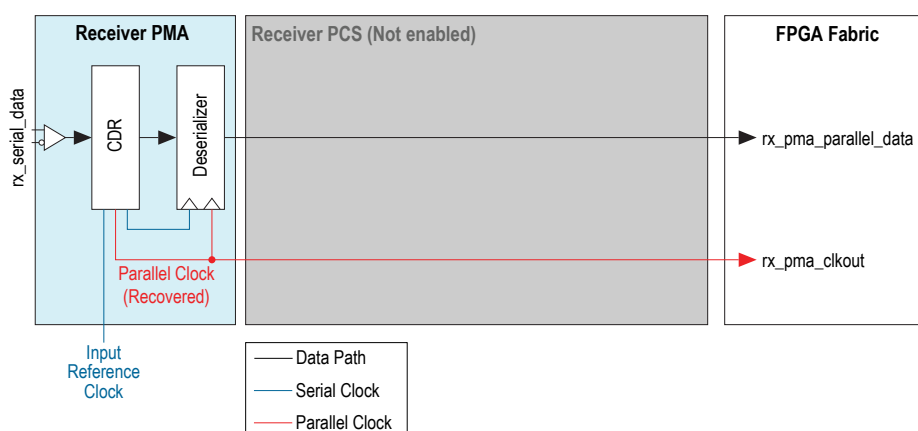Figure 2-20: Clocking Architecture for Receiver PMA Only Configuration



Receiver Non-Bonded Channel Configurations

This section describes the receiver non-bonded channel configurations.

The receiver clocking in non-bonded mode varies depending on whether the rate match FIFO is enabled. When the rate match FIFO is not enabled, the receiver PCS in every channel uses the parallel recovered clock. When the rate match FIFO is enabled, the receiver PCS in every channel uses both the parallel recovered clock and parallel clock from the clock divider.

Figure 2-21: Three Non-Bonded Receiver Channels without Rate Match FIFO Enabled


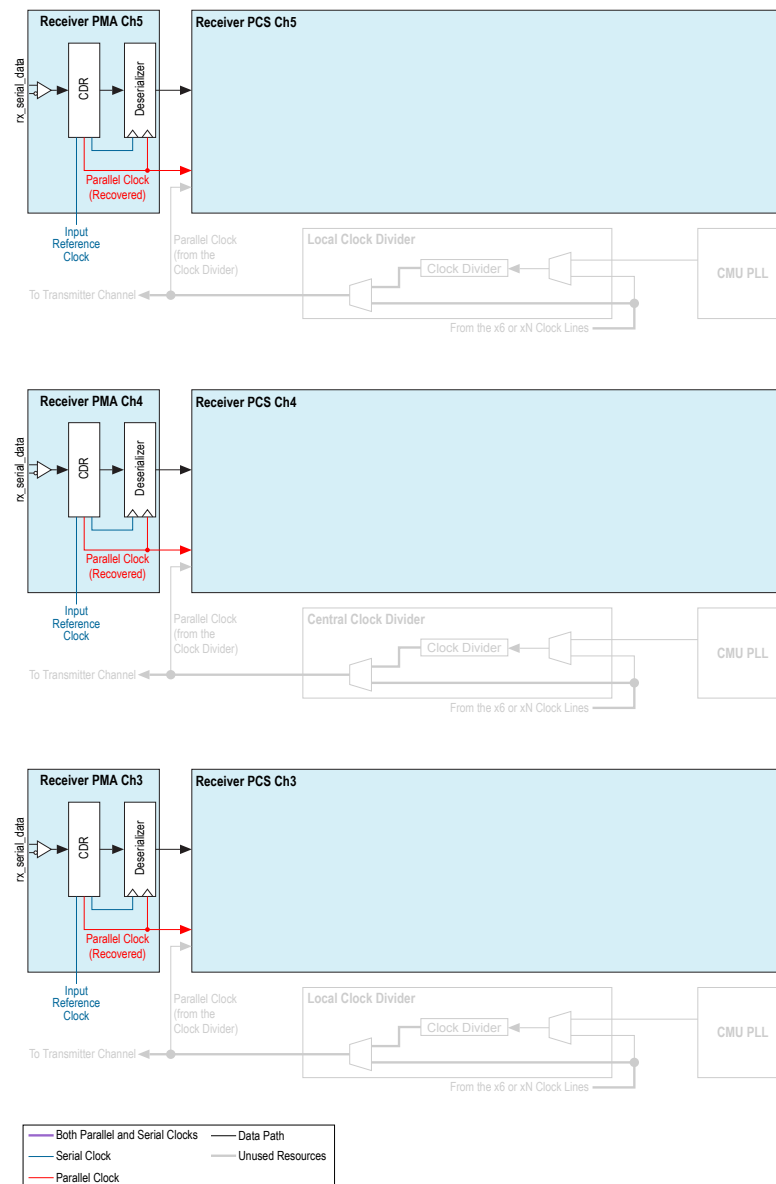
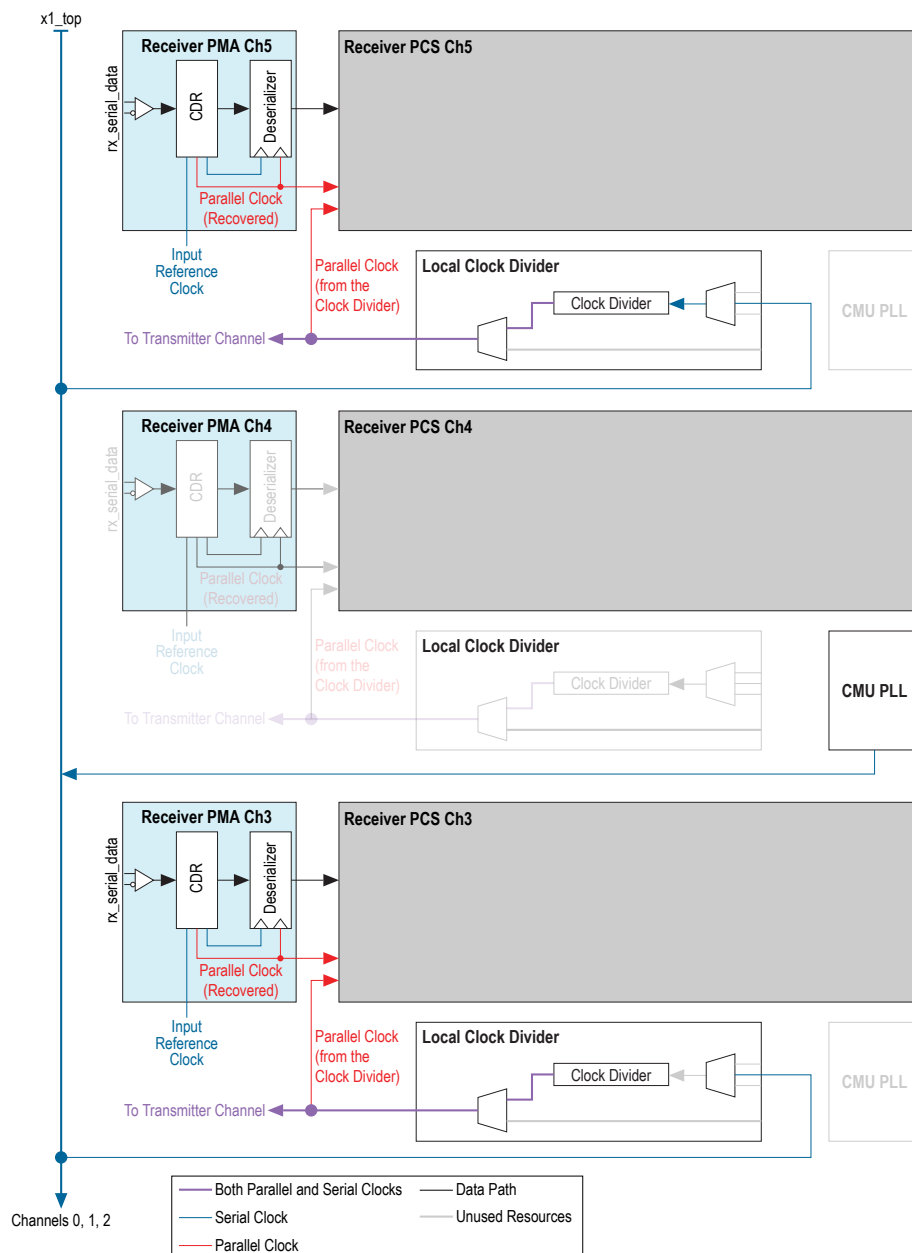


Figure 2-22: Two Non-Bonded Receiver Channels with Rate Match FIFO Enabled

Receiver Bonded Channel Configurations


Receiver channels can only be bonded in configurations where rate match FIFOs are enabled. When bonded, the receiver PCS requires the parallel clock (recovered) and, the parallel clock from the central clock divider in channel 1 or 4.

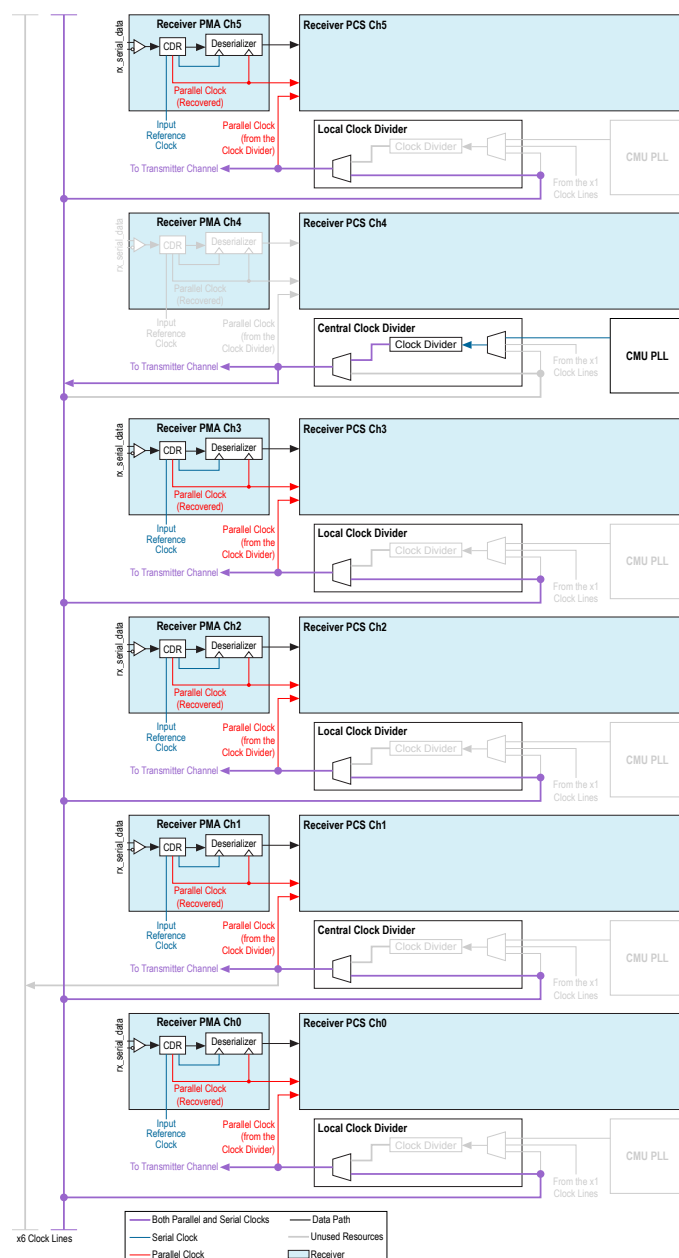Figure 2-23: Five Bonded Receiver Channels with Rate Match FIFO Enabled



In the following figure, all six channels in the transceiver bank are in a bonded configuration. This configuration is possible because the fractional PLL is used as a transmit PLL instead of a channel PLL in the transceiver bank. Using the fractional PLL enables you to configure the channel PLLs of both channels 1 and 4 as CDRs to perform receiver operations.

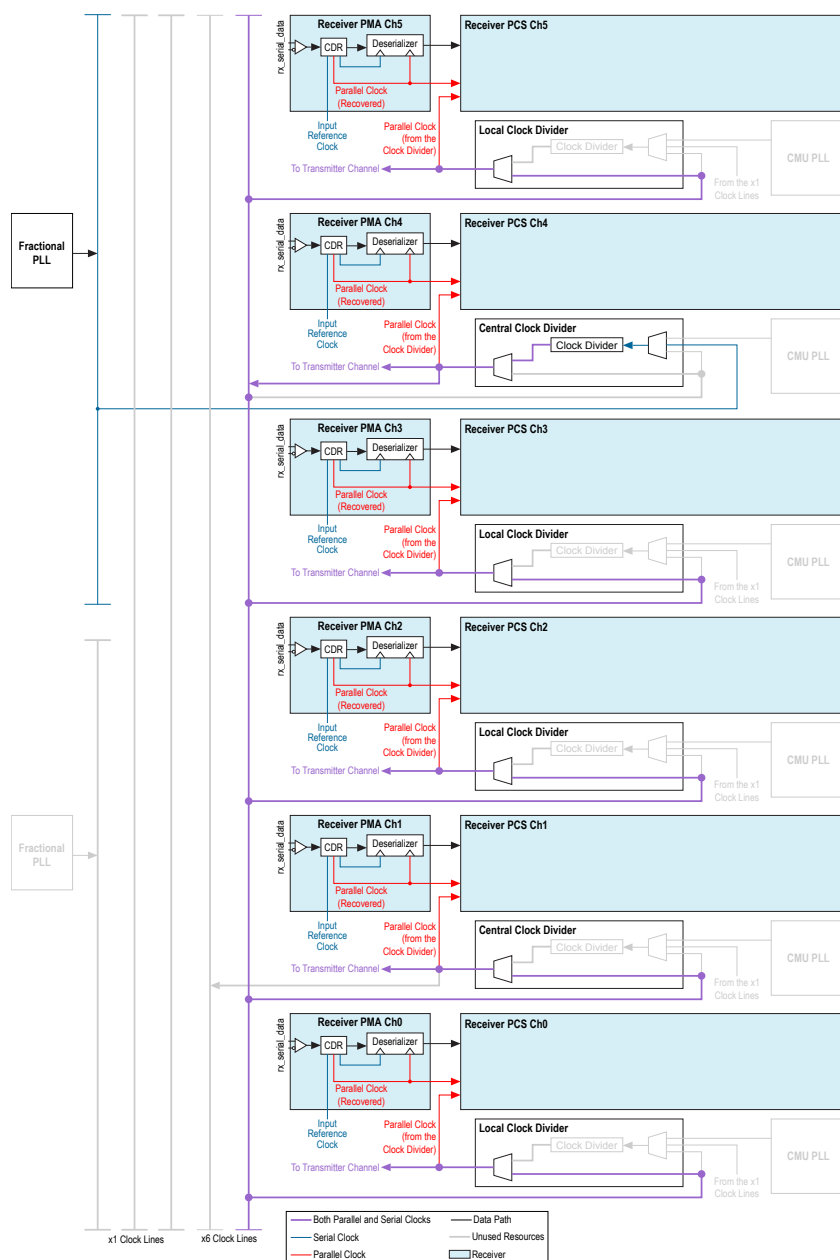Figure 2-24: Six Bonded Receiver Channels with Rate Match FIFO Enabled Using Fractional PLL



Note: For more information about the clocking scheme used in different configurations, refer to the Transceiver Protocol Configurations in Arria V Devices and Transceiver Custom Configurations in Arria V Devices chapters.

Related Links

[Transceiver Protocol Configurations in Arria V Devices and Transceiver Custom Configurations in Arria V Devices chapters](#)

FPGA Fabric–Transceiver Interface Clocking

This section describes the clocking options available when the transceiver interfaces with the FPGA fabric.

The FPGA fabric–transceiver interface clocks can be subdivided into the following three categories:

- Input reference clocks—Can be an FPGA fabric–transceiver interface clock. This may occur when the FPGA fabric-transceiver interface clock is forwarded to the FPGA fabric, where it can then clock logic.

Note: The input reference clock can only be routed into the FPGA fabric if a transceiver is also instantiated.

- Transceiver datapath interface clocks—Used to transfer data, control, and status signals between the FPGA fabric and the transceiver channels. The transceiver channel forwards the `tx_clkout` signal to the FPGA fabric to clock the data and control signals into the transmitter. The transceiver channel also forwards the recovered `rx_clkout` clock (in configurations without the rate matcher) or the `tx_clkout` clock (in configurations with the rate matcher) to the FPGA fabric to clock the data and status signals from the receiver into the FPGA fabric.
- Other transceiver clocks—The following transceiver clocks form a part of the FPGA fabric–transceiver interface clocks:
 - `mgmt_clk`—Avalon[®]-MM interface clock used for controlling the transceivers, dynamic reconfiguration, and calibration
 - `fixed_clk`—the 125 MHz fixed-rate clock used in the PCIe (PIPE) receiver detect circuitry

Table 2-10: FPGA Fabric–Transceiver Interface Clocks

Clock Name	Clock Description	Interface Direction	FPGA Fabric Clock Resource Utilization
tx_pll_refclk, rx_cdr_refclk	Input reference clock used for clocking logic in the FPGA fabric	Transceiver-to-FPGA fabric	GCLK, RCLK, PCLK
tx_clkout, tx_pma_clkout	Clock forwarded by the transceiver for clocking the transceiver datapath interface		
rx_clkout, rx_pma_clkout	Clock forwarded by the receiver for clocking the receiver datapath interface		
tx_coreclk	User-selected clock for clocking the transmitter datapath interface	FPGA fabric-to-transceiver	
rx_coreclk	User-selected clock for clocking the receiver datapath interface		
fixed_clk	PCIe receiver detect clock		
mgmt_clk ⁶	Avalon-MM interface management clock		

Note: For more information about the GCLK, RCLK, and PCLK resources available in each device, refer to the Clock Networks and PLLs in Arria V Devices chapter.

Related Links

[Clock Networks and PLLs in Arria V Devices chapter](#)

Transceiver Datapath Interface Clocking

This section describes the datapath interface clocking.

There are two types of design considerations for clock optimization when interfacing the transceiver datapath to the FPGA fabric:

- PCS with FIFO in phase compensation mode – share clock network for identical channels
- PCS with FIFO in registered mode or PMA direct mode – refer to AN580: Achieving Timing Closure in Basic (PMA Direct) Functional Mode for additional timing closure techniques between transceiver and FPGA fabric

⁶ The mgmt_clk is a free-running clock that is not derived from the transceiver blocks.

The following sections describe design considerations for interfacing PCS transmitter and PCS receiver datapath to FPGA fabric with FIFO in phase compensation mode.

Related Links

[AN580: Achieving Timing Closure in Basic \(PMA Direct\) Functional Mode](#)

Transmitter Datapath Interface Clocking


In 6-Gbps transceivers, the write side of the transmitter phase compensation FIFO makes up the transmitter datapath interface.

For the 6-Gbps transceivers, the write side of the transmitter phase compensation FIFO makes up the transmitter datapath interface. This interface is clocked with the transmitter datapath interface clock.

The following figure shows the 6-Gbps transmitter datapath interface clocking. The transmitter PCS forwards the following clocks to the FPGA fabric:

- `tx_clkout`—for each transmitter channel in a non-bonded configuration
- `tx_clkout[0]`—for all transmitter channels in a bonded configuration

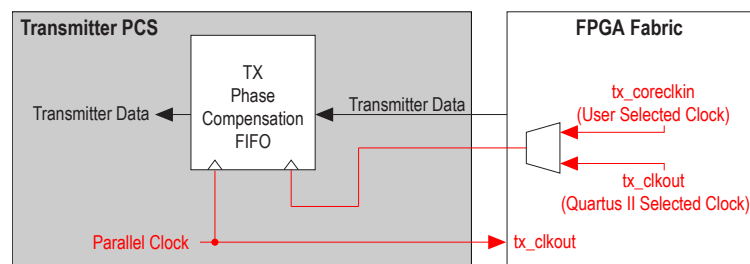Figure 2-25: Transmitter Datapath Interface Clocking for 6-Gbps Transceivers




All configurations that use the PCS channel must have a 0 parts per million (ppm) difference between write and read clocks of the transmitter phase compensation FIFO.

For the 10-Gbps transceivers, there are no PCS blocks. The only transmit datapath available is a direct connection from the FPGA fabric to the serializer of the transmitter PMA.

The following figure shows the 10-Gbps transmitter datapath interface clocking. For each transmitter channel in a non-bonded configuration, the FPGA fabric forwards the following `tx_clkout` clock to the transmitter PMA.

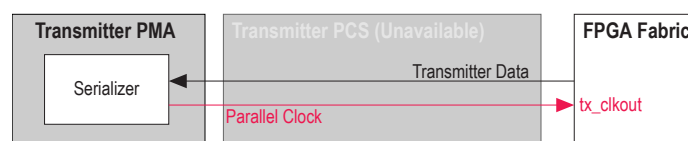Figure 2-26: Transmitter Datapath Interface Clocking for 10-Gbps Transceivers



Note: For more information about interface clocking for each configuration, refer to the Transceiver Custom Configuration in Arria V Devices and Transceiver Protocol Configurations in Arria V Devices chapters.

You can clock the transmitter datapath interface by one of the following options:

- The Quartus II-selected transmitter datapath interface clock
- The user-selected transmitter datapath interface clock

Note: To reduce GCLK, RCLK, and PCLK resource utilization in your design, you can select the user-selection option to share the transceiver datapath interface clocks.

Related Links


[Transceiver Custom Configuration in Arria V Devices and Transceiver Protocol Configurations in Arria V Devices chapters](#)

Quartus II-Software Selected Transmitter Datapath Interface Clock

The Quartus II software automatically picks the appropriate clock from the FPGA fabric to clock the transmitter datapath interface.


The Quartus II software automatically picks the appropriate clock from the FPGA fabric to clock the transmitter datapath interface. The following figure shows the transmitter datapath interface of two 6-Gbps transceiver non-bonded channels clocked by their respective transmitter PCS clocks, which are forwarded to the FPGA fabric.

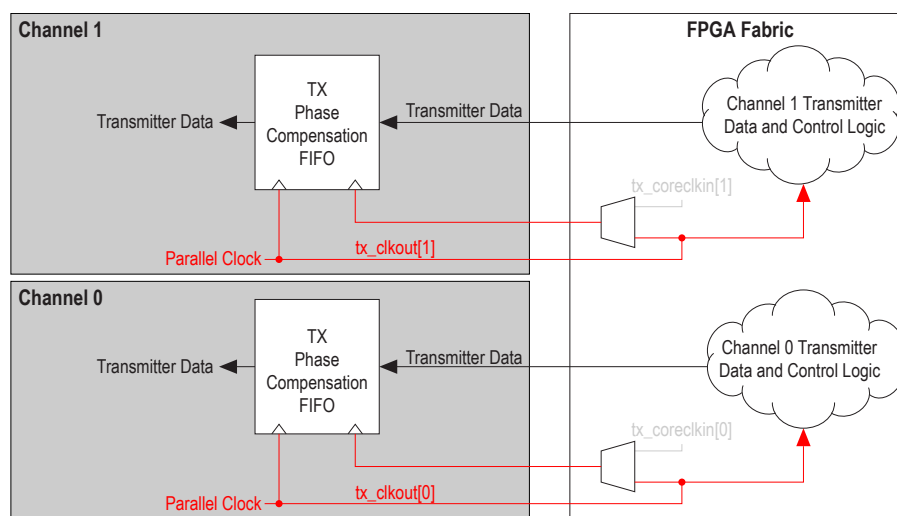Figure 2-27: 6-Gbps Transmitter Datapath Interface Clocking for Non-Bonded Channels




The following figure shows the transmitter datapath interface of two 10-Gbps transceiver non-bonded channels clocked by their respective transmitter PMA clocks, which are forwarded to the FPGA fabric.

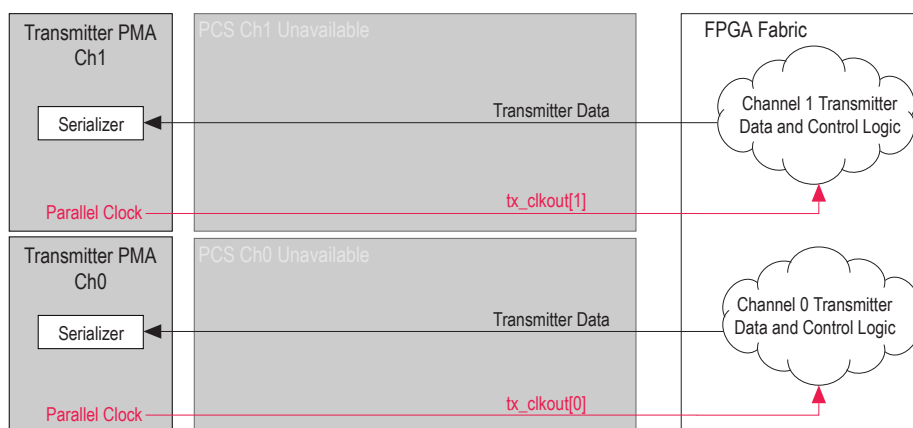Figure 2-28: 10-Gbps Transmitter Datapath Interface Clocking for Non-Bonded Channels



The following figure shows the 6-Gbps transmitter datapath interface of three bonded channels clocked by the `tx_clkout[0]` clock. The `tx_clkout[0]` clock is derived from the central clock divider of channel 1 or 4 in a transceiver bank.

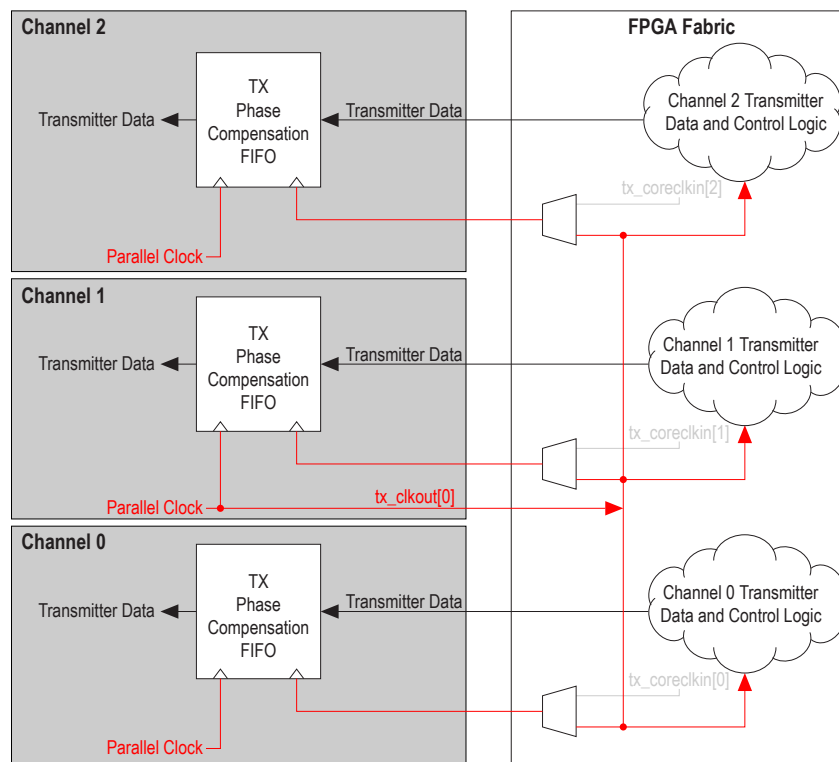Figure 2-29: 6-Gbps Transmitter Datapath Interface Clocking for Three Bonded Channels




Selecting a Transmitter Datapath Interface Clock

Multiple non-bonded transmitter channels use a large portion of GCLK, RCLK, and PCLK resources. Selecting a common clock driver for the transmitter datapath interface of all identical transmitter channels saves clock resources.

Multiple transmitter channels that are non-bonded lead to high utilization of GCLK, RCLK, and PCLK resources (one clock resource per channel). You can significantly reduce GCLK, RCLK, and PCLK resource use for transmitter datapath clocks if the transmitter channels are identical.

Note: Identical transmitter channels have the same input reference clock source, transmit PLL configuration, transmitter PMA, and PCS configuration, but may have different analog settings, such as transmitter voltage output differential (VOD), transmitter common-mode voltage (VCM), or pre-emphasis.

To achieve the clock resource savings, select a common clock driver for the transmitter datapath interface of all identical transmitter channels. The following figure shows eight identical channels clocked by a single clock (`tx_clkout` of channel 4).

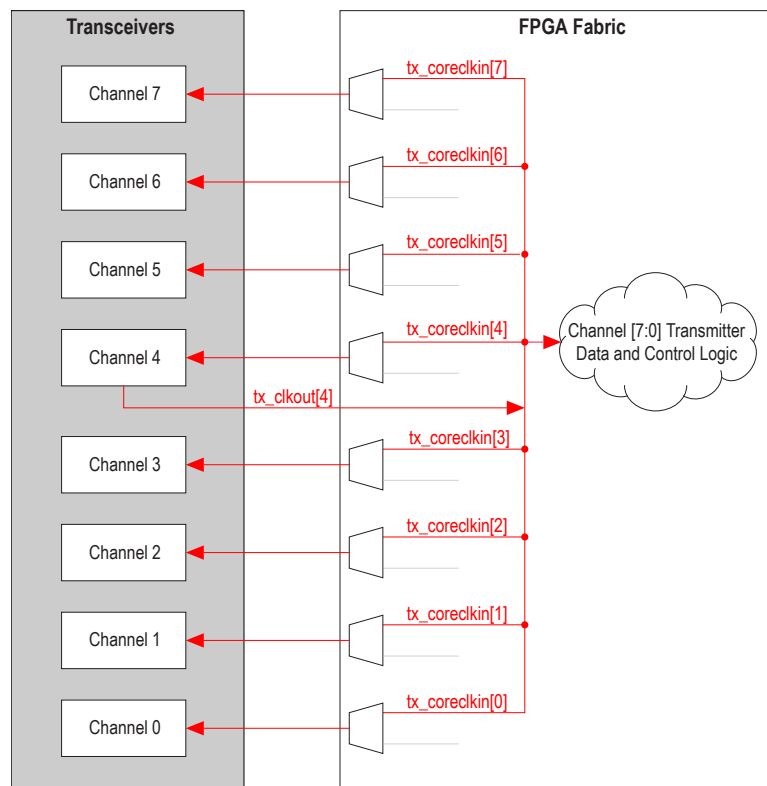Figure 2-30: Eight Identical Channels with a Single User-Selected Transmitter Interface Clock

To clock eight identical channels with a single clock, perform these steps:

1. Instantiate the `tx_coreclk` port for all the identical transmitter channels (`tx_coreclkin[7:0]`).
2. Connect `tx_clkout[4]` to the `tx_coreclk[7:0]` ports.
3. Connect `tx_clkout[4]` to the transmitter data and control logic for all eight channels.

Note: Resetting or powering down channel 4 causes a loss of the clock for all eight channels.

The common clock must have a 0 ppm difference for the read side of the transmitter phase compensation FIFO of all the identical channels. A frequency difference causes the FIFO to under run or overflow, depending on whether the common clock is slower or faster, respectively.

You can drive the 0 ppm common clock by one of the following sources:

- `tx_clkout` of any channel in non-bonded channel configurations
- `tx_clkout[0]` in bonded channel configurations
- Dedicated `refclk` pins

Note: The Quartus II software does not allow gated clocks or clocks that are generated in the FPGA logic to drive the `tx_coreclk` ports.

You must ensure a 0 ppm difference. The Quartus II software is unable to ensure a 0 ppm difference because it allows you to use external pins, such as dedicated `refclk` pins.


Receiver Datapath Interface Clock

The 6-Gbps receiver datapath interface is comprised of the read side RX phase compensation FIFO.

The read side of the RX phase compensation FIFO makes up the 6-Gbps receiver datapath interface. The receiver datapath interface clock clocks this interface. The receiver PCS forwards the following clocks to the FPGA fabric:

- `rx_clkout`—for each receiver channel in a non-bonded configuration when you do not use a rate matcher
- `tx_clkout`—for each receiver channel in a non-bonded configuration when you use a rate matcher
- `single_rx_clkout[0]`—for all receiver channels in a bonded configuration

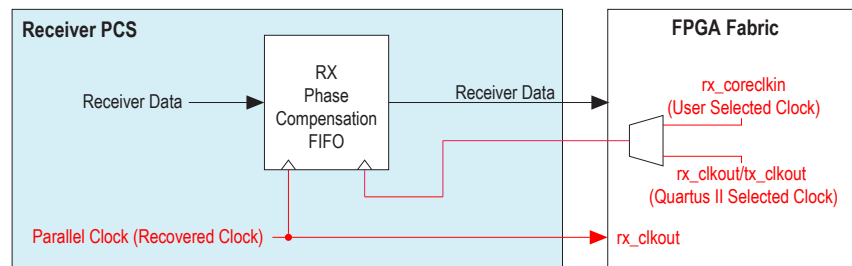Figure 2-31: 6-Gbps Receiver Datapath Interface Clocking




All configurations that use the PCS channel must have a 0 ppm difference between the receiver datapath interface clock and the read side clock of the RX phase compensation FIFO.

For the 10-Gbps transceivers, there are no PCS blocks. The only receiver datapath available is a direct connection from the receiver PMA deserializer to the FPGA fabric.

For each receiver channel in a non-bonded configuration, the receiver PMA forwards the `rx_clkout` clock to the FPGA fabric.

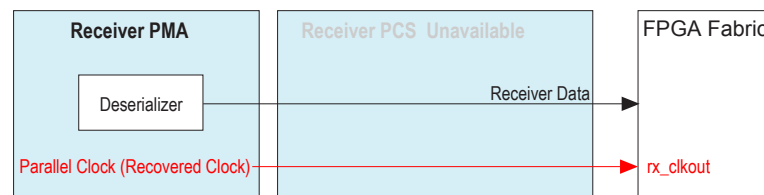Figure 2-32: 10-Gbps Receiver Datapath Interface Clocking



Note: For more information about interface clocking for each configuration, refer to the Transceiver Custom Configuration in Arria V Devices and Transceiver Protocol Configurations in Arria V Devices chapters.

You can clock the receiver datapath interface by one of the following options:

- The Quartus II-selected receiver datapath interface clock
- The user-selected receiver datapath interface clock

Note: To reduce GCLK, RCLK, and PCLK resource utilization in your design, you can select the user-selection option to share the transceiver datapath interface clocks.

Related Links


[Transceiver Custom Configuration in Arria V Devices and Transceiver Protocol Configurations in Arria V Devices chapters](#)

Quartus II Software-Selected Receiver Datapath Interface Clock

Quartus II automatically picks the appropriate clock from the FPGA fabric to clock the receiver datapath interface.

The Quartus II software automatically picks the appropriate clock from the FPGA fabric to clock the receiver datapath interface. The following figure shows the receiver datapath interface of two 6-Gbps transceiver non-bonded channels clocked by their respective receiver PCS clocks, which are forwarded to the FPGA fabric.

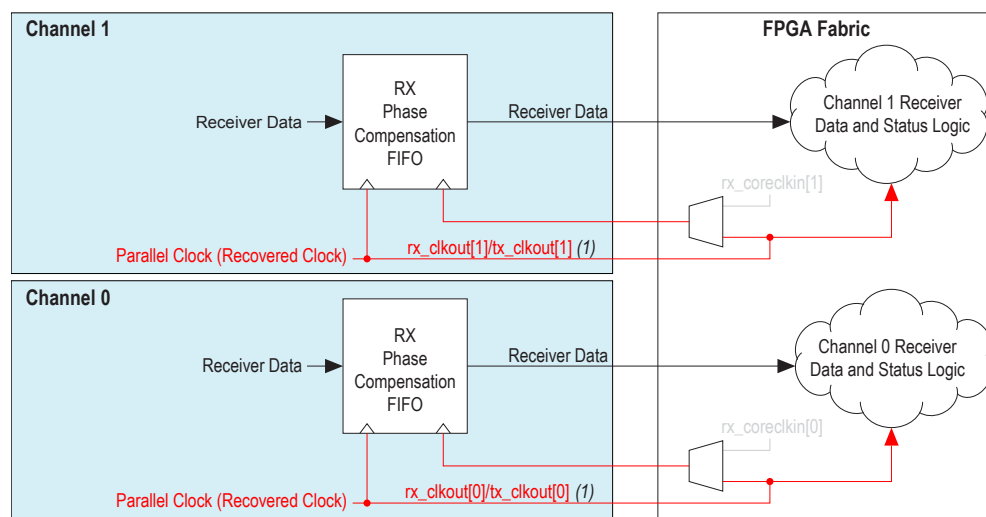
Figure 2-33: 6-Gbps Receiver Datapath Interface Clocking for Non-Bonded Channels



Note: (1) If you use a rate matcher, the `tx_clkout` clock is used.


The following figure shows the receiver datapath interface of two 10-Gbps transceiver non-bonded channels clocked by their respective receiver CDR recovered PMA clocks, which are forwarded to the FPGA fabric.

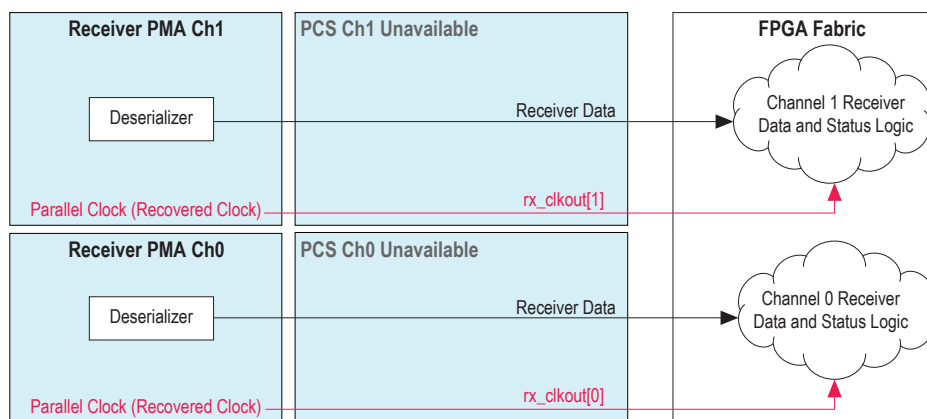Figure 2-34: 10-Gbps Receiver Datapath Interface Clocking for Non-Bonded Channels



The following figure shows the 6-Gbps receiver datapath interface of three bonded channels clocked by the `tx_clkout[0]` clock. The `tx_clkout[0]` clock is derived from the central clock divider of channel 1 or 4 in a transceiver bank.

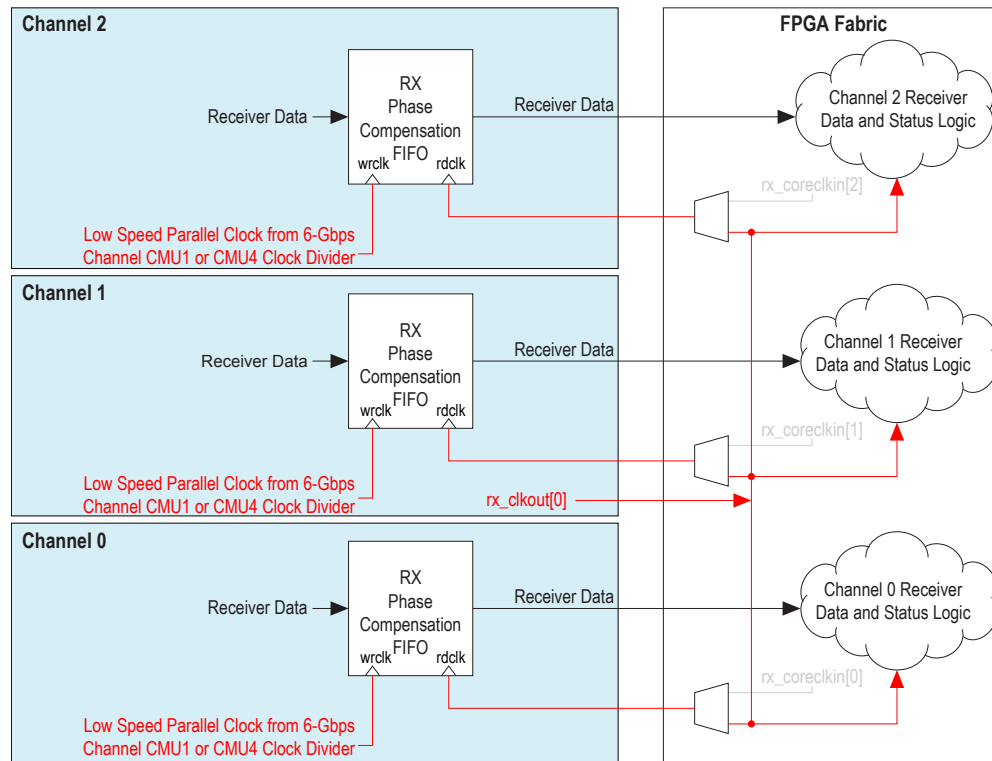Figure 2-35: 6-Gbps Receiver Datapath Interface Clocking for Three Bonded Channels



Selecting a Receiver Datapath Interface Clock

Multiple non-bonded receiver channels use a large portion of GCLK, RCLK, and PCLK resources. Selecting a common clock driver for the receiver datapath interface of all identical receiver channels saves clock resources.


Non-bonded multiple receiver channels lead to high utilization of GCLK, RCLK, and PCLK resources—one clock resource per channel. You can significantly reduce GCLK, RCLK, and PCLK resource use for the receiver datapath clocks if the receiver channels are identical.

Note: Identical receiver channels are defined as channels that have the same input reference clock source for the CDR and the same receiver PMA and PCS configuration. These channels may have different analog settings, such as receiver common mode voltage (VICM), equalization, or DC gain setting.

To achieve clock resource savings, select a common clock driver for the receiver datapath interface of all identical receiver channels. To select a common clock driver, perform these steps:

1. Instantiate the `rx_coreclk` port for all the identical receiver channels
2. Connect the common clock driver to their receiver datapath interface, and receiver data and control logic.

The following figure shows eight identical channels that are clocked by a single clock (`rx_clkout` of channel 4).

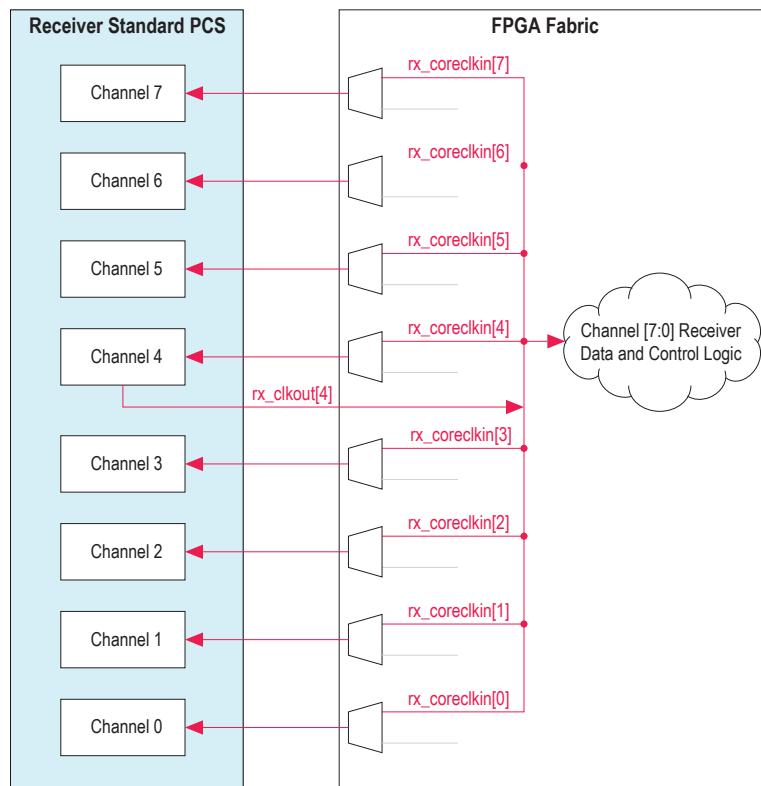Figure 2-36: Eight Identical Channels with a Single User-Selected Receiver Interface Clock

To clock eight identical channels with a single clock, perform these steps:

- Instantiate the `rx_coreclk` port for all the identical receiver channels (`rx_coreclk[7:0]`).
- Connect `rx_clkout[4]` to the `rx_coreclk[7:0]` ports.
- Connect `rx_clkout[4]` to the receiver data and control logic for all eight channels.

Note: Resetting or powering down channel 4 leads to a loss of the clock for all eight channels.

The common clock must have a 0 ppm difference for the write side of the RX phase compensation FIFO of all the identical channels. A frequency difference causes the FIFO to under run or overflow, depending on whether the common clock is faster or slower, respectively.

You can drive the 0 ppm common clock driver from one of the following sources:

- `tx_clkout` of any channel in non-bonded receiver channel configurations with the rate matcher
- `rx_clkout` of any channel in non-bonded receiver channel configurations without the rate matcher
- `tx_clkout[0]` in bonded receiver channel configurations
- Dedicated `refclk` pins

Note: The Quartus II software does not allow gated clocks or clocks generated in the FPGA logic to drive the `rx_coreclk` ports.

Note: You must ensure a 0 ppm difference. The Quartus II software is unable to ensure a 0 ppm difference because it allows you to use external pins, such as dedicated `refclk` pins.

Document Revision History

The table below lists the revision history for this chapter.

Table 2-11: Document Revision History

Date	Version	Changes
November 2012	2012.11.19	- Reorganized content and updated template. - Updated for the Quartus II software version 12.1.
June 2012	1.2	- Updated for the Quartus II software version 12.0. - Added basic clocking information from obsoleted “basics” chapter.
November 2011	1.1	Updated chapter for clarity and Quartus II software version 11.1.
August 2011	1.0	Initial release.

Transceiver Reset Control in Arria V Devices

3

2012.11.19

AV53003



Subscribe



Feedback

Altera's recommended reset sequence ensures that both the physical coding sublayer (PCS) and physical medium attachment (PMA) in each transceiver channel are initialized and functioning correctly.

There are multiple reset options available to reset the analog and digital portions of the transmitter and receiver.

Table 3-1: Available Reset Options

Transceiver PHY IP Core	Embedded Reset Controller	User-Controlled Reset Controller	Transceiver PHY Reset Controller IP	Avalon Memory-Mapped Reset Registers
XAUI	X			X
PCIe	X			X
10GBASE-R	X			X
Interlaken For Arria V GZ	X			X
Custom	X	X	X	X
Low Latency For Arria V GZ	X	X	X	X
Deterministic Latency	X	X	X	X
Native PHY		X	X	

Related Links

[Altera Transceiver PHY IP Core User Guide](#)

PHY IP Embedded Reset Controller

The embedded reset controller in the PHY IP enables you to initialize the transceiver physical coding sublayer (PCS) and physical medium attachment (PMA) blocks.

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered

To simplify your transceiver-based design, the embedded reset controller provides an option that requires only one control input to implement an automatic reset sequence. Only one embedded reset controller is available for all the channels in a PHY IP instance.

The embedded reset controller automatically performs the entire transceiver reset sequence whenever the `phy_mgmt_clk_reset` signal is triggered. In case of loss-of-link or loss-of-data, the embedded reset controller asserts the appropriate reset signals. You must monitor `tx_ready` and `rx_ready`. A high on these status signals indicates the transceiver is out of reset and ready for data transmission and reception.

Note: Assert the `mgmt_rst_reset` signal of the transceiver reconfiguration controller before or at the same time as `phy_mgmt_clk_reset` to start calibration

Note: The PHY IP embedded reset controller is enabled by default in all transceiver PHY IP cores except the Native PHY IP core.

Embedded Reset Controller Signals

The following figure shows the embedded reset controller and signals in the PHY IP instance. These signals reset your transceiver when you use the embedded reset controller.

Figure 3-1: Embedded Reset Controller

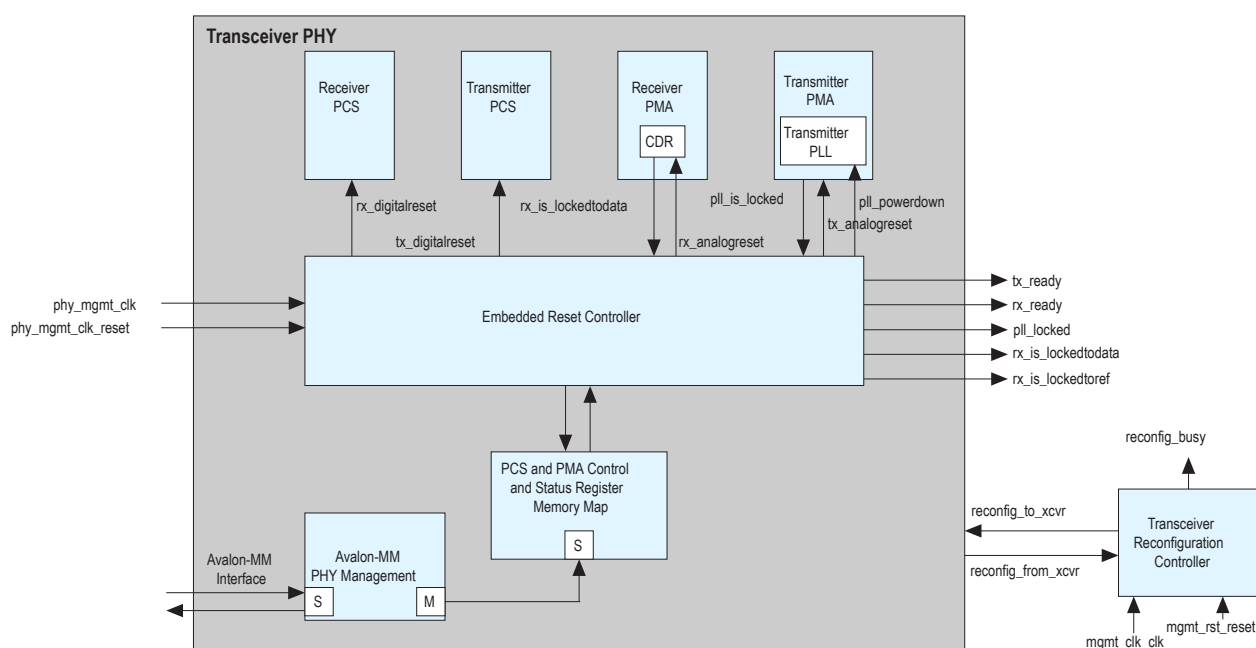


Table 3-2: Embedded Reset Controller Reset Control and Status Signals

Signal Name	Signal	Description
<code>phy_mgmt_clk</code>	Control Input	Clock for the embedded reset controller.
<code>phy_mgmt_clk_reset</code>	Control Input	A high-to-low transition of this asynchronous reset signal initiates the automatic reset sequence control. Hold this signal high to keep the reset signals asserted.

Signal Name	Signal	Description
tx_ready	Status Output	A continuous high on this signal indicates that the transmitter (TX) channel is out of reset and is ready for data transmission. This signal is synchronous to phy_mgmt_clk.
rx_ready	Status Output	A continuous high on this signal indicates that the receiver (RX) channel is out of reset and is ready for data reception. This signal rx_ready is synchronous to phy_mgmt_clk.
reconfig_busy	Status Output	An output from the Transceiver Reconfiguration Controller block indicates the status of the dynamic reconfiguration controller. At the first mgmt_clk_clk clock cycle after power-up, reconfig_busy remains low. This signal is asserted from the second mgmt_clk_clk clock cycle to indicate that the calibration process is in progress . When the calibration process is completed, the reconfig_busy signal is deasserted. This signal is also routed to the embedded reset controller by the Quartus® II software by embedding the signal in the reconfig_to_xcvr bus between the PHY IP and the Transceiver Reconfiguration Controller.
pll_locked	Status Output	This signal is asserted when the TX PLL achieves lock to the input reference clock. When this signal is asserted high, the embedded reset controller deasserts the tx_digitalreset signal.
rx_is_lockedto data	Status Output	This signal is an optional output status port. When asserted, this signal indicates that the CDR is locked to the RX data and the CDR has changed from lock-to-reference (LTR) to lock-to-data (LTD) mode.

Signal Name	Signal	Description
<code>rx_is_lockedtoref</code>	Status Output	This is an optional output status port. When asserted, this signal indicates that the CDR is locked to the reference clock.
<code>mgmt_clk_clk</code>	Clock	Clock for the Transceiver Reconfiguration Controller
<code>mgmt_rst_reset</code>	Reset	Reset for the Transceiver Reconfiguration Controller

Resetting the Transceiver with the PHY IP Embedded Reset Controller during Device Power-Up


Follow this reset sequence to ensure a reliable link initialization after the initial power-up.

The numbers in the following figure correspond to the following numbered list, which guides you through the transceiver reset sequence during device power-up.

1. During device power-up, `mgmt_rst_reset` and `phy_mgmt_clk_reset` must be asserted to initialize the reset sequence. `phy_mgmt_clk_reset` holds the transceiver blocks in reset and `mgmt_rst_reset` is required to start the calibration IPs. Both these signals should be held asserted for a minimum of two `phy_mgmt_clk` clock cycles. Deassert `phy_mgmt_clk_reset` at the same time as `mgmt_rst_reset`.
2. After the transmitter calibration and reset sequence are complete, the `tx_ready` status signal is asserted and remains asserted to indicate that the transmitter is ready to transmit data.
3. After the receiver calibration and reset sequence are complete, the `rx_ready` status signal is asserted and remains asserted to indicate that the receiver is ready to receive data.

Note: If the `tx_ready` and `rx_ready` signals do not stay asserted, the reset sequence did not complete successfully and the link will be down.

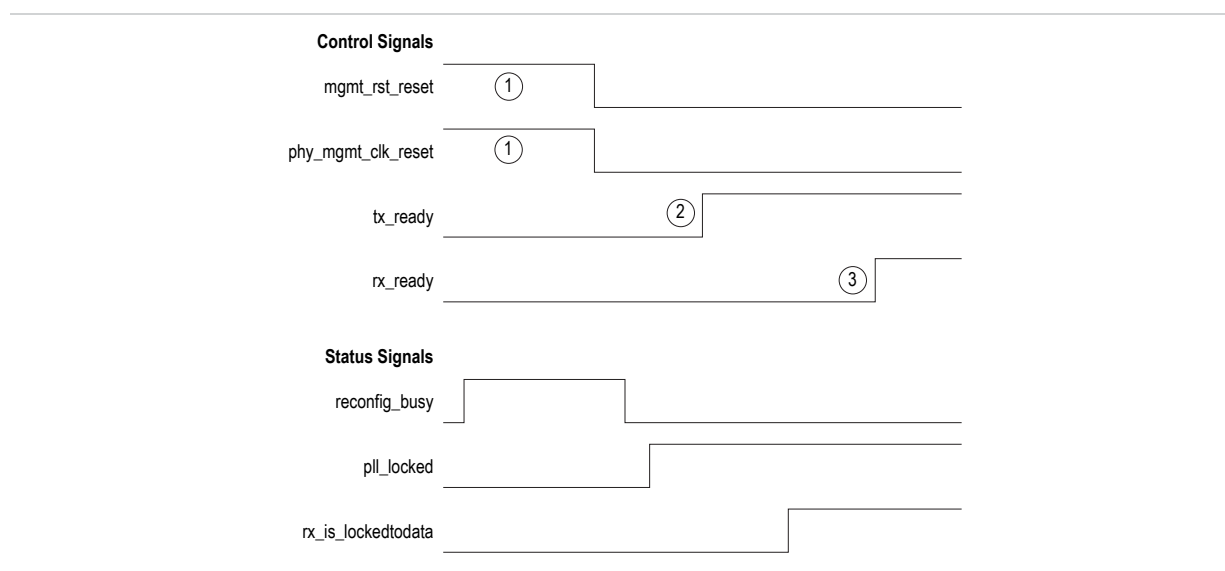Figure 3-2: Reset Sequence Timing Diagram Using Embedded Reset Controller during Device Power-Up



Resetting the Transceiver with the PHY IP Embedded Reset Controller during Device Operation


Follow this reset sequence to reset the entire transceiver at any point during the device operation, to re-establishing a link, or after certain dynamic reconfigurations.

The numbers in the following figure correspond to the numbered list, which guides you through the transceiver reset sequence during device operation.

1. Assert `phy_mgmt_clk_reset` for two `phy_mgmt_clk` clock cycles to re-start the entire transceiver reset sequence.
2. After the transmitter reset sequence is complete, the `tx_ready` status signal is asserted and remains asserted to indicate that the transmitter is ready to transmit data.
3. After the receiver reset sequence is complete, the `rx_ready` status signal is asserted and remains asserted to indicate that the receiver is ready to receive data.

Note: If the `tx_ready` and `rx_ready` signals do not stay asserted, the reset sequence did not complete successfully and the link will be down.

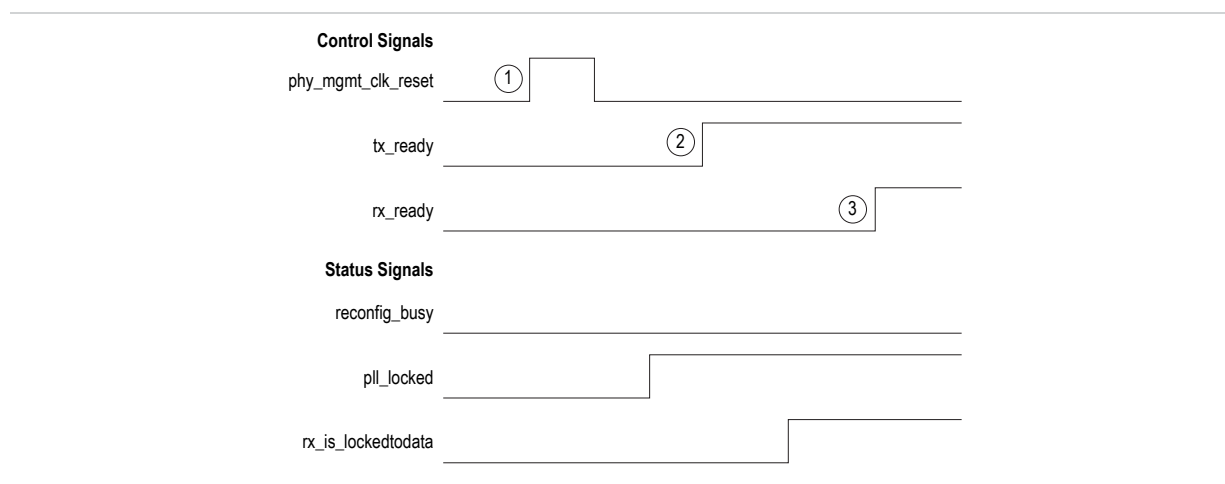Figure 3-3: Reset Sequence Timing Diagram Using Embedded Reset Controller during Device Operation



To reset the transmitter and receiver analog and digital blocks separately without repeating the entire reset sequence, use the Avalon Memory Map registers.

User-Controlled Reset Controller

You must implement external reset controller logic if you disable the embedded reset controller to initialize the transceiver physical coding sublayer (PCS) and physical medium attachment (PMA) blocks. If you implement your own reset controller, consider the following:

- The user-controlled reset controller is level sensitive (active high)
- The user-controlled reset controller does not depend on `phy_mgmt_clk_reset`
- You must provide a clock and reset to the reset controller logic
- The internal signals of the PHY IP embedded reset controller are configured as ports
- You can hold the transceiver channels in reset by asserting the appropriate reset control signals
- The `tx_ready` and `rx_ready` status signals are not available in the user-controlled reset controller mode

Note: The embedded reset controller can only be disabled on non-protocol transceiver PHY IPs, such as custom PHY, low latency PHY and deterministic latency PHY. Native PHY IP does not have an embedded reset controller, so you must implement your own reset logic.

You can instantiate the Transceiver PHY Reset Controller with the Quartus II MegaWizard Plug-In Manager.

Related Links

For information about the transceiver PHY reset controller, refer to the "Transceiver PHY Reset Controller IP Core" chapter of the Altera Transceiver PHY IP Core User Guide.

User-Controlled Reset Controller Signals

Use the following signals with a User-Controlled Reset Controller.

Figure 3-4: Interaction Between the Transceiver PHY Instance, Transceiver Reconfiguration Controller, and the User-Controlled Reset Controller

The following figure shows a block diagram of the transceiver PHY instance and the Transceiver Reconfiguration Controller interacting with the user-controlled reset controller.

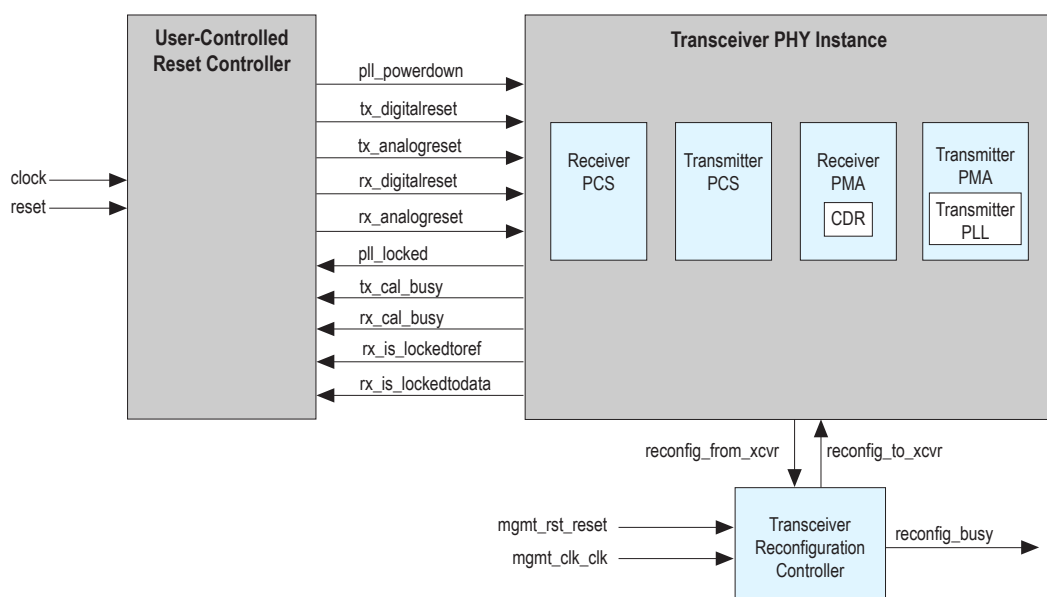


Table 3-3: Signals Used by the Transceiver PHY instance, Transceiver Reconfiguration Controller, and User-Controlled Reset Controller

The following table lists the signals used by the transceiver PHY instance, Transceiver Reconfiguration Controller, and user-controlled reset controller.

Signal Name	Signal Type	Description
mgmt_clk_clk	Clock	Clock for the Transceiver Reconfiguration Controller
mgmt_rst_reset	Reset	Reset for the Transceiver Reconfiguration Controller
pll_powerdown	Control	Resets the TX PLL when asserted high
tx_analogreset	Control	Resets the TX PMA when asserted high
tx_digitalreset	Control	Resets the TX PCS when asserted high
rx_analogreset	Control	Resets the RX PMA when asserted high
rx_digitalreset	Control	Resets the RX PCS when asserted high
reconfig_busy	Status	A high on this signal indicates that reconfiguration is active
tx_cal_busy	Status	A high on this signal indicates that TX calibration is active
rx_cal_busy	Status	A high on this signal indicates that RX calibration is active
pll_locked	Status	A high on this signal indicates that the TX PLL is locked
rx_is_lockedtoref	Status	A high on this signal indicates that the RX CDR is in the lock to reference (LTR) mode
rx_is_lockedtodata	Status	A high on this signal indicates that the RX CDR is in the lock to data (LTD) mode

Resetting the Transmitter with the User-Controlled Reset Controller during Device Power-Up

Follow this reset sequence when designing your User-Controller Reset Controller to ensure a reliable transmitter initialization after the initial power-up.

The numbers in the figure correspond to the following numbered list, which guides you through the transmitter reset sequence during device power-up.

1. To reset the transmitter, begin with:

- Assert `mgmt_rst_reset` at power-up to start the calibration IPs. Hold `mgmt_rst_reset` active for a minimum of two reset controller clock cycles.
- Assert and hold `pll_powerdown`, `tx_analogreset`, and `tx_digitalreset` at power-up to reset the transmitter. You can deassert `tx_analogreset` at the same time as `pll_powerdown`.
- Assert `pll_powerdown` for a minimum duration of $1\ \mu\text{s}$ ($t_{\text{pll\_powerdown}}$). If you use ATX PLL calibration (available in Arria V GZ devices), deassert `pll_powerdown` before or at the same time as `mgmt_rst_reset` so that the ATX PLL is not powered down during calibration.
- Make sure there is a stable reference clock to the ATX PLL before deasserting `pll_powerdown` and `mgmt_rst_reset`. Otherwise, `pll_powerdown` can be deasserted anytime after `mgmt_rst_reset` is deasserted.

2. After the transmitter PLL locks, the `pll_locked` status gets asserted after $t_{\text{pll\_lock}}$.
3. After the transmitter calibration completes, the `tx_cal_busy` status is deasserted. Depending on the transmitter calibrations, this could happen before or after the `pll_locked` is asserted.
4. Deassert `tx_digitalreset` after a minimum duration of $t_{\text{tx\_digitalreset}}$ and after all the three gating conditions occur:
- `pll_powerdown` is deasserted
 - `pll_locked` is asserted
 - `tx_cal_busy` is deasserted

The transmitter is out of reset and ready for operation.

Note: During calibration, `pll_locked` might assert and deassert as the calibration IP runs.

Figure 3-5: Reset Sequence Timing Diagram for Transmitter using the User-Controlled Reset Controller during Device Power-Up

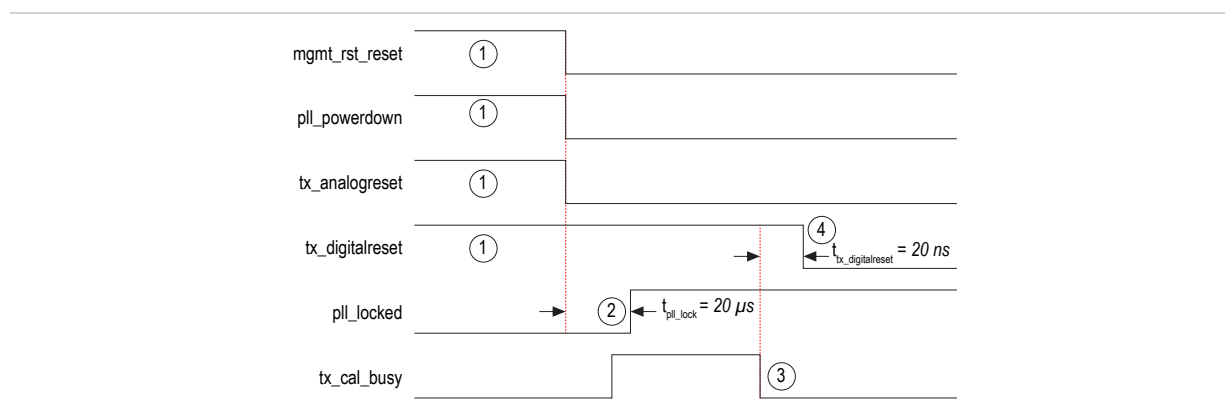


Table 3-4: Guidelines for Resetting the PLL, TX PMA, and TX PCS

If You Reset:	You Must Reset
PLL	pll_powerdown tx_analogreset tx_digitalreset
TX PMA	tx_analogreset tx_digitalreset
TX PCS	tx_digitalreset

Resetting the Transmitter with the User-Controlled Reset Controller during Device Operation

Follow this reset sequence if you want to reset the PLL, or analog or digital blocks of the transmitter at any point during device operation. This might be necessary for re-establishing a link or after certain dynamic reconfigurations.

The numbers in the following figure correspond to the following numbered list, which guides you through the transmitter reset sequence during device operation.

1. To reset the transmitter:


- Assert `pll_powerdown`, `tx_analogreset` and `tx_digitalreset`. `tx_digitalreset` must be asserted every time `pll_powerdown` and `tx_analogreset` are asserted to reset the PCS blocks.
- Hold `pll_powerdown` asserted for a minimum duration of $t_{\text{pll\_powerdown}}$.
- Deassert `tx_analogreset` at the same time or after `pll_powerdown` is deasserted.

2. After the transmitter PLL locks, the `pll_locked` status is asserted after $t_{\text{pll\_lock}}$. While the TX PLL locks, the `pll_locked` status signal may toggle. It is asserted after $t_{\text{pll\_lock}}$.

3. Deassert `tx_digitalreset` after a minimum duration of $t_{\text{tx\_digitalreset}}$, and after all the three gating conditions are removed: is de-asserted and is asserted.

- `pll_powerdown` is deasserted
- `pll_locked` is deasserted
- `tx_cal_busy` is deasserted

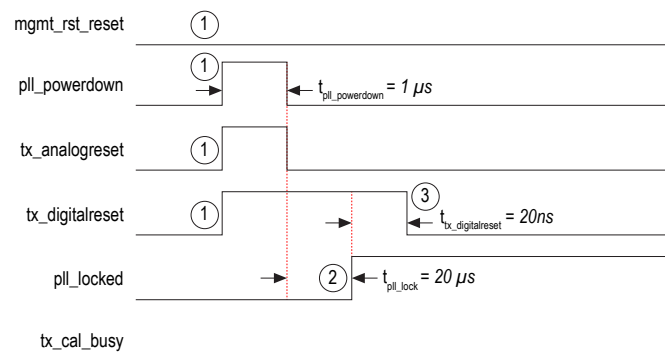Figure 3-6: Reset Sequence Timing Diagram for Transmitter using the User-Controlled Reset Controller during Device Operation



Resetting the Receiver with the User-Controlled Reset Controller during Device Power-Up Configuration

Follow this reset sequence to ensure a reliable receiver initialization after the initial power-up.

The numbers in the following figure correspond to the following numbered list, which guides you through the receiver reset sequence during device power-up.


1. Assert `mgmt_rst_reset` at power-up to start the calibration IPs. Hold `mgmt_rst_reset` active for a minimum of two `mgmt_clk_clock` cycles. Hold `rx_analogreset` and `rx_digitalreset` active at power-up to hold the receiver in reset. You can deassert them after all the gating conditions are removed.
2. After the receiver calibration completes, the `rx_cal_busy` status is de-asserted.
3. Deassert `rx_analogreset` after a minimum duration of $t_{rx\_analogreset}$ after `rx_cal_busy` is deasserted.
4. `rx_is_lockedtodata` is a status signal from the receiver CDR indicating that the CDR is in the lock to data (LTD) mode. Ensure `rx_is_lockedtodata` is asserted and stays asserted for a minimum duration of t_{LTD} before deasserting `rx_digitalreset`. If `rx_is_lockedtodata` is asserted and toggles, you must wait another additional t_{LTD} duration before deasserting `rx_digitalreset`.
5. Deassert `rx_digitalreset` after a minimum duration of t_{LTD} after `rx_is_lockedtodata` stays asserted. Ensure `rx_analogreset` and `rx_cal_busy` are deasserted before deasserting `rx_digitalreset`.

The receiver is now out of reset and ready for operation.

Note: `rx_is_lockedtodata` keeps toggling when there is no data at the receiver input.

Note: `rx_is_lockedtoref` is a don't care when `rx_is_lockedtodata` is asserted.

Note: `rx_analogreset` must always be followed by `rx_digitalreset`.

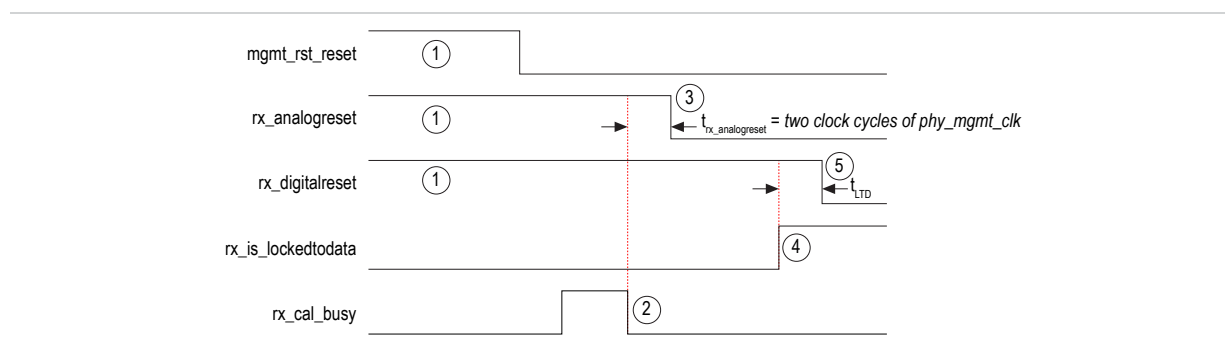Figure 3-7: Reset Sequence Timing Diagram for Receiver using the User-Controlled Reset Controller during Device Power-Up


Resetting the Receiver with the User-Controlled Reset Controller during Device Operation

Follow this reset sequence to reset the analog or digital blocks of the receiver at any point during the device operation. This might be necessary for re-establishing a link or after certain dynamic reconfigurations.

The numbers in the following figure correspond to the following numbered list, which guides you through the receiver reset sequence during device operation.

1. Assert `rx_analogreset` and `rx_digitalreset` at any point independently. However, you must assert `rx_digitalreset` every time `rx_analogreset` is asserted to reset the PCS blocks.
2. Deassert `rx_analogreset` after a minimum duration of 40 ns ($t_{rx\_analogreset}$).
3. `rx_is_lockedtodata` is a status signal from the receiver CDR that indicates that the CDR is in the lock to data (LTD) mode. Ensure `rx_is_lockedtodata` is asserted and stays asserted before deasserting `rx_digitalreset`.
4. Deassert `rx_digitalreset` after a minimum duration of t_{LTD} after `rx_is_lockedtodata` stays asserted. Ensure `rx_analogreset` is de-asserted.

Note: `rx_is_lockedtodata` keeps toggling when there is no data at the receiver input.
`rx_is_lockedtoref` is a don't care when `rx_is_lockedtodata` is asserted.

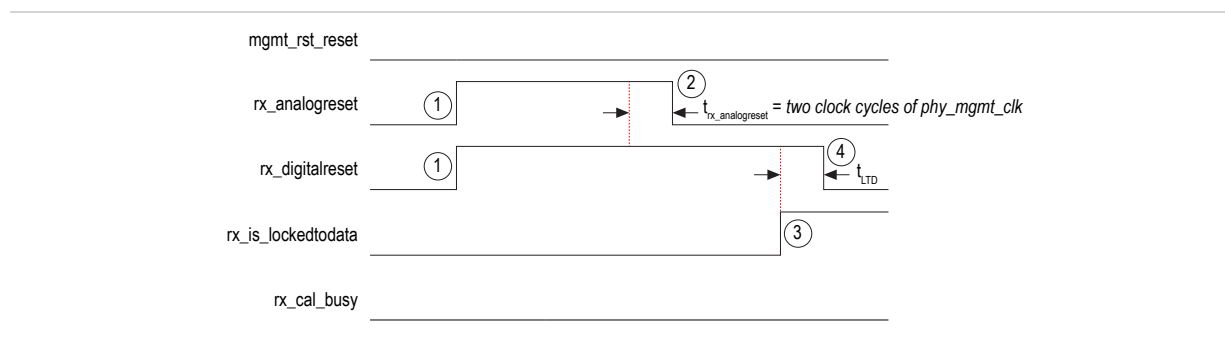Figure 3-8: Reset Sequence Timing Diagram for Receiver using the User-Controlled Reset Controller during Device Operation

Transceiver Reset Using Avalon Memory Map Registers

You can use Memory Map registers within the PHY IP instance to control the reset signals through the Avalon Memory Map interface.

This gives the flexibility of resetting the PLL, and transmitter and receiver analog and digital blocks separately without repeating the entire reset sequence.

Transceiver Reset Control Signals Using Avalon Memory Map Registers

The following table lists the memory map registers for CDR lock mode and channel reset. These signals help you reset your transceiver when you use Memory Map registers within the PHY IP.

Table 3-5: Transceiver Reset Control Using Memory Map Registers

Register Name	Description
<code>pma_rx_set_locktodata</code>	This register is for CDR manual lock mode only. When you set the register to high, the RX CDR PLL is in the lock to data (LTD) mode. The default is low when both registers have the CDR in auto lock mode.
<code>pma_rx_set_locktoref</code>	This register is for CDR manual lock mode only. When you set the register to high, the RX CDR PLL is in the lock to reference (LTR) mode if <code>pma_rx_set_locktodata</code> is not asserted. The default is low when both registers have the CDR in auto lock mode.
<code>reset_tx_digital</code>	When you set this register to high, the <code>tx_digitalreset</code> signal is asserted in every channel that is enabled for reset control through the <code>reset_ch_bitmask</code> register. To deassert the <code>tx_digitalreset</code> signal, set the <code>reset_tx_digital</code> register to 0.
<code>reset_rx_analog</code>	When you set this register to high, the <code>rx_analogreset</code> signal is asserted in every channel that is enabled for reset control through the <code>reset_ch_bitmask</code> register. To deassert the <code>rx_analogreset</code> signal, set the <code>reset_rx_analog</code> register to 0.
<code>reset_rx_digital</code>	When you set this register to high, the <code>rx_digitalreset</code> signal is asserted in every channel that is enabled for reset control through the <code>reset_ch_bitmask</code> register. To deassert the <code>rx_digitalreset</code> signal, set the <code>reset_rx_digital</code> register to 0.
<code>reset_ch_bitmask</code>	The registers provide an option to enable or disable certain channels in a PHY IP instance for reset control. By default, all channels in a PHY IP instance are enabled for reset control.
<code>pll_powerdown</code>	When asserted, the TX phase-locked loop (PLL) is asserted.

Related Links

For register addresses, refer to the [Altera Transceiver PHY IP Core User Guide](#)

Reset Sequence for CDR in Manual Lock Mode

Use this mode to override the default timing for CDR operation in automatic lock mode. By default, the CDR is in automatic lock mode.

The two control signals to enable and control the CDR in manual lock mode are `rx_set_locktoref` and `rx_set_locktodata`.

Control Settings for CDR in Manual Lock Mode

The following table lists the control settings for the CDR in manual lock and automatic mode. These control signals help you reset your transceiver when the CDR in manual lock.

Table 3-6: Control Settings for the CDR in Manual Lock Mode

<code>rx_set_locktoref</code>	<code>rx_set_locktodata</code>	CDR Lock Mode
0	0	Automatic
1	0	Manual-RX CDR LTR
X	1	Manual-RX CDR LTD


Resetting the Transceiver when the CDR is in Manual Lock Mode

Follow this sequence to reset your transceiver when the CDR is in manual lock mode.

The numbers in the following figure correspond to the following numbered list, which guides you through the steps to put the CDR in manual lock mode.

1. Make sure that the calibration is complete (`rx_cal_busy` is low) and the transceiver goes through the initial reset sequence. The `rx_digitalreset` and `rx_analogreset` signals should be low. The `rx_is_lockedtoref` is a don't care and can be either high or low. The `rx_is_lockedtodata` and `rx_ready` signals should be high, indicating that the transceiver is out of reset. Alternatively, you can start directly with the CDR in manual lock mode after the calibration is complete.
2. Assert the `rx_set_locktoref` signal high to switch the CDR to the lock-to-reference mode. The `rx_is_lockedtodata` status signal gets de-asserted. Assert the `rx_digitalreset` signal high at the same time or after `rx_set_lockedtoref` is asserted if you use the user-controlled reset. When the embedded reset controller is used, the `rx_digitalreset` is automatically asserted.
3. After the `rx_digitalreset` signal gets asserted, the `rx_ready` status signal gets de-asserted.
4. Assert the `rx_set_locktodata` signal high after $t_{LTR\_LTD\_manual}$ to switch the CDR to the lock-to-data mode. The `rx_is_lockedtodata` status signal gets asserted. The `rx_is_lockedtoref` status signal can be a high or low and can be ignored.
5. De-assert the `rx_digitalreset` signal after t_{LTD_Manual} .
6. After the `rx_digitalreset` signal is de-asserted, the `rx_ready` status signal gets asserted if you are using the embedded reset controller, indicating that the receiver is now ready to receive data with the CDR in manual mode.

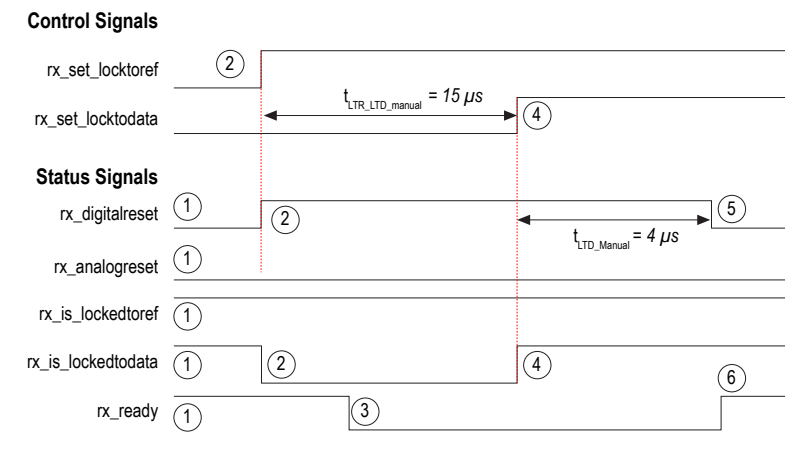Figure 3-9: Reset Sequence Timing Diagram for Transceiver when CDR is in Manual Lock Mode



Resetting the Transceiver During Dynamic Reconfiguration

Reset is required for transceiver during dynamic reconfiguration except in the PMA Analog Control Reconfiguration mode.

In general, follow these guidelines when dynamically resetting the transceiver:

1. Hold the targeted channel in the reset state before dynamic reconfiguration starts.
2. Repeat the sequence as needed after dynamic reconfiguration is complete, which is indicated by deassertion of the `reconfig_busy`, `tx_cal_busy`, `rx_cal_busy` signals.

Guidelines for Dynamic Reconfiguration if Transmitter Duty Cycle Distortion Calibration is Required during Device Operation

If transmitter duty cycle distortion calibration is required during device operation, ensure the general guidelines for transceiver dynamic reconfiguration are followed. Additionally, use the following recommendations:

1. Do not connect `tx_cal_busy` to the transceiver Reset Controller IP.
2. Disable the embedded reset controller and use an external reset controller.

Note: If channel reconfiguration is required before the transmitter dynamic reconfiguration calibration, hold the channel in reset until both reconfigurations are completed. Repeat the reset sequence as needed.

Note: Reset signals for the PMA are required only in PMA-direct mode.

Transceiver Blocks Affected by the Reset and Powerdown Signals

The following listed blocks that are affected by specific reset and powerdown signals

Transceiver Block	pll_powerdown	rx_digitalreset	rx_analogreset	tx_digitalreset	tx_analogreset
PLL					

Transceiver Block	pll_powerdown	rx_digitalreset	rx_analogreset	tx_digitalreset	tx_analogreset
CMU PLL	Yes	—	—	—	—
ATX PLL for Arria V GZ	Yes	—	—	—	—
Receiver Standard PCS					
Receiver Word Aligner	—	Yes	—	—	—
Receiver Deskew FIFO	—	Yes	—	—	—
Receiver Rate Match FIFO	—	Yes	—	—	—
Receiver 8B/10B Decoder	—	Yes	—	—	—
Receiver Byte Deserializer	—	Yes	—	—	—
Receiver Byte Ordering	—	Yes	—	—	—
Receiver Phase Compensation FIFO	—	Yes	—	—	—
Receiver 10G PCS in Arria V GZ Devices					
Receiver Gear Box	—	Yes	—	—	—
Receiver Block Synchronizer	—	Yes	—	—	—
Receiver Disparity Checker	—	Yes	—	—	—
Receiver Descrambler	—	Yes	—	—	—
Receiver Frame Sync	—	Yes	—	—	—
Receiver 64B/66B Decoder	—	Yes	—	—	—
Receiver CRC32 Checker	—	Yes	—	—	—
Receiver FIFO	—	Yes	—	—	—
Receiver PMA					
Receiver Buffer	—	—	Yes	—	—

Transceiver Block	pll_powerdown	rx_digitalreset	rx_analogreset	tx_digitalreset	tx_analogreset
Receiver CDR	—	—	Yes	—	—
Receiver Deserializer	—	—	Yes	—	—
Transmitter Standard PCS					
Transmitter Phase Compensation FIFO	—	—	—	Yes	—
Byte Serializer	—	—	—	Yes	—
8B/10B Encoder	—	—	—	Yes	—
Transmitter Bit-Slip	—	—	—	Yes	—
Transmitter 10G PCS in Arria V GZ Devices					
Transmitter FIFO	—	—	—	Yes	—
Transmitter Frame Generator	—	—	—	Yes	—
Transmitter CRC32 Generator	—	—	—	Yes	—
Transmitter 64B/66B Encoder	—	—	—	Yes	—
Transmitter Scrambler	—	—	—	Yes	—
Transmitter Disparity Generator	—	—	—	Yes	—
Transmitter Gear Box	—	—	—	Yes	—
Transmitter PMA					
Transmitter CGB	—	—	—	—	Yes
Serializer	—	—	—	—	Yes
Transmitter Buffer	—	—	—	—	Yes

Transceiver Power-Down

To maximize power savings, enable PMA hard power-down across all channels on a side of the device where you do not use the transceivers.

The hard power-down granularity control of the transceiver PMA is per side (Arria V GX & Arria V GT) or per transceiver bank (Arria V GZ). To enable PMA hard power-down on the left or right side of the device, ground the transceiver power supply of the respective side.

Related Links

[For information about the transceiver power supply operating conditions of Arria V devices, refer to Arria V Device Datasheet](#)

[Arria V Device Family Pin Connection Guidelines](#)

Document Revision History

The following table lists the revision history for the *Transceiver Reset Control and Power-Down in Arria V Devices* chapter.

Date	Version	Changes
November 2012	2012.11.19	• Rewritten and reorganized content, and updated template • Updated reset sequence procedures • Included sequences for resetting transceiver during device operation • Included information for Arria V GZ transceiver reset
June 2012	1.2	• Added “User-Controlled Reset Controller” section. • Updated Figure 3–1 and Table 3–1.
November 2011	1.1	• Updated all figures and tables. • Reorganized and updated the “Transceiver Reset Sequence” section.
August 2011	1.0	Initial release.

Transceiver Protocol Configurations in Arria V Devices

4

2012.11.19

AV53004



Subscribe



Feedback

The dedicated transceiver physical coding sublayer (PCS) and physical medium attachment (PMA) circuitry supports the following communication protocols.

Table 4-1: Transceiver PCS Features for Arria V Devices

PCS Support	Data Rates (Gbps)	Transmitter Datapath	Receiver Datapath
PCI Express [®] (PCIe [®]) Gen1 (x1, x2, x4, and x8) and Gen2 (x4)	2.5	The same as custom single- and double-width modes, plus the PHY interface for PCI Express (PIPE) 2.0 interface to the core logic	The same as custom single- and double-width modes, plus the rate match FIFO and PIPE 2.0 interface to the core logic
Gbps Ethernet (GbE)	1.25, 3.125	The same as custom single- and double-width modes	The same as custom single- and double-width modes, plus the rate match FIFO
Serial Digital Interface (SDI)	0.27 ⁷ , 1.485, and 2.97	Phase compensation FIFO and byte serializer	Phase compensation FIFO and byte deserializer
SATA	1.5, 3.0, and 6.0	Phase compensation FIFO, byte serializer, and 8B/10B encoder	Phase compensation FIFO, byte deserializer, word aligner, and 8B/10B decoder

⁷ The 0.27 gigabits per second (Gbps) data rate is supported using oversampling user logic that must be implemented in the FPGA core.

PCS Support	Data Rates (Gbps)	Transmitter Datapath	Receiver Datapath
Common Public Radio Interface (CPRI)	0.6144, 1.2288, 2.4576, 3.072, 4.9152, 6.144, 9.8304 ⁸	The same as custom single- and double-width modes, plus the transmitter (TX) deterministic latency	The same as custom single- and double-width modes, plus the receiver (RX) deterministic latency
OBSAI	0.768, 1.536, 3.072, 6.144	The same as custom single- and double-width modes, plus the TX deterministic latency	The same as custom single- and double-width modes, plus the RX deterministic latency
Serial RapidIO [®] (SRIO)	1.25, 2.5, 3.125	The same as custom single- and double-width modes	The same as custom single- and double-width modes
XAUI	3.125	[need information]	[need information]
10GBASE-R	10.3125	[need information]	[need information]

Related Links


[Use this chapter along with the Altera Transceiver PHY IP Core User Guide.](#)

[Upcoming Arria V Device Features](#)

PCI Express

The Arria V devices have PCIe hard IP that is designed for performance, ease-of-use, and increased functionality. The hard IP consists of the media access control (MAC) lane, data link, and transaction layers. The PCIe hard IP supports the PCIe Gen1 end point and root port up to x8 lane configurations. The PCIe endpoint support includes multifunction support for up to eight functions and Gen2 x4 lane configurations.

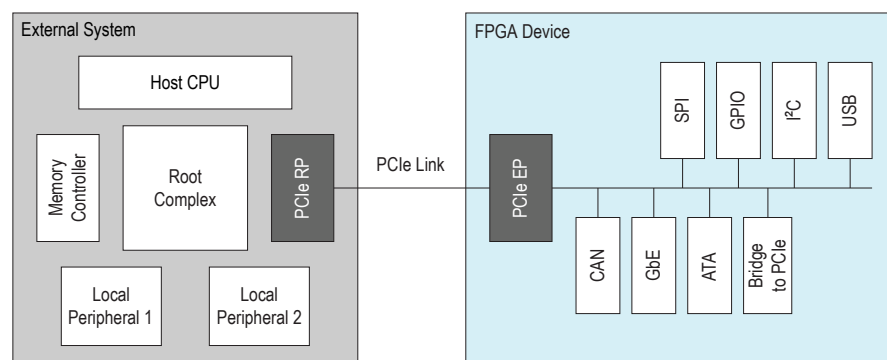Figure 4-1: PCIe Multifunction for Arria V Devices



⁸ For the 9.8304 Gbps CPRI implementation (supported with 10-Gbps channels only), there is no hard PCS. The PMA interfaces with the FPGA fabric directly, so you must implement the required PCS functionality in user logic (soft PCS).


The Arria V PCIe hard IP operates independently from the core logic, which allows the PCIe link to wake up and complete link training in less than 100 ms while the Arria V device completes loading the programming file for the rest of the device.

In addition, the Arria V device PCIe hard IP has improved end-to-end datapath protection using error correction code (ECC).

PIPE Transceiver Datapath

Figure 4-2: Transceivers in a PCIe Hard IP Configuration

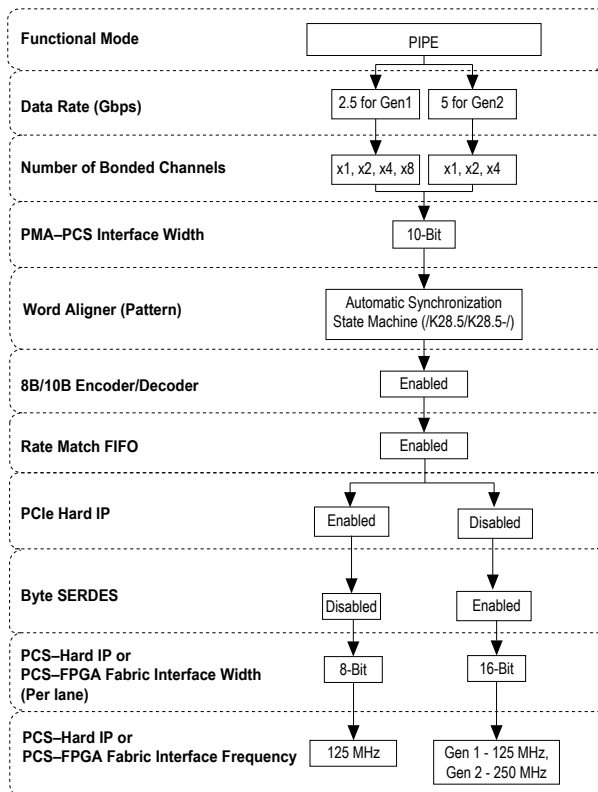
The PCIe Gen2 (up to x4) is supported only through the PCS-hard IP interface.



The transceiver datapath clocking varies between non-bonded (x1) and bonded (x2, x4, and x8) configurations.

Transceiver Channel Datapath

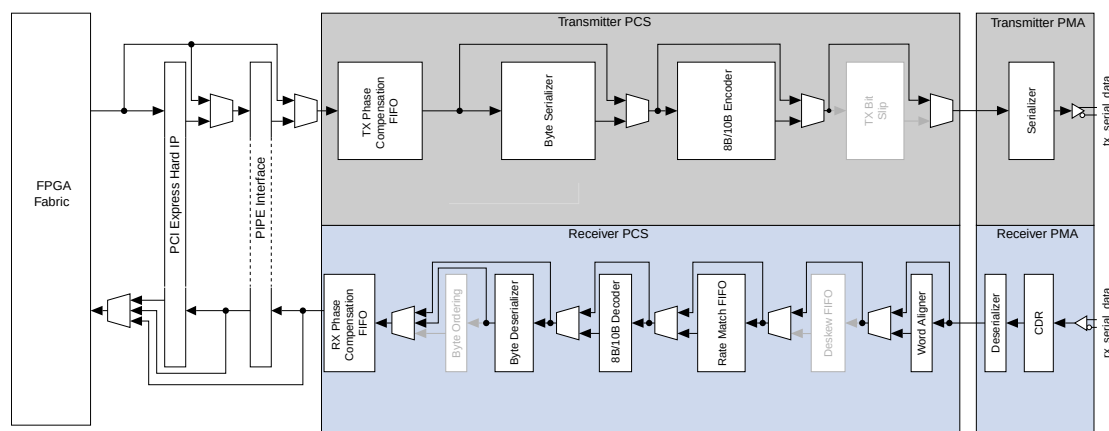Figure 4-3: Transceiver Channel Datapath in a PIPE Configuration



Related Links

[Transceiver Architecture in Arria V Devices](#)

PCIe Supported Features

The PIPE configuration for the 2.5 Gbps (Gen1) data rate supports these features:

- PCIe-compliant synchronization state machine
- ± 300 parts per million (ppm)—total 600 ppm—clock rate compensation
- 8-bit FPGA fabric–transceiver interface
- 16-bit FPGA fabric–transceiver interface
- Transmitter buffer electrical idle
- Receiver detection
- 8B/10B encoder disparity control when transmitting compliance pattern
- Power state management (Electrical Idle only)
- Receiver status encoding

PIPE Interface

In a PIPE configuration, each channel has a PIPE interface block that transfers data, control, and status signals between the PHY-MAC layer and the transceiver channel PCS and PMA blocks.

The PIPE interface block complies with version 2.0 of the PIPE specification. If you use the PIPE hard IP block, the PHY-MAC layer is implemented in the hard IP block. Otherwise, you can implement the PHY-MAC layer using soft IP in the FPGA fabric.

If you use the PIPE hard IP block, the PHY-MAC layer is implemented in the hard IP block. Otherwise, you can implement the PHY-MAC layer using soft IP in the FPGA fabric, which will be supported in future versions of the Quartus II software.

Note: The PIPE interface block is used in a PIPE configuration and cannot be bypassed.

In addition to transferring data, control, and status signals between the PHY-MAC layer and the transceiver, the PIPE interface block implements the following functions that are required in a PCIe-compliant physical layer device:

- Forces the transmitter buffer into an electrical idle state
- Initiates the receiver detect sequence
- Controls the 8B/10B encoder disparity when transmitting a compliance pattern
- Manages the PCIe power states (Electrical Idle only)
- Indicates the completion of various PHY functions, such as receiver detection and power state transitions on the pipe_phystatus signal
- Encodes the receiver status and error conditions on the pipe_rxstatus[2:0] signal, as specified in the PCIe specification

Transmitter Electrical Idle Generation

The PIPE interface block places the channel transmitter buffer in an electrical idle state when the electrical idle input signal is asserted.

During electrical idle, the transmitter buffer differential and common configuration output voltage levels are compliant to the PCIe Base Specification 2.0 for the PCIe Gen1 data rate.

The PCIe specification requires that the transmitter buffer be placed in electrical idle in certain power states.

Power State Management

The PCIe specification defines four power states: P0, P0s, P1, and P2.

The physical layer device must support these power states to minimize power consumption:

- P0 is the normal operating state during which packet data is transferred on the PCIe link.
- P0s, P1, and P2 are low-power states into which the physical layer must transition as directed by the PHY-MAC layer to minimize power consumption.

The PIPE interface in the transceivers provides an input port for each transceiver channel configured in a PIPE configuration.

Note: When transitioning from the P0 power state to lower power states (P0s, P1, and P2), the PCIe specification requires that the physical layer device implements power saving measures. The transceivers do not implement these power saving measures except to place the transmitter buffer in electrical idle in the lower power states.

8B/10B Encoder Usage for Compliance Pattern Transmission Support

The PCIe transmitter transmits a compliance pattern when the Link Training and Status State Machine (LTSSM) enters a polling compliance substate. The polling compliance substate assesses if the transmitter is electrically compliant with the PCIe voltage and timing specifications.

Receiver Electrical Idle Inference

The PCIe protocol allows inferring the electrical idle condition at the receiver instead of detecting the electrical idle condition using analog circuitry.

In all PIPE configurations, each receiver channel PCS has an optional Electrical Idle Inference module designed to implement the electrical idle inference conditions specified in the PCIe Base Specification 2.0.

Receiver Status

The PCIe specification requires that the PHY encode the receiver status on a 3-bit status signal (pipe_rxstatus[2:0]).

This status signal is used by the PHY-MAC layer for its operation. The PIPE interface block receives the status signals from the transceiver channel PCS and PMA blocks, and encodes the status on the `pipe_rxstatus[2:0]` signal to the FPGA fabric. The encoding of the status signals on the `pipe_rxstatus[2:0]` signal is compliant with the PCIe specification.

Receiver Detection

The PIPE interface block in Arria V transceivers provides an input signal (`pipe_txdetectrx_loopback`) for the receiver detect operation that is required by the PCIe protocol during the detect substate of the LTSSM.

When the `pipe_txdetectrx_loopback` signal is asserted in the P1 power state, the PCIe interface block sends a command signal to the transmitter buffer in that channel to initiate a receiver detect sequence. In the P1 power state, the transmitter buffer must always be in the electrical idle state.

After receiving this command signal, the receiver detect circuitry creates a step voltage at the output of the transmitter buffer. If an active receiver that complies with the PCIe input impedance requirements is present at the far end, the time constant of the step voltage on the trace is higher than if the receiver is not present. The receiver detect circuitry monitors the time constant of the step signal that is seen on the trace to determine if a receiver was detected. The receiver detect circuitry monitor requires a 125-MHz clock for operation that you must drive on the `fixedclk` port.

Note: For the receiver detect circuitry to function reliably, the AC-coupling capacitor on the serial link and the receiver termination values used in your system must be compliant with the PCIe Base Specification 2.0.

The PCI Express PHY (PIPE) IP core provides a 1-bit PHY status (`pipe_phystatus`) and a 3-bit receiver status signal (`pipe_rxstatus[2:0]`) to indicate whether a receiver was detected or not, in accordance to the PIPE 2.0 specifications.

Clock Rate Compensation Up to ± 300 ppm

In compliance with the PCIe protocol, the receiver channels are equipped with a rate match FIFO to compensate for the small clock frequency differences of up to ± 300 ppm between the upstream transmitter and local receiver clocks.

Related Links

[Transceiver Architecture in Arria V Devices](#)

PCIe Reverse Parallel Loopback


The PCIe reverse parallel loopback is only available in the PCIe functional configuration for the Gen1 data rate. The received serial data passes through the receiver CDR, deserializer, word aligner, and rate matching FIFO buffer. It is then looped back to the transmitter serializer and transmitted out through the transmitter buffer. The received data is also available to the FPGA fabric through the port.

This loopback mode is compliant with the PCIe specification 2.0.

Arria V devices provide the `pipe_txdetectrx_loopback` input signal to enable this loopback mode. If the `pipe_txdetectrx_loopback` signal is asserted in the P1 power state, receiver detection is performed. If the signal is asserted in the P0 power state, reverse parallel loopback is performed.

Note: The PCIe reverse parallel loopback is the only loopback option that is supported in PIPE configurations.

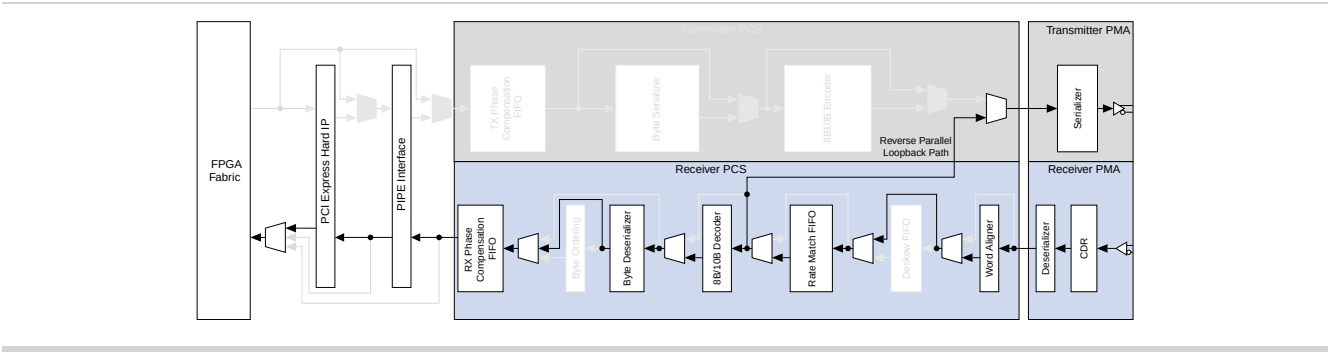Figure 4-4: PIPE Reverse Parallel Loopback Mode Datapath



PIPE Transceiver Channel Placement Guidelines

Table 4-2: PIPE Channel Placement for PCIe Gen1

Placement by the Quartus II software may vary with design, resulting in higher channel utilization.

Configuration	Data Channel Placement	Minimum Channel Utilization
x1	Any channel	2 (1 data channel, 1 clock channel)
x2	2 contiguous channels	3 (2 data channels, 1 clock channel)
x4	4 contiguous channels	5 (4 data channels, 1 clock channel)
x8	8 contiguous channels	9 (8 data channels, 1 clock channel)

Note: For more information about the hard IP implementation of PCIe and restrictions, refer to the “Transceiver Banks” section of the *Transceiver Architecture in Arria V Devices*.

The following three figures show examples of channel placement for PIPE x1, x2, x4, and x8 configurations.

Figure 4-5: Example of PIPE x1 Channel Placement

Channels shaded in blue provide the high-speed serial clock. Channels shaded in gray are data channels. You can place the PIPE data channels in any available channel in the transceiver bank.


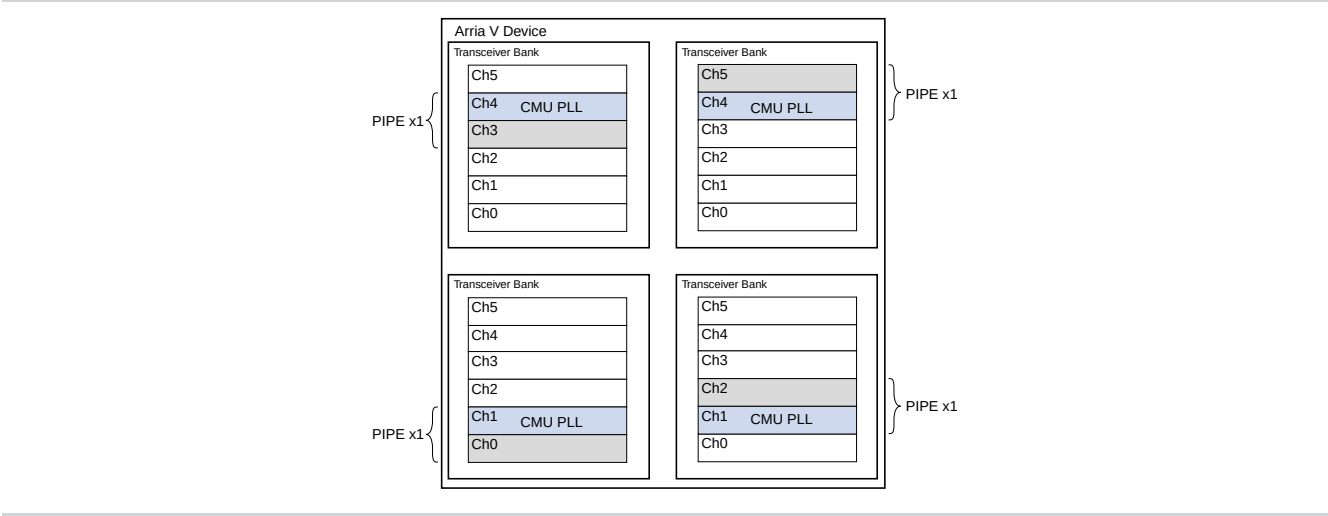
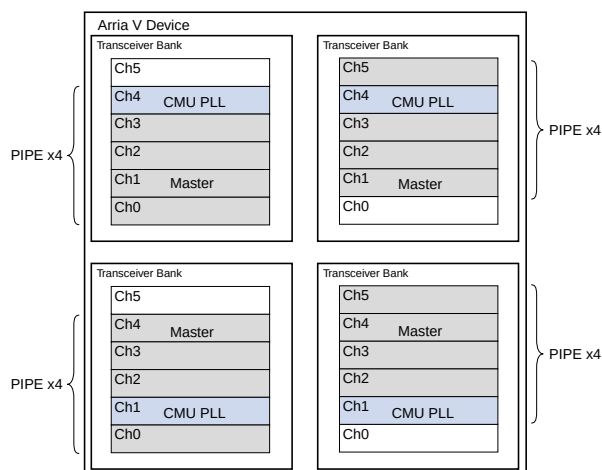


Figure 4-6: Example of PIPE x2 and x4 Channel Placement

The Quartus II software automatically places the clock generator and master in either channels 1 or 4 within a transceiver bank. The master is referring to the transceiver channel with the central clock divider. The x2 channel placement for the clock generator and master channel is the same as the x4 channel placement. The other channel for the x2 configuration can be placed in any of the channels shaded in gray.

**Figure 4-7: Example of PIPE x8 Channel Placement**

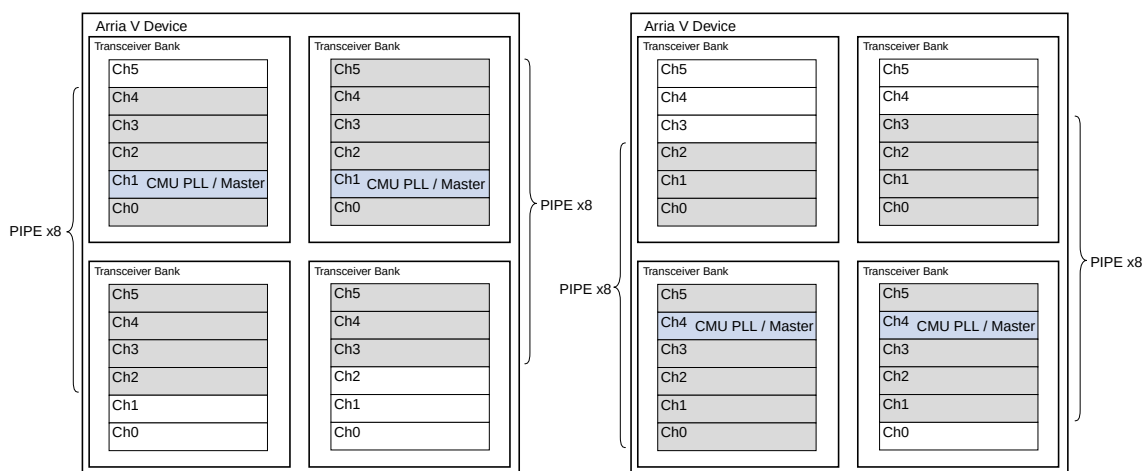Channels shaded in blue provide the high-speed serial clock. Channels shaded in gray are data channels.



PCIe Supported Configurations and Placement Guidelines

Placement by the Quartus II software may vary with design and device. The following figures show examples of transceiver channel and PCIe Hard IP block locations, supported x1 and x4 bonding configurations, and channel placement guidelines. The Quartus II software automatically places the CMU PLL in a channel different from that of the data channels.

Note: This section shows the supported PCIe channel placement if you use both the top and bottom PCIe Hard IP blocks in the device separately.

Channels shaded in blue provide the high-speed serial clock. Channels shaded in gray are data channels.

Figure 4-8: 12 Transceiver Channels and 2 PCIe HIP Blocks with PCIe x4 Channel Placement

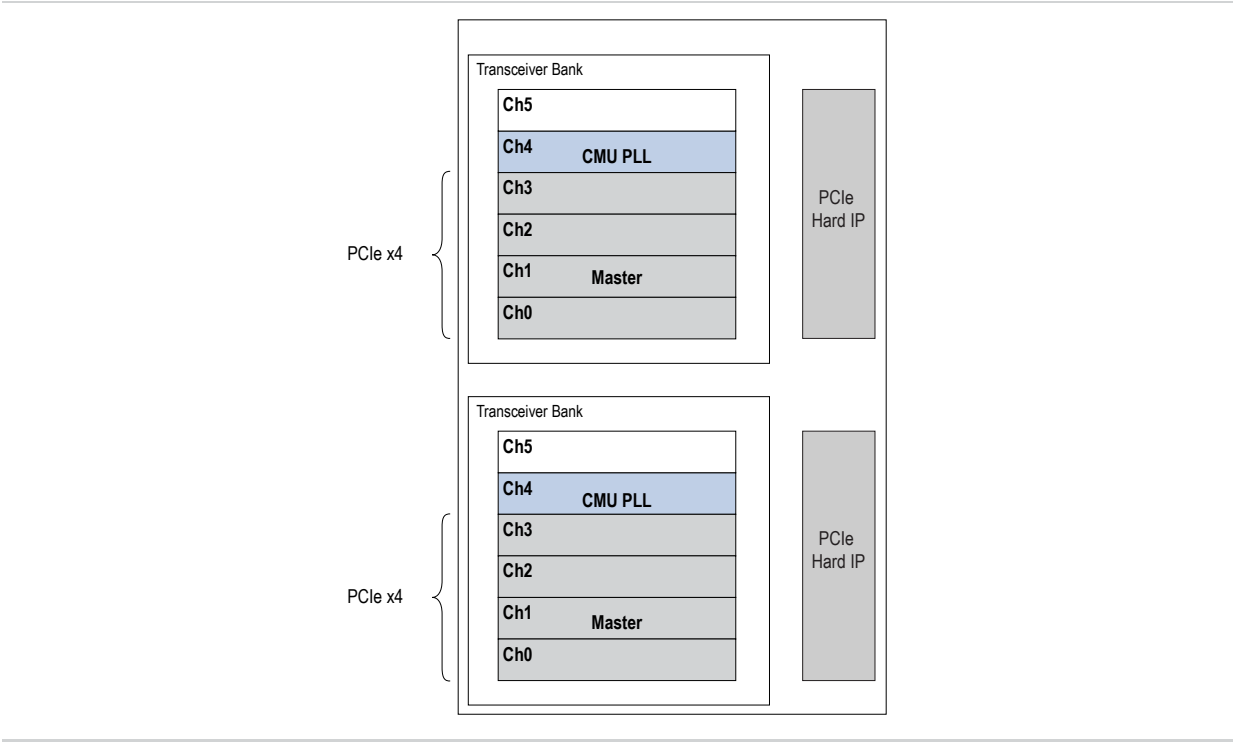


Figure 4-9: 12 Transceiver Channels and 2 PCIe HIP Blocks with PCIe x1 Channel Placement

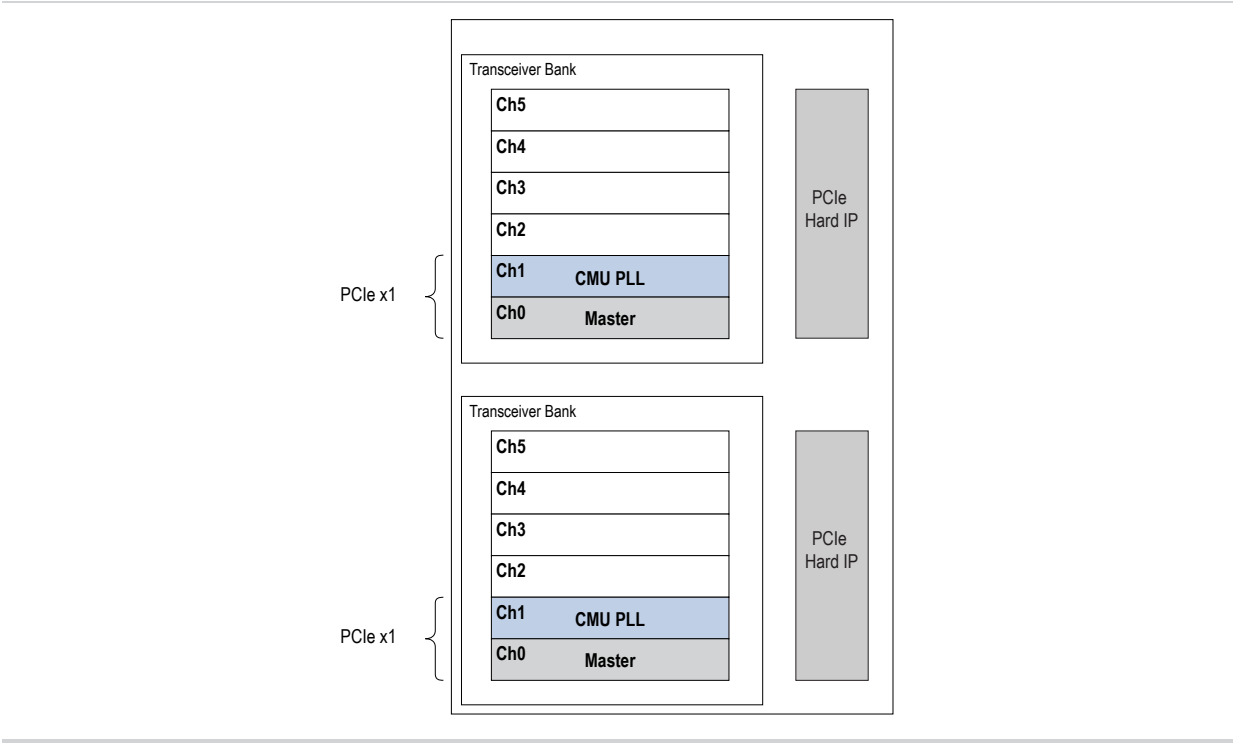


Figure 4-10: 9 Transceiver Channels and 2 PCIe HIP Blocks with PCIe x4 Channel Placement

The grayed out PCIe Hard IP block is not used in this example

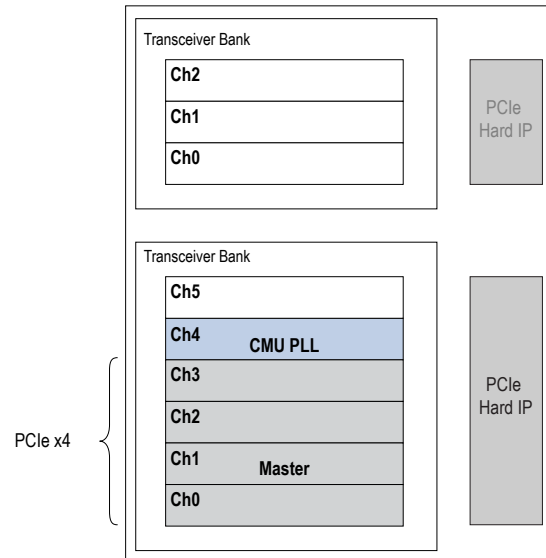
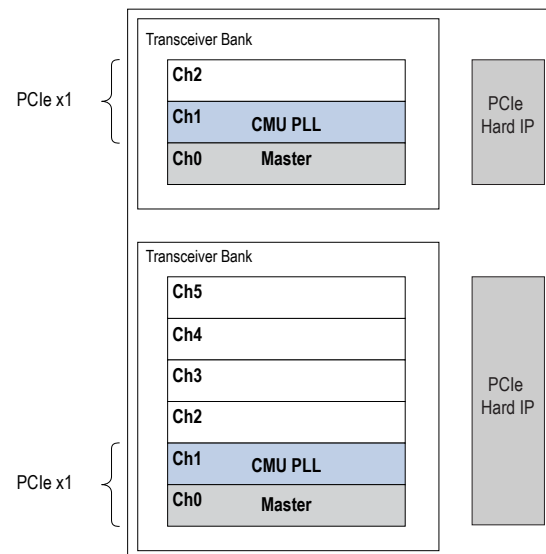
**Figure 4-11: 9 Transceiver Channels and 2 PCIe HIP Blocks with PCIe x1 Channel Placement**

Figure 4-12: 6 Transceiver Channels and 1 PCIe HIP Blocks with PCIe x4 Channel Placement

The grayed out PCIe Hard IP block is not used in this example.

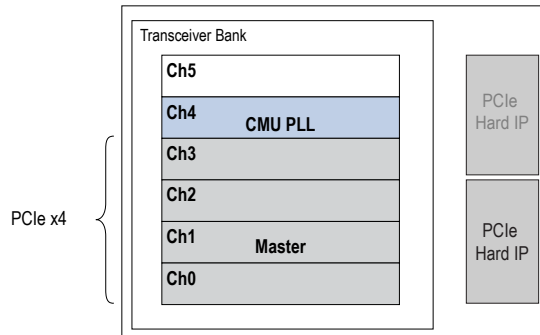


Figure 4-13: 6 Transceiver Channels and 2 PCIe HIP with PCIe x1 Channel Placement

The grayed out PCIe Hard IP block is not used in this example.


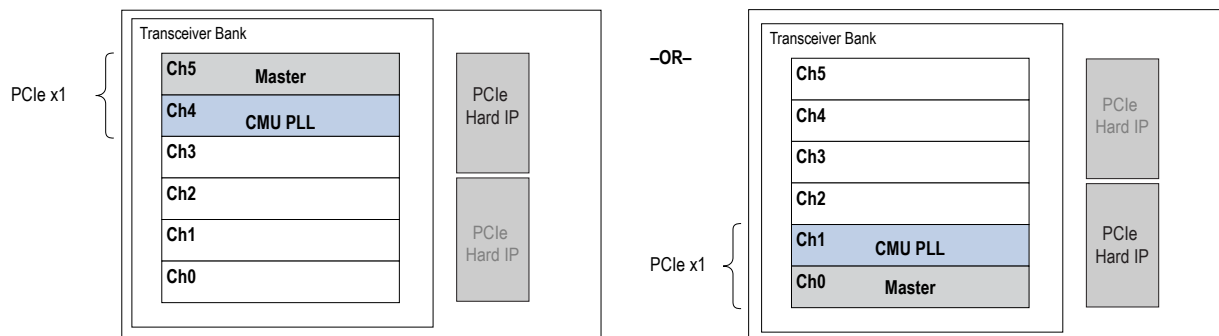


Figure 4-14: 3 Transceiver Channels and 1 PCIe HIP Blocks with PCIe x1 Channel Placement

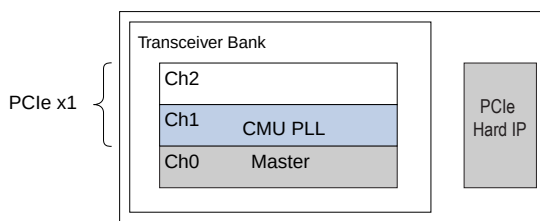

For PCIe Gen1 and Gen2, there are restrictions on the achievable x1 and x4 bonding configurations if you intend to use both top and bottom Hard IP blocks in the device.

Related Links

[Transceiver Architecture in Arria V Devices](#)


PIPE Transceiver Clocking

This section describes transceiver clocking for PIPE configurations.

PIPE x1 Configuration

The serial clock in the transceiver clocking configuration is provided by the CMU PLL in a channel different from that of the data channel. The local clock divider block in the data channel generates a parallel clock from this high-speed clock and distributes both clocks to the PMA and PCS of the data channel.

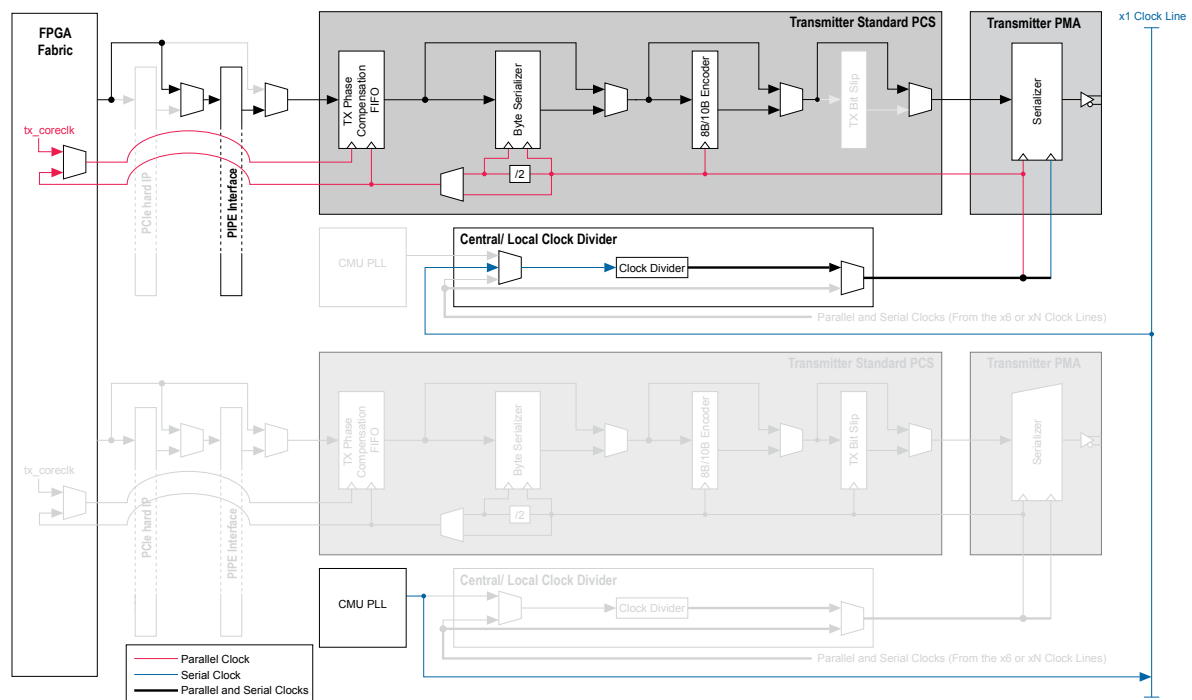Figure 4-15: Transceiver Clocking Configuration in a PIPE x1 Configuration




PIPE x4 Configuration

In a PIPE x4 bonded configuration, clocking is independent for the receiver channels. The clocking and control signals are bonded only for the transmitter channels.

The x2 channel placement for the clock generator (CMU PLL) and master channel is the same as the x4 channel placement. The other channel for the x2 configuration can be placed in either of the channels shaded in gray.

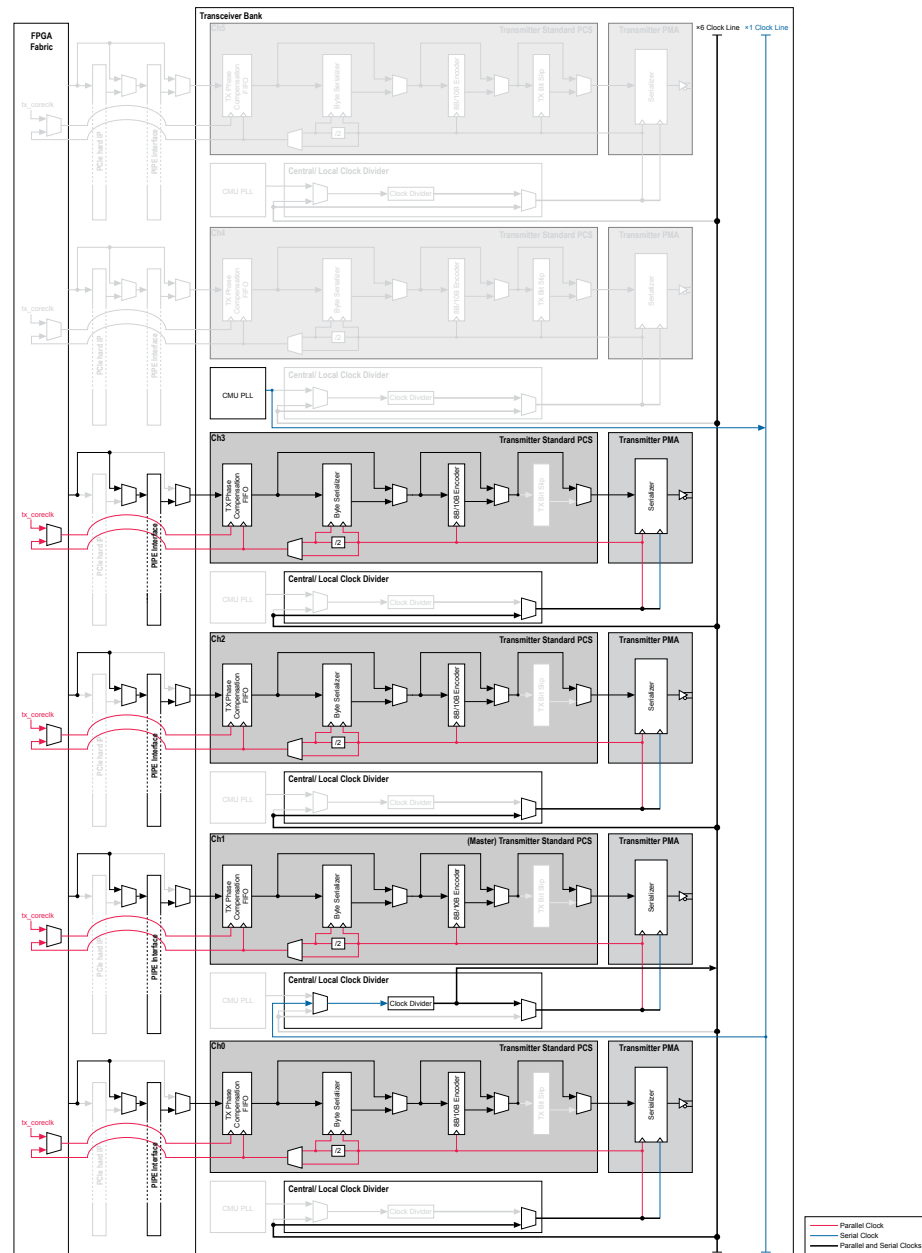Figure 4-16: Transceiver Clocking Configuration in a PIPE x4 Configuration




PIPE x8 Configuration

In a PIPE x8 bonded configuration, the clocking for the PMA and PCS blocks is independent for the receiver channels. The clocking and control signals are bonded only for the transmitter channels.

For more information about clocking in Arria V devices, refer to the [Transceiver Clocking in Arria V Devices](#) chapter.

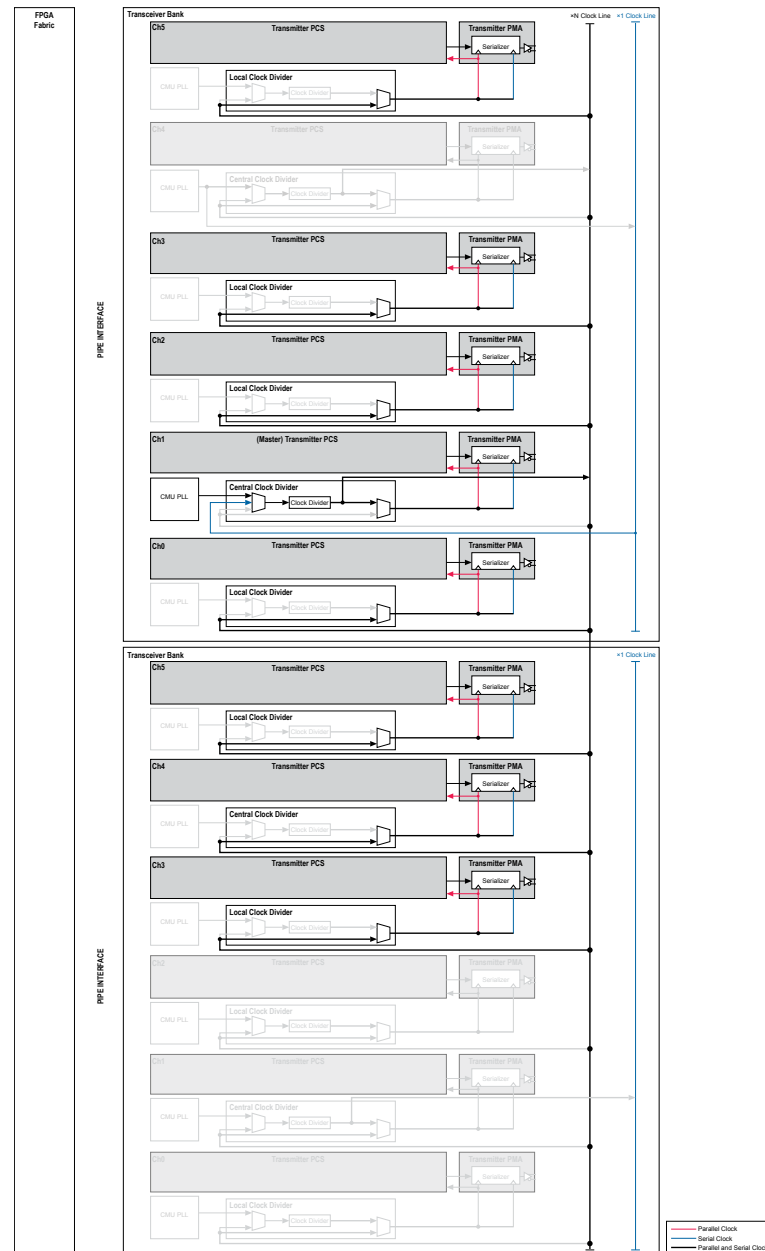Figure 4-17: Transceiver Clocking Configuration in a PIPE x8 Configuration


**Related Links**

["PCI Express PHY IP Core" chapter in the Altera Transceiver PHY IP Core User Guide](#)

Gigabit Ethernet

The IEEE 802.3 specification defines the 1000BASE-X PHY as an intermediate, or transition layer that interfaces various physical media with the MAC in a gigabit ethernet (GbE) system, shielding the MAC layer from the specific nature of the underlying medium. The 1000BASE-X PHY is divided into the PCS, PMA, and PMD sublayers.

The PCS sublayer interfaces with the MAC through the gigabit media independent interface (GMII). The 1000BASE-X PHY defines a physical interface data rate of 1 Gbps and 2.5 Gbps.

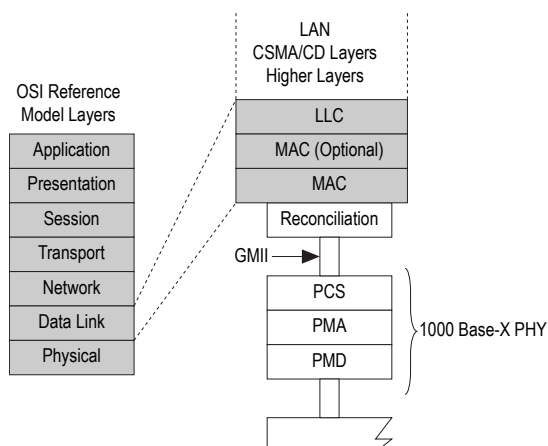Figure 4-18: 1000BASE-X PHY in a GbE OSI Reference Model

The transceivers, when configured in GbE functional mode, have built-in circuitry to support the following PCS and PMA functions, as defined in the IEEE 802.3 specification:

- 8B/10B encoding and decoding
- Synchronization
- Upstream transmitter and local receiver clock frequency compensation (rate matching)
- Clock recovery from the encoded data forwarded by the receiver PMD
- Serialization and deserialization

Note: The transceivers do not have built-in support for other PCS functions, such as the autonegotiation state machine, collision-detect, and carrier-sense functions. If you require these functions, implement them in the FPGA fabric or in external circuits.

Figure 4-19: Transceiver Blocks in a GbE Configuration

Functional Mode	GbE-1.25 Gbps	GbE-3.125 Gbps
PMA-PCS Interface Width	10 bit	10 bit
Data Rate (Gbps)	1.25	3.125
Number of Bonded Channels	x1	x1
Low Latency PCS	Disabled	Disabled
Word Aligner (Pattern Length)	Automatic Synchronization State Machine (7-bit Comma, 10-bit /K28.5/)	Automatic Synchronization State Machine (7-bit Comma, 10-bit /K28.5/)
8B/10B Encoder/Decoder	Enabled	Enabled
Rate Match FIFO	Enabled	Enabled
Byte SERDES	Disabled	Enabled
Byte Ordering	Disabled	Disabled
FPGA Fabric-Transceiver Interface Width	8-bit	16-bit
FPGA Fabric-Transceiver Interface Frequency (MHz)	125	156.25

Gigabit Ethernet Transceiver Datapath

Figure 4-20: Transceiver Datapath in GbE-1.25 Gbps Configuration

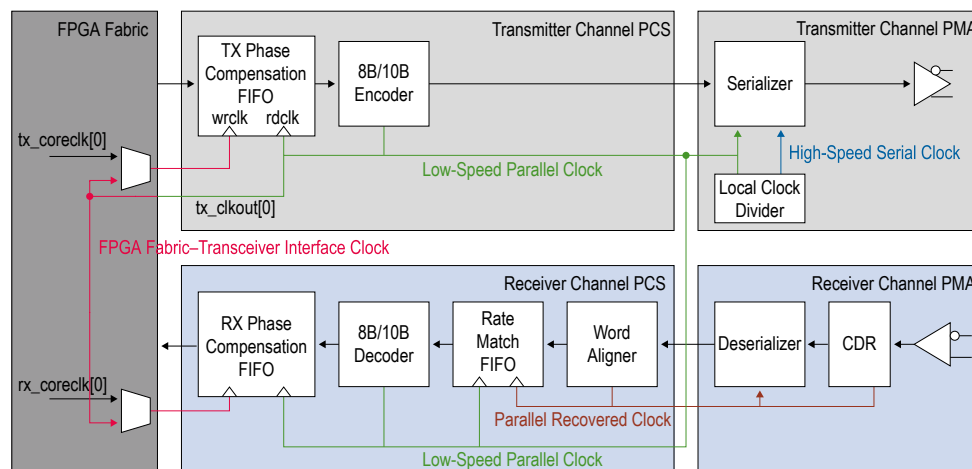


Figure 4-21: Transceiver Datapath in GbE-3.125 Gbps Configuration

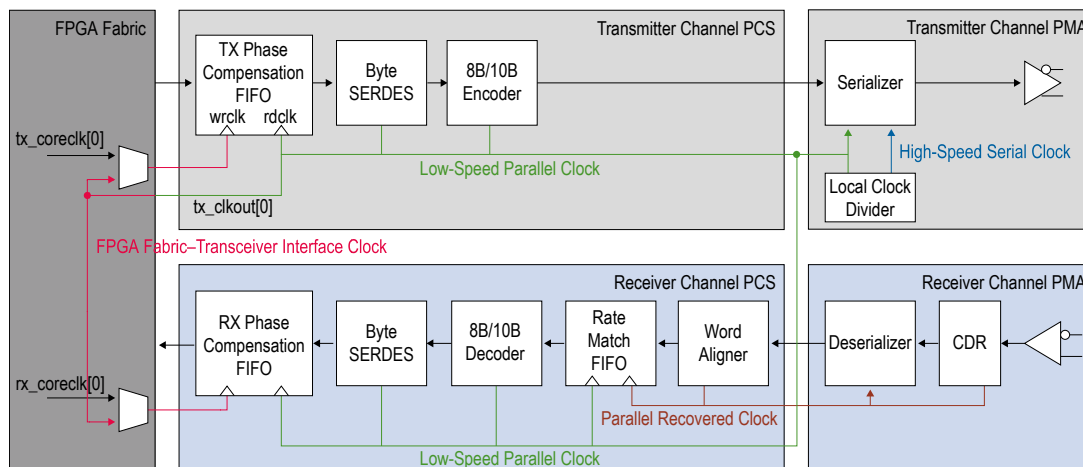


Table 4-3: Transceiver Datapath Clock Frequencies in GbE Configuration

Functional Mode	Data Rate	High-Speed Serial Clock Frequency	Parallel Recovered Clock and Low-Speed Parallel Clock Frequency	FPGA Fabric-Transceiver Interface Clock Frequency
GbE-1.25 Gbps	1.25 Gbps	625 MHz	125 MHz	125 MHz
GbE-3.125 Gbps	3.125 Gbps	1562.5 MHz	312.5 MHz	156.25 MHz

8B/10B Encoder

In GbE configuration, the 8B/10B encoder clocks in 8-bit data and 1-bit control identifiers from the transmitter phase compensation FIFO and generates 10-bit encoded data. The 10-bit encoded data is fed to the serializer.

For more information about the 8B/10B encoder functionality, refer to the [Transceiver Architecture for Arria V Devices](#) chapter.

Rate Match FIFO

In GbE configuration, the rate match FIFO is capable of compensating for up to ± 100 ppm (200 ppm total) difference between the upstream transmitter and the local receiver reference clock. The GbE protocol requires that the transmitter send idle ordered sets /I1/ (/K28.5/D5.6/) and /I2/ (/K28.5/D16.2/) during interpacket gaps, adhering to the rules listed in the IEEE 802.3 specification.

The rate match operation begins after the synchronization state machine in the word aligner indicates that the synchronization is acquired-by driving the `rx_syncstatus` signal high. The rate matcher deletes or inserts both symbols (/K28.5/ and /D16.2/) of the /I2/ ordered sets, even if it requires deleting only one symbol to prevent the rate match FIFO from overflowing or underrunning. The rate matcher can insert or delete as many /I2/ ordered sets as necessary to perform the rate match operation.

Two flags are forwarded to the FPGA fabric:

- `rx_rmifodatadeleted` - Asserted for two clock cycles for each deleted /I2/ ordered set to indicate the rate match FIFO deletion event
- `rx_rmifodatainserted` - Asserted for two clock cycles for each inserted /I2/ ordered set to indicate the rate match FIFO insertion event

For more information about the rate match FIFO, refer to the [Transceiver Architecture for Arria V Devices](#) chapter.

GbE Protocol-Ordered Sets and Special Code Groups

Table 4-4: GIGE Ordered Sets

The following ordered sets and special code groups are specified in the IEEE 802.3-2008 specification.

Code	Ordered Set	Number of Code Groups	Encoding
/C/	Configuration	—	Alternating /C1/ and /C2/
/C1/	Configuration 1	4	/K28.5/D21.5/ Config_Reg
/C2/	Configuration 2	4	/K28.5/D2.2/ Config_Reg
/I/	IDLE	—	Correcting /I1/ Preserving /I2/
/I1/	IDLE 1	2	/K28.5/D5.6/
/I2/	IDLE 2	2	/K28.5/D16.2/
-	Encapsulation	—	—
/R/	Carrier_Extend	1	/K23.7/
/S/	Start_of_Packet	1	/K27.7/
/T/	End_of_Packet	1	/K29.7/
/V/	Error_Propagation	1	/K30.7/


Table 4-5: Synchronization State Machine Parameters in GbE Mode

Synchronization State Machine Parameters	Setting
Number of valid {/K28.5/, /Dx,y/} ordered sets received to achieve synchronization	3
Number of errors received to lose synchronization	4
Number of continuous good code groups received to reduce the error count by 1	4

⁹ Two data code groups represent the Config_Reg value.

Figure 4-22: Synchronization State Machine in GbE Mode

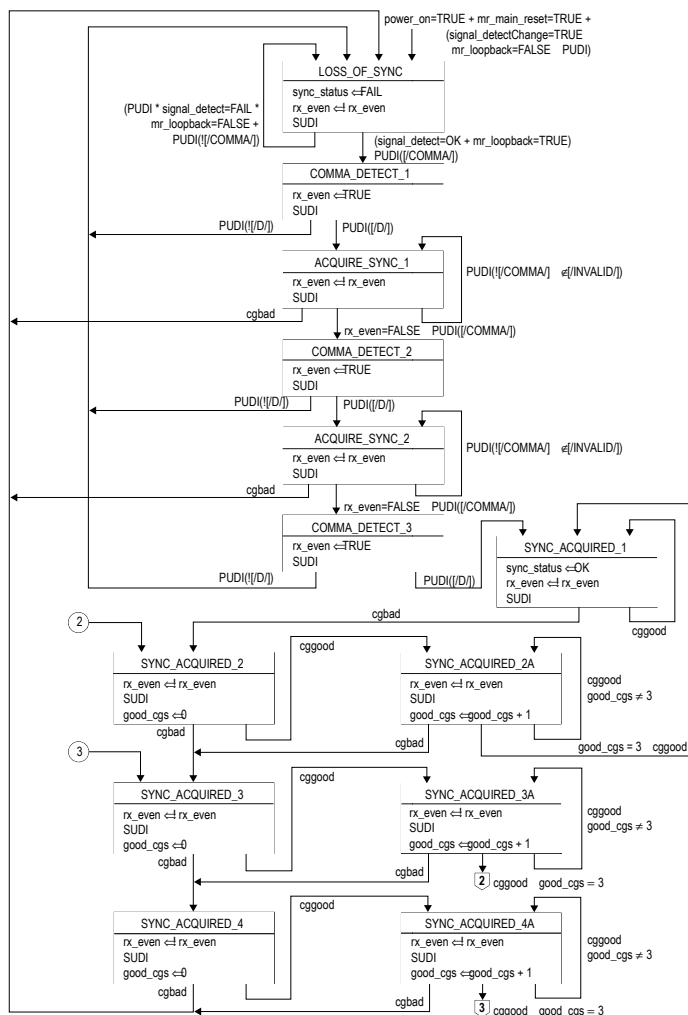This figure is from “Figure 36–9” in the IEEE 802.3-2008 specification. For more details about the 1000BASE-X implementation, refer to Clause 36 of the IEEE 802.3-2008 specification.



Related Links


Refer to the *"Custom PHY IP Core"* and *"Native PHY IP Core"* chapters in the *Altera Transceiver PHY IP Core User Guide*

XAUI

With the MegaWizard Plug-In Manager, you can implement a XAUI link. Under Ethernet in the Interfaces menu, select the XAUI PHY IP core. The XAUI PHY IP core implements the XAUI PCS in soft logic.

XAUI is a specific physical layer implementation of the 10 Gigabit Ethernet link defined in the IEEE 802.3ae-2002 specification. As shown in Figure 4–26, the XAUI PHY uses the XGMII interface to connect to the IEEE802.3 MAC and Reconciliation Sublayer (RS). The IEEE 802.3ae-2002 specification requires the XAUI PHY link to support a 10 Gbps data rate at the XGMII interface and four lanes each at 3.125 Gbps at the PMD interface.

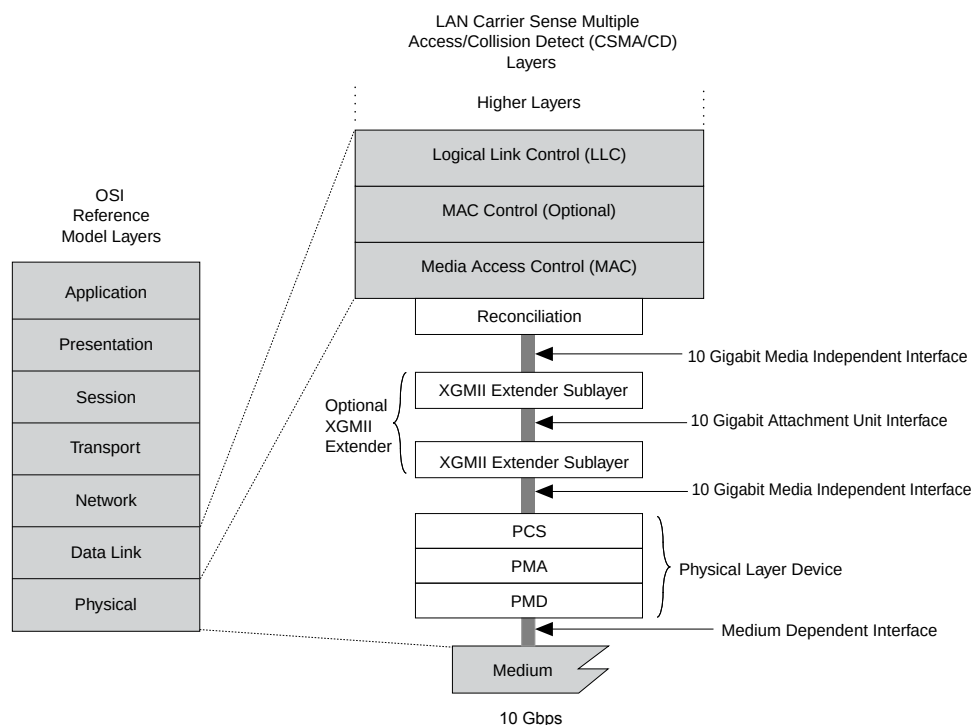Figure 4-23: XAUI and XGMII Layers


**Related Links**

Refer to the "XAUI PHY IP Core" chapter in the Altera Transceiver PHY IP Core User Guide.

Transceiver Datapath in a XAUI Configuration

The XAUI PCS is implemented in soft logic inside the FPGA core when using the XAUI PHY IP core. You must ensure that your channel placement is compatible with the soft PCS implementation.

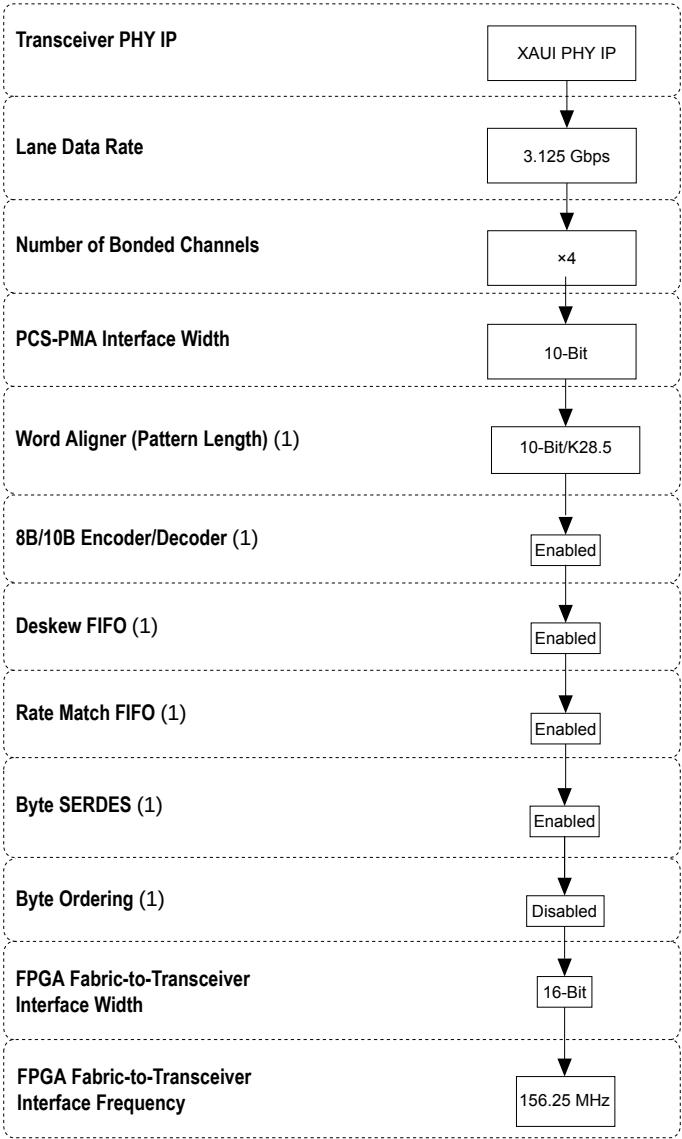
Figure 4-24: XAUI Configuration Datapath



(1) Implemented in soft logic.

Figure 4-25: Transceiver Channel Datapath for XAUI Configuration

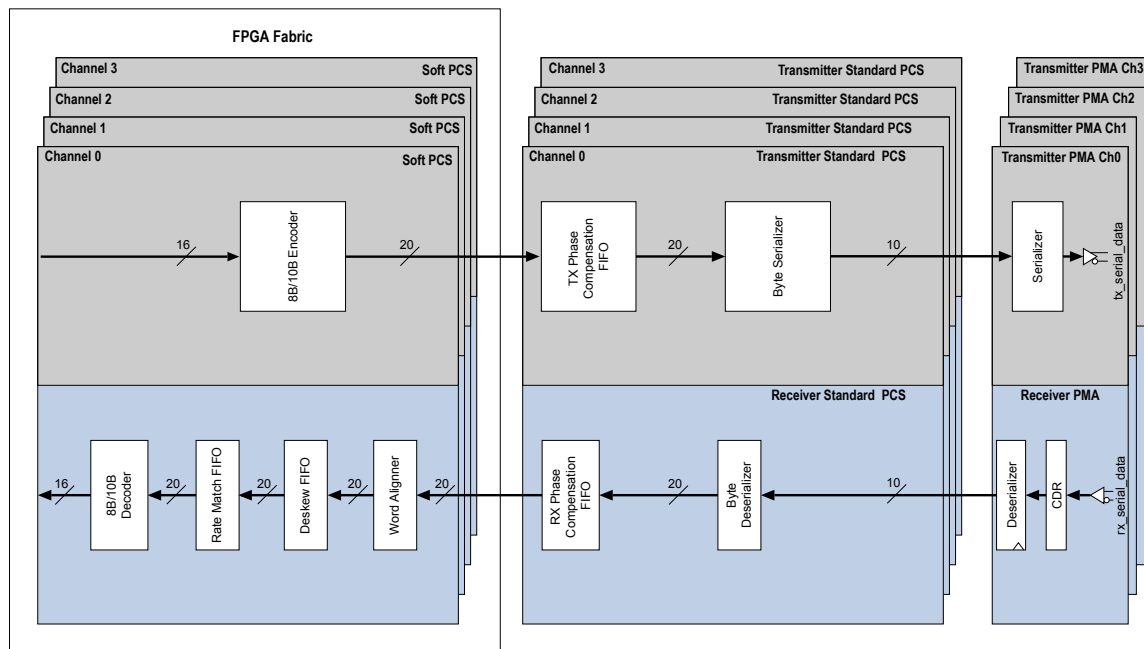Standard PCS in a low latency configuration is used in this configuration. Additionally, a portion of the PCS is implemented in soft logic.




XAUI Supported Features

64-Bit SDR Interface to the MAC/RS

Clause 46 of the IEEE 802.3-2008 specification defines the XGMII interface between the XAUI PCS and the Ethernet MAC/RS. The specification requires each of the four XAUI lanes to transfer 8-bit data and 1-bit wide control code at both the positive and negative edge (DDR) of the 156.25 MHz interface clock.

Transceivers in a XAUI configuration do not support the XGMII interface to the MAC/RS as defined in IEEE 802.3-2008 specification. Instead, they allow the transferring of 16-bit data and 2-bit control code on each of the four XAUI lanes, only at the positive edge (SDR) of the 156.25 MHz interface clock

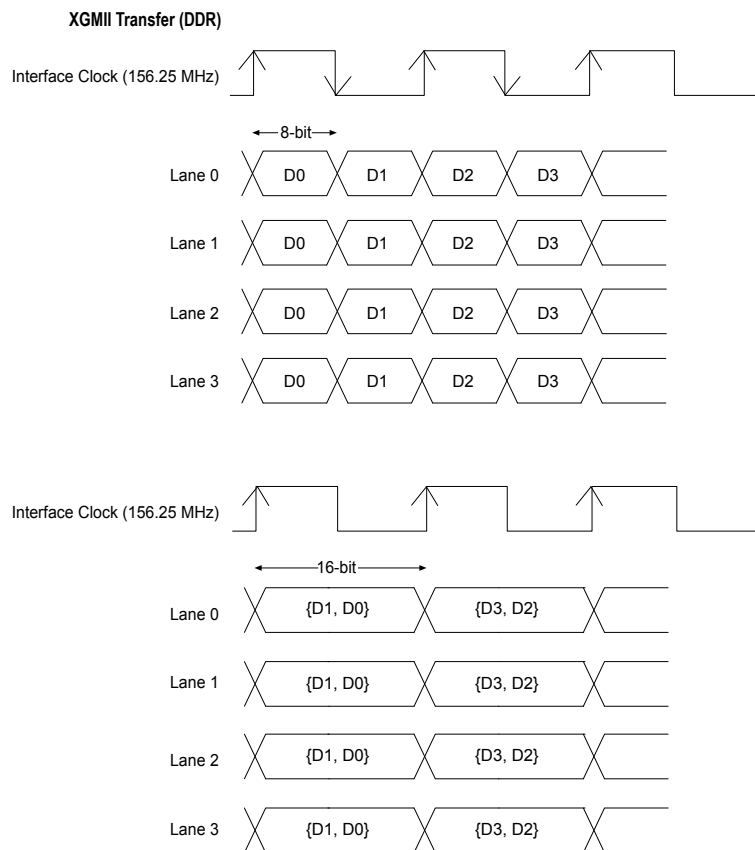Figure 4-26: Implementation of the XGMII Specification in XAUI Configuration

8B/10B Encoding/Decoding

Each of the four lanes in a XAUI configuration support an independent 8B/10B encoder/decoder as specified in Clause 48 of the IEEE802.3-2008 specification. 8B/10B encoding limits the maximum number of consecutive 1s and 0s in the serial data stream to five, thereby ensuring DC balance as well as enough transitions for the receiver CDR to maintain a lock to the incoming data.

The XAUI PHY IP core provides status signals to indicate running disparity as well as the 8B/10B code group error.

Transmitter and Receiver State Machines

In a XAUI configuration, the transceivers implement the transmitter and receiver state diagrams shown in Figure 48-6 and Figure 48-9 of the IEEE802.3-2008 specification.

In addition to encoding the XGMII data to PCS code groups, in conformance with the 10GBASE-X PCS, the transmitter state diagram performs functions such as converting Idle $||I||$ ordered sets into Sync $||K||$, Align $||A||$, and Skip $||R||$ ordered sets.

In addition to decoding the PCS code groups to XGMII data, in conformance with the 10GBASE-X PCS, the receiver state diagram performs functions such as converting Sync $||K||$, Align $||A||$, and Skip $||R||$ ordered sets to Idle $||I||$ ordered sets.

Synchronization

The word aligner block in the receiver PCS of each of the four XAUI lanes implements the receiver synchronization state diagram shown in Figure 48-7 of the IEEE802.3-2008 specification.

The XAUI PHY IP core provides a status signal per lane to indicate if the word aligner is synchronized to a valid word boundary.

Deskew

The lane aligner block in the receiver PCS implements the receiver deskew state diagram shown in Figure 48-8 of the IEEE 802.3-2008 specification.

The lane aligner starts the deskew process only after the word aligner block in each of the four XAUI lanes indicates successful synchronization to a valid word boundary.

The XAUI PHY IP core provides a status signal to indicate successful lane deskew in the receiver PCS.

Clock Compensation

The rate match FIFO in the receiver PCS datapath compensates up to ± 100 ppm difference between the remote transmitter and the local receiver. It does so by inserting and deleting Skip $||R||$ columns, depending on the ppm difference.

The clock compensation operation begins after:

- The word aligner in all four XAUI lanes indicates successful synchronization to a valid word boundary.
- The lane aligner indicates a successful lane deskew.

The rate match FIFO provides status signals to indicate the insertion and deletion of the Skip $||R||$ column for clock rate compensation.

Transceiver Clocking and Channel Placement Guidelines in XAUI Configuration

Transceiver Clocking

Figure 4-27: Transceiver Clocking for XAUI Configuration

One of the two channel PLLs configured as a CMU PLL in a transceiver bank generates the transmitter serial and parallel clocks for the four XAUI channels. The x6 clock line carries the transmitter clocks to the PMA and PCS of each of the four channels.

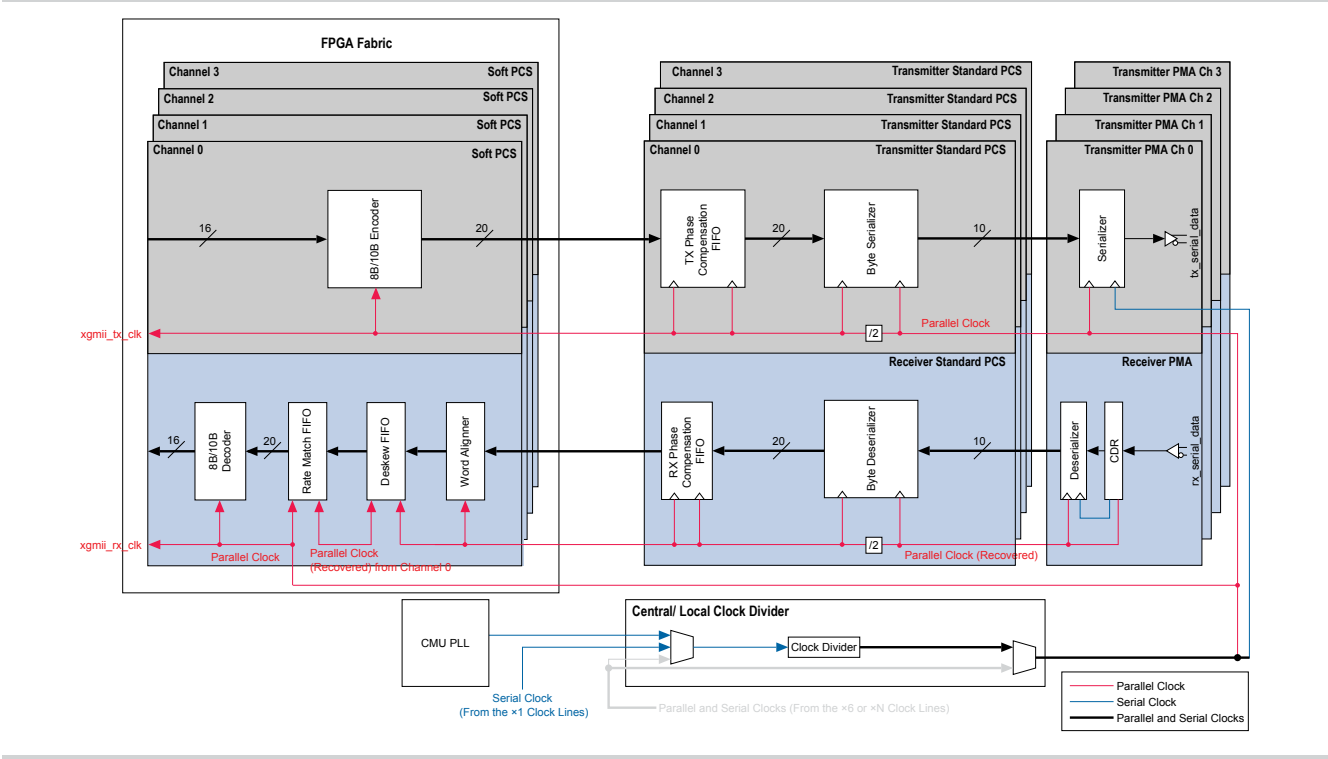


Table 4-6: Input Reference Clock Frequency and Interface Speed Specifications for XAUI Configurations


Input Reference Clock Frequency (MHz)	FPGA Fabric-Transceiver Interface Width	FPGA Fabric-Transceiver Interface Frequency (MHz)
156.25	16-bit data, 2-bit control	156.25

Transceiver Channel Placement Guidelines

In the soft PCS implementation of the XAUI configuration, all four channels must be placed continuously. The channels may all be placed in one bank or they may span two banks.

Figure 4-28: Transceiver Channel Placement Guidelines in a XAUI Configuration

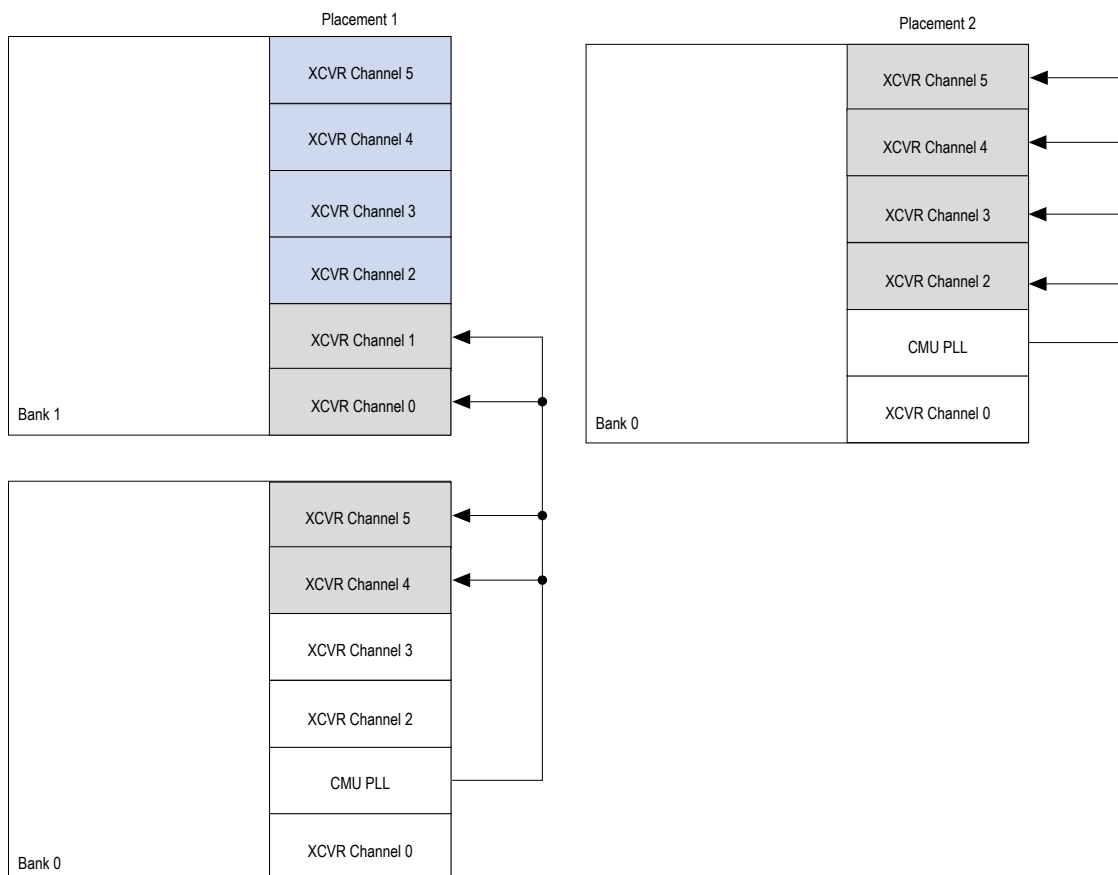Use one of the two allowed channel placements when using either the CMU PLL to drive the XAUI link. The Quartus II software implements the XAUI PCS in soft logic.


**Related Links**

To implement the QSF assignment workaround using the Assignment Editor, refer to the "XAUI PHY IP Core" chapter in the Altera Transceiver PHY IP Core User Guide.

10GBASE-R

10GBASE-R is a specific physical layer implementation of the 10 Gigabit Ethernet link defined in clause 49 of the IEEE 802.3-2008 specification. The 10GBASE-R PHY uses the XGMII interface to connect to the IEEE802.3 media access control (MAC) and reconciliation sublayer (RS). The IEEE 802.3-2008 specification requires each 10GBASE-R link to support a 10 Gbps data rate at the XGMII interface and a 10.3125 Gbps serial line rate with 64B/66B encoding.

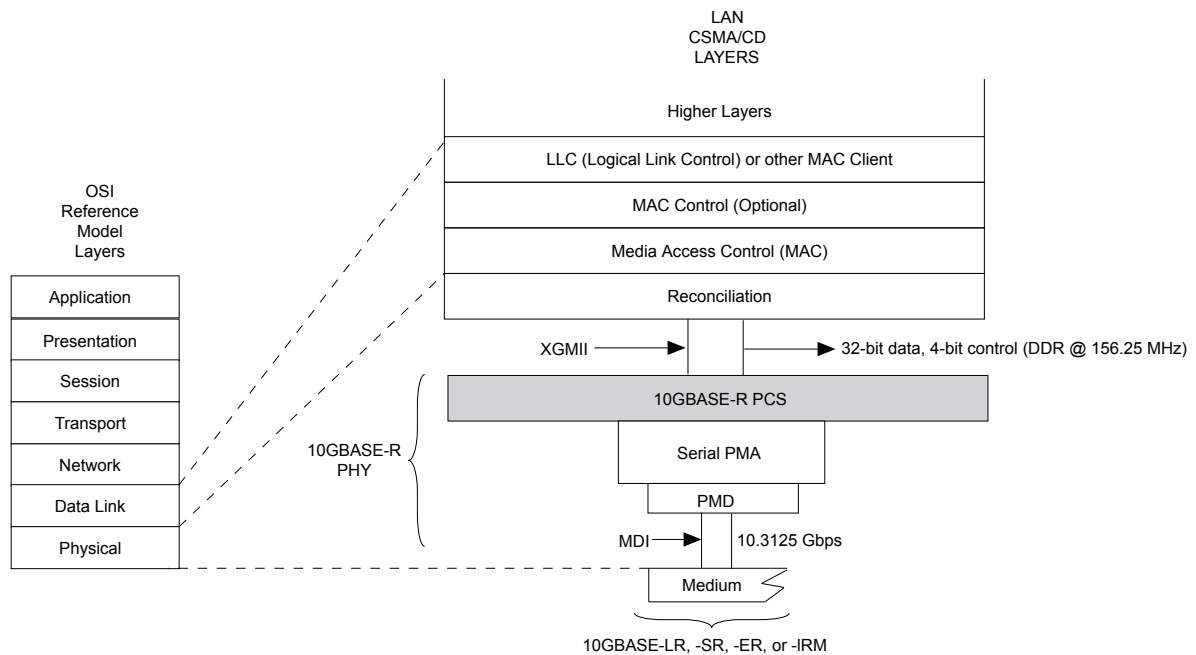Figure 4-29: 10GBASE-R PHY Connection to IEEE802.3 MAC and RS



In the MegaWizard™ Plug-In Manager, you can implement a 10GBASE-R link by instantiating the 10GBASE-R PHY IP core under Ethernet in the Interfaces menu.

Related Links

Refer to the 10GBASE-R PHY IP Core chapter in the Altera Transceiver PHY IP Core User Guide.

10GBASE-R Transceiver Datapath Configuration

Figure 4-30: 10GBASE-R Datapath Configuration

The blocks shown as “Disabled” are not used, but incur latency. The blocks shown as “Bypassed” are not used and do not incur latency.


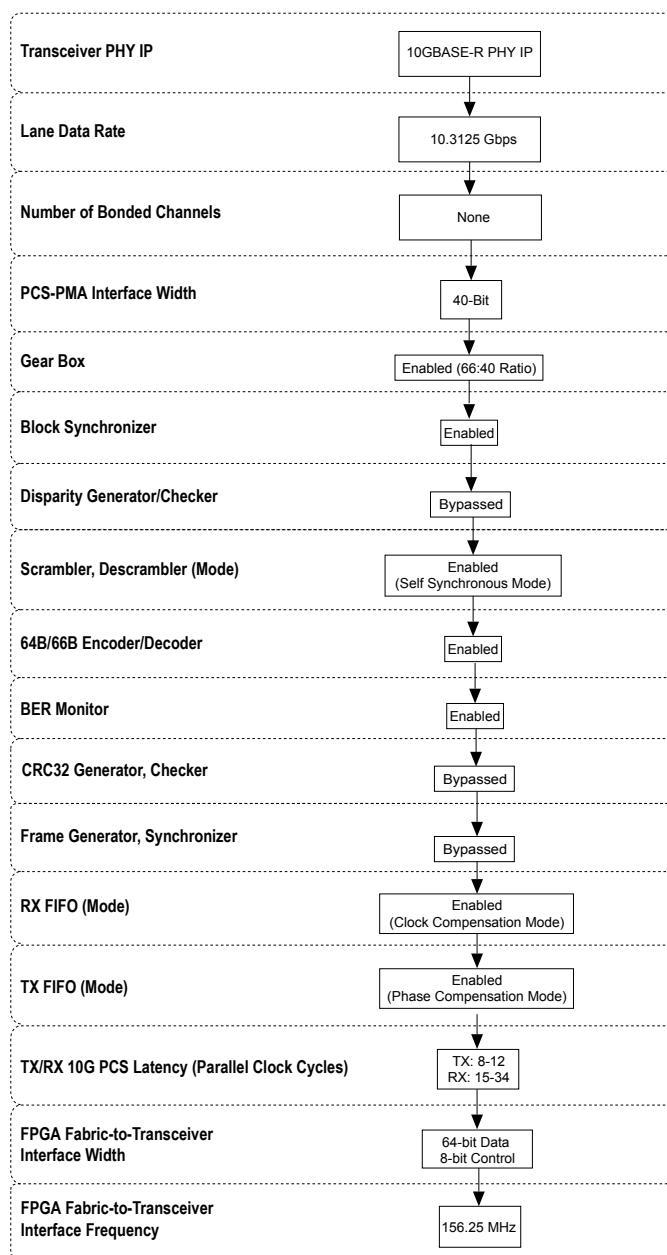


Figure 4-31: Transceiver Channel Datapath for a 10GBASE-R Configuration

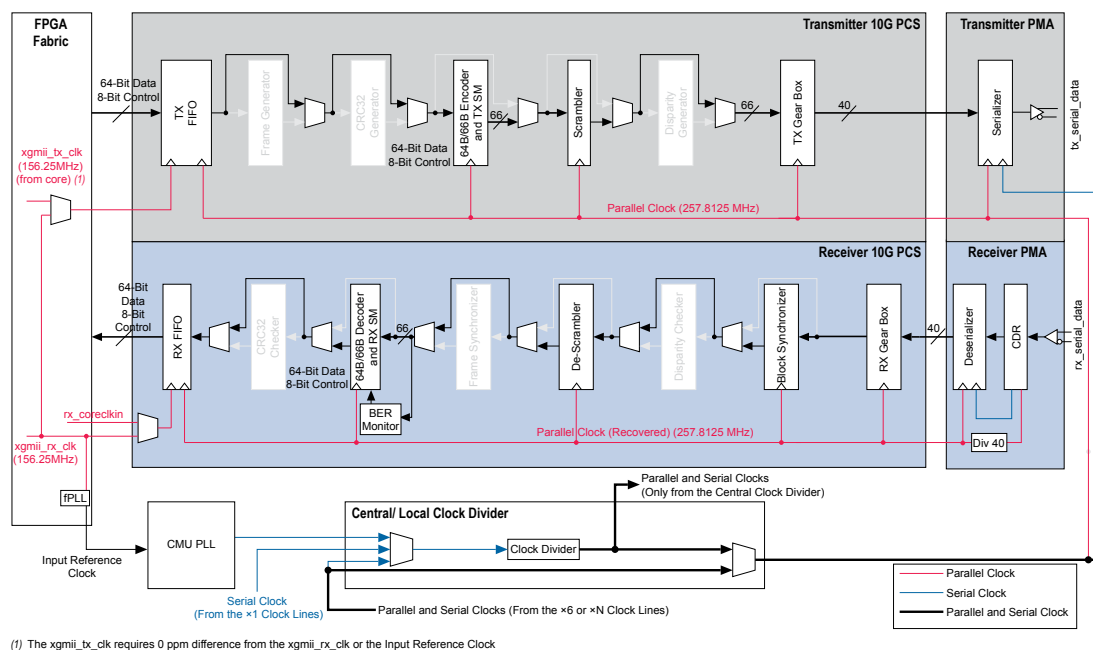The x1 clock line can be driven by either the ATX or CMU PLL.




10GBASE-R Supported Features

64-Bit Single Data Rate (SDR) Interface to the MAC/RS

Clause 46 of the IEEE 802.3-2008 specification defines the XGMII interface between the 10GBASE-R PCS and the Ethernet MAC/RS. The XGMII interface defines the 32-bit data and 4-bit wide control character clocked between the MAC/RS and the PCS at both the positive and negative edge (double data rate – DDR) of the 156.25 MHz interface clock.

Arria V transceivers do not support the XGMII interface to the MAC/RS as defined in the IEEE 802.3-2008 specification. Instead, they support a 64-bit data and 8-bit control SDR interface between the MAC/RS and the PCS.

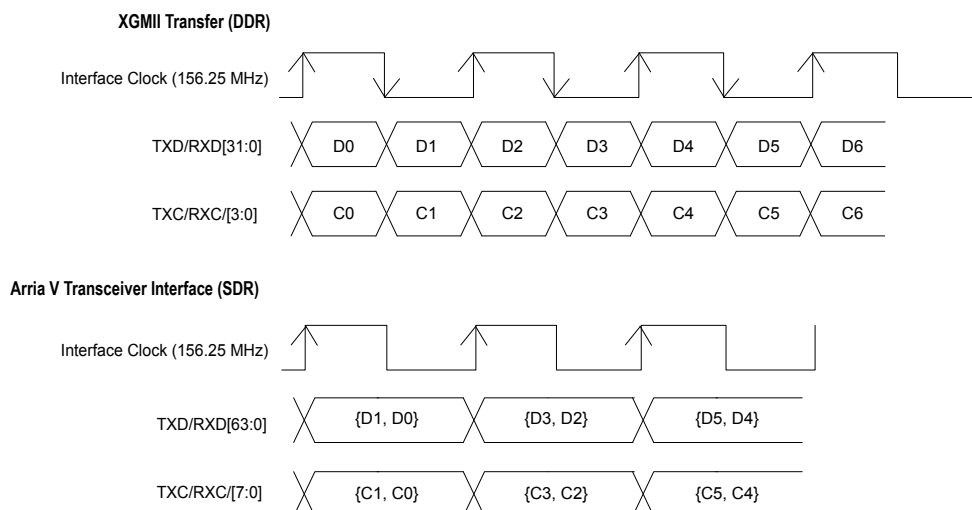Figure 4-32: XGMII Interface (DDR) versus Arria V Transceiver Interface (SDR) for 10GBASE-R



64B/66B Encoding/Decoding

Arria V transceivers in a 10GBASE-R configuration support 64B/66B encoding and decoding as specified in Clause 49 of the IEEE802.3-2008 specification. The 64B/66B encoder receives 64-bit data and 8-bit control code from the transmitter FIFO and converts it into 66-bit encoded data. The 66-bit encoded data contains two overhead sync header bits that the receiver PCS uses for block synchronization and bit-error rate (BER) monitoring.

The 64B/66B encoding also ensures enough transitions on the serial data stream for the receiver clock data recovery (CDR) to maintain its lock on the incoming data.

Transmitter and Receiver State Machines

Arria V transceivers in a 10GBASE-R configuration implement the transmitter and receiver state diagrams shown in Figure 49-14 and Figure 49-15 of the IEEE802.3-2008 specification.

Besides encoding the raw data specified in the 10GBASE-R PCS, the transmitter state diagram performs functions such as transmitting local faults (LBLOCK_T) under reset, as well as transmitting error codes (EBLOCK_T) when the 10GBASE-R PCS rules are violated.

Besides decoding the incoming data specified in the 10GBASE-R PCS, the receiver state diagram performs functions such as sending local faults (LBLOCK_R) to the MAC/RS under reset and substituting error codes (EBLOCK_R) when the 10GBASE-R PCS rules are violated.

Block Synchronizer

The block synchronizer in the receiver PCS determines when the receiver has obtained lock to the received data stream. It implements the lock state diagram shown in Figure 49-12 of the IEEE 802.3-2008 specification.

The block synchronizer provides a status signal to indicate whether it has achieved block synchronization or not.

Self-Synchronous Scrambling/Descrambling

The scrambler/descrambler blocks in the transmitter/receiver PCS implements the self-synchronizing scrambler/descrambler polynomial $1 + x^{39} + x^{58}$, as described in clause 49 of the IEEE 802.3-2008 specification. The scrambler/descrambler blocks are self-synchronizing and do not require an initialization seed. Barring the two sync header bits in each 66-bit data block, the entire payload is scrambled or descrambled.

BER Monitor

The BER monitor block in the receiver PCS implements the BER monitor state diagram shown in Figure 49-13 of the IEEE 802.3-2008 specification. The BER monitor provides a status signal to the MAC whenever the link BER threshold is violated.

The 10GBASE-R PHY IP core provides a status flag to indicate a high BER whenever 16 synchronization header errors are received within a 125 ns window.

Clock Compensation

The receiver FIFO in the receiver PCS datapath compensates up to ± 100 ppm difference between the remote transmitter and the local receiver. The receiver FIFO does so by inserting Idles (/I/) and deleting Idles (/I/) or Ordered Sets (/O/), depending on the ppm difference.

Idle Insertion -- The receiver FIFO inserts eight /I/ codes following an /I/ or /O/ to compensate for clock rate disparity.

Idle (/I/) or Sequence Ordered Set (/O/) Deletion -- The receiver FIFO deletes either four /I/ codes or ordered sets (/O/) to compensate for the clock rate disparity. The receiver FIFO implements the following IEEE802.3-2008 deletion rules:

- Deletes the lower four /I/ codes of the current word when the upper four bytes of the current word do not contain a Terminate /T/ control character.
- Deletes the upper four /I/ codes of the current word when the previous word's lower four bytes do not contain a Terminate /T/ control character.
- Deletes one /O/ ordered set only when the receiver FIFO receives two consecutive /O/ ordered sets.

Related Links

[Refer to the 10GBASE-R PHY IP Core chapter in the Altera Transceiver PHY IP Core User Guide](#)

10GBASE-R Transceiver Clocking

The CMU PLL or the auxiliary transmit (ATX) PLLs in a transceiver bank generate the transmitter serial and the fractional PLL for the parallel clocks for the 10GBASE-R channels.

Table 4-7: Input Reference Clock Frequency and Interface Speed Specifications for 10GBASE-R Configurations

Input Reference Clock Frequency (MHz)	FPGA Fabric-Transceiver Interface Width	FPGA Fabric-Transceiver Interface Frequency (MHz)
644.53125, 322.265625	64-bit data, 8-bit control	156.25

Serial Digital Interface

The Society of Motion Picture and Television Engineers (SMPTE) defines various Serial Digital Interface (SDI) standards for transmission of uncompressed video.

The following SMPTE standards are popular in video broadcasting applications:


- SMPTE 259M standard - more popularly known as the standard-definition (SD) SDI; defined to carry video data at 270 Mbps
- SMPTE 292M standard - more popularly known as the high-definition (HD) SDI; defined to carry video data at either 1485 Mbps or 1483.5 Mbps
- SMPTE 424M standard - more popularly known as the third-generation (3G) SDI; defined to carry video data at either 2970 Mbps or 2967 Mbps

Configurations Supported in SDI Mode

Table 4-8: Configurations Supported in SDI Mode


Configuration	Data Rate (Mbps)	REFCLK Frequencies (MHz)	FPGA Fabric-Transceiver Interface Width
HD	1,485	74.25, 148.5	10 bit and 20 bit
	1,483.5	74.175, 148.35	10 bit and 20 bit
3G	2,970	148.5, 297	Only 20-bit interfaces allowed in 3G
	2,967	148.35, 296.7	Only 20-bit interfaces allowed in 3G

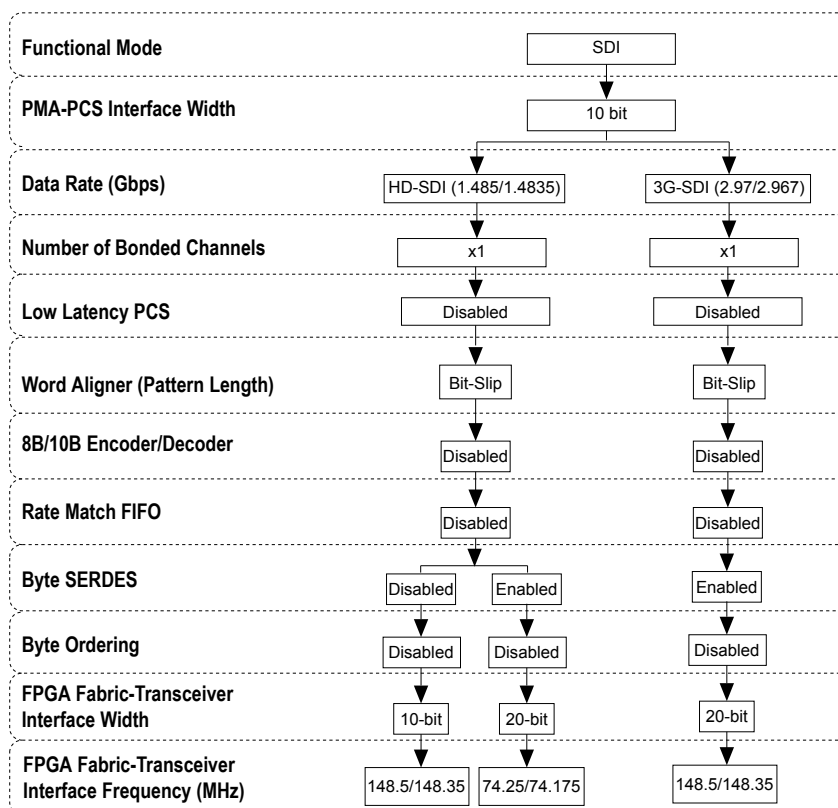Figure 4-33: SDI Mode



Serial Digital Interface Transceiver Datapath

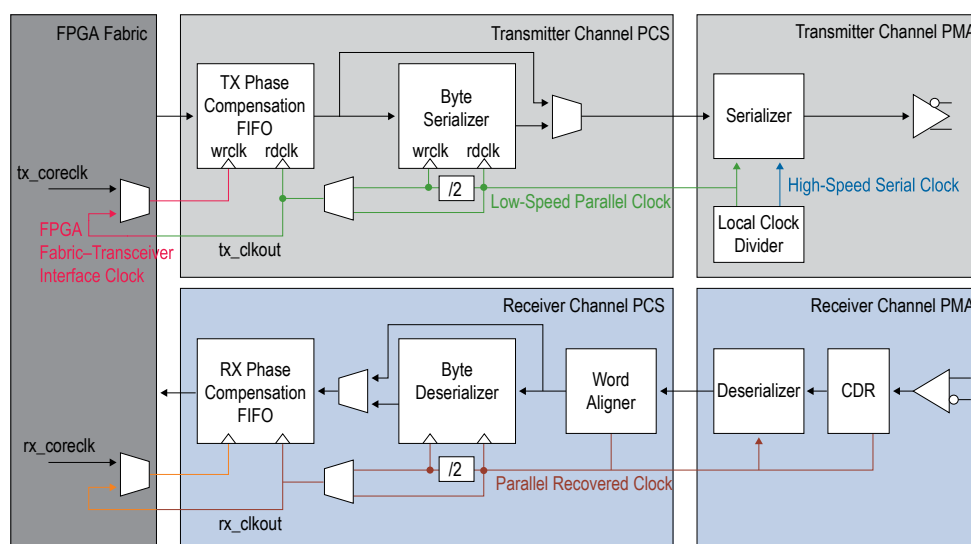Figure 4-34: SDI Mode Transceiver Datapath



Transmitter Datapath

The transmitter datapath in the HD-SDI configuration with a 10-bit wide FPGA fabric-transceiver interface consists of the transmitter phase compensation FIFO and the 10:1 serializer. In HD-SDI and 3G-SDI

configurations with 20-bit wide FPGA fabric-transceiver interface, the transmitter datapath also includes the byte serializer.

Note: In SDI mode, the transmitter is purely a parallel-to-serial converter. You must implement the SDI transmitter functions, such as the scrambling and cyclic redundancy check (CRC) code generation, in the FPGA logic array.

Receiver Datapath

In the 10-bit channel width SDI configuration, the receiver datapath consists of the clock recovery unit (CRU), 1:10 deserializer, word aligner in bit-slip mode, and receiver phase compensation FIFO. In the 20-bit channel width SDI configuration, the receiver datapath also includes the byte deserializer.

Note: You must implement the SDI receiver functions, such as descrambling, framing, and CRC checker, in the FPGA logic array.


Receiver Word Alignment and Framing

In SDI systems, the word aligner in the receiver datapath is not useful because the word alignment and framing happen after descrambling. Altera recommends that you drive the `rx_bitslip` of the PHY MegaWizard™ signal low to avoid having the word aligner insert bits in the received data stream.

Gigabit-Capable Passive Optical Network (GPON)

The GPON protocol network provides optical fiber cabling and signals to the home and office using a point-to-multipoint scheme. GPON data rates of 155.52 Mbps, 622.08 Mbps, 1.24416 Gbps, and 2.48832 Gbps, with a reference clock of 155.52 MHz are supported. The minimum supported data rate is 600 Mbps, so a 5x over-sampling factor is used for the GPON data rate of 155.52 Mbps, resulting in a data rate of 777.6 Mbps.

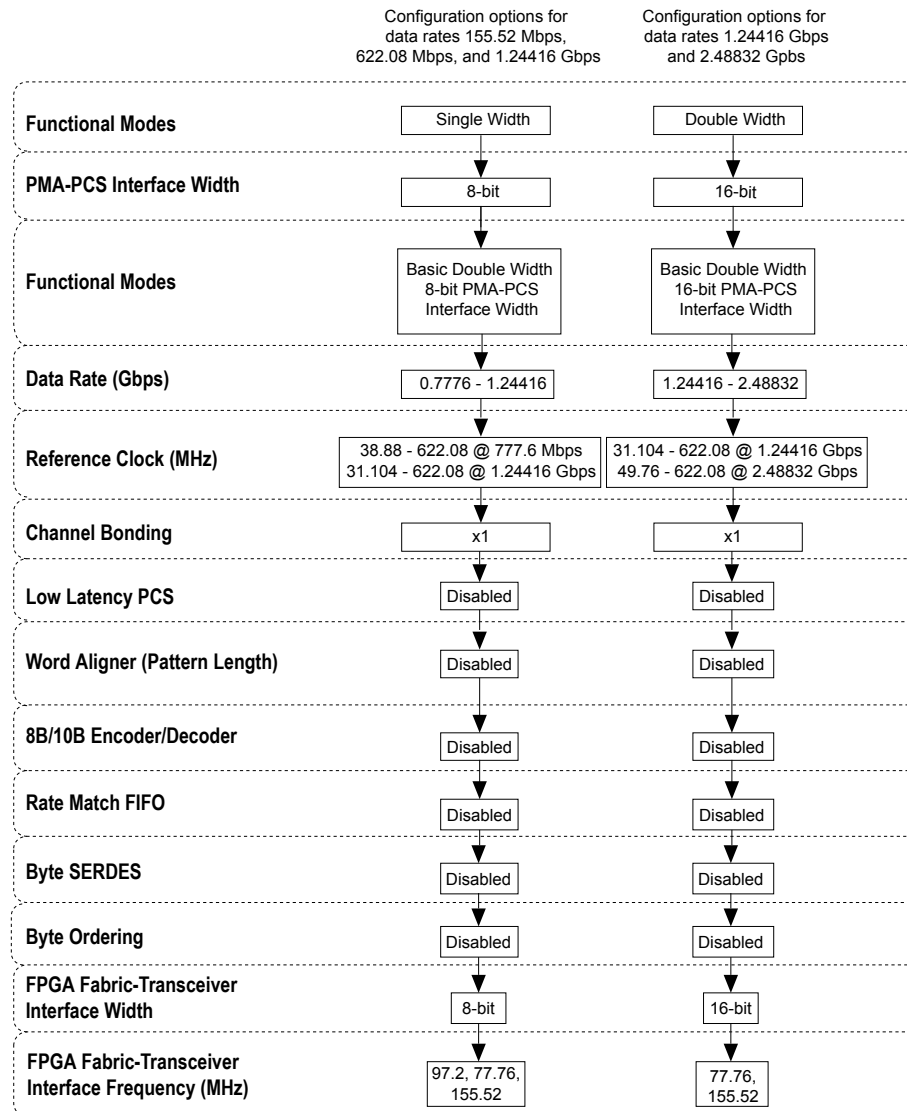
Figure 4-35: Configurations for the GPON Protocol



Serial Data Converter (SDC) JESD204

The SDC (JESD204) protocol conforms to JESD204, a JEDEC standard that enables a high-speed serial connection between analog-to-digital converters and logic devices using only a two-wire high-speed serial interface. SDC (JESD204) data rate ranges of 312.5 Mbps to 3.125 Gbps are supported. The minimum supported data rate is 611 Mbps, so a 5x over-sampling factor is used for the SDC (JESD204) data rate of 312.5 Mbps, resulting in a data rate of 1.5625 Gbps.

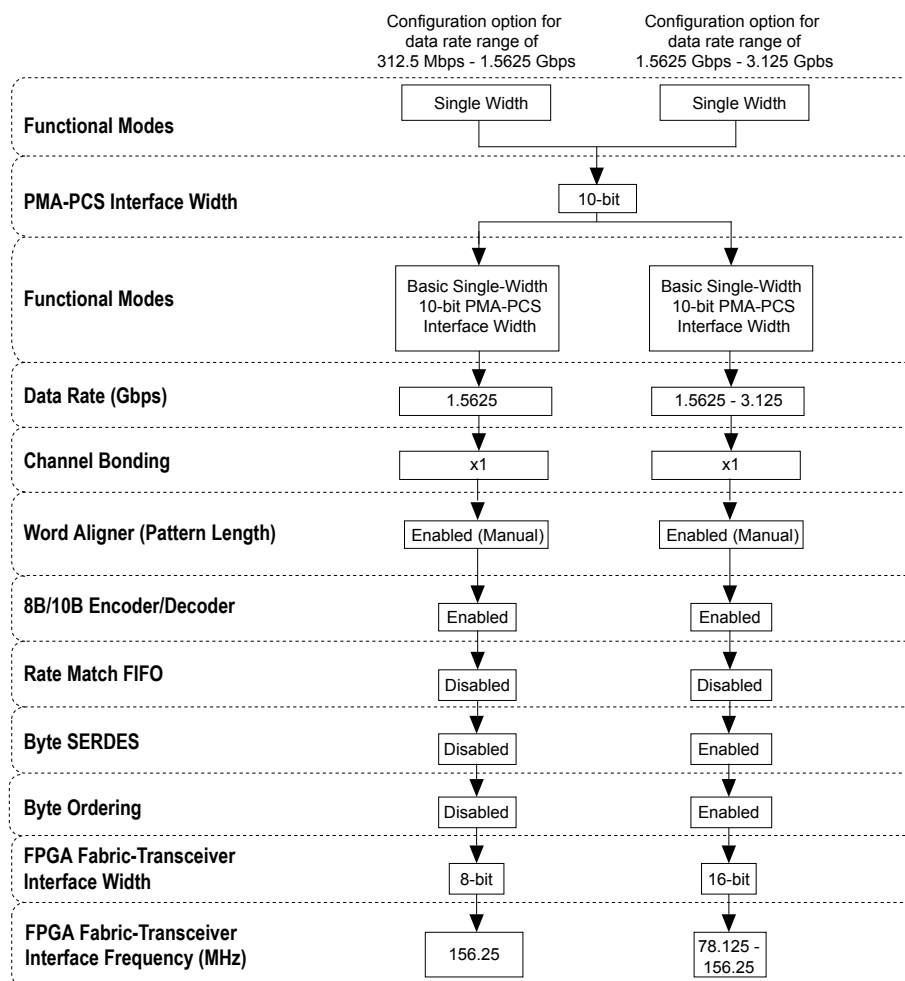Figure 4-36: Configurations for the SDC (JESD204) Protocol



SATA and SAS Protocols

Serial ATA (SATA) and Serial Attached SCSI (SAS) are data storage protocol standards that have the primary function of transferring data (directly or otherwise) between the host system and mass storage devices, such as hard disk drives, optical drives, and solid-state disks.

These serial storage protocols offer several advantages over older parallel storage protocol (ATA and SCSI) interfaces:


- Faster data transfer
- Hot swapping (when supported by the operating system)
- Thinner cables for more efficient air cooling
- Increased operation reliability

Table 4-9: Serial Data Rates for SATA and SAS Protocols

Protocol	SATA (Gbps)	SAS (Gbps)
Gen1	1.5	3.0
Gen2	3.0	6.0

Protocol	SATA (Gbps)	SAS (Gbps)
Gen3	6.0	-

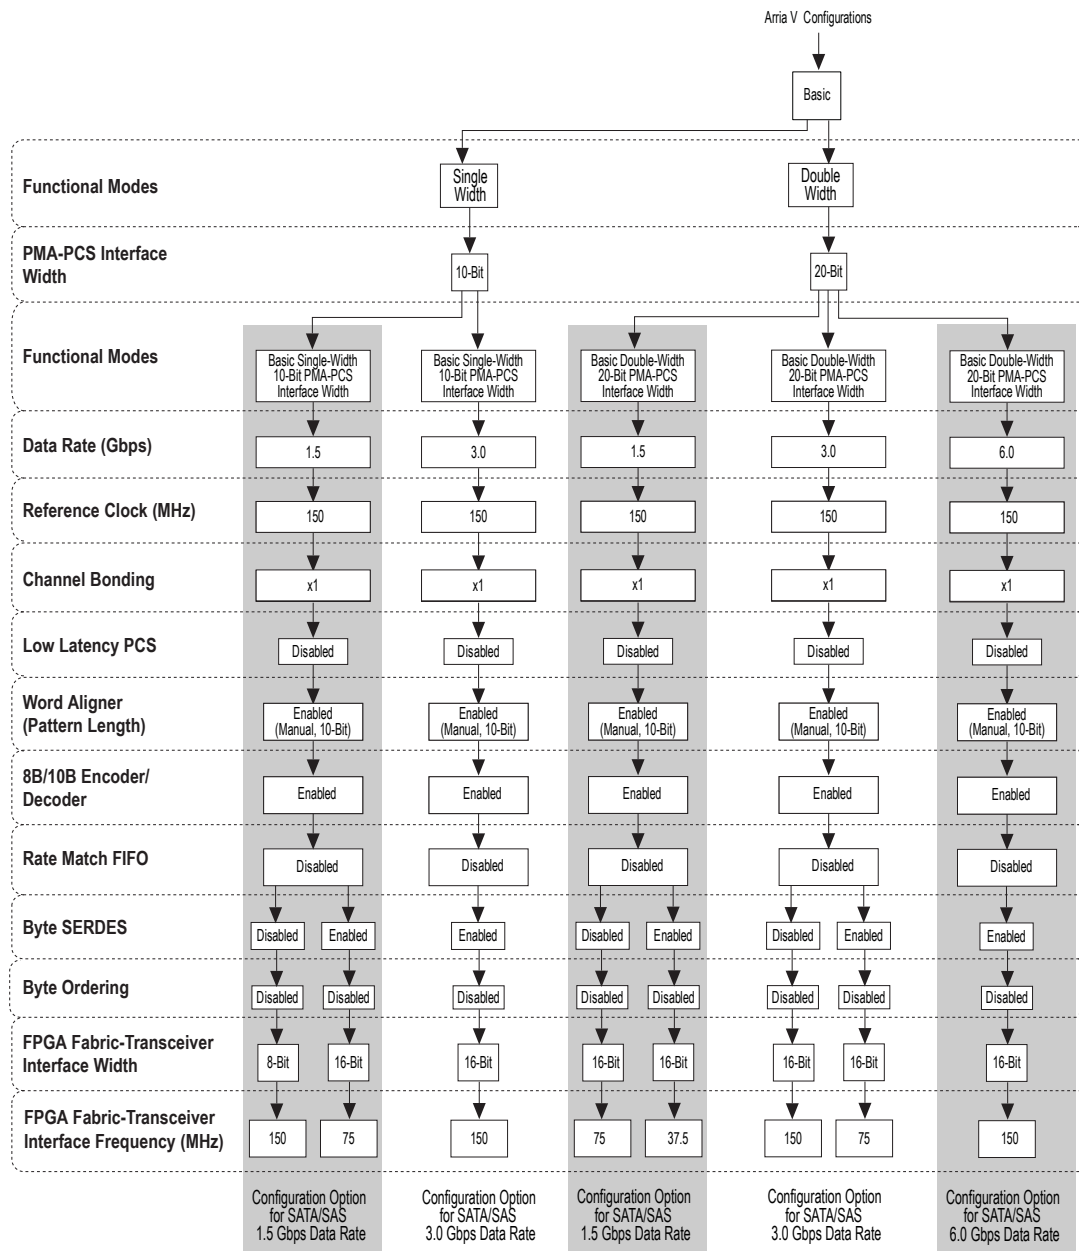Figure 4-37: Configurations for the SATA and SAS Protocols




Deterministic Latency Protocols—CPRI and OBSAI

A deterministic latency option is available for use in high-speed serial interfaces such as the Common Public Radio Interface (CPRI) and OBSAI Reference Point 3 (OBSAI RP3). Both CPRI and OBSAI RP3 protocols place stringent requirements on the amount of latency variation that is permissible through a link that implements these protocols.

Arria V GT devices also support 9.8304 Gbps CPRI with PMA direct configuration; PCS is implemented in soft logic.

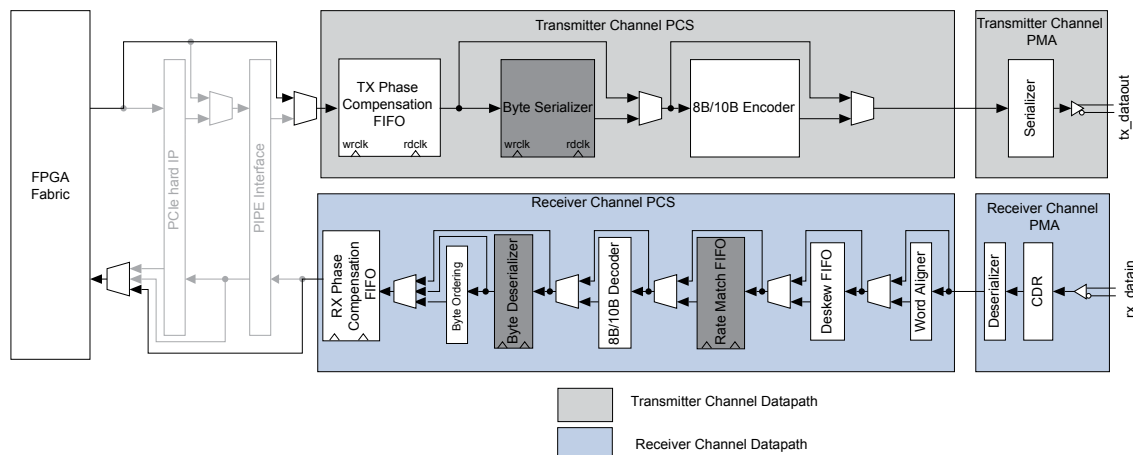Figure 4-38: Transceiver Datapath in Deterministic Latency Mode



Latency Uncertainty Removal with the Phase Compensation FIFO in Register Mode

To remove the latency uncertainty through the receiver's phase compensation FIFO, the receiver and transmitter phase compensation FIFOs are always set to register mode. In register mode, the phase compensation FIFO acts as a register and thereby removes the uncertainty in latency. The latency through the transmitter and receiver phase compensation FIFO in register mode is one clock cycle.

The following options are available:

- Single-width mode with 8-bit channel width and 8B/10B encoder enabled or 10-bit channel width with 8B/10B disabled
- Double-width mode with 16-bit channel width and 8B/10B encoder enabled or 20-bit channel width with 8B/10B disabled

Channel PLL Feedback for Deterministic Relationship

To implement the deterministic latency functional mode, the phase relationship between the low-speed parallel clock and channel PLL input reference clock must be deterministic. A feedback path is enabled to ensure a deterministic relationship between the low-speed parallel clock and channel PLL input reference clock.

To achieve deterministic latency through the transceiver, the reference clock to the channel PLL must be the same as the low-speed parallel clock. For example, if you need to implement a data rate of 1.2288 Gbps for the CPRI protocol, which places stringent requirements on the amount of latency variation, you must choose a reference clock of 122.88 MHz to allow the usage of a feedback path from the channel PLL. This feedback path reduces the variations in latency.

When you select this option, provide an input reference clock to the channel PLL that has the same frequency as the low-speed parallel clock.


CPRI and OBSAI

Use the deterministic latency functional mode to implement protocols such as CPRI and OBSAI.

The CPRI interface defines a digital point-to-point interface between the Radio Equipment Control (REC) and the Radio Equipment (RE), allowing flexibility in either co-locating the REC and the RE, or a remote location of the RE.

Figure 4-39: CPRI Topologies

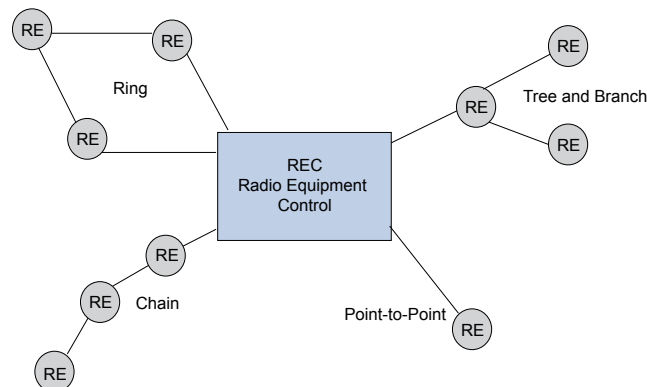In most cases, CPRI links are between REC and RE modules or between two RE modules in a chain configuration.



If the destination for the high-speed serial data that leaves the REC is the first RE, it is a single-hop connection. If the serial data from the REC must traverse through multiple REs before reaching the destination RE, it is a multi-hop connection.

Remotely locating the RF transceiver from the main base station introduces a complexity with overall system delay. The CPRI specification requires that the accuracy of measurement of roundtrip delay on single-hop and multi-hop connections be within ± 16.276 ns to properly estimate the cable delay.

For a single-hop system, this allows a variation in roundtrip delay of up to ± 16.276 ns. However, for multi-hop systems, the allowed delay variation is divided among the number of hops in the connection—typically, equal to ± 16.276 ns/(the number of hops) but not always equally divided among the hops.

Deterministic latency on a CPRI link also enables highly accurate triangulation of the location of the caller.


OBSAI was established by several OEMs to develop a set of specifications that can be used for configuring and connecting common modules into base transceiver stations (BTS).

The BTS has four main modules:

- Radio frequency (RF)
- Baseband
- Control
- Transport

In a typical BTS, the radio frequency module (RFM) receives signals using portable devices and converts the signals to digital data. The baseband module processes the encoded signal and brings it back to the baseband before transmitting it to the terrestrial network using the transport module. A control module maintains the coordination between these three functions.

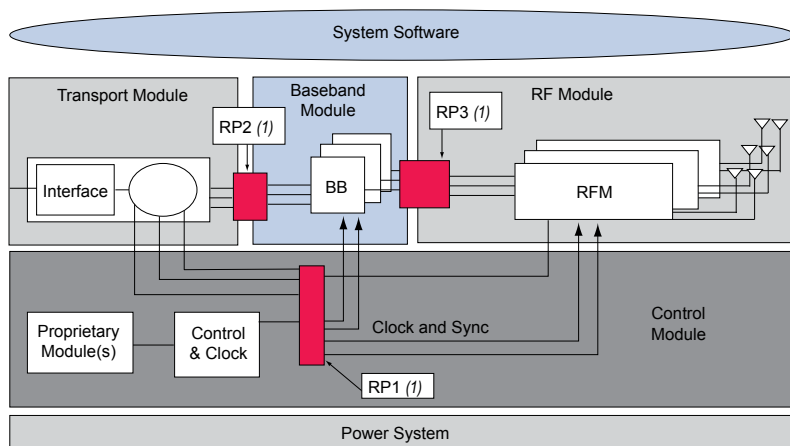Figure 4-40: Example of the OBSAI BTS Architecture



(t) RP = Reference Point

Using the deterministic latency option, you can implement the CPRI data rates in the following modes:

- Single-width mode—with 8/10-bit channel width
- Double-width mode—with 16/20-bit channel width

Table 4-10: Sample Channel Width Options for Supported Serial Data Rates

Serial Data Rate (Mbps)	Channel Width (FPGA-PCS Fabric)			
	Single Width		Double-Width	
	8-Bit	16-Bit	16-Bit	32-Bit
614.4	Yes	Yes	No	No
1228.8	Yes	Yes	Yes	Yes
2457.6	No	Yes	Yes	Yes
3072	No	Yes ¹⁰	Yes	Yes
4915.2	No	No	No	Yes
6144	No	No	No	Yes
9830.4	N/A ¹¹	N/A	N/A	N/A

CPRI Enhancements

The deterministic latency state machine in the word aligner reduces the known delay variation from the word alignment process and automatically synchronizes and aligns the word boundary by slipping a clock cycle in the deserializer. Incoming data to the word aligner is aligned to the boundary of the word alignment pattern (K28.5). User logic is not required to manipulate the TX bit slipper for constant round-trip delay. In manual mode, the TX bit slipper is able to compensate one unit interval (UI).

¹⁰ Applicable to C4, C5, and I5 speed grades only.

¹¹ CPRI 9830.4 Mbps uses PMA direct mode with 80-bits PMA-PLD data width and is available only in 10-Gbps channels.

The word alignment pattern (K28.5) position varies in byte deserialized data. Delay variation is up to $\frac{1}{2}$ parallel clock cycle. You must add in extra user logic to manually check the K28.5 position in byte deserialized data for the actual latency.

Figure 4-41: Deterministic Latency State Machine in the Word Aligner

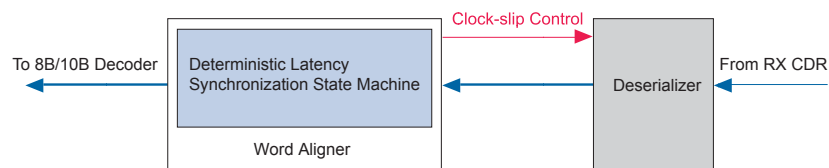


Table 4-11: Methods to Achieve Deterministic Latency Mode in Arria V Devices

Existing Feature ¹²		Enhanced Feature ¹³	
Description	Requirement	Description	Requirement
Manual alignment with bit position indicator provides deterministic latency. Delay variation up to 1 parallel clock cycle	Extra user logic to manipulate the TX bit slipper with a bit position indicator from the word aligner for constant total round-trip delay	Deterministic latency state machine alignment reduces the known delay variation in word alignment operation	None


Related Links

Refer to the "Deterministic Latency PHY IP Core" chapter in the Altera Transceiver PHY IP Core User Guide

Serial RapidIO

The RapidIO Trade Association defines a high-performance, packet-switched interconnect standard to pass data and control information between microprocessors, digital signal, communications, and network processors, system memories, and peripheral devices.

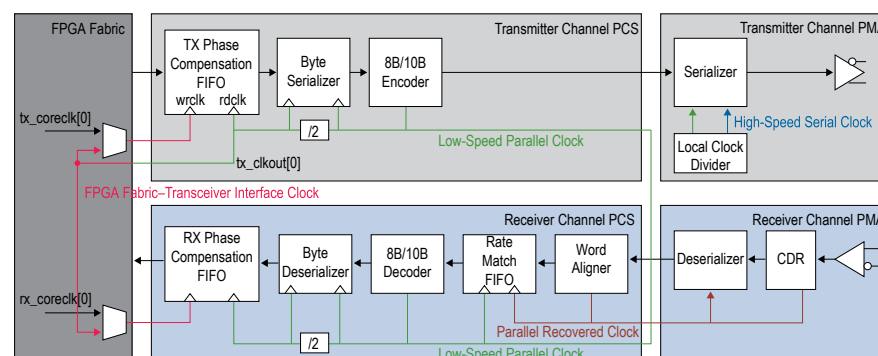Figure 4-42: Transceiver Datapath in Serial RapidIO (SRIO) Mode



¹³ Enhanced deterministic latency feature in Arria V devices.

¹² Backward compatible with CPRI designs in Arria II devices.

Arria V transceivers support SRIO physical layer specifications, versions 1.3 and 2.1, from 1.25 Gbps to 6.25 Gbps. The transceivers are compliant with the x2 and x4 channel bonding, deskew state machine, and rate match FIFO.

Synchronization State Machine

The word aligner has a synchronization state machine that handles the receiver lane synchronization.

The synchronization state machine indicates synchronization when the receiver receives 127 K28.5 (10'b0101111100 or 10'b1010000011) synchronization code groups without receiving an intermediate invalid code group. After synchronization, the state machine indicates loss of synchronization when it detects three invalid code groups separated by less than 255 valid code groups, or when it is reset.

The `rx_syncstatus` port of each channel indicates the receiver synchronization:

- High—the lane is synchronized
- Low—the lane has fallen out of synchronization

Table 4-12: Synchronization State Machine Parameters in Serial RapidIO Mode

Parameters	Number
Number of valid K28.5 code groups received to achieve synchronization	127
Number of errors received to lose synchronization	3
Number of continuous good code groups received to reduce the error count by one	255

Rate Match FIFO

In SRIO mode, the rate match FIFO is capable of compensating for up to ± 100 ppm (200 ppm total) difference between the upstream transmitter and the local receiver reference clock.

The rate match FIFO operation begins after the word aligner synchronization status, `rx_syncstatus`, goes high. When the rate matcher receives either of the two 10-bit control patterns followed by the respective 10-bit skip pattern, it inserts or deletes the 10-bit skip pattern as necessary to avoid the rate match FIFO from overflowing or under-running.

In SRIO mode, the rate match FIFO can delete or insert a maximum of one skip pattern from a cluster.

Related Links

[Refer to "Chapter 4 PCS and PMA Layers" of Part 6: LP-Serial Physical Layer Specification in the RapidIO Interconnect Specification](#)

Document Revision History

Table 4-13: Document Revision History

Date	Version	Changes
November 2012	2012.11.19	• Reorganized content and updated template. • Added the "XAUI" section. • Added the "PCI Express" section.

Date	Version	Changes
June 2012	1.2	- Updated for the Quartus II software version 12.0. - Added the “Serial Digital Interface” section. - Added the “Gigabit-Capable Passive Optical Network (GPON)” section. - Added the “Serial Data Converter (SDC) JESD204” section. - Added the “SATA and SAS Protocols” section. - Updated Figure 4–2 and Figure 4–18. - Added Figure 4–19. - Updated Table 4–1, Table 4–8, and Table 4–9. - Updated the “CPRI Enhancements in Arria V Devices” section. - Added the “Serial RapidIO” section.
November 2011	1.1	Updated for the Quartus II software version 11.1.
August 2011	1.0	Initial release.

Transceiver Custom Configurations in Arria V Devices

5

2012.11.19

AV53005

 [Subscribe](#)


 [Feedback](#)

For integration with the FPGA fabric, the full-duplex transceiver channel supports custom configuration with physical medium attachment (PMA), physical coding sublayer (PCS), and low latency custom configurations with the PMA and low latency PCS.

You can customize the transceiver with one of the following configurations:

- Standard PCS— Physical coding sublayer (PCS) and physical medium attachment (PMA)
- Standard PCS in low latency mode— Low latency PCS and PMA
- PMA Direct— PMA only

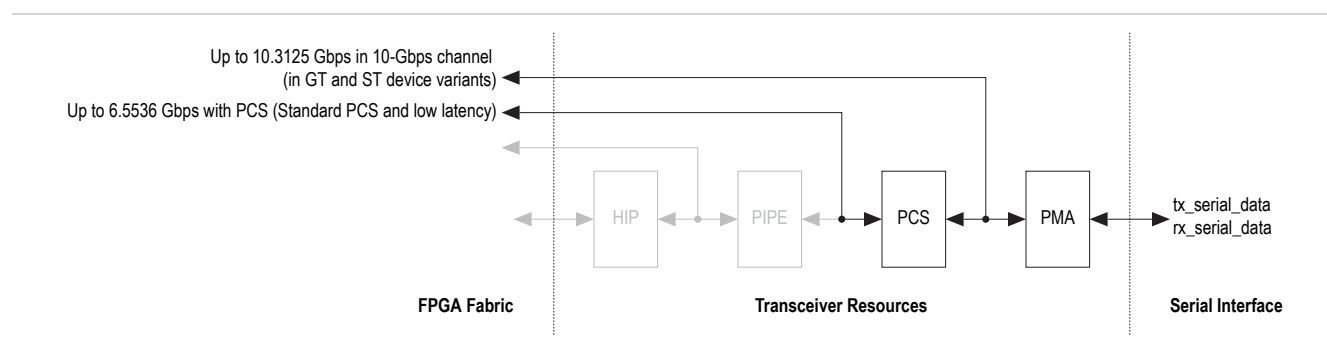Figure 5-1: Custom Configuration Options



Standard PCS Configuration


In this configuration, you can customize the transceiver channel to include a PMA and PCS with functions that your application requires. The transceiver channel interfaces with the FPGA fabric through the PCS.

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered

Figure 5-2: Complete Datapath in a Custom Configuration

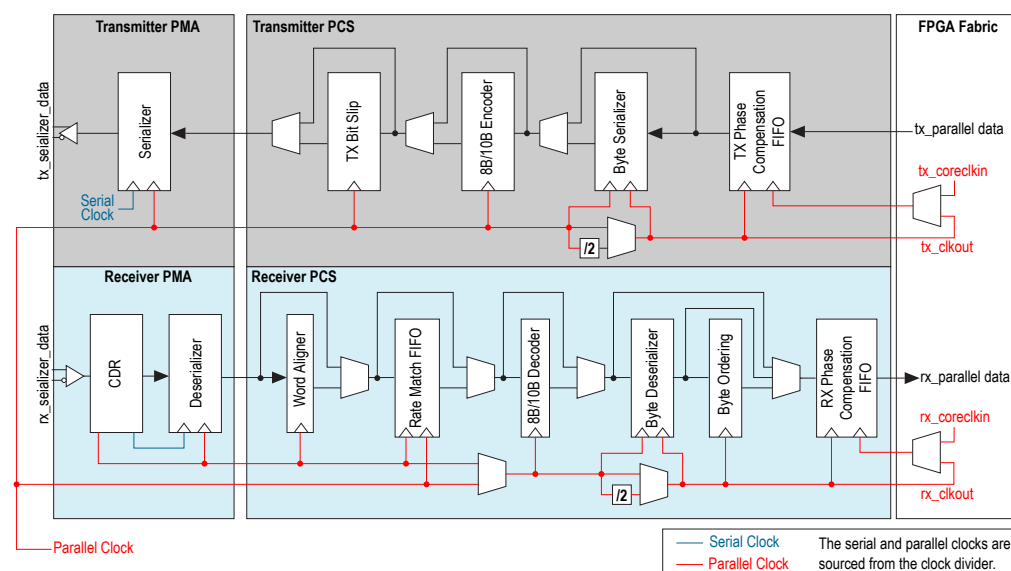Based on your application requirements, you can enable, modify, or disable the blocks, as shown in the following figure.



Custom Configuration Channel Options

There are multiple channel options when you use Custom Configuration.

The supported interface width varies depending on the usage of the byte serializer/deserializer (SERDES), and the 8B/10B encoder or decoder. The byte serializer or deserializer is assumed to be enabled. Otherwise, the maximum data rate supported is half of the specified value.

The maximum supported data rate varies depending on the customization.

Table 5-1: Maximum Supported Data Rate for Fastest Speed Grade Device (–4 Commercial) in Custom Configuration

The following table lists an example of the maximum supported data rate in various custom configurations with the PMA and PCS using the fastest speed grade device.

Data Configuration	PMA-PCS Interface Width	PCS-FPGA Fabric Interface Width		Maximum Data Rate (Mbps)
		8B/10B Enabled	8B/10B Disabled	
Single-width	8	—	8	2,500
			16	2,500
	10	8	10	3,125
		16	20	3,750
Double-width	16	—	16	5,242.88
			32	5,242.88
	20	16	20	6,553.6
		32	40	6,553.6

In all the supported configuration options of the channel, the transmitter bit-slip function is optional, where:

- The blocks shown as “Disabled” are not used but incur latency.
- The blocks shown as “Bypassed” are not used and do not incur any latency.
- The transmitter bit-slip is disabled.

Figure 5-3: Configuration Options for Custom Single-Width Mode (8-bit PMA–PCS Interface Width)

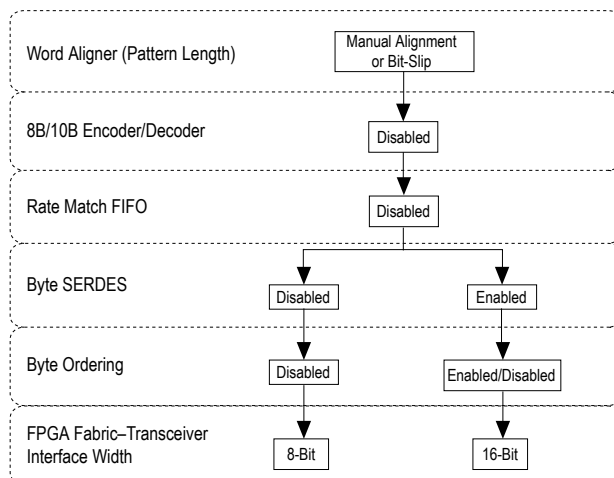


Figure 5-4: Configuration Options for Custom Single-Width Mode (10-bit PMA–PCS Interface Width)

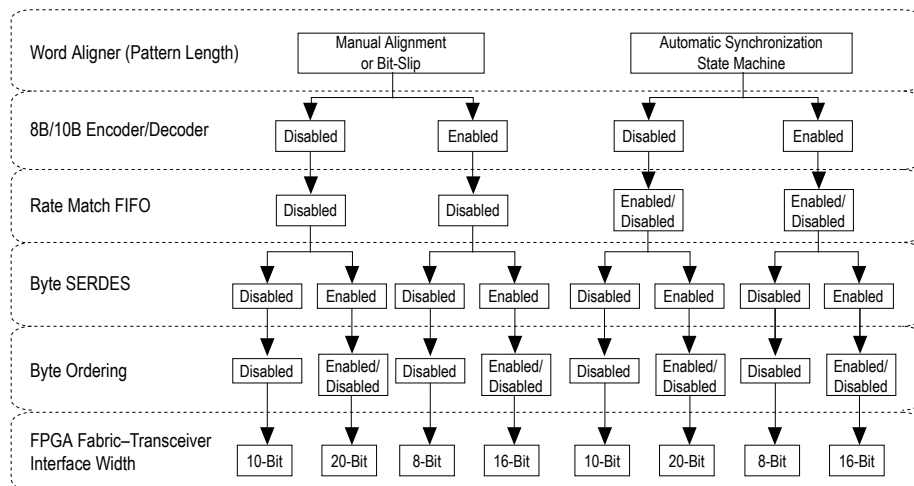
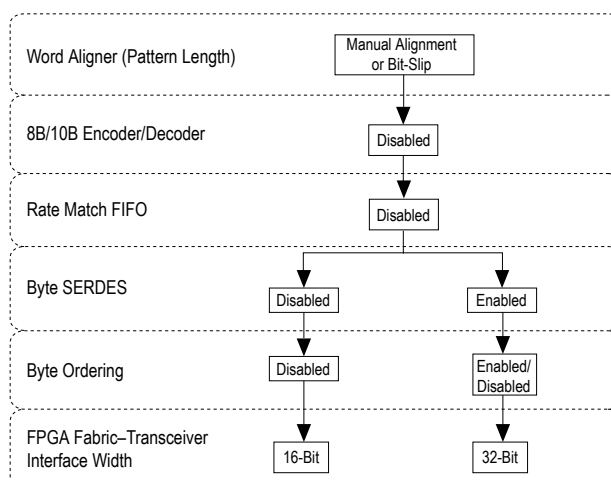
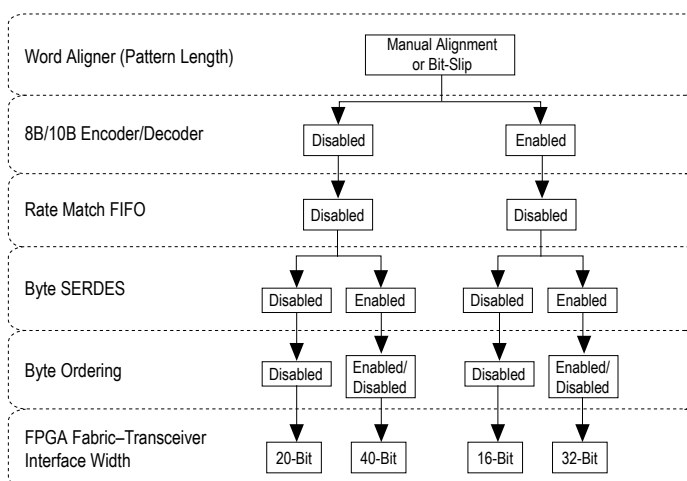


Figure 5-5: Configuration Options for Custom Double-Width Mode (16-bit PMA–PCS Interface Width)**Figure 5-6: Configuration Options for Custom Double-Width Mode (20-bit PMA–PCS Interface Width)**

Rate Match FIFO in Custom Configuration

In a custom configuration, the 20-bit pattern for the rate match FIFO is user-defined. The FIFO operates by looking for the 10-bit control pattern followed by the 10-bit skip pattern in the data, after the word aligner restores the word boundary. After finding the pattern, the FIFO performs a skip pattern insertion or deletion to ensure that the FIFO does not underflow or overflow a given parts per million (ppm) difference between the clocks.

The rate match FIFO operation requires 8B/10B-coded data.

Rate Match FIFO Behaviors in Custom Single-Width Mode

The different operations available in custom single-width mode for the rate match FIFO are symbol insertion, symbol deletion, full condition, and empty condition.


Table 5-2: Rate Match FIFO Behaviors in Custom Single-Width Mode (10-bit PMA–PCS Interface Width)

Operation	Behavior
Symbol Insertion	Inserts a maximum of four skip patterns in a cluster, only if there are no more than five skip patterns in the cluster after the symbol insertion.
Symbol Deletion	Deletes a maximum of four skip patterns in a cluster, only if there is one skip pattern left in the cluster after the symbol deletion.
Full Condition	Deletes the data byte that causes the FIFO to go full.
Empty Condition	Inserts a /K30.7/ (9'h1FE) after the data byte that caused the FIFO to go empty.

In this example, /K28.5/ is the control pattern and neutral disparity /K28.0/ is the skip pattern. The first skip cluster has a /K28.5/ control pattern followed by two /K28.0/ skip patterns. The second skip cluster has a /K28.5/ control pattern followed by four /K28.0/ skip patterns. The rate match FIFO deletes only one /K28.0/ skip pattern from the first skip cluster to maintain at least one skip pattern in the cluster after deletion. Two /K28.0/ skip patterns are deleted from the second cluster for the three skip pattern deletion requirement.

Figure 5-7: Rate Match Deletion in Custom Single-Width Mode

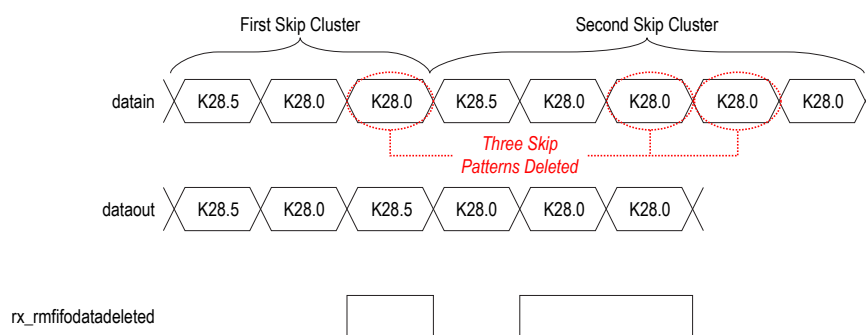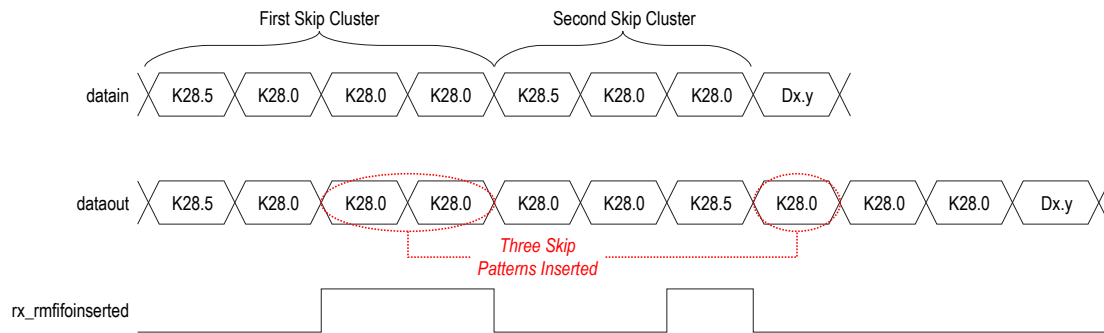
The following figure shows an example of rate match FIFO deletion in the case where three skip patterns are required to be deleted.



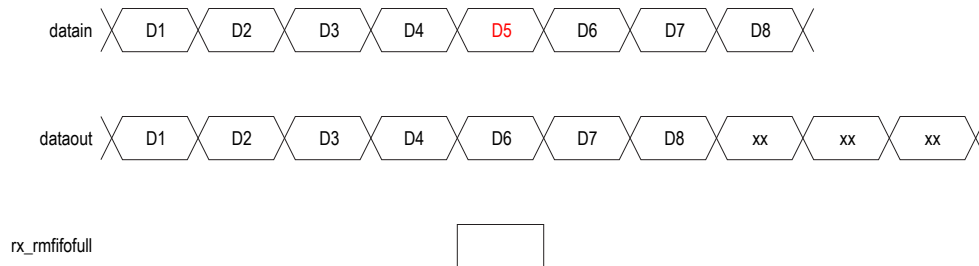
In this example, /K28.5/ is the control pattern and neutral disparity /K28.0/ is the skip pattern. The first skip cluster has a /K28.5/ control pattern followed by three /K28.0/ skip patterns. The second skip cluster has a /K28.5/ control pattern followed by one /K28.0/ skip pattern. The rate match FIFO inserts only two /K28.0/ skip patterns into the first skip cluster to maintain a maximum of five skip patterns in the cluster after insertion. One /K28.0/ skip pattern is inserted into the second cluster for a total of three skip patterns to meet the insertion requirement.

Figure 5-8: Rate Match Insertion in Custom Single-Width Mode


The following figure shows an example of rate match FIFO insertion in the case where three skip patterns are required to be inserted.

**Figure 5-9: Rate Match FIFO Full Condition in Custom Single-Width Mode**

The following figure shows the rate match FIFO full condition in custom single-width mode. The rate match FIFO becomes full after receiving data byte D4.

**Figure 5-10: Rate Match FIFO Empty Condition in Custom Single-Width Mode**

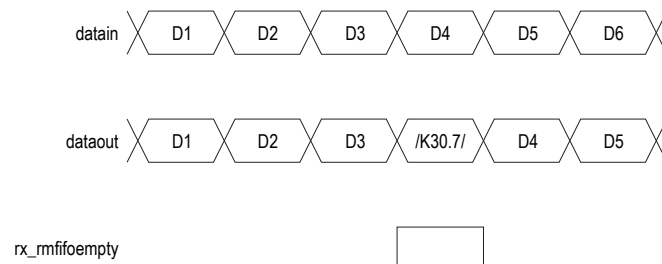The following figure shows the rate match FIFO empty condition in custom single-width mode. The rate match FIFO becomes empty after reading out data byte D3.



Rate Match FIFO Behaviors in Custom Double-Width Mode

The different operations available in custom double-width mode for the rate match FIFO are symbol insertion, symbol deletion, full condition, and empty condition.


Table 5-3: Rate Match FIFO Behaviors in Custom Double-Width Mode (20-bit PMA–PCS Interface Width)

Operation	Behavior
Symbol Insertion	Inserts as many pairs (10-bit skip patterns at the LSByte and MSByte of the 20-bit word at the same clock cycle) of skip patterns as needed.
Symbol Deletion	Deletes as many pairs (10-bit skip patterns at the LSByte and MSByte of the 20-bit word at the same clock cycle) of skip patterns as needed.
Full Condition	Deletes the pair (20-bit word) of data bytes that causes the FIFO to go full.
Empty Condition	Inserts a pair of /K30.7/ ({9'h1FE, 9'h1FE}) after the data byte that causes the FIFO to go empty.

In this example, /K28.5/ is the control pattern and neutral disparity /K28.0/ is the skip pattern. The first skip cluster has a /K28.5/ control pattern in the LSByte and /K28.0/ skip pattern in the MSByte of a clock cycle followed by one /K28.0/ skip pattern in the LSByte of the next clock cycle. The rate match FIFO cannot delete the two skip patterns in this skip cluster because they do not appear in the same clock cycle. The second skip cluster has a /K28.5/ control pattern in the MSByte of a clock cycle followed by two pairs of /K28.0/ skip patterns in the next two cycles. The rate match FIFO deletes both pairs of /K28.0/ skip patterns (for a total of four skip patterns deleted) from the second skip cluster to meet the three skip pattern deletion requirement.

Figure 5-11: Rate Match Deletion in Custom Double-Width Mode

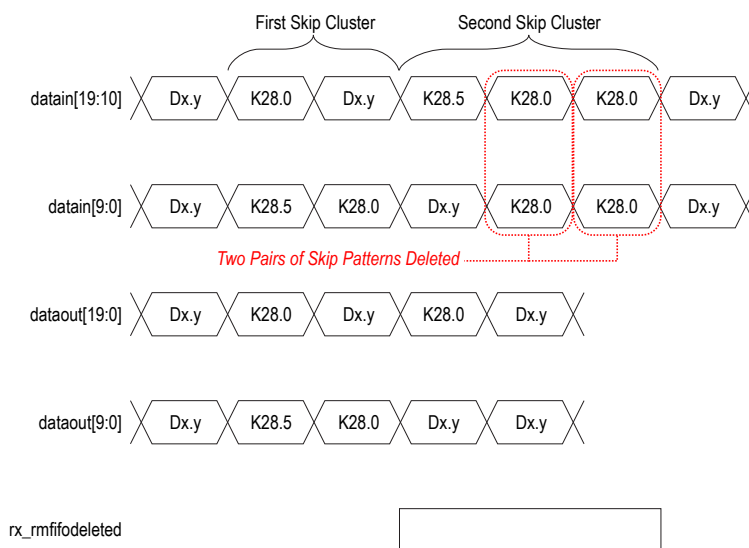
The following figure shows an example of rate match FIFO deletion in the case where three skip patterns are required to be deleted.



In this example, /K28.5/ is the control pattern and neutral disparity /K28.0/ is the skip pattern. The first skip cluster has a /K28.5/ control pattern in the LSByte and /K28.0/ skip pattern in the MSByte of a clock cycle followed by one /K28.0/ skip pattern in the LSByte of the next clock cycle. The rate match FIFO inserts pairs of skip patterns in this skip cluster to meet the three skip pattern insertion requirement.

Figure 5-12: Rate Match Insertion in Custom Double-Width Mode

The following figure shows an example of rate match FIFO insertion in the case where three skip patterns are required to be inserted.

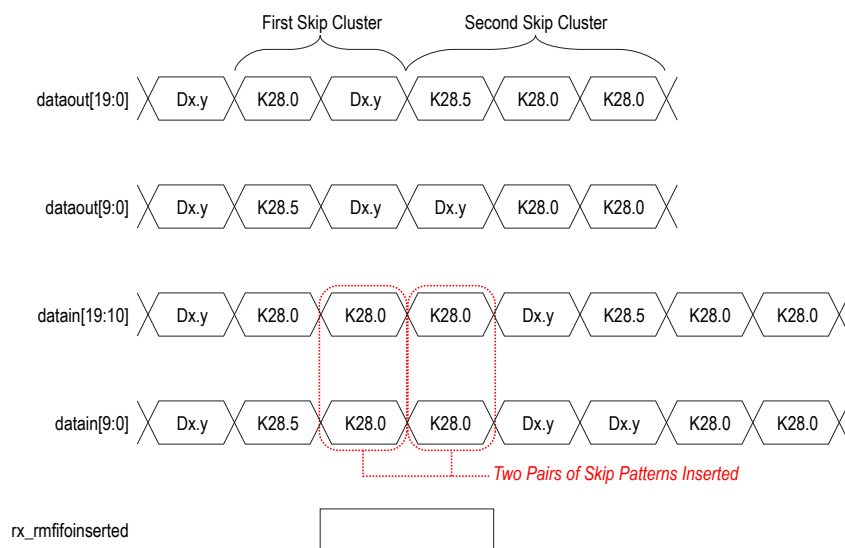**Figure 5-13: Rate Match FIFO Full Condition in Custom Double-Width Mode**

The following figure shows the rate match FIFO full condition in custom double-width mode. The rate match FIFO becomes full after receiving the 20-bit word D5D6.


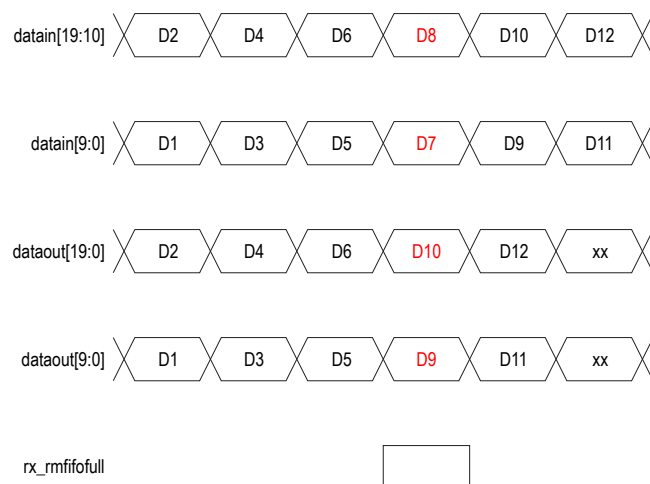


Figure 5-14: Rate Match FIFO Empty Condition in Custom Double-Width Mode

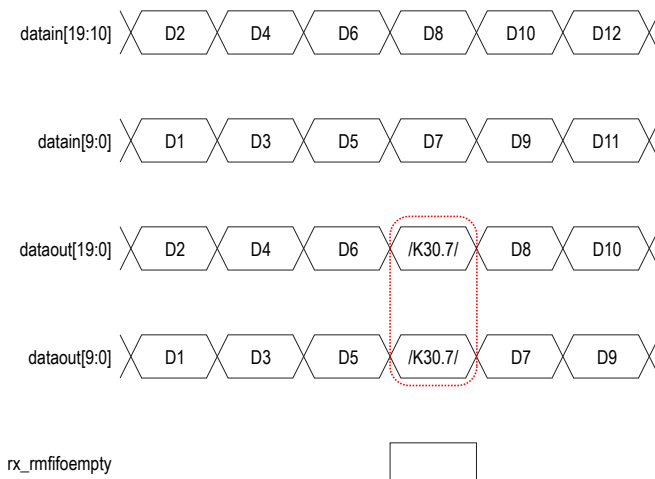
The following figure shows the rate match FIFO empty condition in custom double-width mode. The rate match FIFO becomes empty after reading out the 20-bit word D5D6.



Standard PCS in Low Latency Configuration

In this configuration, you can customize the transceiver channel to include a PMA and PCS that bypasses most of the PCS logical functionality for a low latency datapath.

To provide a low latency datapath, the PCS includes only the phase compensation FIFO in phase compensation mode, and optionally, the byte serializer and byte deserializer blocks, as shown in the following figure. The transceiver channel interfaces with the FPGA fabric through the PCS.

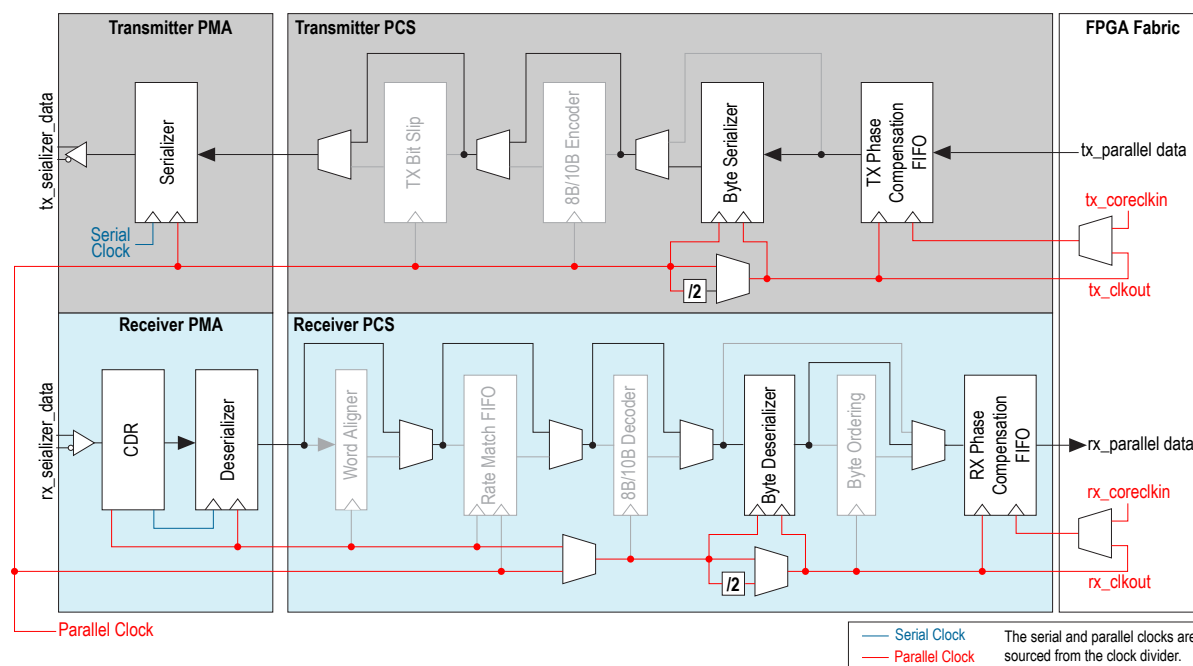Figure 5-15: Datapath in Low Latency Custom Configuration

The maximum supported data rate varies depending on the customization and is identical to the custom configuration except that the 8B/10B block is disabled

Low Latency Custom Configuration Channel Options

There are multiple channel options when you use Low Latency Custom Configuration.

In the following figures:

- The blocks shown as “Disabled” are not used but incur latency.
- The blocks shown as “Bypassed” are not used and do not incur any latency.
- The transmitter bit-slip is disabled.

Figure 5-16: Configuration Options for Low Latency Custom Single-Width Mode (8-bit PMA–PCS Interface Width)

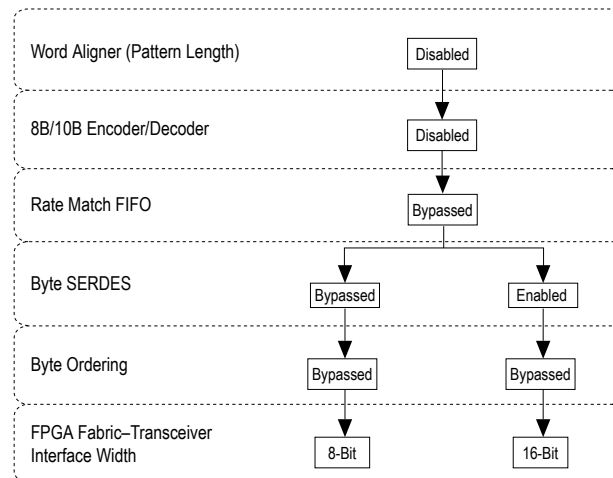


Figure 5-17: Configuration Options for Low Latency Custom Single-Width Mode (10-bit PMA–PCS Interface Width)

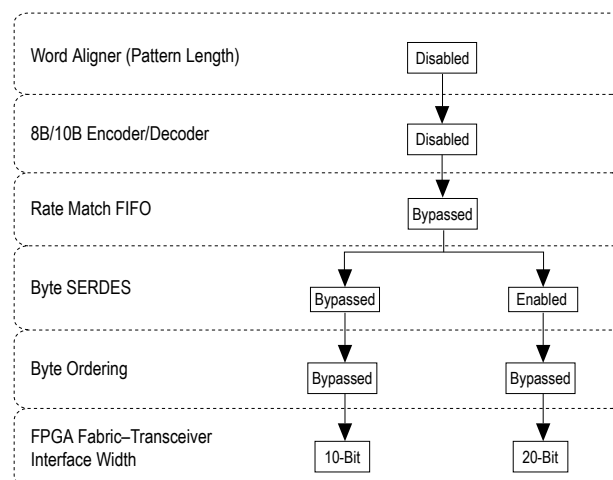
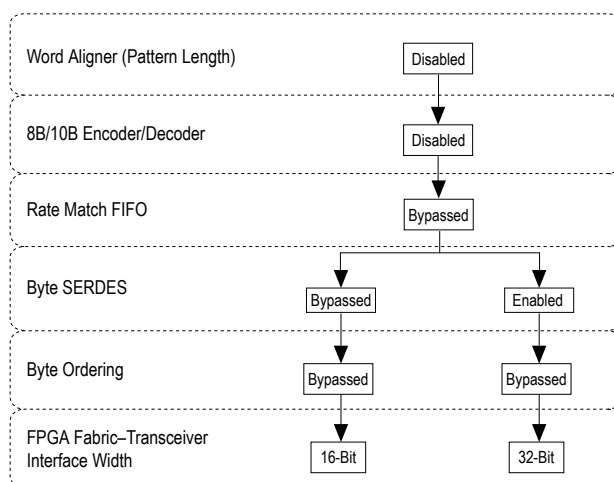
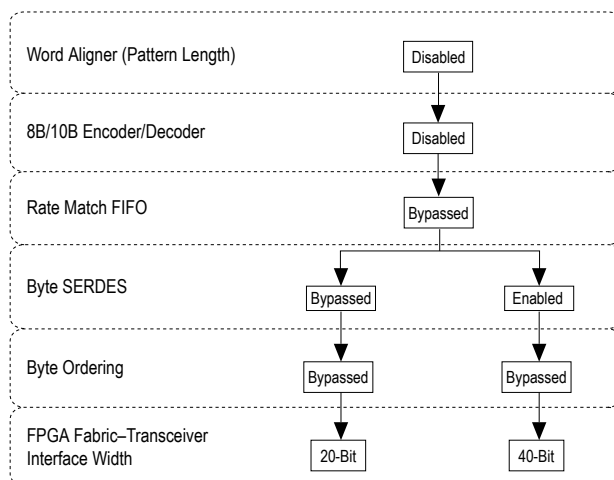



Figure 5-18: Configuration Options for Low Latency Custom Double-Width Mode (16-bit PMA–PCS Interface Width)**Figure 5-19: Configuration Options for Low Latency Custom Double-Width Mode (20-bit PMA–PCS Interface Width)**

PMA Direct

You can customize the transceiver channel to include only the PMA, in a PMA Direct configuration for serial data rates up to 10.3125 Gbps.

In this configuration, the serializer and deserializer interface directly to the FPGA fabric, bypassing the PCS. The serializer and deserializer support 8-, 10-, 16-, 20-, 64-, and 80-bit configurations. You must implement the PCS functions in the FPGA fabric.

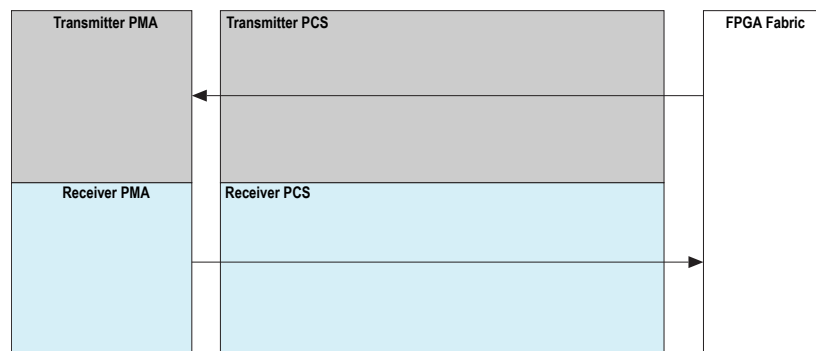Figure 5-20: Transceiver Datapath in a PMA Direct Configuration



Document Revision History

Table 5-4: Document Revision History

Date	Version	Changes
November 2012	2012.11.19	Reorganized content and updated template.
June 2012	1.2	- Updated for the Quartus II software version 12.0. - Updated the “PCS Datapath Latency” section. - Updated the “PMA Direct Configuration” section. - Updated Figure 5–1 and Figure 5–14.
November 2011	1.1	Updated for the Quartus II software version 11.1.
August 2011	1.0	Initial release.

Transceiver Configurations in Arria V GZ Devices

6

2012.11.19

AV53008



Subscribe



Feedback

Arria V GZ devices have dedicated transceiver physical coding sublayer (PCS) and physical medium attachment (PMA) circuitry and a dedicated PHY IP.

Arria V GZ devices support the following communication protocols:

- 10GBASE-R and 10GBASE-KR
- Interlaken
- PCI Express (PCIe)—Gen1, Gen2, and Gen3
- CPRI and OBSAI—Deterministic Latency Protocols
- XAUI

Support for other communication protocols or user-defined protocols can be enabled with the following PHY IPs:

- Custom PHY IP using the standard PCS in a custom datapath
- Low Latency PHY IP using the standard or 10G PCS in a low latency datapath configuration
- Native PHY IP using standard PCS and 10G PCS hardware options including reconfigurability between different PCS options

The following table lists the Altera[®] PHY IP instance names that you must instantiate for each supported transceiver configuration.

Table 6-1: Altera PHY IP Names

Transceiver Configuration	Altera PHY IP Core
1G/10GbE	1G/10GbE and 10GBASE-KR PHY
10GBASE-R	10GBASE-R PHY
10GBASE-KR	1G/10GbE and 10GBASE-KR PHY
Interlaken	Interlaken PHY
PCI Express [®] (PCIe [®])	PHY IP for PCI Express (PIPE)
XAUI	XAUI PHY
CPRI/OBSAI	Deterministic PHY
All others	Custom, Low Latency, or Native PHY
User-defined protocol	Custom, Low Latency, or Native PHY

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered


Related Links[Upcoming Arria V Device Features](#)[Altera Transceiver PHY IP Core User Guide](#)

10GBASE-R and 10GBASE-KR

10GBASE-R is used in optical module LAN applications such as optical routers, servers, and switches, and 10GBASE-KR is used in electrical backplane applications such as blade servers using Stratix V transceivers.

10GBASE-R is a specific physical layer implementation of the 10 Gigabit Ethernet link defined in clause 49 of the IEEE 802.3-2008 specification. The 10GBASE-R PHY uses the XGMII interface to connect to the IEEE802.3 media access control (MAC) and reconciliation sublayer (RS). The IEEE 802.3-2008 specification requires each 10GBASE-R link to support a 10 Gbps data rate at the XGMII interface and a 10.3125 Gbps serial line rate with 64B/66B encoding.

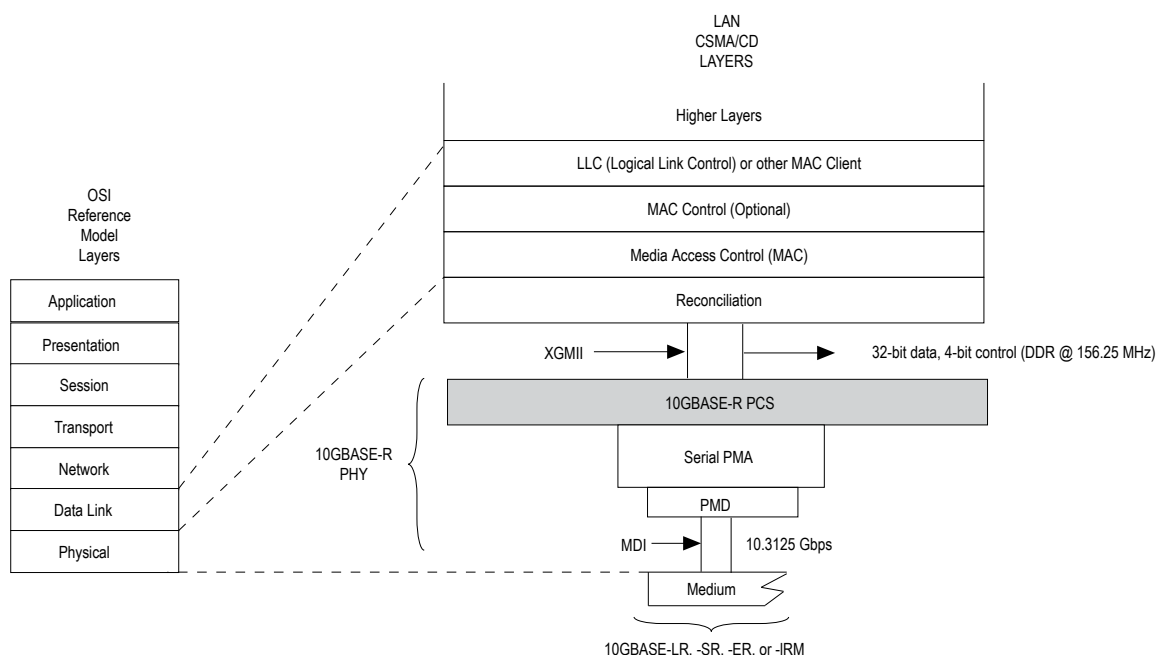Figure 6-1: 10GBASE-R PHY Connection to IEEE802.3 MAC and RS



Note: In the MegaWizard™ Plug-In Manager, you can implement a 10GBASE-R link by instantiating the **10GBASE-R PHY IP** core under **Ethernet** in the Interfaces menu.

The IEEE 802.3ap-2007 specification also requires each backplane link to support multi-data rates of 1Gbps and 10 Gbps speeds. 10GBASE-KR and 1000BASE-KX is the electrical backplane physical layer implementation for the 10 Gigabit and 1 Gigabit Ethernet link defined in clause 72 and clause 70 respectively of the IEEE 802.3ap-2007 specification. The 10 Gbps backplane ethernet 10GBASE-KR implementation uses the XGMII interface to connect to the reconciliation sublayer (RS) with 64B/66B PCS encoding, Forward Error Correction (FEC), and Auto-Negotiation (AN) support to the Highest Common Denominator (HCD) technology with the partner link. The FEC, LT, and AN logic must be supported via Soft IP in the Core Fabric. The 1Gbps backplane ethernet 1000BASE-KX implementation uses the GMII interface to connect to the reconciliation sublayer (RS) with 8B/10B PCS encoding and Auto-Negotiation support to the HCD technology with the partner link.

Note: In the MegaWizard, you can implement a 10GBASE-KR link with 1000BASE-KX support by instantiating the 1G/10GbE and 10GBASE-KR PHY IP Core under the Ethernet in the Interfaces menu.

An Altera license is required in order to use the 1G/10GbE and 10GBASE-KR PHY IP Core which also supports 10GBASE-R and 1000BASE-X links and auto-negotiation between the 10 Gigabit and 1 Gigabit Ethernet data rates.

Related Links

[*Altera Transceiver PHY IP Core User Guide*](#)

[*10-Gbps Ethernet MAC MegaCore Function User Guide*](#)

10GBASE-R and 10GBASE-KR Transceiver Datapath Configuration

The following figure shows the transceiver blocks and settings enabled in a 10GBASE-R and 10GBASE-KR configurations.

10GBASE-R**Figure 6-2: 10GBASE-R Datapath Configuration**

The blocks shown as "Disabled" are not used, but incur latency. The blocks shown as "Bypassed" are not used and do not incur latency.


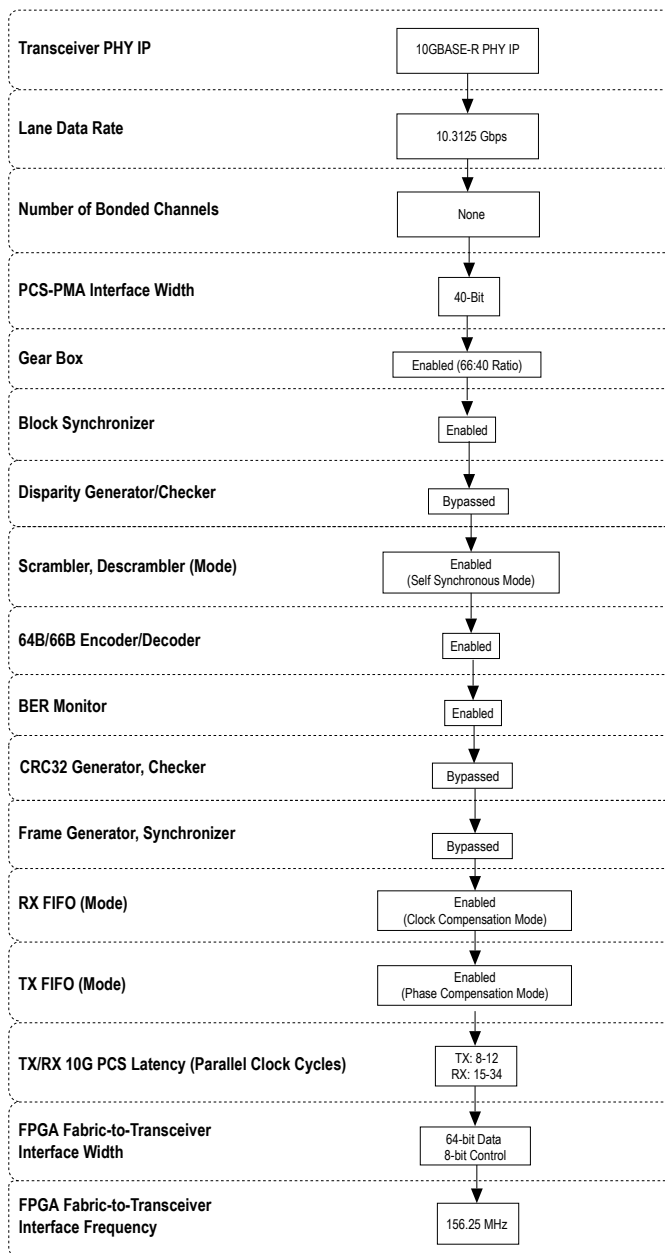


Figure 6-3: Transceiver Channel Datapath for a 10GBASE-R Configuration

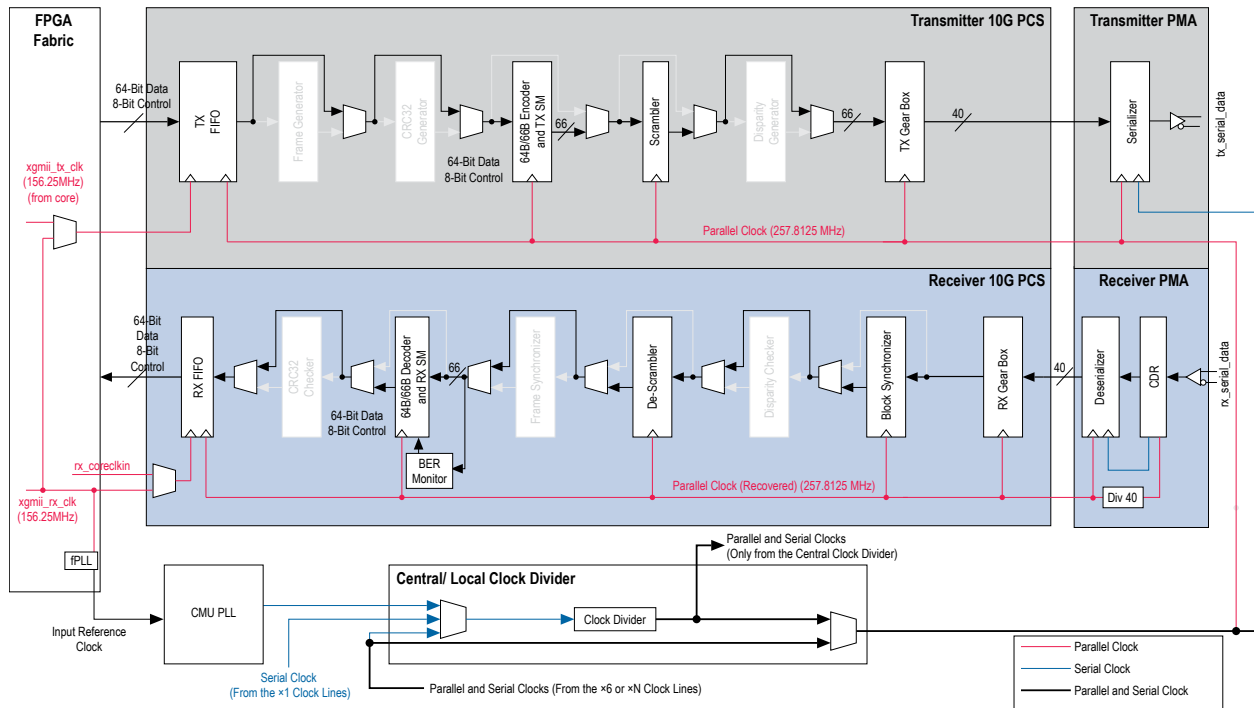

10GBASE-KR

Figure 6-4: 10GBASE-R/KR and 1000Base-X/KX Datapath Configuration


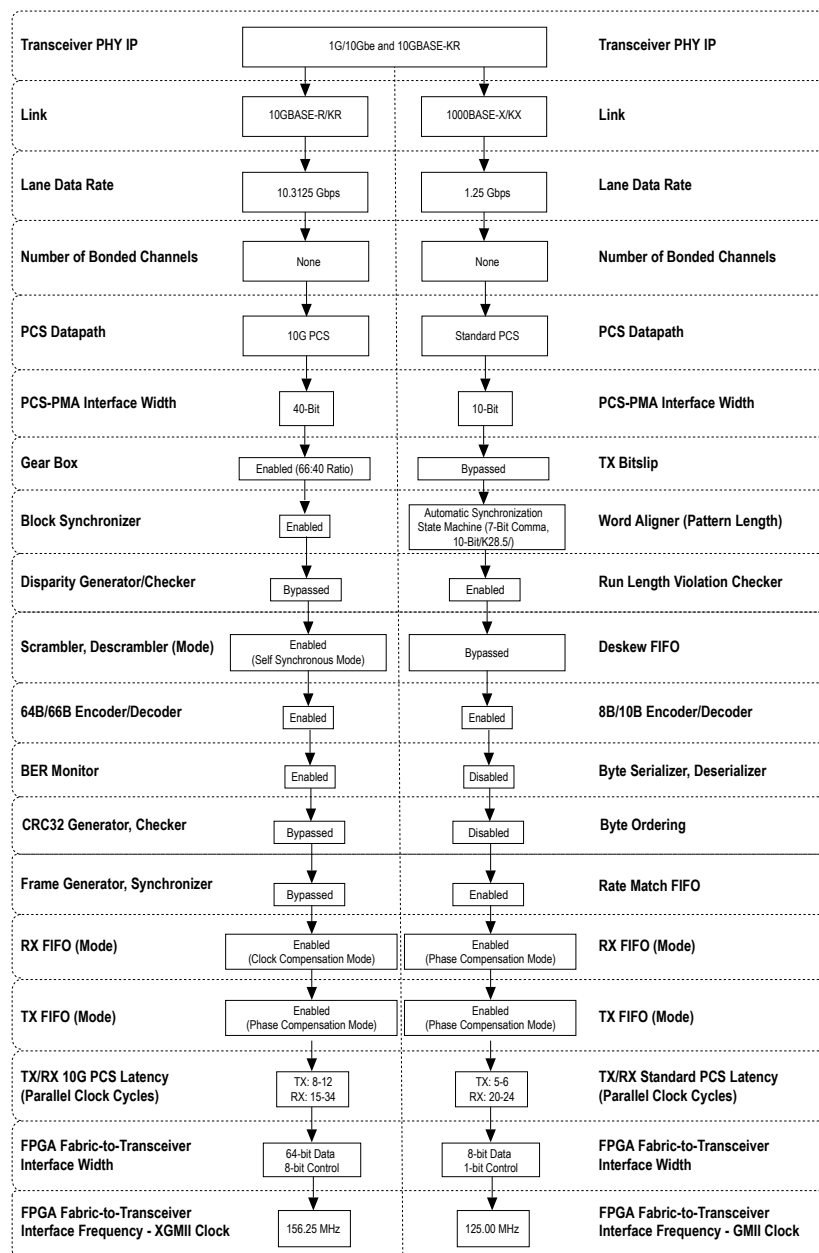


Figure 6-5: Transceiver Channel Datapath for 10GBASE-R/KR and 1000BASE-X/KX Configuration

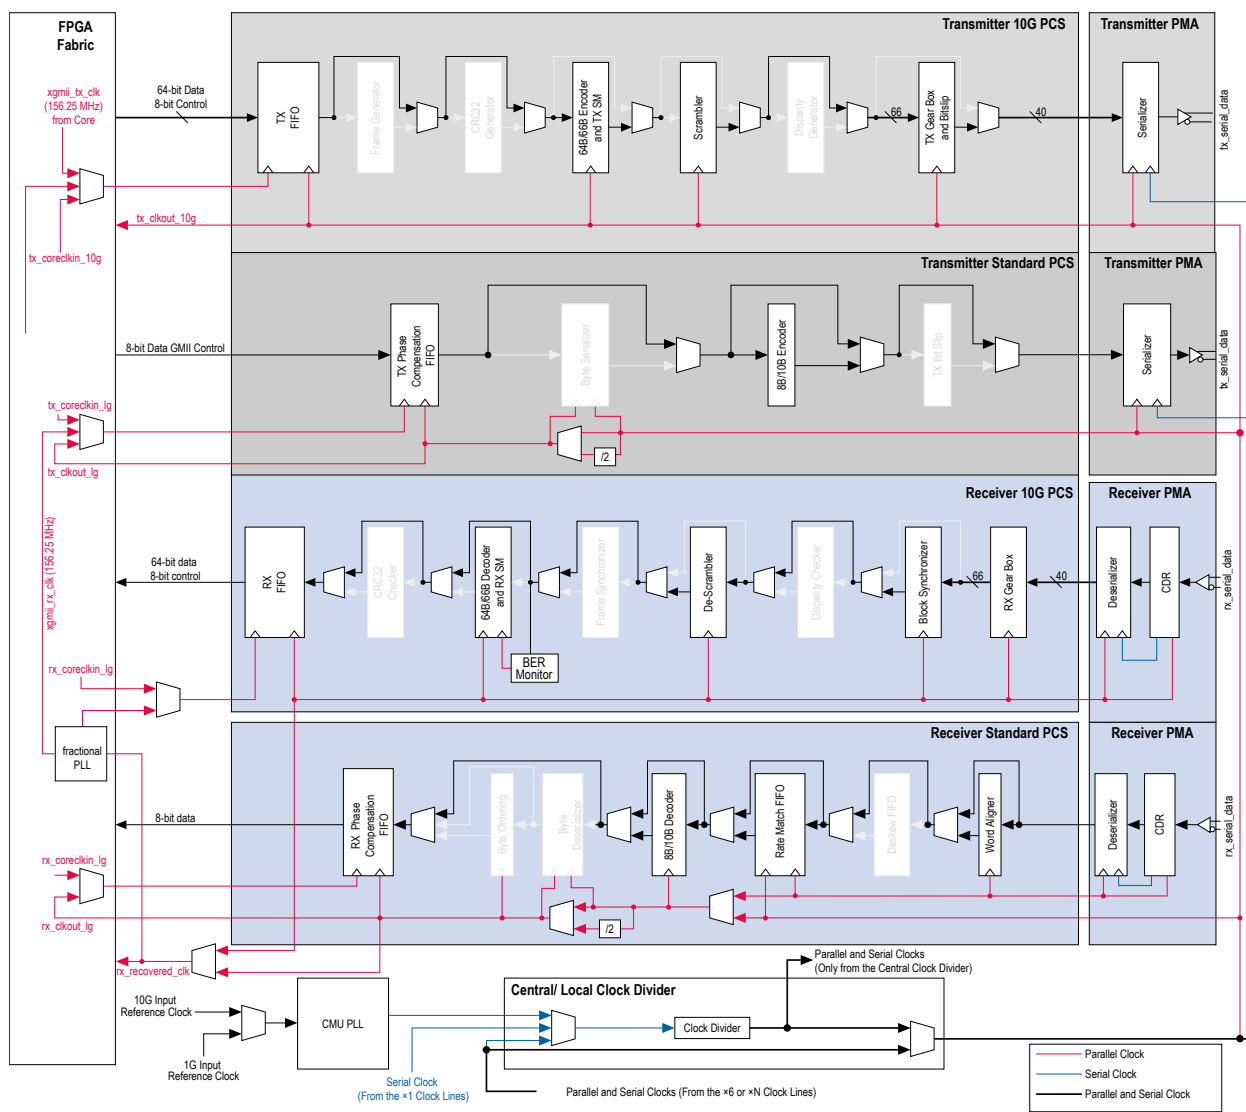


10GBASE-R and 10GBASE-KR Supported Features

The following features are supported by the transceivers in 10GBASE-R and 10GBASE-KR configurations.

64-Bit Single Data Rate (SDR) Interface to the MAC/RS in 10GBASE-R and 10GBASE-KR Configurations

Clause 46 of the IEEE 802.3-2008 specification defines the XGMII interface between the 10GBASE-R and 10GBASE-KR PCS and the Ethernet MAC/RS. The XGMII interface defines the 32-bit data and 4-bit wide control character clocked between the MAC/RS and the PCS at both the positive and negative edge (double data rate – DDR) of the 156.25 MHz interface clock.

The transceivers do not support the XGMII interface to the MAC/RS as defined in the IEEE 802.3-2008 specification. Instead, they support a 64-bit data and 8-bit control SDR interface between the MAC/RS and the PCS.

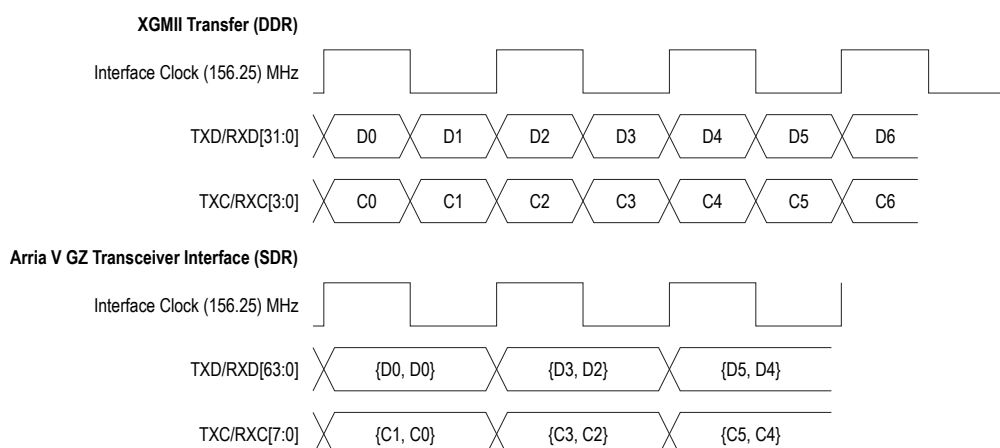Figure 6-6: XGMII Interface (DDR) versus Stratix V Transceiver Interface (SDR) for 10GBASE-R and 10GBASE-KR Configurations

64B/66B Encoding/Decoding in 10GBASE-R and 10GBASE-KR Configurations

The transceivers in 10GBASE-R and 10GBASE-KR configurations support 64B/66B encoding and decoding as specified in Clause 49 of the IEEE802.3-2008 specification. The 64B/66B encoder receives 64-bit data and 8-bit control code from the transmitter FIFO and converts it into 66-bit encoded data. The 66-bit encoded data contains two overhead sync header bits that the receiver PCS uses for block synchronization and bit-error rate (BER) monitoring.

The 64B/66B encoding also ensures enough transitions on the serial data stream for the receiver clock data recovery (CDR) to maintain its lock on the incoming data.

Transmitter and Receiver State Machines in 10GBASE-R and 10GBASE-KR Configurations

The transceivers in 10GBASE-R and 10GBASE-KR configurations implement the transmitter and receiver state diagrams shown in Figure 49-14 and Figure 49-15 of the IEEE802.3-2008 specification.

Besides encoding the raw data specified in the 10GBASE-R and 10GBASE-KR PCS, the transmitter state diagram performs functions such as transmitting local faults (LBLOCK_T) under reset, as well as transmitting error codes (EBLOCK_T) when the 10GBASE-R PCS rules are violated.

Besides decoding the incoming data specified in the 10GBASE-R and 10GBASE-KR PCS, the receiver state diagram performs functions such as sending local faults (LBLOCK_R) to the MAC/RS under reset and substituting error codes (EBLOCK_R) when the 10GBASE-R and 10GBASE-KR PCS rules are violated.

Block Synchronizer in 10GBASE-R and 10GBASE-KR Configurations

The block synchronizer in the receiver PCS determines when the receiver has obtained lock to the received data stream. It implements the lock state diagram shown in Figure 49-12 of the IEEE 802.3-2008 specification.

The block synchronizer provides a status signal to indicate whether it has achieved block synchronization or not.

Self-Synchronous Scrambling/Descrambling in 10GBASE-R and 10GBASE-KR Configurations

The scrambler/descrambler blocks in the transmitter/receiver PCS implements the self-synchronizing scrambler/descrambler polynomial $1 + x^{39} + x^{58}$, as described in clause 49 of the IEEE 802.3-2008 specification. The scrambler/descrambler blocks are self-synchronizing and do not require an initialization seed. Barring the two sync header bits in each 66-bit data block, the entire payload is scrambled or descrambled.

BER Monitor in 10GBASE-R and 10GBASE-KR Configurations

The BER monitor block in the receiver PCS implements the BER monitor state diagram shown in Figure 49-13 of the IEEE 802.3-2008 specification. The BER monitor provides a status signal to the MAC whenever the link BER threshold is violated.

The 10GBASE-R core and the 1G/10GbE and 10GBASE-KR PHY IP core (10GBASE-KR mode) provide a status flag to indicate a high BER whenever 16 synchronization header errors are received within a 125 μ s window.

Clock Compensation in 10GBASE-R and 10GBASE-KR Configurations

The receiver FIFO in the receiver PCS datapath compensates up to ± 100 ppm difference between the remote transmitter and the local receiver. The receiver FIFO does so by inserting Idles (/I/) and deleting Idles (/I/) or Ordered Sets (/O/), depending on the ppm difference.

- **Idle Insertion** — The receiver FIFO inserts eight /I/ codes following an /I/ or /O/ to compensate for clock rate disparity.
- **Idle (/I/) or Sequence Ordered Set (/O/) Deletion** — The receiver FIFO deletes either four /I/ codes or ordered sets (/O/) to compensate for the clock rate disparity. The receiver FIFO implements the following IEEE802.3-2008 deletion rules:
 - Deletes the lower four /I/ codes of the current word when the upper four bytes of the current word do not contain a Terminate /T/ control character.
 - Deletes one /O/ ordered set only when the receiver FIFO receives two consecutive /O/ ordered sets.

10GBASE-KR and 1000BASE-KX Link Training

The Link Training function defined in clause 72 of IEEE 802.3ap-2007 specification must be implemented in the Core Fabric. The 1G/10GbE and 10GBASE-KR PHY IP Link Training logic includes the Training Frame Generator, Training Frame Synchronizer, PRBS11 generator, control channel codec, Local Device (LD) transceiver transmit PMA pre-emphasis coefficient status reporting, the Link Partner (LP) transmit PMA pre-emphasis coefficient update request, and the receiver link training status.

Stratix V GS/GX channels employ three PMA transmit driver pre-emphasis taps: pre-tap, first post-tap or main-tap, and second post-tap as required and defined by clause 72, Section 72.7.1.10 Transmitter output waveform for 10GBASE-KR PHY operation. The pre-emphasis coefficients can be dynamically adjusted via Reconfiguration Controller.


10GBASE-KR and 1000BASE-KX Auto-Negotiation

The Auto-Negotiation function defined in clause 73 of IEEE 802.3ap-2007 specification must be implemented in the Core Fabric. The 1G/10GbE and 10GBASE-KR PHY IP Auto-Negotiation logic includes the Differential Manchester Encoding (DME) page codec, AN page lock and synchronizer, the Transmit, Receive, and Arbitration logic state machines, and port interfaces for supporting 10GBASE-KR4 operations.

1000BASE-X and 1000BASE-KX Transceiver Datapath

The following figure shows the transceiver datapath in 1000BASE-X and 1000BASE-KX configurations. The table shows the transceiver datapath clock frequencies for 1000BASE-X and 1000BASE-KX configurations.

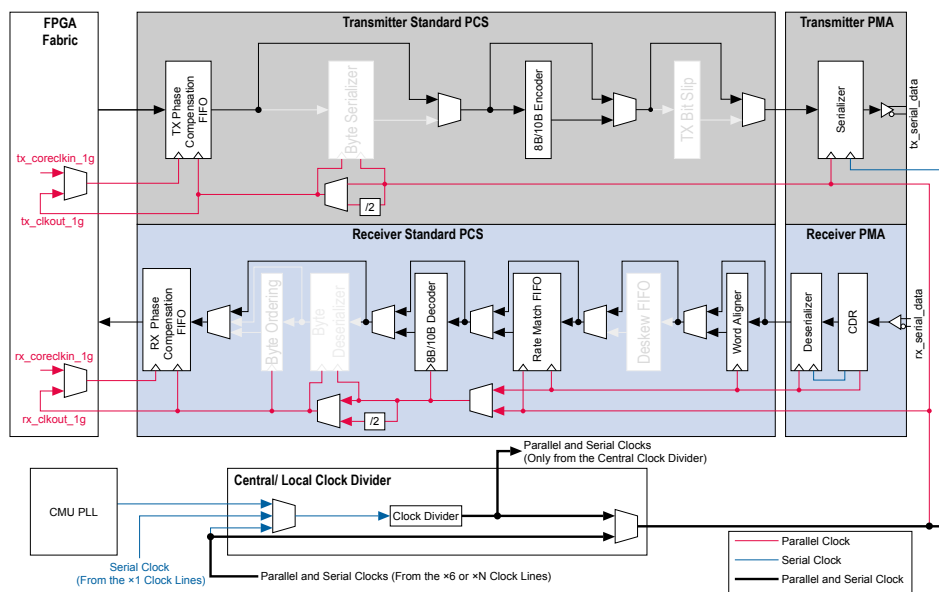Figure 6-7: 1000BASE-X and 1000BASE-KX Datapath Configurations



The following table lists the transceiver datapath clock frequencies in 1000BASE-X and 1000BASE-KX functional modes.

Table 6-2: Transceiver Datapath Clock Frequencies in 1000BASE-X and 1000BASE-KX Configurations

Functional Mode	Data Rate	Parallel Recovered Clock and Low-Speed Parallel Clock Frequency	FPGA Fabric-Transceiver Interface Clock Frequency
1000BASE-X and 1000BASE-KX	1.25 Gbps	125 MHz	125 MHz

1000BASE-X and 1000BASE-KX Supported Features

The following features are supported by the transceivers in 1000BASE-X and 1000BASE-KX configurations.

8B/10B Encoder in 1000BASE-X and 1000BASE-KX Configurations

In 1000BASE-X and 1000BASE-KX modes, the 8B/10B encoder clocks in 8-bit data and 1-bit control identifiers from the transmitter phase compensation FIFO and generates 10-bit encoded data. The 10-bit encoded data is fed to the serializer.

Idle Ordered-Set Generation in 1000BASE-X and 1000BASE-KX Configurations


The IEEE 802.3 specification requires the 1000BASE-X and 1000BASE-KX PHY to transmit idle ordered sets (/I/) continuously and repetitively whenever the GMII is idle. This ensures that the receiver maintains bit and word synchronization whenever there is no active data to be transmitted.

In 1000BASE-X and 1000BASE-KX functional modes, any /Dx.y/ following a /K28.5/ comma is replaced by the transmitter with either a /D5.6/ (/I1/ ordered set) or a /D16.2/ (/I2/ ordered set), depending on the current running disparity. The exception is when the data following the /K28.5/ is /D21.5/ (/C1/ ordered set) or /D2.2/ (/C2/) ordered set. If the running disparity before the /K28.5/ is positive, an /I1/ ordered set is generated. If the running disparity is negative, a /I2/ ordered set is generated. The disparity at the end of

a /I1/ is the opposite of that at the beginning of the /I1/. The disparity at the end of a /I2/ is the same as the beginning running disparity (right before the idle code). This ensures a negative running disparity at the end of an idle ordered set. A /Kx.y/ following a /K28.5/ is not replaced.

Note: /D14.3/, /D24.0/, and /D15.8/ are replaced by /D5.6/ or /D16.2/ (for /I1/, /I2/ ordered sets). /D21.5/ (part of the /C1/ order set) is not replaced.

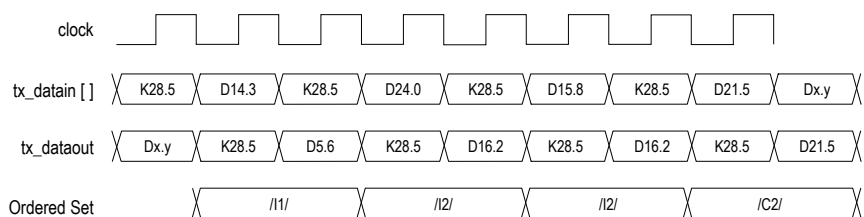Figure 6-8: Example of Automatic Ordered Set Generation




Reset Condition in 1000BASE-X and 1000BASE-KX Configurations

After deassertion of `tx_digitalreset`, the 1000BASE-X and 1000BASE-KX transmitters automatically transmit three /K28.5/ comma code groups before transmitting user data on the `tx_datain` port. This could affect the synchronization state machine behavior at the receiver.

Depending on when you start transmitting the synchronization sequence, there could be an even or odd number of /Dx.y/ code groups transmitted between the last of the three automatically sent /K28.5/ code groups and the first /K28.5/ code group of the synchronization sequence. If there is an even number of /Dx.y/ code groups received between these two /K28.5/ code groups, the first /K28.5/ code group of the synchronization sequence begins at an odd code group boundary (`rx_even = FALSE`). An IEEE802.3-compliant 1000BASE-X or 1000BASE-KX synchronization state machine treats this as an error condition and goes into the loss of sync state.

The following figure shows an example of even numbers of /Dx.y/ between the last automatically sent /K28.5/ and the first user-sent /K28.5/. The first user-sent /K28.5/ code group received at an odd code group boundary in cycle $n + 3$ takes the receiver synchronization state machine in the loss of sync state. The first synchronization ordered set /K28.5/Dx.y/ in cycles $n + 3$ and $n + 4$ is discounted and three additional ordered sets are required for successful synchronization.

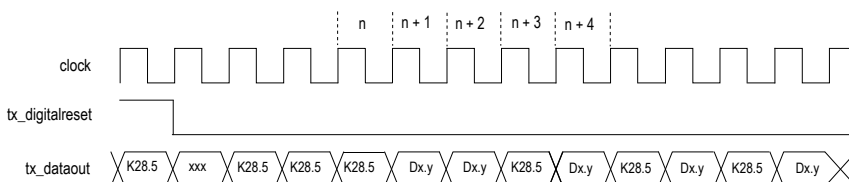Figure 6-9: Example of Reset Condition in 1000BASE-X and 1000BASE-KX Configurations



Rate Match FIFO in 1000BASE-X and 1000BASE-KX Configurations


In 1000BASE-X and 1000BASE-KX modes, the rate match FIFO is capable of compensating for up to ± 100 ppm (200 ppm total) difference between the upstream transmitter and the local receiver reference clock. The 1000BASE-X and 1000BASE-KX protocols require the transmitter to send idle ordered sets /I1/ (/K28.5/D5.6/) and /I2/ (/K28.5/D16.2/) during inter-packet gaps adhering to the rules listed in the IEEE 802.3 specification.

The rate match operation begins after the synchronization state machine in the word aligner indicates synchronization is acquired by driving the `rx_syncstatus` signal high. The rate matcher deletes or inserts both symbols (/K28.5/ and /D16.2/) of the /I2/ ordered sets even if it requires deleting only one symbol to

prevent the rate match FIFO from overflowing or under-running. It can insert or delete as many /I2/ ordered sets as necessary to perform the rate match operation.


The following figure shows an example of rate match FIFO deletion where three symbols are required to be deleted. Because the rate match FIFO can only delete /I2/ ordered set, it deletes two /I2/ ordered sets (four symbols deleted).

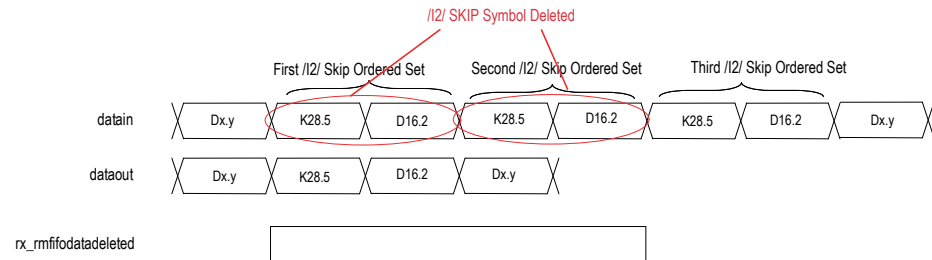Figure 6-10: Example of Rate Match Deletion in 1000BASE-X and 1000BASE-KX Configurations



The following figure shows an example of rate match FIFO insertion in the case where one symbol is required to be inserted. Because the rate match FIFO can only delete /I2/ ordered set, it inserts one /I2/ ordered set (two symbols inserted).

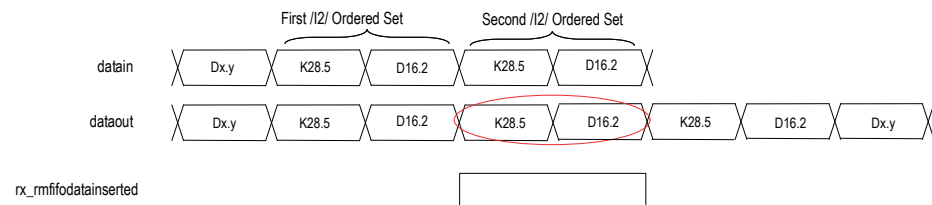Figure 6-11: Example Rate Match Insertion in 1000BASE-X and 1000BASE-KX Configurations



Two register bits, `rx_rmifodatadeleted` and `rx_rmifodatainserted`, indicate rate match FIFO deletion and insertion events. Both the `rx_rmifodatadeleted` and `rx_rmifodatainserted` status flags are latched High during deleted and inserted /I2/ ordered sets.

Word Aligner in 1000BASE-X and 1000BASE-KX Configurations

The word aligner in 1000BASE-X and 1000BASE-KX functional modes is configured in automatic synchronization state machine mode. The Quartus II software automatically configures the synchronization state machine to indicate synchronization when the receiver receives three consecutive synchronization ordered sets. A synchronization ordered set is a /K28.5/ code group followed by an odd number of valid /Dx.y/ code groups. The fastest way for the receiver to achieve synchronization is to receive three continuous {/K28.5/, /Dx.y/} ordered sets.

Receiver synchronization is indicated on the `rx_syncstatus` port of each channel. A high on the `rx_syncstatus` port indicates that the lane is synchronized; a low on the `rx_syncstatus` port indicates that the lane has fallen out of synchronization. The receiver loses synchronization when it detects four invalid code groups separated by less than three valid code groups or when it is reset.

Synchronization State Machine Parameters in 1000BASE-X and 1000BASE-KX Configurations

The following table lists the synchronization state machine parameters when configured in 1000BASE-X or 1000BASE-KX mode.

Synchronization State Machine Parameters	Settings
Number of valid {/K28.5/, /Dx,y/} ordered sets received to achieve synchronization	3
Number of errors received to lose synchronization	4
Number of continuous good code groups received to reduce the error count by 1	4

Transceiver Clocking in 10GBASE-R, 10GBASE-KR, 1000BASE-X, and 1000BASE-KX Configurations

The CMU PLL or the auxiliary transmit (ATX) PLLs in a transceiver bank generate the transmitter serial and the fractional PLL for the parallel clocks for the 10GBASE-R, 10GBASE-KR, 1000BASE-X, and 1000BASE-KX channels. The following table lists the configuration details.

Table 6-3: Input Reference Clock Frequency and Interface Speed Specifications for 10GBASE-R, 10GBASE-KR, and 1000BASE-KX Configurations

PHY IP Type	PHY Type	Input Reference Clock Frequency (MHz)	FPGA Fabric-Transceiver Interface Width	FPGA Fabric-Transceiver Interface Frequency (MHz)
10GBASE-R PHY IP	10GBASE-R	644.53125, 322.265625	64-bit data, 8-bit control	156.25
1G/10GbE and 10GBASE-KR PHY IP	10GBASE-R and 10GBASE-KR	644.53125, 322.265625	64-bit data, 8-bit control	156.25
1G/10GbE and 10GBASE-KR PHY IP	1000BASE-X and 1000BASE-KX	125, 62.5	8-bit data, gmii_tx_en and gmii_tx_err control	125

Interlaken

Interlaken is a scalable, chip-to-chip interconnect protocol that enables transmission speeds from 10 to more than 100 Gbps.

Arria V devices support a transmission speed of up to 12.5 Gbps per lane in an Interlaken configuration. All the PCS blocks in the Interlaken configuration conform to the Interlaken Protocol Definition, Rev 1.2.

In the MegaWizard Plug-In Manager, you can implement an Interlaken link by instantiating the **Interlaken PHY IP** under **Interlaken** in the Interfaces menu.

Related Links

[Refer to the Interlaken PHY IP Core chapter in the Altera Transceiver PHY IP Core User Guide](#)

Transceiver Datapath Configuration

Figure 6-12: Interlaken Datapath Configuration

Blocks shown as “Disabled” are not used but incur latency. Blocks shown as “Bypassed” are not used and do not incur any latency. The maximum data rates and frequencies are for the fastest speed grade devices.


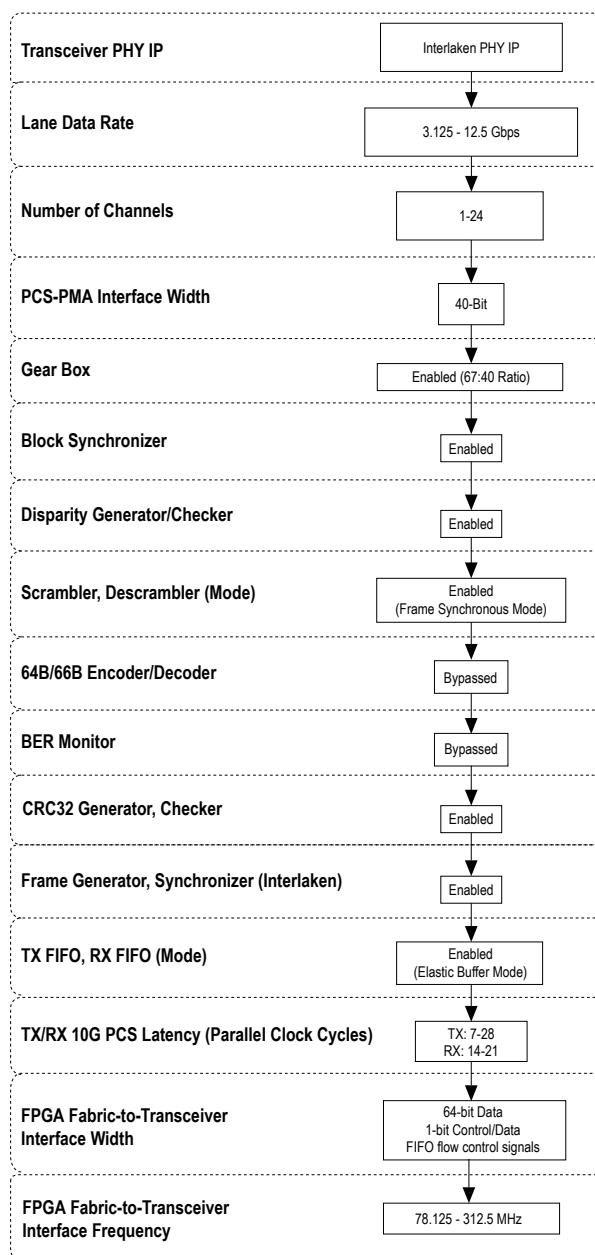


Figure 6-13: Transceiver Channel Datapath for Interlaken Configuration

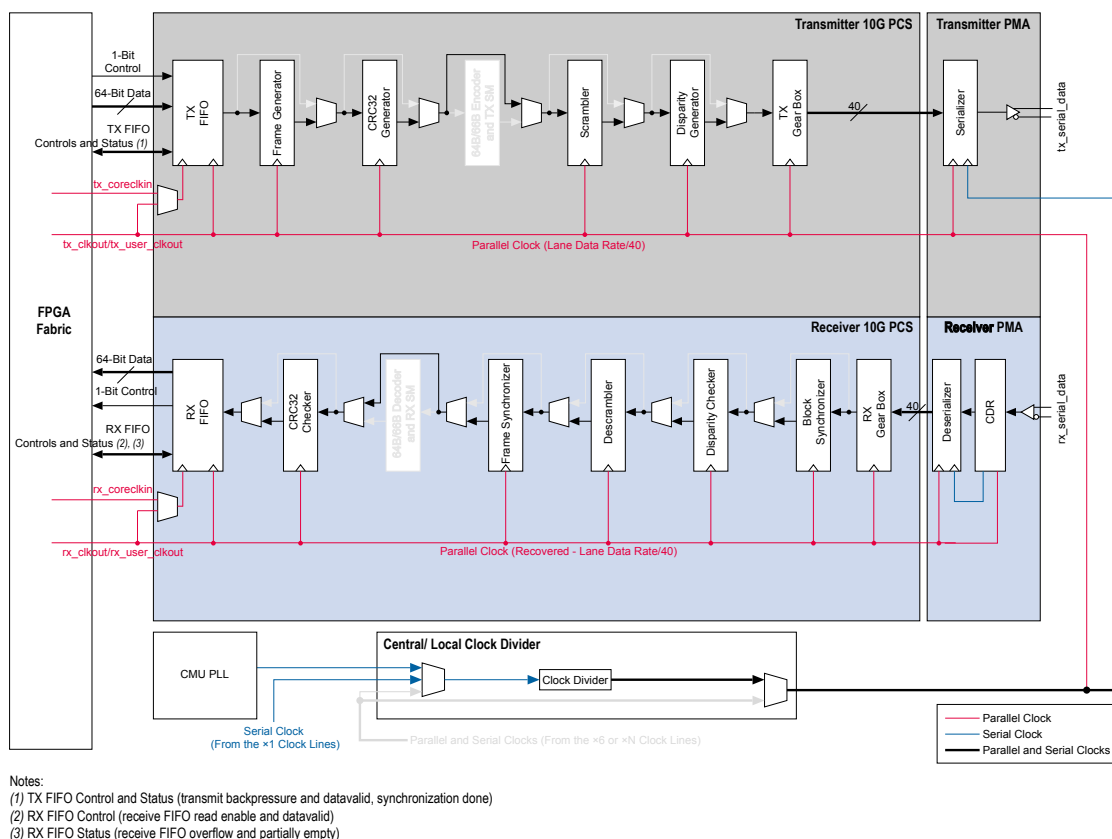

Supported Features

The Interlaken protocol supports a number of framing layer functions. The functions are defined in the Interlaken Protocol Definition, Rev 1.2.

Table 6-4: Supported Features in Interlaken Configuration

Feature	Supported
Metaframe generation and payload insertion	Yes
Block synchronization (word alignment) and metaframe synchronization (frame synchronization)	Yes
64B/67B framing	Yes
±96 bits disparity maintenance	Yes
Frame synchronous scrambling and descrambling	Yes
Diagnostic word generation	Yes
Framing Layer Control Word Forwarding	Yes
CRC-32 generation and checking of lane data integrity	Yes
Multi-lane deskew alignment	No
Transmit and receive FIFO backpressure control and handshake	Yes

Block Synchronizer

The block synchronizer in the receiver PCS achieves and maintains a 64B/67B word boundary lock. This block searches for valid synchronization header bits within the data stream and achieves lock after 64 consecutive legal synchronization patterns are found. After a 64B/67B word boundary lock is achieved, the block synchronizer continuously monitors and flags for invalid synchronization header bits. If 16 or more invalid synchronization header bits are found within 64 consecutive word boundaries, the block synchronizer deasserts the lock state and searches again for valid synchronization header bits.

The block synchronizer implements the flow diagram shown in Figure 13 of Interlaken Protocol Definition v1.2 and provides the word lock status to the FPGA fabric.

64B/67B Frame Generator

The transmit frame generator implements 64B/67B encoding, as explained in Interlaken Protocol Definition v1.2. The Interlaken metaframe generator synchronously generates the framing layer control words, frame synchronizer, scrambler state, skip words, and diagnostic word, and maps the transmitter data into the payload of the metaframes. The metaframe length is programmable from 5 to a maximum value of 8191, 8-byte words.

Note: Ensure that the metaframe length is programmed to the same value for both the transmitter and receiver.

Frame Synchronizer

The receive frame synchronizer delineates the metaframe boundaries and searches for each of the framing layer control words: Synchronization, Scrambler State, Skip, and Diagnostic. When four consecutive synchronization words have been identified, the frame synchronizer achieves the frame locked state. Subsequent metaframes are then checked for valid synchronization and scrambler state words. If four consecutive invalid synchronization words or three consecutive mismatched scrambler state words are received, the frame synchronizer loses frame lock. In addition, the frame synchronizer provides a receiver metaframe lock status to the FPGA fabric.

Running Disparity

The disparity generator inverts the sense of bits in each transmitted word to maintain a running disparity of ± 96 bit boundary. It supplies a framing bit in bit position 66 as explained in Table 4 of Interlaken Protocol Definition Revision 1.2. The framing bit enables the disparity checker to identify whether bits[63:0] for that word are inverted.

Frame Synchronous Scrambling/Descrambling

The scrambler/descrambler block in the transmitter/receiver PCS implements the scrambler/descrambler polynomial $x^{58} + x^{39} + 1$ per Interlaken Protocol Definition Revision 1.2. Synchronization and Scrambler State Words, as well as the 64B/67B framing bits are not scrambled/descrambled. The Interlaken PHY IP core automatically programs random linear feedback shift register (LFSR) initialization seed values per lane.

The receiver PCS synchronizes the scrambler with the metaframe as described in the state flow shown in Figure 1 of Interlaken Protocol Definition Revision 1.2.

The frame synchronizer features a whole set of error and performance monitoring ports to the FPGA fabric interface and register status bits when using the Avalon® Memory-Mapped Management Interface. A receiver ready port, frame lock status, and cyclic redundancy check (CRC)-32 error detection port is available to the FPGA fabric. The Avalon Memory-Mapped Management Interface provides additional functionality with word boundary lock, frame lock status, synchronization word error detection, scrambler mismatch error, and CRC-32 error detection status register bits.

Skip Word Insertion

The frame generator generates the mandatory fixed location skip words with every metaframe following the scrambler state word and generates additional skip words based on the transmitter FIFO capacity state.

Skip Word Deletion

The frame synchronizer does not delete skip words. Instead, the frame synchronizer forwards the skip words it receives to the MAC layer so the MAC can maintain and perform deskew alignment.

Diagnostic Word Generation and Checking of Lane Data Integrity (CRC-32)

The CRC-32 generator calculates the CRC for each metaframe and appends it to the diagnostic word of the metaframe. An optional CRC-32 error flag is also provided to the FPGA fabric.

Framing Layer Control Word Forwarding

The four metaframe framing layer control words-Synchronization, Scrambler State, Skip, and Diagnostic Words-are not deleted but forwarded to the MAC layer. This action enables the MAC layer to employ multi-lane deskew alignment within the FPGA fabric.

Multi-Lane Deskew Alignment

The Interlaken PHY IP does not support multi-lane deskew alignment. You must implement the multi-lane deskew alignment state machine in the core fabric or the Altera Interlaken MegaCore® function within the FPGA fabric.

Transmit and Receive FIFO Control and Status

The Interlaken PCS configures the transmit and receive FIFOs in elastic buffer mode. In this mode of operation, a lane synchronization, backpressure and FIFO control, and status port signals are provided to the MAC layer for handshaking.

Transceiver Multi-Lane Bonding and Transmit Skew

A soft-bonding IP is used for Interlaken bonding in the transceivers. The transceiver clocking in each lane is configured as non-bonded. For multi-lane designs, a dedicated PLL reference clock pin that is equidistant from the transmit PLLs in each bank must be selected. You must tightly match lane board traces to minimize lane-to-lane skew.


Related Links

*For more information about Interlaken PHY IP control and status signals associated with each feature, refer to the Interlaken PHY IP Core chapter in the Altera Transceiver PHY IP Core User Guide
Interlaken MegaCore Function User Guide*

Transceiver Clocking

Describes the transceiver clocking for the Interlaken protocol.

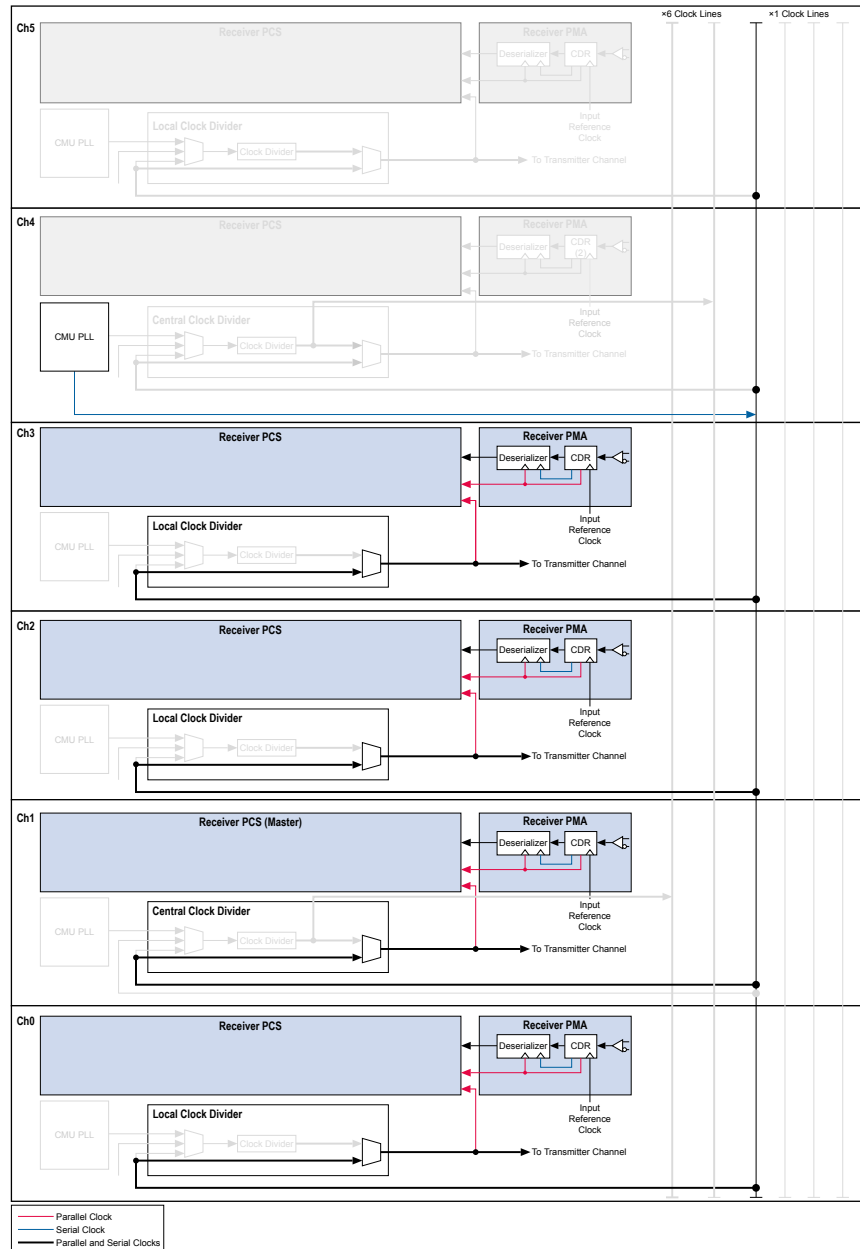Figure 6-14: Clocking Resources Available in a Four-Lane Interlaken Configuration



A CMU PLL may provide a clock for up to five Interlaken lanes within a transceiver bank. If an ATX PLL is used, the PLL can clock up to six Interlaken lanes in a transceiver bank.

Note: To enable the ATX PLL, you must select **ATX PLL** for the **PLL type** parameter in the Interlaken PHY IP.

PCI Express (PCIe)—Gen1, Gen2, and Gen3

The PCIe specification (version 3.0) provides implementation details for a PCIe-compliant physical layer device at Gen1 (2.5 Gbps), Gen2 (5 Gbps), and Gen3 (8 Gbps) signaling rates.

The devices have built-in PCIe hard IP blocks to implement the PHY MAC layer, data link layer, and transaction layer of the PCIe protocol stack. Up to four PCIe hard IP block reside within a Arria V device. If you enable the PCIe hard IP block, the transceiver interfaces with the hard IP block. Otherwise, the transceiver interfaces directly through the PIPE interface. You must then implement a Soft-IP MAC layer, data link layer, and transaction layer to the PIPE interface from the core fabric.

You can configure the transceivers in a PCIe functional configuration using one of the following methods:

- Arria V GZ Hard IP for PCI Express
- PHY IP core for PCI Express (PIPE)

The following table shows the two methods supported by transceivers in a PCIe functional configuration.

Table 6-5: Support for Transceivers

Support	Arria V GZ Hard IP for PCI Express	PHY IP Core for PCI Express (PIPE)
Gen1, Gen2, and Gen3 data rates	Yes	Yes
MAC, data link, and transaction layer	Yes	—
Transceiver interface	Hard IP through PIPE 3.0-like	PIPE 2.0 for Gen1 and Gen2 PIPE 3.0-like for Gen3 with Gen1/Gen2 support

In the MegaWizard Plug-In Manager, you can implement the PHY IP Core for PCI Express (PIPE) configuration by instantiating the **PHY IP Core for PCI Express (PIPE)** under **PCI Express** in the Interfaces menu.

Arria V GZ transceivers support x1, x2, x4, and x8 lane configurations. In a PCIe x1 configuration, the PCS and PMA blocks of each channel are clocked and reset independently. PCIe x2, x4, and x8 configurations support channel bonding for two-lane, four-lane, and eight-lane PCIe links. In these bonded channel configurations, the PCS and PMA blocks of all bonded channels share common clock and reset signals.

Related Links

[Arria V Hard IP for PCI Express User Guide](#)

[Refer to the PHY IP Core for PCI Express \(PIPE\) chapter in the Altera Transceiver PHY IP Core User Guide](#)

Transceiver Datapath Configuration

The transceiver datapaths for PCI Express are different depending on whether or not Gen3 is enabled.

Figure 6-15: PCIe Gen1 and Gen2 PIPE Datapath Configuration

This transceiver datapath configuration is for a configuration without Gen3 enabled.


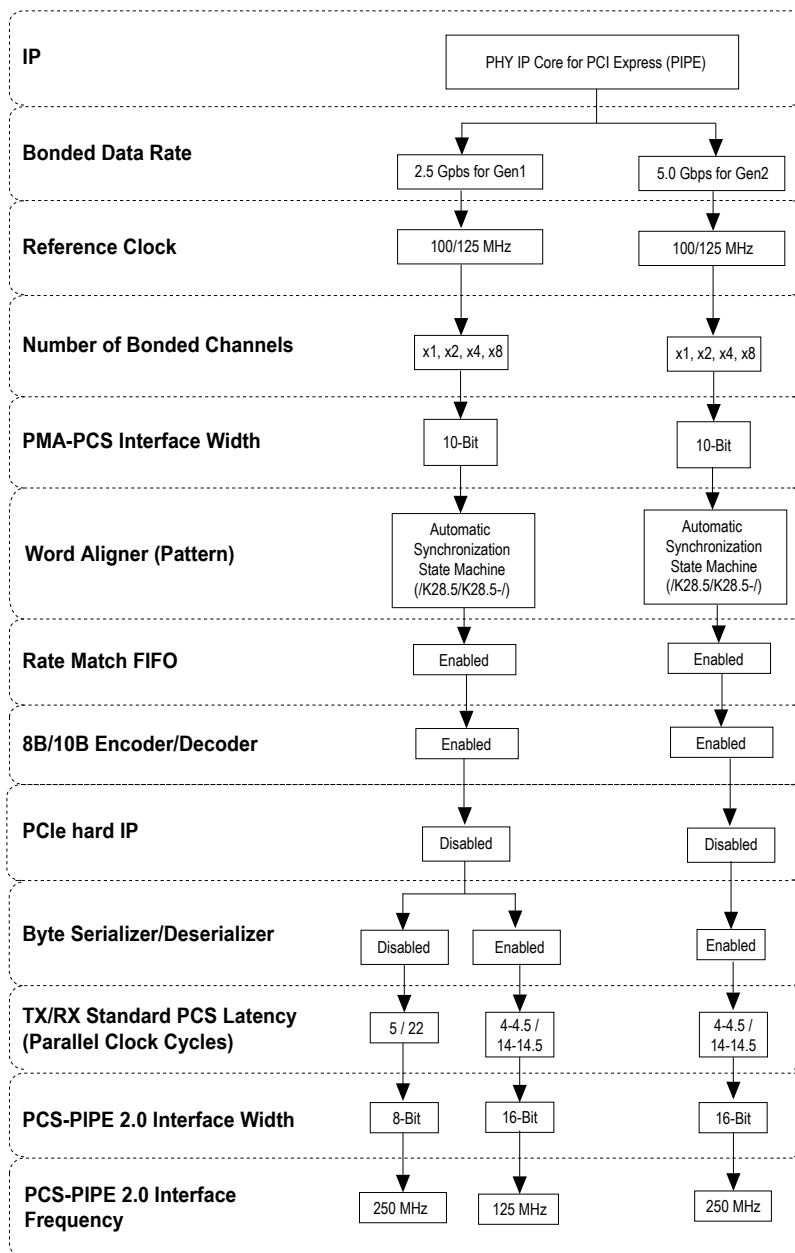


Figure 6-16: PCIe Gen1, Gen2, and Gen3 Hard IP and PHY IP Core for PCI Express Datapath Configuration

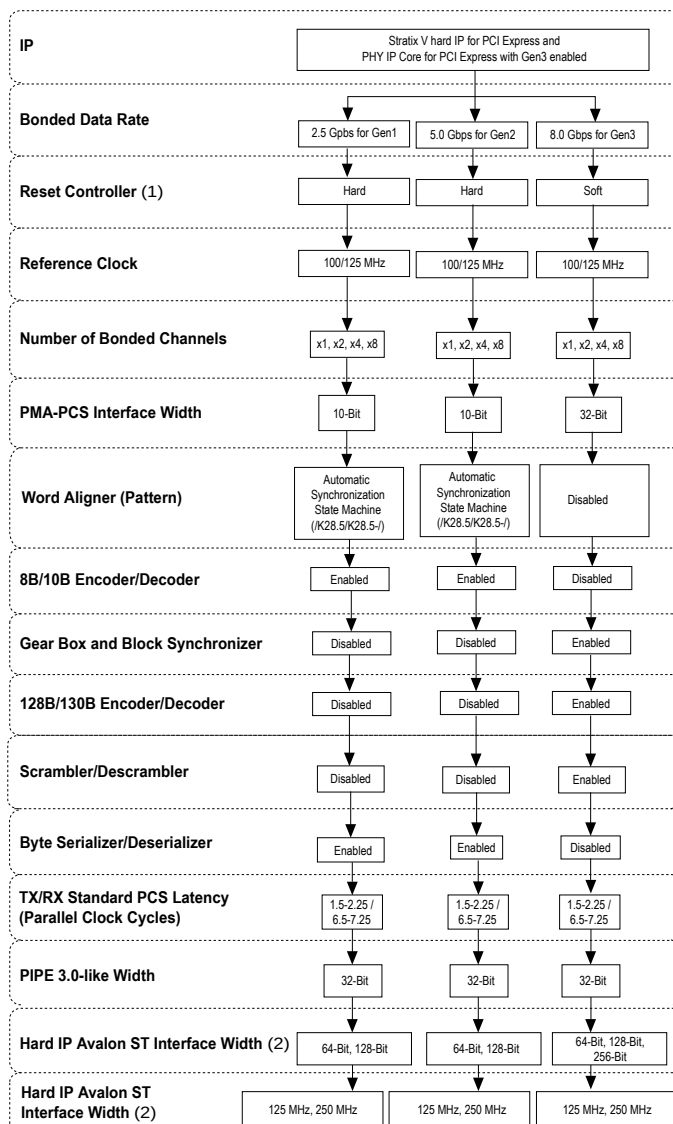This transceiver datapath configuration is for a configuration with Gen3 enabled.



Notes:


(1) The PHY IP Core for PCI Express (PIPE configuration) employs the Embedded Reset Controller IP. It does not use the Hard or Soft Reset Controller employed in the Hard IP for PCI Express (HIP configuration).

(2) Does not apply to PHY IP Core for PCI Express configuration. Applies only to Hard IP for PCI Express configuration. For more information, refer to the Arria V Hard IP for PCI Express User Guide.

Transceiver Channel Datapath


The following figure shows the Arria V GZ transmitter and receiver channel datapath for PCIe Gen1/Gen2 configurations when using PIPE configuration with Gen3 disabled. In this configuration, the transceiver connects to a PIPE 2.0 compliant interface.

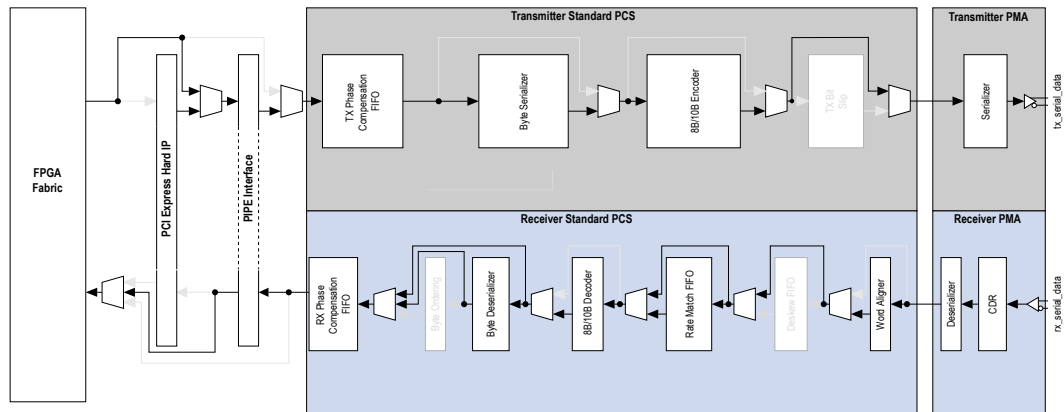Figure 6-17: Transceiver Channel Datapath for PCIe Gen1/Gen2 in PIPE Configuration with Gen3 Disabled



The following figure shows the Arria V GZ transmitter and receiver channel datapath for PCIe Gen1/Gen2/Gen3 configurations with a 32-bit PIPE 3.0-like interface and PCI Express Base Specification Version 3.0 is enabled.

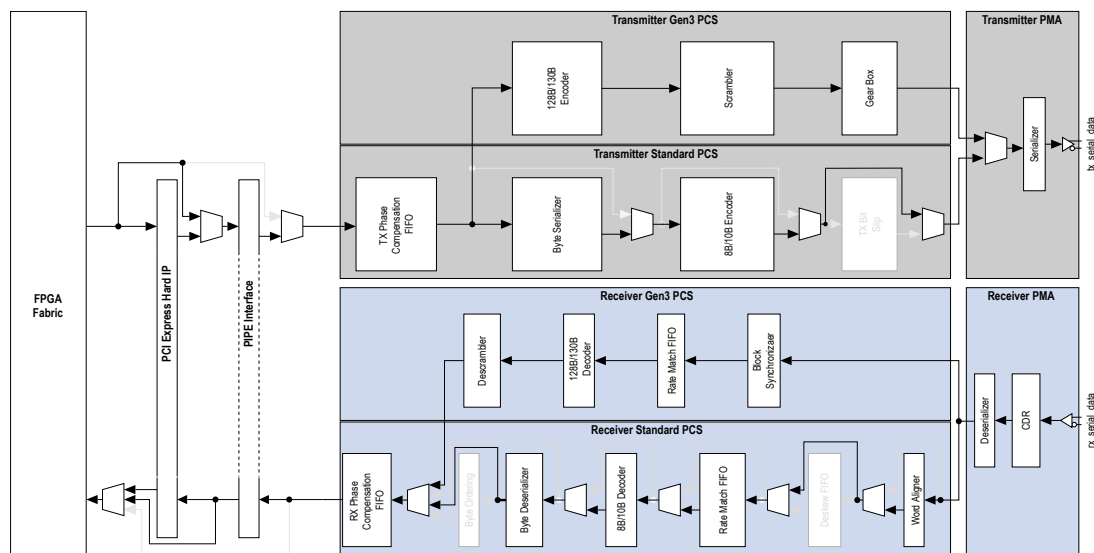Figure 6-18: Transceiver Channel Datapath for PCIe Gen1/Gen2/Gen3 Configurations



Related Links

[Transceiver Architecture in Arria V Devices](#)

Supported Features for PCIe Configurations

The features supported for a PCIe configuration are different for the 2.5 Gbps, 5 Gbps, and 8 Gbps data rate configurations.

Table 6-6: Supported Features for PCIe Configurations

Feature	Gen1 (2.5 Gbps)	Gen2 (5 Gbps)	Gen3 (8 Gbps)
x1, x2, x4, x8 link configurations	Yes	Yes	Yes
PCIe-compliant synchronization state machine	Yes	Yes	Yes
±300 ppm (total 600 ppm) clock rate compensation	Yes	Yes	Yes
8-bit FPGA fabric-transceiver interface (PIPE 2.0)	Yes	—	—
16-bit FPGA fabric-transceiver interface (PIPE 2.0)	Yes	Yes	—
32-bit FPGA fabric-transceiver interface (PIPE 3.0-like)	—	—	Yes
64-bit Hard IP Avalon-ST interface width (Hard IP only)	Yes	Yes	Yes
128-bit Hard IP Avalon-ST interface width (Hard IP only)	Yes	Yes	Yes
256-bit Hard IP Avalon-ST interface width (Hard IP only)	—	Yes	Yes
Transmitter driver electrical idle	Yes	Yes	Yes
Receiver Detection	Yes	Yes	Yes
8B/10B encoder/decoder disparity control	Yes	Yes	—
128B/130B encoder/decoder	—	—	Yes
Power state management	Yes	Yes	Yes
Receiver PIPE status encoding (pipe_rxstatus[2:0])	Yes	Yes	Yes
Dynamic switching between 2.5 Gbps and 5 Gbps signaling rate	—	Yes	—

Feature	Gen1 (2.5 Gbps)	Gen2 (5 Gbps)	Gen3 (8 Gbps)
Dynamic switching between 2.5 Gbps, 5 Gbps, and 8 Gbps signaling rate	—	—	Yes
Dynamic transmitter margining for differential output voltage control	—	Yes	Yes
Dynamic transmitter buffer de-emphasis of -3.5 dB and -6 dB	—	Yes	Yes
Dynamic Gen3 transceiver pre-emphasis, de-emphasis, and equalization	—	—	Yes

PIPE 2.0 Interface

In a PCIe PIPE configuration, each channel has a PIPE interface block that transfers data, control, and status signals between the PHY-MAC layer and the transceiver channel PCS and PMA blocks. The PIPE configuration complies with the PIPE 2.0 specification. If you use a PIPE configuration, you must implement the PHY-MAC layer using soft IP in the FPGA fabric.

Besides transferring data, control, and status signals between the PHY-MAC layer and the transceiver, the PIPE interface block implements the following functions required in a PCIe-compliant physical layer device:

- Forcing the transmitter driver into the electrical idle state
- Initiating the receiver detect sequence
- Controlling the 8B/10B encoder/decoder
- Controlling the 128B/130B encoder/decoder
- Managing the PCIe power states
- Indicating the completion of various PHY functions
- Encoding the receiver status and error conditions on the `pipe_rxstatus[2:0]` signal, conforming to the PCIe PIPE 3.0 specification

Transceiver datapath clocking varies between non-bonded (x1) and bonded (x2, x4, and x8) configurations.

For more information about transceiver datapath clocking in different PIPE configurations, refer to “Transceiver Clocking for PCIe Gen1 and Gen2”.

Dynamic Switching Between Gen1 (2.5 Gbps) and Gen2 (5 Gbps) Signal Rates

In a PIPE configuration, the PIPE MegaWizard Plug-In Manager provides an input signal (`pipe_rate`) that is functionally equivalent to the RATE signal specified in the PCIe specification. A low-to-high transition on this input signal (`pipe_rate`) initiates a data rate switch from Gen1 to Gen2. A high-to-low transition on the input signal initiates a data rate switch from Gen2 to Gen1. The signaling rate switch between Gen1 and Gen2 is achieved by changing the transceiver datapath clock frequency between 250 MHz and 500 MHz, while maintaining a constant, 16-bit width transceiver interface.

Transmitter Electrical Idle Generation

The PIPE interface block in Arria V devices puts the transmitter buffer in the channel in an electrical idle state when the electrical idle input signal is asserted. During electrical idle, the transmitter buffer differential

and common configuration output voltage levels are compliant to the PCIe Base Specification 2.0 for both PCIe Gen1 and Gen2 data rates.

The PCIe specification requires the transmitter driver to be in electrical idle in certain power states. For more information about input signal levels required in different power states, refer to “Power State Management”.

Power State Management

The PCIe specification defines four power states—P0, P0s, P1, and P2—that the physical layer device must support to minimize power consumption:

- P0 is the normal operating state during which packet data is transferred on the PCIe link.
- P0s, P1, and P2 are low-power states into which the physical layer must transition as directed by the PHY-MAC layer to minimize power consumption.

The PIPE interface in Arria V transceivers provides an input port for each transceiver channel configured in a PIPE configuration.

Note: When transitioning from the P0 power state to lower power states (P0s, P1, and P2), the PCIe specification requires the physical layer device to implement power saving measures. Arria V transceivers do not implement these power saving measures except for putting the transmitter buffer in electrical idle in the lower power states.

8B/10B Encoder Usage for Compliance Pattern Transmission Support

The PCIe transmitter transmits a compliance pattern when the Link Training and Status State Machine (LTSSM) enters the Polling.Compliance substate. The Polling.Compliance substate is used to assess if the transmitter is electrically compliant with the PCIe voltage and timing specifications.

Receiver Electrical Idle Inference

The PCIe protocol allows inferring the electrical idle condition at the receiver instead of detecting the electrical idle condition with analog circuitry.

In all PIPE configurations, (x1, x2, x4, and x8), each receiver channel PCS has an optional Electrical Idle Inference module that implements the electrical idle inference conditions specified in the PCIe Base Specification 2.0.

Receiver Status

The PCIe specification requires the PHY to encode the receiver status on a 3-bit status signal (`pipe_rxstatus[2:0]`). This status signal is used by the PHY-MAC layer for its operation. The PIPE interface block receives status signals from the transceiver channel PCS and PMA blocks, and encodes the status on the `pipe_rxstatus[2:0]` signal to the FPGA fabric. The encoding of the status signals on the `pipe_rxstatus[2:0]` signal conforms to the PCIe specification.

Receiver Detection

The PIPE interface block in Arria V transceivers provides an input signal (`pipe_txdetectrx_loopback`) for the receiver detect operation required by the PCIe protocol during the Detect state of the LTSSM. When the `pipe_txdetectrx_loopback` signal is asserted in the P1 power state, the PCIe interface block sends a command signal to the transmitter driver in that channel to initiate a receiver detect sequence. In the P1 power state, the transmitter buffer must always be in the electrical idle state. After receiving this command signal, the receiver detect circuitry creates a step voltage at the output of the transmitter buffer. If an active receiver (that complies with the PCIe input impedance requirements) is present at the far end, the time constant of the step voltage on the trace is higher when compared with the time constant of the step voltage when the receiver is not present. The receiver detect circuitry monitors the time constant of the

step signal seen on the trace to determine if a receiver was detected. The receiver detect circuitry requires a 125-MHz clock for operation that you must drive on the `fixedclk` port.

Note: For the receiver detect circuitry to function reliably, the transceiver on-chip termination must be used and the AC-coupling capacitor on the serial link and the receiver termination values used in your system must be compliant with the PCIe Base Specification 2.0.

The PIPE core provides a 1-bit PHY status (`pipe_phystatus`) and a 3-bit receiver status signal (`pipe_rxstatus[2:0]`) to indicate whether a receiver was detected or not, as per the PIPE 2.0 specifications.

Gen1 and Gen2 Rate Match FIFO

In compliance with the PCIe protocol, Arria V receiver channels have a rate match FIFO to compensate for small clock frequency differences up to ± 300 ppm between the upstream transmitter and the local receiver clocks.


PCIe Reverse Parallel Loopback

PCIe reverse parallel loopback is only available in a PCIe functional configuration for Gen1, Gen2, and Gen3 data rates. The received serial data passes through the receiver CDR, deserializer, word aligner, and rate matching FIFO buffer. The data is then looped back to the transmitter serializer and transmitted out through the transmitter buffer. The received data is also available to the FPGA fabric through the port. This loopback mode is compliant with the PCIe specification 2.0. Arria V devices provide an input signal to enable this loopback mode.

Note: This is the only loopback option supported in PIPE configurations.

Figure 6-19: PCIe Reverse Parallel Loopback Mode Datapath

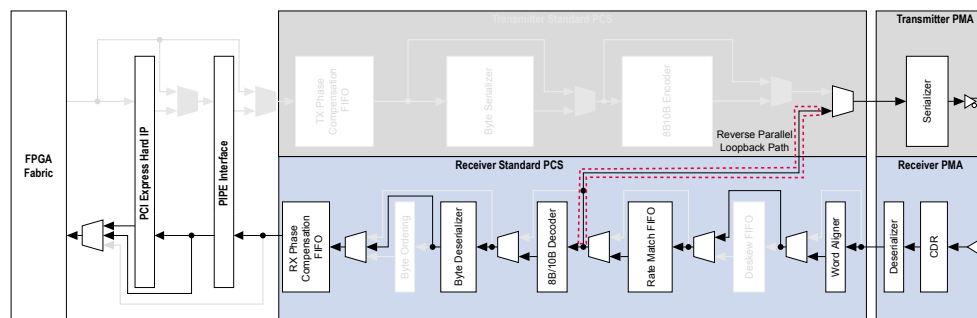The grayed-out blocks are Inactive.



Related Links

[Refer to the PHY IP Core for PCI Express \(PIPE\) chapter in the Altera Transceiver PHY IP Core User Guide](#)
[Refer to the “Standard PCS Architecture” section in the Transceiver Architecture in Arria V Devices chapter](#)
[For the power state requirements when switching between Gen1 and Gen2 data rates, refer to the PCIe Base Specification 2.0.](#)

Supported Features for PCIe Gen3

The PCIe Gen3 hard PCS supports the Gen3 base specification. PCIe Gen3 operation can be configured using the Arria V GZ Hard IP for PCI Express IP or PHY IP Core for PCI Express.

In Arria V GZ Hard IP for PCI Express, selecting **PCIe Base Specification Version 3.0** or **PCI Express Base Specification Version 2.1** enables a 32-bit wide PIPE 3.0-like interface for Gen1, Gen2, and Gen3 operations.

In PHY IP Core for PCI Express, selecting Gen3 enables the 32-bit wide PIPE 3.0-like interface and selecting Gen1 or Gen2 enables the 16-bit/8-bit wide PIPE 2.0 interface for Gen1 and Gen2 operation.

Block Synchronization (Word Aligner)

The block synchronizer aligns the recovered serial data coming from the CDR to 130-bit word boundaries. The block synchronizer delineates the word boundaries by searching and identifying the Electrical IDLE Exit Sequence Ordered Set (EIEOS) or the Last FTS OS and SKP ordered set to correctly identify the word boundary from the incoming serial data stream. The block synchronizer continues to realign to a new block boundary following the receipt of an SKP ordered set because of varying word lengths.

Gen3 Rate Match FIFO

To accommodate PCIe protocol requirements and to compensate for clock frequency differences of up to ± 300 ppm between source and termination equipment, receiver channels have a rate match FIFO. The rate match FIFO adds or deletes four SKP characters (32 bits) to keep the FIFO from becoming empty or full. It monitors the block synchronizer for a `skip_found` signal. If the rate match FIFO is almost full, the FIFO deletes four SKP characters. If the rate match FIFO is nearly empty, the FIFO inserts an SKP character at the start of the next available SKP ordered set.

128B/130B Encoder/Decoder

Unlike PCIe Gen1 and Gen2, the PCIe Gen3 encoder/decoder does not use 8B/10B encoding. The PCIe Gen3 encoder/decoder uses a 2-bit sync header and a 128-bit data word. The PCS encoder appends the two sync header bits to every 128 bits of data and enables scrambling for the data packets except for ordered set packets and the first symbol of a TS1/TS2 ordered set. The encoder/decoder continuously enables or disables scrambling, based on whether the payload being processed is an ordered set or a data packet. If an Electrical IDLE Exit Ordered Set or a Fast Training Sequence Ordered Set is received, the scrambler is reset to the initial seed value. The encoder/decoder also monitors the data stream for ordered set and sync header bit violations.

Gen3 Gear Box

The PCIe 3.0 base specification requires a block size of 130 bits with the exception of SKP ordered sets, which can be 66, 98, 130, 162, or 194 bits in length. The 130-bit block of data generated by the 128B/130B encoder and variable length SKP characters must be reordered in 32-bit parallel data segments that the PMA serializer can accept. The transceivers employ a gear box to accommodate this fractional bit difference between the 130-bit data word and a fixed 32-bit serialization PMA factor for Gen3.

Scrambler/Descrambler

Scrambling and descrambling are used during PCIe Gen3 operation to guarantee adequate transitions for the receiver in order to correctly regenerate the recovered clock. The 2-bit sync header bit, ordered set, and the first symbol of the TS1/TS2 ordered set are never scrambled.

PIPE 3.0-Like Gen3 Interface

PCIe Gen3 is a new feature added to the transceivers. The PCS supports PCI Express 3.0 base specification. The PIPE interface has been expanded to a 32-bit wide PIPE 3.0-like interface. The PIPE interface controls PHY functions such as transmission of electrical idle, receiver detection, and speed negotiation and control. In summary, the Gen3 PIPE 3.0-like interface block performs the following:

- Dynamic clock selection between Gen1, Gen2, and Gen3 speeds
- Gen3 auto speed negotiation (ASN)
- Controlling the 128B/130B encoder/decoder
- Gen3 Electrical Idle Entry and Exit detections/CDR Control Block
- Dynamic Gen3 and Gen2/Gen1 PCS data rate Auto Speed Negotiation
- Dynamic transceiver PMA data rate and PLL switching

Auto-Speed Negotiation Block

PCIe Gen3 mode enables ASN (auto-speed negotiation) between Gen1 (2.5 Gbps), Gen2 (5.0 Gbps), and Gen3 (8.0 Gbps) signaling data rates. The signaling rate switch is accomplished through frequency scaling and configuration of the PMA and PCS blocks using a fixed 32-bit wide PIPE 3.0-like Interface.

The PMA switches clocks between Gen1, Gen2, and Gen3 data rates in a glitch-free manner. For a non-bonded x1 channel, an ASN module facilitates speed negotiation in that channel. For bonded x2, x4, and x8 channels, the ASN module selects the master channel to control the rate switch. The master channel distributes the speed change request to the other PMA and PCS channels.

Table 6-7: PIPE Gen3 32-Bit PCS Clock Rates

PCIe Gen3 Capability Mode Enabled	Gen1	Gen2	Gen3
Lane data rate	2.5G	5G	8G
PCS clock frequency	250 MHz	500 MHz	250 MHz
FPGA Core IP clock frequency	62.5 MHz	125 MHz	250 MHz
PIPE interface width	32-bit	32-bit	32-bit
Rate[1:0]	00	01	10

The PCIe Gen3 speed negotiation process is initiated by writing a 1 to bit 5 of the Link Control register of the root port, causing a PIPE rate signal change from the hard IP. The ASN then places the PCS in reset, dynamically shuts down the clock paths to disengage the current active state PCS (either Standard PCS or Gen3 PCS). If a switch to or from Gen3 is requested, the ASN automatically selects the correct PCS clock paths and datapath selection in the multiplexers. The ASN block then sends a request to the PMA block to switch the data rate change and waits for a rate change done signal for confirmation. When the PMA completes the rate change and sends confirmation to the ASN block, ASN enables the clock paths to engage the new PCS block and releases the PCS reset. Successful completion of this process is indicated by assertion of the `pipe_phystatus` signal by the ASN block to the hard IP block.

Note: In PHY IP Core for PCI Express configuration, the Core IP must set the values to `pipe_rate[1:0]` to initiate the transceiver datarate switch sequence.

Transmitter Electrical IDLE Generation

The PIPE 3.0-like interface under the control of the hard IP block in Hard IP for PCIe or the user Core IP in PHY IP Core for PCIe may place the transmitter in electrical idle during low power states and the ASN process. Before the transmitter enters electrical idle, the HIP sends an electrical idle order set (EIOS) to the PHY. For Gen1 and Gen2, the order set format is COM, IDL, IDL, IDL. For Gen3, the order set format consists of 16 symbols with value 0x66.

During electrical idle, the transmitter differential and common mode voltage levels are compliant to the PCIe Base Specification 3.0.

For more information about the electrical idle input signal and transmitter buffer state, refer to “Gen3 Power State Management”.

Receiver Electrical IDLE Inference

If there is no activity on the link for a period of time or during the ASN process, the Inferring Electrical Idle condition is detected by the receiver PHY. These conditions are specified according to Table 4-11 of the PCI Express Base Specification, Rev 3.0.

Gen3 Power State Management

The PCIe base specification defines low power states for PHY layer devices to minimize power consumption. The Gen3 PCS does not implement these power saving measures, except when placing the transmitter driver in electrical idle state in the low power states. In P2 low power state, the transceivers do not disable the PIPE block clock.

CDR Control Block

The CDR control block controls the PMA CDR to obtain bit and symbol alignment and deskew within the allocated time, and generates status signals for other PCS blocks. The PCIe base specification requires that the receiver L0s power state exit time be a maximum of 4 ms for Gen1, 2 ms for Gen2, and 4 ms for Gen3 signaling rates. The transceivers have an improved CDR control block to accommodate fast lock times when the CDR must relock to the new multiplier/divider settings when entering or exiting Gen3 speeds.

Transceiver Clocking and Channel Placement Guidelines

This section describes the transceiver clocking for Gen1 and Gen2 Hard IP and PIPE configurations. The channel placement guidelines are only described for Gen1 and Gen2 PIPE configuration. The channel placement guidelines for Gen1 and Gen2 Hard IP configuration are not included.


Transceiver Clocking for PCIe Gen1 and Gen2

PIPE x1 Configuration

The following figure shows the transceiver clocking configuration in a PIPE x1 configuration.

The high-speed serial clock is provided by the CMU PLL in a channel different from that of the data channel. The local clock divider block in the data channel generates a parallel clock from this high-speed clock and distributes both clocks to the PMA and PCS of the data channel.

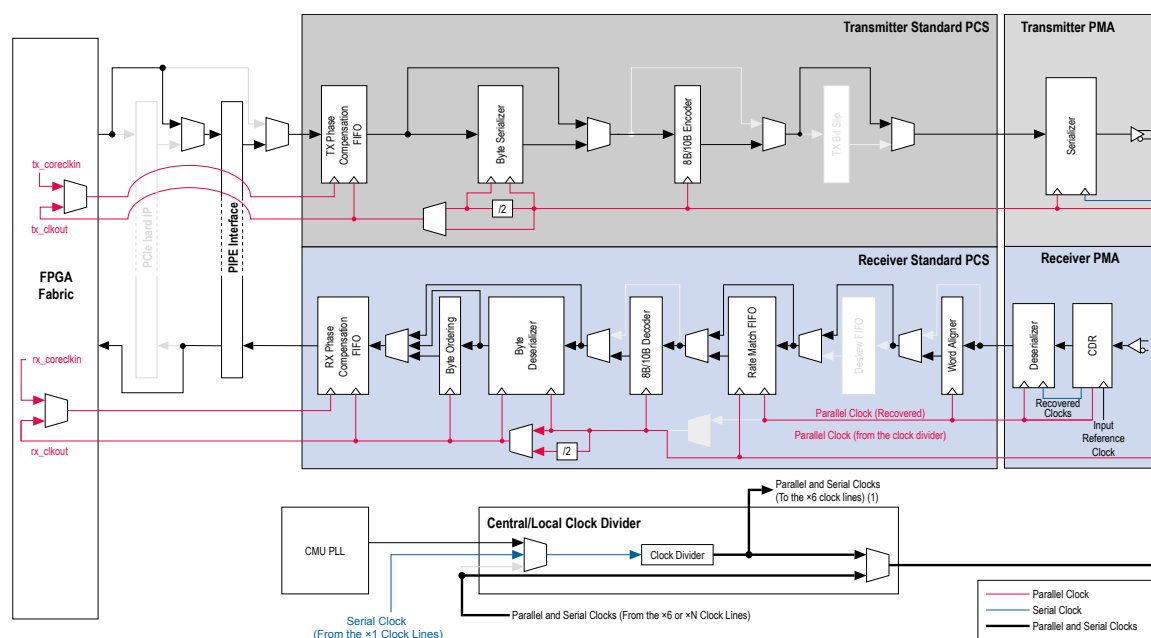Figure 6-20: Transceiver Clocking in a Gen1/Gen2 PIPE x1 Configuration




PIPE x2 Configuration

In a PIPE x2 bonded configuration, clocking within the PCS is independent for each receiver channel. Clocking is bonded only for transmitter channels, while the control signals are bonded for both transmitter

and receiver channels. The Quartus II software automatically places the transmit CMU PLL and master channel in either channel 1 or channel 4 within a transceiver bank

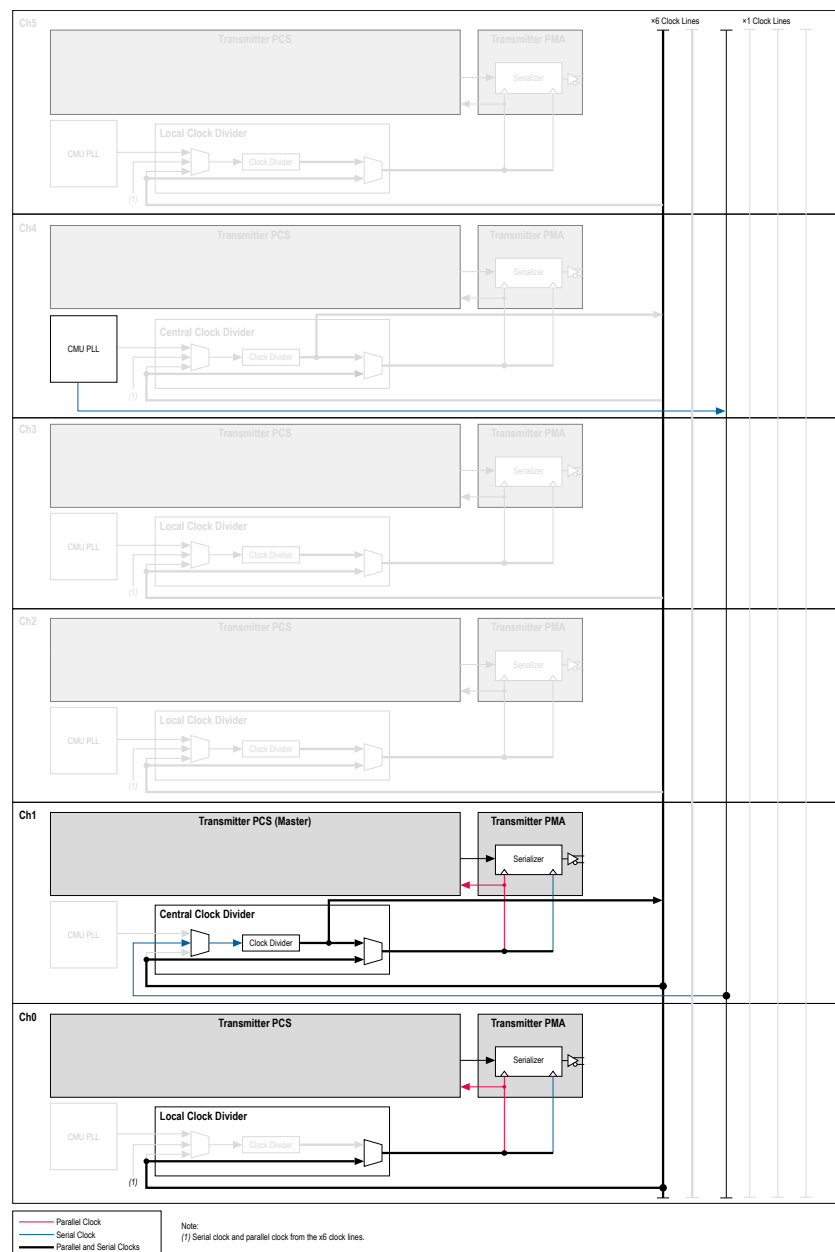Figure 6-21: Transmitter Clocking in a Gen1/Gen2 PIPE x2 Configuration



PIPE x4 Configuration

In a PIPE x4 bonded configuration, clocking within the PCS is independent for each receiver channel. Clocking is bonded only for transmitter channels, while the control signals are bonded for both transmitter and receiver channels. The Quartus II software automatically places the transmit CMU PLL and master channel in either channel 1 or channel 4 within a transceiver bank

Figure 6-22: Transmitter Clocking in a Gen1/Gen2 PIPE x4 Configuration


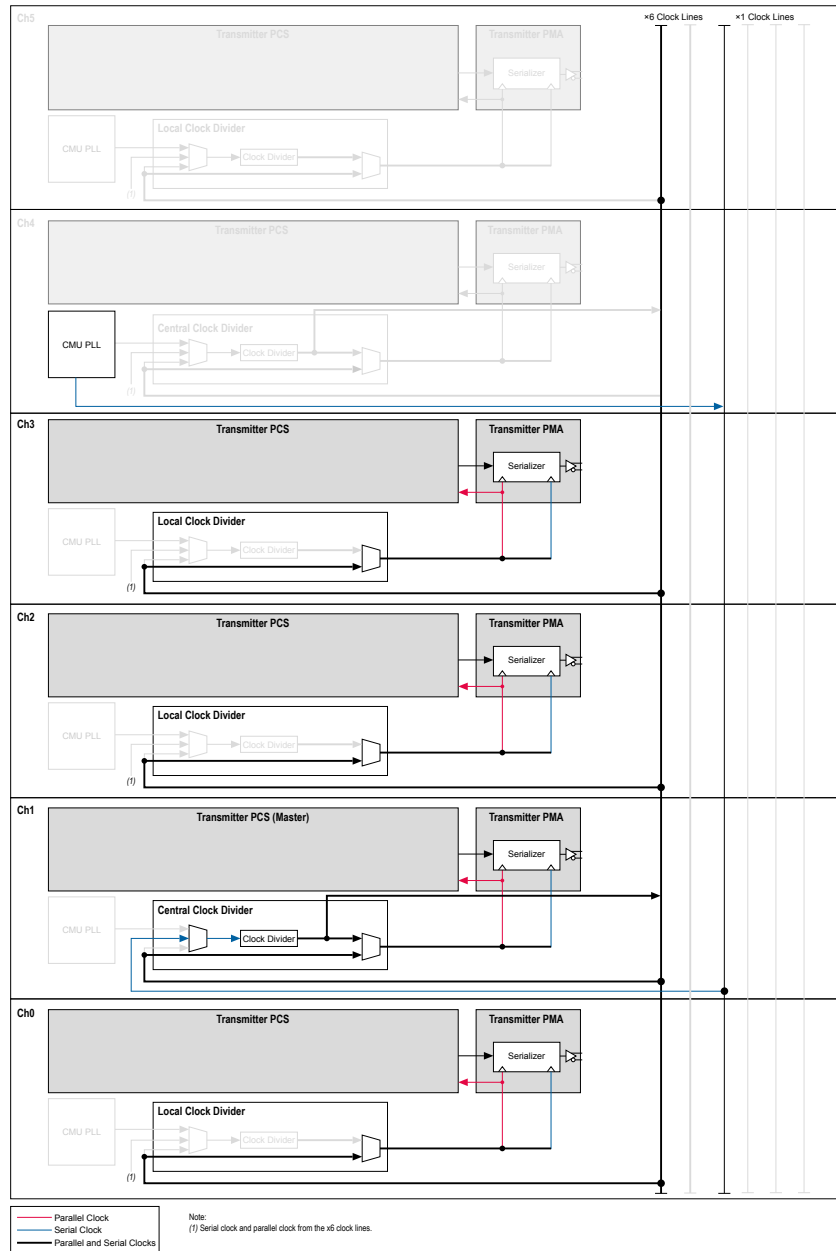



Figure 6-23: Receiver Clocking in a Gen1/Gen2 PIPE x4 Configuration

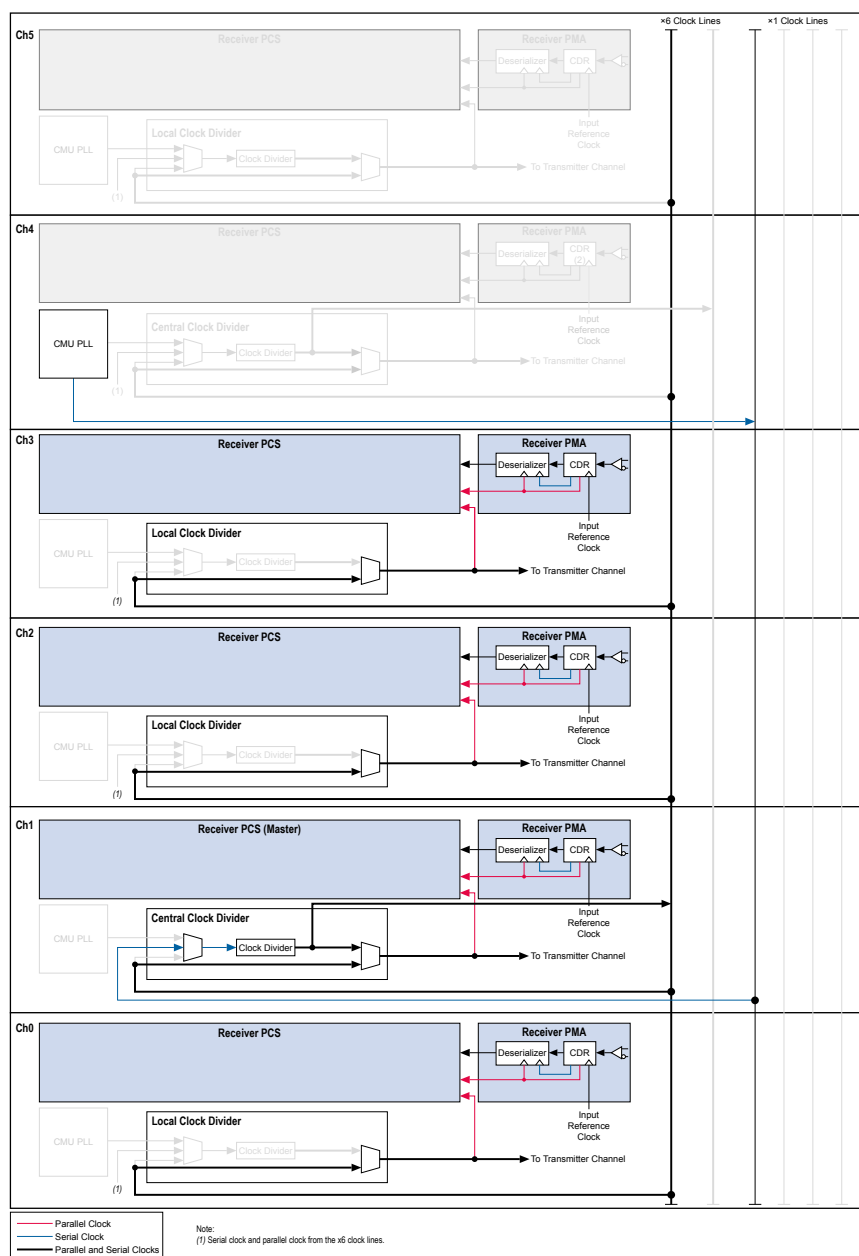

PIPE x8 Configuration

In the x8 PCIe bonded configuration, clocking is independent for receiver channels. Clocking and control signals are bonded only for transmitter channels.

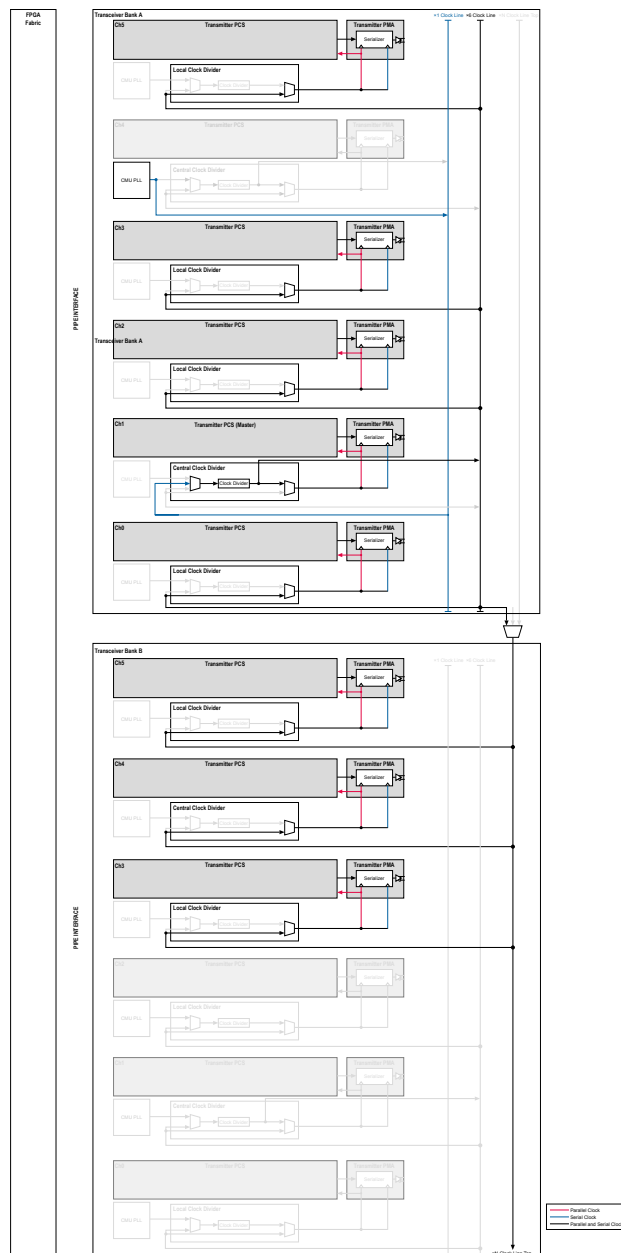Figure 6-24: Transceiver Clocking in a Gen1/Gen2 PIPE x8 Configuration



Transceiver Channel Placement Guidelines for Gen1, Gen2, and Gen3 PIPE Configurations

Note: The channel placement guidelines are only described for Gen1, Gen2, and Gen3 x1, x2, x4, and x8 PIPE configurations. The channel placement guidelines for Gen1, Gen2, and Gen3 Hard IP configuration are not included.

The following table lists the physical placement of PIPE channels in x1, x2, x4, and x8 bonding configurations. The Quartus® II software automatically places the CMU PLL in a channel different from that of the data channels.

Table 6-8: Gen1 and Gen2 PIPE Configuration Channel Placement

Configuration	Data Channel Placement	Channel Utilization Using CMU PLL ¹⁴	Channel Utilization Using ATX PLL ¹⁴
x1	Any channel	2	1
x2	Contiguous channels	3	2
x4	Contiguous channels	5	4
x8	Contiguous channels	9	9

Channel Placement for Gen1, Gen2, and Gen3 x1 PIPE Configuration

For PIPE x1 configurations, the channel can be placed anywhere within a transceiver bank that contains the transmitter PLL.

Channel Placement for Gen1, Gen2, and Gen3 x2 and x4 PIPE Configuration

The following two figures show examples of channel placement for PIPE x2 and x4 configurations. In a PIPE x2 or x4 configuration, the two or four channels must be contiguous and within the same transceiver bank, but they can be placed in any order as long as Logical Lane 1 is placed on the master channel. The CMU PLL and/or ATX PLL must be within the same transceiver bank.

¹⁴ Placement by the Quartus II software may vary with design, thus resulting in higher channel usage.

Figure 6-25: Example of PIPE x2 Gen1 and Gen2 Channel Placement Using the CMU PLL

Channels shaded in blue provide the transmit CMU PLL generating the high-speed serial clock. Channels shaded in gray are data channels. The Quartus II software automatically selects the CMU PLL in either channel 1 or channel 4 within a transceiver bank. Gen3 channel placement using CMU and ATX PLLs is not shown.


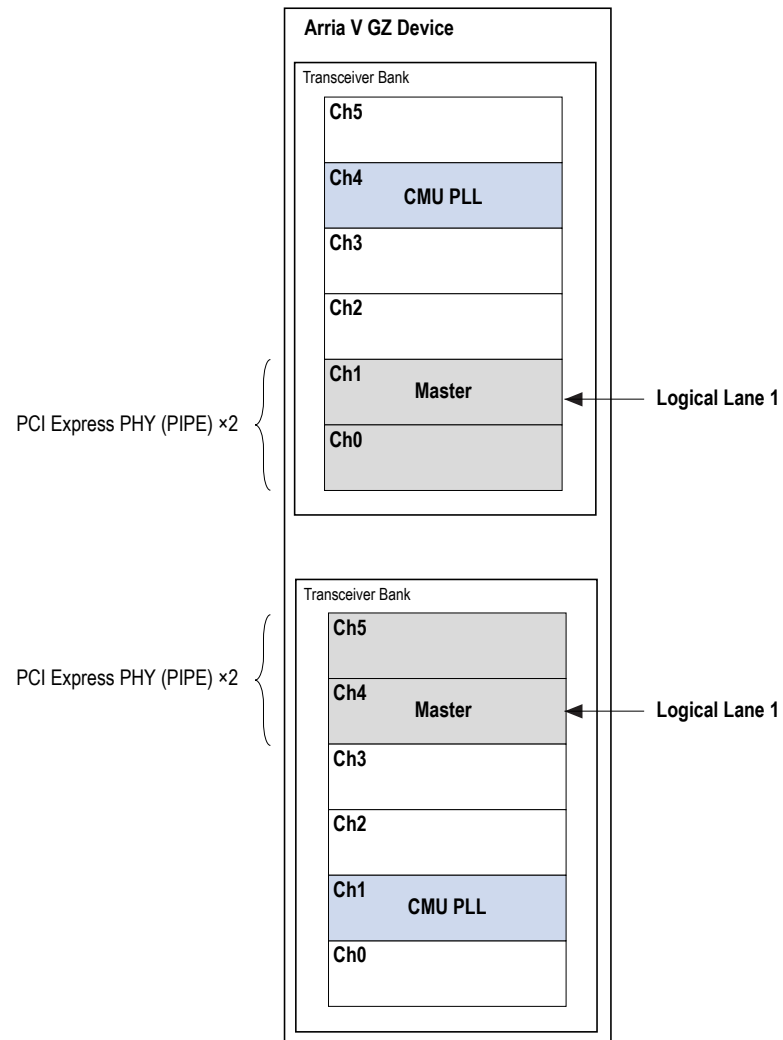


Figure 6-26: Example of PIPE x4 Gen1 and Gen2 Channel Placement Using the CMU PLL

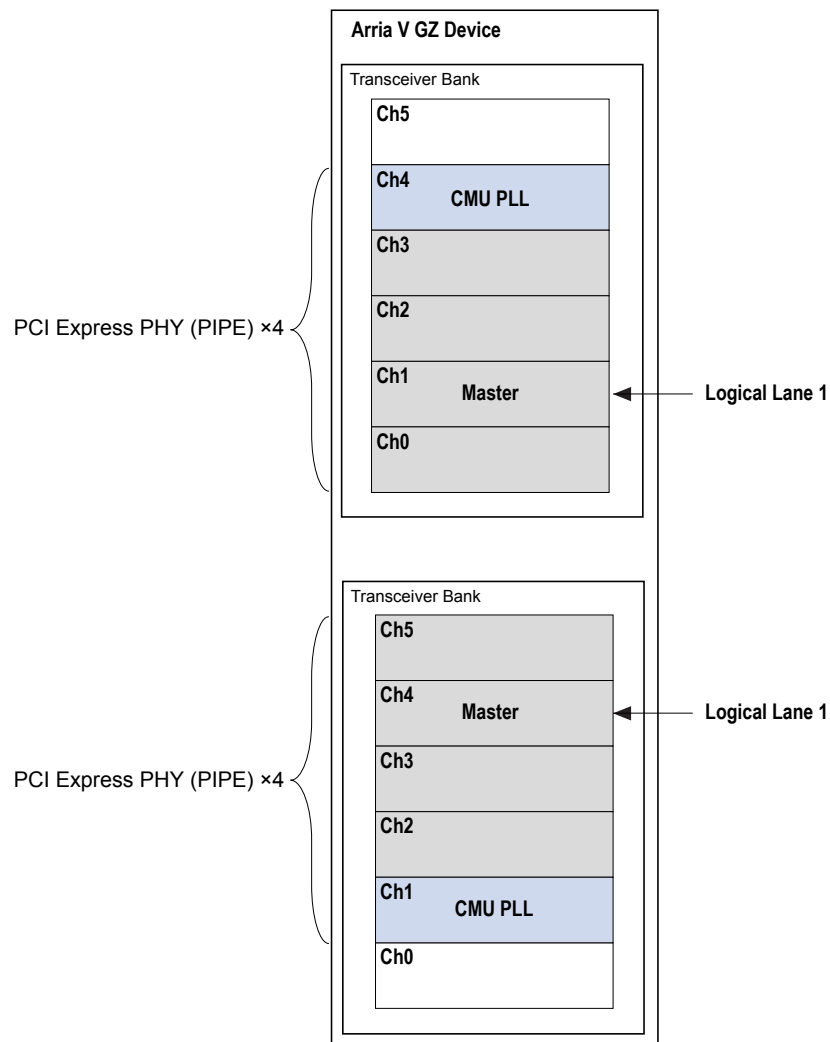Channels shaded in blue provide the transmit CMU PLL generating the high-speed serial clock. Channels shaded in gray are data channels. The Quartus II software automatically selects the CMU PLL in either channel 1 or channel 4 within a transceiver bank. Gen3 channel placement using CMU and ATX PLLs is not shown.




Channel Placement for Gen1, Gen2, and Gen3 x8 PIPE Configuration

In a PIPE x8 configuration, the eight channels must be contiguous, but they can be placed in any order as long as Logical Lane 0 is placed on the master channel. The CMU PLL and/or ATX PLL must be within the same transceiver bank.

Figure 6-27: Example of PIPE x8 Gen1 and Gen2 Channel Placement Using a CMU PLL

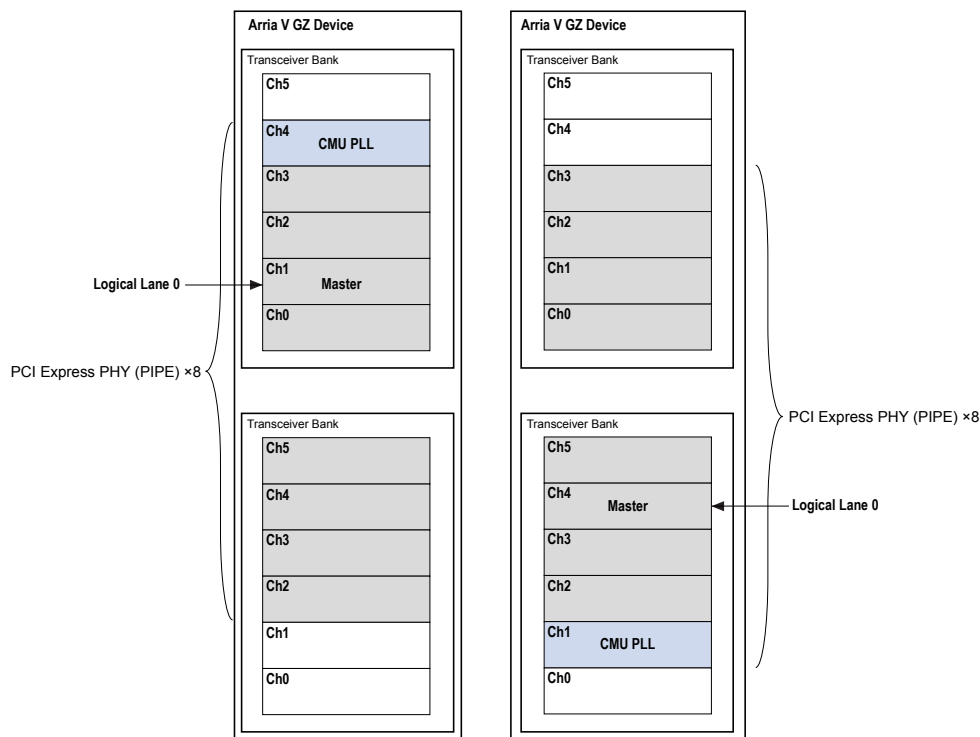Channels shaded in blue provide the transmit CMU PLL generating the high-speed serial clock. Channels shaded in gray are data channels. Gen3 channel placement using CMU and ATX PLLs is not shown.

**Related Links**

For channel placement guidelines for PCIe hard IP configuration using the Hard IP for PCI Express, refer to the [Arria V Hard IP for PCI Express User Guide](#).

Transceiver Clocking for PCIe Gen3


This section describes the transceiver clocking topology for both the PCIe Gen3 Hard IP and PIPE configuration.

In a PCIe x1, x2, x4, and x8 Gen3 Mode, both a channel PLL (CMU PLL) from transceiver physical channel 1 or 4 of the transceiver bank and either the top or bottom ATX PLL are used to generate the high-speed serial clock and support ASN. The CMU PLL supports Gen1 and Gen2 data rates while the ATX PLL supports Gen3 data rates. To enable rapid switching between Gen1, Gen2, and Gen3 data rates, a multiplexer selects either the free running CMU PLL for Gen1 and Gen2 data rates or the free running ATX PLL for Gen3 data rates. PLL reconfiguration is not used to support ASN.

Gen3 x1 Configuration

Figure 6-28: Transceiver Clocking in a Gen1/Gen2/Gen3 PCIe x1 Hard IP and PIPE Configuration

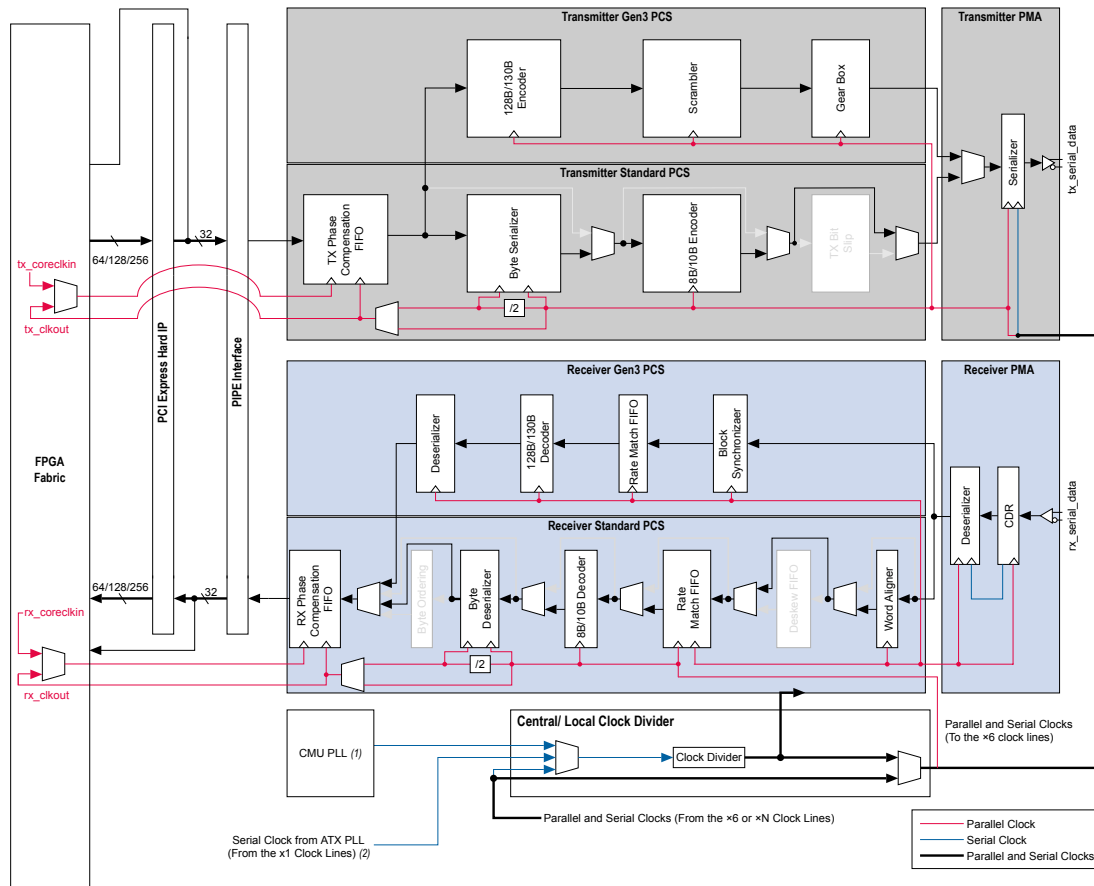For Gen1 and Gen2, use the CMU PLL. For Gen3, use the ATX PLL.




For **PCIe x1 Gen3** using Hard IP configuration, the CMU PLL (transceiver physical channel 1) and the bottom ATX PLL of the transceiver bank are configured to generate the high-speed serial clock for the transmitter datapath clock and the rate matcher side of the FIFO in the receiver datapath if rate matching is enabled for the data channel. Two transceiver channels are needed to implement PCIe x1 Gen3, one for the data channel and one for the CMU PLL. The local clock divider block in the data channel generates a parallel clock from this high-speed serial clock and distributes both clocks to the PMA and PCS of the data channel.

For **PCIe x1 Gen3** using PIPE configuration, the CMU PLL (transceiver physical channel 1 or 4) and the top or bottom ATX PLL of the transceiver bank are configured to generate the high-speed serial clock for the transmitter datapath clock and the rate matcher side of the FIFO in the receiver datapath if rate matching is enabled for the data channel. Two transceiver channels are needed to implement PCIe x1 Gen3, one for the data channel and one for the CMU PLL. The local clock divider block in the data channel generates a parallel clock from this high-speed serial clock and distributes both clocks to the PMA and PCS of the data channel.

Gen3 x2 Configuration

Figure 6-29: Transmitter Clocking in a Gen1/Gen2/Gen3 PCIe x2 Hard IP and PIPE Configuration

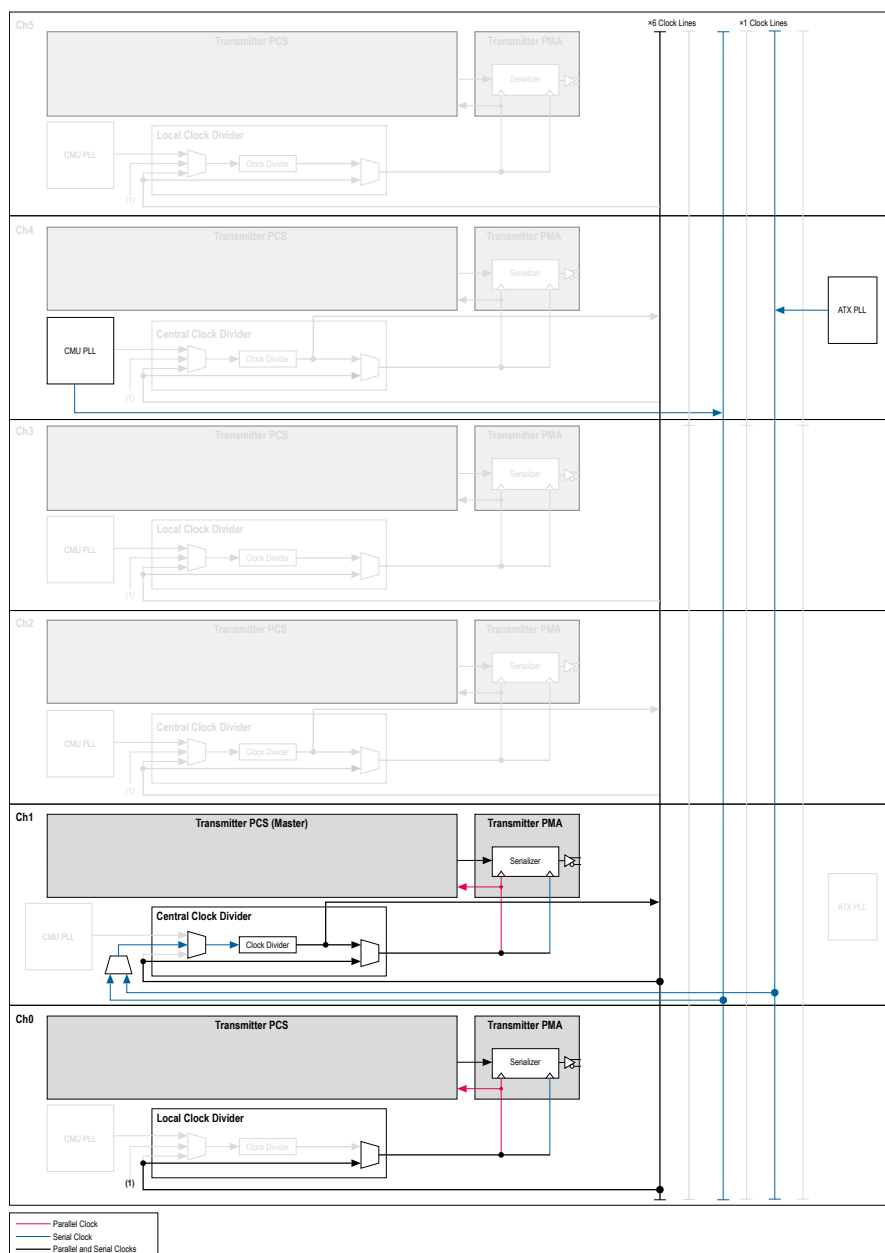Unlike the Hard IP configuration, the PIPE configuration has the additional flexibility of using the top four transceiver channels in a transceiver bank or spanning the four lanes across two banks.



For **PCIe x2 Gen3** using Hard IP configuration, the CMU PLL (transceiver physical channel 4) and the top ATX PLL of the transceiver bank are configured to generate the high-speed serial clock. A total of three transceiver channels are required to implement PCIe x2 Gen3, including two data channels and one channel for the CMU PLL. The Quartus II software automatically selects channel 1 in the transceiver bank as the master channel. Channel 1 bonds and drives all the transmitter datapath's clocking and the rate matcher side of the FIFO in the receiver datapaths if rate matching is enabled for the two data channels. The local clock divider block in each data channel generates the parallel clock from the high-speed serial clock and distributes both clocks to the PMA and PCS of that data channel.

For **PCIe x2 Gen3** using PIPE configuration, the CMU PLL (transceiver physical channel 1 or 4) and the top or bottom ATX PLL of the transceiver bank are configured to generate the high-speed serial clock. A total of three transceiver channels are required to implement PCIe x2 Gen3, including two data channels and one channel for the CMU PLL. The Quartus II software automatically selects either channel 1 or 4 in the transceiver bank as the master channel. Channel 1 or 4 bonds and drives all the transmitter datapath's clocking and the rate matcher side of the FIFO in the receiver datapaths if rate matching is enabled for the two data channels. The local clock divider block in each data channel generates the parallel clock from the high-speed serial clock and distributes both clocks to the PMA and PCS of that data channel.

Gen3 x4 Configuration

Figure 6-30: Transmitter Clocking in a Gen1/Gen2/Gen3 PCIe x4 Hard IP and PIPE Configuration

Unlike the Hard IP configuration, the PIPE configuration has the additional flexibility of using the top four transceiver channels in a transceiver bank or spanning the four lanes across two banks.


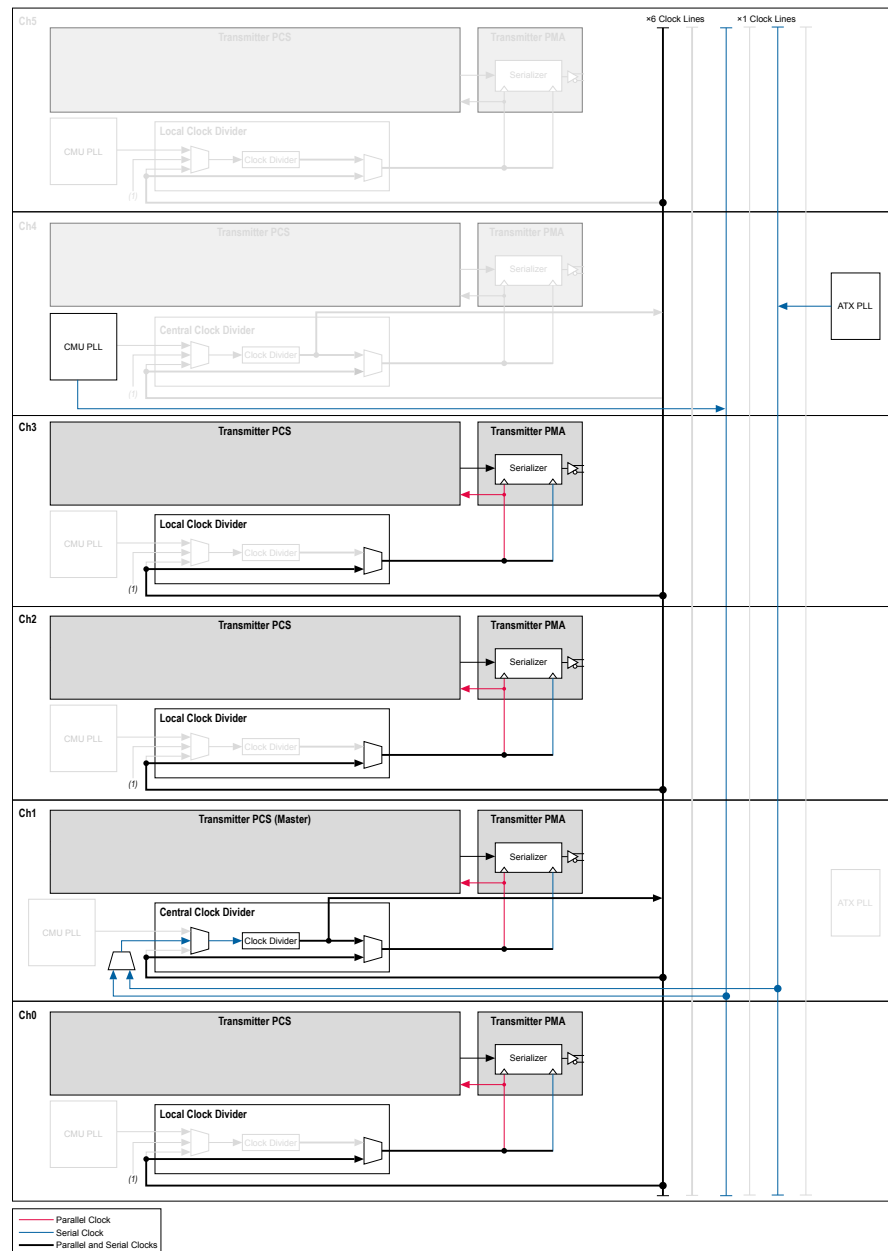


Figure 6-31: Receiver Clocking in a Gen1/Gen2/Gen3 PCIe x4 Hard IP and PIPE Configuration

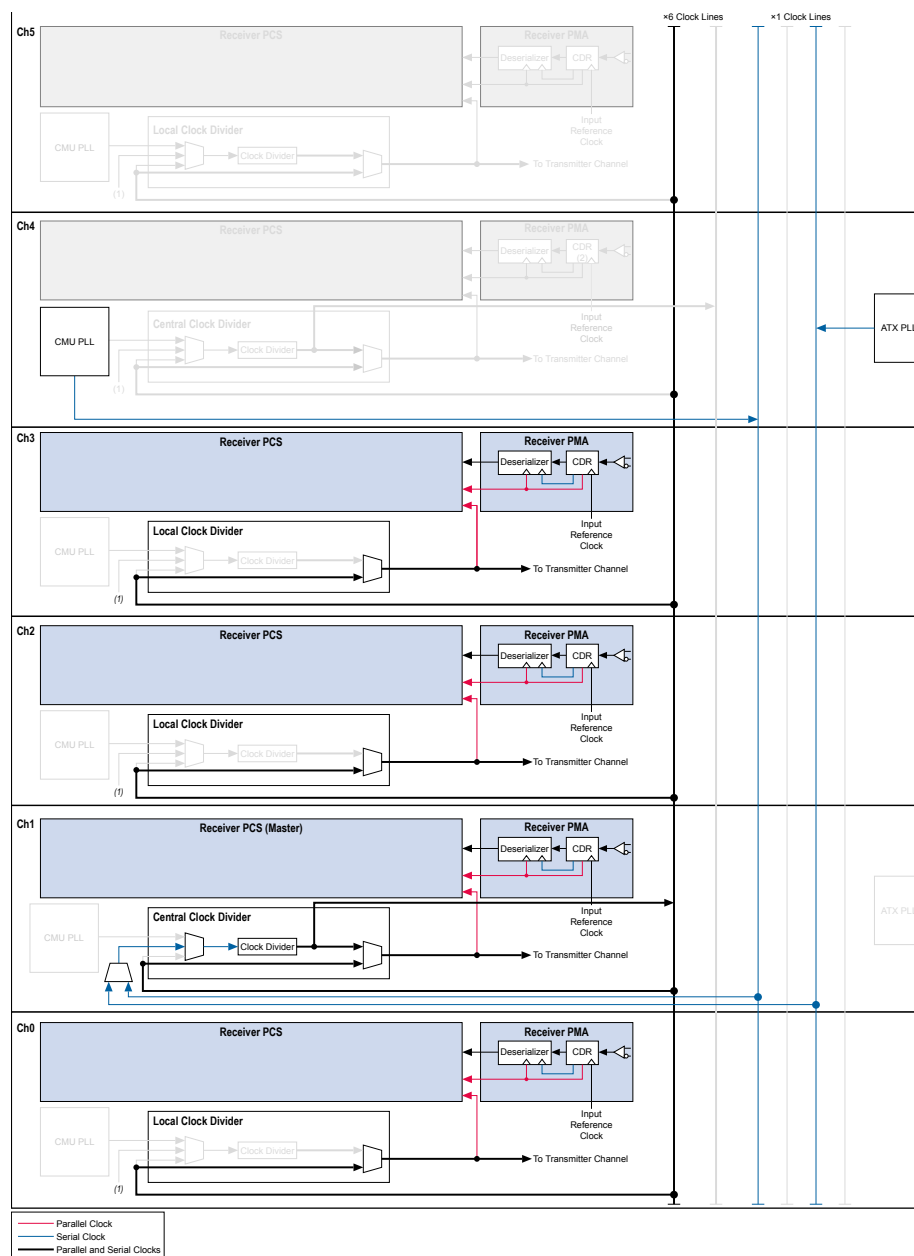

For **PCIe x4 Gen3** using Hard IP configuration, the CMU PLL (transceiver physical channel 4) and the top ATX PLL of the transceiver bank are configured to generate the high-speed serial clock. A total of five transceiver channels are required to implement PCIe x4 Gen3, including four data channels and one channel for the CMU PLL. The Quartus II software automatically selects channel 1 in the transceiver bank as the master channel. Channel 1 bonds and drives all the transmitter datapath's clocking and the rate matcher side of the FIFO in the receiver datapaths if rate matching is enabled for the four data channels. The local clock divider block in each data channel generates the parallel clock from the high-speed serial clock and distributes both clocks to the PMA and PCS of that data channel.

For **PCIe x4 Gen3** using PIPE configuration, the CMU PLL (transceiver physical channel 1 or 4) and the top or bottom ATX PLL of the transceiver bank are configured to generate the high-speed serial clock. A total of five transceiver channels are required to implement PCIe x4 Gen3, including four data channels and one channel for the CMU PLL. The Quartus II software automatically selects either channel 1 or 4 in the transceiver bank as the master channel. Channel 1 or 4 bonds and drives all the transmitter datapath's

clocking and the rate matcher side of the FIFO in the receiver datapaths if rate matching is enabled for the four data channels. The local clock divider block in each data channel generates the parallel clock from the high-speed serial clock and distributes both clocks to the PMA and PCS of that data channel.

Gen3 x8 Configuration


For **PCIe x8 Gen3**, the CMU PLL (transceiver physical channel 4) and the top or bottom ATX PLL of the lower transceiver bank are configured to generate the high-speed serial clock. A total of nine transceiver channels are required to implement PCIe x8 Gen3, including eight data channels and one channel for the CMU PLL. The Quartus II software automatically selects channel 4 in the transceiver bank as the master channel. Channel 4 bonds and drives all the transmitter datapath's clocking and the rate matcher side of the FIFO in the receiver datapaths if rate matching is enabled for the eight data channels. The local clock divider blocks in each data channel generate the parallel clock from this high-speed serial clock and distributes both clocks to the PMA and PCS of that data channel. The master channel in the x8 case is not a data channel.

XAUI

With the MegaWizard Plug-In Manager, you can implement a XAUI link. Under Ethernet in the Interfaces menu, select the XAUI PHY IP core. The XAUI PHY IP core implements the XAUI PCS in soft logic.

XAUI is a specific physical layer implementation of the 10 Gigabit Ethernet link defined in the IEEE 802.3ae-2002 specification. As shown in Figure 4–26, the XAUI PHY uses the XGMII interface to connect to the IEEE802.3 MAC and Reconciliation Sublayer (RS). The IEEE 802.3ae-2002 specification requires the XAUI PHY link to support a 10 Gbps data rate at the XGMII interface and four lanes each at 3.125 Gbps at the PMD interface.

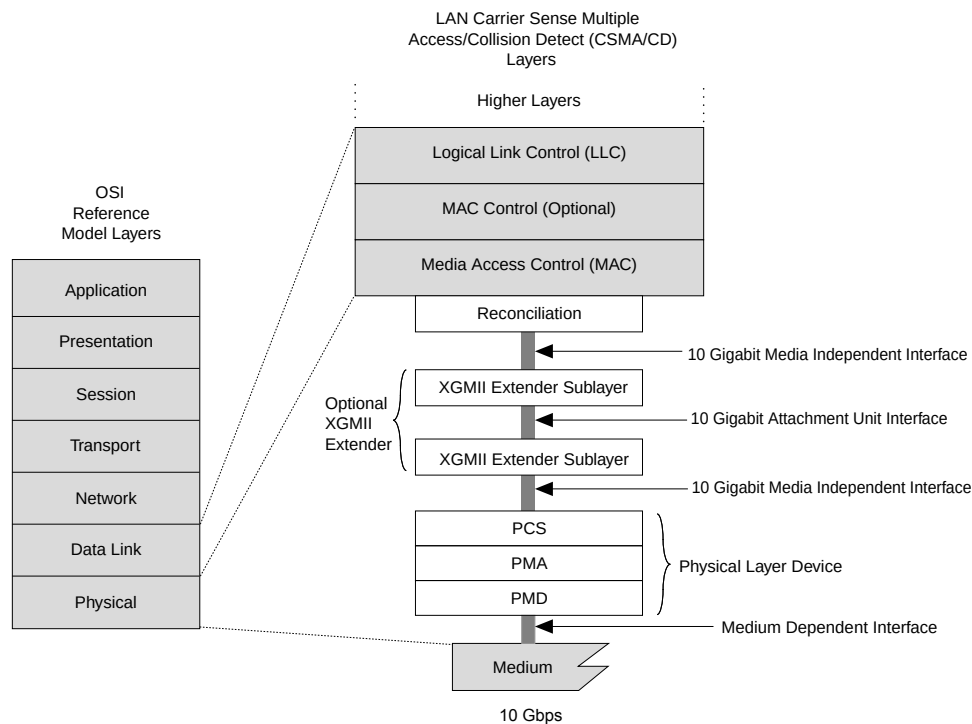Figure 6-32: XAUI and XGMII Layers




Related Links

Refer to the ["XAUI PHY IP Core" chapter in the Altera Transceiver PHY IP Core User Guide](#).

Transceiver Datapath in a XAUI Configuration

The XAUI PCS is implemented in soft logic inside the FPGA core when using the XAUI PHY IP core. You must ensure that your channel placement is compatible with the soft PCS implementation.

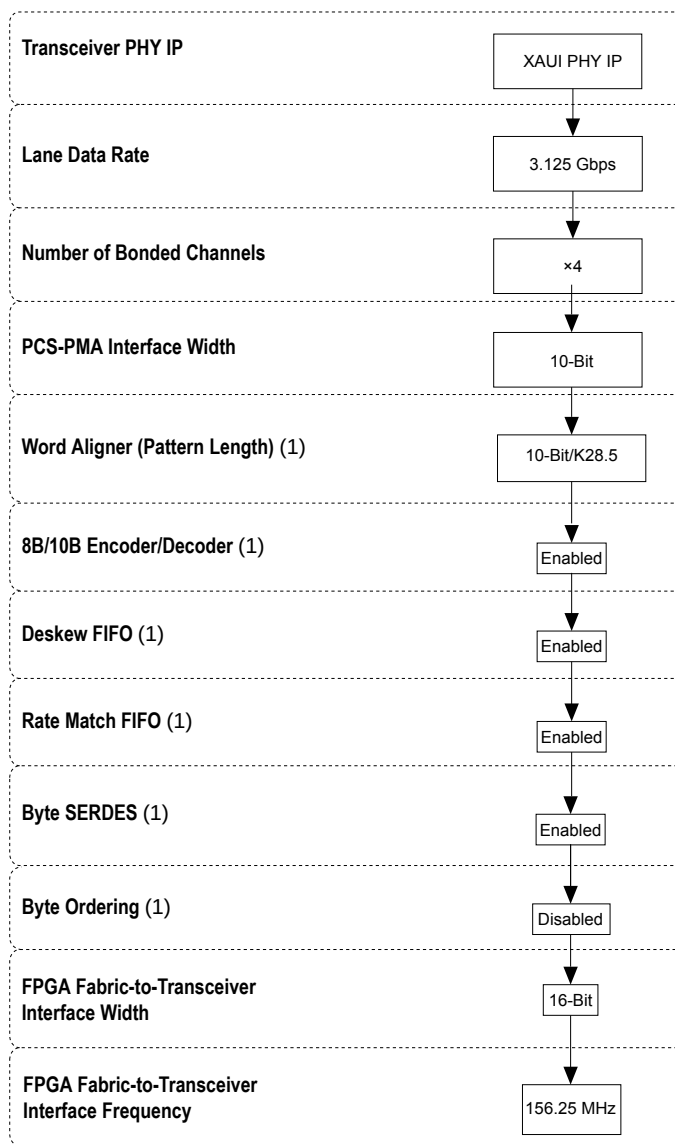
Figure 6-33: XAUI Datapath Configuration



(1) Implemented in soft logic.

Figure 6-34: Transceiver Channel Datapath for XAUI Configuration

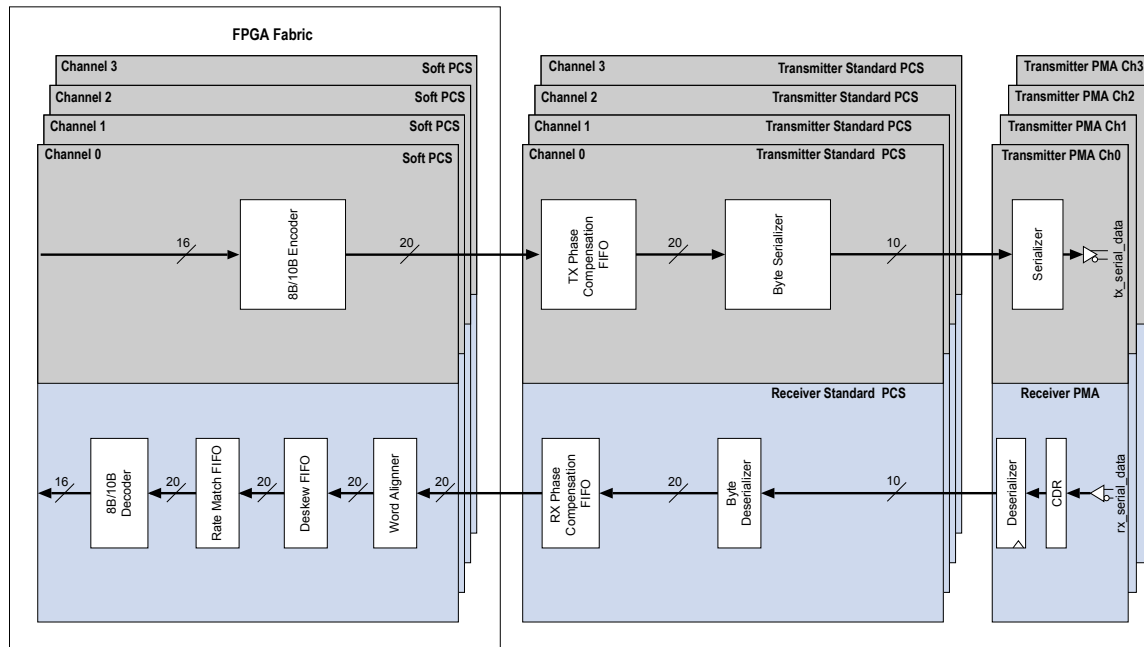Standard PCS in a low latency configuration is used in this configuration. Additionally, a portion of the PCS is implemented in soft logic.




Supported Features

Arria V GZ transceivers support the following features in a XAUI configuration.

64-Bit SDR Interface to the MAC/RS

Clause 46 of the IEEE 802.3-2008 specification defines the XGMII interface between the XAUI PCS and the Ethernet MAC/RS. The specification requires each of the four XAUI lanes to transfer 8-bit data and 1-bit wide control code at both the positive and negative edge (DDR) of the 156.25 MHz interface clock.

Arria V GZ transceivers in a XAUI configuration do not support the XGMII interface to the MAC/RS as defined in IEEE 802.3-2008 specification. Instead, they allow the transferring of 16-bit data and 2-bit control code on each of the four XAUI lanes, only at the positive edge (SDR) of the 156.25 MHz interface clock.

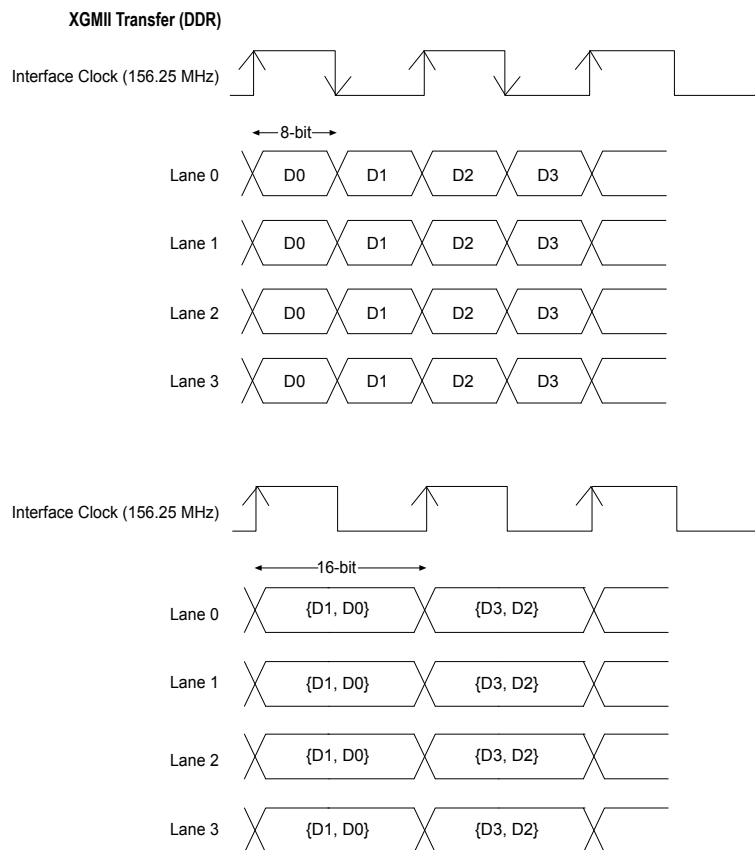Figure 6-35: Implementation of the XGMII Specification in Arria V GZ Devices

8B/10B Encoding/Decoding

Each of the four lanes in a XAUI configuration support an independent 8B/10B encoder/decoder as specified in Clause 48 of the IEEE802.3-2008 specification. 8B/10B encoding limits the maximum number of consecutive 1s and 0s in the serial data stream to five, thereby ensuring DC balance as well as enough transitions for the receiver CDR to maintain a lock to the incoming data.

The XAUI PHY IP core provides status signals to indicate running disparity as well as the 8B/10B code group error.

Transmitter and Receiver State Machines

In a XAUI configuration, the Arria V GZ transceivers implement the transmitter and receiver state diagrams shown in Figure 48-6 and Figure 48-9 of the IEEE802.3-2008 specification.

In addition to encoding the XGMII data to PCS code groups, in conformance with the 10GBASE-X PCS, the transmitter state diagram performs functions such as converting Idle ||I|| ordered sets into Sync ||K||, Align ||A||, and Skip ||R|| ordered sets.

In addition to decoding the PCS code groups to XGMII data, in conformance with the 10GBASE-X PCS, the receiver state diagram performs functions such as converting Sync ||K||, Align ||A||, and Skip ||R|| ordered sets to Idle ||I|| ordered sets.

Synchronization

The word aligner block in the receiver PCS of each of the four XAUI lanes implements the receiver synchronization state diagram shown in Figure 48-7 of the IEEE802.3-2008 specification.

The XAUI PHY IP core provides a status signal per lane to indicate if the word aligner is synchronized to a valid word boundary.

Deskew

The lane aligner block in the receiver PCS implements the receiver deskew state diagram shown in Figure 48-8 of the IEEE 802.3-2008 specification.

The lane aligner starts the deskew process only after the word aligner block in each of the four XAUI lanes indicates successful synchronization to a valid word boundary.

The XAUI PHY IP core provides a status signal to indicate successful lane deskew in the receiver PCS.

Clock Compensation

The rate match FIFO in the receiver PCS datapath compensates up to ± 100 ppm difference between the remote transmitter and the local receiver. It does so by inserting and deleting Skip $||R||$ columns, depending on the ppm difference.

The clock compensation operation begins after:

- The word aligner in all four XAUI lanes indicates successful synchronization to a valid word boundary.
- The lane aligner indicates a successful lane deskew.

The rate match FIFO provides status signals to indicate the insertion and deletion of the Skip $||R||$ column for clock rate compensation.

Transceiver Clocking and Channel Placement Guidelines

Transceiver Clocking

Figure 6-36: Transceiver Clocking Diagram for XAUI Configuration

One of the two channel PLLs configured as a CMU PLL in a transceiver bank generates the transmitter serial and parallel clocks for the four XAUI channels. The x6 clock line carries the transmitter clocks to the PMA and PCS of each of the four channels.

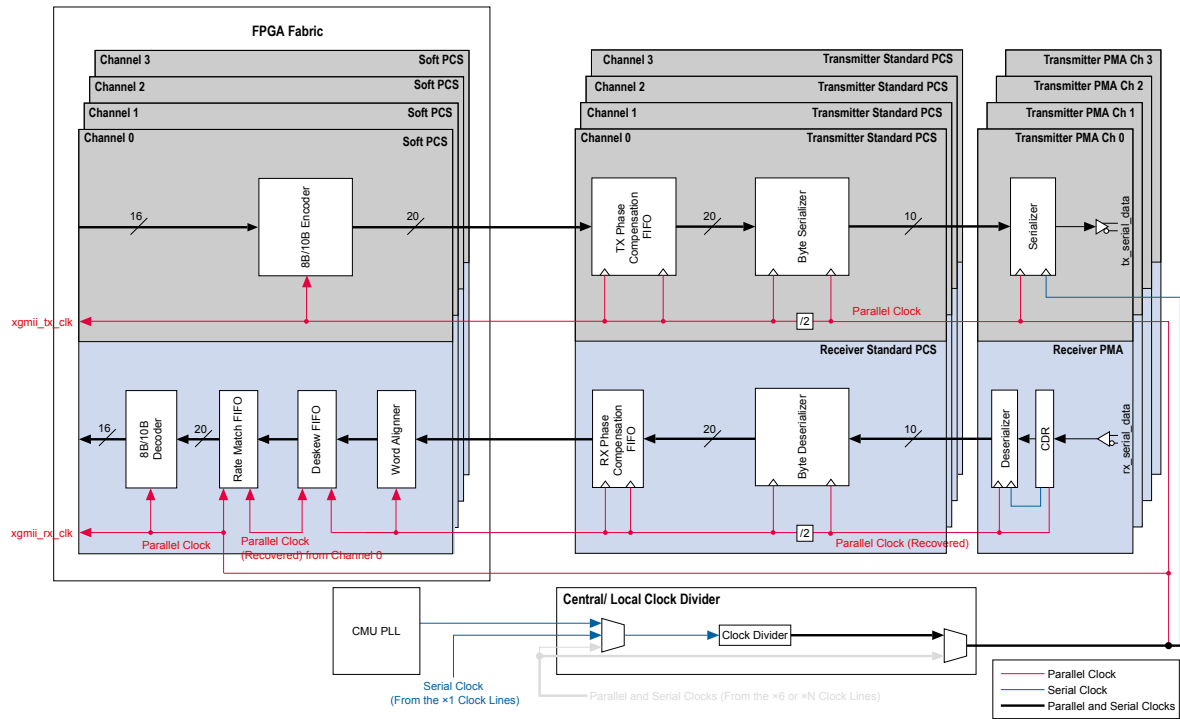


Table 6-9: Input Reference Clock Frequency and Interface Speed Specifications for XAUI Configurations


Input Reference Clock Frequency (MHz)	FPGA Fabric-Transceiver Interface Width	FPGA Fabric-Transceiver Interface Frequency (MHz)
156.25	16-bit data, 2-bit control	156.25

Transceiver Channel Placement Guidelines

In the soft PCS implementation of the XAUI configuration, all four channels must be placed continuously. The channels may all be placed in one bank or they may span two banks.

Figure 6-37: Transceiver Channel Placement Guidelines in a XAUI Configuration

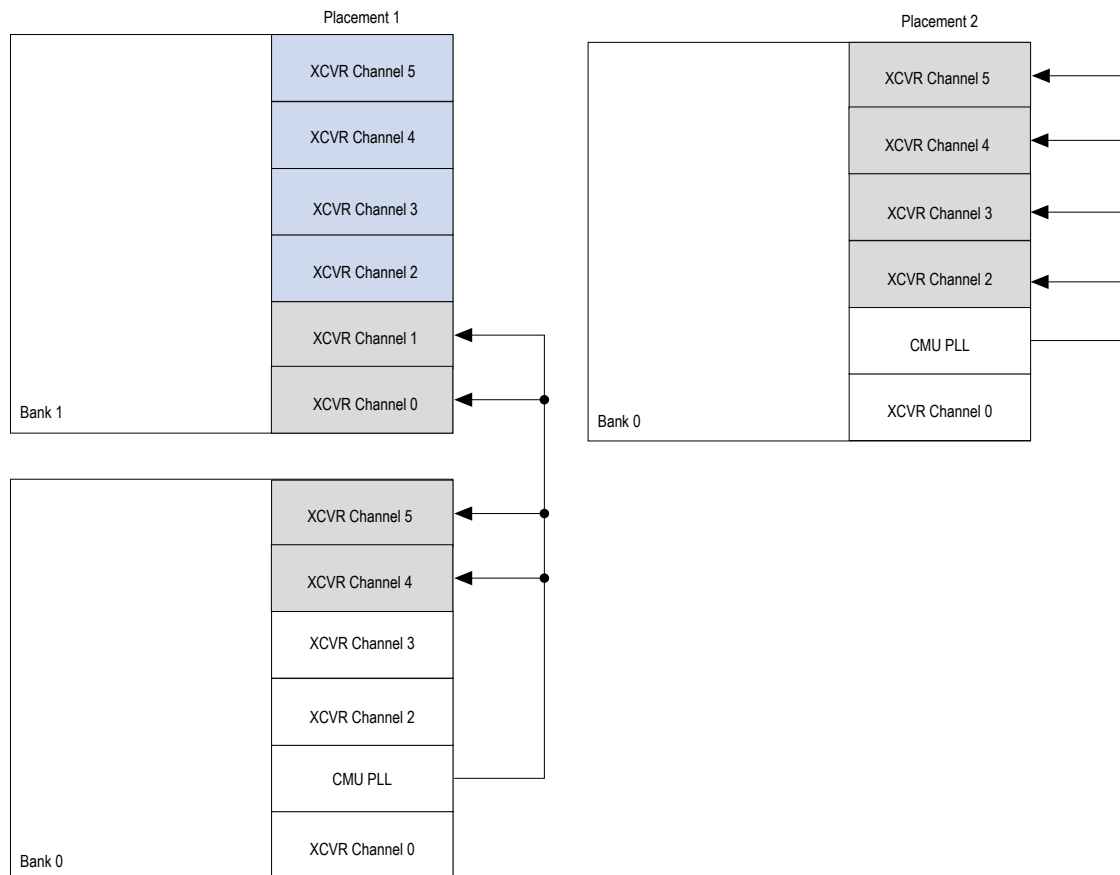Use one of the two allowed channel placements when using either the CMU PLL or the ATX PLL to drive the XAUI link. The Quartus II software implements the XAUI PCS in soft logic.

**Related Links**

To implement the QSF assignment workaround using the Assignment Editor, refer to the "XAUI PHY IP Core" chapter in the Altera Transceiver PHY IP Core User Guide.


CPRI and OBSAI—Deterministic Latency Protocols

Arria V GX devices have a deterministic latency option available for use in high-speed serial interfaces such as the Common Public Radio Interface (CPRI) and OBSAI Reference Point 3 (OBSAI RP3). Both CPRI and OBSAI RP3 protocols place stringent requirements on the amount of latency variation that is permissible through a link that implements these protocols.

Transceiver Datapath Configuration

Arria V GZ devices have a number of options available for the deterministic latency datapath configuration.

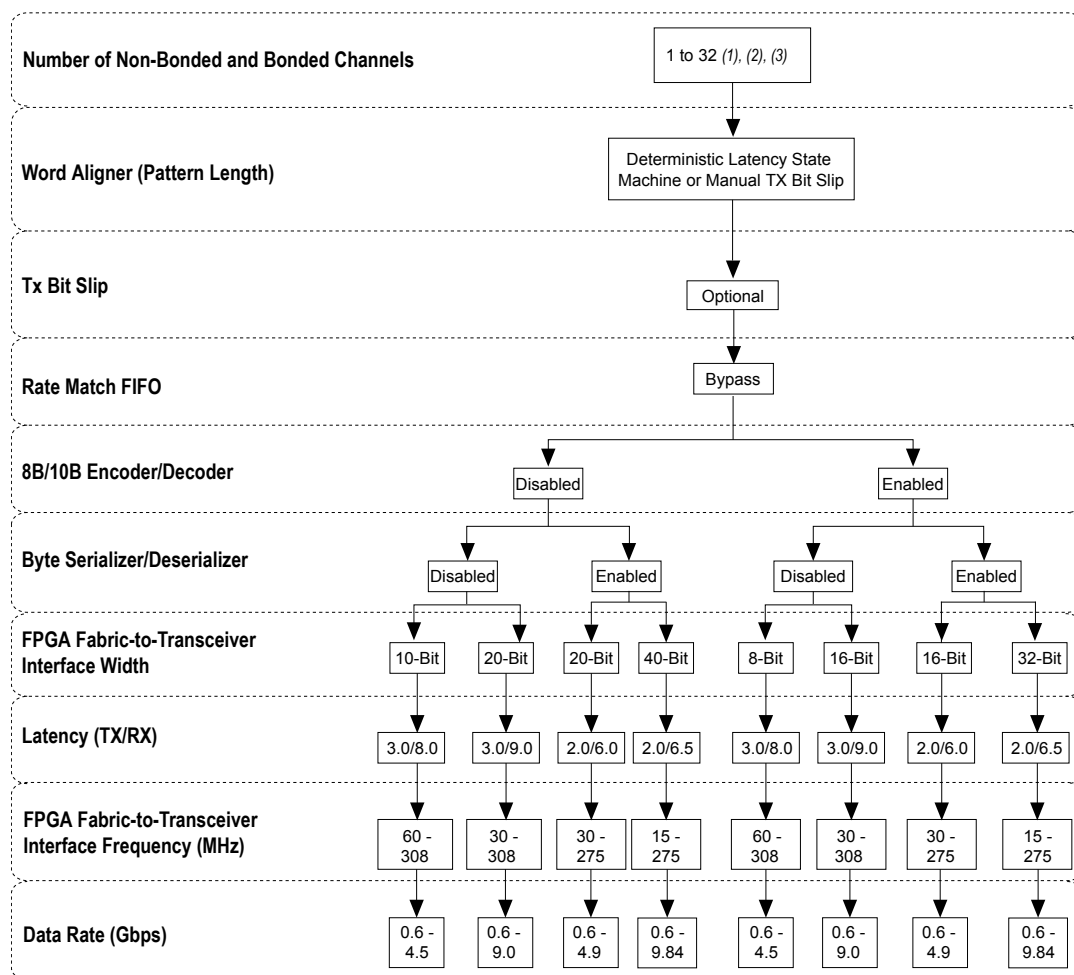
Figure 6-38: Deterministic Latency Datapath Configuration



Notes:

- (1) For xN bonding, the number of bonded channels is up to four using CMU PLL and up to six using ATX PLL, provided the data rate is supported by the CMU PLL and ATX PLL.
- (2) Bonding more than six channels requires PLL feedback compensation bonding. PLL feedback compensation bonding requires one PLL per transceiver bank and the PLL reference clock frequency must have the same value as the lane data rate divided by the serialization factor.
- (3) The TX-client feedback path to the transmit PLL is only supported in a non-bonded single lane instance.

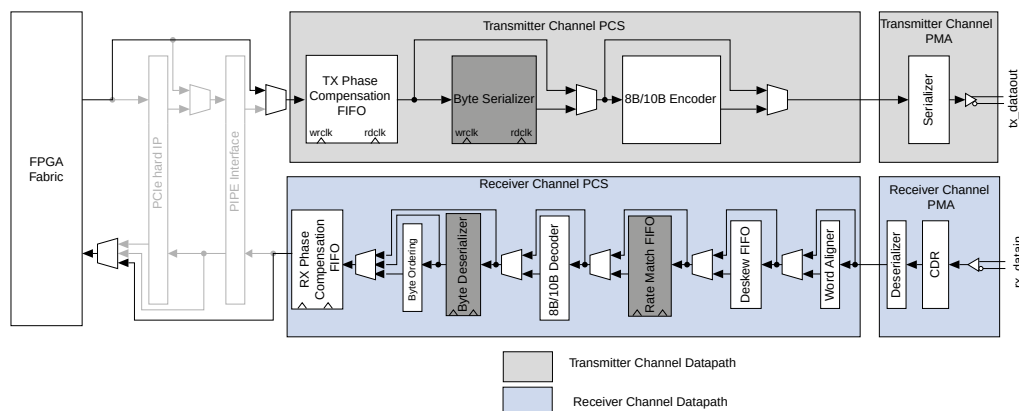Figure 6-39: Transceiver Datapath in Deterministic Latency Mode



Transmitter Channel Datapath
Receiver Channel Datapath

Phase Compensation FIFO in Register Mode

To remove the latency uncertainty through the receiver's phase compensation FIFO, the receiver and transmitter phase compensation FIFOs are always set to register mode. In register mode, the phase compensation FIFO acts as a register and thereby removes the uncertainty in latency. The latency through the phase compensation FIFO in register mode is one clock cycle.

The following options are available:

- Single-width mode with 8-bit channel width and 8B/10B encoder enabled or 10-bit channel width with 8B/10B disabled
- Double-width mode with 16-bit channel width and 8B/10B encoder enabled or 20-bit channel width with 8B/10B disabled

Channel PLL Feedback

To implement the deterministic latency functional mode, the phase relationship between the low-speed parallel clock and channel PLL input reference clock must be deterministic. A feedback path is enabled to ensure a deterministic relationship between the low-speed parallel clock and channel PLL input reference clock.

To achieve deterministic latency through the transceiver, the reference clock to the channel PLL must be the same as the low-speed parallel clock. For example, if you need to implement a data rate of 1.2288 Gbps for the CPRI protocol, which places stringent requirements on the amount of latency variation, you must choose a reference clock of 122.88 MHz to allow the usage of a feedback path from the channel PLL. This feedback path reduces the variations in latency.

When you select this option, provide an input reference clock to the channel PLL that is of the same frequency as the low-speed parallel clock.


CPRI and OBSAI

Use the deterministic latency functional mode to implement protocols such as CPRI and OBSAI.

The CPRI interface defines a digital point-to-point interface between the Radio Equipment Control (REC) and the Radio Equipment (RE), allowing flexibility in either co-locating the REC and the RE, or a remote location of the RE.

Figure 6-40: CPRI Topologies

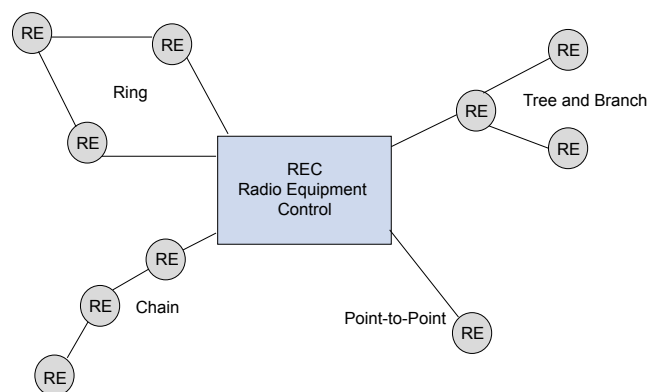In most cases, CPRI links are between REC and RE modules or between two RE modules in a chain configuration.



If the destination for the high-speed serial data that leaves the REC is the first RE, it is a single-hop connection. If the serial data from the REC must traverse through multiple REs before reaching the destination RE, it is a multi-hop connection.

Remotely locating the RF transceiver from the main base station introduces a complexity with overall system delay. The CPRI specification requires that the accuracy of measurement of roundtrip delay on single-hop and multi-hop connections be within ± 16.276 ns to properly estimate the cable delay.

For a single-hop system, this allows a variation in roundtrip delay of up to ± 16.276 ns. However, for multi-hop systems, the allowed delay variation is divided among the number of hops in the connection—typically, equal to ± 16.276 ns/(the number of hops) but not always equally divided among the hops.

Deterministic latency on a CPRI link also enables highly accurate triangulation of the location of the caller.


OBSAI was established by several OEMs to develop a set of specifications that can be used for configuring and connecting common modules into base transceiver stations (BTS).

The BTS has four main modules:

- Radio frequency (RF)
- Baseband
- Control
- Transport

In a typical BTS, the radio frequency module (RFM) receives signals using portable devices and converts the signals to digital data. The baseband module processes the encoded signal and brings it back to the baseband before transmitting it to the terrestrial network using the transport module. A control module maintains the coordination between these three functions.

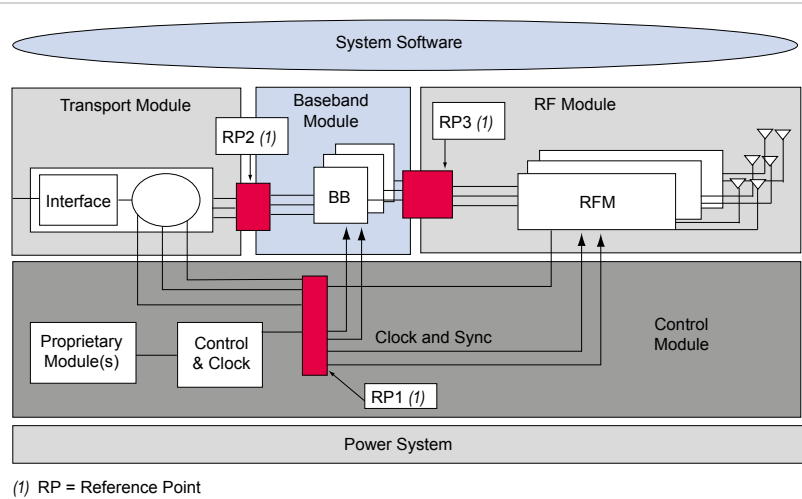Figure 6-41: Example of the OBSAI BTS Architecture



Using the deterministic latency option, you can implement the CPRI data rates in the following modes:

- Single-width mode—with 8/10-bit channel width
- Double-width mode—with 16/20-bit channel width

Table 6-10: Sample Channel Width Options for Supported Serial Data Rates

Serial Data Rate (Mbps)	Channel Width (FPGA-PCS Fabric)			
	Single Width		Double-Width	
	8-Bit	16-Bit	16-Bit	32-Bit
614.4	Yes	Yes	—	—
1228.8	Yes	Yes	Yes	Yes

Serial Data Rate (Mbps)	Channel Width (FPGA-PCS Fabric)			
	Single Width		Double-Width	
	8-Bit	16-Bit	16-Bit	32-Bit
2457.6	—	Yes	Yes	Yes
3072	—	Yes	Yes	Yes
4915.2	—	—	—	Yes
6144	—	—	—	Yes
9830.4	—	—	—	Yes

Related Links

For more information, refer to the [Deterministic Latency PHY IP Core](#) chapter in the [Altera Transceiver PHY IP Core User Guide](#).

Transceiver Configurations

Arria V GZ transceivers offer both standard PCS and 10G PCS configurations. These configurations allow you to modify, enable, or disable blocks based on your protocol requirements. This flexibility allows you to implement various protocols through the Custom, Low Latency, and Native PHY IPs.

Table 6-11: Protocols Supported Through the Custom, Low Latency, and Native PHY IPs

Protocol	PCS Type		IP
	Standard	10G	
ASI	Yes	-	Custom PHY and Native PHY
SATA/SAS	Yes	-	
GPON/EPON	Yes	-	
SFI 5.1	Yes	-	
SGMII	Yes	-	
GIGE	Yes	-	
SD-SDI/HD-SDI/3G-SDI	Yes	-	
JESD204A	Yes	-	
OIF/CEI 11G-SR	Yes	Yes	Custom PHY, Low Latency PHY, and Native PHY
OIF/CEI 6G-SR	Yes	Yes	
100G Ethernet	-	Yes	Low Latency PHY and Native PHY
40G Ethernet	-	Yes	
SFI-S	-	Yes	
10GPON/EPON	-	Yes	
10G-SDI	-	Yes	


Standard PCS Configurations—Custom Datapath

Use the Custom PHY IP to enable the standard PCS in custom datapath. In the MegaWizard Plug-In Manager, you can implement a Custom PHY link by instantiating the **Custom PHY IP** under **Transceiver PHY** in the Interfaces menu. Define your custom datapath configurations by selecting the blocks to use and the appropriate data width.

The custom datapath consists of the following blocks:

- 8B/10B encoder and decoder
- Word aligner
- Deskew FIFO
- Rate match FIFO (clock rate compensation FIFO)
- Byte ordering block
- Phase compensation FIFO
- Byte serializer and deserializer
- Transmit bit slip

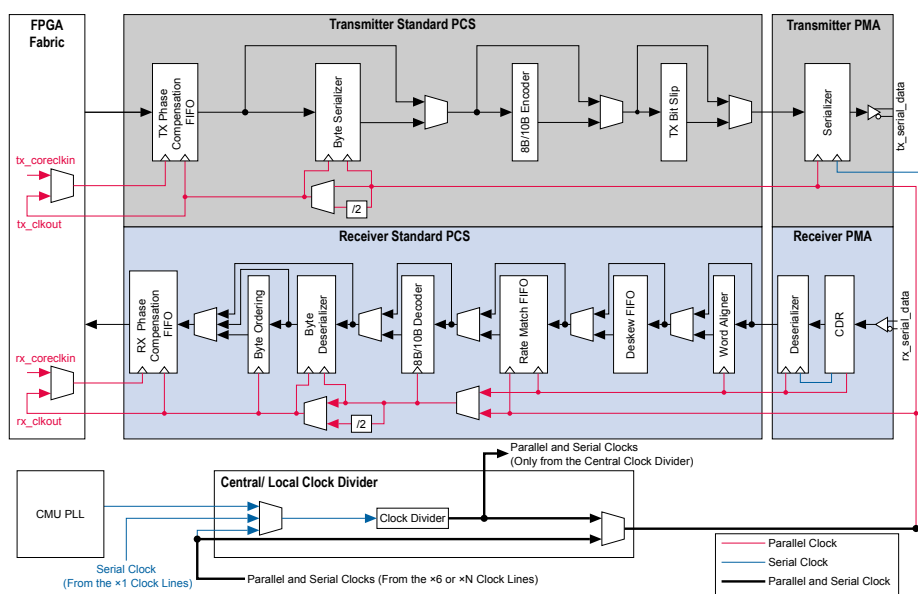Figure 6-42: Standard PCS Custom Datapath and Clocking



You can divide the custom datapath into two configurations based on the FPGA fabric-transceiver interface width and the PMA-PCS interface width (serialization factor):


- **Custom 8/10-bit-width**—the PCS-PMA interface width is in 8-bit or 10-bit mode for lower data rates.
- **Custom 16/20-bit-width**—the PCS-PMA interface width is in 16-bit or 20-bit mode for higher data rates.

Table 6-12: PCS-PMA Interface Widths and Supported Data Rates

PCS-PMA Interface Width	Supported Data Rate Range PMA
Custom 8-bit width	622 Mbps to 4.24 Gbps
Custom 10-bit width	622 Mbps to 5.3 Gbps
Custom 16-bit width	622 Mbps to 7.84 Gbps
Custom 20-bit width	622 Mbps to 9.8304 Gbps

Figure 6-43: Standard PCS Custom 8-Bit PMA-PCS Interface Width

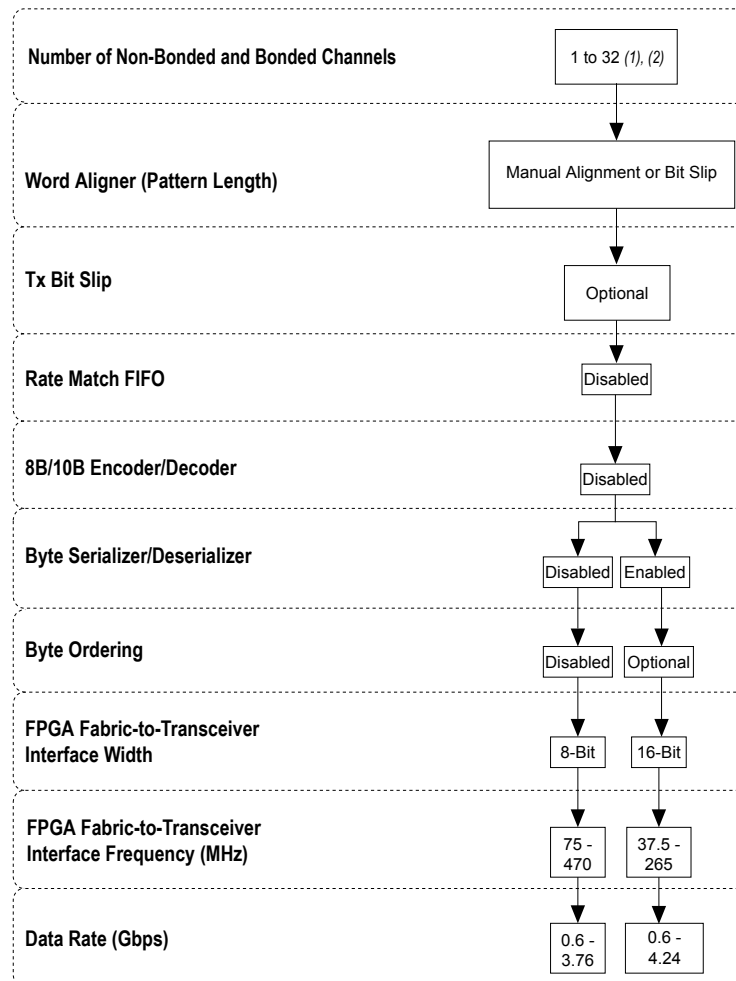Shows the available options for the standard PCS custom 8-bit PMA-PCS interface width. The maximum frequencies are for the fastest devices.




Notes:

- (1) For xN bonding, the number of bonded channels is up to four using CMU PLL and up to six using ATX PLL, provided the data rate is supported by the CMU PLL and ATX PLL.
- (2) Bonding more than six channels requires PLL feedback compensation bonding. PLL feedback compensation bonding requires one PLL per transceiver bank and the PLL reference clock frequency must have the same value as the lane data rate divided by the serialization factor.

Figure 6-44: Standard PCS Custom 10-Bit PMA-PCS Interface Width

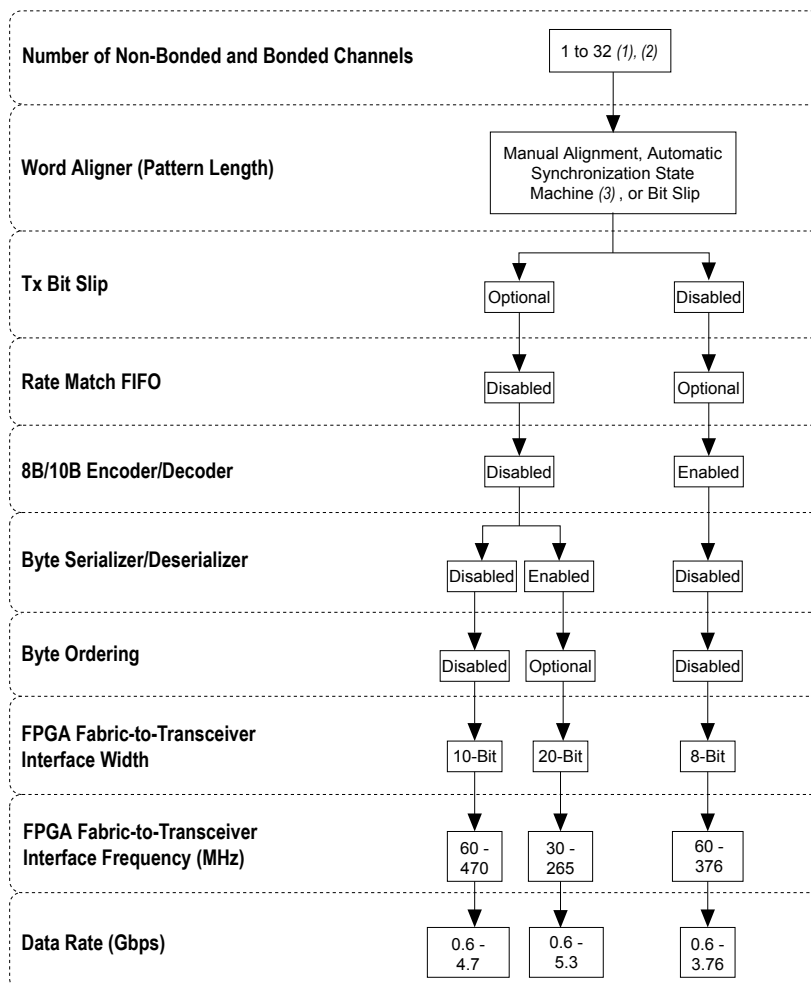Shows the available options for the standard PCS custom 10-bit PMA-PCS interface width. The maximum frequencies are for the fastest devices.




Notes:

- (1) For xN bonding, the number of bonded channels is up to four using CMU PLL and up to six using ATX PLL, provided the data rate is supported by the CMU PLL and ATX PLL.
- (2) Bonding more than six channels requires PLL feedback compensation bonding. PLL feedback compensation bonding requires one PLL per transceiver bank and the PLL reference clock frequency must have the same value as the lane data rate divided by the serialization factor.
- (3) Automatic Synchronization State Machine requires enabling the 8B/10B Encoder/Decoder.

Figure 6-45: Standard PCS Custom 16-Bit PMA-PCS Interface Width

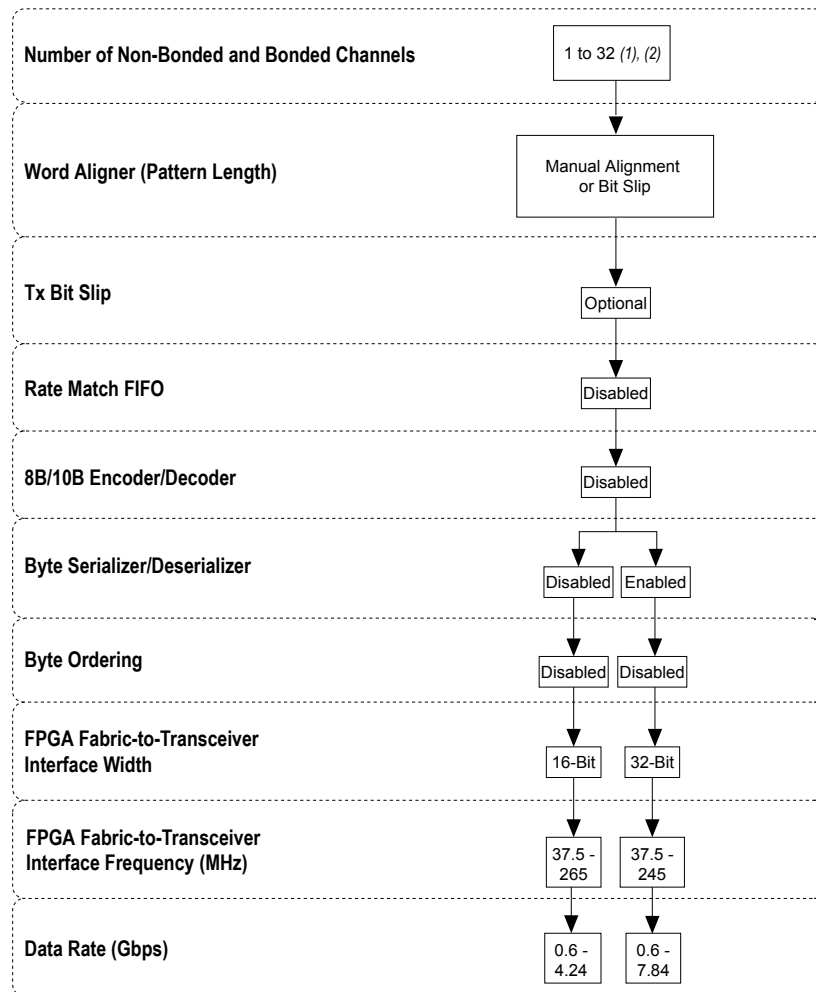Shows the available options for the standard PCS custom 16-bit PMA-PCS interface width. The maximum frequencies are for the fastest devices.




Notes:

- (1) For xN bonding, the number of bonded channels is up to four using CMU PLL and up to six using ATX PLL, provided the data rate is supported by the CMU PLL and ATX PLL.
- (2) Bonding more than six channels requires PLL feedback compensation bonding. PLL feedback compensation bonding requires one PLL per transceiver bank and the PLL reference clock frequency must have the same value as the lane data rate divided by the serialization factor.

Figure 6-46: Standard PCS Custom 20-Bit PMA-PCS Interface Width

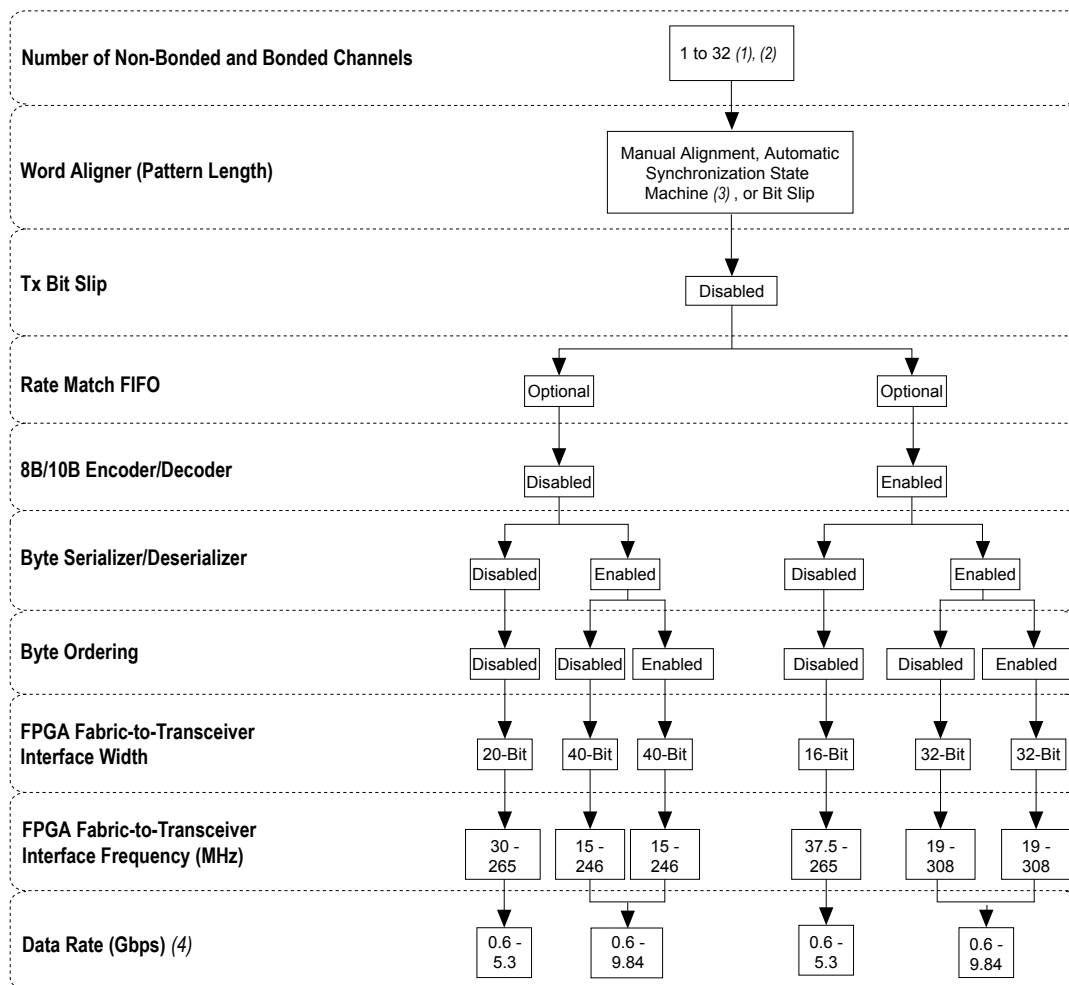Shows the available options for the standard PCS custom 20-bit PMA-PCS interface width. The maximum frequencies are for the fastest devices.



Notes:

- (1) For xN bonding, the number of bonded channels is up to four using CMU PLL and up to six using ATX PLL, provided the data rate is supported by the CMU PLL and ATX PLL.
- (2) Bonding more than six channels requires PLL feedback compensation bonding. PLL feedback compensation bonding requires one PLL per transceiver bank and the PLL reference clock frequency must have the same value as the lane data rate divided by the serialization factor.
- (3) Automatic Synchronization State Machine requires enabling the 8B/10B Encoder/Decoder.
- (4) The maximum data rate specification is valid only for the -2 (fastest) speed grade devices. For data rate specifications for other speed grades, refer to the Arria V Device Datasheet.

Related Links

Refer to the “Standard PCS Architecture” section in the *Transceiver Architecture in Arria V Devices* chapter
For information about the maximum data rate for a certain speed grade, refer to the *Arria V Device Datasheet*
Refer to the *Custom PHY IP Core* chapter in the *Altera Transceiver PHY IP Core User Guide*

Standard PCS Configurations—Low Latency Datapath


A low latency datapath bypasses much of the standard PCS, allowing more design control in the FPGA fabric. Use the Low Latency PHY IP to enable the standard PCS in a low latency datapath.

In the MegaWizard Plug-In Manager, you can implement a Low Latency PHY link by instantiating the **Low Latency PHY IP** under **Transceiver PHY** in the Interfaces menu. In the Low Latency GUI under the **General** tab, select **Standard** on the **Datpath type** field.

The standard PCS can be used in a low latency datapath that contains only the following blocks:

- Phase compensation FIFO
- Byte serializer and deserializer

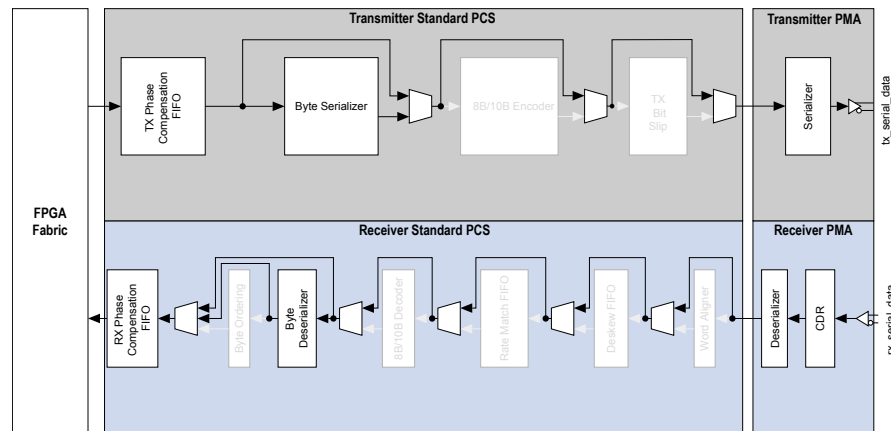Figure 6-47: Standard PCS Low Latency Datapath



You can divide the low latency datapath into two configurations based on the FPGA fabric-transceiver interface width and the PMA-PCS interface width (serialization factor):

- **Low latency 8/10-bit-width**—the PCS-PMA interface width is in 8-bit or 10-bit mode for lower data rates.
- **Low latency 16/20-bit-width**—the PCS-PMA interface width is in 16-bit or 20-bit mode for higher data rates.


Table 6-13: PCS-PMA Interface Widths and Data Rates

Low Latency PHY IP Core	Supported Data Rate Range PMA
Low Latency 8-bit width	600 Mbps to 4.24 Gbps
Low Latency 10-bit width	600 Mbps to 5.30 Gbps
Low Latency 16-bit width	1 Gbps to 7.84 Gbps
Low Latency 20-bit width	1 Gbps to 9.84 Gbps

In the low latency datapath, the TX and RX phase compensation FIFOs are always enabled. Depending on the targeted data rate, you may bypass the byte serializer and deserializer blocks.

Figure 6-48: Standard PCS Low Latency 8-Bit PMA-PCS Interface Width

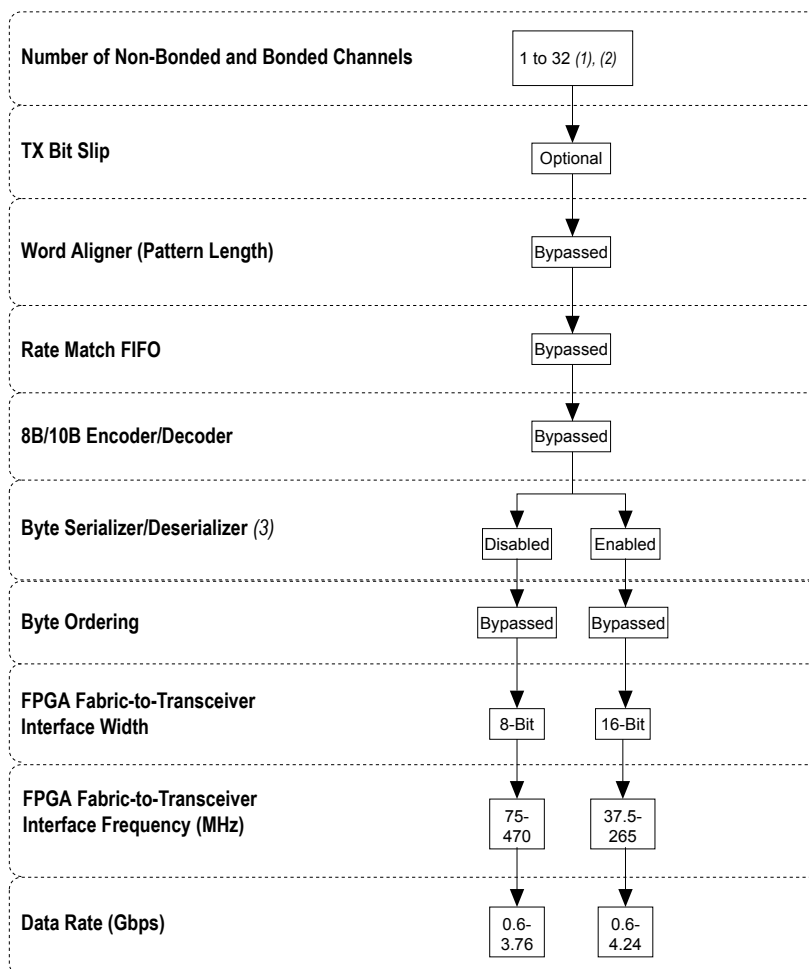Shows the available options for the standard PCS low latency 8-bit PMA-PCS interface width. The blocks shown as “Disabled” are not used but incur latency. The blocks shown as “Bypassed” are not used and do not incur any latency. The maximum frequencies are for the fastest devices.




Notes:

- (1) For xN bonding, the number of bonded channels is up to four using CMU PLL and up to six using ATX PLL, provided the data rate is supported by the CMU PLL and ATX PLL.
- (2) Bonding more than six channels requires PLL feedback compensation bonding. PLL feedback compensation bonding requires one PLL per transceiver bank and the PLL reference clock frequency must have the same value as the lane data rate divided by the serialization factor.
- (3) The Quartus II software selects whether the byte serializer/deserializer is enabled or disabled based on the datapath width.

Figure 6-49: Standard PCS Low Latency 10-Bit PMA-PCS Interface Width

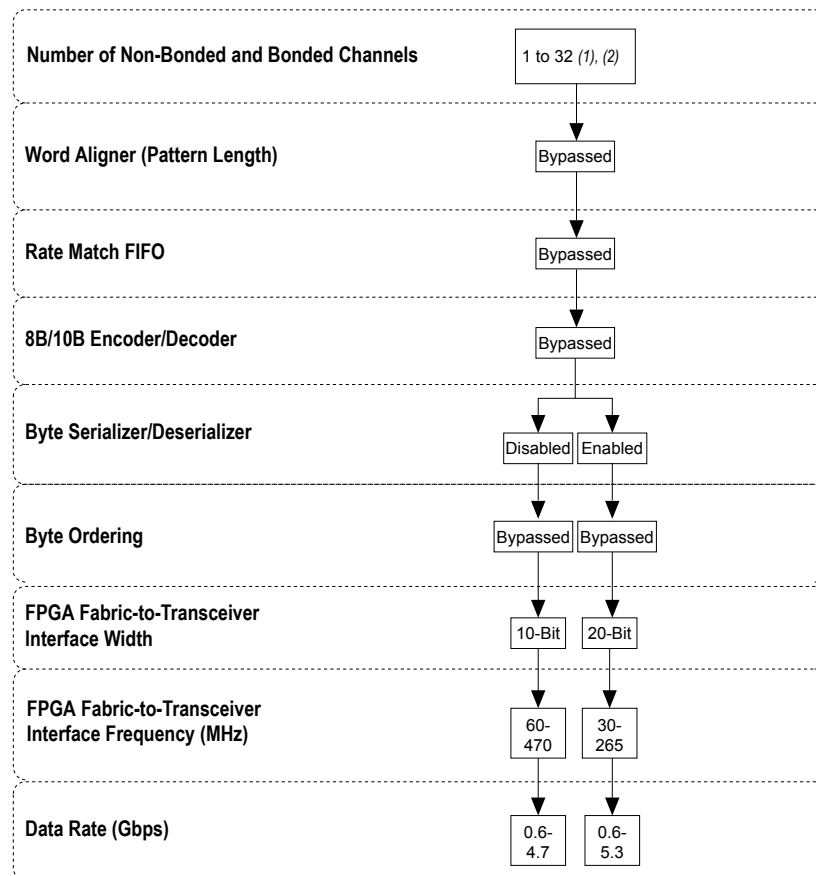
Shows the available options for the standard PCS low latency 10-bit PMA-PCS interface width. The blocks shown as “Disabled” are not used but incur latency. The blocks shown as “Bypassed” are not used and do not incur any latency. The maximum frequencies are for the fastest devices.

**Notes:**

- (1) For xN bonding, the number of bonded channels is up to four using CMU PLL and up to six using ATX PLL, provided the data rate is supported by the CMU PLL and ATX PLL.
- (2) Bonding more than six channels requires PLL feedback compensation bonding. PLL feedback compensation bonding requires one PLL per transceiver bank and the PLL reference clock frequency must have the same value as the lane data rate divided by the serialization factor.

Figure 6-50: Standard PCS Low Latency 16-Bit PMA-PCS Interface Width

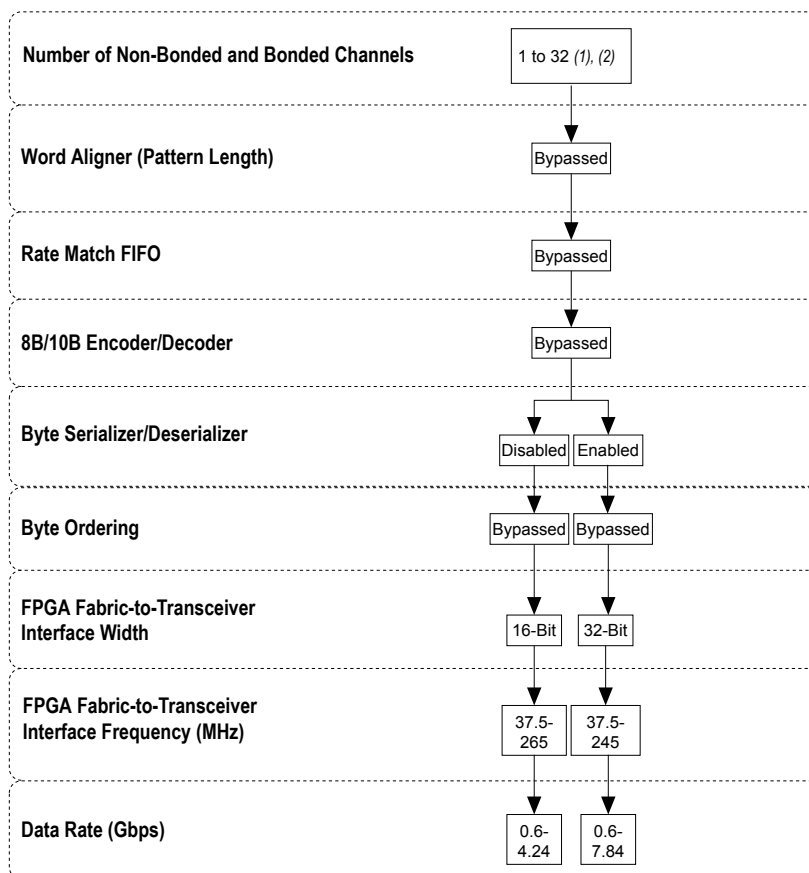Shows the available options for the standard PCS low latency 16-bit PMA-PCS interface width. The blocks shown as “Disabled” are not used but incur latency. The blocks shown as “Bypassed” are not used and do not incur any latency. The maximum frequencies are for the fastest devices.




Notes:

- (1) For xN bonding, the number of bonded channels is up to four using CMU PLL and up to six using ATX PLL, provided the data rate is supported by the CMU PLL and ATX PLL.
- (2) Bonding more than six channels requires PLL feedback compensation bonding. PLL feedback compensation bonding requires one PLL per transceiver bank and the PLL reference clock frequency must have the same value as the lane data rate divided by the serialization factor.

Figure 6-51: Standard PCS Low Latency 20-Bit PMA-PCS Interface Width

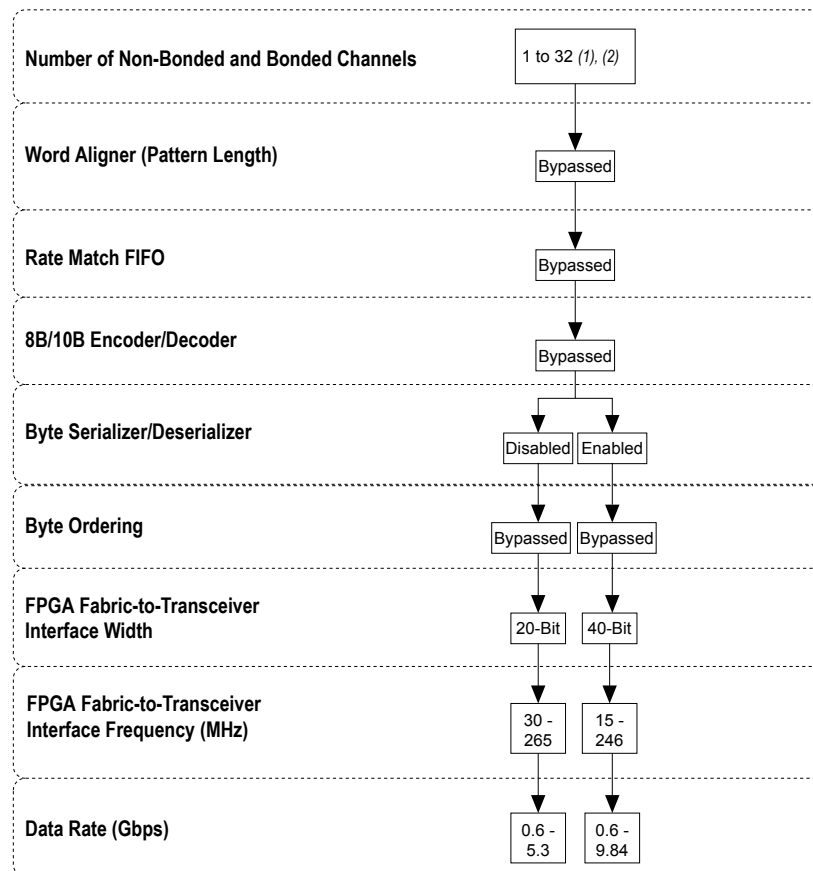Shows the available options for the standard PCS low latency 20-bit PMA-PCS interface width. The blocks shown as “Disabled” are not used but incur latency. The blocks shown as “Bypassed” are not used and do not incur any latency. The maximum frequencies are for the fastest devices.

**Notes:**

- (1) For xN bonding, the number of bonded channels is up to four using CMU PLL and up to six using ATX PLL, provided the data rate is supported by the CMU PLL and ATX PLL.
- (2) Bonding more than six channels requires PLL feedback compensation bonding. PLL feedback compensation bonding requires one PLL per transceiver bank and the PLL reference clock frequency must have the same value as the lane data rate divided by the serialization factor.

Related Links

Refer to the “Standard PCS Architecture” section in the Transceiver Architecture in Arria V Devices chapter
For information about the maximum data rate for a certain speed grade, refer to the Arria V Device Datasheet
Refer to the Low Latency PHY IP Core chapter in the Altera Transceiver PHY IP Core User Guide

Transceiver Channel Placement Guidelines


You can use CMU PLLs or ATX PLLs in non-bonded and bonded configurations.

Arria V devices allow the placement of up to five channels when a CMU PLL is used or up to six channels when an ATX PLL is used in a non-bonded configuration within the same transceiver bank:

- Custom PHY IP with standard PCS datapath configuration
- Low Latency PHY IP with Standard PCS or 10G PCS (same data rate) in low latency datapath configuration

Figure 6-52: Non-Bonded Channel Placement Guidelines with Standard and 10G PCS in Custom and Low Latency Datapath Configurations

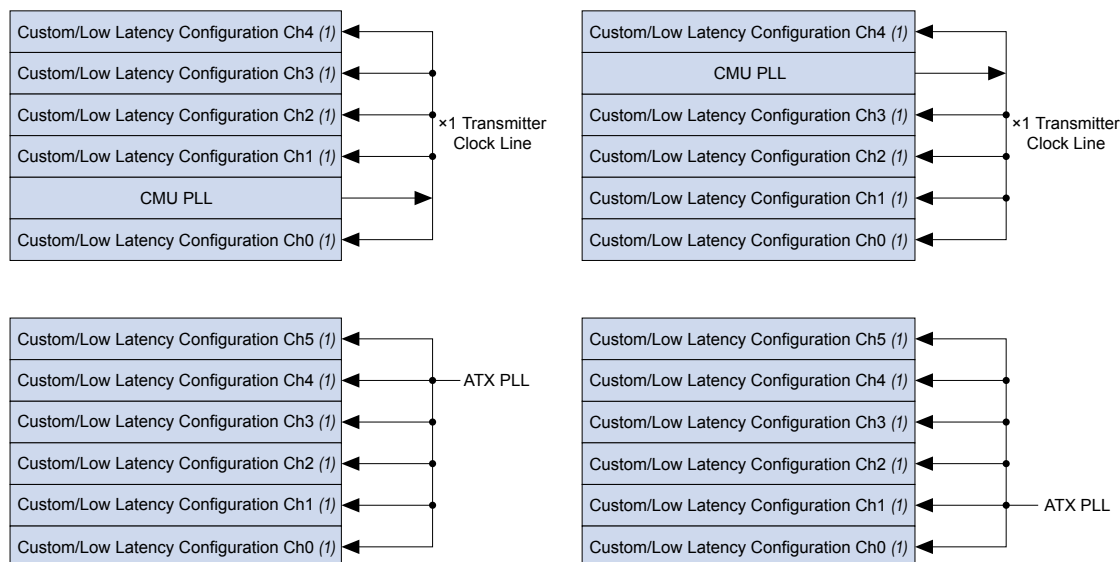All channels are assumed to contain a transmitter and receiver.




Arria V devices allow the placement of up to four channels when a CMU PLL is used or up to six channels when an ATX PLL is used in a bonded configuration within the same transceiver bank:

- Custom PHY IP with standard PCS datapath configuration
- Low Latency PHY IP with Standard PCS or 10G PCS (same data rate) in low latency datapath configuration

The xN bonding method requires Logical Lane 0 be placed at either transceiver physical channel 1 or 4 within a transceiver bank. The PLL feedback compensation bonding method does not have a Logical Lane 0 assignment requirement and must be used when more than one transceiver bank is needed. However, PLL feedback compensation bonding requires the use of one PLL per transceiver bank.

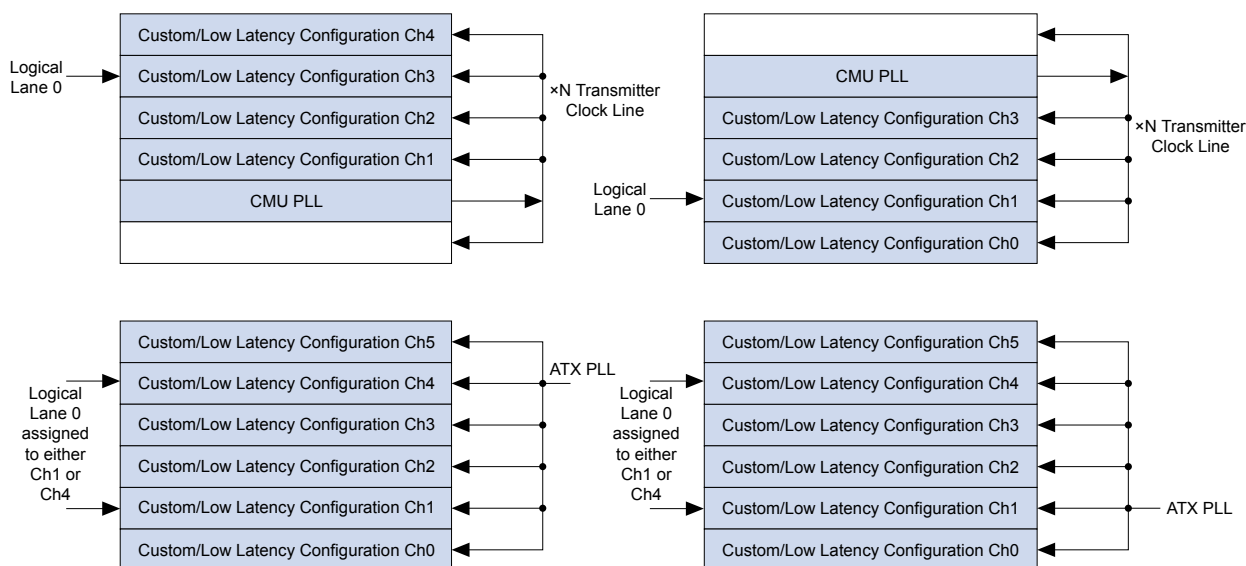Figure 6-53: Bonded Channel Placement Guidelines with Standard and 10G PCS in Custom and Low Latency Datapath Configurations



10G PCS Configurations

The Low Latency PHY IP can also configure 10G PCS in the low latency datapath.

In the MegaWizard Plug-In Manager, you can implement a Low Latency PHY link with the 10G PCS by instantiating the **Low Latency PHY IP** under **Transceiver PHY** in the Interfaces menu. In the Low Latency GUI under the **General** tab, select **10G** on the **Datapath type** field.

A Low Latency PHY IP core with the 10G PCS is available for 32-bit, 40-bit, 50-bit, 64-bit, or 66-bit PCS data width configurations.

Figure 6-54: 10G PCS Low Latency Configuration Datapath


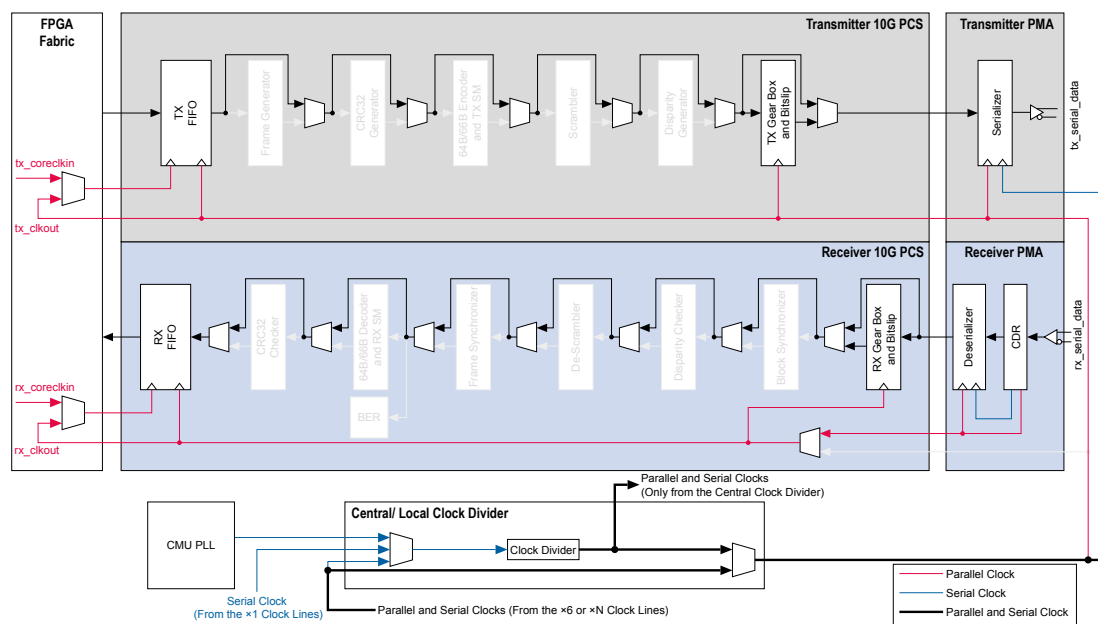


Figure 6-55: Options for 10G PCS Low Latency Configuration

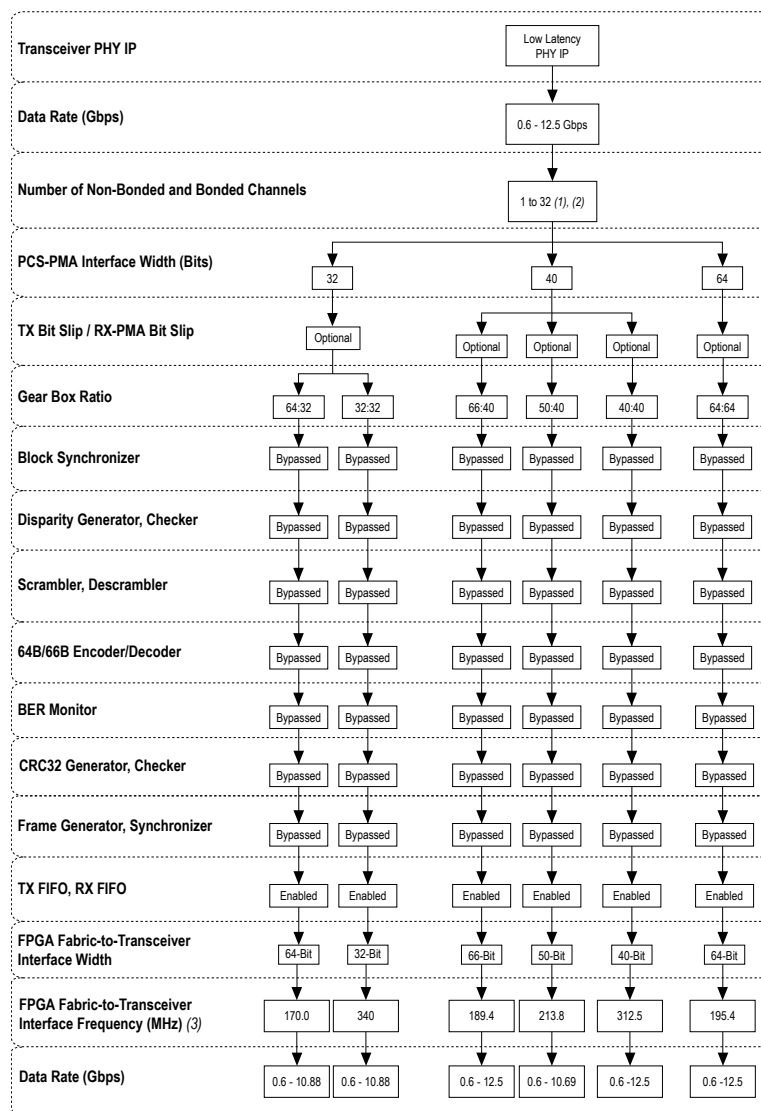The blocks shown as “Disabled” are not used but incur latency. The blocks shown as “Bypassed” are not used and do not incur any latency. The FPGA fabric-to-transceiver interface maximum frequency is for the fastest speed grade devices.



Notes:

- (1) For xN bonding, the number of bonded channels is up to four using CMU PLL and up to six using ATX PLL, provided the data rate is supported by the CMU PLL and ATX PLL.
- (2) Bonding more than six channels requires PLL feedback compensation bonding. PLL feedback compensation bonding requires one PLL per transceiver bank and the PLL reference clock frequency must have the same value as the lane data rate divided by the serialization factor.
- (3) You must generate an rx_coreclk with the specified frequency whenever the gear box is enabled.

The Quartus II software supports both non-bonded configuration and bonded configurations up to 32 lanes in the link when the 10G PCS in low latency datapath configuration is enabled. If you create multiple non-bonded channels with the 10G PCS in low latency mode, a common parallel clock (used in the bonded lane or channel configuration) is not generated by the central clock divider block. Each transmitter channel takes the high-speed clock, generated by the channel PLL, and locally divides it to generate the parallel clock.

Related Links

[For the limits of all speed grades, refer to the “Transceiver Specifications for Arria V GZ Devices” table in the Arria V Device Datasheet](#)

[Transceiver Clocking in Arria V Devices](#)

Refer to the Low Latency PHY IP Core chapter in the Altera Transceiver PHY IP Core User Guide


10G PCS Datapath Functionality

Various 10G PCS blocks are available when you implement the 10G PCS in low latency mode.

Transmitter and Receiver FIFO

The FIFOs can be configured in phase compensation or registered mode for the RX path. In phase compensation mode, the FIFO compensates the phase differences in the clock between the read and write side of the FIFO. The clocking scheme for the write side of the transmitter (TX) and receiver (RX) FIFOs depends on whether the gear box is enabled and on its ratio (40:66, 40:50, or 32:64). The clocking scheme is described in the “Clocking” section.

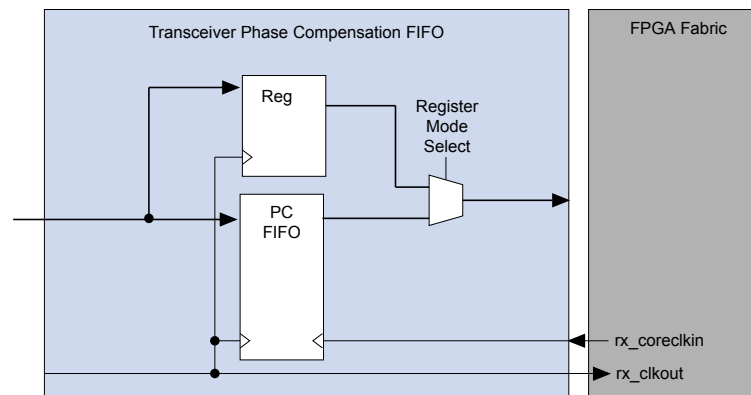Figure 6-56: Phase Compensation FIFO in RX Path



Gear Box

The gear box translates the datapath width differences between the PCS and the physical medium attachment (PMA) interfaces. The gear box contains handshake control logic and FIFOs to implement the data-width translation. For the supported gear box ratio, refer to figure "Options for 10G PCS Low Latency Configuration".

TX Bit Slip Feature


The bit slip feature allows you to slip the transmitter side bits before they are sent to the gear box. The number of bits slipped is equal to the FPGA fabric-to-transceiver interface width minus 1. For example, if the FPGA fabric-to-transceiver interface width is 64 bits, a maximum of 63 bits can be slipped. That is, `bit[63]` from the first word and `bit[62:0]` are concatenated to form a 64 bit word (`bit[62:0]` from the second word, `bit[63]` from the first word LSB). The 7-bit input control signal is available to the FPGA fabric. For a 63-bit shift mentioned above, set the value of the input control to 7'b0011111.

Clocking

The transceiver datapath clocking scheme depends on the gear box ratio.


When the gear box ratio is 64:64, 40:40, or 32:32, there is no frequency difference between the read and write side of the TX and RX FIFO clocks because the gear box is the same ratio. The Quartus II software automatically connects the clocks to the read and write side of the TX FIFO and RX FIFO. In this configuration, the data from the TX FIFO is still fed to the gear box before being sent to the serializer. The gear box cannot be bypassed or disabled.

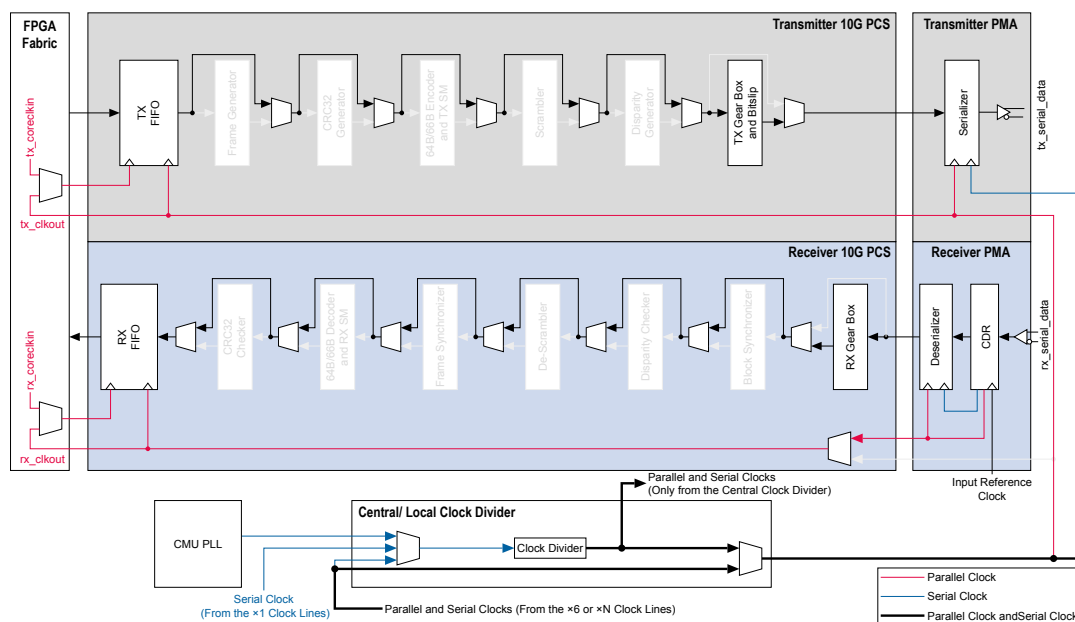Figure 6-57: 10G PCS Low Latency Datapath with Gear Box in 64:64, 40:40, and 32:32 Ratio



When the gear box ratio is 64:32. The FPGA fabric interface width (64 bits) is exactly twice the internal transceiver datapath width. You can divide the `tx_clkout` and `rx_clkout` in the FPGA fabric by two, and use them to clock the write side of TX FIFO and the read side of RX FIFO, respectively. Select the `tx_coreclk` and the `rx_coreclk` ports in the Low Latency PHY IP core and connect the divided clock to these ports.

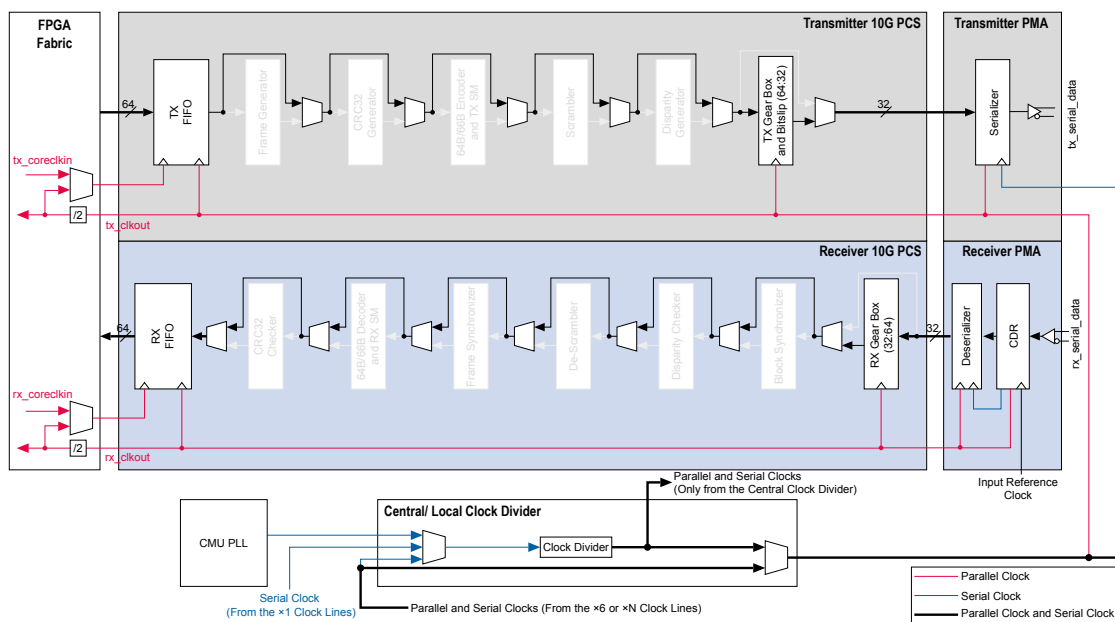
Figure 6-58: 10G PCS Low Latency Datapath with the Gear Box Ratio of 64:32



When the gear box ratio is 66:40, the `rx_clkout` parallel clock provided is a recovered clock coming from the CDR with a divided-by-66 output frequency.

The `tx_clkout` parallel clock is generated from the transmit PLL feeding a fractional PLL that is automatically instantiated from the FPGA core with a divided-by-66 output frequency.

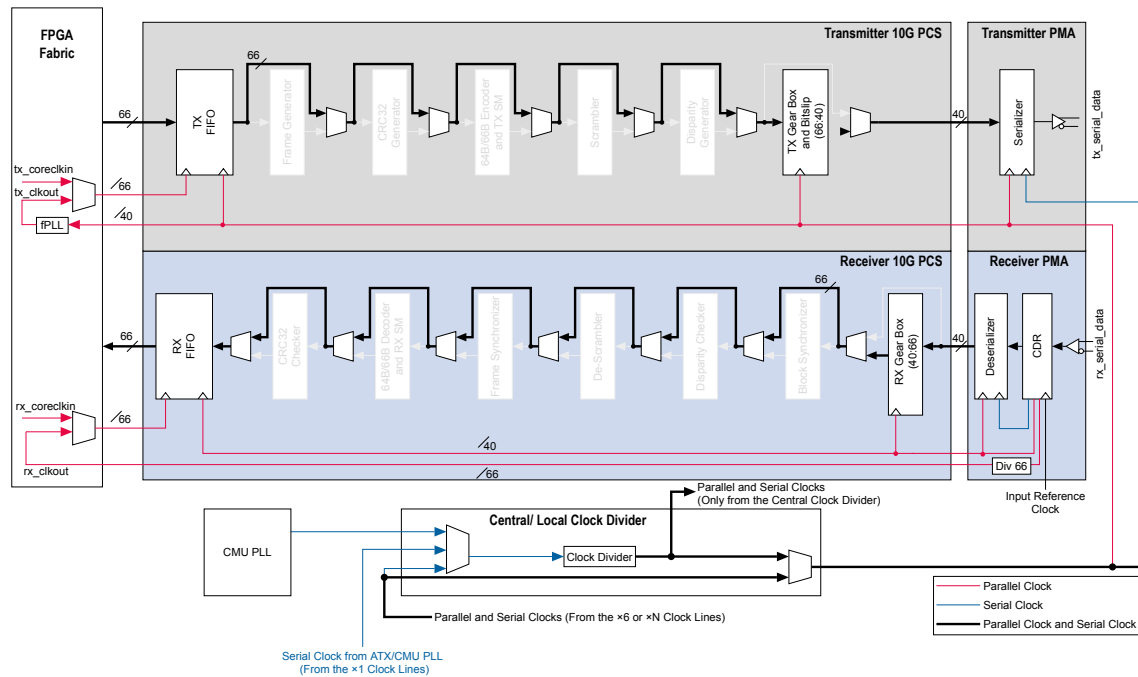
Figure 6-59: 10G PCS Low Latency Datapath with the Gear Box Ratio of 66:40



When the gear box ratio is not an integral multiple of the FPGA fabric interface width (for example, 50:40), you must instantiate a fractional PLL to provide the appropriate clock frequency to the write side of the TX FIFO. Set the division factor in the fractional PLL so that its output frequency is equal to the transmitter or lane data rate divided by 50 for the 50:40 gear box ratio. The clock source that provides the input reference clock to the fractional PLL and the CMU or ATX transmit PLL must be the same because the TX FIFO operates as a phase compensation FIFO, unlike a clock compensation or rate match FIFO. Therefore, the clock requires a zero ppm between the read and write operations.

For the receiver side, enable the `rx_coreclk` port and connect a second fractional PLL output to the `rx_coreclk` port. The RX FIFO operates as a phase compensation FIFO. Therefore, the read and write side of the RX FIFO must have a zero ppm difference.

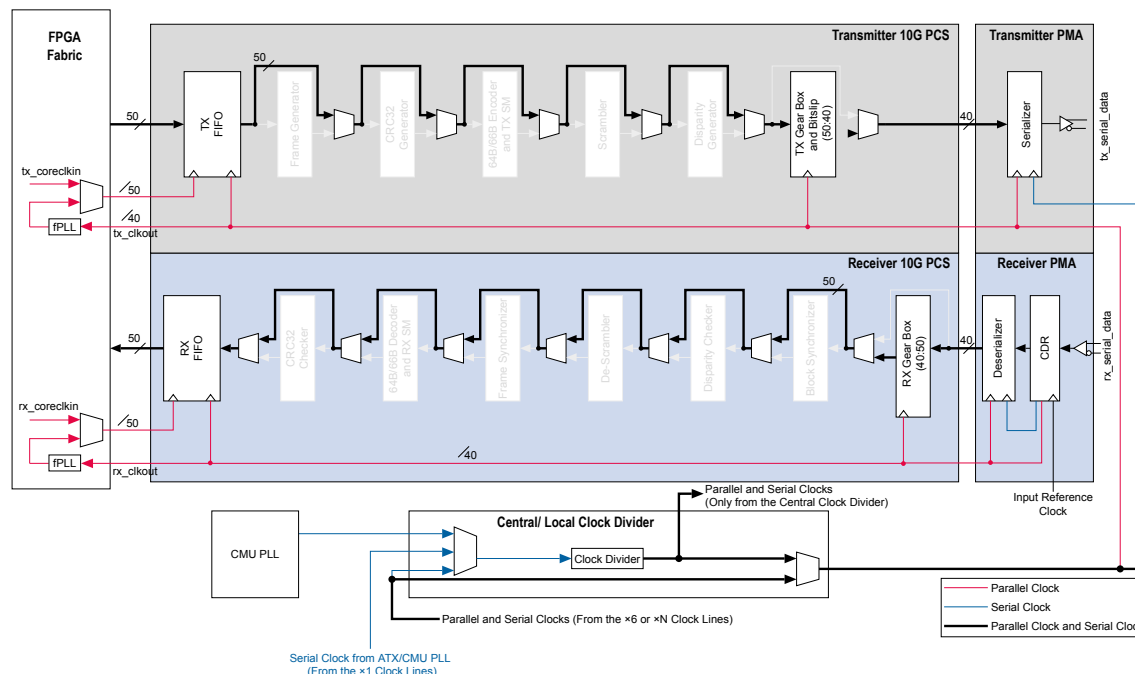Figure 6-60: 10G PCS Low Latency Datapath with the Gear Box Ratio of 50:40



Note:

(1) The clock source that provides the input reference clock to the fractional PLL (fPLL) and the CMU or ATX PLL (the CMU or ATX PLL generates the high-speed clock for the serializer) must be the same. The transmitter and the receiver FIFOs compensates only for phase differences. Therefore, the same clock source ensures zero ppm between the read and write clocks of the FIFOs.

Using the coreclk Ports

The `tx_coreclk` and `rx_coreclk` ports offer the flexibility to use the `tx_clkout` and `rx_clkout` from one channel to clock the TX and RX FIFOs multiple channels for source synchronous links or if the upstream transmitters are all clocked by the same clock source. The `tx_coreclk` and `rx_coreclk` ports require a zero ppm difference between the `tx_clkout` and `rx_clkout` ports, respectively, with a divided-by-50 input frequency.

Related Links

For more information, refer to the “User-Selected Transmitter Datapath Interface Clock” and “User-Selected Receiver Datapath Interface Clock” sections in the *Transceiver Clocking in Arria V Devices* chapter

Merging Instances

You can merge transmitter and receiver instances with the different 10G PCS datapath configurations in the same 10 Gbps physical channel.

For example, the Quartus II software allows you to create the two following instances and place them in the same physical transceiver channel:

- Transmitter only instance with a 40-bit FPGA fabric interface
- Receiver only instance with a 64-bit FPGA fabric interface

However, you cannot merge a transmitter instance and receiver instance (1 channel instance) using different PCS blocks (10G PCS and standard PCS) within the same physical transceiver channel.

Transceiver Channel Placement Guidelines

Arria V devices allow the placement of up to four or five channels when a CMU PLL is used or up to six channels when an ATX PLL is used with Custom and Low Latency datapath configurations with Standard PCS and 10G PCS (same data rate) within the same transceiver bank.

The figures in "Transceiver Channel Placement Guidelines" show both non-bonded and xN bonded supported channel placement scenarios using CMU and ATX PLLs within a transceiver bank.

Related Links

[Transceiver Channel Placement Guidelines](#) on page 62

Native PHY IP Configuration

The Native PHY IP is a full exposure of the transceiver hardware features with little abstraction of the physical hardware layer.

Access to both the Standard PCS and 10G PCS hardware, as well as PMA Direct modes can be enabled with full user control over the transceiver interfaces, parameters, and ports. Enable the Standard PCS and 10G PCS and/or PMA Direct mode to design for multi-datarate protocols, speed negotiation, and support multiple PCS datapath natively on the transceiver link.

The Transceiver Reconfiguration Controller is used to dynamically switch between the Standard PCS, 10G PCS, and PMA Direct datapaths or any other transceiver datapath configurations. In addition, the Reconfiguration Controller is required for calibration, remote loopback enablement, PLL reference clock switching, channel PCS and PLL reconfiguration and switching, and to dynamically adjust PMA transmit pre-emphasis, receiver CDR, CTLE, and DFE advance settings.

Not all hardware combinations are legal or supported, so the user must have sufficient prior knowledge of the transceiver hardware, PLLs, and clocking architecture to determine valid PCS hardware setting, parameters, and combinations. All serial transceiver protocols can be supported by the Native PHY IP.

Note: Altera recommends all new serial protocol designs use the Native PHY IP with the exception of XAUI and PCI Express. A default preset is provided for ASI, SDI, SRIO, CPRI, GIGE, Interlaken, SAS, SATA, and other protocol configurations as well as Low Latency configurations for the Standard PCS and 10G PCS similar to the Low Latency PHY IP implementation. Users can also select the default preset for guidance and then modify the configurations for custom applications and have the ability to save the modified preset.

The transmit CMU or ATX Phase-Locked Loop (PLL) selection is embedded in the PHY IP. In addition, the fractional PLL (fPLL) can now be used as a transmit PLL for lane datarates up to 3.125Gbps. User must select the appropriate PLL for balancing datarate and jitter performance trade-off requirements. Unlike the other PHY IPs, the Native PHY IP does not have an Avalon Memory-Mapped (Avalon-MM) interface as the intent is to have direct access to the port interfaces. As a result, there are no embedded registers. In addition, the reset controller is also not embedded in the Native PHY IP. It is recommended that the external reset controller IP is used to implement the reset sequence and to make PLL sharing and merging effortless.

In the MegaWizard Plug-In Manager, you can implement a Native PHY link by instantiating the Arria V Transceiver Native PHY IP under Transceiver PHY in the Interfaces menu. Select options to generate valid custom transceiver configurations or select the default preset for by double-clicking in the window menu.

Related Links

For information using the x1, xN, and feedback compensation clock bonding requirements, use case limitations, advantages, and functionality, refer to the [Transceiver Clocking in Arria V Devices](#).

For more information about the functions and capabilities of the Reconfiguration Controller, refer to [Dynamic Reconfiguration in Arria V Devices](#).

Protocols and Transceiver PHY IP Support

The following tables lists the protocol and the PHY IP features support.

Protocol Standard	Transceiver IP	PCS Support	Avalon-MM Register Interface	Embedded Reset Controller	External Reset Controller IP
PCIe Gen3 x1, x2, x4, x8	PHY IP Core for PCIe ¹⁵	Standard and Gen3	Yes	Yes	N/A
PCIe Gen2 x1, x2, x4, x8	PHY IP Core for PCIe ¹⁵	Standard	Yes	Yes	N/A
PCIe Gen1 x1, x2, x4, x8	PHY IP Core for PCIe ¹⁵	Standard	Yes	Yes	N/A
IEEE 802.3 10GBASE-R Ethernet	10GBASE-R	10G	Yes	Yes	N/A
IEEE 802.3 10GBASE-R Ethernet	Native PHY	10G	No	No	Optional
IEEE 802.3 10/40G Ethernet	Native PHY	10G	No	No	Optional
IEEE 802.3 1G/10Gb Ethernet	1G/10GbE and 10GBASE-KR	Standard and 10G	Yes	Yes	No
IEEE 802.3 1G/10Gb Ethernet with 1588	1G/10GbE and 10GBASE-KR	Standard and 10G	Yes	Yes	No
IEEE 802.3 10/40G Ethernet with 1588	Native PHY	10G	No	No	Optional
IEEE 802.3 10GBASE-KR and 1000BASE-X	1G/10GbE and 10GBASE-KR	Standard and 10G	Yes	Yes	No
IEEE 802.3 1000BASE-X Gigabit Ethernet	Custom PHY Standard	Standard	Yes	Yes	Optional
IEEE 802.3 1000BASE-X IEEE 802.3 10GBASE-KR IEEE 802.3 40GBASE-KR4	Native PHY	Standard and 10G	No	No	Optional
IEEE 802.3 XAUI	XAUI PHY IP	Standard Soft-PCS	Yes	Yes	N/A

¹⁵ Hard IP for PCI Express is also available as a MegaCore function.

Protocol Standard	Transceiver IP	PCS Support	Avalon-MM Register Interface	Embedded Reset Controller	External Reset Controller IP
SPAUI Low Latency	PHY	Standard and 10G	Yes	Yes	Optional
SPAUI	Native PHY	Standard and 10G	No	No	Optional
DDR XAUI	Low Latency PHY	Standard and 10G	Yes	Yes	Optional
DDR XAUI	Native PHY	Standard and 10G	no	No	Optional
Interlaken (CEI-6G/11G)	Interlaken PHY	10G	Yes	Yes	N/A
Interlaken (CEI-6G/11G)	Native PHY ¹⁶	10G	No	No	Optional
OTU-3 (40G) via OIF SFI-5.2/SFI-5.1	Low Latency PHY	10G	Yes	Yes	Optional
OTU-3 (40G) via OIF SFI-5.2/SFI-5.1	Native PHY	10G	No	No	Optional
OTU-2 (10G) via OIF SFI-5.1s	Low Latency PHY	Standard	Yes	Yes	Optional
OTU-2 (10G) via OIF SFI-5.1s	Native PHY	Standard	No	No	Optional
OTU-1 (2.7G)	Low Latency PHY	Standard	Yes	Yes	Optional
OTU-1 (2.7G)	Native PHY	Standard	No	No	Optional
SONET/SDH STS-768/STM-256 (40G) via OIF SFI-5.2	Low Latency PHY	10G	Yes	Yes	Optional
SONET/SDH STS-768/STM-256 (40G) via OIF SFI-5.1	Low Latency PHY	Standard	Yes	Yes	Optional
SONET/SDH STS-768/STM-256 (40G) via OIF SFI-5.2/SFI-5.1	Native PHY	Standard and 10G	No	No	Optional

¹⁶ A Soft-PCS bonding IP is required.

Protocol Standard	Transceiver IP	PCS Support	Avalon-MM Register Interface	Embedded Reset Controller	External Reset Controller IP
SONET/SDH STS-192/STM-64 (10G) via SFP+/SFF-8431/CEI-11G	Low Latency PHY	10G	Yes	Yes	Optional
SONET/SDH STS-192/STM-64 (10G) via SFP+/SFF-8431/CEI-11G	Native PHY	10G	No	No	Optional
SONET/SDH STS-192/STM-64 (10G) via OIF SFI-5.1s/SxI-5/SFI-4.2	Low Latency PHY	Standard	Yes	Yes	Optional
SONET/SDH STS-192/STM-64 (10G) via OIF SFI-5.1s/SxI-5/SFI-4.2	Native PHY	Standard	No	No	Optional
SONET STS-96 (5G) via OIF SFI-5.1s	Low Latency PHY	Standard	Yes	Yes	Optional
SONET STS-96 (5G) via OIF SFI-5.1s	Native PHY	Standard	No	No	Optional
SONET/SDH STS-48/STM-16 (2.5G) via SFP/TFI-5.1	Low Latency PHY	Standard	Yes	Yes	Optional
SONET/SDH STS-48/STM-16 (2.5G) via SFP/TFI-5.1	Native PHY	Standard	No	No	Optional
SONET/SDH STS-12/STM-4 (0.622G) via SFP/TFI-5.1	Low Latency PHY	Standard	Yes	Yes	Optional
SONET/SDH STS-12/STM-4 (0.622G) via SFP/TFI-5.1	Native PHY	Standard	No	No	Optional

Protocol Standard	Transceiver IP	PCS Support	Avalon-MM Register Interface	Embedded Reset Controller	External Reset Controller IP
Intel QPI	Low Latency PHY Native PHY	Standard	Yes	Yes	Optional
Intel QPI	Native PHY	PMA-Direct	No	No	Optional
10G SDI	Low Latency PHY	10G	Yes	Yes	Optional
10G SDI	Native PHY	10G	No	No	Optional
SD-SDI/HD-SDI/3G-SDI	Custom PHY	Standard	Yes	Yes	Optional
SD-SDI/HD-SDI/3G-SDI	Native PHY	Standard	No	No	Optional
10G GPON/EPON	Low Latency PHY	10G	Yes	Yes	Optional
10G GPON/EPON	Native PHY	10G	No	No	Optional
GPON/EPON	Custom PHY	Standard	Yes	Yes	Optional
GPON/EPON	Native PHY	Standard	No	No	Optional
10G Fibre Channel	Low Latency PHY	10G	Yes	Yes	Optional
10G Fibre Channel	Native PHY	10G	No	No	Optional
8G/4G Fibre Channel	Low Latency PHY	Standard	Yes	Yes	Optional
8G/4G Fibre Channel	Native PHY	Standard	No	No	Optional
FDR/FDR-10 Infiniband x1, x4, x12	Low Latency PHY	10G	Yes	Yes	Optional
FDR/FDR-10 Infiniband x1, x4, x12	Native PHY	10G	No	No	Optional
SDR/DDR/QDR Infiniband x1, x4, x12	Custom PHY	Standard	Yes	Yes	Optional
SDR/DDR/QDR Infiniband x1, x4, x12	Native PHY	Standard	No	No	Optional
CPRI 4.2/OBSAI RP3 v4.2	Deterministic PHY	Standard	Yes	Yes	N/A

Protocol Standard	Transceiver IP	PCS Support	Avalon-MM Register Interface	Embedded Reset Controller	External Reset Controller IP
CPRI 4.2/OBSAI RP3 v4.2	Native PHY	Standard	No	No	Optional
SRIO 2.2/1.3	Custom PHY	Standard	Yes	Yes	Optional
SRIO 2.2/1.3	Native PHY	Standard	No	No	Optional
SATA 3.0/2.0/1.0 and SAS 2.0/1.0	Custom PHY	Standard	Yes	Yes	Optional
SATA 3.0/2.0/1.0 and SAS 2.0/1.0	Native PHY	Standard	No	No	Optional
HiGig+/2+	Custom PHY	Standard	Yes	Yes	Optional
HiGig+/2+	Native PHY	Standard	No	No	Optional
JESD204A	Custom PHY	Standard	Yes	Yes	Optional
JESD204A	Native PHY	Standard	No	No	Optional
ASI	Custom PHY	Standard	Yes	Yes	Optional
SPI 5.1 (40G) / SPI 4.2 (10G)	Custom PHY	Standard	Yes	Yes	Optional
SPI 5.1 (40G) / SPI 4.2 (10G)	Native PHY	Standard	No	No	Optional

Native PHY Transceiver Datapath Configuration

The following figure shows the transceiver Standard PCS blocks, 10G PCS blocks, and their settings in addition to PMA Direct Mode available in a Native PHY IP configuration.

Figure 6-61: Transceiver Blocks in a Native PHY IP Configuration

The Optional PCS blocks that are "Disabled" are not used, but incur latency. The Optional PCS blocks selected as "Bypassed" are not used and do not incur latency.


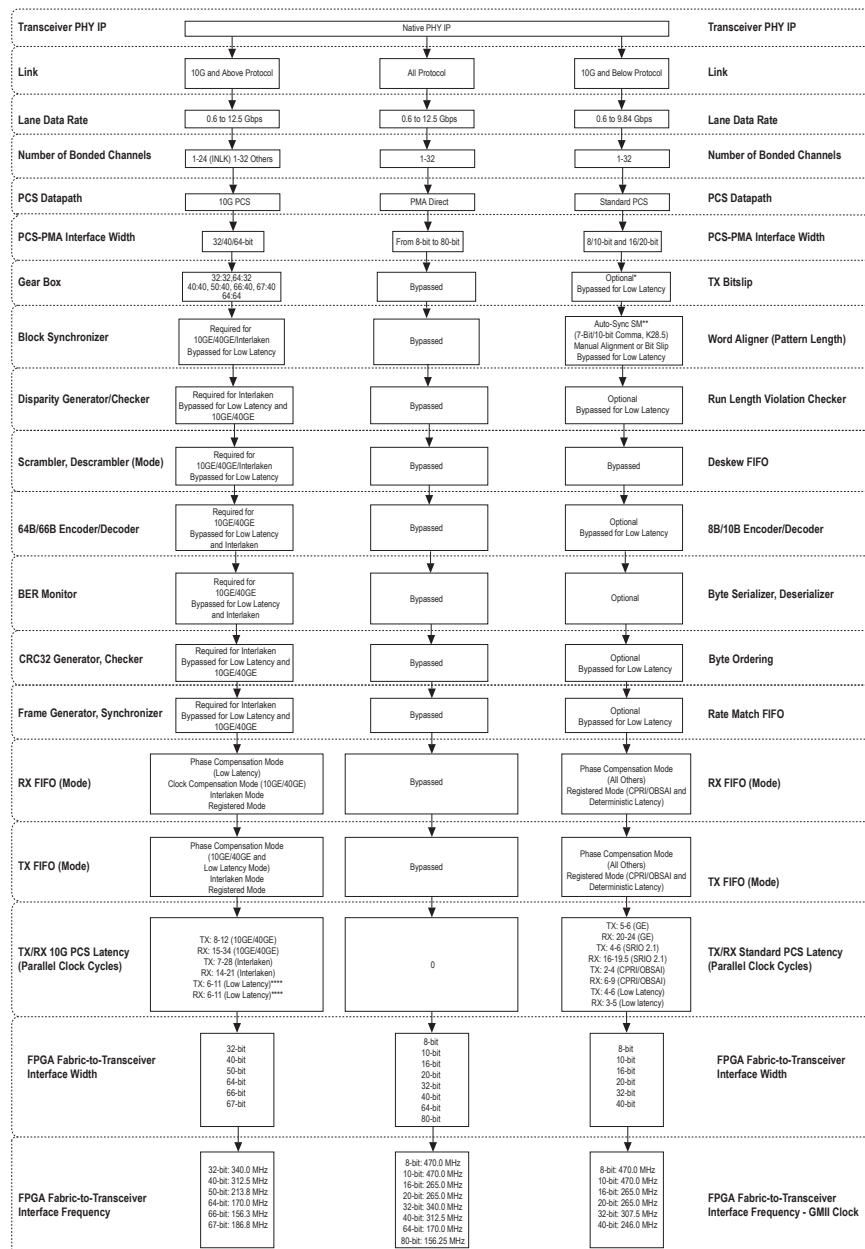


Figure 6-62: Native PHY IP Datapath Configuration

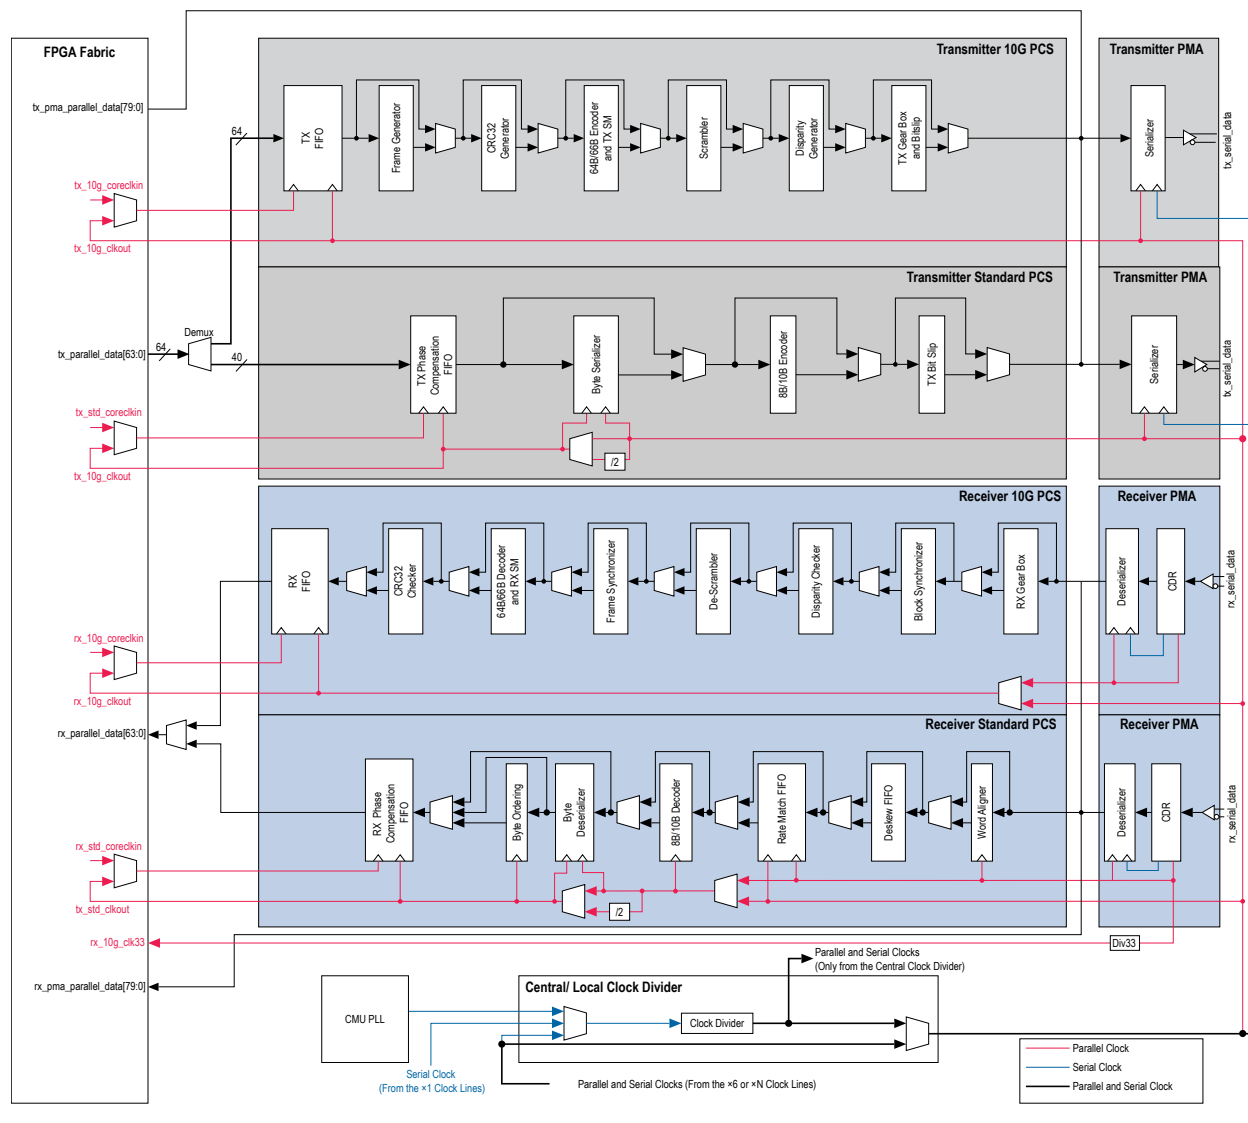The following figure shows the Standard PCS and 10G PCS blocks, their associated datapaths, and the PMA Direct datapath available for implementation with the Native PHY IP.



Standard PCS Features

The Standard PCS can reach lane data rates up to 9.8304 Gbps with the widest PCS-PMA width and FPGA fabric-to-transceiver interface width configuration. The Standard PCS is used when supporting protocols with lane data rates below 10 Gbps such as Gigabit Ethernet, 10GBASE-KR4, CPRI/OBSAI, SD/HD/3G-SDI, HiGig, Hypertransport, SRIO, JESD204A, SATA and SAS, 1G/2G/4G/8G Fibre Channel, GPON/EPON, SFI-4.2/SFI-5.1, TFI, SPI-4.2/SPI-5.1, STS-12/12c, STS-48/48c, OTU-0.

Standard PCS Receiver and Transmitter Blocks

In the MegaWizard Plug-In Manager, you can implement a Native PHY link with the Standard PCS datapath by instantiating the Arria V Transceiver Native PHY IP under Transceiver PHY in the Interfaces menu. Select option to enable the Standard PCS by checking the box. A Standard PCS tab appears with the parameters and configuration options for each block.

The following blocks can be enabled or disabled and configured in the Standard PCS.

- Word Aligner
- Deskew FIFO
- Rate Match FIFO
- 8B/10B Encoder/Decoder
- Byte Serializer/De-Serializer
- Byte Ordering
- Receive Phase Compensation FIFO (Can also be configured as registered mode)
- Transmit Phase Compensation FIFO (Can also be configured as registered mode)
- TX Bitstripper
- PRBS Pattern Generator

The following blocks Standard PCS transmitter blocks:

- Phase Compensation FIFO
- Serializer

Related Links

[Transceiver Architecture in Arria V Devices](#)

[Altera Transceiver PHY IP Core User Guide](#)

10G PCS Supported Features

The 10G PCS can reach lane data rates up to 12.5 Gbps with the widest FPGA fabric-to-transceiver interface width configuration. The 10G PCS is used when supporting protocols with lane data rates 10Gbps and above such as 10/40 Gigabit Ethernet, Interlaken, SPAUI, 10G SDI, 10G Fibre Channel, Infiniband, GPON/EPON, SFI-5.2, STS-192/192c, STS-768/768c, OTU-2/3.

10G PCS Receiver and Transmitter Blocks

In the MegaWizard Plug-In Manager, you can implement a Native PHY link with the 10G PCS datapath by instantiating the Transceiver Native PHY IP under Transceiver PHY in the Interfaces menu. When you select the 10G PCS option, a 10G PCS tab appears with the parameters and configuration options for each block.

The following blocks below can be enabled and disabled and configured in the 10G PCS.

- Receive and Transmit FIFO
- CRC32 Generator/Checker
- Metaframe Generator/Synchronizer
- 64B/66B Encoder/Decoder
- Scrambler/Descrambler
- Disparity Generator/Checker
- Block Synchronizer
- Multi-Gearbox

The hard PCS blocks natively support 10/40 Gigabit Ethernet and Interlaken. The remaining protocols are supported via 10G PCS Low Latency datapath configuration with the appropriate gearbox ratios.

10/40 Gigabit Ethernet Blocks Supported Configuration:

- Receiver FIFO in Clock Compensation Mode and Transmit FIFO in Phase Compensation Mode
- 64B/66B Encoder/Decoder
- Scrambler/Descrambler
- Block Synchronizer
- 66:40 Gearbox Ratio

10/40 Gigabit Ethernet Blocks with 1588 Supported Configuration:

- Receiver and Transmit FIFO in Registered Mode
- 64B/66B Encoder/Decoder
- Scrambler/Descrambler
- Block Synchronizer
- 66:40 Gearbox Ratio

Interlaken Blocks Supported Configuration:

- Receiver and Transmit FIFO in Interlaken Elastic Buffer (Generic) Mode
- CRC32 Generator/Checker
- Metaframe Generator/Synchronizer
- Scrambler/Descrambler
- Disparity Generator/Checker
- Block Synchronizer
- 67:40 Gearbox Ratio

SFI-5.2 Blocks Supported Configuration:

- Receiver and Transmit FIFO in Phase Compensation Mode
- 64:64, 40:40, 64:32, and 32:32 Gearbox Ratios

10G SDI Blocks Supported Configuration:

- Receiver and Transmit FIFO in Phase Compensation Mode
- 50:40 Gearbox Ratio

Other Protocol Blocks Supported Configuration in Basic Mode:

- Receiver and Transmit FIFO in Phase Compensation Mode
- 64:64, 66:40, 40:40, 64:32, and 32:32 Gearbox Ratios

Related Links

[Transceiver Architecture in Arria V Devices](#)

[Altera Transceiver PHY IP Core User Guide](#)

Receiver and Transmit Gearbox in Native PHY IP

The Native PHY IP supports many 10G PCS:PMA gearbox ratios.

Users have the freedom to choose the best gearbox ratio that matches their core IP. The 67:40 is mainly used for Interlaken configurations and the 66:40 ratio is mainly used in 10 Gigabit and 40 Gigabit Ethernet configurations and the 50:40 is used in 10 Gigabit SDI applications. The other ratios can support additional standard communication and transport protocols such as GPON, EPON, SFI-5.2 and OTN.

10G PCS Supported Gearbox Ratios:

- 64:64 PCS:PMA Width
- 67:40 PCS:PMA Width
- 66:40 PCS:PMA Width
- 50:40 PCS:PMA Width
- 40:40 PCS:PMA Width
- 64:32 PCS:PMA Width
- 32:32 PCS:PMA Width

10G Datapath Configurations with Native PHY IP

The following table lists the 10G PCS datapath configuration for 10/40 Gigabit Ethernet, 10/40 Gigabit Ethernet with 1588, Interlaken, 10G SDI, and other 10G protocols.

Transceiver PHY IP	Native PHY IP					
Link	10/40GBASE-R/KR	10/40GBASE-R with 1588	Interlaken	SFI-5.2	10G SDI	Other 10G Protocols (Basic Mode)
Lane Datarate	10.3125Gbps	10.3125Gbps	3.125 - 12.5Gbps	0.6 - 12.5Gbps ¹⁷	10.692Gbps	0.6 - 12.5Gbps ¹⁷
PMA Channel Bonding Option ^{18 19}	Non-bonded xN, feedback compensation	Non-bonded xN, feedback compensation	Non-bonded	Non-bonded xN, feedback compensation	Non-bonded xN, feedback compensation	Non-bonded xN, feedback compensation
PCS Datapath	10G PCS	10G PCS	10G PCS	10G PCS	10G PCS	10G PCS
PCS-PMA Interface Width (Serialization Factor)	40-bit	40-bit	40-bit	32/40/64-bit	40-bit	32/40/64-bit
Gearbox Ratios	66:40 ²⁰	66:40 ²⁰	67:40	32:32, 64:32 ²⁰ , 40:40, 64:64	50:40 ²¹	32:32, 64:32 ²⁰ , 40:40, 66:40 ²⁰ , 64:64
Block Synchronizer	Enabled	Enabled	Enabled	Bypassed (Low Latency Mode)	Bypassed (Low Latency Mode)	Bypassed (Low Latency Mode)

¹⁷ Gearbox ratios of 64:32 and 32:32 have a maximum supported datarate of 13.6Gbps.

¹⁸ For xN bonding, the number of bonded channels is up to four using CMU PLL and up to six using ATX PLL, provided the data rate is supported by the CMU PLL and ATX PLL.

¹⁹ Bonding more than six channels requires PLL feedback compensation bonding. PLL feedback compensation bonding requires one PLL per transceiver bank and the PLL reference clock frequency must have the same value as the lane data rate divided by the serialization factor.

²¹ PCS tx_clkout frequency output is lane datarate/40 for 10G-SDI, Interlaken, and Basic Mode.

²⁰ May require the use of a fractional PLL (fPLL) for selected Gearbox ratio.

Transceiver PHY IP	Native PHY IP					
Link	10/40GBASE-R/KR	10/40GBASE-R with 1588	Interlaken	SFI-5.2	10G SDI	Other 10G Protocols (Basic Mode)
Disparity Generator, Checker	Bypassed	Bypassed	Enabled	Bypassed (Low Latency Mode)	Bypassed (Low Latency Mode)	Bypassed (Low Latency Mode)
Scrambler, Descrambler	Enabled	Enabled	Enabled	Bypassed (Low Latency Mode)	Bypassed (Low Latency Mode)	Bypassed (Low Latency Mode)
64B/66B Encoder, Decoder	Enabled	Enabled	Bypassed	Bypassed (Low Latency Mode)	Bypassed (Low Latency Mode)	Bypassed (Low Latency Mode)
BER Monitor	Enabled	Enabled	Bypassed	Bypassed (Low Latency Mode)	Bypassed (Low Latency Mode)	Bypassed (Low Latency Mode)
CRC32 Generator, Checker	Bypassed	Bypassed	Enabled	Bypassed (Low Latency Mode)	Bypassed (Low Latency Mode)	Bypassed (Low Latency Mode)
Frame Generator, Synchronizer	Bypassed	Bypassed	Enabled	Bypassed (Low Latency Mode)	Bypassed (Low Latency Mode)	Bypassed (Low Latency Mode)
RX FIFO (Mode)	Clock Compensation Mode	Registered Mode	Interlaken Mode	Phase Compensation Mode	Phase Compensation Mode	Phase Compensation Mode (Low Latency Mode)
TX FIFO (Mode)	Phase Compensation Mode	Registered Mode	Interlaken Mode	Phase Compensation Mode	Phase Compensation Mode	Phase Compensation Mode (Low Latency Mode)

Transceiver PHY IP	Native PHY IP					
Link	10/40GBASE-R/KR	10/40GBASE-R with 1588	Interlaken	SFI-5.2	10G SDI	Other 10G Protocols (Basic Mode)
TX/RX 10G PCS Latency (Parallel Clock Cycles) ²²	TX: 8-12 RX: 15-34	TX: 1-4 RX: 2-5	TX: 7-28 RX: 14-21	TX: 6-10 (64:32) TX: 7-10 (64:64, 40:40, 32:32) RX: 6-10 (64:32) RX: 7-10 (64:64, 40:40, 32:32)	TX: 7-11 RX: 6-12	TX: 6-10 (64:32) TX: 6-11 (66:40) TX: 7-10 (64:64, 40:40, 32:32) RX: 6-10 (64:32) RX: 6-11 (66:40) RX: 7-10 (64:64, 40:40, 32:32)
FPGA Fabric-to-Transceiver Interface Widths	66-bit	66-bit	67-bit	32-bit 40-bit 64-bit	50-bit	32-bit 40-bit 64-bit 66-bit
FPGA Fabric-to-Transceiver Interface Width Maximum Frequencies	66-bit: 156.25 MHz	66-bit: 156.25 MHz	67-bit: 78.125-312.5 MHz ²¹	32-bit (32:32): 340.0 MHz 40-bit (40:40): 312.5 MHz 64-bit (64:32): 170.0 MHz ²³ 64-bit (64:64): 195.4 MHz	50-bit: 213.8 MHz ²¹	32-bit (32:32): 340.0 MHz 40-bit (40:40): 312.5 MHz 64-bit (64:32): 170.0 MHz ²³ 64-bit (64:64): 195.4 MHz 66-bit (66:40): 189.4 MHz ²¹

²² PCS Latency values are with default recommended FIFO partially full and partially empty values. Disabled if Standard PCS 8B/10 Encoder/Decoder is used.

²³ PCS tx_clkout frequency output is lane datarate/32 for SFI-S and Basic Mode.

PMA Direct Supported Features


In PMA Direct mode, the transceiver can reach lane data rates up to 12.5Gbps with the widest FPGA fabric-to-transceiver interface width configuration. The PMA Direct is used when supporting protocols that require extremely low or zero transceiver PCS latency such as QPI. There are no PCS blocks in this datapath configuration and consequently clock phase compensation has to be designed in the fabric core.

In PMA-Direct configuration, there are no PCS blocks enabled in the datapath. Data and clock signals are interfaced directly to the transceiver PMA. Consequently, you must also compensate for the timing and clock phase differences from the core fabric interface of the FPGA to the transceiver PMA. The PMA interface width has a wide range of selection from 8-bit, 10-bit, 16-bit, 20-bit, 32-bit, 40-bit, 64-bit, and 80-bit. The FPGA fabric interface width is fixed at 80-bit and you must select the correct ports for their PMA interface width configurations.

In the MegaWizard Plug-In Manager, you can implement a Native PHY link with the PMA Direct datapath by instantiating the Transceiver Native PHY IP under Transceiver PHY in the Interfaces menu. Do not select option to enable the Standard or 10G PCS by keeping the box unchecked. Standard and 10G PCS tabs do not appear indicating that PMA Direct datapath configuration has been selected.

The following figure shows the transceiver datapath and clocking in the device channels.

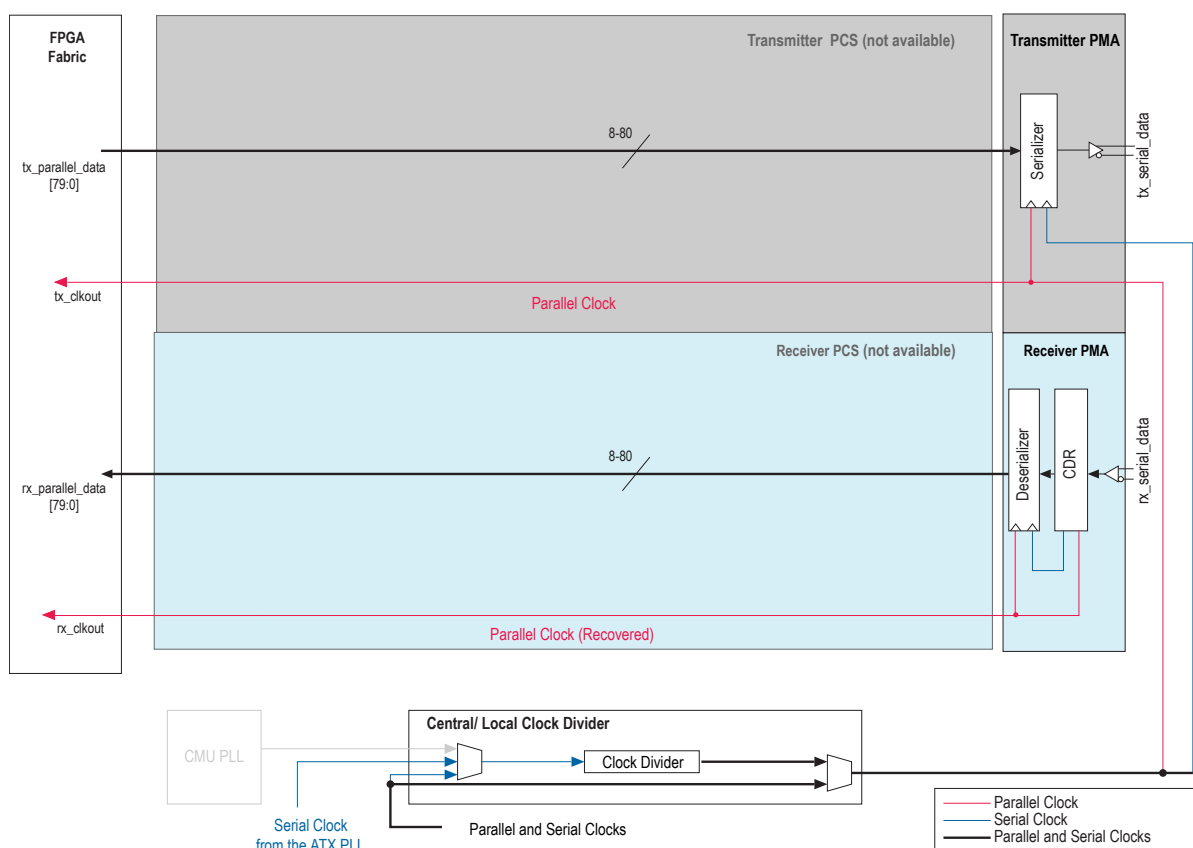Figure 6-63: Transceiver Datapath in PMA-Direct Configuration



Channel and PCS Datapath Dynamic Switching Reconfiguration

The Native PHY IP is the only PHY IP that can support transceiver channel dynamic switching between Standard PCS, 10G PCS, and PMA Direct mode. The dynamic switching mechanism via streamer-based

reconfiguration as well as the associated transceiver PLL, standard PMA, and advance transceiver PMA features reconfiguration is employed with the Reconfiguration Controller IP.

Related Links

[Dynamic Reconfiguration in Arria V Devices](#)

[Altera Transceiver PHY IP Core User Guide](#)

Document Revision History

Table 6-14: Document Revision History

Date	Version	Changes
November 2012	2012.11.19	Initial release.

Transceiver Loopback Support in Arria V Devices

7

2012.11.19

AV53006



Subscribe



Feedback

This chapter describes which loopback options are available for Arria V devices.

The Arria V loopback options allow you to verify how different functional blocks work in the transceiver.


Serial Loopback

This section describes the use of serial loopback as a debugging aid to ensure the enabled PCS and PMA blocks in the transmitter and receiver channels function correctly.

Serial loopback is available for all transceiver configurations except the PIPE mode. You can use serial loopback as a debugging aid to ensure that the enabled physical coding sublayer (PCS) and physical media attachment (PMA) blocks in the transmitter and receiver channels are functioning correctly. Furthermore, you can dynamically enable serial loopback on a channel-by-channel basis.

The data from the FPGA fabric passes through the transmitter channel and is looped back to the receiver channel, bypassing the receiver buffer. The received data is available to the FPGA logic for verification.

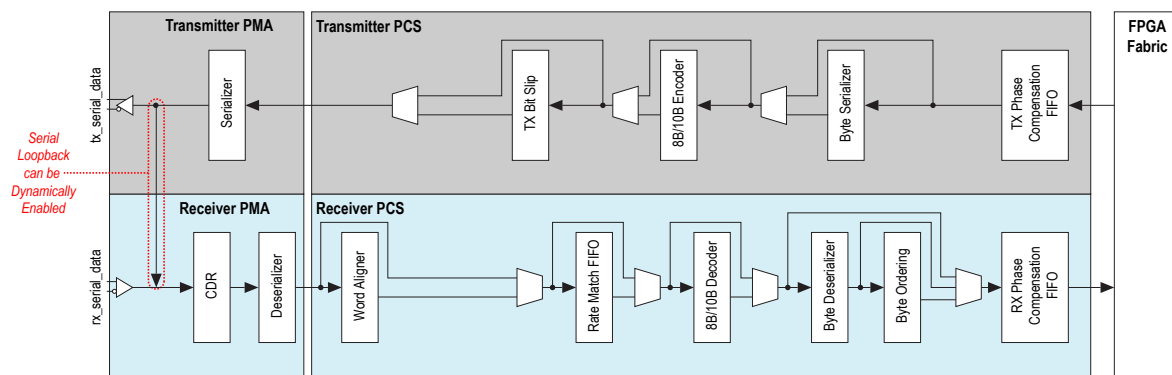Figure 7-1: Serial Loopback Datapath



When you enable serial loopback, the transmitter channel sends data to both the `tx_serial_data` output port and to the receiver channel. The differential output voltage on the `tx_serial_data` port is based on the selected differential output voltage (V_{OD}) settings.

The looped-back data is forwarded to the receiver clock data recovery (CDR). You must provide an alignment pattern for the word aligner to enable the receiver channel to retrieve the byte boundary.

If the device is not in the serial loopback configuration and is receiving data from a remote device, the recovered clock from the receiver CDR is locked to the data from the remote source.

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered

If the device is placed in the serial loopback configuration, the data source to the receiver changes from the remote device to the local transmitter channel—prompting the receiver CDR to start tracking the phase of the new data source. During this time, the recovered clock from the receiver CDR may be unstable. Because the receiver PCS is running off of this recovered clock, you must place the receiver PCS under reset by asserting the `rx_digitalreset` signal during this period.

Note: When moving into or out of serial loopback, you must assert the `rx_digitalreset` signal for a minimum of two parallel clock cycles.

Serial Loopback for Arria V GZ Devices

For Arria V GZ devices, you enable serial loopback by accessing the register space within the reconfiguration controller through the Avalon-MM interface.

PIPE Reverse Parallel Loopback


This section describes PIPE Reverse Parallel Loopback debugging option using parallel data through the rate match FIFO, transmitter serializer, and `tx_serial_data` port path.

PIPE reverse parallel loopback is only available in the PCIe® configuration for Gen1 and Gen2 data rates. Figure 2 shows the received serial data passing through the receiver CDR, deserializer, word aligner, and rate match FIFO buffer. The parallel data from the rate match FIFO is then looped back to the transmitter serializer and transmitted out through the `tx_serial_data` port. The received data is also available to the FPGA fabric through the `rx_parallel_data` signal.

PIPE reverse parallel loopback is compliant with the PCIe 2.0 specification. To enable this loopback configuration, assert the `pipe_txdetectrx_loopback` signal.

Note: PIPE reverse parallel loopback is the only loopback option supported in the PCIe configuration.

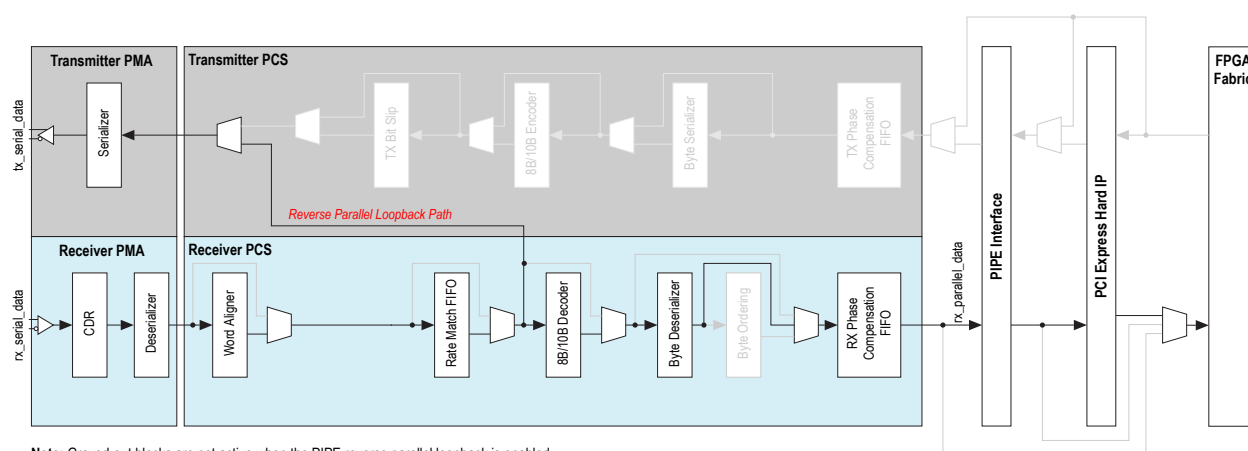Figure 7-2: PIPE Reverse Parallel Loopback Configuration Datapath



PIPE Reverse Parallel Loopback for Arria V GZ Devices

To enable the loopback configuration for Arria V GZ devices, assert the `tx_detectrxloopback` signal.


Reverse Serial Loopback

This section describes the Reverse Serial Loopback option to debug with data through the `rx_serial_data` port, receiver CDR, and `tx_serial_data` port path.

Reverse serial loopback is available as a subprotocol under custom configuration. In reverse serial loopback, the data is received through the `rx_serial_data` port, re-timed through the receiver CDR, and sent to the `tx_serial_data` port. The received data is also available to the FPGA logic. No dynamic pin control is available to select or deselect reverse serial loopback.

The transmitter buffer is the only active block in the transmitter channel. You can change the V_{OD} and the pre-emphasis first post tap values on the transmitter buffer through the dynamic reconfiguration controller. Reverse serial loopback is often implemented when using a bit error rate tester (BERT) on the upstream transmitter.

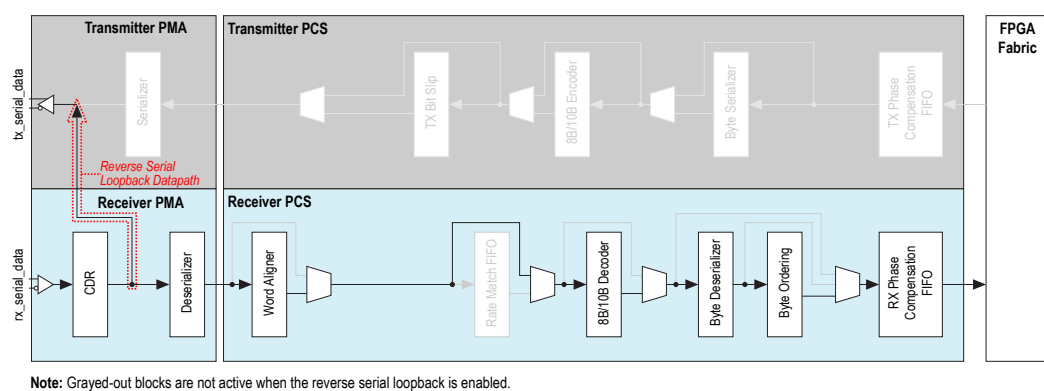Figure 7-3: Reverse Serial Loopback Datapath



Reverse Serial Loopback for Arria V GZ Devices

You can enable reverse serial loopback by accessing the register space within the reconfiguration controller through the Avalon-MM interface.

Note: For the register definitions needed to enable this functionality, refer to the Altera Transceiver PHY IP Core User Guide.

In reverse serial loopback, the data is received through the `rx_serial_data` port, re-timed through the receiver CDR, and sent out to the `tx_serial_data` port. The received data is also available to the FPGA fabric through the `rx_parallel_data` signal. No dynamic pin control is available to select or deselect reverse serial loopback.

You set the reverse serial loopback with the PMA analog registers in the reconfiguration controller.

The only transmitter channel resource used when implementing reverse serial loopback is the transmitter buffer. You can define the V_{OD} and first post tap values on the transmitter buffer using assignment statements in the project .qsf or in the Quartus II Assignment Editor. You can also change these values dynamically with the reconfiguration controller.

Note: For more information about how to dynamically change these analog settings, refer to the Altera Transceiver PHY IP Core User Guide.

Reverse serial loopback is often implemented when using an external bit error rate tester (BERT) on the upstream transmitter.

Related Links


Reverse Serial Pre-CDR Loopback

This section describes reverse serial pre-CDR loopback debugging with a data path through the `rx_serial_data` port to the `tx_serial_data` port, and before the receiver CDR.

Reverse serial pre-CDR loopback is available as a subprotocol under custom configuration. In reverse serial pre-CDR loopback, the data received through the `rx_serial_data` port is looped back to the `tx_serial_data` port before the receiver CDR. The received data is also available to the FPGA logic.

The transmitter buffer is the only active block in the transmitter channel. You can change the VOD on the transmitter buffer through the dynamic reconfiguration controller. The pre-emphasis settings for the transmitter buffer cannot be changed in this configuration.

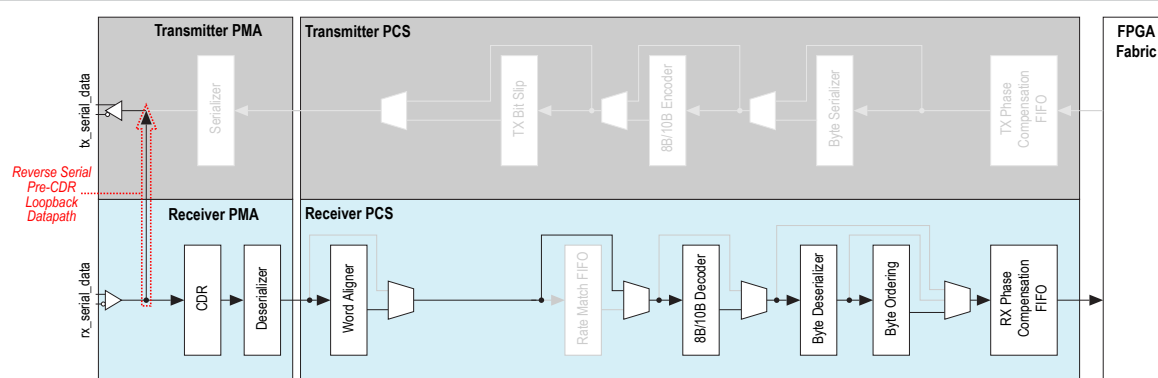Figure 7-4: Reverse Serial Pre-CDR Loopback Datapath



Note: Grayed-out blocks are not active when the reverse serial pre-CDR loopback is enabled.

Reverse Serial Pre-CDR Loopback for Arria V GZ Devices

You can enable reverse serial pre-CDR loopback by accessing the register space within the reconfiguration controller through the Avalon-MM interface.

Note: For the register definitions needed to enable this functionality, refer to the Altera Transceiver PHY IP Core User Guide.

In reverse serial pre-CDR loopback, the data received through the `rx_serial_data` port is looped back to the `tx_serial_data` port before the receiver CDR. The received data is also available to the FPGA fabric through the `rx_parallel_data` signal. No dynamic pin control is available to select or deselect reverse serial pre-CDR loopback.

You set the reverse serial pre-CDR loopback with the PMA analog registers in the reconfiguration controller.

The only transmitter channel resource used when implementing reverse serial pre-CDR loopback is the transmitter buffer. You can change the V_{OD} on the transmitter buffer through the Custom PHY IP MegaWizard™ Plug-In Manager. The receiver data characteristics that are looped back in reverse serial pre-CDR loopback are preserved by the transmitter buffer. The pre-emphasis settings for the transmitter buffer cannot be changed in this configuration.

Related Links

[Altera Transceiver PHY IP Core User Guide](#)

Document Revision History

The table below lists the revision history for this chapter.

Table 7-1: Document Revision History

Date	Version	Changes
November 2012	2012.11.19	• Reorganized content and updated template. • Minor updates for the Quartus II software version 12.1.
June 2012	1.2	Minor updates for the Quartus II software version 12.0.
November 2011	1.1	Added the following two loopback options: • “Reverse Serial Loopback” • “Reverse Serial Pre-CDR Loopback”
August 2011	1.0	Initial release.

Dynamic Reconfiguration in Arria V Devices

8

2012.11.19

AV53007



Subscribe



Feedback

The transceiver reconfiguration controller offers several different dynamic reconfiguration modes. You can choose the appropriate reconfiguration mode that best suits your application needs. All the dynamic reconfiguration modes are implemented through the transceiver Reconfiguration Controller PHY IP.

Dynamic Reconfiguration Features

The following table lists the available dynamic reconfiguration features.

Reconfiguration Feature	Description	Affected Blocks
Offset Cancellation	Counter offset variations due to process operation for the analog circuit. This feature is mandatory if you use receivers.	CDR For Arria V GZ devices, offset cancellation is also available for the RX buffer.
DCD Calibration	Compensates for the duty cycle distortion caused by clock network skew.	TX buffer and clock network skew
Analog Controls Reconfiguration	Fine-tune signal integrity by adjusting the transmitter (TX) and receiver (RX) analog settings while bringing up a link.	Analog circuit of TX and RX buffer
Loopback Modes	Enable or disable Pre- and Post-CDR Reverse Serial Loopback dynamically.	PMA

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

ISO
9001:2008
Registered

Reconfiguration Feature	Description	Affected Blocks
Data Rate Change	Increase or decrease the data rate (/1, /2, /4, /8) for autonegotiation purposes such as CPRI and SATA/SAS applications	TX Local clock dividers
	Reconfigure the TX PLL settings for protocols with multi-data rate support such as CPRI	TX PLL
	Switch between multiple TX PLLs for multi-data rate support	TX PLL within the same transceiver banks
	Channel reconfiguration—Reconfigure the RX CDR PLL from one data rate to another data rate	CDR
On-Chip Signal Quality Monitoring Supported by Arria V GZ devices	EyeQ is a debug and diagnostic tool that analyzes the incoming data, including the receiver's gain, noise level, and jitter after the receive buffer.	CDR
Continuous Time Linear Equalization Supported by Arria V GZ devices	Compensates for backplane losses and dispersion which degrade signal quality. You can implement it adaptively once or continuously.	RX PMA
Decision Feedback Equalization Supported by Arria V GZ devices	Helps compensate for backplane attenuation because of insufficient bandwidth. You can implement it once or continuously.	RX PMA

Related Links

[Backplane Applications with 28 nm FPGAs](#)

Offset Cancellation

Offset cancellation adjusts the offsets within the RX PMA and the CDR parameters for process variations.

The CDR in all Arria V devices requires offset cancellation. Offset cancellation is available for the RX buffer in Arria V GZ devices only.

Every transceiver channel has offset cancellation circuitry to compensate for the offset variations that are caused by process operations. The offset cancellation circuitry is controlled by the offset cancellation control logic IP within the transceiver reconfiguration controller. Offset cancellation is automatically performed for all channels during device power up.

When offset cancellation calibration is complete, the `reconfig_busy` status signal is deasserted to indicate the completion of the process.

The embedded reset controller automatically performs a reset sequence on the transceiver's channels after the offset cancellation and DCD calibration process are complete. After the reset sequence is completed, the transceiver reconfiguration controller is ready for user-controlled operations.

Transmitter Duty Cycle Distortion Calibration

The duty cycle calibration function tunes the transmitter to minimize duty cycle distortion.

Note: Arria V GZ devices do not require DCD calibration.

The transmitter clocks generated by the CMU that travel across the clock network may introduce duty cycle distortions (DCD). Reduce DCD with the DCD calibration IP that is integrated in the transceiver reconfiguration controller.

If the DCD Calibration IP is enabled using the Quartus II software version 12.1, the calibration process is active during device power up. It is performed automatically for all transceivers channels that are connected to the transceiver reconfiguration controller.

Enable the DCD calibration IP if your transceiver applications are operating at 4.9 Gbps (Gbps) or higher, otherwise, you do not have to enable DCD calibration. If you perform transmitter PLL switching, turn on the DCD calibration for better transmitter jitter performance. DCD is not required if the transceiver application is operating below 5 Gbps.

When DCD calibration and offset cancellation are enabled, the `reconfig_busy` status signal from the reconfiguration controller is deasserted to indicate the completion of both processes. If DCD calibration is not enabled, the deassertion of `reconfig_busy` signal indicates only the offset cancellation process.

The embedded reset controller automatically performs a reset sequence on the transceiver's channels after the DCD calibration and offset cancellation process are complete. After the reset sequence is completed, the transceiver reconfiguration controller is ready for user-controlled operations.

PMA Analog Controls Reconfiguration

You can dynamically reconfigure the analog controls setting after offset cancellation is complete and the automatic embedded reset controller reset sequence is performed. You can continue with the subsequent reconfigurations of the analog controls when the `reconfig_busy` status signal is low. A high on the `reconfig_busy` signal indicates that the reconfiguration operation is in progress.

You can reconfigure the following transceiver analog controls:

- Transmitter pre-emphasis
- Differential output voltage (V_{OD})
- Receiver equalizer control
- Direct-current (DC) gain settings

To reconfigure the analog control settings, perform read and write operations to the PMA analog settings reconfiguration control IP within the reconfiguration controller.

Related Links

To reconfigure the analog control settings, perform read and write operations to the PMA analog settings reconfiguration control IP within the reconfiguration controller. For more information about the read and write operations, refer to the [Altera Transceiver PHY IP Core User Guide](#).

Dynamic Reconfiguration of Loopback Modes

You can enable the pre- and post-CDR reverse serial loopback modes by writing the appropriate bits of the Transceiver Reconfiguration Controller

The following loopback paths are available:

- **Post-CDR reverse serial loopback path**— The RX captures the input data and feeds it into the CDR. The recovered data from the CDR output feeds into the TX driver and sends to the TX pins through the TX driver. For this path, the RX and CDR can be tested. For this path, the TX driver can be programmed to use either the main tap only or the main tap and the pre-emphasis first post-tap. Enabling or disabling the post-CDR reverse serial loopback modes is done through the PMA Analog Reconfiguration IP in the Transceiver Reconfiguration PHY IP.
- **Pre-CDR reverse serial loopback path**— The RX captures the input data and feeds it back to the TX driver through a buffer. With this path, you can perform a quick check for the quality of the RX and TX buffers. Enabling or disabling the pre-CDR reverse serial loopback mode

Note: Serial loopback can be implemented with the transceiver PHY IP directly using the Avalon interface or a control port.

Related Links

[Transceiver Reconfiguration Controller chapter of the Altera Transceiver PHY IP Core User Guide](#)

Transceiver PLL Reconfiguration

You can use the PLL reconfiguration registers to switch the reference clock input to the TX PLL or the clock data recovery (CDR) circuitry.

For example, you can switch the reference clock from 100 MHz to 125 MHz. You can also change the data rate from 2.5 Gbps to 5 Gbps by reconfiguring the transmitter PLL connected to the transceiver channel.

Note: Reference clock switching is only supported on the dedicated REFCLK pin.

The Transceiver Reconfiguration PHY IP provides an Avalon[®]-MM user interface to perform PLL reconfiguration.

Related Links

[For more information about performing PLL reconfiguration, refer to the "PLL Reconfiguration" section in the Transceiver Reconfiguration Controller chapter of the Altera Transceiver PHY IP Core User Guide.](#)

Transceiver Channel Reconfiguration

You can use channel reconfiguration to dynamically reconfigure the channel in a transceiver PHY IP core. Among the settings that you can change dynamically are the data rate and interface width.

You can reconfigure the channels in the following ways:

- Reconfigure the CDR of the receiver channel.
- Enable and disable all static PCS sub-blocks.
- Select an alternate PLL within the transceiver block to supply a different clock to the transceiver clock generation block.
- Reconfigure the TX local clock divider with a 1, 2, 4, or 8 division factor.

Every transmitter channel has a clock divider. When you reconfigure these clock dividers, ensure that the functional mode of the transceiver channel supports the reconfigured data rate. For example, you can change the data rate from 6.25 Gbps to 3.125 Gbps by reconfiguring the clock divider.

Transceiver Interface Reconfiguration

You can reconfigure the transceiver interfaces by reconfiguring the FPGA fabric transceiver channel data width that includes PCS-PLD and PMA-PCS interfaces.


For example, you can reconfigure the custom PHY IP to enable or disable the 8B/10B encoder/decoder. There is no limit to the number of functional modes you can reconfigure the transceiver channel to if the various clocks involved support the transition. When you switch the custom PHY IP from one function mode to a different function mode, you may need to reconfigure the FPGA fabric-transceiver channel data width, enable or disable PCS sub-blocks, or both, to comply with the protocol requirements.

Channel reconfiguration only affects the channel involved in the reconfiguration (the transceiver channel specified by the unique logical channel address), without affecting the remaining transceiver channels controlled by the same Transceiver Reconfiguration Controller. PLL reconfiguration affects all channels that are currently using that PLL for transmission.

Channel reconfiguration from either a transmitter-only configuration to a receiver-only configuration or vice versa is not allowed.

Figure 8-1: Transceiver Channel and PLL Reconfiguration in a Transceiver Block

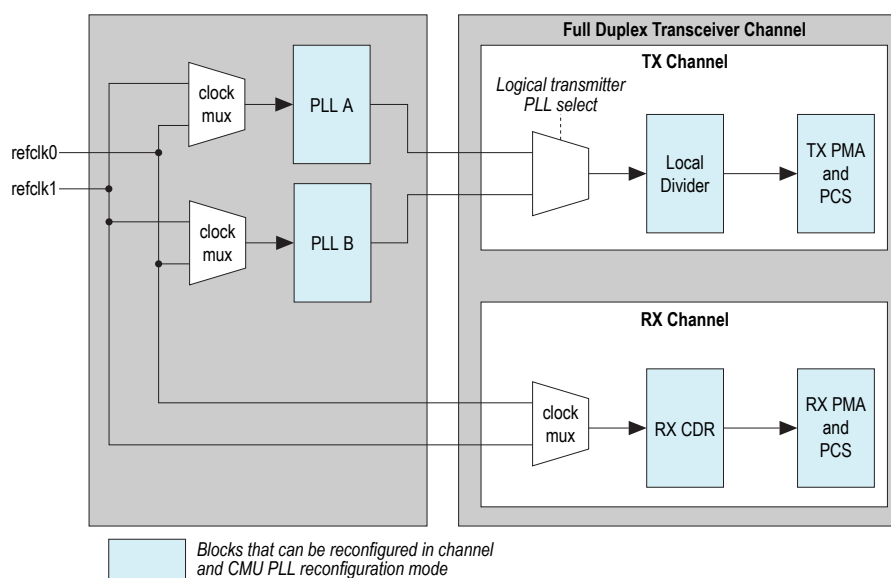The following figure shows the functional blocks you dynamically reconfigure using transceiver channel and PLL reconfiguration mode.



Related Links

For more information about the transceiver channel and PLL reconfiguration, refer to the “Channel and PLL Reconfiguration” section in the *Transceiver Reconfiguration Controller* chapter of the *Altera Transceiver PHY IP Core User Guide*.

Reduced .mif Reconfiguration

Reduce reconfiguration time by reconfiguring only the affected blocks in the transceiver channels.

Reconfiguration time reduction is achieved by using the reduced `.mif` reconfiguration mode in the reconfiguration controller. This reconfiguration mode affects only the modified settings of the channel to

reduce reconfiguration time significantly. For example, in SATA/SAS applications, auto-rate negotiation must be completed within a short period of time to meet the protocol specification. The reduced **.mif** method helps to reconfigure the channel to meet these specifications.

Related Links

For more information about how to reduce .mif reconfiguration, refer to the [Altera Transceiver PHY IP Core User Guide](#)

On-Chip Signal Quality Monitoring (EyeQ)

The bit error rate (BER) eye contour can be used to measure the quality of the received data. EyeQ is a debug and diagnostic tool that analyzes the received data recovery path, including the receiver's gain, noise level, and recovery clock jitter. EyeQ can also measure vertical eye height, effectively allowing a BER eye contour to be plotted.

EyeQ is supported by Arria V GZ devices and not Arria V GX and GT devices. .

EyeQ uses a phase interpolator (PI) and sampler (SMP) to estimate the horizontal eye opening. Controlled by a logic generator, the PI generates a sampling clock and the SMP samples the data from the receiver output. The SMP outputs parallel data that is monitored for CRC or BER errors. When the PI output clock phase is shifted by small increments, the data error rate goes from high to low to high if the receiver is good. The number of steps of valid data is defined as the width of the eye. If none of the steps yield valid data, the width of the eye is equal to 0, which means the eye is closed.

Adaptive Equalization

Adaptive equalization solves issues related to changing data rates and backplane losses.

High-speed interface systems require different equalization settings to compensate for changing data rates and backplane losses. Manual tuning of the receiver channel equalization stages involves finding the optimal settings through trial and error, and then locking in those values during compilation. This manual static method is cumbersome and inefficient when system characteristics vary. The adaptive equalization (AEQ) automatically tunes an active receiver channel equalization filter based on a frequency content comparison between the incoming signals and the internally generated reference signals.

Adaptive equalization is supported by Arria V GZ devices and not Arria V GX and GT devices.

The Transceiver Reconfiguration Controller provides an Avalon-MM user interface to enable the AEQ feature.

Related Links

Refer to the "AEQ" section in the [Transceiver Reconfiguration Controller chapter of the Altera Transceiver PHY IP Core User Guide](#) for more information about enabling different options and using them to control the AEQ hardware.

Decision Feedback Equalization

Decision feedback equalization (DFE) helps compensate for backplane attenuation because of insufficient bandwidth.

DFE works by estimating the intersymbol interference (ISI) that is imposed by the channel on an incoming bit and canceling out the ISI as that bit is sampled by the CDR circuitry. The advantage of DFE is that it

boosts the power of the highest frequency component of the received data without increasing its noise power. Use DFE in conjunction with the transmitter pre-emphasis and receiver linear equalization.

Decision feedback equalization is supported by Arria V GZ devices and not Arria V GX and GT devices.

Related Links

For more information about DFE, refer to the “DFE” section in the Transceiver Reconfiguration Controller chapter of the Altera Transceiver PHY IP Core User Guide.

Unsupported Reconfiguration Modes

The following reconfiguration modes are not supported:

- Switching between a receiver-only channel and a transmitter-only channel
- Switching between bonded to non-bonded mode or bonded mode with different xN lanes count (exam bonded x2 to bonded x4)
- Switching between one PHY IP to another PHY IP (exam Deterministic Latency PHY IP to Custom PHY IP)
- Switching between PMA Direct modes to non PMA Direct mode
- TX PLL reconfiguration is not supported if the TX PLL is connected to bonded channels

You can achieve PHY to PHY IP reconfiguration only if you use the Native PHY IP to configure your transceiver. For example, if you use the Native PHY IP to configure the SDI mode and a custom proprietary IP mode (also configured using Native PHY IP), you can reconfigure these two modes within the Native PHY IP. The switching refers to enabling and disabling the PCS sub-blocks for both SDI and the custom proprietary IP mode.

Document Revision History

The following table lists the revision history for the *Dynamic Reconfiguration in Arria V Devices* chapter.

Date	Version	Changes
November 2012	2012.11.19	• Rewritten and reorganized content, and updated template • Updated Transceiver Interface Reconfiguration • Added Reduced .mif Reconfiguration • Added On-Chip Signal Quality Monitoring (EyeQ) for Arria GZ devices • Adaptive Equalization for Arria GZ devices • Decision Feedback Equalization for Arria GZ devices • Listed unsupported features

Date	Version	Changes
June 2012	1.2	- Added “Transceiver PLL Reconfiguration” and “Transceiver Channel and Interface Reconfiguration” sections. - Updated the “Offset Cancellation and TX Duty Cycle Distortion Calibration” section - Updated Table 7–1
November 2011	1.1	- Added Table 7–1 - Deleted “Transceiver Reconfiguration Controller” and “Channel and PLL Reconfiguration” sections. - Updated “Offset Cancellation” and “PMA Analog Settings Reconfiguration” sections - Added “Enabling and Disabling Loopback Modes” section.
June 2012	1.0	Initial release.



Arria V Device Handbook

Volume 3: Hard Processor System Technical Reference Manual



101 Innovation Drive
San Jose, CA 95134
www.altera.com

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.



Portions © 2011 ARM Limited. Used with permission. All rights reserved. ARM, the ARM Powered logo, AMBA, Jazelle, StrongARM, Thumb, and TrustZone are registered trademarks of ARM Limited. The ARM logo, Angel, ARMulator, AHB, APB, ASB, ATB, AXI, CoreSight, Cortex, EmbeddedICE, ModelGen, MPCore, Multi-ICE, NEON, PrimeCell, ARM7TDMI, ARM7TDMI-S, ARM9TDMI, ARM9E-S, ARM966E-S, ETM7, ETM9, TDMI and STRONG are trademarks of ARM Limited. All other products or services mentioned herein may be trademarks of their respective owners. Neither the whole nor any part of the information contained in, or the product described in, this document may be adapted or reproduced in any material form except with the prior written permission of the copyright holder. The product described in this document is subject to continuous developments and improvements. All particulars of the product and its use contained in this document are given by ARM in good faith. However, all warranties implied or expressed, including but not limited to implied warranties of merchantability, or fitness for purpose, are excluded. This document is intended only to assist the reader in the use of the product. ARM Limited shall not be liable for any loss or damage arising from the use of any information in this document, or any error or omission in such information, or any incorrect use of the product. Where the term ARM is used it means "ARM or any of its subsidiaries as appropriate". This document is Non-Confidential. The right to use, copy and disclose this document may be subject to license restrictions in accordance with the terms of the agreement entered into by ARM and the party that ARM delivered this document to. The information in this document is final, that is for a developed product.

Portions © 2011 Synopsys, Inc. Used with permission. All rights reserved. Synopsys & DesignWare are registered trademarks of Synopsys, Inc. All documentation is provided "as is" and without any warranty. Synopsys expressly disclaims any and all warranties, express, implied, or otherwise, including the implied warranties of merchantability, fitness for a particular purpose, and non-infringement, and any warranties arising out of a course of dealing or usage of trade.

Portions © 2011 Cadence Design Systems, Inc. Used with permission. All rights reserved worldwide. Cadence and the Cadence logo are registered trademarks of Cadence Design Systems, Inc. All others are the property of their respective holders.

Portions © 2011 Robert Bosch GmbH. Used with permission. All rights reserved.

Chapter Revision Dates	xxiii

Section I. Overview

Chapter 1. Introduction to the Hard Processor System

Features of the HPS	1-2
HPS Block Diagram and System Integration	1-4
MPU Subsystem	1-5
Interconnect	1-5
Memory Controllers	1-6
SDRAM Controller Subsystem	1-6
NAND Flash Controller	1-7
Quad SPI Flash Controller	1-7
SD/MMC Controller	1-8
Support Peripherals	1-8
Clock Manager	1-8
Reset Manager	1-8
System Manager	1-8
Scan Manager	1-9
Timers	1-9
Watchdog Timers	1-9
DMA Controller	1-9
FPGA Manager	1-10
Interface Peripherals	1-10
EMACs	1-10
USB Controllers	1-10
I ² C Controllers	1-11
UARTs	1-11
SPI Master Controllers	1-11
SPI Slave Controllers	1-12
GPIO Interfaces	1-12
On-Chip Memory	1-12
On-Chip RAM	1-12
Boot ROM	1-12
Endian Support	1-13
HPS-FPGA Interfaces	1-13
Address Map	1-14
Address Spaces	1-14
SDRAM Address Space	1-15
MPU Address Space	1-16
L3 Address Space	1-17
Peripheral Region Address Map	1-18
Document Revision History	1-19

Chapter 2. Clock Manager

Features of the Clock Manager	2-1
Clock Manager Block Diagram and System Integration	2-3
Functional Description of the Clock Manager	2-3

Clock Manager Building Blocks	2-3
PLLs	2-3
Dividers	2-5
Clock Gating	2-5
Control and Status Registers	2-5
Hardware-Managed and Software-Managed Clocks	2-5
Clock Groups	2-6
OSC1 Clock Group	2-6
Main Clock Group	2-6
Peripheral Clock Group	2-9
SDRAM Clock Group	2-11
Flash Controller Clocks	2-12
Resets	2-13
Cold Reset	2-13
Warm Reset	2-13
Safe Mode	2-13
Interrupts	2-14
Clock Usage By Module	2-14
Clock Manager Address Map and Register Definitions	2-16
Document Revision History	2-17

Chapter 3. Reset Manager

Reset Manager Block Diagram and System Integration	3-2
HPS External Reset Sources	3-3
Reset Controller	3-3
Module Reset Signals	3-5
Slave Interface and Status Register	3-7
Functional Description of the Reset Manager	3-8
Reset Sequencing	3-8
Cold Reset Assertion Sequence	3-10
Warm Reset Assertion Sequence	3-10
Cold and Warm Reset Deassertion Sequence	3-11
Reset Pins	3-11
Reset Effects	3-12
Altering Warm Reset System Response	3-12
Reset Handshaking	3-13
Reset Manager Address Map and Register Definitions	3-13
Document Revision History	3-14

Section II. System Interconnect

Chapter 4. Interconnect

Features of the Interconnect	4-1
Interconnect Block Diagram and System Integration	4-2
L3 Masters	4-3
L3 Slaves	4-4
L4 Slaves	4-4
Functional Description of the Interconnect	4-5
Master-to-Slave Connectivity Matrix	4-6
Address Remapping	4-6
Master Caching and Buffering Overrides	4-8
Security	4-9
Slave Security	4-9

Master Security	4-9
Arbitration	4-9
Cyclic Dependency Avoidance Schemes	4-9
Single Slave	4-10
Single Slave Per ID	4-10
Single Active Slave	4-10
Interconnect Master Properties	4-10
Interconnect Slave Properties	4-11
Upsizing Data Width Function	4-13
Incrementing Bursts	4-13
Wrapping Bursts	4-13
Fixed Bursts	4-13
Bypass Merge	4-14
Downsizing Data Width Function	4-14
Incrementing Bursts	4-14
Wrapping Bursts	4-14
Fixed Bursts	4-14
Bypass Merge	4-14
Lock Support	4-14
FIFO Buffers and Clocks	4-15
Data Release Mechanism	4-15
Resets	4-15
Interconnect Address Map and Register Definitions	4-15
Document Revision History	4-16

Chapter 5. HPS-FPGA AXI Bridges

Features of the AXI Bridges	5-1
AXI Bridges Block Diagram and System Integration	5-2
Functional Description of the AXI Bridges	5-3
The Global Programmers View	5-3
FPGA-to-HPS Bridge	5-3
FPGA-to-HPS Access to ACP	5-4
FPGA-to-HPS Bridge Slave Signals	5-4
HPS-to-FPGA Bridge	5-6
HPS-to-FPGA Bridge Master Signals	5-7
Lightweight HPS-to-FPGA Bridge	5-9
Lightweight HPS-to-FPGA Bridge Master Signals	5-10
Clocks and Resets	5-12
FPGA-to-HPS Bridge	5-12
HPS-to-FPGA Bridge	5-13
Lightweight HPS-to-FPGA Bridge	5-13
GPV Clocks	5-13
Data Width Sizing	5-14
HPS-FPGA AXI Bridges Address Map and Register Definitions	5-14
Document Revision History	5-15

Section III. Cortex-A9 Microprocessor

Chapter 6. Cortex-A9 Microprocessor Unit Subsystem

Features of the Cortex-A9 MPU Subsystem	6-1
Cortex-A9 MPU Subsystem Block Diagram and System Integration	6-2
Cortex-A9 MPU Subsystem Components	6-3
Cortex-A9 MPCore	6-4

Functional Description	6-4
Implementation Details	6-5
Cortex-A9 Processor	6-5
Interactive Debugging Features	6-6
L1 Caches	6-6
Preload Engine	6-7
Floating Point Unit	6-7
NEON Multimedia Processing Engine	6-8
Memory Management Unit	6-9
Performance Monitoring Unit	6-11
MPCore Timers	6-11
Generic Interrupt Controller	6-12
Global Timer	6-17
Snoop Control Unit	6-18
Accelerator Coherency Port	6-19
ACP ID Mapper	6-20
Functional Description	6-20
Implementation Details	6-21
L2 Cache	6-24
Functional Description	6-24
ECC Support	6-25
Implementation Details	6-26
Debugging Modules	6-28
Program Trace	6-28
Event Trace	6-29
Cross-Triggering	6-29
Cortex-A9 MPU Subsystem Register Implementation	6-29
Document Revision History	6-30

Section IV. Debug and Trace

Chapter 7. CoreSight Debug and Trace

Features of CoreSight Debug and Trace	7-1
ARM CoreSight Documentation	7-2
CoreSight Debug and Trace Block Diagram and System Integration	7-3
Functional Description of CoreSight Debug and Trace	7-4
Debug Access Port (DAP)	7-4
System Trace Macrocell (STM)	7-4
Trace Funnel	7-5
Embedded Trace FIFO (ETF)	7-5
AMBA Trace Bus Replicator (Replicator)	7-5
Embedded Trace Router (ETR)	7-5
Trace Port Interface Unit (TPIU)	7-6
Embedded Cross Trigger (ECT) System	7-6
Cross Trigger Interface (CTI)	7-7
Cross Trigger Matrix (CTM)	7-8
Program Trace Macrocell (PTM)	7-10
HPS Debug APB Interface	7-11
CoreSight Debug and Trace Programming Model	7-11
ROM Table	7-11
STM Channels	7-12
CTI Trigger Connections to Outside the Debug System	7-13
csCTI	7-13

FPGA-CTI	7-14
Configuring Embedded Cross-Trigger Connections	7-14
Debug Clocks	7-15
Debug Resets	7-16
CoreSight Debug and Trace Address Map and Register Definitions	7-17
Document Revision History	7-17

Section V. Memory and Memory Controllers

Chapter 8. SDRAM Controller Subsystem

Features of the SDRAM Controller Subsystem	8-1
SDRAM Controller Subsystem Block Diagram and System Integration	8-2
SDRAM Controller	8-2
DDR PHY	8-2
SDRAM Controller Subsystem Interfaces	8-3
MPU Subsystem Interface	8-3
L3 Interconnect Interface	8-3
CSR Interface	8-3
FPGA-to-HPS SDRAM Interface	8-3
Memory Controller Architecture	8-4
MPFE	8-5
Command Block	8-5
Write Data Block	8-6
Read Data Block	8-6
Single-Port Controller	8-6
Command Generator	8-6
Timer Bank Pool	8-6
Arbiter	8-7
Rank Timer	8-7
Write Data Buffer	8-7
ECC Block	8-7
AFI Interface	8-7
CSR Interface	8-7
Functional Description of the SDRAM Controller Subsystem	8-7
MPFE Operational Behavior	8-7
Operation Ordering	8-7
Multiport Scheduling	8-8
SDRAM Burst Scheduling	8-9
Clocking	8-10
Single-Port Controller Operational Behavior	8-10
SDRAM Interface	8-10
ECC	8-11
Interleaving Options	8-12
AXI-Exclusive Support	8-14
Memory Protection	8-14
SDRAM Power Management	8-16
DDR PHY	8-17
Clocks	8-17
Resets	8-18
Initialization	8-18
Protocol Details	8-18
SDRAM Controller Subsystem Programming Model	8-21
Initialization	8-21

Timing Parameters	8–21
SDRAM Controller Address Map and Register Definitions	8–21
Document Revision History	8–22

Chapter 9. On-Chip Memory

On-Chip RAM	9–1
Features of the On-Chip RAM	9–1
On-Chip RAM Block Diagram and System Integration	9–2
Functional Description of the On-Chip RAM	9–2
Clocks	9–2
Resets	9–2
Boot ROM	9–3
Features of the Boot ROM	9–3
Boot ROM Block Diagram and System Integration	9–3
Functional Description of the Boot ROM	9–3
Clocks	9–4
Resets	9–4
On-Chip Memory Address Map and Register Definitions	9–4
Document Revision History	9–4

Chapter 10. NAND Flash Controller

NAND Flash Controller Features	10–1
NAND Flash Controller Block Diagram and System Integration	10–2
Functional Description of the NAND Flash Controller	10–2
Discovery and Initialization	10–2
Bootstrap Interface	10–3
Configuration by Host	10–4
Clocks	10–5
Resets	10–5
Indexed Addressing	10–6
Command Mapping	10–6
MAP00 Commands	10–7
MAP01 Commands	10–8
MAP10 Commands	10–9
MAP11 Commands	10–10
Data DMA	10–11
Multitransaction DMA Command	10–13
Burst DMA Command	10–15
ECC	10–15
Main Area Transfer Mode	10–16
Spare Area Transfer Mode	10–16
Main+Spare Area Transfer Mode	10–17
Preserving Bad Block Markers	10–17
Error Correction Status	10–18
Interface Signals	10–19
NAND Flash Controller Programming Model	10–19
Basic Flash Programming	10–19
NAND Flash Controller Optimization Sequence	10–19
Device Initialization Sequence	10–20
Device Operation Control	10–21
ECC Enabling	10–21
NAND Flash Controller Performance Registers	10–22
Interrupt and DMA Enabling	10–22

Timing Registers	10-23
Registers to Ignore	10-24
Flash-Related Special Function Operations	10-24
Erase Operations	10-24
Lock Operations	10-25
Transfer Mode Operations	10-25
Read-Modify-Write Operations	10-27
Copy-back Operations	10-28
Pipeline Read-Ahead and Write-Ahead Operations	10-29
NAND Flash Controller Address Map and Register Definitions	10-32
Document Revision History	10-32

Chapter 11. SD/MMC Controller

Features of the SD/MMC Controller	11-1
SD/MMC Controller Block Diagram and System Integration	11-3
Functional Description of the SD/MMC Controller	11-4
SD/MMC/CE-ATA Protocol	11-4
BIU	11-6
Slave Interface	11-6
Register Block	11-6
Interrupt Controller Unit	11-7
FIFO Buffer	11-8
Internal DMA Controller	11-8
Host Bus Burst Access	11-13
Host Data Buffer Alignment	11-13
Buffer Size Calculations	11-13
Internal DMA Controller Interrupts	11-13
Internal DMA Controller FSM	11-14
Abort During Internal DMA Transfer	11-15
FIFO Buffer Overflow and Underflow	11-15
Fatal Bus Error Scenarios	11-16
CIU	11-16
Command Path	11-17
Data Path	11-22
Clock Control Block	11-31
Error Detection	11-32
Clocks	11-33
Resets	11-34
Interface Signals	11-35
SD/MMC Controller Programming Model	11-35
Initialization	11-35
Enumerated Card Stack	11-37
Clock Setup	11-40
Controller/DMA/FIFO Buffer Reset Usage	11-41
Enabling FIFO Buffer ECC	11-42
Non-Data Transfer Commands	11-42
Data Transfer Commands	11-44
Single-Block or Multiple-Block Read	11-46
Single-Block or Multiple-Block Write	11-48
Stream Read and Write	11-50
Packed Commands	11-50
Transfer Stop and Abort Commands	11-51
STOP_TRANSMISSION (CMD12)	11-51
ABORT	11-51

Internal DMA Controller Operations	11–52
Internal DMA Controller Initialization	11–52
Internal DMA Controller Transmission Sequences	11–53
Internal DMA Controller Reception Sequences	11–54
Commands for SDIO Card Devices	11–54
Suspend and Resume Sequence	11–54
Read-Wait Sequence	11–57
CE-ATA Data Transfer Commands	11–57
Reset and Card Device Discovery Overview	11–57
ATA Task File Transfer Overview	11–57
ATA Task File Transfer Using the RW_MULTIPLE_REGISTER (RW_REG) Command	11–58
ATA Payload Transfer Using the RW_MULTIPLE_BLOCK (RW_BLK) Command	11–59
CE-ATA CCS	11–60
Reduced ATA Command Set	11–62
Card Read Threshold	11–64
Recommended Usage Guidelines for Card Read Threshold	11–64
Card Read Threshold Programming Sequence	11–64
Card Read Threshold Programming Examples	11–65
Interrupt and Error Handling	11–66
Booting Operation for eMMC and MMC	11–67
Boot Operation by Holding Down the CMD Line	11–67
Boot Operation for eMMC Card Device	11–68
Boot Operation for Removable MMC4.3, MMC4.4 and MMC4.41 Cards	11–72
Alternative Boot Operation	11–73
Alternative Boot Operation for eMMC Card Devices	11–74
Alternative Boot Operation for MMC4.3 Cards	11–78
SD/MMC Controller Address Map and Register Definitions	11–79
References	11–79
Document Revision History	11–80

Chapter 12. Quad SPI Flash Controller

Features of the Quad SPI Flash Controller	12–1
Quad SPI Flash Controller Block Diagram and System Integration	12–2
Functional Description of the Quad SPI Flash Controller	12–3
Overview	12–3
Data Slave Interface	12–3
Register Slave Interface	12–3
Direct Access Mode	12–4
Indirect Access Mode	12–4
Indirect Read Operation	12–5
Indirect Write Operation	12–6
Consecutive Reads and Writes	12–7
Local Memory Buffer	12–7
DMA Peripheral Request Controller	12–8
STIG Operation	12–9
SPI Legacy Mode	12–10
Configuring the Flash Device	12–10
XIP Mode	12–11
Write Protection	12–12
Data Slave Sequential Access Detection	12–12
Clocks	12–12
Resets	12–13
Interrupts	12–13
Interface Signals	12–14

Quad SPI Flash Controller Programming Model	12–14
Setting Up the Quad SPI Flash Controller	12–14
Indirect Read Operation	12–15
Indirect Write Operation	12–16
XIP Mode Operations	12–17
Entering XIP Mode	12–17
Exiting XIP Mode	12–18
XIP Mode at Power on Reset	12–19
Quad SPI Flash Controller Address Map and Register Definitions	12–19
Document Revision History	12–19

Section VI. Peripherals

Chapter 13. FPGA Manager

Features of the FPGA Manager	13–1
FPGA Manager Block Diagram and System Integration	13–2
Functional Description of the FPGA Manager	13–3
FPGA Manager Building Blocks	13–3
Fabric I/O	13–3
Monitor	13–3
FPGA Configuration	13–4
Power Up Phase	13–5
Reset Phase	13–5
Configuration Phase	13–6
Initialization Phase	13–6
User Mode	13–7
Clock	13–7
Reset	13–7
FPGA Manager Address Map and Register Definitions	13–7
Document Revision History	13–8

Chapter 14. System Manager

Features of the System Manager	14–1
System Manager Block Diagram and System Integration	14–2
Functional Description of the System Manager	14–3
Boot Configuration and System Information	14–3
Additional Module Control	14–4
Scan Manager	14–4
DMA Controller	14–4
NAND Flash Controller	14–5
EMAC	14–5
USB 2.0 OTG Controller	14–6
SD/MMC Controller	14–6
Watchdog Timer	14–7
Boot ROM Code	14–7
Freeze Controller	14–8
FPGA Interface Enables	14–10
ECC and Parity Control	14–10
Pin Multiplexing Control	14–11
Preloader Handoff Information	14–11
Clocks	14–11
Resets	14–11

System Manager Address Map and Register Definitions	14–12
Document Revision History	14–13

Chapter 15. Scan Manager

Features of the Scan Manager	15–1
Scan Manager Block Diagram and System Integration	15–2
Functional Description of the Scan Manager	15–4
Configuring HPS I/O Scan Chains	15–4
Communicating with the JTAG TAP Controller	15–5
JTAG-AP FIFO Buffer Access and Byte Command Protocol	15–5
Clocks	15–6
Resets	15–6
Scan Manager Address Map and Register Definitions	15–6
Document Revision History	15–7

Chapter 16. DMA Controller

Features of the DMA Controller	16–1
DMA Controller Block Diagram and System Integration	16–3
Functional Description of the DMA Controller	16–3
Overview	16–4
Operating States	16–4
Stopped	16–6
Executing	16–6
Cache Miss	16–7
Updating PC	16–7
Waiting For Event	16–7
At Barrier	16–7
Waiting For Peripheral	16–7
Faulting Completing	16–7
Faulting	16–7
Killing	16–7
Completing	16–7
Initializing the DMAC	16–8
How to Set the Security State of the DMA Manager	16–8
How to Set the Security State for the Interrupt Outputs	16–8
How to Set the Security State for a Peripheral Request Interface	16–8
Using the Slave Interfaces	16–9
Issuing Instructions to the DMAC using a Slave Interface	16–9
Peripheral Request Interface	16–10
Request Acceptance Capability	16–11
Peripheral Length Management	16–12
DMAC Length Management	16–13
Limitations	16–14
No Flush Support	16–14
No Acknowledge Type	16–14
Using Events and Interrupts	16–14
Using an Event to Restart DMA Channels	16–15
Interrupting the MPU Subsystem	16–15
Aborts	16–16
Abort Types	16–16
Abort Sources	16–16
Watchdog Abort	16–17
Abort Handling	16–18

Security Usage	16–19
DMA Manager Thread in Secure State	16–20
DMA Manager Thread in Non-Secure State	16–20
DMA Channel Thread in Secure State	16–21
DMA Channel Thread in Non-Secure State	16–21
Constraints and Limitations of Use	16–23
DMA Channel Arbitration	16–23
DMA Channel Prioritization	16–24
Instruction Cache Latency	16–24
AXI Data Transfer Size	16–24
AXI Bursts Crossing 4 KB Boundaries	16–24
AXI Burst Types	16–24
AXI Write Addresses	16–24
AXI Write Data Interleaving	16–24
Programming Restrictions	16–24
Fixed Unaligned Bursts	16–24
Endian Swap Size Restrictions	16–25
Updating DMA Channel Control Registers During a DMA Cycle	16–25
Resource Sharing Between DMA Channels	16–26
DMA Controller Programming Model	16–27
Instruction Syntax Conventions	16–27
Instruction Set Summary	16–28
Instructions	16–28
DMAADDH	16–28
DMAADNH	16–29
DMAEND	16–30
DMAFLUSHP	16–30
DMAGO	16–31
DMAKILL	16–32
DMALD[S B]	16–33
DMALDP<S B>	16–34
DMALP	16–35
DMALPEND[S B]	16–36
DMALPFE	16–38
DMAMOV	16–38
DMANOP	16–39
DMARMB	16–39
DMASEV	16–40
DMAST[S B]	16–40
DMASTP<S B>	16–41
DMASTZ	16–42
DMAWFE	16–43
DMAWFP	16–43
DMAWMB	16–44
Assembler Directives	16–45
DCD	16–45
DCB	16–45
DMALP	16–45
DMALPFE	16–46
DMAMOV CCR	16–46
MFIFO Buffer Usage Overview	16–47
About MFIFO Buffer Usage Overview	16–47
Aligned Transfers	16–48
Unaligned Transfers	16–50

Fixed Transfers	16–54
DMA Controller Registers	16–56
Address Map and Register Definitions	16–57
Document Revision History	16–57

Chapter 17. Ethernet Media Access Controller

Features of the Ethernet MAC	17–1
MAC	17–1
PHY Interface	17–2
DMA Interface	17–2
Management Interface	17–2
Acceleration	17–2
Other Features	17–2
EMAC Block Diagram and System Integration	17–3
EMAC to RGMII Interface	17–3
PHY Management Interface	17–4
MDIO Interface	17–4
I ² C External PHY Management Interface	17–5
IEEE 1588	17–5
Functional Description of the EMAC	17–6
Host Interfaces	17–7
Slave	17–7
Master	17–7
External PHY	17–8
Transmit and Receive Data FIFO Buffers	17–8
IEEE 1588-2002 Time Stamps	17–8
Reference Timing Source	17–10
System Time Register Module	17–10
Transmit Path Functions	17–13
Receive Path Functions	17–13
Timestamp Error Margin	17–13
Frequency Range of Reference Timing Clock	17–13
IEEE 1588-2008 Advanced Timestamps	17–14
Peer-to-Peer PTP Transparent Clock (P2P TC) Message Support	17–14
Clock Types	17–15
Reference Timing Source	17–15
Transmit Path Functions	17–15
Receive Path Functions	17–15
Auxiliary Snapshot	17–15
IEEE 802.3az Energy Efficient Ethernet	17–16
LPI Timers	17–16
Checksum Offload	17–17
Frame Filtering	17–17
Source Address or Destination Address Filtering	17–17
VLAN Filtering	17–18
Layer 3 and Layer 4 Filters	17–19
Clocks and Resets	17–20
Clock Gating for EEE	17–20
Resets	17–20
Interrupts	17–20
Ethernet MAC Programming Model	17–21
DMA Controller	17–21
Initialization	17–22
Transmission	17–25

Reception	17-31
Interrupts	17-34
Error Response to DMA	17-35
Descriptor Overview	17-35
Descriptor Endianness	17-36
Normal Descriptor	17-36
Transmit Descriptor	17-36
Receive Descriptor	17-40
Descriptor Format With IEEE 1588-2005 Timestamps Enabled	17-44
Alternate or Enhanced Descriptors	17-47
Transmit Descriptor	17-48
Receive Descriptor	17-54
Initializing DMA	17-60
Initializing MAC	17-61
Performing Normal Receive and Transmit Operation	17-62
Stopping and Starting Transmission	17-63
Programming Guidelines for Energy Efficient Ethernet	17-63
Entering and Exiting the TX LPI Mode	17-63
Gating Off the CSR Clock in the LPI Mode	17-64
Programming Guidelines for Flexible Pulse-Per-Second (PPS) Output	17-65
Generating Single Pulse on PPS	17-65
Generating a Pulse Train on PPS	17-65
Generating an Interrupt without Affecting the PPS	17-66
Ethernet MAC Address Map and Register Definitions	17-67
Document Revision History	17-67

Chapter 18. USB 2.0 OTG Controller

Features of the USB OTG Controller	18-2
Supported PHYs	18-3
USB OTG Controller Block Diagram and System Integration	18-4
Functional Description of the USB OTG Controller	18-5
USB OTG Controller Block Description	18-5
Master Interface	18-5
Slave Interface	18-6
Application Interface Unit	18-6
Packet FIFO Controller	18-6
SPRAM	18-6
MAC	18-7
Wakeup and Power Control	18-8
PHY Interface Unit	18-8
ULPI PHY Interface	18-9
Clocks	18-9
Resets	18-9
Reset Requirements	18-9
Hardware Reset	18-10
Software Reset	18-10
Interrupts	18-11
USB OTG Controller Programming Model	18-12
Enabling SPRAM ECCs	18-12
Host Operation	18-12
Host Initialization	18-12
Host Transaction	18-13
Device Operation	18-14
Device Initialization	18-14

Device Transaction	18–14
USB OTG Controller Address Map and Register Definitions	18–15
Document Revision History	18–16

Chapter 19. SPI Controller

Features of the SPI Controller	19–1
SPI Block Diagram and System Integration	19–1
SPI Block Diagram	19–2
Functional Description of the SPI Controller	19–3
Protocol Details and Standards Compliance	19–3
SPI Controller Overview	19–3
Serial Bit-Rate Clocks	19–4
Transmit and Receive FIFO Buffers	19–5
SPI Interrupts	19–6
Transfer Modes	19–7
Transmit and Receive	19–7
Transmit Only	19–7
Receive Only	19–7
EEPROM Read	19–7
SPI Master	19–8
RXD Sample Delay	19–8
Data Transfers	19–9
Master SPI and SSP Serial Transfers	19–9
Master Microwire Serial Transfers	19–10
SPI Slave	19–11
Slave SPI and SSP Serial Transfers †	19–12
Serial Transfers	19–13
Partner Connection Interfaces	19–13
Motorola SPI Protocol	19–13
Texas Instruments Synchronous Serial Protocol (SSP)	19–14
National Semiconductor Microwire Protocol	19–15
DMA Controller Interface	19–17
Slave Interface	19–18
Control and Status Register Access	19–18
Data Register Access	19–18
Clocks and Resets	19–18
SPI Programming Model	19–18
Master SPI and SSP Serial Transfers	19–19
Master Microwire Serial Transfers	19–21
Slave SPI and SSP Serial Transfers	19–23
Slave Microwire Serial Transfers	19–24
Software Control for Slave Selection	19–24
DMA Controller Operation	19–25
DMA Operation	19–25
Transmit FIFO Buffer Underflow	19–25
Transmit Watermark Level	19–25
Transmit FIFO Buffer Overflow	19–27
Receive FIFO Buffer Overflow	19–28
Choosing Receive Watermark Level	19–28
Receive FIFO Buffer Underflow	19–28
SPI Controller Address Map and Register Definitions	19–29
Document Revision History	19–29

Chapter 20. I²C Controller

Features of the I ² C Controller	20-1
I ² C Controller Block Diagram and System Integration	20-2
Functional Description of the I ² C Controller	20-3
Feature Usage	20-3
Behavior	20-4
START and STOP Generation	20-5
Combined Formats	20-5
Protocol Details	20-5
START and STOP Conditions	20-5
Addressing Slave Protocol	20-6
Transmitting and Receiving Protocol	20-7
START BYTE Transfer Protocol	20-9
Multiple Master Arbitration	20-10
Clock Synchronization	20-11
Clock Frequency Configuration	20-12
Minimum High and Low Counts	20-12
SDA Hold Time	20-13
DMA Controller Interface	20-14
Clocks	20-14
Resets	20-14
Interface Pins	20-14
I ² C Controller Programming Model	20-15
Slave Mode Operation	20-15
Initial Configuration	20-15
Slave-Transmitter Operation for a Single Byte	20-15
Slave-Receiver Operation for a Single Byte	20-17
Slave-Transfer Operation for Bulk Transfers	20-17
Master Mode Operation	20-18
Initial Configuration	20-18
Dynamic IC_TAR or IC_10BITADDR_MASTER Update	20-19
Master Transmit and Master Receive	20-19
Disabling the I ² C Controller	20-19
DMA Controller Operation	20-20
Transmit FIFO Underflow	20-20
Transmit Watermark Level	20-20
Transmit FIFO Overflow	20-22
Receive FIFO Overflow	20-22
Receive Watermark Level	20-23
Receive FIFO Underflow	20-23
I ² C Controller Address Map and Register Definitions	20-23
Document Revision History	20-24

Chapter 21. UART Controller

UART Controller Features	21-1
UART Controller Block Diagram and System Integration	21-2
Functional Description of the UART Controller	21-3
FIFO Buffer Support	21-3
Automatic Flow Control	21-4
Automatic RTS mode	21-4
Automatic CTS mode	21-4
Clocks	21-5
Resets	21-5

Interrupts	21-5
Programmable THRE Interrupt	21-6
UART Controller Programming Model	21-8
DMA Controller Operation	21-8
Transmit FIFO Underflow	21-8
Transmit Watermark Level	21-8
Transmit FIFO Overflow	21-10
Receive FIFO Overflow	21-11
Receive Watermark Level	21-11
Receive FIFO Underflow	21-11
UART Controller Address Map and Register Definitions	21-12
Document Revision History	21-12

Chapter 22. General-Purpose I/O Interface

Features of the GPIO Interface	22-1
GPIO Interface Block Diagram and System Integration	22-1
Functional Description of the GPIO Interface	22-2
Debounce Operation	22-2
Pin Directions	22-2
GPIO Interface Programming Model	22-2
GPIO Interface Address Map and Register Definitions	22-3
Document Revision History	22-3

Chapter 23. Timer

Features of the Timer	23-1
Timer Block Diagram and System Integration	23-2
Functional Description of the Timer	23-2
Clocks	23-3
Resets	23-3
Interrupts	23-3
Timer Programming Model	23-4
Initialization	23-4
Enabling or Disabling the Timer	23-4
Loading the Timer Countdown Value	23-4
Servicing Interrupts	23-5
Clearing Interrupt	23-5
Checking Interrupt Status	23-5
Masking Interrupt	23-5
Timer Address Map and Register Definitions	23-5
Document Revision History	23-6

Chapter 24. Watchdog Timer

Features of the Watchdog Timer	24-1
Watchdog Timer Block Diagram and System Integration	24-2
Functional Description of the Watchdog Timer	24-2
Counter	24-2
Pause Mode	24-3
Clocks	24-3
Resets	24-4
Watchdog Timer Programming Model	24-4
Setting the Timeout Period Values	24-4
Selecting the Output Response Mode	24-4
Enabling and Initially Starting a Watchdog Timer	24-4

Reloading a Watchdog Counter	24-4
Pausing a Watchdog Timer	24-5
Disabling and Stopping a Watchdog Timer	24-5
Watchdog Timer State Machine	24-5
Watchdog Timer Address Map and Register Definitions	24-6
Document Revision History	24-7

Section VII. Hard Processor System User Guide

Chapter 25. Introduction to the HPS Component

Document Revision History	25-3

Chapter 26. Instantiating the HPS Component

Configuring FPGA Interfaces	26-1
General Interfaces	26-2
Boot and Clock Selection Interfaces	26-3
AXI Bridges	26-3
FPGA-to-HPS SDRAM Interface	26-3
Reset Interfaces	26-5
DMA Peripheral Request	26-5
Configuring Peripheral Pin Multiplexing	26-5
Configuring Peripherals	26-5
Connecting Unassigned Pins to GPIO	26-6
Resolving Pin Multiplexing Conflicts	26-6
Configuring HPS Clocks	26-7
User Clocks	26-7
PLL Reference Clocks	26-7
Configuring the External Memory Interface	26-8
Selecting PLL Output Frequency and Phase	26-9
Using the Address Span Extender Component	26-9
Generating and Compiling the HPS Component	26-10
Document Revision History	26-11

Chapter 27. HPS Component Interfaces

Memory-Mapped Interfaces	27-1
FPGA-to-HPS Bridge	27-1
ACP Sideband Signals	27-2
HPS-to-FPGA and Lightweight HPS-to-FPGA Bridges	27-2
FPGA-to-HPS SDRAM Interface	27-3
Clocks	27-4
Alternative Clock Inputs to HPS PLLs	27-4
User Clocks	27-4
AXI Bridge FPGA Interface Clocks	27-4
SDRAM Clocks	27-4
Resets	27-5
HPS-to-FPGA Reset Interfaces	27-5
HPS External Reset Sources	27-5
Debug and Trace Interfaces	27-5
Trace Port Interface Unit	27-5
FPGA System Trace Macrocell Events Interface	27-6
FPGA Cross Trigger Interface	27-6
Debug APB Interface	27-6
Peripheral Signal Interfaces	27-6

DMA Controller Peripheral Request Interfaces	27-6
Other Interfaces	27-7
MPU Standby and Event Interfaces	27-7
FPGA-to-HPS Interrupts	27-7
General-Purpose Interfaces	27-8
Document Revision History	27-8

Chapter 28. Simulating the HPS Component

HPS Simulation Support	28-1
Clock and Reset Interfaces	28-2
Clock Interface	28-2
Reset Interface	28-3
FPGA-to-HPS AXI Slave Interface	28-4
HPS-to-FPGA AXI Master Interface	28-4
Lightweight HPS-to-FPGA AXI Master Interface	28-5
FPGA-to-HPS SDRAM Interface	28-5
HPS-to-FPGA MPU General-Purpose I/O Interface	28-6
HPS-to-FPGA MPU Event Interface	28-6
FPGA-to-HPS Interrupts Interface	28-6
HPS-to-FPGA Debug APB Interface	28-7
FPGA-to-HPS System Trace Macrocell (STM) Hardware Event Interface	28-7
HPS-to-FPGA Cross-Trigger Interface	28-8
HPS-to-FPGA Trace Port Interface	28-8
FPGA-to-HPS DMA Handshake Interface	28-9
Simulation Flows	28-10
Specifying HPS Simulation Model in Qsys	28-10
Generating HPS Simulation Model in Qsys	28-13
Running HPS RTL Simulation	28-13
Running HPS Post-Fit Simulation	28-14
Document Revision History	28-16

Section VIII. Appendices

Appendix A. Booting and Configuration

HPS Boot	A-3
Boot Process Overview	A-4
Reset	A-4
Boot ROM	A-4
Preloader	A-4
Boot Loader	A-5
Boot ROM	A-5
Boot ROM Flow	A-5
Loading the Preloader	A-7
Shared Memory	A-8
L4 Watchdog 0 Timer	A-10
HPS State on Entry to the Preloader	A-10
Preloader	A-11
Typical Preloader Boot Flow	A-11
Flash Memory Devices	A-14
NAND Flash Devices	A-14
SD/MMC Flash Devices	A-15
SPI and Quad SPI Flash Devices	A-17
FPGA Configuration	A-19

Full Configuration	A-20
Partial Reconfiguration	A-21
Document Revision History	A-22

Additional Information

How to Contact Altera	Info-1
Typographic Conventions	Info-1

The chapters in this document, Arria V Device Handbook, were revised on the following dates. Where chapters or groups of chapters are available separately, part numbers are listed.

Chapter 1. Introduction to the Hard Processor System
Revised: *November 2012*
Part Number: *av_54001-1.3*

Chapter 2. Clock Manager
Revised: *November 2012*
Part Number: *av_54002-1.2*

Chapter 3. Reset Manager
Revised: *November 2012*
Part Number: *av_54003-1.2*

Chapter 4. Interconnect
Revised: *November 2012*
Part Number: *av_54004-1.2*

Chapter 5. HPS-FPGA AXI Bridges
Revised: *November 2012*
Part Number: *av_54005-1.1*

Chapter 6. Cortex-A9 Microprocessor Unit Subsystem
Revised: *November 2012*
Part Number: *av_54006-1.2*

Chapter 7. CoreSight Debug and Trace
Revised: *November 2012*
Part Number: *av_54007-1.2*

Chapter 8. SDRAM Controller Subsystem
Revised: *November 2012*
Part Number: *av_54008-1.1*

Chapter 9. On-Chip Memory
Revised: *November 2012*
Part Number: *av_54009-1.1*

Chapter 10. NAND Flash Controller
Revised: *November 2012*
Part Number: *av_54010-1.2*

Chapter 11. SD/MMC Controller
Revised: *November 2012*
Part Number: *av_54011-1.1*

Chapter 12. Quad SPI Flash Controller

-
- Revised: *November 2012*
Part Number: *av_54012-1.2*
- Chapter 13. FPGA Manager
Revised: *November 2012*
Part Number: *av_54013-1.3*
- Chapter 14. System Manager
Revised: *November 2012*
Part Number: *av_54014-1.2*
- Chapter 15. Scan Manager
Revised: *November 2012*
Part Number: *av_54015-1.2*
- Chapter 16. DMA Controller
Revised: *November 2012*
Part Number: *av_54016-1.1*
- Chapter 17. Ethernet Media Access Controller
Revised: *November 2012*
Part Number: *av_54017-1.2*
- Chapter 18. USB 2.0 OTG Controller
Revised: *November 2012*
Part Number: *av_54018-1.2*
- Chapter 19. SPI Controller
Revised: *November 2012*
Part Number: *av_54019-1.2*
- Chapter 20. I²C Controller
Revised: *November 2012*
Part Number: *av_54020-1.2*
- Chapter 21. UART Controller
Revised: *November 2012*
Part Number: *av_54021-1.2*
- Chapter 22. General-Purpose I/O Interface
Revised: *November 2012*
Part Number: *av_54022-1.2*
- Chapter 23. Timer
Revised: *November 2012*
Part Number: *av_54023-1.2*
- Chapter 24. Watchdog Timer
Revised: *November 2012*
Part Number: *av_54024-1.2*
- Chapter 25. Introduction to the HPS Component
Revised: *June 2012*
Part Number: *av_54026-1.0*

Chapter 26. Instantiating the HPS Component

Revised: *November 2012*Part Number: *av_54027-1.1*

Chapter 27. HPS Component Interfaces

Revised: *November 2012*Part Number: *av_54028-1.1*

Chapter 28. Simulating the HPS Component

Revised: *November 2012*Part Number: *av_54030-1.1*

Appendix A. Booting and Configuration

Revised: *November 2012*Part Number: *av_5400A-1.3*

This section includes the following chapters:

- Chapter 1, Introduction to the Hard Processor System
- Chapter 2, Clock Manager
- Chapter 3, Reset Manager




For information about the revision history for chapters in this section, refer to “Document Revision History” in each individual chapter.

The Arria® V SoC FPGA device is a single-die system on a chip (SoC) that consists of two distinct parts—a hard processor system (HPS) portion and an FPGA portion.

Figure 1–1 shows a high-level block diagram of the Altera SoC FPGA device. Blocks connected to device pins have symbols (square with X) adjacent to them in the figure.

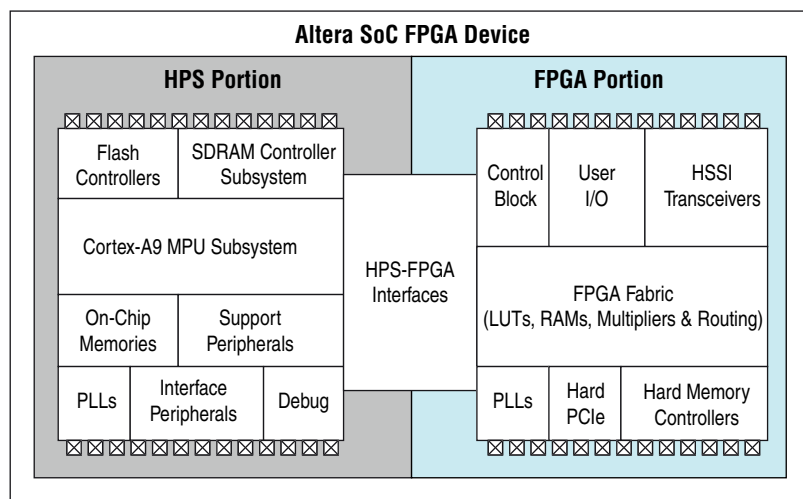Figure 1–1. Altera SoC FPGA Device Block Diagram



The HPS contains a microprocessor unit (MPU) subsystem with single or dual ARM® Cortex™-A9 MPCore processors, flash memory controllers, an SDRAM controller subsystem, on-chip memories, support peripherals, interface peripherals, debug capabilities, and PLLs. The dual-processor HPS supports symmetric (SMP) and asymmetric (AMP) multiprocessing.

The FPGA portion of the device contains the FPGA fabric, a control block (CB), phase-locked loops (PLLs), and depending on the device variant, high-speed serial interface (HSSI) transceivers, hard PCI Express® (PCIe®) controllers, and hard memory controllers.



For information about the FPGA portion of the device, refer to [Arria V Device Overview](#).

The HPS and FPGA portions of the device are distinctly different. The HPS boots (from any of multiple boot sources, including the FPGA fabric and external flash devices) and the FPGA gets configured (through the HPS or any external source supported by the device).



For more information, refer to the *Booting and Configuration* appendix in volume 3 of the *Arria V Device Handbook*.

The HPS and FPGA portions of the device each have their own pins. Pins are not freely shared between the HPS and the FPGA fabric. The HPS I/O pins are configured by software executing in the HPS. Software executing on the HPS accesses control registers in the system manager to assign HPS I/O pins to the available HPS modules. The FPGA I/O pins are configured by an FPGA configuration image through the HPS or any external source supported by the device.

The MPU subsystem can boot from flash devices connected to the HPS pins. Or, when the FPGA portion is configured by an external source, the MPU subsystem can boot from memory available to the FPGA portion of the device.

The HPS and FPGA portions of the device have separate external power supplies and independently power on. You can power on the HPS without powering on the FPGA portion of the device. But to power on the FPGA portion, the HPS must already be on or powered on at the same time as the FPGA portion. You can also turn off the FPGA portion of the device while leaving the HPS power on.

Features of the HPS

The following list contains the main modules of the HPS:


- An MPU subsystem featuring dual ARM Cortex-A9 MPCore processors
- An SDRAM controller subsystem
- One general-purpose direct memory access (DMA) controller
- Two Ethernet media access controllers (EMACs)
- Two USB 2.0 On-The-Go (OTG) controllers
- One NAND flash controller
- One quad SPI flash controller
- One Secure Digital (SD) / MultiMediaCard (MMC) controller
- Two serial peripheral interface (SPI) master controllers
- Two SPI slave controllers
- Four inter-integrated circuit (I²C) controllers
- 64 KB on-chip RAM
- 64 KB on-chip boot ROM
- Two UARTs
- Four timers
- Two watchdog timers

- Three general-purpose I/O (GPIO) interfaces
- ARM CoreSight™ debug components
 - Debug Access Port (DAP)
 - Trace Port Interface Unit (TPIU)
 - System Trace Macrocell (STM)
 - Program Trace Macrocell (PTM)
 - Embedded Trace Router (ETR)
 - Embedded Cross Trigger (ECT)
- A system manager
- A clock manager
- A reset manager
- A scan manager
- An FPGA manager
- One FPGA-to-HPS bridge
- Two HPS-to-FPGA bridges

HPS Block Diagram and System Integration

Figure 1-2 shows a block diagram of most modules in the HPS. Debug modules are not shown.

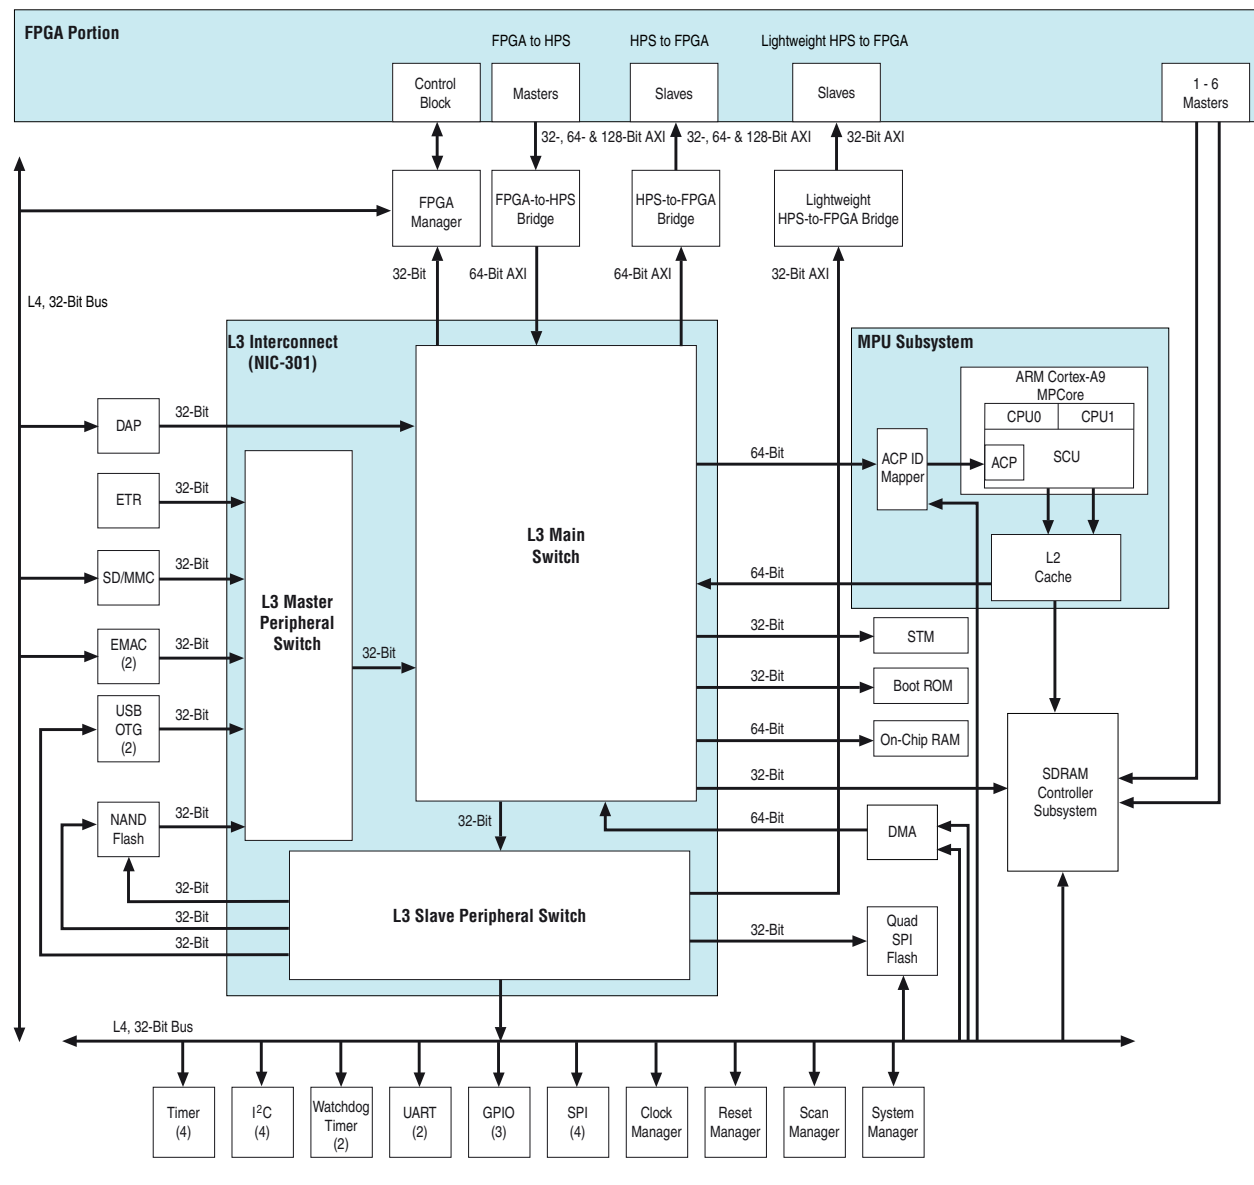Figure 1-2. HPS Block Diagram



The following sections list features of the HPS modules and reference related chapters that provide more detailed information. The HPS incorporates third-party intellectual property (IP) from several vendors. Each chapter in this handbook identifies additional third-party IP documentation, if available from the third-party vendors.



No clock information is listed in the following summary sections. For comprehensive clock information for all modules, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

MPU Subsystem

The MPU subsystem provides the following functionality:

- ARM Cortex-A9 MPCore
 - One or two ARM Cortex-A9 processors in a cluster
 - NEON™ SIMD coprocessor and VFPv3 per processor
 - Snoop Control Unit (SCU) to ensure coherency within the cluster
 - Accelerator coherency port (ACP) that accepts coherency memory access requests.
 - Interrupt controller
 - One general-purpose timer and one watchdog timer per processor
 - Debug and trace features
 - 32-KB instruction and 32-KB data level 1 (L1) caches per processor
 - Memory management unit (MMU) per processor
- ARM L2-310 level 2 (L2) cache
 - Shared 512-KB L2 cache
- ACP ID mapper
 - Maps the 12-bit ID from the level 3 (L3) interconnect to the 3-bit ID supported by the ACP

As shown in [Figure 1–2](#), the L2 cache has one 64-bit master port connected to the L3 interconnect and one 64-bit master port connected directly to the SDRAM controller subsystem. A programmable address filter in the L2 cache controls which portions of the 32-bit physical address space use which master.



For more information, refer to the [Cortex-A9 MPU Subsystem](#) chapter in volume 3 of the *Arria V Device Handbook*.

Interconnect

The interconnect consists of the L3 interconnect and level 4 (L4) buses. The L3 interconnect is one ARM NIC-301 module composed of the following switches:

- L3 main switch
 - Connects the master, slaves, and other subswitches
 - Provides 64-bit switching capabilities
- L3 master peripheral switch
 - Connects master ports of peripherals with integrated DMA controllers to the L3 main switch
- L3 slave peripheral switch
 - Connects slave ports of peripherals to the L3 main switch

The L4 buses are each connected to a master in the L3 slave peripheral switch. Each L4 bus is 32 bits wide and is connected to multiple slaves. Each L4 bus operates on a separate clock source.



For more information, refer to the *Interconnect* chapter in volume 3 of the *Arria V Device Handbook*.

Memory Controllers

The HPS provides the memory controllers described in this section.

SDRAM Controller Subsystem

The SDRAM controller subsystem is mastered by HPS masters and FPGA fabric masters. The FPGA-to-HPS SDRAM interface is compatible with the hard memory controllers in the FPGA portion of the device and with hard SDRAM controllers in non-HPS FPGA devices, such as Stratix IV FPGAs.

The SDRAM controller subsystem implements the following high-level features:

- Support for double data rate 2 (DDR2), DDR3, and low-power double data rate 2 (LPDDR2) devices
- Software-configurable priority scheduling on individual SDRAM bursts
- Error correction code (ECC) support, including calculation, single-bit error correction and write-back, and error counters
- Fully-programmable timing parameter support for all JEDEC-specified timing parameters
- All ports support memory protection and mutual accesses
- Support for ARM Advanced Microcontroller Bus Architecture (AMBA®) Advanced eXtensible Interface (AXI™) quality of service (QoS) for the fabric interfaces

The SDRAM controller subsystem is composed of the SDRAM controller and the DDR PHY.

SDRAM Controller

The SDRAM controller contains a multiport front end (MPFE) that accepts requests from HPS masters and from soft logic in the FPGA fabric via the FPGA-to-HPS SDRAM interface.

The SDRAM controller offers the following features:

- Up to 4 GB address range
- 8-, 16-, and 32-bit data widths
- Optional ECC support
- Low-voltage 1.35V DDR3L and 1.2V DDR3U support
- Full memory device power management support
- Two chip selects

The SDRAM controller provides the following features to maximize memory performance:

- Command reordering (look-ahead bank management)
- Data reordering (out of order transactions)
- Deficit round-robin arbitration with aging for bandwidth management
- High-priority bypass for latency sensitive traffic

DDR PHY

The DDR PHY interfaces the single-port memory controller to the HPS memory I/O.



For more information, refer to the *SDRAM Controller Subsystem* chapter in volume 3 of the *Arria V Device Handbook*.

NAND Flash Controller

The NAND flash controller is based on the Cadence® Design IP® NAND Flash Memory Controller and offers the following features:

- Supports single-level cell (SLC) and multilevel cell (MLC) NAND flash devices
- Integrated descriptor-based DMA controller
- 8-bit ONFI 1.0 NAND flash devices
- Programmable page sizes of 512 bytes, 2 KB, 4 KB, and 8 KB
- Supports 32, 64, 128, 256, 384, and 512 pages per block
- Programmable hardware ECC for SLC and MLC devices
 - 512 bytes ECC sector size with 4-, 8-, or 16-bit correction
 - 1 KB ECC sector size with 24-bit correction



For more information, refer to the *NAND Flash Controller* chapter in volume 3 of the *Arria V Device Handbook*.

Quad SPI Flash Controller

The quad SPI flash controller is based on Cadence Quad SPI Flash Controller (QSPI_FLASH_CTRL) and offers the following features:

- Supports SPIx1, SPIx2, or SPIx4 (quad SPI) serial NOR flash devices
- Supports direct access and indirect access modes.
- Supports single I/O, dual I/O, quad I/O instructions
- Programmable data frame size of 8, 16, or 32 bits
- Support up to four chip selects



For more information, refer to the *Quad SPI Controller* chapter in volume 3 of the *Arria V Device Handbook*.

SD/MMC Controller

The SD/MMC controller is based on Synopsys® DesignWare® Mobile Storage Host (DWC_mobile_storage) controller and offers the following features:

- Integrated descriptor-based DMA
- Supports CE-ATA digital protocol commands
- Supports single card
 - Single data rate (SDR) mode only
 - Programmable card width: x1, x4, or x8
 - Programmable card types: SD, SDIO, or MMC version 4.3 and 4.4 devices
- Up to 64 KB programmable block size



For more information, refer to the *SD/MMC Controller* chapter in volume 3 of the *Arria V Device Handbook*.

Support Peripherals

HPS provides the support peripherals described in this section.

Clock Manager

The clock manager offers the following features:

- Manages clocks for HPS
- Supports dynamic clock tuning



For more information, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Reset Manager

The reset manager offers the following features:

- Manages reset for HPS



For more information, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

System Manager

The system manager offers the following features:

- ECC monitoring and control
- Pin multiplexing
- Low-level control of peripheral features not accessible through the control and status registers (CSRs)
- Freeze controller that places I/O elements into a safe state for configuration



For more information, refer to the *System Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Scan Manager

The scan manager offers the following features:

- Drives serial scan-chains to FPGA JTAG and HPS I/O bank configuration

 For more information, refer to the *Scan Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Timers

The four timers are based on the Synopsys DesignWare APB Timers (DW_apb_timers) peripheral and offer the following features:

- 32-bit timer resolution
- Support free-running timer mode
- Programmable time-out period up to approximately 86 seconds (assuming a 50 MHz clock)
- Interrupt generation

 For more information, refer to the *Timer* chapter in volume 3 of the *Arria V Device Handbook*.

Watchdog Timers

The two watchdog timers are based on the Synopsys DesignWare APB Watchdog Timer (DW_apb_wdt) peripheral and offer the following features:

- 32-bit timer resolution
- Interrupt request
- Reset request
- Programmable time-out period up to approximately 86 seconds (assuming a 50 MHz clock)

 For more information, refer to the *Watchdog Timer* chapter in volume 3 of the *Arria V Device Handbook*.

DMA Controller

The DMA controller provides high-bandwidth data transfers for modules without integrated DMA controllers. The DMA controller is based on the ARM Corelink™ DMA Controller (DMA-330) and offers the following features:

- Microcoded to support flexible transfer types
- Supports up to 8 channels
- Supports flow control with 31 peripherals handshake interfaces

 For more information, refer to the *DMA Controller* chapter in volume 3 of the *Arria V Device Handbook*.

FPGA Manager

The FPGA manager offers the following features:

- Manages configuration of the FPGA portion of the device
- Mimics passive parallel 32-bit configuration
- Partial reconfiguration
- Compressed FPGA configuration images
- Advanced Encryption Standard (AES) encrypted FPGA configuration images
- Monitors configuration-related signals in FPGA
- Provides 32 general-purpose inputs and 32 general-purpose outputs to the FPGA fabric



For more information, refer to the *FPGA Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Interface Peripherals

HPS provides the interface peripherals described in this section.

EMACs

The two EMACs are based on the Synopsys DesignWare 3504-0 Universal 10/100/1000 Ethernet MAC (DWC_gmac) and offer the following features:

- Supports 10-, 100-, and 1000-Mbps standards
- Supports RGMII external PHY interface
- Integrated DMA controllers



For more information, refer to the *Ethernet Media Access Controller* chapter in volume 3 of the *Arria V Device Handbook*.

USB Controllers

The two USB 2.0 On-The-Go (OTG) controllers are based on the Synopsys DesignWare Cores USB 2.0 Hi-Speed On-The-Go (DWC_otg) controller and offer the following features:

- Supports USB 2.0 host and device operation
- Dual-role device (device and host functions)
 - High-speed (480 Mbps)
 - Full-speed (12 Mbps)
 - Low-speed (1.5 Mbps)
 - Supports USB 1.1 (full-speed & low-speed)
- Integrated descriptor-based scatter-gather DMA (SGDMA)
- Support for external ULPI PHY
- Up to 16 bidirectional endpoints, including control endpoint

- Up to 16 host channels
- Supports generic root hub
- Automatic ping capability
- Configurable to OTG 1.3 and OTG 2.0 modes

 For more information, refer to the *USB 2.0 OTG Controller* chapter in volume 3 of the *Arria V Device Handbook*.

I²C Controllers

The four I²C controllers are based on Synopsys DesignWare APB I²C (DW_apb_i2c) controller and offer the following features:

- Two controllers support I²C management interfaces
- Support both 100 Kbps and 400 Kbps modes
- Support both 7-bit and 10-bit addressing modes
 - No support for mixed-address mode
- Support master and slave operating mode
- Direct access for host processor
 - DMA controller may be used for large transfers

 For more information, refer to the *I²C Controller* chapter in volume 3 of the *Arria V Device Handbook*.

UARTs

The two UART modules are based on Synopsys DesignWare APB Universal Asynchronous Receiver/Transmitter (DW_apb_uart) peripheral and offer the following features:

- 16550 compatible UART
 - Supports the auto flow control as specified in 16750 specification
- Supports IrDA 1.0 SIR mode
- Programmable baud rate up to 115.2 Kbps
- Direct access for host processor
 - DMA controller may be used for large transfers

 For more information, refer to the *UART Controller* chapter in volume 3 of the *Arria V Device Handbook*.

SPI Master Controllers

The two SPI master controllers are based on Synopsys DesignWare Synchronous Serial Interface (SSI) controller (DW_apb_ssi) and offer the following features:

- Programmable data frame size from 4 to 16 bits
- Supports full and half duplex

- Support up to two chip selects
- Direct access for host processor
 - DMA controller may be used for large transfers

 For more information, refer to the *SPI Controller* chapter in volume 3 of the *Arria V Device Handbook*.

SPI Slave Controllers

The two SPI slave controllers are based on Synopsys DesignWare Synchronous Serial Interface (SSI) controller (DW_apb_ssi) and offer the following features:

- Programmable data frame size from 4 to 16 bits
- Supports full and half duplex
- Direct access for host processor
 - DMA controller may be used for large transfers

 For more information, refer to the *SPI Controller* chapter in volume 3 of the *Arria V Device Handbook*.

GPIO Interfaces

The three GPIO interfaces are based on Synopsys DesignWare APB General Purpose Programming I/O (DW_apb_gpio) peripheral and offer the following features:

- Supports digital de-bounce
- Configurable interrupt mode
- Supports up to 71 I/O pins and 14 input-only pins, based on device variant

 For more information, refer to the *General-Purpose I/O Interface* chapter in volume 3 of the *Arria V Device Handbook*.

On-Chip Memory

On-chip memory consists of the two modules described in this section.

On-Chip RAM

The on-chip RAM offers the following features:

- 64 KB size
- 64-bit slave interface
- High performance for all burst lengths

 For more information, refer to the *On-Chip Memory* chapter in volume 3 of the *Arria V Device Handbook*.

Boot ROM

The boot ROM offers the following features:

- 64 KB size
- Contains the code required to support HPS boot from cold or warm reset
- Used exclusively for booting the HPS

 For more information, refer to the *On-Chip Memory* chapter in volume 3 of the *Arria V Device Handbook*.

Endian Support

The HPS is natively a little-endian system. All HPS slaves are little-endian.

The processors masters are software configurable to interpret data as little-endian or big-endian, byte-invariant (BE8). All other masters, including the USB interface, are little-endian.

The FPGA-to-HPS, HPS-to-FPGA, and lightweight HPS-to-FPGA interfaces are little-endian.

If a processor is set to BE8 mode, software must convert endianness for accesses to peripherals and DMA linked lists in memory.

The ARM Cortex-A9 MPU supports a single instruction to change the endianness of the processor and provides the REV and REV16 instructions to swap the endianness of bytes or half-words respectively. The MMU page tables are software configurable to be organized as little-endian or BE8.

The ARM DMA controller is software configurable to perform byte lane swapping during a transfer.

HPS-FPGA Interfaces

The HPS-FPGA interfaces provide a variety of communication channels between the HPS and the FPGA fabric. The HPS is highly integrated with the FPGA fabric, resulting in thousands of connecting signals. The HPS-FPGA interfaces include:

- FPGA-to-HPS bridge—a high-performance AXI bus with a configurable data width of 32-, 64-, and 128-bits, allowing the FPGA fabric to master transactions to the slaves in the HPS. This interface allows the FPGA fabric to have full visibility into the HPS address space. This interface also provides access to the coherent memory interface.

 For information about the coherent memory interface, refer to the *Cortex-A9 MPU Subsystem* chapter in volume 3 of the *Arria V Device Handbook*.

- HPS-to-FPGA bridge—a high-performance AXI bus with a configurable data width of 32-, 64-, and 128-bits, allowing the HPS to master transactions to slaves in the FPGA fabric.
- Lightweight HPS-to-FPGA bridge—an AXI bus with a 32-bit fixed data width, allowing the HPS to master transactions to slaves in the FPGA fabric.

- FPGA-to-HPS SDRAM interface—a configurable interface to the MPFE of the SDRAM controller. You can configure the following parameters:
 - AXI-3 or Avalon® Memory-Mapped (Avalon-MM) protocol
 - Up to six ports
 - 32-, 64-, 128-, or 256-bit data width of each port
- FPGA clocks and resets—provide flexible clocks to and from the HPS.
- HPS-to-FPGA JTAG—allows the HPS to master the FPGA JTAG chain.
- TPIU trace—sends trace data created in the HPS to the FPGA fabric.
- FPGA System Trace Macrocell (STM) events—an interface that allows the FPGA fabric to send hardware events stored in the HPS trace using STM.
- FPGA cross-trigger—an interface that allows triggers to and from the CoreSight trigger system.
- DMA peripheral interface—multiple peripheral-request channels.
- FPGA manager interface—signals that communicate with FPGA fabric for boot and configuration.
- Interrupts—allow soft IP to supply interrupts directly to the MPU interrupt controller.
- MPU standby and events—signals that notify the FPGA fabric that the MPU is in standby mode and signals that wake up Cortex-A9 processors from a wait for event (WFE) state.

Address Map

The address map specifies the addresses of slaves, such as memory and peripherals, as viewed by the MPU and other masters. The HPS has multiple address spaces, defined in the following section.

Address Spaces

Table 1–1 shows the HPS address spaces and their sizes.


Table 1–1. HPS Address Spaces

Name	Description	Size
MPU	MPU subsystem	4 GB
L3	L3 interconnect	4 GB
SDRAM	SDRAM controller subsystem	4 GB

Address spaces are divided into one or more nonoverlapping contiguous regions. For example, the MPU address space has the peripheral, FPGA slaves, SDRAM window, and boot regions.

Figure 1-3 shows the relationships between the HPS address spaces. The figure is not to scale.

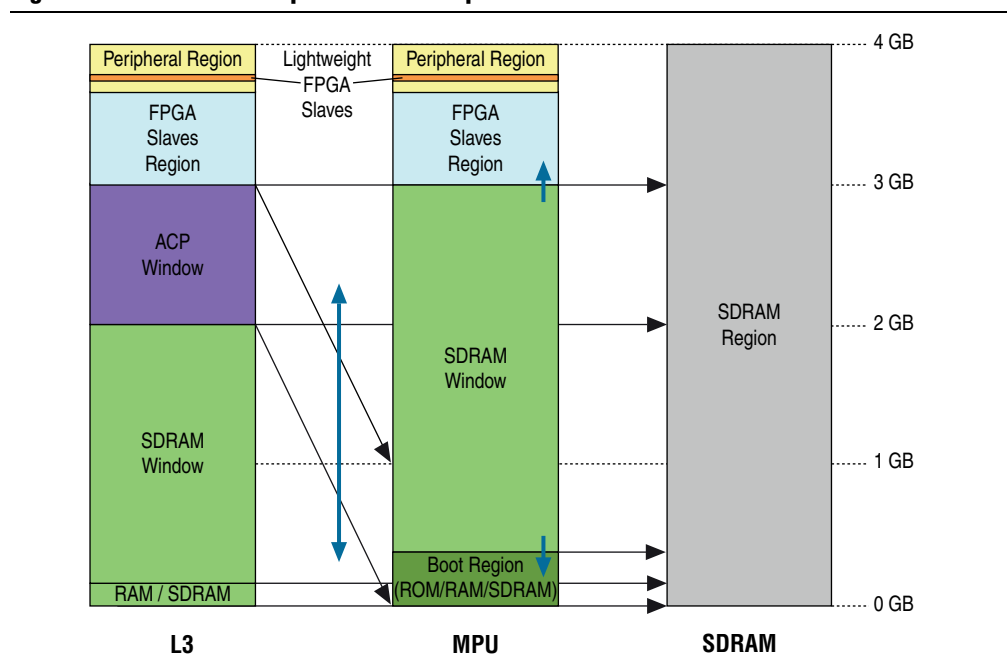Figure 1-3. HPS Address Space Relationships



The window regions provide access to other address spaces. The thin black arrows indicate which address space is accessed by a window region (arrows point to accessed address space). For example, accesses to the ACP window in the L3 address space map to a 1 GB region of the MPU address space.

The SDRAM window in the MPU address space can grow and shrink at the top and bottom (short, blue vertical arrows) at the expense of the FPGA slaves and boot regions. For specific details, refer to “MPU Address Space”.

The ACP window can be mapped to any 1 GB region in the MPU address space (blue vertical bidirectional arrow), on gigabyte-aligned boundaries.

Table 1-2 shows the base address and size of each region that is common to the L3 and MPU address spaces.

Table 1-2. Common Address Space Regions

Identifier	Region Name	Base Address	Size
FPGASLAVES	FPGA slaves	0xC0000000	960 MB
LWFPGASLAVES	Lightweight FPGA slaves	0xFF200000	2 MB
PERIPH	Peripheral	0xFC000000	64 MB

SDRAM Address Space

The SDRAM address space is up to 4 GB. The entire address space can be accessed through the FPGA-to-HPS SDRAM interface from the FPGA fabric. The total amount of SDRAM addressable from the other address spaces varies. For specific details, refer to “MPU Address Space” and “L3 Address Space”.

MPU Address Space

The MPU address space is 4 GB and applies to addresses generated inside the MPU.

The MPU address space contains the following regions:

- The SDRAM window region provides access to a large, configurable portion of the 4 GB SDRAM address space. The MPU L2 cache controller contains a master connected to the L3 interconnect and a master connected to the SDRAM. The address filtering start and end registers in the L2 cache controller define the SDRAM window boundaries. The boundaries are megabyte-aligned. Addresses within the boundaries route to the SDRAM master. Addresses outside the boundaries route to the L3 interconnect master.

Figure 1-3 shows the reset values of the SDRAM window boundaries. By default, processor accesses to locations between 0x100000 (1 MB) to 0xC0000000 (3 GB) are made to the SDRAM controller, accesses to all other locations are made to the L3 interconnect. Addresses in the SDRAM window match addresses in the SDRAM address space. Thus, the lowest 1 MB of the SDRAM is not visible to the MPU unless the L2 address filter start register is set to 0.

 For more information about L2 address filtering, refer to the *Cortex-A9 MPU Subsystem* chapter in volume 3 of the *Arria V Device Handbook*.

- The boot region is 1 MB starting at address 0x0 and is visible to the MPU only when the L2 address filter start register is set to 0x100000. The L3 interconnect Global Programmers View (GPV) remap control register determines if the boot region is mapped to the on-chip RAM or the boot ROM.

 For information about the L3 GPV remap control register bits, refer to the *Interconnect* chapter in volume 3 of the *Arria V Device Handbook*.

The boot region is mapped to the boot ROM on reset. Only the lowest 64 KB of the boot region are legal addresses because the on-chip RAM and boot ROM are only 64 KB.

 When the L2 address filter start register is set to 0, SDRAM obscures access to the boot region. This technique can be used to gain access to the lowest SDRAM addresses after booting completes.

- The FPGA slaves region provides access to 960 MB of slaves in the FPGA fabric through the HPS-to-FPGA bridge. If the top of the SDRAM window increases in the MPU address space (by writing to the L2 address filter end register), the lower portion of the FPGA slaves region is obscured from the MPU subsystem.
- The peripheral region contains 64 MB at the top of the address space. The peripheral region includes all slaves connected to the L3 interconnect, L4 buses, and internally-decoded MPU registers (SCU and L2). The boot ROM and on-chip RAM are always mapped into the peripheral region (independent of the boot region contents). The lightweight FPGA slaves are also mapped in the peripheral region and provide access to 2 MB of slaves in the FPGA fabric through the lightweight HPS-to-FPGA bridge.

Table 1-3 shows the base address and size of each MPU address space region that is not included in Table 1-2.

Table 1-3. MPU Default Address Space Regions

Identifier	Region Name	Base Address	Size
MPUBOOT	Boot region	0x00000000	1 MB
MPUSDRAM	SDRAM window	0x00100000	3071 MB

L3 Address Space

The L3 address space is 4 GB and applies to all L3 masters except the MPU subsystem.

The L3 address space configurations contain the following regions:

- The peripheral region is the same as the peripheral region in the MPU address space except that the boot ROM and internal MPU registers (SCU and L2) are not accessible.
- The FPGA slaves region provides access to 960 MB of slaves in the FPGA fabric through the HPS-to-FPGA bridge.
- The SDRAM window region is 2 GB and provides access to the bottom 2 GB of the SDRAM address space. The L3 interconnect GPV remap register determines if the 64 KB starting at address 0x0 is mapped to the on-chip RAM or the SDRAM. The SDRAM is mapped to address 0x0 on reset.

 For information about the L3 GPV remap control register bits, refer to the *Interconnect* chapter in volume 3 of the *Arria V Device Handbook*.

- The ACP window region is 1 GB and provides access to a configurable gigabyte-aligned region of the MPU address space. Registers in the ACP ID mapper control which gigabyte-aligned region of the MPU address space is accessed by the ACP window region. The ACP window region is used by L3 masters to perform coherent accesses into the MPU address space.

 For more information about the ACP ID mapper, refer to the *Cortex-A9 MPU Subsystem* chapter in volume 3 of the *Arria V Device Handbook*.

Table 1-4 shows the base address and size of each L3 address space region that is not included in Table 1-2.

Table 1-4. L3 Address Space Regions

Identifier	Region Name	Base Address	Size
L3SDRAM	SDRAM window	0x00000000	2 GB
L3LOWOCRAM	On-chip RAM when present	0x00000000	64 KB
L3ACP	ACP window	0x80000000	1 GB

Peripheral Region Address Map

Table 1-5 lists the slave identifier, slave title, base address, and size of each slave in the peripheral region. The Slave Identifier column lists the names used in the HPS register map. The Slave Title column contains the module name for modules with only one slave and module names plus a suffix for modules with more than one slave.

Table 1-5. Peripheral Region Address Map (Part 1 of 2)

Slave Identifier	Slave Title	Base Address	Size
STM	STM	0xFC000000	48 MB
DAP	DAP	0xFF000000	2 MB
LWFGASLAVES	FPGA slaves accessed with lightweight FPGA-to-HPS AXI bridge	0xFF200000	2 MB
LWHP2FPGAREGS	Lightweight FPGA-to-HPS AXI bridge GPV	0xFF400000	1 MB
HPS2FPGAREGS	HPS-to-FPGA AXI bridge GPV	0xFF500000	1 MB
FPGA2HPSREGS	FPGA-to-HPS AXI bridge GPV	0xFF600000	1 MB
EMAC0	EMAC0	0xFF700000	8 KB
EMAC1	EMAC1	0xFF702000	8 KB
SDMMC	SD/MMC	0xFF704000	4 KB
QSPIREGS	Quad SPI flash controller registers	0xFF705000	4 KB
FPGAMGRREGS	FPGA manager registers	0xFF706000	4 KB
ACPIDMAP	ACP ID mapper registers	0xFF207000	4 KB
GPI00	GPI00	0xFF208000	4 KB
GPI01	GPI01	0xFF209000	4 KB
GPI02	GPI02	0xFF20A000	4 KB
L3REGS	L3 interconnect GPV	0xFF800000	1 MB
NANDDATA	NAND controller data	0xFF900000	1 MB
QSPIDATA	Quad SPI flash data	0xFFA00000	1 MB
USB0	USB0 OTG controller registers	0xFFB00000	256 KB
USB1	USB1 OTG controller registers	0xFFB40000	256 KB
NANDREGS	NAND controller registers	0xFFB80000	64 KB
FPGAMGRDATA	FPGA manager configuration data	0xFFB90000	4 KB
UART0	UART0	0xFFC02000	4 KB
UART1	UART1	0xFFC03000	4 KB
I2C0	I2C0	0xFFC04000	4 KB
I2C1	I2C1	0xFFC05000	4 KB
I2C2	I2C2	0xFFC06000	4 KB
I2C3	I2C3	0xFFC07000	4 KB
SPTIMER0	SP Timer0	0xFFC08000	4 KB
SPTIMER1	SP Timer1	0xFFC09000	4 KB
SDRREGS	SDRAM controller subsystem registers	0xFFC20000	128 KB
OSC1TIMER0	OSC1 Timer0	0xFFD00000	4 KB

Table 1-5. Peripheral Region Address Map (Part 2 of 2)

Slave Identifier	Slave Title	Base Address	Size
OSC1TIMER1	OSC1 Timer1	0xFFD01000	4 KB
L4WD0	Watchdog0	0xFFD02000	4 KB
L4WD1	Watchdog1	0xFFD03000	4 KB
CLKMGR	Clock manager	0xFFD04000	4 KB
RSTMGR	Reset manager	0xFFD05000	4 KB
SYSMGR	System manager	0xFFD08000	16 KB
DMANONSECURE	DMA nonsecure registers	0xFFE00000	4 KB
DMASECURE	DMA secure registers	0xFFE01000	4 KB
SPIS0	SPI slave0	0xFFE02000	4 KB
SPIS1	SPI slave1	0xFFE03000	4 KB
SPIM0	SPI master0	0xFFFF0000	4 KB
SPIM1	SPI master1	0xFFFF01000	4 KB
SCANMGR	Scan manager registers	0xFFFF02000	4 KB
ROM	Boot ROM	0xFFFD0000	64 KB
MPUSCU	MPU SCU registers	0xFFFE0000	8 KB
MPUL2	MPU L2 cache controller registers	0xFFFEF000	4 KB
OCRAM	On-chip RAM	0xFFFF0000	64 KB

Document Revision History

Table 1-6 shows the revision history for this document.

Table 1-6. Document Revision History

Date	Version	Changes
November 2012	1.3	Minor updates.
June 2012	1.2	Updated address spaces section.
May 2012	1.1	Added peripheral region address map.
January 2012	1.0	Initial release.

The hard processor system (HPS) clock generation is centralized in the clock manager. The clock manager is responsible for providing software-programmable clock control to configure all clocks generated in the HPS. Clocks are organized in clock groups. A clock group is a set of clock signals that originate from the same clock source. A phase-locked loop (PLL) clock group is a clock group where the clock source is a common PLL voltage-controlled oscillator (VCO).

Features of the Clock Manager

The clock manager offers the following features:

- Generates and manages clocks in the HPS
- Contains the following PLL clock groups:
 - Main—contains clocks for the Cortex™-A9 microprocessor unit (MPU) subsystem, level 3 (L3) interconnect, level 4 (L4) peripheral bus, and debug
 - Peripheral—contains clocks for PLL-driven peripherals
 - SDRAM—contains clocks for the SDRAM subsystem
- Allows scaling of the MPU subsystem clocks without disabling peripheral and SDRAM clock groups
- Generates clock gate controls for enabling and disabling most clocks
- Initializes and sequences clocks for the following events:
 - Cold reset
 - Safe mode request from reset manager on warm reset

- Allows software to program clock characteristics, such as the following items discussed later in this chapter:
 - Input clock source for SDRAM and peripheral PLLs
 - Multiplier range, divider range, and six post-scale counters for each PLL
 - Output phases for SDRAM PLL outputs
 - VCO enable for each PLL
 - Bypass modes for each PLL
 - Gate off individual clocks in all PLL clock groups
 - Clear loss of lock status for each PLL
 - Safe mode for hardware-managed clocks
 - General-purpose I/O (GPIO) debounce clock divide
- Allows software to observe the status of all writable registers
- Supports interrupting the MPU subsystem on PLL-lock and loss-of-lock
- Supports clock gating at the signal level




The clock manager is *not* responsible for the following functional behaviors:

- Selection or management of the clocks for the FPGA-to-HPS, HPS-to-FPGA, and FPGA-to-HPS SDRAM interfaces. The FPGA logic designer is responsible for selecting and managing these clocks.
- Software must not program the clock manager with illegal values. If it does, the behavior of the clock manager is undefined and could stop the operation of the HPS. The only guaranteed means for recovery from an illegal clock setting is a cold reset.
- When re-programming clock settings, there are no automatic glitch-free clock transitions. Software must follow a specific sequence to ensure glitch-free clock transitions. Refer to “[Hardware-Managed and Software-Managed Clocks](#)” on [page 2-5](#).

Clock Manager Block Diagram and System Integration

Figure 2-1 shows the major components of the clock manager and its integration in the HPS.

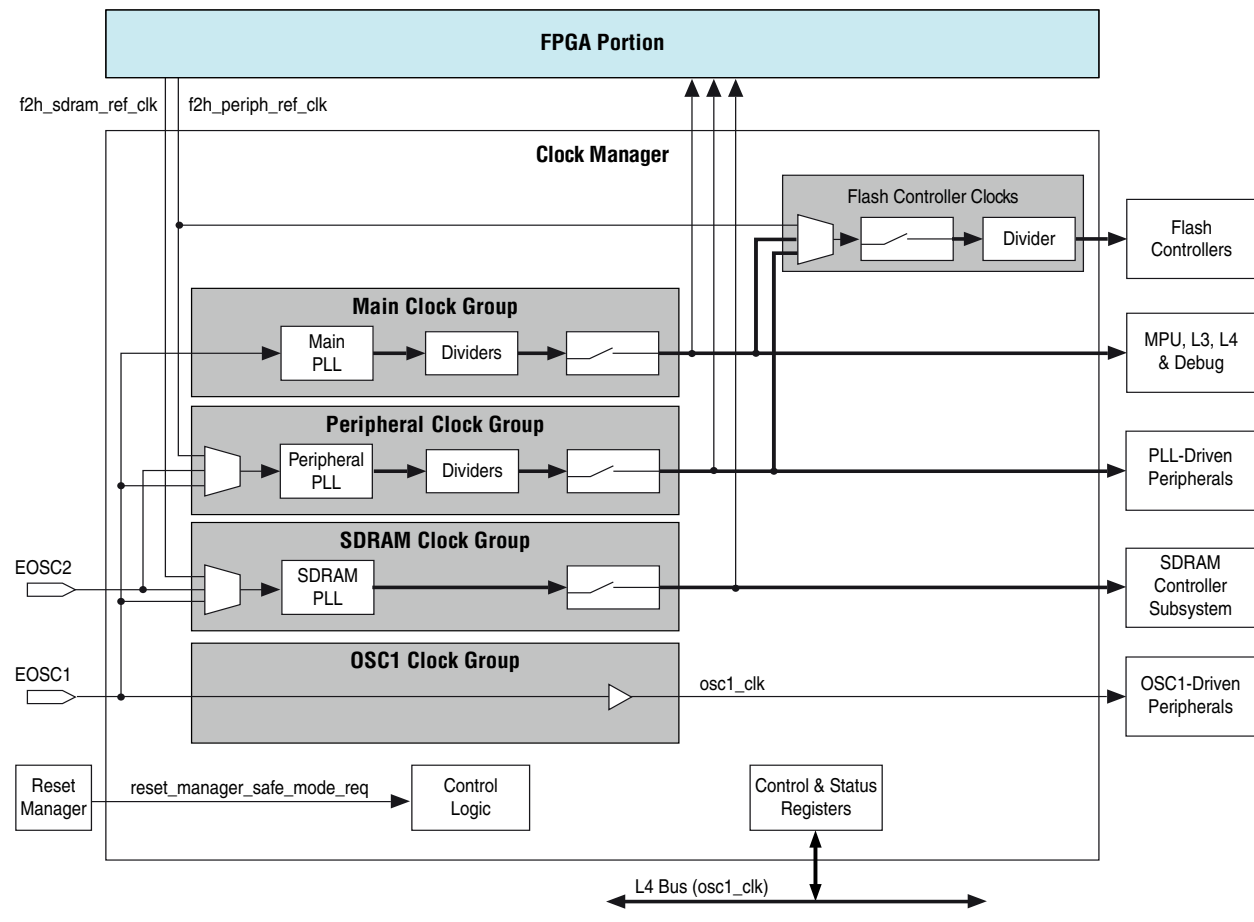Figure 2-1. Clock Manager Block Diagram



The next section describes the functional blocks internal to the clock manager. Refer to Figure 2-3 to Figure 2-6 for more detailed versions of the grey boxes in Figure 2-1.

Functional Description of the Clock Manager

This section describes the functional operation of the clock manager.

Clock Manager Building Blocks

The clock manager has the following major building blocks.

PLLs

The clock manager contains three PLLs: main, peripherals, and SDRAM. These PLLs generate the majority of clocks in the HPS. There is no phase control between the clocks generated by the three PLLs.

Each PLL has the following features:

- Phase detector and output lock signal generation
- Registers to set VCO frequency
 - Multiplier range is 1 to 4096
 - Divider range is 1 to 64
- Six post-scale counters (C0-C5) with a range of 1 to 512
- PLL can be enabled to bypass all outputs to the `osc1_clk` clock for glitch-free transitions

The SDRAM PLL has the following additional feature:

- Phase shift of 1/8 per step
 - Phase shift range is 0 to 7

Equation 2-1 shows equations for F_{REF} , F_{VCO} , and F_{OUT} . The values for M , N , and C are stored in registers accessible to software.

Equation 2-1. F_{REF} , F_{VCO} , and F_{OUT} Equations

$$\begin{aligned}
 F_{REF} &= F_{IN} / N \\
 F_{VCO} &= F_{REF} \times M = F_{IN} \times M/N \\
 F_{OUT} &= F_{VCO} / (C_i \times K) = F_{REF} \times M / (C_i \times K) = (F_{IN} \times M) / (N \times C_i \times K)
 \end{aligned}$$

where:


- (1) F_{VCO} = VCO frequency.
 - (2) F_{IN} = input frequency.
 - (3) F_{REF} = reference frequency.
 - (4) M = numerator, part of the clock feedback path.
 - (5) N = denominator, part of the input clock reference path.
 - (6) C_i = post-scale counter, where i is 0-5 for each of the six counters.
 - (7) K is an internal post-scale counter in the main PLL, where $K = 2$ for C0, and $K = 4$ for C1 and C2. $K = 1$ for C3, C4, and C5 in the main PLL and for all C_i counters in the peripheral and SDRAM PLLs.
-



Minimum and maximum VCO frequencies for the main, peripheral, and SDRAM PLLs vary by device speed grade. For specific details, refer the [Arria V Device Datasheet](#).

Figure 2-2 shows the block diagram of each PLL. Values listed for M , N , and C are actually one greater than the values stored in the CSRs.

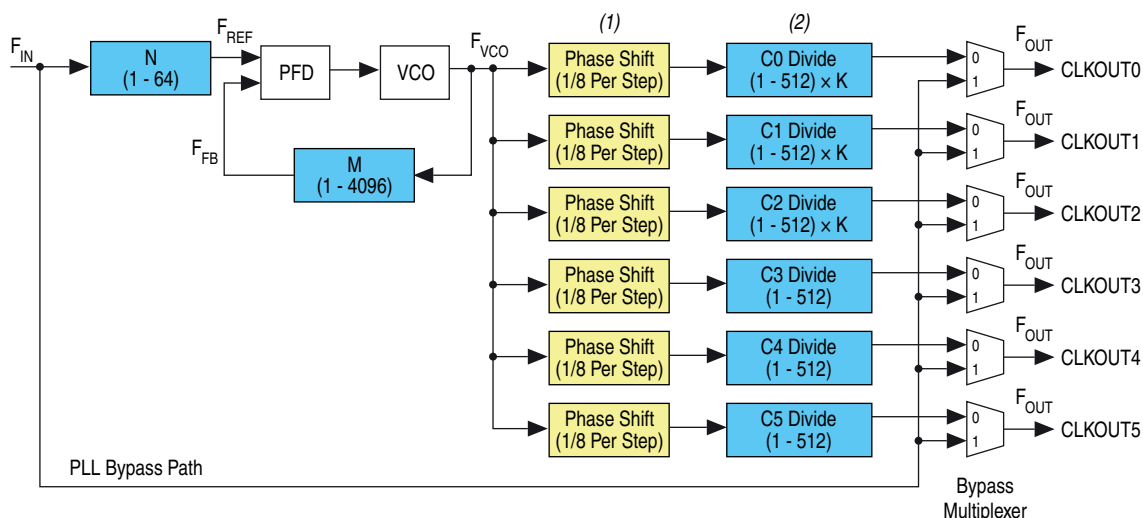Figure 2-2. PLL Block Diagram



Notes to Figure 2-2:

- (1) Phase shift is only available for SDRAM PLL outputs.
- (2) In the main PLL, $K=2$ for C0, and $K=4$ for C1 and C2. $K=1$ in the peripheral and SDRAM PLLs.

Dividers

Dividers subdivide the C0-C5 clocks produced by the PLL to lower frequencies. The main PLL C0-C2 clocks have an additional internal post-scale counter.

Clock Gating

Clock gating enables and disables clock signals.

Control and Status Registers

The clock manager contains registers used to configure and observe the clock manager.

Hardware-Managed and Software-Managed Clocks

When changing values on clocks, the terms *hardware-managed* and *software-managed* define who is responsible for successful transitions. Software-managed clocks require that software manually gate off any clock affected by the change, wait for any PLL lock if required, then gate the clocks back on. Hardware-managed clocks use hardware to ensure that a glitch-free transition to a new clock value occurs. There are three hardware-managed sets of clocks in the HPS, namely, clocks generated from the main PLL outputs C0, C1, and C2. All other clocks in the HPS are software-managed clocks.

Clock Groups

The clock manager contains one clock group for each PLL and one clock group for the EOSC1 pin.

OSC1 Clock Group

The clock in the OSC1 clock group is derived directly from the EOSC1 pin. This clock is never gated or divided. It is used as a PLL input and also by HPS logic that does not operate on a clock output from a PLL.

Table 2-1 lists the clock in the OSC1 clock group.

Table 2-1. OSC1 Clock Group Clock

Name	Frequency	Clock Source	Destination
osc1_clk	10 to 50 MHz	EOSC1 pin	OSC1-driven peripherals listed in Table 2-9 on page 2-14

Main Clock Group

The main clock group consists of a PLL, dividers, and clock gating. The clocks in the main clock group are derived from the main PLL. The main PLL is always sourced from the EOSC1 pin of the device.

Table 2-2 lists the main PLL output assignments.

Table 2-2. Main PLL Output Assignments

PLL	Output Counter	Clock Name	Frequency	Phase Shift Control
Main	C0	mpu_base_clk	osc1_clk to varies ⁽¹⁾	No
	C1	main_base_clk	osc1_clk to varies ⁽¹⁾	No
	C2	dbg_base_clk	osc1_clk/4 to mpu_base_clk/2	No
	C3	main_qspi_base_clk	Up to 432 MHz	No
	C4	main_nand_sdmmc_base_clk	Up to 250 MHz for the NAND flash controller and up to 200 MHz for the SD/MMC controller	No
	C5	cfg_h2f_user0_base_clk	osc1_clk to 125 MHz for driving configuration and 100 MHz for the user clock	No


Note to Table 2-2:

(1) The maximum frequency depends on the speed grade of the device.

The counter outputs from the main PLL can have their frequency further divided by programmable dividers external to the PLL. Transitions to a different divide value occur on the fastest output clock, one clock cycle prior to the slowest clock's rising edge. For example, cycle 15 of the divide-by-16 divider for the main C2 output and cycle 3 of the divide-by-4 divider for the main C0 output.

Figure 2-3 shows how each counter output from the main PLL can have its frequency further divided by programmable post-PLL dividers. Green-colored clock gating logic is directly controlled by software writing to a register. Orange-colored clock gating logic is controlled by hardware. Orange-colored clock gating logic allows hardware to seamlessly transition a synchronous set of clocks, for example, all the MPU subsystem clocks.

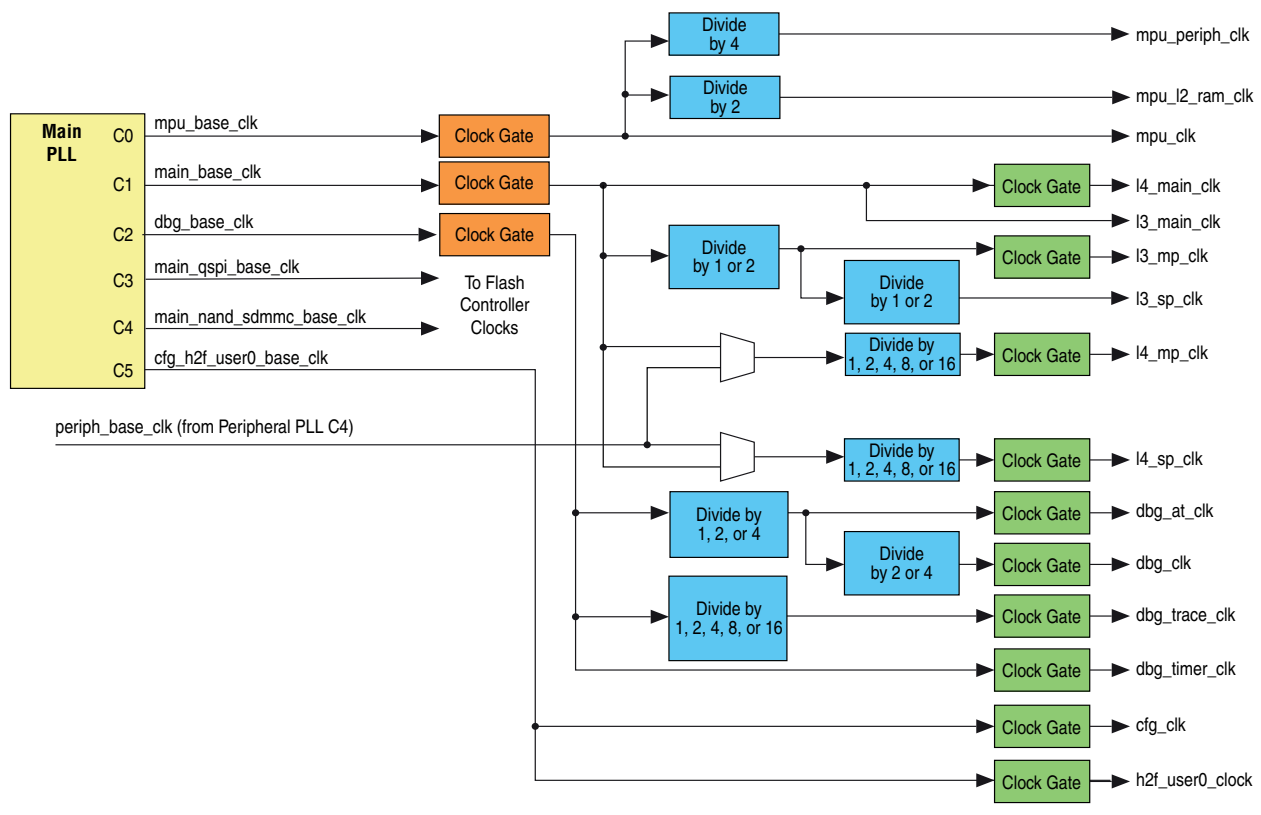Figure 2-3. Main Clock Group Divide and Gating



The clocks derived from main PLL C0-C2 outputs are hardware-managed, meaning hardware ensures that a clean transition occurs, and can have the following control values changed dynamically by software write accesses to the control registers:

- PLL bypass
- PLL numerator, denominator, and counters
- External dividers

For these registers, hardware detects that the write has occurred and performs the correct sequence to ensure that a glitch-free transition to the new clock value occurs. These clocks can pause during the transition.

Table 2-3 lists the clocks in the main clock group.

Table 2-3. Main Clock Group Clocks

System Clock Name	Frequency	Constraints and Notes
mpu_clk	Main PLL C0	Clock for MPU subsystem, including CPU0 and CPU1
mpu_l2_ram_clk	mpu_clk/2	Clock for MPU level 2 (L2) RAM
mpu_periph_clk	mpu_clk/4	Clock for MPU snoop control unit (SCU) peripherals, such as the general interrupt controller (GIC)
l3_main_clk	Main PLL C1	Clock for L3 main switch
l3_mp_clk	l3_main_clk or l3_main_clk/2	Clock for L3 master peripherals (MP) switch
l3_sp_clk	l3_mp_clk or l3_mp_clk/2	Clock for L3 slave peripherals (SP) switch
l4_main_clk	Main PLL C1	Clock for L4 main bus
l4_mp_clk	osc1_clk/16 to 100 MHz divided from main PLL C1 or peripheral PLL C4	Clock for L4 MP bus
l4_sp_clk	osc1_clk/16 to 100 MHz divided from main PLL C1 or peripheral PLL C4	Clock for L4 SP bus
dbg_at_clk	osc1_clk/4 to main PLL C2/2	Clock for CoreSight™ debug trace bus
dbg_trace_clk	osc1_clk/16 to main PLL C2	Clock for CoreSight™ debug Trace Port Interface Unit (TPIU)
dbg_timer_clk	osc1_clk to main PLL C2	Clock for the trace timestamp generator
dbg_clk	dbg_at_clk/2 or dbg_at_clk/4	Clock for Debug Access Port (DAP) and debug peripheral bus
main_qspi_clk	Main PLL C3	Quad SPI flash internal logic clock
main_nand_sdmmc_clk	Main PLL C4	Input clock to flash controller clocks block
cfg_clk	osc1_clk to 125_MHz divided from main PLL C5	FPGA manager configuration clock
h2f_user0_clock	osc1_clk to 100_MHz divided from main PLL C5	Auxiliary user clock to the FPGA fabric

Changing Values That Affect Main Clock Group PLL Lock

To change any value that affects VCO lock of the main clock group PLL, including the hardware-managed clocks, software must put the main PLL in bypass mode, which causes all the main PLL output clocks to be driven by the `osc1_clk` clock. Software must detect PLL lock by reading the lock status register prior to taking the main PLL out of bypass mode.

Once a PLL is locked, changes to any PLL VCO frequency that are 20 percent or less do not cause the PLL to lose lock. Iteratively changing the VCO frequency in increments of 20 percent or less allow a slow ramp of the VCO base frequency without loss of lock. For example, to change a VCO frequency by 40% without losing lock, change the frequency by 20%, then change it again by 16.7%.

Peripheral Clock Group

The peripheral clock group consists of a PLL, dividers, and clock gating. The clocks in the peripheral clock group are derived from the peripheral PLL. The peripheral PLL can be programmed to be sourced from the E0SC1 pin, the E0SC2 pin, or the f2h_periph_ref_clk clock provided by the FPGA fabric.

The counter outputs from the main PLL can have their frequency further divided by external dividers. Transitions to a different divide value occur on the fastest output clock, one clock cycle prior to the slowest clock's rising edge. For example, cycle 15 of the divide-by-16 divider for the main C2 output and cycle 3 of the divide-by-4 divider for the C1 output.

Table 2-4 lists the Peripheral PLL output assignments.

Table 2-4. Peripheral PLL Output Assignments

PLL	Output Counter	Clock Name	Frequency	Phase Shift Control
Peripheral	C0	emac0_base_clk	Up to 250 MHz	No
	C1	emac1_base_clk	Up to 250 MHz	No
	C2	periph_qspi_base_clk	Up to 432 MHz	No
	C3	periph_nand_sdmmc_base_clk	Up to 250 MHz for the NAND flash controller and up to 200 MHz for the SD/MMC controller	No
	C4	periph_base_base_clk	Up to 240 MHz for the SPI masters and up to 200 MHz for the scan manager	No
	C5	h2f_user1_base_clk	osc1_clk to 100 MHz	No

Figure 2-4 shows programmable post-PLL dividers and clock gating for the peripheral clock group. Clock gate blocks in the diagram indicate clocks which may be gated off under software control. Software is expected to gate these clocks off prior to changing any PLL or divider settings that might create incorrect behavior on these clocks.

Figure 2-4. Peripheral Clock Group Divide and Gating

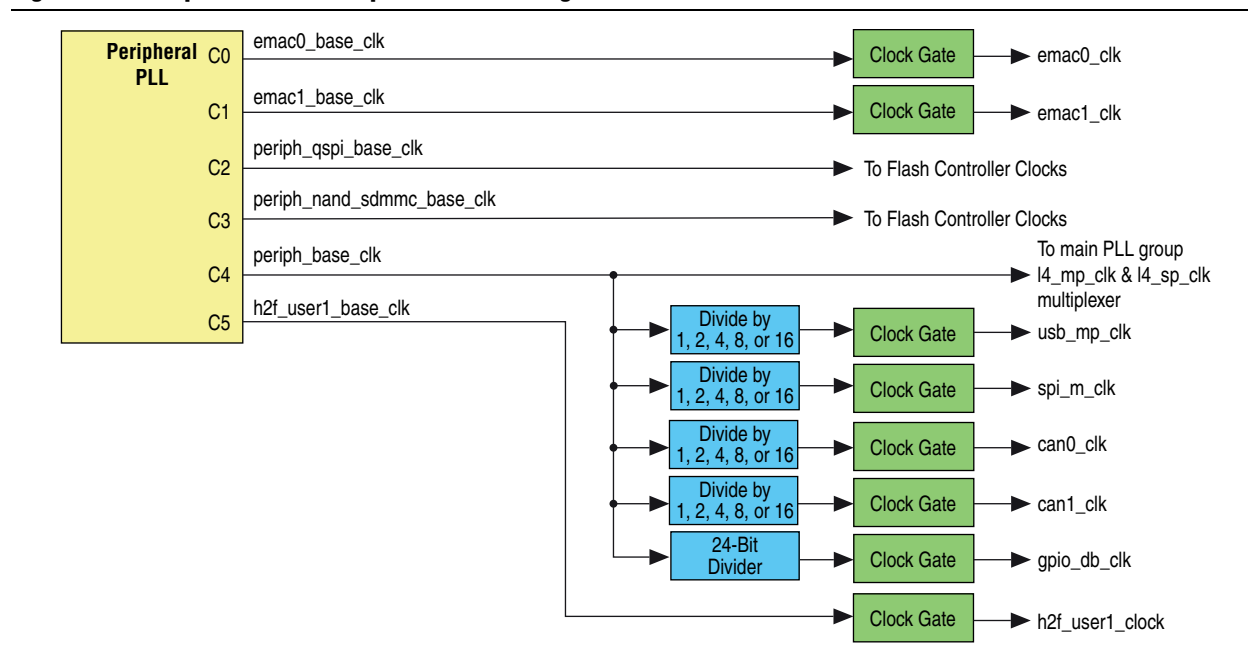


Table 2-5 lists the clocks in the peripheral clock group.

Table 2-5. Peripheral Clock Group Clocks (Part 1 of 2)

System Clock Name	Frequency	Divided From	Constraints and Notes
usb_mp_clk	Up to 200 MHz	Peripheral PLL C4	Clock for USB
spi_m_clk	Up to 240 MHz for the SPI masters and up to 200 MHz for the scan manager	Peripheral PLL C4	Clock for L4 SPI master bus and scan manager
emac0_clk	Up to 250 MHz	Peripheral PLL C0	EMAC0 clock. The 250 MHz clock is divided internally by the EMAC into the typical 125/25/2.5 MHz speeds for 1000/100/10 Mbps operation.
emac1_clk	Up to 250 MHz	Peripheral PLL C1	EMAC1 clock. The 250 MHz clock is divided internally by the EMAC into the typical 125/25/2.5 MHz speeds for 1000/100/10 Mbps operation.
l4_mp_clk	Up to 100 MHz	Main PLL C1 or peripheral PLL C4	Clock for L4 master peripheral bus
l4_sp_clk	Up to 100 MHz	Main PLL C1 or peripheral PLL C4	Clock for L4 slave peripheral bus
can0_clk	Up to 100 MHz	Peripheral PLL C4	Controller area network (CAN) controller 0 clock

Table 2-5. Peripheral Clock Group Clocks (Part 2 of 2)

System Clock Name	Frequency	Divided From	Constraints and Notes
can1_clk	Up to 100 MHz	Peripheral PLL C4	CAN controller 1 clock
gpio_db_clk	Up to 32 KHz	Peripheral PLL C4	Used to debounce GPIO0, GPIO1, and GPIO2
h2f_user1_clock	Peripheral PLL C5	Peripheral PLL C5	Auxiliary user clock to the FPGA fabric

SDRAM Clock Group

The SDRAM clock group consists of a PLL and clock gating. The clocks in the SDRAM clock group are derived from the SDRAM PLL. The SDRAM PLL can be programmed to be sourced from the E0SC1 pin, the E0SC2 pin, or the f2h_sdram_ref_clk clock provided by the FPGA fabric.

The counter outputs from the SDRAM PLL can be gated off directly under software control. The divider values for each clock are set by registers in the clock manager.

Table 2-6 lists the SDRAM PLL output assignments.

Table 2-6. SDRAM PLL Output Assignments


PLL	Output Counter	Clock Name	Frequency	Phase Shift Control
SDRAM	C0	ddr_dqs_base_clk	Up to varies ⁽¹⁾	Yes
	C1	ddr_2x_dqs_base_clk	Up to ddr_dqs_base_clk x 2	Yes
	C2	ddr_dq_base_clk	Up to ddr_dqs_base_clk	Yes
	C5	h2f_user2_base_clk	osc1_clk to varies ⁽¹⁾	Yes

Note to Table 2-6:

(1) The maximum frequency depends on the speed grade of the device.

Figure 2-5 shows clock gating for SDRAM PLL clock group. Clock gate blocks in the diagram indicate clocks which may be gated off under software control. Software is expected to gate these clocks off prior to changing any PLL or divider settings that might create incorrect behavior on these clocks.

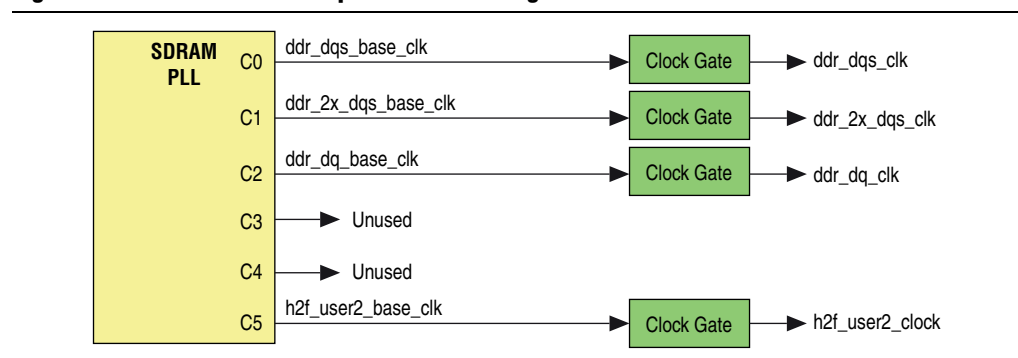Figure 2-5. SDRAM Clock Group Divide and Gating



The SDRAM PLL output clocks can be phase shifted in real time in increments of 1/8 the VCO frequency. Maximum number of phase shift increments is 4096.

Table 2-7 lists the clocks in the SDRAM clock group.

Table 2-7. SDRAM Clock Group Clocks

Name	Frequency	Constraints and Notes
ddr_dqs_clk	SDRAM PLL C0	Clock for MPFE, single-port controller, CSR access, and PHY
ddr_2x_dqs_clk	SDRAM PLL C1	Clock for PHY
ddr_dq_clk	SDRAM PLL C2	Clock for PHY
h2f_user2_clock	SDRAM PLL C5	Auxiliary user clock to the FPGA fabric

Flash Controller Clocks

Flash memory peripherals can be driven by the main PLL, the peripheral PLL, or from clocks provided by the FPGA fabric, as shown in Figure 2-6.

Figure 2-6. Flash Peripheral Clock Divide and Gating

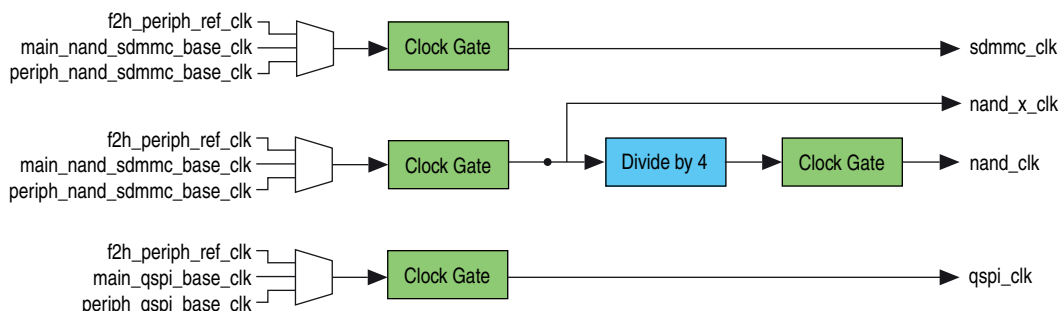


Table 2-8 lists the flash controller clocks.

Table 2-8. Flash Controller Clocks

System Clock Name	Frequency	Divided From	Constraints and Notes
qspi_clk	Up to 432 MHz	Peripheral PLL C2, main PLL C3, or f2h_periph_ref_clk	Clock for quad SPI, typically 108 and 80 MHz
nand_x_clk	Up to 250 MHz	Peripheral PLL C3, main PLL C4, or f2h_periph_ref_clk	NAND flash controller master and slave clock
nand_clk	nand_x_clk/4	Peripheral PLL C3, main PLL C4, or f2h_periph_ref_clk	Main clock for NAND flash controller, sets base frequency for NAND transactions
sdmmc_clk	Up to 200 MHz	Peripheral PLL C3, main PLL C4, or f2h_periph_ref_clk	■ Less than or equal to memory maximum operating frequency ■ 45% to 55% duty cycle ■ Typical frequencies are 26 and 52 MHz ■ SD/MMC has a subclock tree divided down from this clock

Resets

Cold Reset

Cold reset places the hardware-managed clocks into safe mode, the software-managed clocks into their default state, and asynchronously resets all registers in the clock manager.

For more information, refer to “[Safe Mode](#)”.

Warm Reset

Registers in the clock manager control how the clock manager responds to warm reset. Typically, software places the clock manager into a safe state in order to generate a known set of clocks for the ROM code to boot the system. The behavior of the system on warm reset as a whole, including how the FPGA fabric, boot code, and debug systems are configured to behave, must be carefully considered when choosing how the clock manager responds to warm reset.

The reset manager can request that the clock manager go into safe mode as part of the reset manager’s warm reset sequence. Before asserting safe mode to the clock manager, the reset manager ensures that the reset signal is asserted on all modules that receive warm reset.



For more information, refer to “Reset Sequencing” in the [Reset Manager](#) chapter in volume 3 of the *Arria V Device Handbook*.

Safe Mode

Safe mode is enabled in the HPS by the assertion of a safe mode request from the reset manager or by a cold reset. Assertion of the safe mode request from the reset manager sets the safe mode bit in the clock manager control register. No other control register bits are affected by the safe mode request from the reset manager.

When safe mode is enabled, the main PLL hardware-managed clocks (C0-C2) are bypassed to the `osc1_clk` clock and are directly generated from the `osc1_clk` clock. While in safe mode, clock manager register settings, which control clock behavior, are not changed. However, the hardware bypasses these settings and uses safe, default settings.

The hardware-managed clocks are forced to their safe mode values such that the following conditions occur:

- The hardware-managed clocks are bypassed to the `osc1_clk` clock, including counters in the main PLL.
- Programmable dividers select the reset default values.
- The flash controller clocks multiplexer selects the output from the peripheral PLL.
- All clocks are enabled.

A write by software is the only way to clear the safe mode bit (`safemode`) of the `ctrl` register.



Before coming out of safe mode, all registers and clocks need to be configured correctly. It is possible to program the clock manager in such a way that only a cold reset can return the clocks to a functioning state. Altera strongly recommends using Altera-provided libraries to configure and control HPS clocks.

Interrupts

The clock manager provides one interrupt output, enabled using the interrupt enable register (intren). The source of the interrupt is six inputs, namely, an achieving lock and a losing lock bit in the interrupt status register (inter) for each PLL.

Clock Usage By Module

Table 2-9 lists every clock input generated by the clock manager to all modules in the HPS. System clock names are global for the entire HPS and system clocks with the same name are phase-aligned at all endpoints.

Table 2-9. Clock Usage By Module (Part 1 of 3)

Module Name	System Clock Name	Use
MPU subsystem	mpu_clk	Main clock for the MPU subsystem
	mpu_periph_clk	Clock for peripherals inside the MPU subsystem
	dbg_at_clk	Trace bus clock
	dbg_clk	Debug clock
	mpu_l2_ram_clk	Clock for the L2 cache and Accelerator Coherency Port (ACP) ID mapper
	l4_mp_clk	Clock for the ACP ID mapper control slave
Interconnect	l3_main_clk	Clock for the L3 main switch
	dbg_at_clk	Clock for the System Trace Macrocell (STM) slave and Embedded Trace Router (ETR) master connections
	dbg_clk	Clock for the DAP master connection
	l3_mp_clk	Clock for the L3 master peripheral switch
	l4_mp_clk	Clock for the L4 MP bus, Secure Digital (SD) / MultiMediaCard (MMC) master, and EMAC masters
	usb_mp_clk	Clock for the USB masters and slaves
	nand_x_clk	Clock for the NAND master
	cfg_clk	Clock for the FPGA manager configuration data slave
	l3_sp_clk	Clock for the L3 slave peripheral switch
	l3_main_clk	Clock for the L4 SPIS bus master
	mpu_l2_ram_clk	Clock for the ACP ID mapper slave and L2 master connections
	osc1_clk	Clock for the L4 OSC1 bus master
	spi_m_clk	Clock for the L4 SPIM bus master
	l4_sp_clk	Clock for the L4 SP bus master
	l4_mp_clk	Clock for the quad SPI bus slave
Boot ROM	l3_main_clk	Clock for the boot ROM
On-chip RAM	l3_main_clk	Clock for the on-chip RAM

Table 2–9. Clock Usage By Module (Part 2 of 3)

Module Name	System Clock Name	Use
DMA controller	l4_main_clk	Clock for the DMA
	dbg_at_clk	Clock synchronous to the STM module
	l4_mp_clk	Clock synchronous to the quad SPI flash
FPGA manager	cfg_clk	Clock for the control block (CB) data interface and configuration data slave
	l4_mp_clk	Clock for the control slave
HPS-to-FPGA bridge	l3_main_clk	Clock for the data slave
	l4_mp_clk	Clock for the global programmer's view (GPV) slave
FPGA-to-HPS bridge	l3_main_clk	Clock for the data master
	l4_mp_clk	Clock for the GPV slave
Lightweight HPS-to-FPGA bridge	l4_mp_clk	Clock for the GPV masters, and the data and GPV slave
Quad SPI flash controller	l4_mp_clk	Clock for the control slave
	qspi_clk	Reference clock for serialization
SD/MMC controller	l4_mp_clk	Clock for the master and slave
	sdmmc_clk	Clock for the SD/MMC internal logic
EMAC 0	l4_mp_clk	Clock for the master
	emac0_clk	EMAC 0 internal logic clock
	osc1_clk	IEEE 1588 timestamp clock
EMAC 1	l4_mp_clk	Clock for the master
	emac1_clk	EMAC 1 internal logic clock
	osc1_clk	IEEE 1588 timestamp clock
USB 0	usb_mp_clk	Clock for the master and slave
USB 1	usb_mp_clk	Clock for the master and slave
NAND flash controller	nand_x_clk	NAND high-speed master and slave clock
	nand_clk	NAND flash clock
OSC1 timer 0	osc1_clk	Clock for the OSC1 timer 0
OSC1 timer 1	osc1_clk	Clock for the OSC1 timer 1
SP timer 0	l4_sp_clk	Clock for the SP timer 0
SP timer 1	l4_sp_clk	Clock for the SP timer 1
I ² C controller 0	l4_sp_clk	Clock for the I ² C 0
I ² C controller 1	l4_sp_clk	Clock for the I ² C 1
I ² C controller 2	l4_sp_clk	Clock for the I ² C 2
I ² C controller 3	l4_sp_clk	Clock for the I ² C 3
UART controller 0	l4_sp_clk	Clock for the UART 0
UART controller 1	l4_sp_clk	Clock for the UART 1
CAN controller 0	l4_sp_clk	Clock for the slave
	can0_clk	CAN 0 controller clock
CAN controller 1	l4_sp_clk	Clock for the slave
	can1_clk	CAN 1 controller clock

Table 2–9. Clock Usage By Module (Part 3 of 3)

Module Name	System Clock Name	Use
GPIO interface 0	l4_mp_clk	Clock for the slave
	gpio_db_clk	Debounce clock
GPIO interface 1	l4_mp_clk	Clock for the slave
	gpio_db_clk	Debounce clock
GPIO interface 2	l4_mp_clk	Clock for the slave
	gpio_db_clk	Debounce clock
System manager	osc1_clk	Clock for the system manager
SDRAM subsystem	l4_sp_clk	Clock for the control slave
	ddr_dq_clk	Off-chip data clock
	ddr_dqs_clk	Clock for the MPFE, single-port controller, CSRs, and PHY
	ddr_2x_dqs_clk	Off-chip strobe data clock
	mpu_l2_ram_clk	Clock for the slave connected to MPU subsystem L2 cache
	l3_main_clk	Clock for the slave connected to L3 interconnect
L4 watchdog timer 0	osc1_clk	Clock for the L4 watchdog timer 0
L4 watchdog timer 1	osc1_clk	Clock for the L4 watchdog timer 1
SPI master controller 0	spi_m_clk	Clock for the SPI master 0
SPI master controller 1	spi_m_clk	Clock for the SPI master 1
SPI slave controller 0	l4_main_clk	Clock for the SPI slave 0
SPI slave controller 1	l4_main_clk	Clock for the SPI slave 1
Debug subsystem	l4_mp_clk	System bus clock
	dbg_clk	Debug clock
	dbg_at_clk	Trace bus clock
	dbg_trace_clk	Trace port clock
Reset manager	osc1_clk	Clock for the reset manager
	l4_sp_clk	Clock for the slave
Scan manager	spi_m_clk	Clock for the scan manager
Timestamp generator	dbg_timer_clk	Clock for the timestamp generator

Clock Manager Address Map and Register Definitions



The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the link for the following module instance:

■ clkmgr

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.



The base addresses of all modules are also listed in the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 2-10 shows the revision history for this document.

Table 2-10. Document Revision History

Date	Version	Changes
November 2012	1.2	Minor updates.
May 2012	1.1	■ Reorganized and expanded functional description section. ■ Added address map and register definitions section.
January 2012	1.0	Initial release.

This chapter provides an overview of HPS reset manager. The reset manager generates module reset signals based on reset requests from the various sources in the HPS and FPGA fabric, and software writing to the module-reset control registers. The reset manager ensures that a reset request from the FPGA fabric can occur only after the FPGA portion of the system-on-a-chip (SoC) device is configured.

The HPS contains three reset domains. Each reset domain can be reset independently. Each register in the HPS that can be reset belongs to one particular reset domain.

Table 3–1 shows the HPS reset domains.

Table 3–1. HPS Reset Domains

Domain Name	Domain Logic
TAP	JTAG test access port (TAP) controller, which is used by the debug access port (DAP).
Debug	All debug logic including most of the DAP, CoreSight™ components connected to the debug peripheral bus, trace, the microprocessor unit (MPU) subsystem, and the FPGA fabric.
System	All HPS logic except what is in the TAP and debug reset domains. Includes nondebug logic in the FPGA fabric connected to the HPS reset signals.

The HPS supports the following reset types:


- Cold reset (power-on reset)
 - Used to ensure the HPS is placed in a default state sufficient for software to boot
 - Triggered by a power-on reset and other sources
 - Resets all HPS logic that can be reset
 - Affects all reset domains
- Warm reset
 - Occurs after HPS has already been through a cold reset
 - Used to recover system from a non-responsive condition
 - Resets a subset of the HPS state reset by a cold reset
 - Only affects the system reset domain, which allows debugging (including trace) to operate through the warm reset

- Debug reset
 - Occurs after HPS has already been through a cold reset
 - Used to recover debug logic from a non-responsive condition
 - Only affects the debug reset domain

Reset Manager Block Diagram and System Integration

Figure 3-1 shows a block diagram of the reset manager in the SoC device.

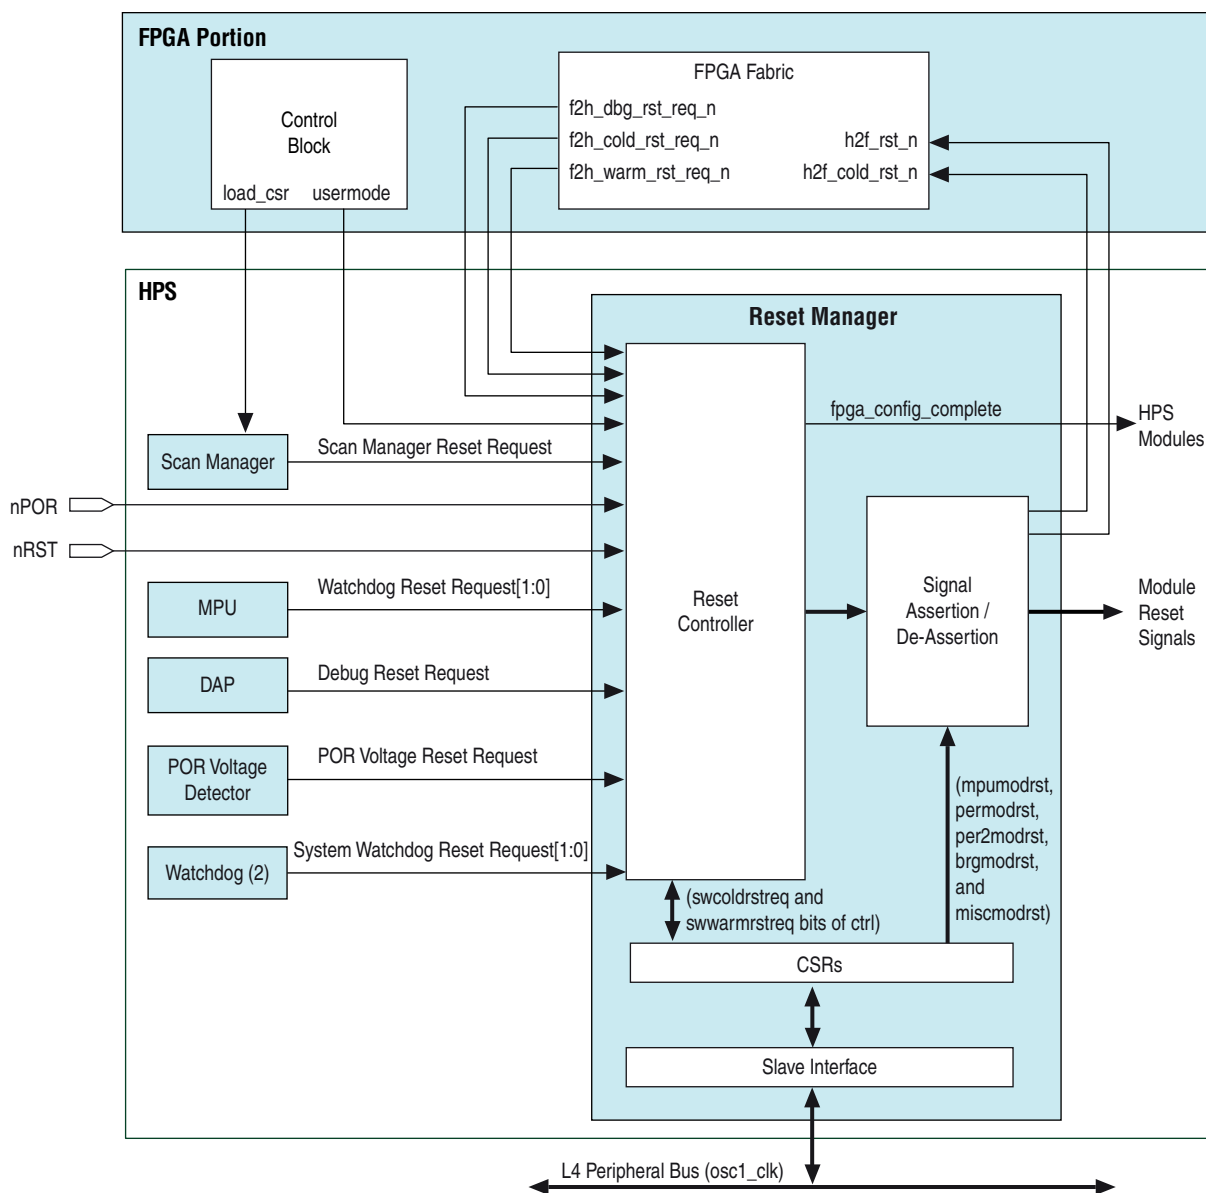Figure 3-1. Reset Manager Block Diagram



Note to Figure 3-1:

(1) Reset-related handshaking signals to other HPS modules and to the clock manager module are omitted from this figure for clarity.

HPS External Reset Sources

Table 3–2 describes the reset sources external to the HPS. All signals are synchronous to the `osc1_clk` clock.

Table 3–2. HPS External Reset Sources

Source	Description
f2h_cold_rst_req_n	Cold reset request from FPGA fabric (active low)
f2h_warm_rst_req_n	Warm reset request from FPGA fabric (active low)
f2h_dbg_rst_req_n	Debug reset request from FPGA fabric (active low)
h2f_cold_rst_n	Cold-only reset to FPGA fabric (active low)
h2f_rst_n	Cold or warm reset to FPGA fabric (active low)
load_csr	Cold-only reset from FPGA control block (CB) and scan manager
nPOR	Power-on reset pin (active low)
nRST	Warm reset pin (active low)



The reset signals from the HPS to the FPGA fabric must be synchronized to your user logic clock domain.

Reset Controller


The reset controller performs the following functions:

- Accepts reset requests from the FPGA CB, FPGA fabric, modules in the HPS, and reset pins
- Generates an individual reset signal for each module instance for all modules in the HPS
- Provides reset handshaking signals to support system reset behavior

The reset controller generates module reset signals from external reset requests and internal reset requests. External reset requests originate from sources external to the reset manager. Internal reset requests originate from control registers in the reset manager.

Figure 3–2 shows the reset controller signals.

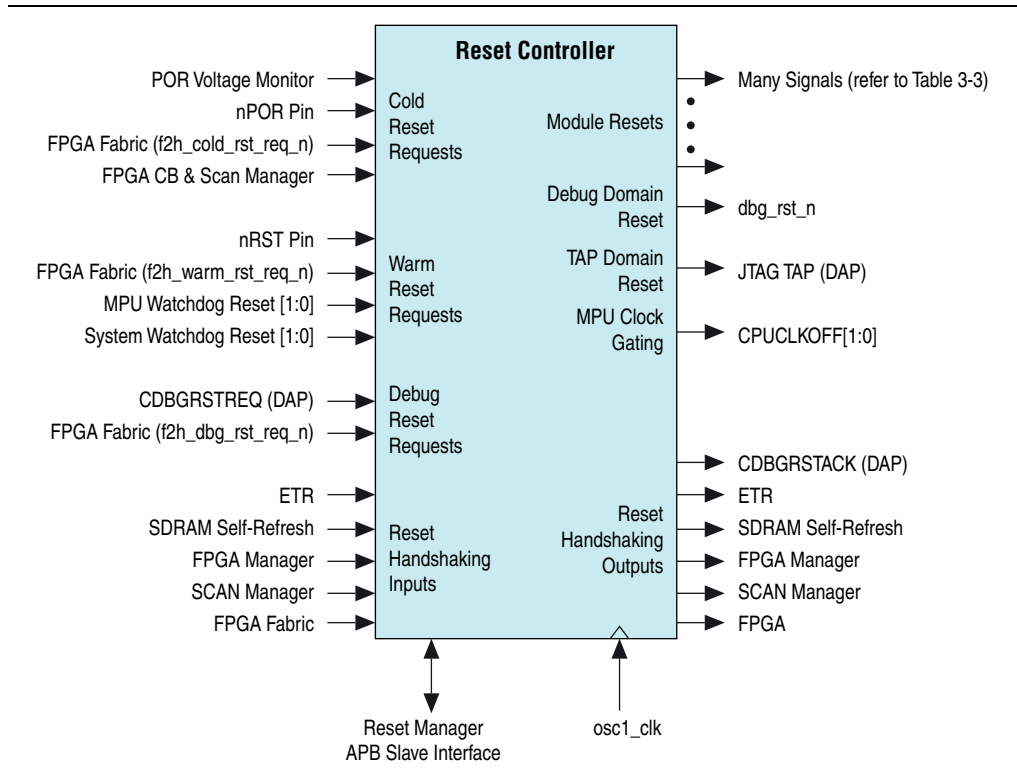Figure 3–2. Reset Controller Signals



The reset controller supports the following cold reset requests:

- Power-on reset (POR) voltage monitor
- Cold reset request pin (nPOR)
- FPGA fabric
- FPGA CB and scan manager
- Software cold reset request bit (swcoldrstreq) of the control register (ctrl)

The reset controller supports the following warm reset requests:

- Warm reset request pin (nRST)
- FPGA fabric
- Software warm reset request bit (swwarmrstreq) of the ctrl register
- MPU watchdog reset requests for CPU0 and CPU1
- System watchdog timer 0 and 1 reset requests

The reset controller supports the following debug reset requests:

- CDBGIRSTREQ from DAP
- FPGA fabric

Module Reset Signals

Table 3–3 lists the module reset signals. The module reset signals are organized in groups for the MPU, peripherals, bridges, the level 3 (L3) interconnect, and miscellaneous.

Checkmarks in the Cold Reset, Warm Reset, and Debug Reset columns denote reset signals asserted by each type of reset. For example, writing a 1 to the `swwarmrstreq` bit in the `ctrl` register resets all the modules that have a checkmark in the Warm Reset column.

Checkmarks in the Software Deassert column denote reset signals that are left asserted by the reset manager. To activate the related modules, software can deassert these reset signals as needed by writing to the following reset manager registers:

- MPU module reset register (`mpumodrst`)
- Peripheral module reset register (`permodrst`)
- Peripheral 2 module reset register (`per2modrst`)
- Bridge module reset register (`brgmodrst`)

Table 3–3. Generated Module Resets (Part 1 of 3)

Group	Module Reset Signal	Description	Reset Domain	Cold Reset	Warm Reset	Debug Reset	Software Deassert
MPU	<code>mpu_cpu_rst_n[0]</code>	Resets each processor in the MPU	System	✓	✓		
	<code>mpu_cpu_rst_n[1]</code>	Resets each processor in the MPU	System	✓	✓		✓
	<code>mpu_wd_rst_n</code>	Resets both per-processor watchdogs in the MPU	System	✓	✓		
	<code>mpu_scu_periph_rst_n</code>	Resets Snoop Control Unit (SCU) and peripherals	System	✓	✓		
	<code>mpu_l2_rst_n</code>	Level 2 (L2) cache reset	System	✓	✓		

Table 3–3. Generated Module Resets (Part 2 of 3)

Group	Module Reset Signal	Description	Reset Domain	Cold Reset	Warm Reset	Debug Reset	Software Deassert
PER	emac_rst_n[1:0]	Resets each EMAC	System	✓	✓		✓
	usb_rst_n[1:0]	Resets each USB	System	✓	✓		✓
	nand_flash_rst_n	Resets NAND flash controller	System	✓	✓		✓
	qspi_flash_rst_n	Resets quad SPI flash controller	System	✓	✓		✓
	watchdog_rst_n[1:0]	Resets each system watchdog timer	System	✓	✓		✓
	osc1_timer_rst_n[1:0]	Resets each OSC1 timer	System	✓	✓		✓
	sp_timer_rst_n[1:0]	Resets each SP timer	System	✓	✓		✓
	i2c_rst_n[3:0]	Resets each I ² C controller	System	✓	✓		✓
	uart_rst_n[1:0]	Resets each UART	System	✓	✓		✓
	spim_rst_n[1:0]	Resets SPI master controller	System	✓	✓		✓
	spis_rst_n[1:0]	Resets SPI slave controller	System	✓	✓		✓
	sdmmc_rst_n	Resets SD/MMC controller	System	✓	✓		✓
	can_rst_n[1:0]	Resets each CAN controller	System	✓	✓		✓
	gpio_rst_n[2:0]	Resets each GPIO interface	System	✓	✓		✓
	dma_rst_n	Resets DMA controller	System	✓	✓		✓
	sdram_rst_n	Resets SDRAM subsystem (resets logic associated with cold or warm reset)	System	✓	✓		✓
PER2	dma_periph_if_rst_n[7:0]	DMA controller request interface from FPGA fabric to DMA controller	System	✓	✓		✓
Bridge	hps2fpga_bridge_rst_n	Resets HPS-to-FPGA AMBA [®] Advanced eXtensible Interface (AXI [™]) bridge	System	✓	✓		✓
	fpga2hps_bridge_rst_n	Resets FPGA-to-HPS AXI bridge	System	✓	✓		✓
	lwhps2fpga_bridge_rst_n	Resets lightweight HPS-to-FPGA AXI bridge	System	✓	✓		✓

Table 3–3. Generated Module Resets (Part 3 of 3)

Group	Module Reset Signal	Description	Reset Domain	Cold Reset	Warm Reset	Debug Reset	Software Deassert
MISC	boot_rom_rst_n	Resets boot ROM	System	✓	✓		
	onchip_ram_rst_n	Resets on-chip RAM	System	✓	✓		
	sys_manager_rst_n	Resets system manager (resets logic associated with cold or warm reset)	System	✓	✓		
	sys_manager_cold_rst_n	Resets system manager (resets logic associated with cold reset only)	System	✓			
	fpga_manager_rst_n	Resets FPGA manager	System	✓	✓		
	acp_id_mapper_rst_n	Resets ACP ID mapper	System	✓	✓		
	h2f_rst_n	Resets user logic in FPGA fabric (resets logic associated with cold or warm reset)	System	✓	✓		
	h2f_cold_rst_n	Resets user logic in FPGA fabric (resets logic associated with cold reset only)	System	✓			
	rst_pin_rst_n	Pulls nRST pin low	System	✓	✓		
	timestamp_cold_rst_n	Resets debug timestamp to 0x0	System	✓			
	clk_manager_cold_rst_n	Resets clock manager (resets logic associated with cold reset only)	System	✓			
	scan_manager_rst_n	Resets scan manager	System	✓	✓		
	frz_ctrl_cold_rst_n	Resets freeze controller (resets logic associated with cold reset only)	System	✓			
	sys_dbg_rst_n	Resets debug masters and slaves connected to L3 interconnect and level 4 (L4) buses	System	✓	✓		
	dbg_rst_n	Resets debug components including DAP, trace, MPU debug logic, and any user debug logic in the FPGA fabric	Debug	✓		✓	
	tap_cold_rst_n	Resets portion of TAP controller in the DAP that must be reset on a cold reset	TAP	✓			
	sdram_cold_rst_n	Resets SDRAM subsystem (resets logic associated with cold reset only)	System	✓			
L3	l3_rst_n	Resets L3 interconnect and L4 buses	System	✓	✓		

Slave Interface and Status Register

The reset manager slave interface is used to control and monitor the reset states.

The status register (stat) in the reset manager contains the status of the reset requester. The register contains a bit for each reset request. The stat register captures all reset requests that have occurred. Software is responsible for clearing the bits.

Functional Description of the Reset Manager

The reset manager generates reset signals to modules in the HPS and to the FPGA fabric. The following actions generate reset signals:

- Software writing a 1 to the `swcoldrstreq` or `swwarmrstreq` bits in the `ctrl` register. Writing either bit causes the reset controller to perform a reset sequence.
- Software writing to the `mpumodrst`, `permodrst`, `per2modrst`, `brgmodrst`, or `miscmodrst` module reset control registers.
- Asserting reset request signals triggers the reset controller. All external reset requests cause the reset controller to perform a reset sequence.

 For information about the required duration of reset request signal assertion, refer to the [Arria V Device Datasheet](#).

Multiple reset requests can be driven to the reset manager at the same time. Cold reset requests take priority over warm and debug reset requests. Higher priority reset requests preempt lower priority reset requests. There is no priority difference among reset requests within the same domain.

If a cold reset request is issued while another cold reset is already underway, the reset manager extends the reset period for all the module reset outputs until all cold reset requests are removed. If a cold reset request is issued while the reset manager is removing other modules out of the reset state, the reset manager returns those modules back to the reset state.

If a warm reset request is issued while another warm reset is already underway, the first warm reset completes before the second warm reset begins. If the second warm reset request is removed before the first warm reset completes, the warm first reset is extended to meet the timing requirements of the second warm reset request.

The `nPOR` pin can be used to extend the cold reset beyond what the POR voltage monitor automatically provides. The use of the `nPOR` pin is optional and can be tied high when it is not required.

Reset Sequencing

The reset controller sequences resets without software assistance. Module reset signals are asserted asynchronously at the same time. The reset manager deasserts the module reset signals synchronous to the `osc1_clk` clock. Module reset signals are deasserted in groups in a fixed sequence. All module reset signals in a group are deasserted at the same time.

The reset manager sends a safe mode request to the clock manager to put the clock manager in safe mode, which creates a fixed and known relationship between the `osc1_clk` clock and all other clocks generated by the clock manager.


 For information about safe mode options, refer to the [Clock Manager](#) chapter in volume 3 of the *Arria V Device Handbook*.

After the reset manager releases the MPU subsystem from reset, CPU1 is left in reset and CPU0 begins executing code from the reset vector address. Software is responsible for deasserting CPU1 and other resets, as shown in [Table 3-3](#). Software deasserts resets by writing the `mpumodrst`, `permodrst`, `per2modrst`, `brgmodrst`, and `miscmodrst` module-reset control registers.

Software can also bypass the reset controller and generate reset signals directly through the module-reset control registers. In this case, software is responsible for asserting module reset signals, driving them for the appropriate duration, and deasserting them in the correct order. The clock manager is not typically in safe mode during this time, so software is responsible for knowing the relationship between the clocks generated by the clock manager. Software must not assert a module reset signal that would prevent software from deasserting the module reset signal. For example, software should not assert the module reset to the processor executing the software.

[Figure 3-3](#) shows the timing diagram for cold reset.

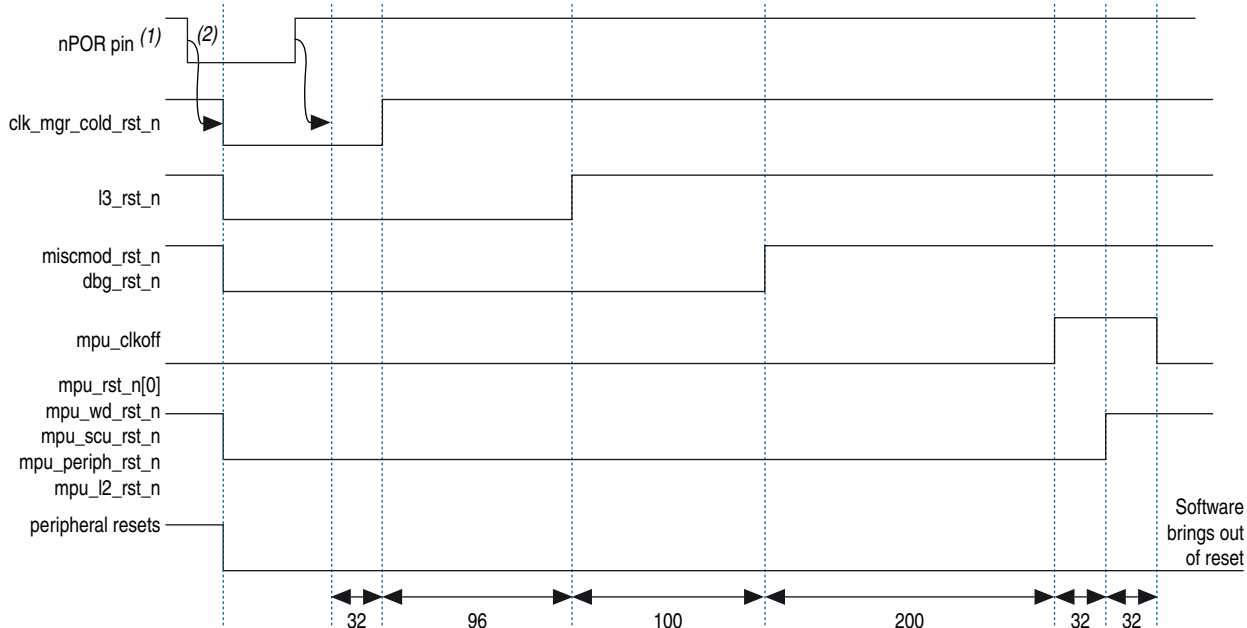Figure 3-3. Cold Reset Timing Diagram




Note to Figure 3-3:

- (1) Cold reset can be initiated from several other sources. For the complete list, refer to [“Reset Controller” on page 3-3](#).
- (2) This dependency applies to all the reset signals.

Figure 3-4 shows the timing diagram for warm reset.

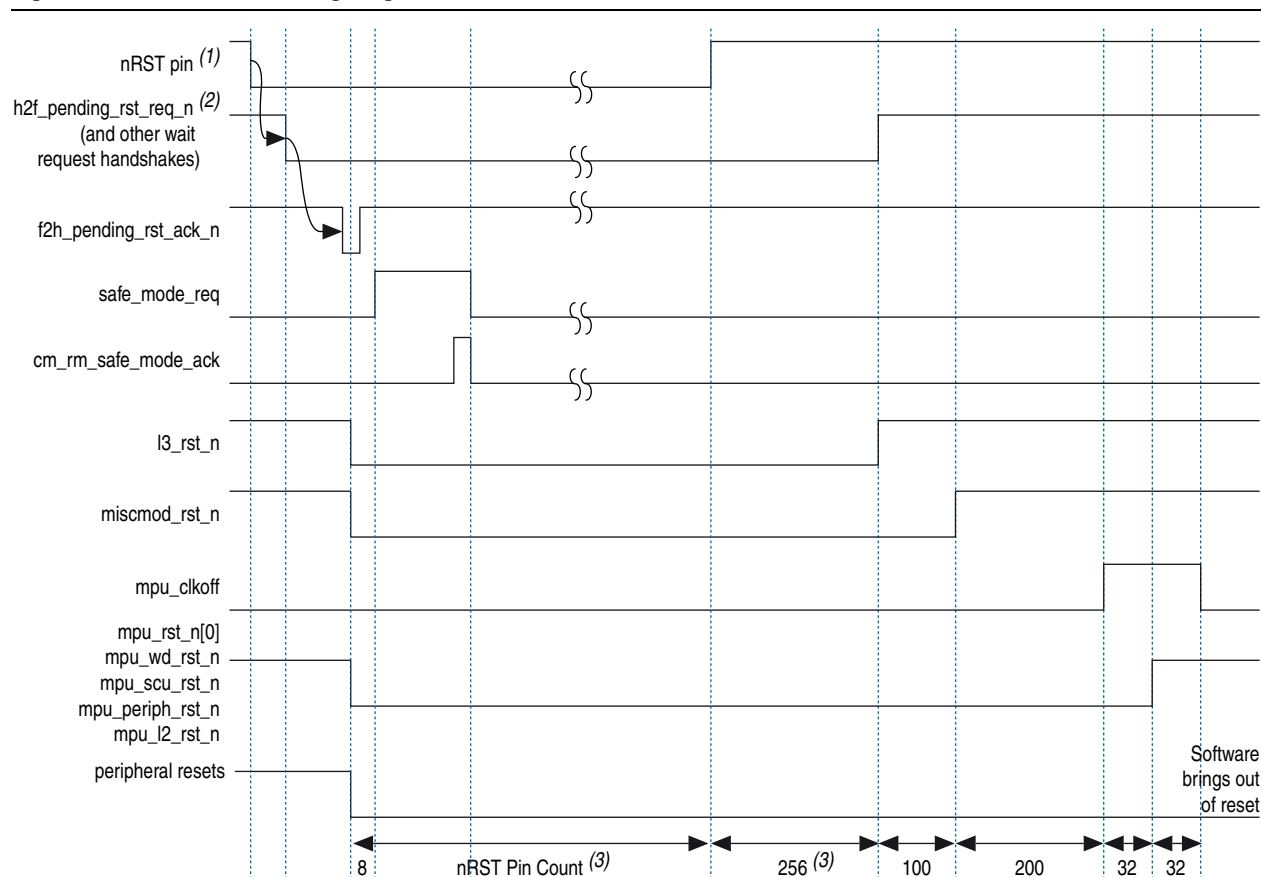Figure 3-4. Warm Reset Timing Diagram



Notes to Figure 3-4:

- (1) Warm reset can be initiated from several other sources. For the complete list, refer to “Reset Controller” on page 3-3.
- (2) For information about the wait request reset handshaking, refer to “Reset Handshaking” on page 3-13.
- (3) When the nRST pin count is zero, the 256 cycle stretch count is skipped and the start of the deassertion sequence is determined by the safe mode acknowledge signal or the user releasing the warm reset button, whichever occurs later.

The cold and warm reset sequences consist of different reset assertion sequences and the same deassertion sequence. The following sections describe the sequences.

Cold Reset Assertion Sequence

The following list describes the assertion steps for cold reset shown in Figure 3-3:

1. Assert module resets.
2. Wait for 32 cycles. Deassert clock manager cold reset.
3. Wait for 96 cycles (so clocks can stabilize).
4. Proceed to the “Cold and Warm Reset Deassertion Sequence”.

Warm Reset Assertion Sequence

The following list describes the assertion steps for warm reset shown in Figure 3-4:

1. Optionally, handshake with the embedded trace router (ETR) and wait for acknowledge.
2. Optionally, handshake with the FPGA fabric and wait for acknowledge.
3. Optionally, handshake with the SDRAM controller, scan manager, and FPGA manager, and wait for acknowledges.
4. Assert module resets (except the MPU watchdog timer resets when the MPU watchdog timers are the only request sources).
5. Wait for 8 cycles and send a safe mode request to the clock manager.
6. Wait for the greater of the nRST pin count + 256 stretch count, or the warm reset counter, or the clock manager safe mode acknowledge, then deassert all handshakes except warm reset ETR handshake (which is deasserted by software).
7. Proceed to the **“Cold and Warm Reset Deassertion Sequence”**.

Cold and Warm Reset Deassertion Sequence


The following list describes the deassertion steps for both cold and warm reset shown in [Figure 3-3](#) and [Figure 3-4](#):

1. Deassert L3 reset.
2. Wait for 100 cycles. Deassert resets for miscellaneous-type and debug (cold only) modules.
3. Wait for 200 cycles. Assert mpu_clkoff for CPU0 and CPU1.
4. Wait for 32 cycles. Deassert resets for MPU modules.
5. Wait for 32 cycles. Deassert mpu_clkoff for CPU0 and CPU1.
6. Peripherals remain held in reset until software brings them out of reset.

Reset Pins

[Figure 3-5](#) shows all HPS pins related to reset.

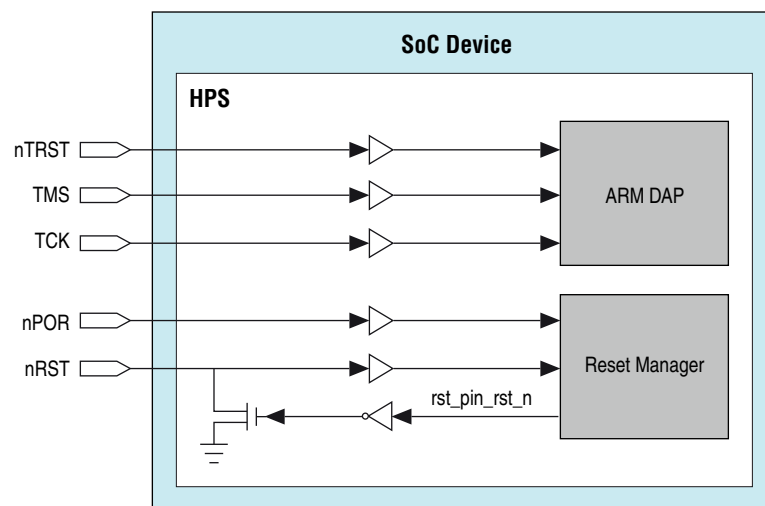Figure 3-5. Reset Pins



The test reset (nTRST), test mode select (TMS), and test clock (TCK) pins are associated with the TAP reset domain and are used to reset the TAP controller in the DAP. These pins are not connected to the reset manager.

The nPOR and nRST pins are used to request cold and warm resets respectively. The nRST pin is an open drain output as well. Any warm reset request causes the reset manager to drive the rst_pin_rst_n signal output low, which drives the nRST pin low. The amount of time the reset manager pulls nRST low is controlled by the nRST pin count field (nrstcnt) of the reset cycles count register (count5). This technique can be used to reset external devices (such as external memories) connected to the HPS.

Reset Effects

The following list describes how reset affects HPS logic:

- The TAP reset domain ignores warm reset.
- The debug reset domain ignores warm reset.
- System reset domain cold resets ignore warm reset.
- Each module defines reset behavior individually.



For more information, refer to the individual chapters in volume 3 of the *Arria V Device Handbook*.

Altering Warm Reset System Response

Registers in the clock manager, system manager, and reset manager control how warm reset affects the HPS. You can control the impact of a warm reset on the clocks and I/O elements.



Altera strongly recommends using Altera-provided libraries to configure and control this functionality.

The default warm reset behavior takes all clocks and I/O elements through a cold reset response. As your software becomes more stable or for debug purposes, you can alter the system response to a warm reset. The following suggestions provide ways to alter the system response to a warm reset. None of the register bits that control these items are affected by warm reset.

- Boot from on-chip RAM—enables warm boot from on-chip RAM instead of the boot ROM. When enabled, the boot ROM code validates the RAM code and jumps to it, making no changes to clocks or any other system settings prior to executing user code from on-chip RAM.
- Disable safe mode on warm reset—allows software to transition through a warm reset without affecting the clocks. Because the boot ROM code indirectly configures the clock settings after warm reset, Altera recommends to only disable safe mode when the HPS is not booting from a flash device.

- Disable safe mode on warm reset for the debug clocks—keeps the debug clocks from being affected by the assertion of safe mode request on a warm reset. This technique allows fast debug clocks, such as trace, to continue running through a warm reset. When enabled, the clock manager puts the debug clocks to their safe frequencies to respond to a safe mode request from the reset manager on a warm reset. Disable safe mode on warm reset for the debug clocks only when you are running the debug clocks off the main PLL VCO and you are certain the main PLL cannot be impacted by the event which caused the warm reset.
- Use the `osc1_clk` clock for debug control—keeps the debug base clock (main PLL C2 output) always bypassed to the `osc1_clk` external clock, independent of other clock manager settings. When implemented, disabling safe mode on warm reset for the debug clocks has no effect.

 For more information about safe mode, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Reset Handshaking

The reset manager participates in several reset handshaking protocols to ensure other modules are safely reset.

Before issuing a warm reset, the reset manager performs a handshake with several modules to allow them to prepare for a warm reset. The handshake logic ensures the following conditions:

- ETR master has no pending master transactions to the L3 interconnect
- Optionally preserve SDRAM contents during warm reset by issuing self-refresh mode request
- FPGA manager stops generating configuration clock
- Scan manager stops generating JTAG and I/O configuration clocks
- Warns the FPGA fabric of the forthcoming warm reset

Similarly, the handshake logic associated with ETR also occurs during the debug reset to ensure that the ETR master has no pending master transactions to the L3 interconnect before the debug reset is issued. This action ensures that when ETR undergoes a debug reset, the reset has no adverse effects on the system domain portion of the ETR.

Reset Manager Address Map and Register Definitions

 The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the link for any of the following module instances:

- **rstmgr**

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.



The base addresses of all modules are also listed in the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 3-4 shows the revision history for this document.

Table 3-4. Document Revision History

Date	Version	Changes
November 2012	1.2	■ Added cold and warm reset timing diagrams. ■ Minor updates.
May 2012	1.1	Added reset controller, functional description, and address map and register definitions sections.
January 2012	1.0	Initial release.

This section includes the following chapters:

- [Chapter 4, Interconnect](#)
- [Chapter 5, HPS-FPGA AXI Bridges](#)



For information about the revision history for chapters in this section, refer to “Document Revision History” in each individual chapter.

The hard processor system (HPS) level 3 (L3) interconnect and level 4 (L4) peripheral buses are implemented with the ARM® CoreLink™ Network Interconnect (NIC-301). The NIC-301 provides a foundation for a high-performance HPS interconnect based on the ARM Advanced Microcontroller Bus Architecture (AMBA®) Advanced eXtensible Interface (AXI™), Advanced High-Performance Bus (AHB™), and Advanced Peripheral Bus (APB™) protocols. The L3 interconnect implements a multilayer, nonblocking architecture that supports multiple simultaneous transactions between masters and slaves, including the Cortex™-A9 microprocessor unit (MPU) subsystem. The interconnect provides five independent L4 buses to access control and status registers (CSRs) of peripherals, managers, and memory controllers



Additional information is available in the *AMBA Network Interconnect (NIC-301) Technical Reference Manual*, which you can download from the ARM website (infocenter.arm.com).

Features of the Interconnect

The L3 interconnect has the following characteristics:

- Main internal data width of 64 bits
- Programmable master priority with single-cycle arbitration
- Full pipelining to prevent master stalls
- Programmable control for FIFO buffer transaction release
- Security of the following types:
 - Secure
 - Nonsecure
 - Per transaction security
- Five independent L4 buses

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.


Portions © 2011 ARM Limited. Used with permission. All rights reserved. ARM, the ARM Powered logo, AMBA, Jazelle, StrongARM, Thumb, and TrustZone are registered trademarks of ARM Limited. The ARM logo, Angel, ARMulator, AHB, APB, ASB, ATB, AXI, CoreSight, Cortex, EmbeddedICE, ModelGen, MPCore, Multi-ICE, NEON, PrimeCell, ARM7TDMI, ARM7TDMI-S, ARM9TDMI, ARM9E-S, ARM966E-S, ETM7, ETM9, TDMI and STRONG are trademarks of ARM Limited. All other products or services mentioned herein may be trademarks of their respective owners. Neither the whole nor any part of the information contained in, or the product described in, this document may be adapted or reproduced in any material form except with the prior written permission of the copyright holder. The product described in this document is subject to continuous developments and improvements. All particulars of the product and its use contained in this document are given by ARM in good faith. However, all warranties implied or expressed, including but not limited to implied warranties of merchantability, or fitness for purpose, are excluded. This document is intended only to assist the reader in the use of the product. ARM Limited shall not be liable for any loss or damage arising from the use of any information in this document, or any error or omission in such information, or any incorrect use of the product. Where the term ARM is used it means "ARM or any of its subsidiaries as appropriate". This document is Non-Confidential. The right to use, copy and disclose this document may be subject to license restrictions in accordance with the terms of the agreement entered into by ARM and the party that ARM delivered this document to. The information in this document is final, that is for a developed product.



Interconnect Block Diagram and System Integration

Figure 4–1 shows a block diagram of the L3 interconnect and L4 buses.

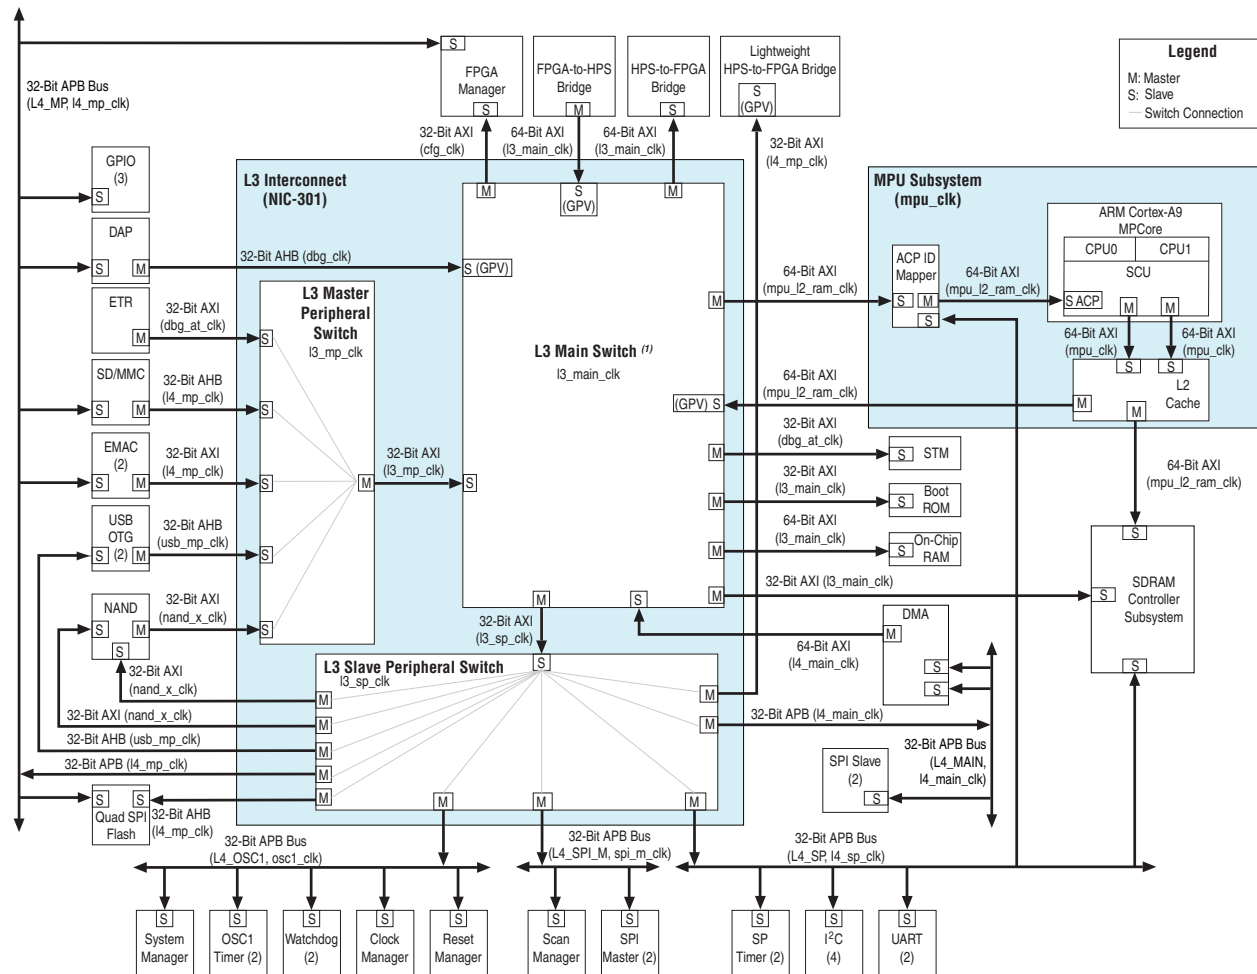Figure 4–1. Interconnect Block Diagram



Note to Figure 4–1:

(1) For L3 main switch connection details, refer to Table 4–1.

The L3 interconnect is a partially-connected switch fabric; not all masters can access all slaves. For more information, refer to “Master-to-Slave Connectivity Matrix” on page 4–6.

Internally, the L3 interconnect is partitioned into the following subswitches:

- L3 main switch
 - Main switch used to transfer high-throughput 64-bit data
 - Operates at up to half the MPU main clock frequency
 - Provides masters with low-latency connectivity to AXI bridges, on-chip memories, SDRAM, and FPGA manager

- L3 master peripheral switch
 - Used to connect memory-mastering peripherals to the main switch
 - 32-bit data width
 - Operates at up to half the main switch clock frequency
- L3 slave peripheral switch
 - Used to provide access to level 3 and 4 slave interfaces for masters of the master peripheral and main switches
 - 32-bit data width
 - Five independent L4 buses

The L3 master and slave peripheral switches are fully-connected crossbars. The L3 main switch is a partially-connected crossbar. Table 4–1 shows the connectivity matrix of all the master and slave interfaces of the L3 main switch. Checkmarks denote connections.

Table 4–1. L3 Main Switch Connectivity Matrix

Masters	Slaves							
	L3 Slave Peripheral Switch	FPGA Manager	HPS-to-FPGA Bridge	ACP ID Mapper Data	STM	Boot ROM	On-Chip RAM	SDRAM Controller Subsystem L3 Data
L3 Master Peripheral Switch			✓	✓			✓	✓
L2 Cache Master 0	✓	✓	✓		✓	✓	✓	
FPGA-to-HPS Bridge	✓			✓	✓		✓	✓
DMA	✓	✓	✓	✓	✓		✓	✓
DAP	✓	✓	✓	✓			✓	✓

L3 Masters

The following list contains all of the master interfaces connected to the L3 interconnect:

- MPU subsystem—L2 cache master 0 connected to the L3 main switch
- FPGA-to-HPS bridge—Connected to the L3 main switch
- DMA—Connected to the L3 main switch
- EMAC0—Connected to the L3 master peripheral switch
- EMAC1—Connected to the L3 master peripheral switch
- USB0—Connected to the L3 master peripheral switch
- USB1—Connected to the L3 master peripheral switch
- NAND—Connected to the L3 master peripheral switch
- SD/MMC—Connected to the L3 master peripheral switch

- ETR—Connected to the L3 master peripheral switch
- DAP—Connected to the L3 main switch

L3 Slaves

The following list contains all of the slave interfaces connected to the L3 interconnect:

- USB0—CSR slave interface connected to the L3 slave peripheral switch
- USB1—CSR slave interface connected to the L3 slave peripheral switch
- NAND registers—CSR slave interface connected to the L3 slave peripheral switch
- NAND data—Command and data slave interface connected to the L3 slave peripheral switch
- Quad SPI flash—Data slave interface connected to the L3 slave peripheral switch
- FPGA manager—Data slave interface connected to the L3 main switch
- HPS-to-FPGA bridge—Data slave interface connected to the L3 main switch
- Lightweight HPS-to-FPGA bridge—Data slave interface connected to the L3 slave peripheral switch
- ACP ID mapper—Data slave interface connected to the L3 main switch
- STM—Connected to the L3 main switch
- Boot ROM—Connected to the L3 main switch
- On-chip RAM—Connected to the L3 main switch
- SDRAM controller subsystem—SDRAM multi-port front end slave interface connected to the L3 main switch

L4 Slaves

Each of the L4 slaves is an APB slave connected to one of the five following L4 buses:

- L4 slave peripheral (SP) bus—APB for peripherals that do not require fast access
 - SDRAM controller subsystem—CSR access
 - SP timer 0—CSR access
 - SP timer 1—CSR access
 - I2C0—CSR access
 - I2C1—CSR access
 - I2C2 (associated with EMAC0)—CSR access
 - I2C3 (associated with EMAC1)—CSR access
 - UART0—CSR access
 - UART1—CSR access
 - CAN0—CSR access
 - CAN1—CSR access

- L4 master peripheral (MP) bus—APB that provides access to primarily the L3 master peripherals.
 - ACP ID mapper—CSR access
 - FPGA manager—CSR access
 - DAP—CSR access
 - Quad SPI flash—CSR access
 - SD/MMC—CSR access
 - EMAC0—CSR access
 - EMAC1—CSR access
 - GPIO0—CSR access
 - GPIO1—CSR access
 - GPIO2—CSR access
- L4 oscillator 1 (OSC1) bus—APB dedicated to peripherals that operate on the external oscillator 1 domain.
 - OSC1 timer 0—CSR access
 - OSC1 timer 1—CSR access
 - Watchdog 0—CSR access
 - Watchdog 1—CSR access
 - Clock manager—CSR access
 - Reset manager—CSR access
 - System manager—CSR access
- L4 main bus—APB dedicated to the DMA and SPI slaves
 - DMA_s—Access to the DMA controllers secure registers
 - DMA_ns—Nonsecure access to the DMA controller nonsecure registers
 - SPI slave 0—CSR access
 - SPI slave 1—CSR access
- L4 SPI master (SPIM) bus—APB dedicated to the SPI masters and scan manager.
 - SPI master 0—CSR access
 - SPI master 1—CSR access
 - Scan manager—CSR access

Functional Description of the Interconnect

This section provides a functional description of the interconnect.

Master-to-Slave Connectivity Matrix

The interconnect is a partially-connected crossbar. Table 4–2 shows the connectivity matrix of all the master and slave interfaces of the interconnect. Checkmarks denote connections.

Table 4–2. Interconnect Connectivity Matrix

Masters	Slaves															
	L4 SP Bus Slaves	L4 MP Bus Slaves	L4 OSC1 Bus Slaves	L4 MAIN Bus Slaves	L4 SPIM Bus Slaves	Lightweight HPS-to-FPGA Bridge	USB OTG 0/1 CSR	NAND CSR	NAND Command and Data	Quad SPI Flash Data	FPGA Manager	HPS-to-FPGA Bridge	ACP ID Mapper Data	STM	Boot ROM	On-Chip RAM
L2 Cache Master 0	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		✓	✓	✓
FPGA-to-HPS Bridge	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓			✓	✓		✓
DMA	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓		✓
EMAC 0/1												✓	✓			✓
USB OTG 0/1												✓	✓			✓
NAND												✓	✓			✓
SD/MMC												✓	✓			✓
ETR												✓				✓
DAP	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓			✓

Address Remapping

The interconnect supports address remapping through the remap register. Remapping allows software to control which memory device (SDRAM, on-chip RAM, or boot ROM) is accessible at address 0x0 and the accessibility of the HPS-to-FPGA and lightweight HPS-to-FPGA bridges. The remap register is one of the NIC-301 Global Programmers View (GPV) registers and maps into the address space of the following L3 masters:

- MPU
- FPGA-to-HPS bridge
- DAP

The remapping bits in the remap register are not mutually exclusive. The lowest order remap bit has higher priority when multiple slaves are remapped to the same address. Each bit allows different combinations of address maps to be formed. There is only one remapping register available in the GPV, so modifying the remap register affects all memory maps of all the masters of the interconnect.


The effects of the remap bits can be categorized in the following groups:

- MPU master interface
 - L2 cache master 0 interface

- Non-MPU master interfaces
 - DMA master interface
 - Master peripheral interfaces
 - Debug Access Port (DAP) master interface
 - FPGA-to-HPS bridge master interface

Figure 4–2 shows the interconnect address map for all MPU and non-MPU masters. The figure is not to scale.

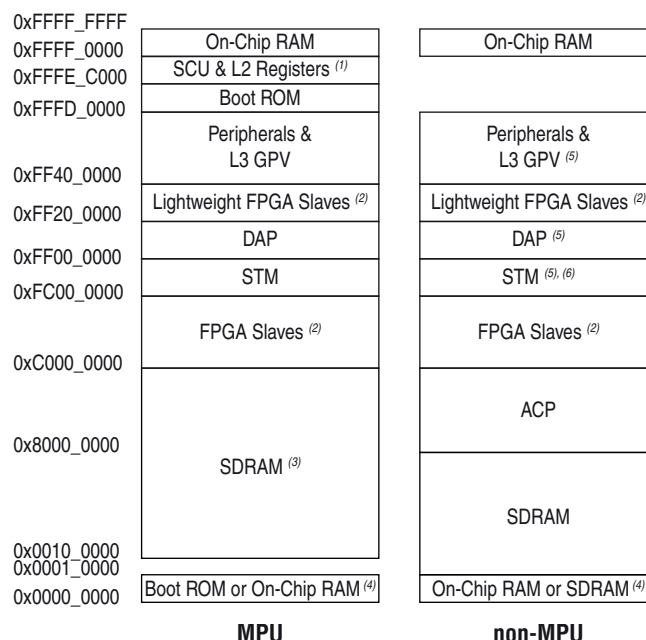Figure 4–2. Address Map per Master



Notes to Figure 4–2:

- (1) The SCU and L2 cache registers are located in the MPU subsystem and are not accessible from the L3 interconnect.
- (2) This address range is not always accessible. For more information, refer to [Table 4–3](#).
- (3) The MPU subsystem has one master that connects to the interconnect and another master that connects directly to the SDRAM controller subsystem. The address filter registers in the MPU L2 control which MPU addresses are sent to each master. This figure assumes the filter registers contain their reset values.
- (4) This address range is configurable. For more information, refer to [Table 4–3](#).
- (5) This address range is not accessible from the master peripheral interfaces. For more information, refer to “[Master-to-Slave Connectivity Matrix](#)” on page 4–6.
- (6) This address range is not accessible from the DAP interface. For more information, refer to “[Master-to-Slave Connectivity Matrix](#)” on page 4–6.

For the MPU L3 master, either the boot ROM or on-chip RAM maps to address 0x0 and obscures the lowest 64 K of SDRAM. The address space from 0x0001_0000 to 0x0010_0000 is not accessible because the MPU L2 filter registers only have a granularity of 1 MB. After booting completes, the MPU can change address filtering to use the lowest 1 MB of SDRAM.

For non-MPU masters, either the on-chip RAM or the SDRAM maps to address 0x0. When mapped to address 0x0, the on-chip RAM obscures the lowest 64 K of SDRAM for non-MPU masters.

Table 4–3 lists how the remap bits affect the memory maps.

Table 4–3. Memory Map Remap Bits

Bit Name	Bit Offset	Description
mpuzero	0	When set to 0, the boot ROM maps to address 0x0 for the MPU L3 master. When set to 1, the on-chip RAM maps to address 0x0 for the MPU L3 master. This bit has no effect on non-MPU masters. Note that regardless of this setting, the boot ROM also always maps to address 0xfffd_0000 and the on-chip RAM also always maps to address 0xffff_0000 for the MPU L3 master.
nonmpuzero	1	When set to 0, the SDRAM maps to address 0x0 for the non-MPU L3 masters. When set to 1, the on-chip RAM maps to address 0x0 for the non-MPU masters. This bit has no effect on the MPU L3 master. Note that regardless of this setting, the on-chip RAM also always maps to address 0xffff_0000 for the non-MPU L3 masters.
Reserved	2	Must always be set to 0.
hps2fpga	3	When set to 1, the HPS-to-FPGA bridge slave port is visible to the L3 masters. When set to 0, accesses to the associated address range return an AXI decode error to the master.
lwhp2fpga	4	When set to 1, the lightweight HPS-to-FPGA bridge slave port is visible to the L3 masters. When set to 0, accesses to the associated address range return an AXI decode error to the master.
Reserved	31:5	Must always be set to 0.



L2 filter registers in the MPU subsystem, not the interconnect, allow the SDRAM to be remapped to address 0 for the MPU. For more information about the MPU subsystem, refer to the *Cortex-A9 MPU Subsystem* chapter in volume 3 of the *Arria V Device Handbook*.

Master Caching and Buffering Overrides

Some of the masters of the interconnect do not have the ability to drive the caching and buffering signals of their AXI and AHB interfaces. In order to ensure that these masters can perform transfers efficiently, the registers are available from the system manager so that you can enable cacheable and bufferable transactions. The following masters have their caching and buffering signals driven by the system manager:

- EMAC0 and EMAC1
- USB OTG 0 and USB OTG 1
- NAND flash
- SD/MMC

At reset time, the system manager drives the cache and buffering signals for these masters low. In other words, the masters listed do not support cacheable or bufferable accesses until you enable them after reset. There is no synchronization between the system manager and the interconnect, so avoid changing these settings when any of the masters are active. For more information about enabling or disabling this feature, refer to the *System Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Security

Slave Security

The interconnect enforces security through the slave settings. The slave settings are controlled by the address region control registers accessible through the GPV registers. Each L3 and L4 slave has its own security check and programmable security settings. After reset, every slave of the interconnect is set to a secure state (referred to as boot secure). The only accesses allowed to secure slaves are by secure masters.

The GPV can only be accessed by secure masters. The security state of the interconnect is not accessible through the GPV as the security registers are write-only. Any nonsecure accesses to the GPV receive a DECERR response, and no register access is provided. Updates to the security settings through the GPV do not take effect until all transactions to the affected slave have completed.

Master Security

Masters of the interconnect are either secure, nonsecure, or the security is set on a per transaction basis. The DAP is capable of performing only secure accesses. The L2 cache master 0, FPGA-to-HPS-bridge, and DMA perform secure and nonsecure accesses on a per transaction basis. All other interconnect masters perform nonsecure accesses. For more information, refer to [“Interconnect Master Properties” on page 4–10](#).

Accesses to secure slaves by unsecure masters result in a response of DECERR and the transaction does not reach the slave.

Arbitration

At the entry point to the interconnect, all transactions are allocated a local quality of service (QoS) value that you can programmatically configure. The arbitration of the transaction throughout the infrastructure uses this QoS value. The QoS controls for each master connected to the interconnect are separated into read and write QoS priority values.

At any arbitration node, a fixed priority exists for transactions with different QoS values. The highest QoS value has the highest priority. If there are coincident transactions at an arbitration node with the same QoS value that require arbitration, then the interconnect uses a least recently used (LRU) algorithm.

Cyclic Dependency Avoidance Schemes

The AXI protocol permits re-ordering of transactions. As a result, when routing concurrent multiple transactions from a single point of divergence to multiple slaves, the interconnect might need to enforce rules to prevent deadlock.

Each master of the interconnect is configured with one of three possible cyclic dependency avoidance schemes (CDAS). The same CDAS scheme is configured for both read and write transactions, but they operate independently. The CDAS implementation for the masters is described in [“Interconnect Master Properties” on page 4–10](#).

The following schemes are available:

- Single Slave
- Single Slave Per ID
- Single Active Slave

Single Slave

Single slave (SS) ensures the following conditions at a slave interface of a switch:

- All outstanding read transactions are to a single end destination.
- All outstanding write transactions are to a single end destination.

If a master issues another transaction to a different destination than the current destination for that transaction type (read or write), the network stalls the transactions until all the outstanding transactions of that type have completed.

Single Slave Per ID

Single slave per ID (SSPID) ensures the following conditions at a slave interface of a switch:

- All outstanding read transactions with the same ID go the same destination.
- All outstanding write transactions with the same ID go the same destination.

When a master issues a transaction, the following situations can occur:

- If the transaction has an ID that does not match any outstanding transactions, it passes the CDAS.
- If the transaction has an ID that matches the ID of an outstanding transaction, and the destinations also match, it passes the CDAS.
- If the transaction has an ID that matches the ID of an outstanding transaction, and the destinations do not match, the transaction fails the CDAS check and stalls.

Single Active Slave

Single active slave (SAS) is the same as the SSPID scheme, with an added check for write transactions. SAS ensures that a master cannot issue a new write address until all of the data from the previous write transaction has been sent.

Interconnect Master Properties

The interconnect connects to various slave interfaces through the L3 main switch and L3 slave peripheral switch.

Table 4-4 shows all the master interfaces connected to the interconnect.

Table 4-4. Interconnect Master Interfaces (Part 1 of 2)

Master	Interface Width	Clock	Switch	Security	GPV Access	CDAS	Issuance ⁽¹⁾	Buffer Depth ⁽²⁾	Type
L2 cache M0	64	mpu_l2_ram_clk	L3 main switch	Per Transaction	Yes	SSPID	7, 12, 19	2, 2, 2, 2, 2	AXI
FPGA-to-HPS bridge	64	l3_main_clk	L3 main switch	Per Transaction	Yes	SAS	16, 16, 32	2, 2, 6, 6, 2	AXI

Table 4-4. Interconnect Master Interfaces (Part 2 of 2)

Master	Interface Width	Clock	Switch	Security	GPV Access	CDAS	Issuance ⁽¹⁾	Buffer Depth ⁽²⁾	Type
DMA	64	l4_main_clk	L3 main switch	Per Transaction	No	SSPID	8, 8, 8	2, 2, 2, 2, 2	AXI
EMAC 0/1	32	l4_main_clk	L3 master peripheral switch	Nonsecure	No	SSPID	16, 16, 32	2, 2, 2, 2, 2	AXI
USB OTG 0/1	32	usb_mp_clk	L3 master peripheral switch	Nonsecure	No	SSPID	2, 2, 4	2, 2, 2	AHB
NAND	32	nand_x_clk	L3 master peripheral switch	Nonsecure	No	SSPID	1, 8, 9	2, 2, 2, 2, 2	AXI
SD/MMC	32	l4_mp_clk	L3 master peripheral switch	Nonsecure	No	SSPID	2, 2, 4	2, 2, 2	AHB
ETR	32	dbg_at_clk	L3 master peripheral switch	Nonsecure	No	SSPID	32, 1, 32	2, 2, 2, 2, 2	AXI
DAP	32	dbg_clk	L3 main switch	Secure	Yes	SS	1, 1, 1	2, 2, 2	AHB

Notes to Table 4-4:

- (1) Issuance is based on the number of read, write, and total transactions.
- (2) The FIFO buffer depth for AXI is based on the AW, AR, R, W, and B channels. For AHB and APB, the depth is based on W, A, and D channels.

Interconnect Slave Properties

The interconnect connects to various slave interfaces through the L3 main switch, L3 slave peripheral switch, and the five L4 peripheral buses. After reset, all slave interfaces are set to the secure state.

Table 4-5 shows all the slave interfaces connected to the interconnect.

Table 4-5. Interconnect Slave Interfaces (Part 1 of 3)

Slave	Interface Width	Clock	Mastered By	Acceptance ⁽¹⁾	Buffer Depth ⁽²⁾	Interface Type
SDRAM subsystem CSR	32	l4_sp_clk	L4 SP bus master	1, 1, 1	2, 2, 2	APB
SP timer 0/1	32	l4_sp_clk	L4 SP bus master	1, 1, 1	2, 2, 2	APB
I ² C 0/1/2/3	32	l4_sp_clk	L4 SP bus master	1, 1, 1	2, 2, 2	APB
UART 0/1	32	l4_sp_clk	L4 SP bus master	1, 1, 1	2, 2, 2	APB
CAN 0/1	32	l4_sp_clk	L4 SP bus master	1, 1, 1	2, 2, 2	APB
GPIO 0/1/2	32	l4_mp_clk	L4 SP bus master	1, 1, 1	2, 2, 2	APB
ACP ID mapper CSR	32	l4_mp_clk	L4 SP bus master	1, 1, 1	2, 2, 2	APB
FPGA manager CSR	32	l4_mp_clk	L4 SP bus master	1, 1, 1	2, 2, 2	APB
DAP CSR	32	l4_mp_clk	L4 SP bus master	1, 1, 1	2, 2, 2	APB

Table 4-5. Interconnect Slave Interfaces (Part 2 of 3)

Slave	Interface Width	Clock	Mastered By	Acceptance ⁽¹⁾	Buffer Depth ⁽²⁾	Interface Type
Quad SPI flash CSR	32	l4_mp_clk	L4 SP bus master	1, 1, 1	2, 2, 2	APB
SD/MMC CSR	32	l4_mp_clk	L4 SP bus master	1, 1, 1	2, 2, 2	APB
EMAC 0/1 CSR	32	l4_mp_clk	L4 SP bus master	1, 1, 1	2, 2, 2	APB
System manager	32	osc1_clk	L4 OSC1 bus master	1, 1, 1	2, 2, 2	APB
OSC1 timer 0/1	32	osc1_clk	L4 OSC1 bus master	1, 1, 1	2, 2, 2	APB
Watchdog 0/1	32	osc1_clk	L4 OSC1 bus master	1, 1, 1	2, 2, 2	APB
Clock manager	32	osc1_clk	L4 OSC1 bus master	1, 1, 1	2, 2, 2	APB
Reset manager	32	osc1_clk	L4 OSC1 bus master	1, 1, 1	2, 2, 2	APB
DMA secure CSR	32	l4_main_clk	L4 main bus master	1, 1, 1	2, 2, 2	APB
DMA nonsecure CSR	32	l4_main_clk	L4 main bus master	1, 1, 1	2, 2, 2	APB
SPI slave 0/1	32	l4_main_clk	L4 main bus master	1, 1, 1	2, 2, 2	APB
Scan manager	32	spi_m_clk	L4 main bus master	1, 1, 1	2, 2, 2	APB
SPI master 0/1	32	spi_m_clk	L4 main bus master	1, 1, 1	2, 2, 2	APB
Lightweight HPS-to-FPGA bridge	32	l4_main_clk	L3 slave peripheral switch	16, 16, 32	2, 2, 2, 2, 2	AXI
USB OTG 0/1	32	usb_mp_clk	L3 slave peripheral switch	1, 1, 1	2, 2, 2	AHB
NAND CSR	32	nand_x_clk	L3 slave peripheral switch	1, 1, 1	2, 2, 2	AXI
NAND command and data	32	nand_x_clk	L3 slave peripheral switch	1, 1, 1	2, 2, 2	AXI
Quad SPI flash data	32	l4_mp_clk	L3 slave peripheral switch	1, 1, 1	2, 2, 2	AHB
FPGA manager data	32	cfg_clk	L3 main switch	1, 2, 3	2, 2, 2, 32, 2	AXI
HPS-to-FPGA bridge	64	l3_main_clk	L3 main switch	16, 16, 32	2, 2, 6, 6, 2	AXI
ACP ID mapper data	64	mpu_l2_ram_clk	L3 main switch	13, 5, 18	2, 2, 2, 2, 2	AXI
STM	32	dbg_at_clk	L3 main switch	1, 2, 2	2, 2, 2, 2, 2	AXI
On-chip boot ROM	32	l3_main_clk	L3 main switch	1, 1, 2	0, 0, 0, 0, 0	AXI
On-chip RAM	64	l3_main_clk	L3 main switch	2, 2, 2	0, 0, 0, 8, 0	AXI

Table 4-5. Interconnect Slave Interfaces (Part 3 of 3)

Slave	Interface Width	Clock	Mastered By	Acceptance ⁽¹⁾	Buffer Depth ⁽²⁾	Interface Type
SDRAM subsystem L3 data	32	l3_main_clk	L3 main switch	16, 16, 16	2, 2, 2, 2, 2	AXI
Notes to Table 4-5: (1) Acceptance is based on the number of read, write, and total transactions. (2) The FIFO buffer depth for AXI is based on the AW, AR, R, W, and B channels. For AHB and APB, the depth is based on the W, A, and D channels.						

Upsizing Data Width Function

The upsizing function combines narrow transactions into wider transactions to increase the overall system bandwidth. Upsizing only packs data for read or write transactions that are cacheable. If the interconnect splits input-exclusive transactions into more than one output bus transaction, it removes the exclusive information from the multiple transactions it creates.

The upsizing function can expand the data width by the following ratios:

- 1:2
- 1:4

If multiple responses from created transactions are combined into one response, then the following order of priority applies:

- DECERR is the highest priority
- SLVERR is the next highest priority
- OKAY is the lowest priority.



For more information about AXI terms such as DECERR, WRAP, and INCR, refer to the *AMBA AXI Protocol Specification v1.0*, which you can download from the ARM website (infocenter.arm.com).

Incrementing Bursts

The interconnect converts all input INCR bursts that complete within a single output data width to an INCR1 burst of the minimum SIZE possible, and packs all INCR bursts into INCR bursts of the optimal size possible for maximum data throughput.

Wrapping Bursts

All WRAP bursts are either passed through unconverted as WRAP bursts, or converted to one or two INCR bursts of the output bus. The interconnect converts input WRAP bursts that have a total payload less than the output data width to a single INCR burst.

Fixed Bursts

All FIXED bursts pass through unconverted.

Bypass Merge

If the programmable bit `bypass_merge` is enabled, the interconnect does not alter any transactions that could pass through legally without alteration. Bypass merge is accessible through the GPV registers and is only accessible to secure masters.

Downsizing Data Width Function

The downsizing function reduces the data width of a transaction to match the optimal data width at the destination. Downsizing does not merge multiple-transaction data narrower than the destination bus if the transactions are marked as noncacheable.

The downsizing function reduces the data width by the following ratios:

- 2:1
- 4:1

Incrementing Bursts

The interconnect converts INCR bursts that fall within the maximum payload size of the output data bus to a single INCR burst. It converts INCR bursts that are greater than the maximum payload size of the output data bus to multiple INCR bursts.

INCR bursts with a size that matches the output data width pass through unconverted.

The interconnect packs INCR bursts with a SIZE smaller than the output data width to match the output width whenever possible, using the upsizing function. For more information, refer to [“Upsizing Data Width Function” on page 4-13](#).

Wrapping Bursts

The interconnect always converts WRAP bursts to WRAP bursts of twice the length, up to the output data width maximum size of WRAP16, and treats the WRAP burst as two INCR bursts that can each be converted into one or more INCR bursts.

Fixed Bursts

The interconnect converts FIXED bursts to one or more INCR1 or INCRn bursts depending on the downsize ratio.

Bypass Merge

If the programmable bit `bypass_merge` is enabled, the interconnect does not perform any packing of beats to match the optimal SIZE for maximum throughput, up to the output data width SIZE. Bypass merge is accessible through the GPV registers and is only accessible to secure masters.

If an exclusive transaction is split into multiple transactions at the output of the downsizing function, the exclusive flag is removed and the master never receives an EXOKAY response. Response priority is the same as for the upsizing function, described in [“Upsizing Data Width Function” on page 4-13](#).

Lock Support

Lock is not supported by the interconnect. For atomic accesses, masters can perform exclusive accesses when sharing data located in the HPS SDRAM.

 For more information about exclusive access support, refer to the *SDRAM Controller Subsystem* chapter in volume 3 of the *Arria V Device Handbook*.

FIFO Buffers and Clocks

The interconnect contains FIFO buffers in the majority of the interfaces exposed to the HPS master and slaves, as well as between the subswitches. These FIFO buffers also provide clock domain crossing for masters and slaves that operate at a different clock frequency than the switch they connect to.

Data Release Mechanism

For network ports containing write data FIFO buffers with a depth of four or greater, you can set a write tidemark function, `wr_tidemark`. This tidemark level stalls the release of the transaction until one of the following situations occurs:

- The interconnect receives the WLAST beat of a burst.
- The write data FIFO buffer becomes full.
- The number of occupied slots in the write data FIFO buffer exceeds the write tidemark.

For more information about which interfaces contain write data FIFO buffers with a depth of four or greater, refer to “*Interconnect Master Properties*” on page 4-10.

Resets

The interconnect has one reset signal. The reset manager drives this signal to the SD/MMC controller on a cold or warm reset. On reset, the boot ROM is mapped to address 0x0. The DAP virtually maps to ID 2.

 For more information about resets, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*. For information about virtual ID mapping by the ACP ID mapper, refer to the *Cortex-A9 MPU Subsystem* chapter in volume 3 of the *Arria V Device Handbook*.

Interconnect Address Map and Register Definitions

 The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the link for the following module instance:

- **l3regs**

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.

 The base addresses of all modules are also listed in the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 4–6 shows the revision history for this document.

Table 4–6. Document Revision History

Date	Version	Changes
November 2012	1.2	Minor updates.
June 2012	1.1	■ Added main switch connectivity matrix table. ■ Rearranged functional description sections. ■ Simplified address remapping section. ■ Added address map and register definitions section.
January 2012	1.0	Initial release.

This chapter describes the bridges in the hard processor system (HPS) used to communicate data between the FPGA fabric and HPS logic. The bridges use the Advanced Microcontroller Bus Architecture (AMBA®) Advanced eXtensible Interface (AXI™) protocol, and are based on the AMBA Network Interconnect (NIC-301).



Additional information is available in the *AMBA AXI Protocol Specification v1.0* and the *AMBA Network Interconnect (NIC-301) Technical Reference Manual*, which you can download from the ARM website (infocenter.arm.com).

The HPS contains the following HPS-FPGA AXI bridges:

- **FPGA-to-HPS Bridge**
- **HPS-to-FPGA Bridge**
- **Lightweight HPS-to-FPGA Bridge**

Features of the AXI Bridges

The HPS-FPGA AXI bridges allow masters in the FPGA fabric to communicate with slaves in the HPS logic and vice versa. For example, you can instantiate additional memories or peripherals in the FPGA fabric, and master interfaces belonging to components in the HPS logic can access them. You can also instantiate components such as a Nios® II processor in the FPGA fabric and their master interfaces can access memories or peripherals in the HPS logic.

The AXI bridges provide the features listed in [Table 5-1](#).

Table 5-1. AXI Bridge Features

Feature	FPGA-to-HPS Bridge	HPS-to-FPGA Bridge	Lightweight HPS-to-FPGA Bridge
Supports the AMBA AXI3 interface protocol	✓	✓	✓
Implements clock crossing and manages the transfer of data across the clock domains in the HPS logic and the FPGA fabric	✓	✓	✓
Performs data width conversion between the HPS logic and the FPGA fabric	✓	✓	✓
Allows configuration of FPGA interface widths at instantiation time	✓	✓	

Each bridge consists of an AXI master-slave pair with one interface exposed to the FPGA fabric and the other exposed to the HPS logic. The HPS-to-FPGA and lightweight HPS-to-FPGA bridges expose an AXI master interface that you can connect to AXI or Avalon-MM slave interfaces in the FPGA fabric. The FPGA-to-HPS bridge exposes an AXI slave interface that you can connect to AXI master or Avalon-MM interfaces in the FPGA fabric.




For information about configuring the AXI bridges, refer to the *Instantiating the HPS Component* chapter in volume 3 of the *Arria V Device Handbook*.

AXI Bridges Block Diagram and System Integration

Figure 5–1 shows a block diagram of the AXI bridges in the context of the FPGA fabric and the L3 interconnect to the HPS. Each master (M) and slave (S) interface is shown with its data width(s). The clock domain for each interconnect is shown in parentheses. The clock domains are described in “Clocks and Resets” on page 5–12.

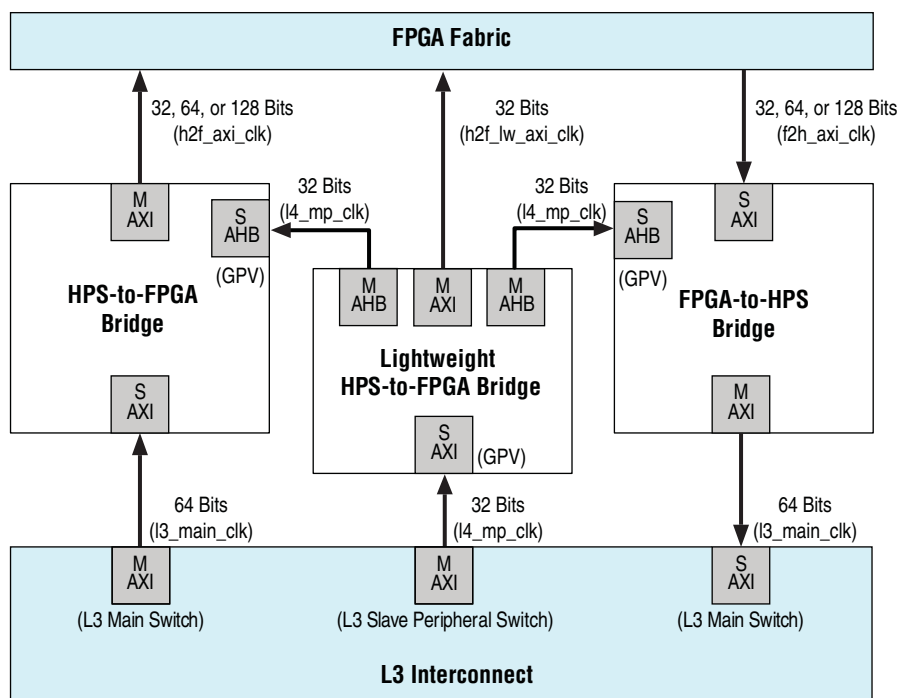Figure 5–1. AXI Bridge Connectivity



The HPS-to-FPGA bridge is mastered by the level 3 (L3) main switch and the lightweight HPS-to-FPGA bridge is mastered by the L3 slave peripheral switch.

The FPGA-to-HPS bridge masters the L3 main switch, allowing any master implemented in the FPGA fabric to access most slaves in the HPS. For example, the FPGA-to-HPS bridge can access the accelerator coherency port (ACP) of the Cortex-A9 MPU subsystem to perform cache-coherent accesses to the SDRAM subsystem.

All three bridges contain global programmers view (GPV) registers. The GPV registers control the behavior of the bridge. Access to the GPV registers of all three bridges is provided through the lightweight HPS-to-FPGA bridge.



For more information about connectivity, such as which masters have access to each bridge, refer to the *Interconnect* chapter in volume 3 of the *Arria V Device Handbook*.

Functional Description of the AXI Bridges

The Global Programmers View

The HPS-to-FPGA bridge includes a set of registers called the GPV. The GPV provides settings to control the bridge properties and behavior. Access to the GPV registers of all three bridges is provided through the lightweight HPS-to-FPGA bridge.

The GPV registers can only be accessed by secure masters in the HPS or the FPGA fabric.

FPGA-to-HPS Bridge

The FPGA-to-HPS bridge provides access to the peripherals and memory in the HPS. This access is available to any master implemented in the FPGA fabric. You can configure the bridge slave, which is exposed to the FPGA fabric, to support 32-, 64-, or 128-bit data. The master interface of the bridge, connected to the L3 interconnect, has a data width of 64 bits.

Table 5–2 lists the properties of the FPGA-to-HPS bridge, including the configurable slave interface exposed to the FPGA fabric.

Table 5–2. FPGA-to-HPS Bridge Properties

Bridge Property	FPGA Slave Interface	L3 Master Interface
Data width ⁽¹⁾	32, 64, or 128 bits	64 bits
Clock domain	f2h_axi_clk	l3_main_clk
Byte address width	32 bits	32 bits
ID width	8 bits	8 bits
Read acceptance	16 transactions	16 transactions
Write acceptance	16 transactions	16 transactions
Total acceptance	32 transactions	32 transactions
Note to Table 5–2:		
(1) The bridge slave data width is user-configurable at the time you instantiate the HPS component in your system.		

The FPGA-to-HPS bridge contains a GPV, described in “*The Global Programmers View*”. The GPV registers provide settings that adjust the bridge slave properties when the FPGA slave interface is configured to be 32 or 128 bits wide. The slave issuing capability can be adjusted, through the `fn_mod` register, to allow one or multiple transactions to be outstanding in the HPS. The slave bypass merge feature can also be enabled, through the `bypass_merge` bit in the `fn_mod2` register. This feature ensures that the upsizing and downsizing logic does not alter any transactions when the FPGA slave interface is configured to be 32 or 128 bits wide.



It is critical to provide the correct `l4_mp_clk` clock to support access to the GPV, as described in “GPV Clocks” on page 5-13.

FPGA-to-HPS Access to ACP

When the error correction code (ECC) option is enabled in the level 2 (L2) cache controller, all accesses from the FPGA-to-HPS bridge to the ACP must be 64 bits wide and aligned on 8-byte boundaries after up- or downsizing takes place.

Table 5-3 lists some possible master and FPGA-to-HPS bridge slave configurations that support accesses to the L2 cache with ECC enabled.

Table 5-3. FPGA Master and FPGA-to-HPS Bridge Configurations

Soft Logic Master Width	Soft Logic Master Alignment	Soft Logic Master Burst Size (Width)	Soft Logic Master Burst Length	FPGA-to-HPS Bridge Slave Width
32 bits	8 bytes	4 bytes	2, 4, 6, 8, 10, 12, 14, or 16 beats	32 bits
64 bits	8 bytes	8 bytes	1 to 16 beats	32 bits
128 bits	8 or 16 bytes	8 or 16 bytes	1 to 16 beats	32 bits
32 bits	8 bytes	4 bytes	2, 4, 6, 8, 10, 12, 14, or 16 beats	64 bits
64 bits	8 bytes	8 bytes	1 to 16 beats	64 bits
128 bits	8 or 16 bytes	8 or 16 bytes	1 to 16 beats	64 bits
32 bits	8 bytes	4 bytes	2, 4, 6, 8, 10, 12, 14, or 16 beats	128 bits
64 bits	8 bytes	8 bytes	1 to 16 beats	128 bits
128 bits	8 or 16 bytes	8 or 16 bytes	1 to 16 beats	128 bits



For more information about the ECC option of the L2 cache, refer to the *Cortex-A9 Microprocessor Unit Subsystem* chapter in volume 3 of the *Arria V Device Handbook*.

FPGA-to-HPS Bridge Slave Signals

The FPGA-to-HPS bridge slave address channels support user-sideband signals, routed to the ACP in the MPU subsystem. All the signals have a fixed width except the data and write strobes for the read and write data channels. The variable width signals depend on the data width setting of the bridge. Table 5-4 through Table 5-8 list all the signals exposed by the FPGA-to-HPS slave interface to the FPGA fabric.

Table 5-4 lists the slave write address channel signals.

Table 5-4. FPGA-to-HPS Bridge Slave Write Address Channel Signals

Signal	Width	Direction	Description
AWID	8 bits	Input	Write address ID
AWADDR	32 bits	Input	Write address
AWLEN	4 bits	Input	Burst length
AWSIZE	3 bits	Input	Burst size
AWBURST	2 bits	Input	Burst type
AWLOCK	2 bits	Input	Lock type—Valid values are 00 (normal access) and 01 (exclusive access)
AWCACHE	4 bits	Input	Cache policy type
AWPROT	3 bits	Input	Protection type

Table 5–4. FPGA-to-HPS Bridge Slave Write Address Channel Signals

Signal	Width	Direction	Description
AWVALID	1 bit	Input	Write address channel valid
AWREADY	1 bit	Output	Write address channel ready
AWUSER	5 bits	Input	User sideband signals

Table 5–5 lists the slave write data channel signals.

Table 5–5. FPGA-to-HPS Bridge Slave Write Data Channel Signals

Signal	Width	Direction	Description
WID	8 bits	Input	Write ID
WDATA	32, 64, or 128 bits	Input	Write data
WSTRB	4, 8, or 16 bits	Input	Write data strobes
WLAST	1 bit	Input	Write last data identifier
WVALID	1 bit	Input	Write data channel valid
WREADY	1 bit	Output	Write data channel ready

Table 5–6 lists the slave write response channel signals.

Table 5–6. FPGA-to-HPS Bridge Slave Write Response Channel Signals

Signal	Width	Direction	Description
BID	8 bits	Output	Write response ID
BRESP	2 bits	Output	Write response
BVALID	1 bit	Output	Write response channel valid
BREADY	1 bit	Input	Write response channel ready

Table 5–7 lists the slave read address channel signals.

Table 5–7. FPGA-to-HPS Bridge Slave Read Address Channel Signals

Signal	Width	Direction	Description
ARID	8 bits	Input	Read address ID
ARADDR	32 bits	Input	Read address
ARLEN	4 bits	Input	Burst length
ARSIZE	3 bits	Input	Burst size
ARBURST	2 bits	Input	Burst type
ARLOCK	2 bits	Input	Lock type—Valid values are 00 (normal access) and 01 (exclusive access)
ARCACHE	4 bits	Input	Cache policy type
ARPROT	3 bits	Input	Protection type
ARVALID	1 bit	Input	Read address channel valid
ARREADY	1 bit	Output	Read address channel ready
ARUSER	5 bits	Input	Read user sideband signals

Table 5–8 lists the slave read data channel signals.

Table 5–8. FPGA-to-HPS Bridge Slave Read Data Channel Signals

Signal	Width	Direction	Description
RID	8 bits	Output	Read ID
RDATA	32, 64, or 128 bits	Output	Read data
RRESP	2 bits	Output	Read response
RLAST	1 bit	Output	Read last data identifier
RVALID	1 bit	Output	Read data channel valid
RREADY	1 bit	Input	Read data channel ready

HPS-to-FPGA Bridge

The HPS-to-FPGA bridge provides a configurable-width, high-performance master interface to the FPGA fabric. The bridge provides most masters in the HPS with access to logic, peripherals, and memory implemented in the FPGA. The effective size of the address space is 0x3FFF0000, or 1 gigabyte (GB) minus 64 megabytes (MB). The address space size is less than 1 GB because 64 MB is occupied by peripherals, lightweight HPS-to-FPGA bridge, on-chip RAM, and boot ROM in the HPS. You can configure the bridge master exposed to the FPGA fabric for 32-, 64-, or 128-bit data. The amount of address space exposed to the MPU subsystem can also be reduced through the L2 cache address filtering mechanism.



For detailed information about which masters have access to each bridge, refer to the *Interconnect* chapter in volume 3 of the *Arria V Device Handbook*. For details about L2 cache address filtering, refer to the *Cortex-A9 Microprocessor Unit Subsystem* chapter in volume 3 of the *Arria V Device Handbook*.

The slave interface of the bridge in the HPS logic has a data width of 64 bits. The bridge provides width adaptation and clock crossing logic that allows the logic in the FPGA to operate in any clock domain, asynchronous from the HPS.



The HPS-to-FPGA bridge is accessed if the MPU boots from the FPGA. Before the MPU boots from the FPGA, the FPGA portion of the SoC device must be configured, and the HPS-to-FPGA bridge must be remapped into addressable space.



For more information about enabling the HPS-to-FPGA bridge, refer to the *Interconnect* chapter in volume 3 of the *Arria V Device Handbook*.

Table 5-9 lists the properties of the HPS-to-FPGA bridge, including the configurable master interface exposed to the FPGA fabric.

Table 5-9. HPS-to-FPGA Bridge Properties

Bridge Property	L3 Slave Interface	FPGA Master Interface
Data width ⁽¹⁾	64 bits	32, 64, or 128 bits
Clock domain	l3_main_clk	h2f_axi_clk
Byte address width	32 bits	30 bits
ID width	12 bits	12 bits
Read acceptance	16 transactions	16 transactions
Write acceptance	16 transactions	16 transactions
Total acceptance	32 transactions	32 transactions
Note to Table 5-9: (1) The bridge master data width is user-configurable at the time you instantiate the HPS component in your system.		

The HPS-to-FPGA bridge's GPV, described in "The Global Programmers View" on page 5-3, provides settings to adjust the bridge master properties. The master issuing capability can be adjusted, through the `fn_mod` register, to allow one or multiple transactions to be outstanding in the FPGA fabric. The master bypass merge feature can also be enabled, through the `bypass_merge` bit in the `fn_mod2` register. This feature ensures that the upsizing and downsizing logic does not alter any transactions when the FPGA master interface is configured to be 32 or 128 bits wide.



It is critical to provide the correct `l4_mp_clk` clock to support access to the GPV, as described in "GPV Clocks" on page 5-13.

HPS-to-FPGA Bridge Master Signals

All the HPS-to-FPGA bridge master signals have a fixed width except the data and write strobes for the read and write data channels. The variable-width signals depend on the data width setting of the bridge interface exposed to the FPGA logic. Table 5-10 through Table 5-14 list all the signals exposed by the HPS-to-FPGA master interface to the FPGA fabric.

Table 5–10 lists the master write address channel signals.

Table 5–10. HPS-to-FPGA Bridge Master Write Address Channel Signals

Signal	Width	Direction	Description
AWID	12 bits	Output	Write address ID
AWADDR	30 bits	Output	Write address
AWLEN	4 bits	Output	Burst length
AWSIZE	3 bits	Output	Burst size
AWBURST	2 bits	Output	Burst type
AWLOCK	2 bits	Output	Lock type—Valid values are 00 (normal access) and 01 (exclusive access)
AWCACHE	4 bits	Output	Cache policy type
AWPROT	3 bits	Output	Protection type
AWVALID	1 bit	Output	Write address channel valid
AWREADY	1 bit	Input	Write address channel ready

Table 5–11 lists the master write data channel signals.

Table 5–11. HPS-to-FPGA Bridge Master Write Data Channel Signals

Signal	Width	Direction	Description
WID	12 bits	Output	Write ID
WDATA	32, 64, or 128 bits	Output	Write data
WSTRB	4, 8, or 16 bits	Output	Write data strobes
WLAST	1 bit	Output	Write last data identifier
WVALID	1 bit	Output	Write data channel valid
WREADY	1 bit	Input	Write data channel ready

Table 5–12 lists the master write response channel signals.

Table 5–12. HPS-to-FPGA Bridge Master Write Response Channel Signals

Signal	Width	Direction	Description
BID	12 bits	Input	Write response ID
BRESP	2 bits	Input	Write response
BVALID	1 bit	Input	Write response channel valid
BREADY	1 bit	Output	Write response channel ready

Table 5-13 lists the master read address channel signals.

Table 5-13. HPS-to-FPGA Bridge Master Read Address Channel Signals

Signal	Width	Direction	Description
ARID	12 bits	Output	Read address ID
ARADDR	30 bits	Output	Read address
ARLEN	4 bits	Output	Burst length
ARSIZE	3 bits	Output	Burst size
ARBURST	2 bits	Output	Burst type
ARLOCK	2 bits	Output	Lock type—Valid values are 00 (normal access) and 01 (exclusive access)
ARCACHE	4 bits	Output	Cache policy type
ARPROT	3 bits	Output	Protection type
ARVALID	1 bit	Output	Read address channel valid
ARREADY	1 bit	Input	Read address channel ready

Table 5-14 lists the master read data channel signals.

Table 5-14. HPS-to-FPGA Bridge Master Read Data Channel Signals

Signal	Width	Direction	Description
RID	12 bits	Input	Read ID
RDATA	32, 64, or 128 bits	Input	Read data
RRESP	2 bits	Input	Read response
RLAST	1 bit	Input	Read last data identifier
RVALID	1 bit	Input	Read data channel valid
RREADY	1 bit	Output	Read data channel ready

Lightweight HPS-to-FPGA Bridge

The lightweight HPS-to-FPGA bridge provides a lower-performance interface to the FPGA fabric. This interface is useful for accessing the control and status registers of soft peripherals. The bridge provides a 2 MB address space and access to logic, peripherals, and memory implemented in the FPGA fabric. The MPU subsystem, direct memory access (DMA) controller, and debug access port (DAP) can use the lightweight HPS-to-FPGA bridge to access the FPGA fabric or GPV. Master interfaces in the FPGA fabric can also use the lightweight HPS-to-FPGA bridge to access the GPV registers in all three bridges.



For detailed information about which masters have access to each bridge, refer to the *Interconnect* chapter in volume 3 of the *Arria V Device Handbook*.

The bridge master exposed to the FPGA fabric has a fixed data width of 32 bits. The slave interface of the bridge in the HPS logic has a fixed data width of 32 bits.

Use the lightweight HPS-to-FPGA bridge as a secondary, lower-performance master interface to the FPGA fabric. With a fixed width and a smaller address space, the lightweight bridge is useful for low-bandwidth traffic, such as memory-mapped register accesses to FPGA peripherals. This approach diverts traffic from the high-performance HPS-to-FPGA bridge, and can improve both CSR access latency and overall system performance.

Table 5-15 lists the properties of the lightweight HPS-to-FPGA bridge, including the master interface exposed to the FPGA fabric.

Table 5-15. Lightweight HPS-to-FPGA Bridge Properties

Bridge Property	L3 Slave Interface	FPGA Master Interface
Data width	32 bits	32 bits
Clock domain	l4_mp_clk	h2f_lw_axi_clk
Byte address width	32 bits	21 bits
ID width	12 bits	12 bits
Read acceptance	16 transactions	16 transactions
Write acceptance	16 transactions	16 transactions
Total acceptance	32 transactions	32 transactions

The lightweight HPS-to-FPGA bridge has three master interfaces, as shown in Figure 5-1 on page 5-2. The master interface connected to the FPGA fabric provides a lightweight interface from the HPS to custom logic in the FPGA fabric. The two other master interfaces, connected to the HPS-to-FPGA and FPGA-to-HPS bridges, allow you to access the GPV registers for each bridge.

The lightweight HPS-to-FPGA bridge also has a GPV to control the behavior of its four interfaces (one slave and three masters). The GPV is described in “The Global Programmers View” on page 5-3.

The GPV allows you to set the bridge’s issuing capabilities to support single or multiple transactions. The GPV also lets you set a write tidemark through the wr_tidemark register, to control how much data is buffered in the bridge before data is written to slaves in the FPGA fabric.



It is critical to provide correct clock settings for the lightweight HPS-to-FPGA bridge, even if your design does not use this bridge. The l4_mp_clk clock is required for GPV access on the HPS-to-FPGA and FPGA-to-HPS bridges.

Lightweight HPS-to-FPGA Bridge Master Signals

All the lightweight HPS-to-FPGA bridge master signals have a fixed width. Table 5-16 through Table 5-20 list all the signals exposed by the lightweight HPS-to-FPGA master interface to the FPGA fabric.

Table 5-16 lists the master write address channel signals.

Table 5-16. Lightweight HPS-to-FPGA Bridge Master Write Address Channel Signals

Signal	Width	Direction	Description
AWID	12 bits	Output	Write address ID
AWADDR	21 bits	Output	Write address
AWLEN	4 bits	Output	Burst length
AWSIZE	3 bits	Output	Burst size
AWBURST	2 bits	Output	Burst type
AWLOCK	2 bits	Output	Lock type—Valid values are 00 (normal access) and 01 (exclusive access)
AWCACHE	4 bits	Output	Cache policy type
AWPROT	3 bits	Output	Protection type
AWVALID	1 bit	Output	Write address channel valid
AWREADY	1 bit	Input	Write address channel ready

Table 5-17 lists the master write data channel signals.

Table 5-17. Lightweight HPS-to-FPGA Bridge Master Write Data Channel Signals

Signal	Width	Direction	Description
WID	12 bits	Output	Write ID
WDATA	32 bits	Output	Write data
WSTRB	4 bits	Output	Write data strobes
WLAST	1 bit	Output	Write last data identifier
WVALID	1 bit	Output	Write data channel valid
WREADY	1 bit	Input	Write data channel ready

Table 5-18 lists the master write response channel signals.

Table 5-18. Lightweight HPS-to-FPGA Bridge Master Write Response Channel Signals

Signal	Width	Direction	Description
BID	12 bits	Input	Write response ID
BRESP	2 bits	Input	Write response
BVALID	1 bit	Input	Write response channel valid
BREADY	1 bit	Output	Write response channel ready

Table 5–19 lists the master read address channel signals.

Table 5–19. Lightweight HPS-to-FPGA Bridge Master Read Address Channel Signals

Signal	Width	Direction	Description
ARID	12 bits	Output	Read address ID
ARADDR	21 bits	Output	Read address
ARLEN	4 bits	Output	Burst length
ARSIZE	3 bits	Output	Burst size
ARBURST	2 bits	Output	Burst type
ARLOCK	2 bits	Output	Lock type—Valid values are 00 (normal access) and 01 (exclusive access)
ARCACHE	4 bits	Output	Cache policy type
ARPROT	3 bits	Output	Protection type
ARVALID	1 bit	Output	Read address channel valid
ARREADY	1 bit	Input	Read address channel ready

Table 5–20 lists the master read data channel signals.

Table 5–20. Lightweight HPS-to-FPGA Bridge Master Read Data Channel Signals

Signal	Width	Direction	Description
RID	12 bits	Input	Read ID
RDATA	32 bits	Input	Read data
RRESP	2 bits	Input	Read response
RLAST	1 bit	Input	Read last data identifier
RVALID	1 bit	Input	Read data channel valid
RREADY	1 bit	Output	Read data channel ready

Clocks and Resets

FPGA-to-HPS Bridge

The master interface of the bridge in the HPS logic operates in the `l3_main_clk` clock domain. The slave interface exposed to the FPGA fabric operates in the `f2h_axi_clk` clock domain provided by the user logic. The bridge provides clock crossing logic that allows the logic in the FPGA to operate in any clock domain, asynchronous from the HPS.



For information about the `f2h_axi_clk` clock, refer to the *HPS Component Interfaces* chapter in volume 3 of the *Arria V Device Handbook*. For information about the `l3_main_clk` and `l4_mp_clk` clocks, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

The FPGA-to-HPS bridge has one reset signal, `fpga2hps_bridge_rst_n`. The reset manager drives this signal to FPGA-to-HPS bridge on a cold or warm reset.



For more information about the reset manager, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

HPS-to-FPGA Bridge

The master interface into the FPGA fabric operates in the `h2f_axi_clk` clock domain. The `h2f_axi_clk` clock is provided by user logic. The slave interface of the bridge in the HPS logic operates in the `l3_main_clk` clock domain. The bridge provides clock crossing logic that allows the logic in the FPGA to operate in any clock domain, asynchronous from the HPS.

 For information about the `l3_main_clk` clock, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*. For information about the `h2f_axi_clk` clock, refer to the *HPS Component Interfaces* chapter in volume 3 of the *Arria V Device Handbook*.

The HPS-to-FPGA bridge has one reset signal, `hps2fpga_bridge_rst_n`. The reset manager drives this signal to HPS-to-FPGA bridge on a cold or warm reset.

For more information about the reset manager, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Lightweight HPS-to-FPGA Bridge

The master interface into the FPGA fabric operates in the `h2f_lw_axi_clk` clock domain provided by custom logic in the FPGA fabric. The slave interface of the bridge in the HPS logic operates in the `l4_mp_clk` clock domain. The bridge provides clock crossing logic that allows the logic in the FPGA to operate in any clock domain, asynchronous from the HPS.

 For information about the `l4_mp_clk` clock, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*. For information about the `h2f_lw_axi_clk` clock, refer to the *HPS Component Interfaces* chapter in volume 3 of the *Arria V Device Handbook*.

The lightweight HPS-to-FPGA bridge has one reset signal, `lw_hps2fpga_bridge_rst_n`. The reset manager drives this signal to the lightweight HPS-to-FPGA bridge on a cold or warm reset.

 For more information about the reset manager, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

GPV Clocks

The FPGA-to-HPS and HPS-to-FPGA bridges have GPV slave interfaces, mastered by the lightweight HPS-to-FPGA bridge. These interfaces operate in the `l4_mp_clk` clock domain. Even if you do not use the lightweight HPS-to-FPGA bridge in your FPGA design, you must ensure that a valid `l4_mp_clk` clock is being generated, so that the GPV registers in the HPS-to-FPGA and FPGA-to-HPS bridges can be programmed. The GPV logic in all three bridges is in the `l4_mp_clk` domain. For information about the GPV, refer to “*The Global Programmers View*” on page 5-3.

Data Width Sizing

The HPS-to-FPGA and FPGA-to-HPS bridges allow 32-, 64-, and 128-bit interfaces to be exposed to the FPGA fabric. For 32-bit and 128-bit interfaces, the bridge performs data width conversion to the fixed 64-bit interface within the HPS. This conversion is called *upsizing* in the case of data being converted from a 64-bit interface to a 128-bit interface. It is called *downsizing* in the case of data being converted from a 64-bit interface to a 32-bit interface. If an exclusive access is split into multiple transactions, the transactions lose their exclusive access information.

During the upsizing or downsizing process, transactions can also be resized using a data merging technique. For example, in the case of a 32-bit to 64-bit upsizing, if the size of each beat entering the bridge's 32-bit interface is only two bytes, the bridge can merge up to four beats to form a single 64-bit beat. Similarly, in the case of a 128-bit to 64-bit downsizing, if the size of each beat entering the bridge's 128-bit interface is only four bytes, the bridge can merge two beats to form a single 64-bit beat.

The bridges do not perform transaction merging for accesses marked as noncacheable.



You can set the `bypass_merge` bit in the GPV to prevent the bridge from merging data and responses. If the bridge merges multiple responses into a single response, that response is the one with the highest priority. The response types have the following priorities:

1. DECERR
2. SLVERR
3. OKAY

HPS-FPGA AXI Bridges Address Map and Register Definitions



The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the following links for the module instance:

- [fpga2hpsregs](#)
- [hps2fpgaregs](#)

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.



The base addresses of all modules are also listed in the [Introduction to the Hard Processor](#) chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 5-21 lists the revision history for this document.

Table 5-21. Document Revision History

Date	Version	Changes
November 2012	1.1	Described GPV.
January 2012	1.0	Initial release.

This section includes the following chapters:

- [Chapter 6, Cortex-A9 Microprocessor Unit Subsystem](#)



For information about the revision history for chapters in this section, refer to “Document Revision History” in each individual chapter.

The hard processor system (HPS) in the Altera® SoC FPGA device includes a stand-alone, full-featured ARM® Cortex™-A9 MPCore™, single- or dual-core 32-bit application processor. The Cortex-A9 MPU subsystem is composed of a Cortex-A9 MPCore, a level 2 (L2) cache, an Accelerator Coherency Port (ACP) ID mapper, and debugging modules.

Features of the Cortex-A9 MPU Subsystem

The Altera Cortex-A9 MPU subsystem provides the following features:

- Two Cortex-A9 processors
- Interrupt controller
- Private interval and watchdog timer for each processor
- Global timer
- TrustZone® system security extensions
- Symmetric multiprocessing (SMP) and asymmetric multiprocessing (AMP) modes
- Debugging modules

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

Portions © 2011 ARM Limited. Used with permission. All rights reserved. ARM, the ARM Powered logo, AMBA, Jazelle, StrongARM, Thumb, and TrustZone are registered trademarks of ARM Limited. The ARM logo, Angel, ARMulator, AHB, APB, ASB, ATB, AXI, CoreSight, Cortex, EmbeddedICE, ModelGen, MPCore, Multi-ICE, NEON, PrimeCell, ARM7TDMI, ARM7TDMI-S, ARM9TDMI, ARM9E-S, ARM966E-S, ETM7, ETM9, TDMI and STRONG are trademarks of ARM Limited. All other products or services mentioned herein may be trademarks of their respective owners. Neither the whole nor any part of the information contained in, or the product described in, this document may be adapted or reproduced in any material form except with the prior written permission of the copyright holder. The product described in this document is subject to continuous developments and improvements. All particulars of the product and its use contained in this document are given by ARM in good faith. However, all warranties implied or expressed, including but not limited to implied warranties of merchantability, or fitness for purpose, are excluded. This document is intended only to assist the reader in the use of the product. ARM Limited shall not be liable for any loss or damage arising from the use of any information in this document, or any error or omission in such information, or any incorrect use of the product. Where the term ARM is used it means "ARM or any of its subsidiaries as appropriate". This document is Non-Confidential. The right to use, copy and disclose this document may be subject to license restrictions in accordance with the terms of the agreement entered into by ARM and the party that ARM delivered this document to. The information in this document is final, that is for a developed product.



Cortex-A9 MPU Subsystem Block Diagram and System Integration

Figure 6–1 shows a dual-core MPU subsystem in the context of the HPS, with the L2 cache. The L2 cache can access either the level 3 (L3) interconnect fabric or the SDRAM.

Figure 6–1. Cortex-A9 MPU Subsystem with L3 Interconnect


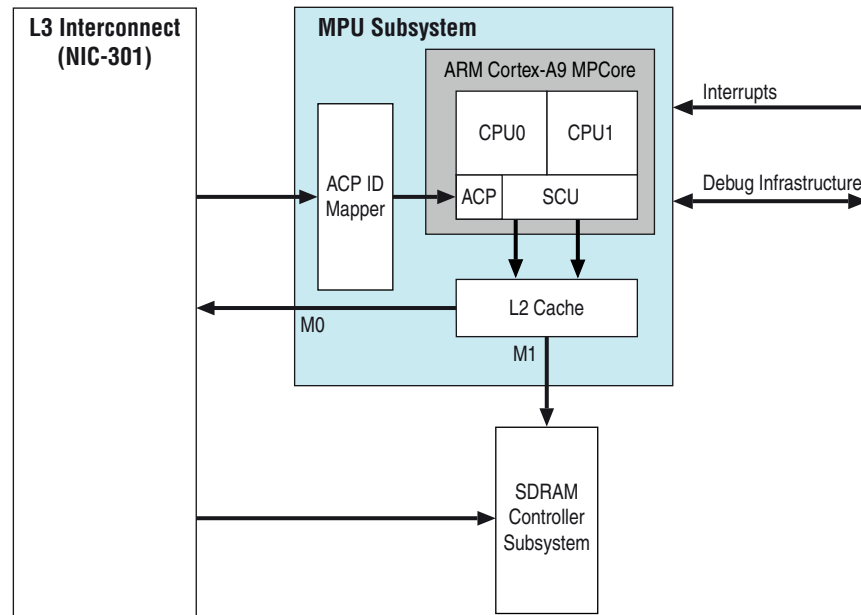


Figure 6–2 shows a block diagram of the Altera Cortex-A9 MPU subsystem.

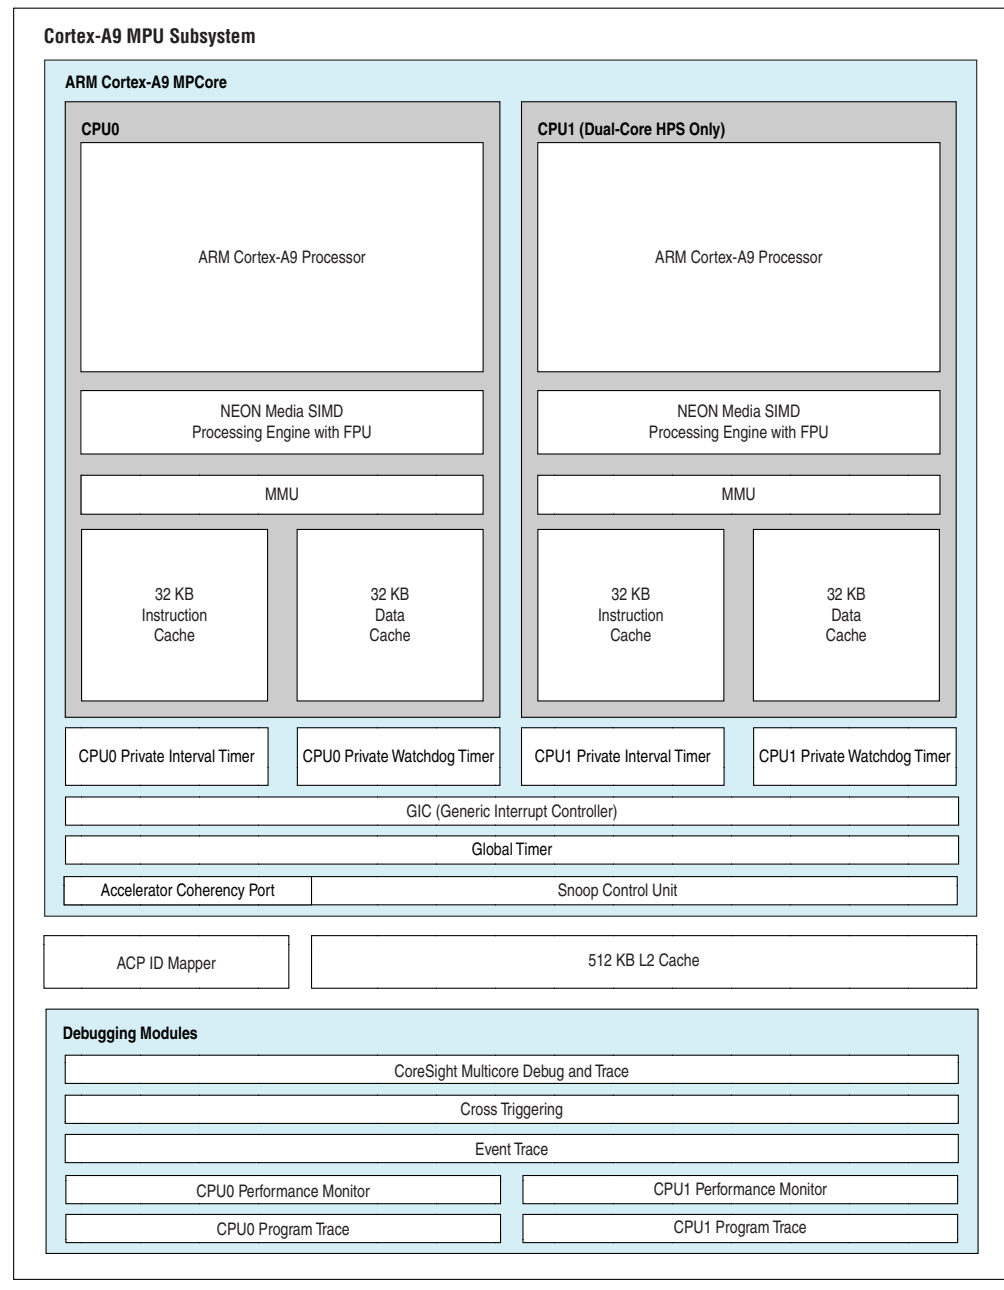Figure 6–2. Cortex-A9 MPU Subsystem Internals



Cortex-A9 MPU Subsystem Components

The Altera Cortex-A9 MPU subsystem consists of the following hardware blocks:

- ARM Cortex-A9 MPCore
- ARM L2C-310 L2 cache controller

- ACP ID mapper
- Debugging and trace features

This section describes the components of the Cortex-A9 MPU subsystem.

Cortex-A9 MPCore

The MPU subsystem includes a stand-alone, full-featured ARM Cortex-A9 MPCore dual-core 32-bit application processor. The processor, like other HPS masters, can access IP in the FPGA fabric using through the HPS-to-FPGA bridges.

Functional Description

The ARM Cortex-A9 MPCore contains the following blocks:

- Two Cortex-A9 Revision r3p0 processors operating in SMP or AMP mode
- Snoop control unit (SCU)
- Private interval timer for each processor core
- Private watchdog timer for each processor core
- Global timer
- Interrupt controller

Each transaction originating from the Altera Cortex-A9 MPU subsystem can be flagged as secure or nonsecure.

Implementation Details

Table 6–1 shows the parameter settings for the Altera Cortex-A9 MPCore.

Table 6–1. Cortex-A9 MPCore Processor Configuration

Feature	Options
Cortex-A9 processors	1 or 2
Instruction cache size per Cortex-A9 processor	32 KB
Data cache size per Cortex-A9 processor	32 KB
TLB size per Cortex-A9 processor	128 entries
Media Processing Engine with NEON™ technology per Cortex-A9 processor ⁽¹⁾	Included
Preload Engine per Cortex-A9 processor	Included
Number of entries in the Preload Engine FIFO per Cortex-A9 processor	16
Jazelle DBX extension per Cortex-A9 processor	Full
PTM interface per Cortex-A9 processor	Included
Support for parity error detection ⁽²⁾	Included
ARM_BIST	Included
Master ports	Two
Accelerator Coherency Port	Included
Notes to Table 6–1: (1) Includes support for floating-point operations. (2) For a description of the parity error scheme and parity error signals, Refer to the Cortex-A9 Technical Reference Manual, Revision r3p0, available on the ARM website (infocenter.arm.com).	

 For further information about Cortex-A9 MPCore configurable options, refer to the *Introduction* chapter of the *Cortex-A9 MPCore Technical Reference Manual*, Revision r3p0, available on the ARM website (infocenter.arm.com).

Cortex-A9 Processor

Each Cortex-A9 processor includes the following hardware blocks:

- ARM NEON™ single instruction, multiple data (SIMD) coprocessor with vector floating-point (VFP) v3 double-precision floating point unit for media and signal processing acceleration
 - Single- and double-precision IEEE-754 floating point math support
 - Integer and polynomial math support
- Level 1 (L1) cache with parity checking
 - 32 KB four-way set-associative instruction cache
 - 32 KB four-way set-associative data cache
- CoreSight™ Program Trace Macrocell (PTM) supporting instruction trace

Each Cortex-A9 processor supports the following features:

- Dual-issue superscalar pipeline with advanced branch prediction
- Out-of-order (OoO) dispatch and speculative instruction execution

- 2.5 million instructions per second (MIPS) per MHz, based on the Dhrystone 2.1 benchmark
- 128-entry translation lookaside buffer (TLB)
- TrustZone security extensions
- Configurable data endianness
- Jazelle® DBX Extensions for byte-code dynamic compiler support
- The Cortex-A9 processor architecture supports the following instruction sets:
 - The ARMv7-A performance-optimized instruction set
 - The memory-optimized Thumb®-2 mixed instruction set
 - Improves energy efficiency
 - 31% smaller memory footprint
 - 38% faster than the original Thumb instruction set
 - The Thumb instruction set—supported for legacy applications
- Each processor core in the Altera HPS includes a memory management unit (MMU) to support the memory management requirements of common modern operating systems.

The Cortex-A9 processors are designated CPU0 and CPU1.



Detailed documentation of ARM Cortex-A9 series processors, Revision r3p0, is available on the ARM website (infocenter.arm.com).

Interactive Debugging Features

Each Cortex-A9 processor has built-in debugging capabilities, including the following features:

- Six hardware breakpoints, including two with Context ID comparison capability
- Four watchpoints

The interactive debugging features can be controlled by external JTAG tools or by processor-based monitor code.



For more information about the interactive debugging system, refer to the *Debug* chapter of the *Cortex-A9 Technical Reference Manual*, Revision r3p0, available on the ARM website (infocenter.arm.com).

L1 Caches

Cache memory that is closely coupled with an associated processor is called level 1, or L1 cache. Each Cortex-A9 processor has two independent 32 KB L1 caches—one for instructions and one for data—allowing simultaneous instruction fetches and data access.

Each L1 cache is four-way set associative, with 32 bytes per line, and supports parity checking.

Preload Engine

The preload engine (PLE) is a hardware block that enables the L2 cache to preload selected regions of memory. The PLE signals the L2 cache when a cache line will be needed in the L2 cache, by making the processor data master port start fetching the data. The processor data master does not complete the fetch or return the data to the processor. However, the L2 cache can then proceed to load the cache line. The data is only loaded to the L2 cache, not to the L1 cache or processor registers.

The preload functionality is under software control. The following PLE control parameters must be programmed:

- Programmed parameters, including the following:
 - Base address
 - Length of stride
 - Number of blocks
- A valid bit
- TrustZone memory protection for the cache memory, with an NS (non-secure) state bit
- A translation table base (TTB) address
- An Address Space Identifier (ASID) value



For more information about the PLE, refer to the *Preload Engine* chapter of the *Cortex-A9 Technical Reference Manual*, Revision r3p0, available on the ARM website (infocenter.arm.com).

Floating Point Unit

Each ARM Cortex-A9 processor includes full support for IEEE-754 floating point operations. The floating-point unit (FPU) fully supports half-, single-, and double-precision variants of the following operations:


- Add
- Subtract
- Multiply
- Divide
- Multiply and accumulate (MAC)
- Square root

The FPU also converts between floating-point data formats and integers, including special operations to round towards zero required by high-level languages.

NEON Multimedia Processing Engine

The NEON multimedia processing engine (MPE) provides hardware acceleration for media and signal processing applications. Each ARM Cortex-A9 processor includes an ARM NEON MPE that supports SIMD processing, as shown in Figure 6-3. The NEON processing engine accelerates multimedia and signal processing algorithms such as video encoding and decoding, 2-D and 3-D graphics, audio and speech processing, image processing, telephony, and sound synthesis.

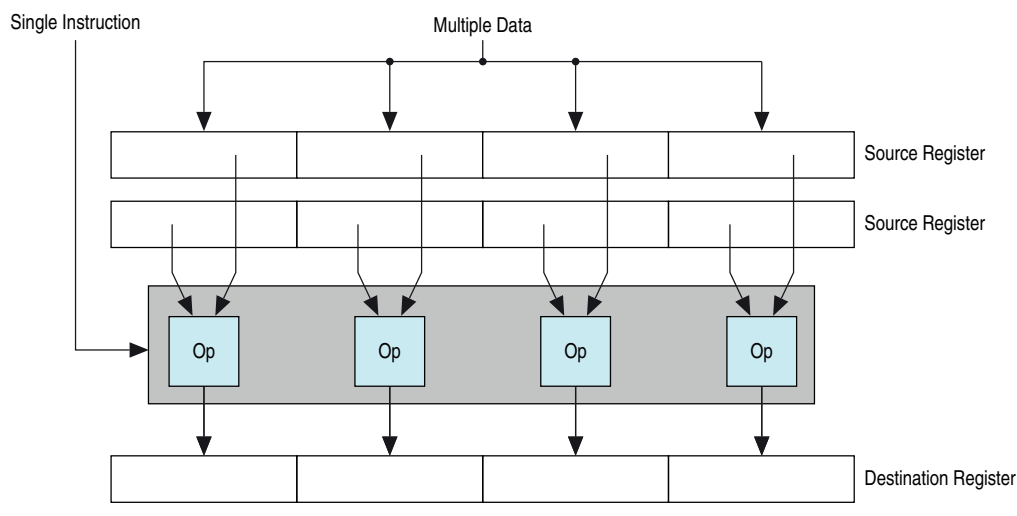Figure 6-3. Single Instruction, Multiple Data (SIMD) Processing



The Cortex-A9 NEON MPE performs the following types of operations:

- SIMD and scalar single-precision floating-point computations
- Scalar double-precision floating-point computation
- SIMD and scalar half-precision floating-point conversion
- 8-bit, 16-bit, 32-bit, and 64-bit signed and unsigned integer SIMD computation
- 8-bit or 16-bit polynomial computation for single-bit coefficients

The following operations are available:

- Addition and subtraction
- Multiplication with optional accumulation (MAC)
- Maximum or minimum value driven lane selection operations
- Inverse square root approximation
- Comprehensive data-structure load instructions, including register-bank-resident table lookup



For more information about the Cortex-A9 NEON MPE, refer to the *Cortex-A9 NEON™ Media Processing Engine Technical Reference Manual*, Revision r3p0, which you can download from the ARM website (infocenter.arm.com).

Memory Management Unit

The MMU is used in conjunction with the L1 and L2 caches to translate virtual addresses used by software to physical addresses used by hardware. Each processor has a private MMU.

The MMU supports the TLBs shown in [Table 6-2](#).

Table 6-2. Supported TLBs

TLB Type	Memory Type	Number of Entries	Associativity
Micro TLB	Instruction	32	Fully associative
Micro TLB	Data	32	Fully associative
Main TLB	Instruction and Data	128	Two-way associative

The main TLB has the following features:

- Lockable entries using the lock-by-entry model
- Supports hardware page table walks to perform look-ups in the L1 data cache



For more information about the MMU, refer to the *Memory Management Unit* chapter of the *Cortex-A9 Technical Reference Manual*, Revision r3p0, available on the ARM website (infocenter.arm.com).

The MPU address map is divided into the following regions:

- The boot region
- The SDRAM region
- The FPGA slaves region
- The HPS peripherals region

This section describes the location and contents of each region.


The Boot Region

The boot region is 1 MB in size, based at address 0. After power-on, or after reset of the L3 interconnect, the boot region is occupied by the boot ROM, allowing the Cortex-A9 MPCore to boot. Although the boot region size is 1 MB, accesses beyond 64 KB are illegal because the boot ROM is only 64 KB.

As shown in [Figure 6-4](#), this 1 MB region can be subsequently remapped to the bottom 1 MB of SDRAM. For more information, refer to [“The SDRAM Region”](#).



Alternatively, the boot region can be mapped to the 64 KB on-chip RAM. For more information, refer to the [Interconnect](#) chapter in volume 3 of the *Arria V Device Handbook*.

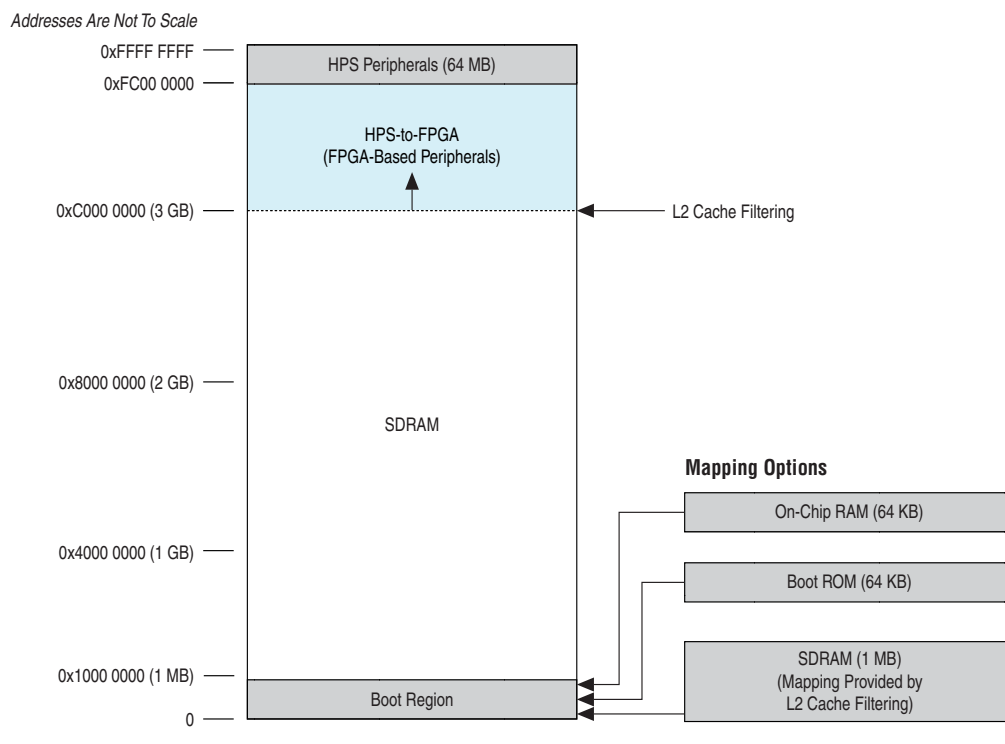Figure 6-4. The MPCore Address Map**The SDRAM Region**

The SDRAM region starts at address 0x100000 (1 MB). The top of the region is determined by the L2 cache filter.

The L2 cache contains a filtering mechanism that routes accesses to the SDRAM and L3 interconnect. The filter defines a filter range with start and end addresses. Any access within this filter range is routed to the SDRAM subsystem. Accesses outside of this filter range are routed to the L3 interconnect.

The start and end addresses are specified in the following register fields:

- `reg12_addr_filtering_start.address_filtering_start`
- `reg12_addr_filtering_end.address_filtering_end`

To remap the lower 1MB of SDRAM into the boot region, set the filter start address to 0x0 to ensure accesses between 0x0 and 0xFFFF are routed to the SDRAM. Independently, you can set the filter end address in 1 MB increments above 0xC0000000 to extend the upper bounds of the SDRAM region. However, you achieve this extended range at the expense of the FPGA peripheral address span. Depending on the address filter settings in the L2 cache, the top of the SDRAM region can range from 0xBFFFFFFF to 0xFBFFFFFF.

For more information about the L2 cache, refer to [“L2 Cache” on page 6-24](#).

The FPGA Slaves Region

The Cortex-A9 MPU subsystem supports the variable-sized FPGA slaves region to communicate with FPGA-based peripherals. This region can start as low as 0xC0000000, depending on the L2 cache filter settings. The top of the FPGA slaves region is located at 0xFBFFFFFF. As a result, the size of the FPGA slaves region can range from 0 to 0x3F000000 bytes.

The HPS Peripherals Region

The HPS peripherals region is the top 64 MB in the address space, starting at 0xFC000000 and extending to 0xFFFFFFFF. The HPS peripherals region is always allocated to the HPS dedicated peripherals for the Altera Cortex-A9 MPU subsystem.

Performance Monitoring Unit

Each Cortex-A9 processor has a Performance Monitoring Unit (PMU). The PMU supports 58 events to gather statistics on the operation of the processor and memory system. Six counters in the PMU accumulate the events in real time. The PMU counters are accessible either from the processor itself, using the Coprocessor 14 (CP14) interface, or from an external debugger. The events are also supplied to the PTM and can be used for trigger or trace.



For more information about the PMU, refer to the *Performance Monitoring Unit* chapter of the *Cortex-A9 Technical Reference Manual*, Revision r3p0, available on the ARM website (infocenter.arm.com).

MPCore Timers

There is one interval timer and one watchdog timer for each processor.

Functional Description

Each timer is private, meaning that only its associated processor can access it. If the watchdog timer is not needed, it can be configured as a second interval timer.

Each private interval and watchdog timer has the following features:

- A 32-bit counter that optionally generates an interrupt when it reaches zero
- Configurable starting values for the counter
- An eight-bit prescaler value to qualify the clock period

Implementation Details

The timers are configurable to either single-shot or auto-reload mode. The timer blocks are clocked by mpu_periph_clk, running at ¼ the rate of mpu_clk.



For more information about private timers, refer to “About the private timer and watchdog blocks” in the *Global timer, Private timers, and Watchdog registers* chapter of the *Cortex-A9 MPCore Technical Reference Manual*, Revision r3p0, available on the ARM website (infocenter.arm.com).

Generic Interrupt Controller

Functional Description

The Generic Interrupt Controller (GIC) supports up to 180 interrupt sources, including dedicated peripherals and IP implemented in the FPGA fabric. In a dual-core system, the GIC is shared by both Cortex-A9 processors. Each processor also has 16 banked software-generated interrupts and 16 banked private peripheral interrupts.

Implementation Details

The configuration and control for the GIC is memory-mapped and accessed through the SCU. The GIC are clocked by mpu_periph_clk, running at $\frac{1}{4}$ the rate of mpu_clk.



For more information about the GIC, refer to the *Interrupt Controller* chapter of the *Cortex-A9 MPCore Technical Reference Manual*, Revision r3p0, available on the ARM website (infocenter.arm.com).

Table 6–3 shows the interrupt map.

Table 6–3. GIC Interrupt Map (Part 1 of 6)

GIC Interrupt Number ⁽¹⁾	Source Block	Interrupt Name	Combined Interrupts	Triggering
32	CortexA9_0	cpu0_parityfail	⁽²⁾	Edge
33	CortexA9_0	cpu0_parityfail_BTAC		Edge
34	CortexA9_0	cpu0_parityfail_GHB		Edge
35	CortexA9_0	cpu0_parityfail_I_Tag		Edge
36	CortexA9_0	cpu0_parityfail_I_Data		Edge
37	CortexA9_0	cpu0_parityfail_TLB		Edge
38	CortexA9_0	cpu0_parityfail_D_Outer		Edge
39	CortexA9_0	cpu0_parityfail_D_Tag		Edge
40	CortexA9_0	cpu0_parityfail_D_Data		Edge
41	CortexA9_0	cpu0_deflags0		Level
42	CortexA9_0	cpu0_deflags1		Level
43	CortexA9_0	cpu0_deflags2		Level
44	CortexA9_0	cpu0_deflags3		Level
45	CortexA9_0	cpu0_deflags4		Level
46	CortexA9_0	cpu0_deflags5		Level
47	CortexA9_0	cpu0_deflags6		Level
48	CortexA9_1	cpu1_parityfail	⁽³⁾	Edge
49	CortexA9_1	cpu1_parityfail_BTAC		Edge
50	CortexA9_1	cpu1_parityfail_GHB		Edge
51	CortexA9_1	cpu1_parityfail_I_Tag		Edge
52	CortexA9_1	cpu1_parityfail_I_Data		Edge
53	CortexA9_1	cpu1_parityfail_TLB		Edge
54	CortexA9_1	cpu1_parityfail_D_Outer		Edge
55	CortexA9_1	cpu1_parityfail_D_Tag		Edge
56	CortexA9_1	cpu1_parityfail_D_Data		Edge
57	CortexA9_1	cpu1_deflags0		Level
58	CortexA9_1	cpu1_deflags1		Level

Table 6-3. GIC Interrupt Map (Part 2 of 6)

GIC Interrupt Number ⁽¹⁾	Source Block	Interrupt Name	Combined Interrupts	Triggering
59	CortexA9_1	cpu1_deflags2		Level
60	CortexA9_1	cpu1_deflags3		Level
61	CortexA9_1	cpu1_deflags4		Level
62	CortexA9_1	cpu1_deflags5		Level
63	CortexA9_1	cpu1_deflags6		Level
64	SCU	scu_parityfail0	—	Edge
65	SCU	scu_parityfail1	—	Edge
66	SCU	scu_ev_abort		Edge
67	L2-Cache	l2_ecc_byte_wr_IRQ	—	Edge
68	L2-Cache	l2_ecc_corrected_IRQ	—	Edge
69	L2-Cache	l2_ecc_uncorrected_IRQ	—	Edge
70	L2-Cache	l2_combined_IRQ	⁽⁴⁾	Level
71	DDR	ddr_ecc_error_IRQ	—	Level
72	FPGA	FPGA_IRQ0	—	Level or Edge
73	FPGA	FPGA_IRQ1	—	Level or Edge
74	FPGA	FPGA_IRQ2	—	Level or Edge
75	FPGA	FPGA_IRQ3	—	Level or Edge
76	FPGA	FPGA_IRQ4	—	Level or Edge
77	FPGA	FPGA_IRQ5	—	Level or Edge
78	FPGA	FPGA_IRQ6	—	Level or Edge
79	FPGA	FPGA_IRQ7	—	Level or Edge
80	FPGA	FPGA_IRQ8	—	Level or Edge
81	FPGA	FPGA_IRQ9	—	Level or Edge
82	FPGA	FPGA_IRQ10	—	Level or Edge
83	FPGA	FPGA_IRQ11	—	Level or Edge
84	FPGA	FPGA_IRQ12	—	Level or Edge
85	FPGA	FPGA_IRQ13	—	Level or Edge
86	FPGA	FPGA_IRQ14	—	Level or Edge
87	FPGA	FPGA_IRQ15	—	Level or Edge
88	FPGA	FPGA_IRQ16	—	Level or Edge
89	FPGA	FPGA_IRQ17	—	Level or Edge
90	FPGA	FPGA_IRQ18	—	Level or Edge
91	FPGA	FPGA_IRQ19	—	Level or Edge
92	FPGA	FPGA_IRQ20	—	Level or Edge
93	FPGA	FPGA_IRQ21	—	Level or Edge
94	FPGA	FPGA_IRQ22	—	Level or Edge
95	FPGA	FPGA_IRQ23	—	Level or Edge
96	FPGA	FPGA_IRQ24	—	Level or Edge
97	FPGA	FPGA_IRQ25	—	Level or Edge

Table 6-3. GIC Interrupt Map (Part 3 of 6)

GIC Interrupt Number ⁽¹⁾	Source Block	Interrupt Name	Combined Interrupts	Triggering
98	FPGA	FPGA_IRQ26	—	Level or Edge
99	FPGA	FPGA_IRQ27	—	Level or Edge
100	FPGA	FPGA_IRQ28	—	Level or Edge
101	FPGA	FPGA_IRQ29	—	Level or Edge
102	FPGA	FPGA_IRQ30	—	Level or Edge
103	FPGA	FPGA_IRQ31	—	Level or Edge
104	FPGA	FPGA_IRQ32	—	Level or Edge
105	FPGA	FPGA_IRQ33	—	Level or Edge
106	FPGA	FPGA_IRQ34	—	Level or Edge
107	FPGA	FPGA_IRQ35	—	Level or Edge
108	FPGA	FPGA_IRQ36	—	Level or Edge
109	FPGA	FPGA_IRQ37	—	Level or Edge
110	FPGA	FPGA_IRQ38	—	Level or Edge
111	FPGA	FPGA_IRQ39	—	Level or Edge
112	FPGA	FPGA_IRQ40	—	Level or Edge
113	FPGA	FPGA_IRQ41	—	Level or Edge
114	FPGA	FPGA_IRQ42	—	Level or Edge
115	FPGA	FPGA_IRQ43	—	Level or Edge
116	FPGA	FPGA_IRQ44	—	Level or Edge
117	FPGA	FPGA_IRQ45	—	Level or Edge
118	FPGA	FPGA_IRQ46	—	Level or Edge
119	FPGA	FPGA_IRQ47	—	Level or Edge
120	FPGA	FPGA_IRQ48	—	Level or Edge
121	FPGA	FPGA_IRQ49	—	Level or Edge
122	FPGA	FPGA_IRQ50	—	Level or Edge
123	FPGA	FPGA_IRQ51	—	Level or Edge
124	FPGA	FPGA_IRQ52	—	Level or Edge
125	FPGA	FPGA_IRQ53	—	Level or Edge
126	FPGA	FPGA_IRQ54	—	Level or Edge
127	FPGA	FPGA_IRQ55	—	Level or Edge
128	FPGA	FPGA_IRQ56	—	Level or Edge
129	FPGA	FPGA_IRQ57	—	Level or Edge
130	FPGA	FPGA_IRQ58	—	Level or Edge
131	FPGA	FPGA_IRQ59	—	Level or Edge
132	FPGA	FPGA_IRQ60	—	Level or Edge
133	FPGA	FPGA_IRQ61	—	Level or Edge
134	FPGA	FPGA_IRQ62	—	Level or Edge
135	FPGA	FPGA_IRQ63	—	Level or Edge

Table 6-3. GIC Interrupt Map (Part 4 of 6)

GIC Interrupt Number ⁽¹⁾	Source Block	Interrupt Name	Combined Interrupts	Triggering
136	DMA	dma_IRQ0	—	Level
137	DMA	dma_IRQ1	—	Level
138	DMA	dma_IRQ2	—	Level
139	DMA	dma_IRQ3	—	Level
140	DMA	dma_IRQ4	—	Level
141	DMA	dma_IRQ5	—	Level
142	DMA	dma_IRQ6	—	Level
143	DMA	dma_IRQ7	—	Level
144	DMA	dma_irq_abort	—	Level
145	DMA	dma_ecc_corrected_IRQ		Level
146	DMA	dma_ecc_uncorrected_IRQ		Level
147	EMAC0	emac0_IRQ	(5)	Level
148	EMAC0	emac0_tx_ecc_corrected_IRQ		Level
149	EMAC0	emac0_tx_ecc_uncorrected_IRQ		Level
150	EMAC0	emac0_rx_ecc_corrected_IRQ		Level
151	EMAC0	emac0_rx_ecc_uncorrected_IRQ		Level
152	EMAC1	emac1_IRQ	(5)	Level
153	EMAC1	emac1_tx_ecc_corrected_IRQ		Level
154	EMAC1	emac1_tx_ecc_uncorrected_IRQ		Level
155	EMAC1	emac1_rx_ecc_corrected_IRQ		Level
156	EMAC1	emac1_rx_ecc_uncorrected_IRQ		Level
157	USB0	usb0_IRQ		Level
158	USB0	usb0_ecc_corrected_IRQ		Level
159	USB0	usb0_ecc_uncorrected_IRQ		Level
160	USB1	usb1_IRQ		Level
161	USB1	usb1_ecc_corrected_IRQ		Level
162	USB1	usb1_ecc_uncorrected_IRQ		Level
163	CAN0	can0_sts_IRQ		Level
164	CAN0	can0_mo_IRQ		Level
165	CAN0	can0_ecc_corrected_IRQ		Level
166	CAN0	can0_ecc_uncorrected_IRQ		Level
167	CAN1	can1_sts_IRQ		Level
168	CAN1	can1_mo_IRQ		Level
169	CAN1	can1_ecc_corrected_IRQ		Level
170	CAN1	can1_ecc_uncorrected_IRQ		Level
171	SDMMC	sdmmc_IRQ		Level
172	SDMMC	sdmmc_porta_ecc_corrected_IRQ		Level
173	SDMMC	sdmmc_porta_ecc_uncorrected_IRQ		Level

Table 6-3. GIC Interrupt Map (Part 5 of 6)

GIC Interrupt Number ⁽¹⁾	Source Block	Interrupt Name	Combined Interrupts	Triggering
174	SDMMC	sdmmc_portb_ecc_corrected_IRQ		Level
175	SDMMC	sdmmc_portb_ecc_uncorrected_IRQ		Level
176	NAND	nand_IRQ		Level
177	NAND	nandr_ecc_corrected_IRQ		Level
178	NAND	nandr_ecc_uncorrected_IRQ		Level
179	NAND	nandw_ecc_corrected_IRQ		Level
180	NAND	nandw_ecc_uncorrected_IRQ		Level
181	NAND	nande_ecc_corrected_IRQ		Level
182	NAND	nande_ecc_uncorrected_IRQ		Level
183	QSPI	qspi_IRQ		Level
184	QSPI	qspi_ecc_corrected_IRQ		Level
185	QSPI	qspi_ecc_uncorrected_IRQ		Level
186	SPI0	spi0_IRQ	(6)	Level
187	SPI1	spi1_IRQ	(6)	Level
188	SPI2	spi2_IRQ	(6)	Level
189	SPI3	spi3_IRQ	(6)	Level
190	I2C0	i2c0_IRQ	(7)	Level
191	I2C1	i2c1_IRQ	(7)	Level
192	I2C2	i2c2_IRQ	(7)	Level
193	I2C3	i2c3_IRQ	(7)	Level
194	UART0	uart0_IRQ		Level
195	UART1	uart1_IRQ		Level
196	GPIO0	gpio0_IRQ	—	Level
197	GPIO1	gpio1_IRQ	—	Level
198	GPIO2	gpio2_IRQ	—	Level
199	Timer0	timer_l4sp_0_IRQ	(8)	Level
200	Timer1	timer_l4sp_1_IRQ	(8)	Level
201	Timer2	timer_osc1_0_IRQ	(8)	Level
202	Timer3	timer_osc1_1_IRQ	(8)	Level
203	Watchdog0	wdog0_IRQ	—	Level
204	Watchdog1	wdog1_IRQ	—	Level
205	Clock manager	clkmgr_IRQ		Level
206	Clock manager	mpuawakeup_IRQ		Level
207	FPGA manager	fpga_man_IRQ	(9)	Level
208	CoreSight	nCTIIRQ[0]		Level
209	CoreSight	nCTIIRQ[1]		Level

Table 6-3. GIC Interrupt Map (Part 6 of 6)

GIC Interrupt Number ⁽¹⁾	Source Block	Interrupt Name	Combined Interrupts	Triggering
210	On-chip RAM	ram_ecc_corrected_IRQ		Level
211	On-chip RAM	ram_ecc_uncorrected_IRQ		Level
Notes to Table 6-3: (1) To ensure that you are using the correct GIC interrupt number, your code should refer to the symbolic interrupt name, as shown in the Interrupt Name column. Symbolic interrupt names are defined in a header file distributed with the source installation for your operating system. (2) This interrupt combines the interrupts named cpu0_parityfail_*. (3) This interrupt combines the interrupts named cpu1_parityfail_*. (4) This interrupt combines the following interrupts: DECERRINTR, ECNTRINTR, ERRRDINTR, ERRRTINTR, ERRWDINTR, ERRWTINTR, PARRDINTR, PARRTINTR, and SLVERRINTR. (5) This interrupt combines sbd_intr_o, lpi_intr_o, and pmt_intr_o. (6) This interrupt combines the following interrupts: ssi_txe_intr, ssi_txo_intr, ssi_rxf_intr, ssi_rxo_intr, ssi_rxu_intr, and ssi_mst_intr. (7) This interrupt combines the following interrupts: ic_rx_under_intr, ic_rx_full_intr, ic_tx_over_intr, ic_tx_empty_intr, ic_rd_req_intr, ic_tx_abrt_intr, ic_rx_done_intr, ic_activity_intr, ic_stop_det_intr, ic_start_det_intr, and ic_gen_call_intr. (8) This interrupt combines TIMINT1 and TIMINT2. (9) This interrupt combines the following interrupts: fpga_man_irq[7..0].				

Global Timer

The MPU features a global 64-bit, auto-incrementing timer, which is primarily used by the operating system.

Functional Description

The global timer is accessible by the processors using memory-mapped access through the SCU. The global timer has the following features:

- 64-bit incrementing counter with an auto-incrementing feature. It continues incrementing after sending interrupts.
- Memory-mapped in the private memory region.
- Accessed at reset in Secure State only. It can only be set once, but secure code can read it at any time.
- Accessible to both Cortex-A9 processors in the MPCore.

Implementation Details

Each Cortex-A9 processor has a private 64-bit comparator that generates a private interrupt when the counter reaches the specified value. Each Cortex-A9 processor uses the banked ID, ID27, for this interrupt. ID27 is sent to the GIC as a Private Peripheral Interrupt (PPI).

The global timer are clocked by mpu_periph_clk, running at ¼ the rate of mpu_clk.



For more information about the global timer, refer to “About the Global Timer” in the *Global timer, Private timers, and Watchdog registers* chapter of the *Cortex-A9 MPCore Technical Reference Manual*, Revision r3p0, available on the ARM website (infocenter.arm.com).

Snoop Control Unit

The SCU manages data traffic for the Cortex-A9 processors and the memory system, including the L2 cache. In a multi-master system, the processors and other masters can operate on shared data. The SCU ensures that each processor operates on the most up-to-date copy of data, maintaining cache coherency.

Functional Description

The SCU is used to connect the Cortex-A9 processors and the ACP to the L2 cache controller. The SCU performs the following functions:

- When the processors are set to SMP mode, the SCU maintains data cache coherency between the processors.




The SCU does not maintain coherency of the instruction caches.

- Initiates L2 cache memory accesses
- Arbitrates between processors requesting L2 access
- Manages ACP access with cache coherency capabilities.

Figure 6–5 shows the SCU in a dual-processor system, illustrating the flow of data among the L1 data caches and the SCU.

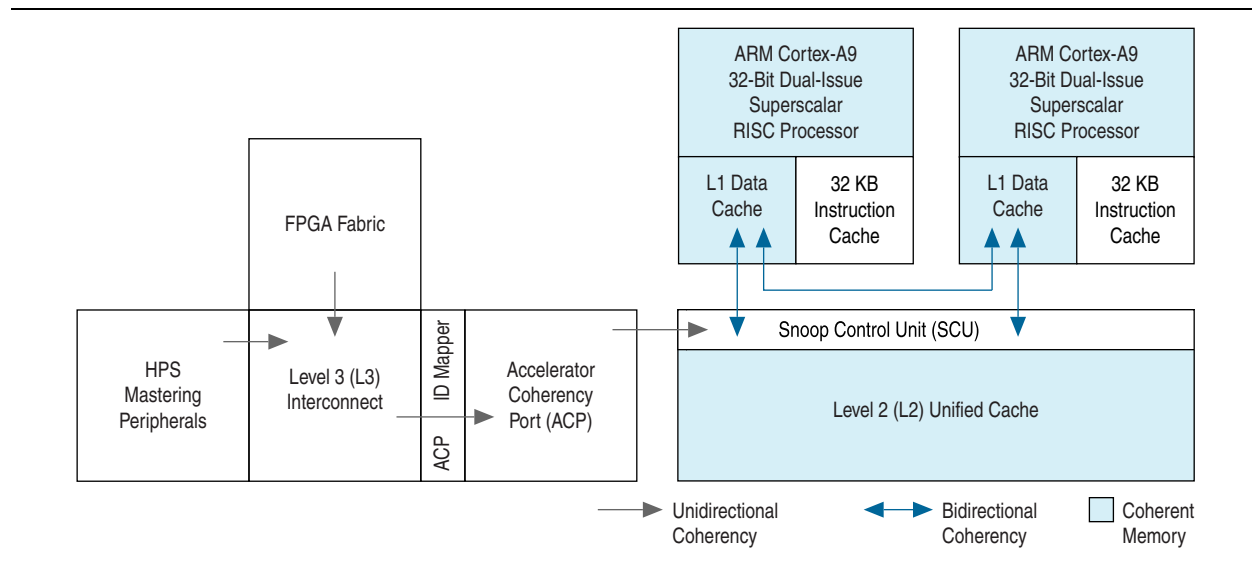Figure 6–5. Coherent Memory, Snoop Control Unit, and Accelerator Coherency Port



For more information about the SCU, refer to the *Snoop Control Unit* chapter of the *Cortex-A9 MPCore Technical Reference Manual*, Revision r3p0, available on the ARM website (infocenter.arm.com).

Implementation Details

When the processor writes to any coherent memory location, the SCU ensures that the relevant data is coherent (updated, tagged, or invalidated). Similarly, the SCU monitors read operations from a coherent memory location. If the required data is already stored within the other processor's L1 cache, the data is returned directly to the requesting processor. If the data is not in L1 cache, the SCU issues a read to the L2 cache. If the data is not in the L2 cache memory, the read is finally forwarded to main memory. The primary goal is to minimize power consumption and maximize overall memory performance.

The SCU maintains bidirectional coherency between the L1 data caches belonging to the processors. When one processor writes to a location in its L1 cache, if the same location is cached in the other L1 cache, the SCU updates it.

Non-coherent data passes through as a standard read or write operation.

The SCU also arbitrates between the Cortex-A9 processors if both attempt simultaneous access to the L2 cache, and manages accesses from the ACP.

Accelerator Coherency Port

The ACP allows peripherals—including FPGA-based peripherals—to maintain data coherency with the Cortex-A9 MPCore processors and the SCU. As shown in [Figure 6-5 on page 6-18](#), dedicated peripherals in the HPS, and those built in FPGA logic, access the coherent memory through the ACP ID mapper and the ACP. For information about the ACP ID mapper, refer to [“ACP ID Mapper” on page 6-20](#).

The high-bandwidth peripherals, including the FPGA data ports, connect to the L3 interconnect.

Burst Sizes and Byte Strokes

The ACP improves system performance for hardware accelerators in the FPGA fabric. However, in order to achieve high levels of performance, you must use the burst types listed in [Table 6-4](#). The other burst types have significantly lower performance.

Table 6-4. Recommended Burst Types

Burst Type	Beats	Width (Bits)	Address Type	Byte Strokes
Wrapping	4	64	64-bit aligned	Asserted
Incrementing	4	64	32-bit aligned	Asserted



If the slave port of the FPGA-to-HPS bridge is not 64 bits wide, you must supply bursts to the FPGA-to-HPS bridge that are upsized or downsized to the burst types above. For example, if the slave data width of the FPGA-to-HPS bridge is 32 bits, then bursts of eight beats by 32 bits are required to access the ACP efficiently.



If the address and burst size of the transaction to the ACP matches either of the conditions above, the logic in the MPU assumes the transaction has all its byte strokes set. If the byte strokes are not all set, then the write does not actually overwrite all the bytes in the word. Instead, the cache assumes the whole cache line is valid. If this line is dirty (and therefore gets written out to SDRAM), data corruption might occur.

Exclusive and Locked Accesses

The ACP does not support exclusive accesses to coherent memory. The ACP supports exclusive accesses to non-coherent memory; however, it is important that the exclusive access transaction is not affected by the upsizing and downsizing logic of the FPGA-to-HPS bridge or the L3 interconnect. If the exclusive access is broken into multiple transactions due to the sizing logic, the exclusive access bit is cleared by the bridge or interconnect and the exclusive access fails.



Altera recommends that exclusive accesses bypass the ACP altogether, either through the 32-bit slave port of the SDRAM controller connected directly to the L3 interconnect or through the FPGA-to-SDRAM interface.



For more information about the exclusive access support of the SDRAM controller subsystem, refer to the *SDRAM Controller Subsystem* chapter in volume 3 of the *Arria® V Device Handbook*.

The ACP ID mapper does not support locked accesses. To ensure mutually exclusive access to shared data, use the exclusive access support built into the SDRAM controller.

ACP ID Mapper

The ACP ID mapper is situated between the level 3 (L3) interconnect and the MPU subsystem ACP slave. It is responsible for mapping 12-bit Advanced Microcontroller Bus Architecture (AMBA®) Advanced eXtensible Interface (AXI™) IDs (input IDs) from the L3 interconnect to 3-bit AXI IDs (output IDs) supported by the ACP slave port.

The ACP ID mapper also implements a 1 GB coherent window into 4 GB address space.

Functional Description

The ACP slave supports up to six masters. However, custom peripherals implemented in the FPGA fabric can have a larger number of masters that need to access the ACP slave. The ACP ID mapper allows these masters to access the ACP.

The ACP ID mapper resides between the interconnect and the ACP slave of the MPU subsystem. It has the following characteristics:

- Support for up to six concurrent ID mappings
- 1 GB coherent window into 4 GB MPCore address space
- Remaps the 5-bit user sideband signals used by the Snoop Control Unit (SCU) and L2 cache.



For more information about AXI user sideband signals, refer to the *CoreLink Level 2 Cache Controller L2C-310 Technical Reference Manual*, which you can download from the ARM website (infocenter.arm.com).

Implementation Details

The ACP is accessed by masters that require access to coherent memory. The ACP slave port can be accessed by the master peripherals of the L3 interconnect, as well as by masters implemented in the FPGA fabric (via the FPGA-to-HPS bridge). [Figure 6-1 on page 6-2](#) shows the ACP ID mapper.

The ACP ID mapper supports the following ID mapping modes:

- Dynamic mapping
- Fixed mapping

Software can select the ID mapping on a per-ID basis. For input IDs that are configured for fixed mapping, there is a one-to-one mapping from input IDs to output IDs. When an input ID is configured for dynamic mapping, it is automatically mapped to an available output ID. The dynamic mode is more flexible because the hardware handles the mapping. The hardware mapping allows you to use one output ID for more than one input ID. Output IDs are assigned to input IDs on a first-come, first-served basis.

Out of the total of eight output IDs, only six are available to masters of the L3 interconnect. The first two output IDs (0 and 1) are dedicated to the Cortex-A9 processor cores in the MPU subsystem, leaving the last six output IDs (2-7) available to the ACP ID mapper. Output IDs 2-6 support fixed and dynamic modes of operation while output ID 7 supports dynamic only.

The operating modes are programmable through accesses to the control and status registers in the ACP ID mapper, available via the level 4 peripheral bus connection. At reset time, the ACP ID mapper defaults to dynamic ID mapping for all output IDs except ID 2, which resets to a fixed mapping for the Debug Access Port (DAP) input ID.

[Table 6-1](#) summarizes the expected usage of the 3-bit output IDs, and their settings at reset.

Table 6-5. ID Intended Usage

Output ID	Reset State	Intended Use
7	Dynamic	Dynamic mapping only
6	Dynamic	Fixed or dynamic, programmed by software.
5		
4		
3		
2	Fixed at 0x001 (DAP)	Assigned to the input ID of the DAP at reset. After reset, can be either fixed or dynamic, programmed by software.
1	—	Not used by the ACP ID Mapper
0		

For masters that cannot drive the AXI user sideband signal of incoming transactions, the ACP ID mapper can control overriding this signal. The ACP ID mapper can also control which 1 GB coherent window into memory is accessed by masters of the L3 interconnect. Each fixed mapping can be assigned a different user sideband signal and memory window to allow specific settings for different masters. All dynamic mappings share a common user sideband signal and memory window setting.

Transaction Capabilities

At any one time, the ACP ID mapper can accept and issue up to 15 transactions per ID mapping. Read and write ID mappings are managed in separate lists, allowing more unique input IDs to be remapped at any given time. If a master issues a series of reads and writes with the same input ID, there are no ordering restrictions.

Because there are only six output IDs available, there can be no more than six read and six write transactions with unique IDs in progress at any one time. The write acceptance of the ACP slave is five transactions, and the read acceptance is 13 transactions. Only four coherent read transactions per ID mapping can be outstanding at one time.

Dynamic Mapping Mode

In dynamic mode, every unique input ID that is received from the L3 master port is assigned to an unused output ID. The new output ID is applied to the transaction as it is issued to the ACP slave of the SCU. Any transaction that arrives to the ACP ID mapper with an input ID that matches an already-in-progress transaction is mapped to the same output ID. Once all transactions on an ID mapping have completed, that output ID is released and can be used again for other input IDs.

Fixed Mapping Mode

In fixed mode, output IDs 2 through 6 can be assigned by software to a specific 12-bit input ID. This ability makes it possible to use the lock-by-master feature of the L2 cache controller, because the input transaction ID from the master is always assigned to a specific output ID. Unlike dynamic mode, ID 7 is not available for fixed mapping because it is reserved for dynamic mode only to avoid system deadlocks.

The ACP ID mapper has two banks of registers to control the behavior of the mappings, namely, a request bank and a read-only status bank. Both banks contain the same number of registers. To change the settings for a particular mapping (either a specific fixed ID, or all dynamic mappings), software should write to the appropriate register in the request bank. The hardware examines the request, and only applies the change when safe to do so, which is when there are no outstanding transactions with the output ID. When the change is applied, the status register is updated. Software should check that the change has actually taken place by polling the corresponding status register.

Table 6–6 shows the input IDs issued from the interconnect for each HPS peripheral master that can access the ACP ID mapper.

Table 6–6. HPS Peripheral Master Input IDs

Interconnect Master	ID ⁽¹⁾
DMA	00000xxxx011
EMAC0	10000xxxx001
EMAC1	10000xxxx010
USB0	100000000011
USB1	100000000110
NAND	1xxxxxxxx100
ETR	100000000000
DAP	000000000001
SD/MMC	100000000101
FPGA-to-HPS bridge	0xxxxxxxx100
Notes to Table 6–6: (1) Values are in binary. The letter x denotes variable ID bits each master passes with each transaction.	

Control of the AXI User Sideband Signals

The ACP ID mapper module allows control of the AXI user sideband signal values. Not all masters drive these signals, so the ACP ID mapper makes it possible to drive the 5-bit user sideband signal with either a default value (in dynamic mode) or specific values (in fixed mode).

There are registers available to configure the default values of the user sideband signals for all transactions, and fixed values of these signals for particular transactions in fixed mapping mode. In dynamic mode, the user sideband signals of incoming transactions are mapped with the default values stored in the register. In fixed mapping mode, the input ID of the transaction is mapped to the 3-bit output ID and the user sideband signals of the transaction are mapped with the values stored in the register that corresponds to the output ID. One important exception, however, is that the ACP ID mapper always allows user sideband signals from the FPGA-to-HPS bridge to pass through to the ACP regardless of the user sideband value associated with the ID.

Memory Region Remap

The ACP ID mapper has 1 GB of address space, which is by default a view into the bottom 1 GB of SDRAM. The mapper also allows transactions to be routed to different 1 GB-sized memory regions, called pages, in both dynamic and fixed modes. The two most significant bits of incoming 32-bit AXI address signals are replaced with the 2-bit user-configured address page decode information. The page decoder uses the values shown in Table 6-7.

Table 6-7. Page Decoder Values

Page	Address Range
0	0x00000000–0x3FFFFFFF
1	0x40000000–0x7FFFFFFF
2	0x80000000–0xBFFFFFFF
3	0xC0000000–0xFFFFFFFF

With this page decode information, a master can read or write to any 1 GB region of the 4 GB memory space while maintaining cache coherency with the MPU subsystem.

Using this feature, a debugger can have a coherent view into main memory, without having to stop the processor. For example, at reset the DAP input ID (0x001) is mapped to output ID 2, so the debugger can vary the 1 GB window that the DAP accesses without affecting any other traffic flow to the ACP.

L2 Cache

The MPU subsystem includes a secondary 512 KB L2 shared, unified cache memory.

Functional Description

The L2 cache is much larger than the L1 cache. The L2 cache has significantly lower latency than external memory. The L2 cache is up to eight-way associative, configurable down to one-way (direct mapped). Like the L1 cache, the L2 cache can be locked by cache line, locked by way, or locked by bus master.

The L2 cache implements error correction codes (ECCs) and ECC error reporting. The cache can report a number of events to the processor and operating system.

The L2 cache consists of the ARM L2C-310 L2 cache controller configured as follows:

- 512 KB total memory
- Eight-way associativity
- Physically addressed, physically tagged
- Line length of 32 bytes

- Critical first word linefills
- Support for all AXI cache modes, as shown in [Table 6-8](#).

Table 6-8. AXI Cache Mode Support

Cache Mode
Write-through ⁽¹⁾
Write-back ⁽¹⁾
Read allocate
Write allocate
Read and write allocate
Note to Table 6-8: (1) Restrictions exist when using ECCs. For more information about SEU protection, refer to the <i>System Manager</i> chapter in volume 3 of the <i>Arria V Device Handbook</i> .

- Single event upset (SEU) protection
 - Parity on Tag RAM
 - ECC on L2 Data RAM
-  For more information about SEU protection, refer to the *System Manager* chapter in volume 3 of the *Arria V Device Handbook*.
- Two slave ports mastered by the SCU
- Two master ports connected to the following slave ports:
 - SDRAM controller, 64 bit slave port width
 - L3 interconnect, 64 bit slave port width
- Cache lockdown capabilities as follows:
 - Line lockdown
 - Lockdown by way
 - Lockdown by master (both processors and ACP masters)
- TrustZone support
- Cache event monitoring. For more information, refer to “[L2 Cache Event Monitoring](#)” on page 6-27.

[Figure 6-1 on page 6-2](#) shows the L2 cache. The L2 cache can access either the L3 interconnect fabric or the SDRAM. The L2 cache address filtering determines how much address space is allocated to the HPS-to-FPGA bridge and how much is allocated to SDRAM, as described in “[Memory Management Unit](#)” on page 6-9.

ECC Support

The L2 cache has the option of using ECCs to protect against SEU errors in the cache RAM.

Enabling ECCs does not affect the performance of the L2 cache. The ECC bits are calculated only for writes to the data RAM that are 64 bits wide (8 bytes, or one-quarter of the cache line length). The ECC logic does not perform a read-modify-write when calculating the ECC bits. The ECC protection bits are not valid in the following cases:

- Data is written that is not 64-bit aligned in memory
- Data is written that is less than 64 bits in width

In these cases the Byte Write Error interrupt is asserted. Cache data is still written when such an error occurs. However, the ECC error detection and correction continues to function. Therefore, the cache data is likely to be incorrect on subsequent reads.

To use ECCs, the software and system must meet the following requirements:

- L1 and L2 cache must be configured as write-back allocate for any cacheable memory region
- FPGA soft IP using the ACP must only perform the following types of data writes:
 - 64-bit aligned in memory
 - 64 bit wide accesses



For more information about SEU errors, refer to the *System Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Implementation Details

Table 6–9 shows the parameter settings for the cache controller.

Table 6–9. Cache Controller Configuration

Feature	Meaning
Cache way size	64 KB
Number of cache ways	8 ways
RAM latencies	2 cycles of latency
Parity logic	Parity logic enabled
Lockdown by master	Lockdown by master enabled
Lockdown by line	Lockdown by line enabled
AXI ID width on slave ports	6 AXI ID bits on slave ports
Address filtering	Address filtering logic enabled
Speculative read	Logic for supporting speculative read enabled
Presence of ARUSERMx and AWUSERMx sideband signals	Sideband signals enabled



For further information about cache controller configurable options, refer to the *CoreLink Level 2 Cache Controller L2C-310 Technical Reference Manual*, Revision r3p2, available on the ARM website (infocenter.arm.com).

L2 Cache Lockdown Capabilities

The L2 cache has three methods to lock data in the cache RAMs:

- Lockdown by line—Used to lock lines in the cache. This is commonly used for loading critical sections of software into the cache temporarily.
- Lockdown by way—Allows any or all of the eight cache ways to be locked. This is commonly used for loading critical data or code into the cache.
- Lockdown by master—Allows cache ways to be dedicated to a single master port. This allows a large cache to look like smaller caches to multiple master ports. The L2 cache can be mastered by CPU0, CPU1, or the six ACP masters, for a total of eight possible master ports.



For more information about L2 cache lockdown capabilities, refer to “Cache operation” in the *Functional Overview* chapter of the *CoreLink Level 2 Cache Controller L2C-310 Technical Reference Manual*, Revision r3p2, available on the ARM website (infocenter.arm.com).

L2 Cache Event Monitoring

The L2 cache supports the built-in cache event monitoring signals shown in [Table 6-10](#). The L2 cache can count two of the events at any one time.

Table 6-10. L2 Cache Events

Event	Description
CO	Eviction (cast out) of a line from the L2 cache.
DRHIT	Data read hit in the L2 cache.
DRREQ	Data read lookup to the L2 cache. Subsequently results in a hit or miss.
DWHIT	Data write hit in the L2 cache.
DWREQ	Data write lookup to the L2 cache. Subsequently results in a hit or miss.
DWTREQ	Data write lookup to the L2 cache with write-through attribute. Subsequently results in a hit or miss.
EPFALLOC	Prefetch hint allocated into the L2 cache.
EPFHIT	Prefetch hint hits in the L2 cache.
EPFRCVDS0	Prefetch hint received by slave port S0.
EPFRCVDS1	Prefetch hint received by slave port S1.
IPFALLOC	Allocation of a prefetch generated by L2 cache controller into the L2 cache.
IRHIT	Instruction read hit in the L2 cache.
IRREQ	Instruction read lookup to the L2 cache. Subsequently results in a hit or miss.
SPNIDEN	Secure privileged non-invasive debug enable.
SRCONFS0	Speculative read confirmed in slave port S0.
SRCONFS1	Speculative read confirmed in slave port S1.
SRRCVDS0	Speculative read received by slave port S0.
SRRCVDS1	Speculative read received by slave port S1.
WA	Allocation into the L2 cache caused by a write, with write-allocate attribute, miss.

- For more information about the built-in L2 event monitoring capability, refer to “Implementation details” in the *Functional Overview* chapter of the *CoreLink Level 2 Cache Controller L2C-310 Technical Reference Manual*, Revision r3p2, available on the ARM website (infocenter.arm.com).

In addition, the L2 cache events can be captured and timestamped using dedicated debugging circuitry.

- For more information about L2 event capture, refer to the *Debug* chapter of the *Cortex-A9 MPCore Technical Reference Manual*, Revision r3p0, available on the ARM website (infocenter.arm.com).

Debugging Modules

The MPU subsystem includes debugging resources through ARM CoreSight on-chip debugging and trace. The following functionality is included:

- Individual program trace for each processor
- Event trace for the Cortex-A9 MPCore
- Cross triggering between processors and other HPS debugging features

Program Trace

Each processor has an independent PTM that provides real-time instruction flow trace. The PTM is compatible with a number of third-party debugging tools.

The PTM provides trace data in a highly compressed format. The trace data includes tags for specific points in the program execution flow, called waypoints. Waypoints are specific events or changes in the program flow.

The PTM recognizes and tags the waypoints listed in [Table 6–11](#).

Table 6–11. Waypoints Supported by the PTM

Type	Additional Waypoint Information
Indirect branches	Target address and condition code
Direct branches	Condition code
Instruction barrier instructions	—
Exceptions	Location where the exception occurred
Changes in processor instruction set state	—
Changes in processor security state	—
Context ID changes	—
Entry to and return from debug state when Halting debug mode is enabled	—

The PTM optionally provides additional information for waypoints, including the following.

- Processor cycle count between waypoints
- Global timestamp values

 For information about global timestamps, refer to the *CoreSight Debug and Trace* chapter in volume 3 of the *Arria V Device Handbook*.

- Target addresses for direct branches

 For more information about the PTM, refer to the *CoreSight PTM-A9 Technical Reference Manual*, Revision r1p0, available on the ARM website (infocenter.arm.com).

Event Trace

Events from each processor can be used as inputs to the PTM. The PTM can use these events as trace and trigger conditions.

For more information about the event trace, refer to “*Performance Monitoring Unit*” on page 6–11.

 For more information about the trigger and trace capabilities, refer to the *CoreSight PTM-A9 Technical Reference Manual*, Revision r1p0, available on the ARM website (infocenter.arm.com).

Cross-Triggering

The PTM can export trigger events and perform actions on trigger inputs. The cross-trigger signals interface with other HPS debugging components including the FPGA fabric. Also, a breakpoint in one processor can trigger a break in the other.

 For detailed information about cross-triggering, refer to the *CoreSight Debug and Trace* chapter in volume 3 of the *Arria V Device Handbook*.

 For more information about debugging hardware in the MPU, refer to the *CoreSight Debug and Trace* chapter in volume 3 of the *Arria V Device Handbook*.

Cortex-A9 MPU Subsystem Register Implementation

The following configurations are available through registers in the Cortex-A9 subsystem:

- All processor-related controls, including the MMU and L1 caches, are controlled using the Coprocessor 15 (CP15) registers of each individual processor.
- All SCU registers, including control for the timers and GIC, are memory map accessible
- All L2 cache registers are memory-mapped.

 For an address map of peripheral slave ports, including the SCU and L2 cache, refer to the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*. For detailed definitions of the registers for the Altera Cortex-A9 MPU subsystem, refer to the *Cortex-A9 MPCore Technical Reference Manual*, Revision r3p0, and the *CoreLink Level 2 Cache Controller L2C-310 Technical Reference Manual*, Revision r3p2, available on the ARM website (infocenter.arm.com).

Document Revision History

Table 6–12 shows the revision history for this document.

Table 6–12. Document Revision History

Date	Version	Changes
November 2012	1.2	Minor updates.
May 2012	1.1	■ Add description of the ACP ID mapper ■ Consolidate redundant information
January 2012	1.0	Initial release.

This section includes the following chapters:

- Chapter 7, CoreSight Debug and Trace



For information about the revision history for chapters in this section, refer to “Document Revision History” in each individual chapter.

The hard processor system (HPS) debug infrastructure provides visibility and control of the HPS modules, the ARM® Cortex™-A9 microprocessor unit (MPU) subsystem, and user logic implemented in the FPGA fabric. The debug system design incorporates ARM® CoreSight™ components.

The HPS contains the following ARM CoreSight debug components:

- “Debug Access Port (DAP)” on page 7–4
- “System Trace Macrocell (STM)” on page 7–4
- “Trace Funnel” on page 7–5
- “Embedded Trace FIFO (ETF)” on page 7–5
- “AMBA Trace Bus Replicator (Replicator)” on page 7–5
- “Embedded Trace Router (ETR)” on page 7–5
- “Trace Port Interface Unit (TPIU)” on page 7–6
- “Embedded Cross Trigger (ECT) System” on page 7–6
- “Program Trace Macrocell (PTM)” on page 7–10

Features of CoreSight Debug and Trace

The CoreSight debug and trace system offers the following features:

- Real-time program flow instruction trace through a separate PTM for each processor
- Host debugger JTAG interface
- Connections for cross-trigger and STM-to-FPGA interfaces, which enable soft IP generation of triggers and system trace messages
- Instruction trace interface through TPIU for trace analysis tools
- Custom message injection through STM into trace stream for delivery to host debugger
- STM and PTM trace sources multiplexed into a single stream through the Trace Funnel

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

Portions © 2011 ARM Limited. Used with permission. All rights reserved. ARM, the ARM Powered logo, AMBA, Jazelle, StrongARM, Thumb, and TrustZone are registered trademarks of ARM Limited. The ARM logo, Angel, ARMulator, AHB, APB, ASB, ATB, AXI, CoreSight, Cortex, EmbeddedICE, ModelGen, MPCore, Multi-ICE, NEON, PrimeCell, ARM7TDMI, ARM7TDMI-S, ARM9TDMI, ARM9E-S, ARM966E-S, ETM7, ETM9, TDMI and STRONG are trademarks of ARM Limited. All other products or services mentioned herein may be trademarks of their respective owners. Neither the whole nor any part of the information contained in, or the product described in, this document may be adapted or reproduced in any material form except with the prior written permission of the copyright holder. The product described in this document is subject to continuous developments and improvements. All particulars of the product and its use contained in this document are given by ARM in good faith. However, all warranties implied or expressed, including but not limited to implied warranties of merchantability, or fitness for purpose, are excluded. This document is intended only to assist the reader in the use of the product. ARM Limited shall not be liable for any loss or damage arising from the use of any information in this document, or any error or omission in such information, or any incorrect use of the product. Where the term ARM is used it means “ARM or any of its subsidiaries as appropriate”. This document is Non-Confidential. The right to use, copy and disclose this document may be subject to license restrictions in accordance with the terms of the agreement entered into by ARM and the party that ARM delivered this document to. The information in this document is final, that is for a developed product.



- Capability to route trace data to any slave accessible to the ETR AXI master connected to the level 3 (L3) interconnect
- Capability for the following SoC modules to trigger each other through the embedded cross-trigger system:
 - FPGA fabric
 - A9-0 processor
 - A9-1 processor
 - PTM-0
 - PTM-1
 - STM
 - ETF
 - ETR
 - TPIU
 - csCTI
 - CTI-0
 - CTI-1
 - FPGA-CTI
 - csCTM
 - CTM

ARM CoreSight Documentation

The following ARM CoreSight specifications and documentation provide a more thorough description of the ARM CoreSight components in the HPS debug system:

- *CoreSight Technology, System Design Guide, ARM DGI 0012D*
- *CoreSight Architecture Specification, ARM IHI 0029B*
- *ARM Debug Interface v5, Architecture Specification, ARM IHI 0031A*
- *Embedded Cross Trigger Technical Reference Manual, ARM DDI 0291A*
- *CoreSight Components Technical Reference Manual, ARM DDI 0314H*
- *CoreSight Program Flow Trace, Architecture Specification, ARM IHI 0035A*
- *CoreSight PTM-A9 Technical Reference Manual, ARM DDI 0401B*
- *CoreSight System Trace Macrocell Technical Reference Manual, ARM DDI 0444A*
- *System Trace Macrocell, Programmers' Model Architecture Specification, ARM IHI 0054*
- *CoreSight Trace Memory Controller Technical Reference Manual, ARM DDI 0461B*




You can download the documents from the ARM website (infocenter.arm.com).

CoreSight Debug and Trace Block Diagram and System Integration

Figure 7-1 shows an overview block diagram of the HPS CoreSight debug and trace system.

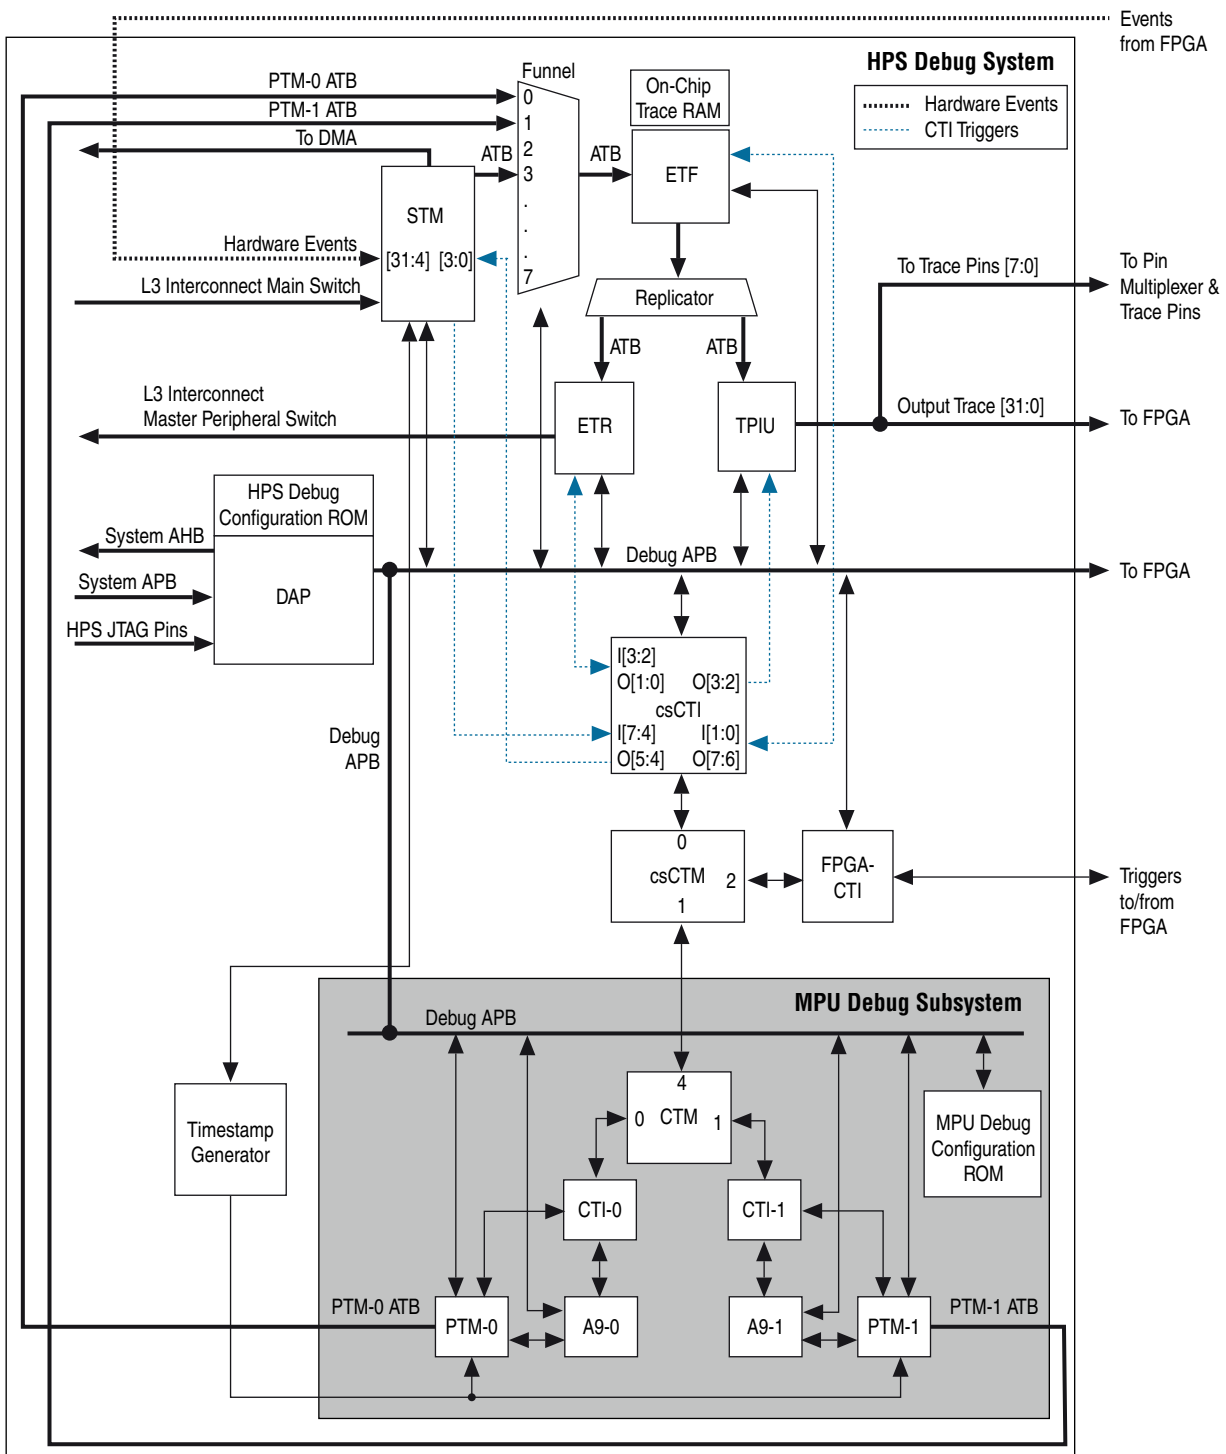Figure 7-1. Debug System Block Diagram



Functional Description of CoreSight Debug and Trace

CoreSight systems provide all the infrastructure you require to debug, monitor, and optimize the performance of a complete HPS design. CoreSight technology addresses the requirement for a multicore debug and trace solution with high bandwidth for whole systems beyond the processor core.

CoreSight technology provides the following features:

- Cross-trigger support between SoC subsystems
- High data compression
- Multisource trace in a single stream
- Standard programming models for standard tool support



For more information about the CoreSight technology, refer to the *CoreSight Components Technical Reference Manual* and the *CoreSight Technology System Design Guide*, which you can download from the ARM website (infocenter.arm.com).

The following sections provide brief descriptions of ARM CoreSight components provided in the HPS debug system.

Debug Access Port (DAP)

The DAP provides the necessary ports for a host debugger to connect to and communicate with the HPS through a JTAG interface connected to dedicated HPS pins that is independent of the JTAG for the FPGA. The JTAG interface provided with the DAP allows a host debugger to access various modules inside the HPS. Additionally, a debug monitor executing on either processor can access different HPS components by interfacing with the system Advanced Microcontroller Bus Architecture (AMBA®) Advanced Peripheral Bus (APB™) slave port of the DAP. The system APB slave port occupies 2 MB of address space in the HPS. Both the JTAG port and system APB port have access to the debug APB master port of the DAP. As shown in [Figure 7-1](#), all CoreSight components are connected to the debug APB.

A host debugger can access any HPS memory-mapped resource in the system via the DAP system master port. Requests made over the DAP system master port are impacted by reads and writes to peripheral registers.



For more information, refer to the *CoreSight Components Technical Reference Manual*, which you can download from the ARM website (infocenter.arm.com).

System Trace Macrocell (STM)

The STM allows messages to be injected into the trace stream for delivery to the host debugger receiving the trace data. These messages can be sent via stimulus ports or the hardware event interface. The STM allows the messages to be time stamped.

The STM provides an AMBA Advanced eXtensible Interface (AXI™) slave interface used to create trace events. The interface can be accessed by the MPU subsystem, direct memory access (DMA) controller, and masters implemented as soft logic in the FPGA fabric via the FPGA-to-HPS bridge. The AXI slave interface supports three address segments, where each address segment is 16 MB and each segment supports up to 65536 channels. Each channel occupies 256 bytes of address space.

The STM also provides 32 hardware event pins. The higher-order 28 pins (31:4) are connected to the FPGA fabric, allowing logic inside FPGA to insert messages into the trace stream. When the STM detects a rising edge on an event pin, a message identifying the event is inserted into the stream. The lower four event pins (3:0) are connected to csCTI.



For more information, refer to the *CoreSight System Trace Macrocell Technical Reference Manual*, which you can download from the ARM website (infocenter.arm.com).

Trace Funnel

The Trace Funnel multiplexes three trace sources into a single trace stream. Port 0 of the Trace Funnel is connected to the PTM for CPU 0. Port 1 of the Trace Funnel is connected to the PTM for CPU 1. Port 3 of the Trace Funnel is connected to the STM. Port 2 and Port 4 through Port 7 are not used.



For more information, refer to the *CoreSight Components Technical Reference Manual*, which you can download from the ARM website (infocenter.arm.com).

Embedded Trace FIFO (ETF)

The output of the Trace Funnel is sent to the ETF. The ETF is used as an elastic buffer between trace generators (STM, PTM) and trace destinations. The ETF stores up to 32 KB of trace data in the on-chip trace RAM.

AMBA Trace Bus Replicator (Replicator)

The Replicator broadcasts trace data from the ETF to the embedded trace router (ETR) and trace port interface unit (TPIU).



For more information, refer to the *CoreSight Components Technical Reference Manual*, which you can download from the ARM website (infocenter.arm.com).

Embedded Trace Router (ETR)

The ETR can route trace data to the HPS on-chip RAM, the HPS SDRAM, and any memory in the FPGA fabric connected to the HPS-to-FPGA bridge. The ETR receives trace data from the Replicator. By default, the buffer to receive the trace data resides in SDRAM at offset 0x00100000 and is 32 KB. You can override this default configuration by programming registers in the ETR.

Trace Port Interface Unit (TPIU)

The TPIU is a bridge between on-chip trace sources and an off-chip trace port. The TPIU receives trace data from the Replicator and drives the trace data to a trace port analyzer.

The trace output from the TPIU is software programmable and can be set to either 8 or 32 bits wide. The trace output is routed to an 8-bit HPS I/O interface and a 32-bit interface to the FPGA fabric. The trace data sent to the FPGA fabric can be transported off-chip using available serializer/deserializer (SERDES) resources in the FPGA.



For more information, refer to the *CoreSight Components Technical Reference Manual*, which you can download from the ARM website (infocenter.arm.com).


Embedded Cross Trigger (ECT) System

The ECT system provides a mechanism for HPS modules to trigger each other. The ECT consists of the following modules:

- Cross Trigger Interface (CTI)
- Cross Trigger Matrix (CTM)

Figure 7-2 shows how CTIs and CTMs are used in a generic ECT setup. The red line depicts an trigger input to one CTI generating a trigger output in another CTI. Though the signal travels throughout channel 2, it only enters and exits through trigger inputs and outputs you configure.

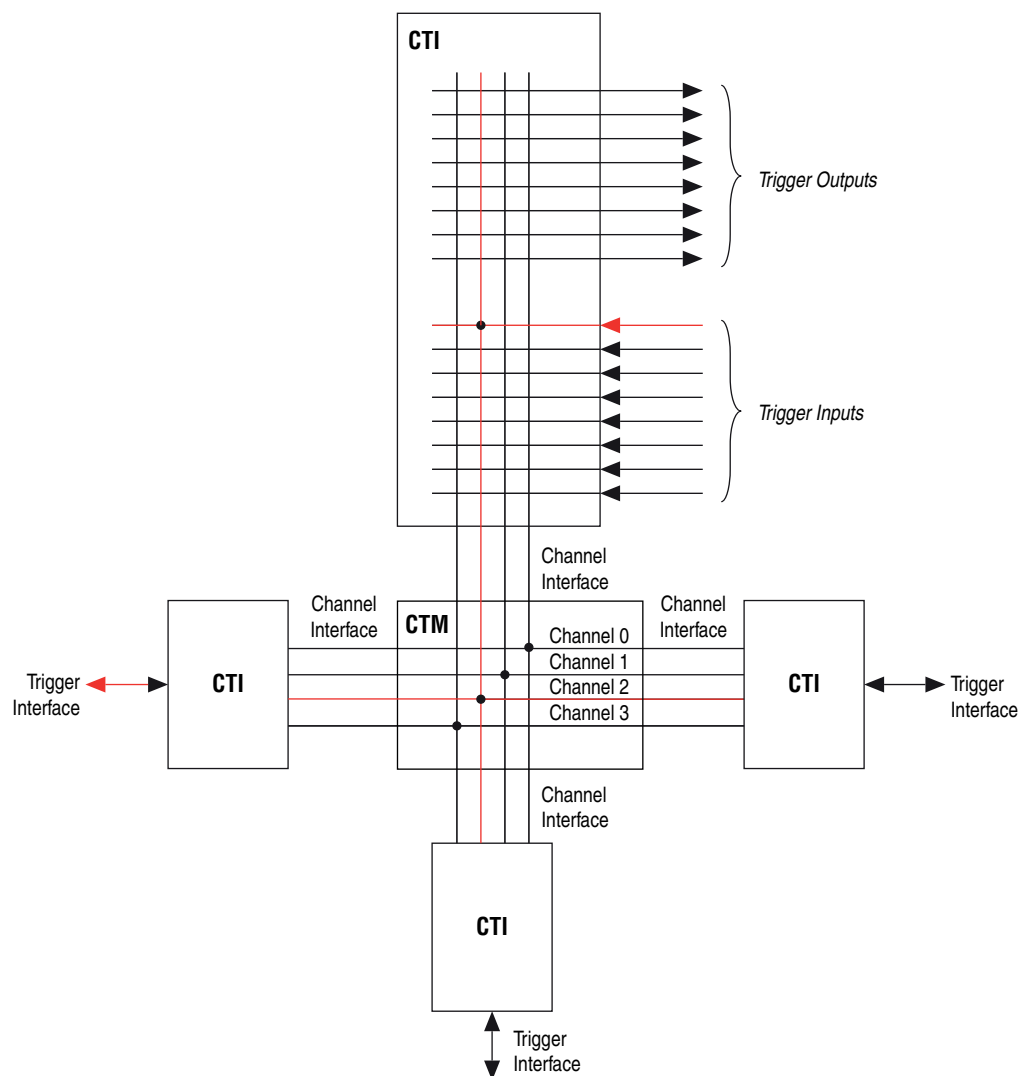Figure 7-2. Generic ECT System




Cross Trigger Interface (CTI)

CTIs allow trigger sources and sinks to interface with the ECT. Each CTI supports up to eight trigger inputs and eight trigger outputs, and is connected to a CTM.

Figure 7-2 shows the relationship of trigger inputs, trigger outputs, and CTM channels of a CTI.

Figure 7-3 shows trigger input and trigger output connections in detail.

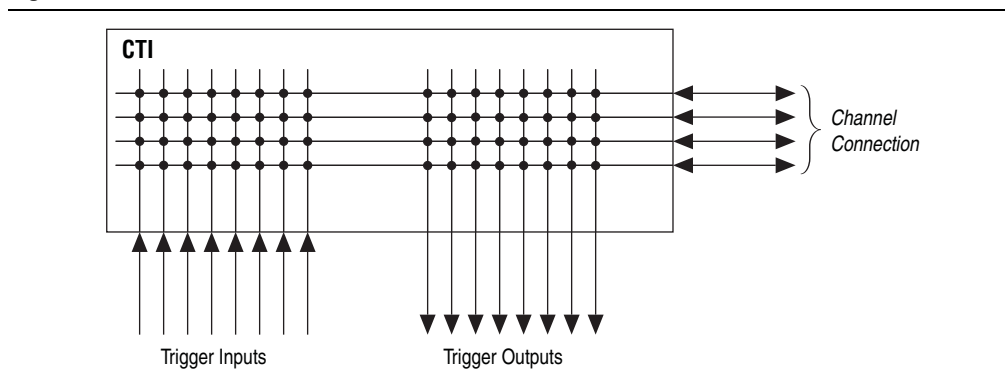Figure 7-3. CTI Connections



The HPS debug system contains the following four CTIs:

- csCTI—performs cross triggering between the STM, ETF, ETR, and TPIU.
- FPGA-CTI—exposes the cross-triggering system to the FPGA fabric.
- CTI-0 and CTI-1—reside in the MPU debug subsystem. Each CTI is associated with a processor and the processor's associated PTM.

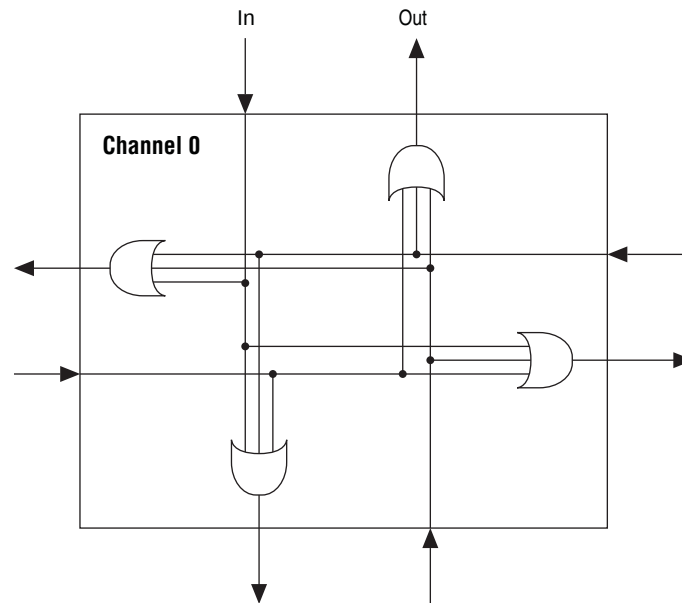
Cross Trigger Matrix (CTM)

A CTM is a transport mechanism for triggers traveling from one CTI to one or more CTIs or CTMs. The HPS contains two CTMs. One CTM connects csCTI and FPGA-CTI; the other connects CTI-0 and CTI-1. The two CTMs are connected together, allowing triggers to be transmitted between the MPU debug subsystem, the debug system, and the FPGA fabric.

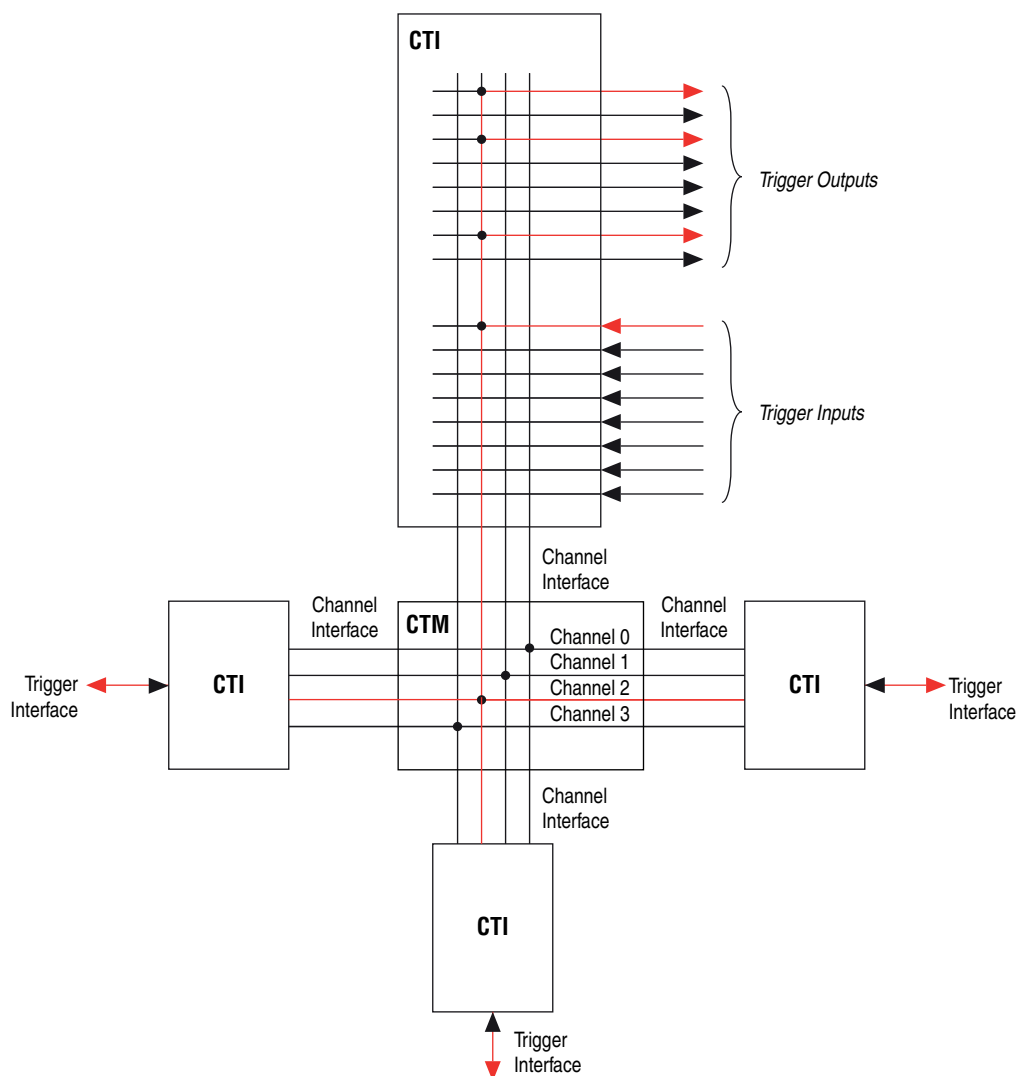
Each CTM has four ports and each port has four channels. Each CTM port can be connected to a CTI or another CTM.

Figure 7-4 shows the structure of a CTM channel. Paths inside the CTM are purely combinatorial.

Figure 7-4. CTM Channel Structure



the entire system.

Figure 7-5. CTI Trigger Connections

For more information, refer to the *CoreSight Components Technical Reference Manual*, which you can download from the ARM website (infocenter.arm.com).

Program Trace Macrocell (PTM)

The PTM performs real-time program flow instruction tracing and provides a variety of filters and triggers that can be used to trace specific portions of code.

The HPS contains two PTMs. Each PTM is paired with a processor and CTI. Trace data generated from the PTM can be transmitted off-chip using HPS pins, or to the FPGA fabric, where it can be pre-processed and transmitted off-chip using high-speed FPGA pins.

For more information, refer to the *CoreSight PTM-A9 Technical Reference Manual*, which you can download from the ARM website (infocenter.arm.com).

HPS Debug APB Interface

The HPS can extend the CoreSight debug control bus into the FPGA fabric. The debug interface is an APB-compatible interface with built-in clock crossing.



For more information, refer to the *HPS Component Interfaces* chapter in volume 3 of the *Arria V Device Handbook*.

CoreSight Debug and Trace Programming Model

This section describes programming model details specific to Altera's implementation of the ARM CoreSight technology.



For programming interface details of each CoreSight component, refer to the *CoreSight Components Technical Reference Manual*, which you can download from the ARM website (infocenter.arm.com).

The debug components can be configured to cause triggers when certain events occur. For example, soft logic in the FPGA fabric can signal an event which triggers an STM message injection into the trace stream. CoreSight components are configured through memory-mapped registers, located at offsets relative to the CoreSight component base address. CoreSight component base addresses are accessible through a ROM table.

ROM Table

Table 7-1 contains entries found in the ROM table portion of the DAP.

Table 7-1. DAP ROM Table

ROM Entry	Offset[30:12]	Description
0x0	0x00001	ETF
0x1	0x00002	CTI
0x2	0x00003	TPIU
0x3	0x00004	Trace Funnel
0x4	0x00005	STM
0x5	0x00006	ETR
0x6	0x00007	FPGA-CTI
0x7	0x00100	A9ROM
0x8	0x00080	FPGAROM
0x9	0x00000	End of ROM

A host debugger can access this table at 0x8000_0000 through the DAP. HPS masters can access this ROM at 0xFF00_0000. Registers for a particular CoreSight component are accessed by adding the register offset to the CoreSight component base address, and adding that total to the base address of the ROM table.

The base address of the ROM table is different when accessed from the debugger (at 0x8000_0000) than when accessed from any HPS master (at 0xFF00_0000). For example, the CTI output enable register, CTIOUTEN[2] at offset 0xA8, can be accessed by the host debugger at 0x8000_20A8. To derive that value, add the host debugger access address to the ROM table of 0x8000_0000, to the CTI component base address of 0x0000_2000, to the CTIOUTEN[2] register offset of 0xA8.

STM Channels

The STM AXI slave is connected to the MPU, DMA, and FPGA-to-HPS bridge masters. Each master has up to 65536 channels where each channel occupies 256 bytes of address space, for a total of 16 MB per master. The HPS address map allocates 48 MB of consecutive address space to the STM AXI slave port, divided in three 16 MB segments.

Table 7-2 lists the address allocation for the STM address segments.

Table 7-2. STM AXI Slave Port Address Allocation

Segment	Start Address	End Address
0	0xFC00_0000	0xFCFF_FFFF
1	0xFD00_0000	0xFDFF_FFFF
2	0xFE00_0000	0xFEFF_FFFF

Each of the three masters can access any one of the three address segments. Your software design determines which master uses which segment, based on the value of bits 24 and 25 in the write address, AWADDRS[25:24]. Software must restrict each master to use only one of the three segments.

Table 7-3 lists the fields of the STM address.

Table 7-3. STM AXI Address Fields

AXI Signal Fields	Description
AWADDRS[7:0]	These bits index the 256 bytes of the stimulus port. For more information, refer to the <i>System Trace Macrocell, Programmers' Model Architecture Specification</i> , which you can download from the ARM website (infocenter.arm.com).
AWADDRS[23:8]	These bits identify the 65536 stimulus ports associated with a master.
AWADDRS[25:24]	These bits identify the three masters. Only 0, 1, and 2 are valid values.
AWADDRS[31:26]	Always 0x3F. Bits 24 to 31 combine to access 0xFC00_0000 through 0xFEFF_FFFF.

Each STM message contains a master ID that tells the host debugger which master is associated with the message. The STM master ID is determined by combining a portion of the AWADDRS signal and the AWPROT protection bit. Table 7-4 shows how the STM master ID is calculated.

Table 7-4. STM Master ID Calculation

Master ID Bits	AXI Signal Bits	Notes
Master ID[5:0]	AWADDRS[29:24]	The lowest two bits are sufficient to determine which master, but CoreSight uses a seven-bit master ID.
Master ID[6]	AWPROT[1]	0 indicates secure; 1 indicates nonsecure.

In addition to access through STM channels, the higher-order 28 (31:4) of the 32 event signals are attached to the FPGA through the FPGA-CTI. These event signals allow the FPGA fabric to send additional messages using the STM.

CTI Trigger Connections to Outside the Debug System

The following CTIs in the HPS debug system connect to outside the debug system:

- csCTI
- FPGA-CTI

csCTI

This section lists the trigger input, output, and output acknowledge pin connections implemented for csCTI in the debug system. The trigger input acknowledge signals are not connected to pins.

Table 7-5 lists the trigger input pin connections implemented for csCTI.

Table 7-5. Trigger Input Signals

Number	Signal	Source
7	ASYNCOUT	STM
6	TRIGOUTHETE	STM
5	TRIGOUTSW	STM
4	TRIGOUTSPTE	STM
3	ACQCOMP	ETR
2	FULL	ETR
1	ACQCOMP	ETF
0	FULL	ETF

Table 7-6 lists the trigger output pin connections implemented for csCTI.

Table 7-6. Trigger Output Signals

Number	Signal	Destination
7	TRIGIN	ETF
6	FLUSHIN	ETF
5	HWEVENTS[3:2]	STM
4	HWEVENTS[1:0]	STM
3	TRIGIN	TPIU
2	FLUSHIN	TPIU
1	TRIGIN	ETR
0	FLUSHIN	ETR

Table 7-7 lists the trigger output acknowledge pin connections implemented for csCTI.

Table 7-7. Trigger Output Acknowledge Signals

Number	Signal	Source
7	0	—
6	0	—
5	0	—
4	0	—
3	TRIGINACK	TPIU
2	FLUSHINACK	TPIU
1	0	—
0	0	—

FPGA-CTI

FPGA-CTI connects the debug system to the FPGA fabric. FPGA-CTI has all of its triggers available to the FPGA fabric.

Configuring Embedded Cross-Trigger Connections

CTI interfaces are programmable through a memory-mapped register interface.



The specific registers are described in the *CoreSight Components Technical Reference Manual*, which you can download from the ARM website (infocenter.arm.com).

To access registers in any CoreSight component through the debugger, the register offsets must be added to the CoreSight component's base address. That combined value must then be added to the address at which the ROM table is visible to the debugger (0x80000000).

Each CTI has two interfaces, the trigger interface and the channel interface. The trigger interface is the interface between the CTI and other components. It has eight trigger signals, which are hardwired to other components. The channel interface is the interface between a CTI and its CTM, with four bidirectional channels. The mapping of trigger interface to channel interface (and vice versa) in a CTI is dynamically configured. You can enable or disable each CTI trigger output and CTI trigger input connection individually.

For example, you can configure trigger input 0 in the FPGA-CTI to route to channel 3, and configure trigger output 3 in the FPGA-CTI and trigger output 7 in CTI-0 in the MPU debug subsystem to route from channel 3. This configuration causes a trigger at trigger input 0 in FPGA-CTI to propagate to trigger output 3 in the FPGA-CTI and trigger output 7 in CTI-0. Propagation can be single-to-single, single-to-multiple, multiple-to-single, and multiple-to-multiple.

A particular soft logic signal in the FPGA connected to a trigger input in the FPGA-CTI can be configured to trigger a flush of trace data to the TPIU. For example, you can configure channel 0 to trigger output 2 in csCTI. Then configure trigger input T3 to channel 0 in FPGA-CTI. Trace data is flushed to the TPIU when a trigger is received at trigger output 2 in csCTI.

Another soft logic signal in the FPGA connected to trigger input T2 in FPGA-CTI can be configured to trigger an STM message. csCTI output triggers 4 and 5 are wired to the STM CoreSight component in the HPS. For example, configure channel 1 to trigger output 4 in csCTI. Then configure trigger input T2 to channel 1 in FPGA-CTI. Refer to [Figure 7-1](#).

Another soft logic signal in the FPGA fabric connected to trigger input T1 in FPGA-CTI can be configured to trigger a breakpoint on CPU 1. Trigger output 1 in CTI-1 is wired to the debug request (EDBGRQ) signal of CPU-1. For example, configure channel 2 to trigger output 1 in CTI-1. Then configure trigger input T1 to channel 2 in FPGA-CTI.

Debug Clocks

The CoreSight system uses several different clocks. [Table 7-8](#) provides a list of these clocks. Port Name is the name of the clock signal inputs described for individual CoreSight debug components in the ARM documentation. Signal Name is the name of the clock signal used with other HPS components.

Table 7-8. CoreSight Clocks

Port Name	Clock Source	Signal Name	Description
ATCLK	Clock manager	dbg_at_clk	Trace bus clock.
CTICK (for csCTI)	Clock manager	dbg_at_clk	Cross trigger interface clock for csCTI. It can be synchronous or asynchronous to CTMCLK.
CTICK (for FPGA-CTI)	FPGA fabric	fpga_cti_clk	Cross trigger interface clock for FPGA-CTI.
CTICK (for CTI-0 and CTI-1)	Clock manager	mpu_clk	Cross trigger interface clock for CTI-0 and CTI-1. It can be synchronous or asynchronous to CTMCLK.
CTMCLK (for csCTM)	Clock manager	dbg_clk	Cross trigger matrix clock for csCTM. It can be synchronous or asynchronous to CTICK.
CTMCLK (for CTM)	Clock manager	mpu_clk	Cross trigger matrix clock for CTM. It can be synchronous or asynchronous to CTICK.
DAPCLK	Clock manager	dbg_clk	DAP internal clock. It must be equivalent to PCLKDBG.
PCLKDBG	Clock manager	dbg_clk	Debug APB (DAPB) clock.
HCLK	Clock manager	dbg_clk	Used by the AHB-Lite master inside the DAP. It is asynchronous to DAPCLK. In the HPS, the AHB-Lite port uses same clock as DAPCLK.
PCLKSYS	Clock manager	l4_mp_clk	Used by the APB slave port inside the DAP. It is asynchronous to DAPCLK.
SWCLKTCK	JTAG interface	dap_tck	The SWJ-DP clock driven by the external debugger through either the JTAG interface or the FPGA fabric. It is asynchronous to DAPCLK. When through the JTAG interface, this clock is the same as TCK of the JTAG interface.
	FPGA fabric	tpiu_traceclk_in	
TRACECLKIN	Clock manager	dbg_trace_clk	TPIU trace clock input. It is asynchronous to ATCLK. In the HPS, this clock can come from the clock manager or the FPGA fabric.



For more information about the CoreSight port names, refer to table 6-2 in the *CoreSight Technology System Design Guide*, which you can download from the ARM website (infocenter.arm.com).

Debug Resets

The CoreSight system uses several resets. Table 7-9 provides a list of these resets. Port Name is the name of the clock signal inputs described for individual CoreSight debug components in the ARM documentation. Signal Name is the name of the clock signal used with other HPS components.

Table 7-9. CoreSight Resets

Port Name	Clock Source	Signal Name	Description
ATRESETn	Reset manager	dbg_rst_n	Trace bus reset. It resets all registers in ATCLK domain.
nCTIRESET	Reset manager	dbg_rst_n	CTI reset signal. It resets all registers in CTICLK domain. In the HPS, there are four instances of CTI. All four use the same reset signal.
DAPRESETn	Reset manager	dbg_rst_n	DAP internal reset. It is connected to PRESETDBGn.
PRESETDBGn	Reset manager	dbg_rst_n	Debug APB reset. Resets all registers clocked by PCLKDBG.
HRESETn	Reset manager	sys_dbg_rst_n	SoC-provided reset signal that resets all of the AMBA on-chip interconnect. Use this signal to reset the DAP AHB-Lite master port.
PRESETSYSn	Reset manager	sys_dbg_rst_n	Resets system APB slave port of DAP.
nCTMRESET	Reset manager	dbg_rst_n	CTM reset signal. It resets all signals clocked by CTMCLK.
nPOTRST	Reset manager	tap_cold_rst_n	True power on reset signal to the DAP SWJ-DP. It must only reset at power-on.
nTRST	JTAG interface	nTRST pin	Resets the DAP TAP controller inside the SWJ-DP. This signal is driven by the host using the JTAG connector.
TRESETn	Reset manager	dbg_rst_n	Reset signal for TPIU. Resets all registers in the TRACECLKIN domain.

 For more information about the CoreSight port names, refer to table 6-3 in the *CoreSight Technology System Design Guide*, which you can download from the ARM website (infocenter.arm.com).

The ETR stall enable field (etrstallen) of the ctrl register in the reset manager controls whether the ETR is requested to stall its AXI master interface to the L3 interconnect before a warm or debug reset.

 For more information about reset handshaking, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

The level 4 (L4) watchdog timers can be paused during debugging to prevent reset while the processor is stopped at a breakpoint.

 For more information, refer to the *Watchdog Timer* chapter in volume 3 of the *Arria V Device Handbook*.

CoreSight Debug and Trace Address Map and Register Definitions

 The address map resides in the [hps.html](#) file that accompanies this handbook volume. The register definitions reside in separate ARM documentation. Click the link to open the file.

To view the debug-related module descriptions and base addresses, scroll to and click the following links:

- [stm](#)
- [dap](#)
- [dmanonsecure](#)
- [dmasecure](#)
- [mpuscu](#)
- [mpul2](#)

To then view the register and field descriptions, click the link in the module description to access the appropriate ARM documentation. The register addresses are offsets relative to the base address of each module instance.

 The base addresses of all modules are also listed in the [Introduction to the Hard Processor System](#) chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

[Table 7-10](#) shows the revision history for this document.

Table 7-10. Document Revision History

Date	Version	Changes
November 2012	1.2	Minor updates.
June 2012	1.1	Added functional description, programming model, and address map and register definitions sections.
January 2012	1.0	Initial release.

This section includes the following chapters:

- Chapter 8, SDRAM Controller Subsystem
- Chapter 9, On-Chip Memory
- Chapter 10, NAND Flash Controller
- Chapter 11, SD/MMC Controller
- Chapter 12, Quad SPI Flash Controller



For information about the revision history for chapters in this section, refer to “Document Revision History” in each individual chapter.

The hard processor system (HPS) SDRAM controller subsystem provides efficient access to external SDRAM for the ARM® Cortex™-A9 microprocessor unit (MPU) subsystem, the level 3 (L3) interconnect, and the FPGA fabric. The SDRAM controller provides an interface between the FPGA fabric and HPS. The interface accepts Advanced Microcontroller Bus Architecture (AMBA®) Advanced eXtensible Interface (AXI™) and Avalon® Memory-Mapped (Avalon-MM) transactions, converts those commands to the correct commands for the SDRAM, and manages the details of the SDRAM access.

Features of the SDRAM Controller Subsystem

The SDRAM controller subsystem offers the following features:


- Support for double data rate 2 (DDR2), DDR3, and low-power DDR2 (LPDDR2) SDRAM
- User-configurable timing parameters
- Up to 4 Gb density parts
- Two chip selects
- Integrated error correction code (ECC), 24- and 40-bit widths
- User-configurable memory width of 8, 16, 16+ECC, 32, 32+ECC
- Command reordering (look-ahead bank management)
- Data reordering (out of order transactions)
- User-controllable bank policy on a per port basis for either closed page or conditional open page accesses
- User-configurable priority support with both absolute and relative priority scheduling
- Flexible FPGA fabric interface configuration with up to 6 ports and data widths up to 256 bits wide using Avalon-MM and AXI interfaces.
- Power management supporting self refresh, partial array self-refresh (PASR), power down, and LPDDR2 deep power down

SDRAM Controller Subsystem Block Diagram and System Integration

The SDRAM controller subsystem connects to the MPU subsystem, the main switch of the L3 interconnect, and the FPGA fabric. The memory interface consists of the SDRAM controller, the physical layer (PHY), control and status registers, and their associated interfaces.

Figure 8–1 shows a high-level block diagram of the SDRAM controller subsystem.

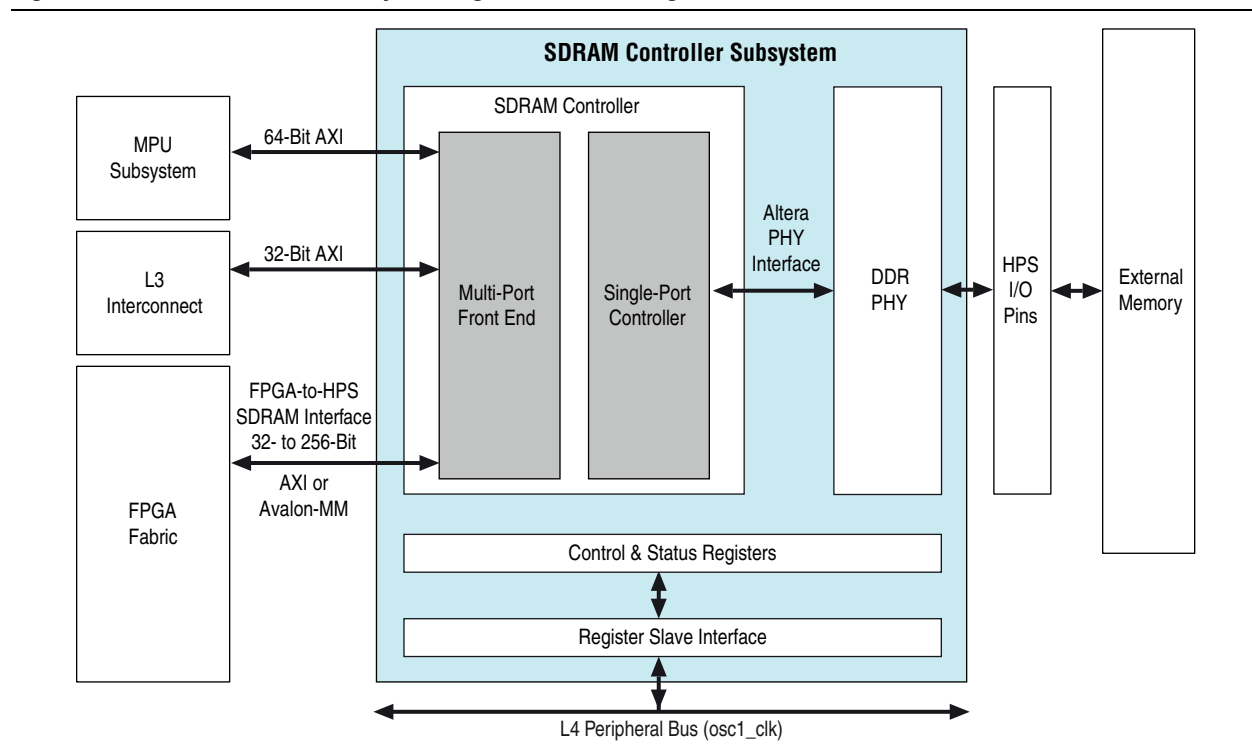Figure 8–1. SDRAM Controller Subsystem High-Level Block Diagram



SDRAM Controller

The SDRAM controller provides high performance data access and run-time programmability. The controller reorders data to reduce row conflicts and bus turn-around time by grouping read and write transactions together, allowing for efficient traffic patterns and reduced latency.

The SDRAM controller consists of a multiport front end (MPFE) and a single-port controller. The MPFE provides multiple independent interfaces to the single-port controller. The single-port controller communicates with and manages each external memory device. For more information, refer to [“Memory Controller Architecture” on page 8–4](#).

DDR PHY

The DDR PHY provides a physical layer interface between the memory controller and memory devices, which performs read and write memory operations. The DDR PHY has dataflow components, control components, and calibration logic that handle the calibration for the SDRAM interface timing.

SDRAM Controller Subsystem Interfaces

The following sections describe the SDRAM controller subsystem interfaces.

MPU Subsystem Interface

The SDRAM controller is connected to the MPU subsystem with a dedicated 64-bit AXI interface, operating on the `mpu_l2_ram_clk` clock domain.

L3 Interconnect Interface

The SDRAM controller is connected to the L3 interconnect with a dedicated 32-bit AXI interface, operating on the `l3_main_clk` clock domain.

CSR Interface

The CSR interface is connected to the level 4 (L4) bus and operates on the `l4_sp_clk` clock domain. The MPU subsystem uses the CSR interface to configure the controller and PHY, for example, setting the memory timing parameter values or placing the memory to a low power state. The CSR interface also provides access to the status registers in the controller and PHY.

FPGA-to-HPS SDRAM Interface

The FPGA-to-HPS SDRAM interface provides masters implemented in the FPGA fabric access to the SDRAM controller subsystem in the HPS. The interface has three ports types that are used to construct the following AXI or Avalon-MM interfaces:

- Command ports—issue read and write commands, and for receive write acknowledge responses
- 64-bit read data ports—receive data returned from a memory read
- 64-bit write data ports—transmit write data

The FPGA-to-HPS SDRAM interface supports six command ports, allowing up to six Avalon-MM interfaces or three AXI interfaces. Each command port can be used to implement either a read or write command port for AXI, or be used as part of an Avalon-MM interface. The AXI and Avalon-MM interfaces can be configured to support 32-, 64-, 128-, and 256-bit data.

Table 8–1 lists the FPGA-to-HPS SDRAM controller interface ports connected to the FPGA.

Table 8–1. FPGA-to-HPS SDRAM Controller Port Types

Port Type	Number
Command	6
64-bit read data	4
64-bit write data	4

The FPGA-to-HPS SDRAM controller interface can be configured with the following characteristics:

- Avalon-MM interfaces and AXI interfaces can be mixed and matched as required by the fabric logic, within the bounds of the number of ports provided to the fabric.

- Each Avalon-MM or AXI interface of the FPGA-to-HPS SDRAM interface operates on an independent clock domain.
- The FPGA-to-HPS SDRAM interfaces are configured during FPGA configuration.

Table 8–2 shows the number of ports needed to configure different bus protocols, based on type and data width.

Table 8–2. FPGA-to-HPS SDRAM Port Utilization


Bus Protocol	Command	Read Data	Write Data
32- or 64-bit AXI	2 ⁽¹⁾	1	1
128-bit AXI	2 ⁽¹⁾	2 ⁽²⁾	2 ⁽²⁾
256-bit AXI	2 ⁽¹⁾	4 ⁽²⁾	4 ⁽²⁾
32- or 64-bit Avalon-MM	1	1	1
128-bit Avalon-MM	1	2	2
256-bit Avalon-MM	1	4	4
32- or 64-bit Avalon-MM write-only	1	0	1
128-bit Avalon-MM write-only	1	0	2
256-bit Avalon-MM write-only	1	0	4
32- or 64-bit Avalon-MM read-only	1	1	0
128-bit Avalon-MM read-only	1	2	0
256-bit Avalon-MM read-only	1	4	0
Notes to Table 8–2: (1) Because the AXI protocol allows simultaneous read and write commands to be issued, two SDRAM control ports are required to form an AXI interface. (2) Because the native size of the data ports is 64 bits, extra read and write ports are required to form an AXI interface.			

Memory Controller Architecture

The SDRAM controller consists of an MPFE, a single-port controller, and an interface to the CSRs.

Figure 8–2 shows a block diagram of the SDRAM controller portion of the SDRAM controller subsystem.

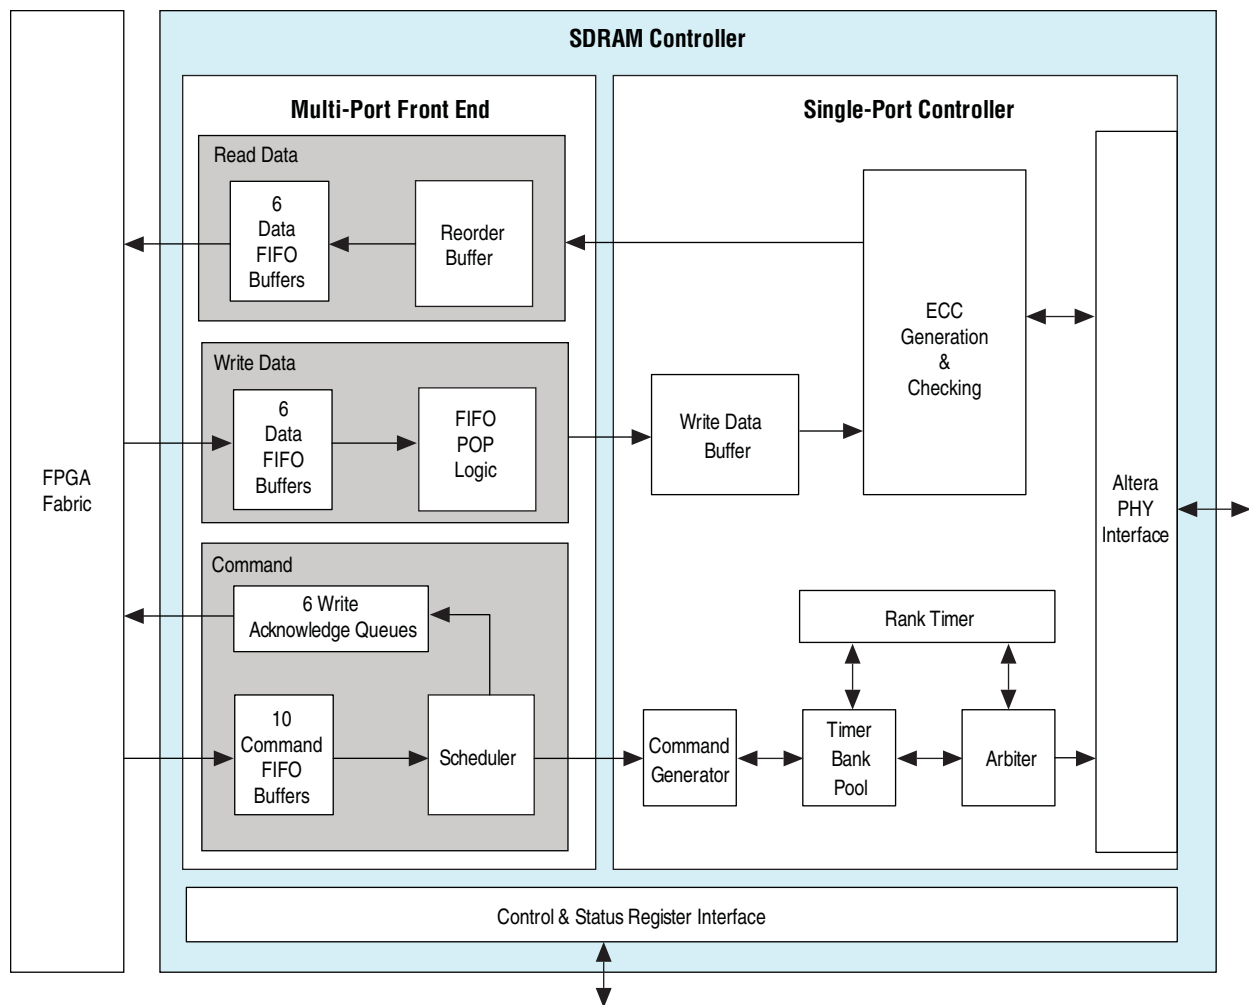Figure 8–2. SDRAM Controller Block Diagram



MPFE

The MPFE is responsible for scheduling pending transactions from the configured interfaces and sending the scheduled memory transactions to the single-port controller. The MPFE handles all functions related to individual ports.

The MPFE consists of the following three primary sub-blocks.

Command Block

The command block accepts read and write transactions from the FPGA fabric and the HPS. When the command FIFO buffer is full, the command block applies backpressure by deasserting the ready signal. For each pending transaction, the command block calculates the next SDRAM burst needed to progress on that transaction. The command block schedules pending SDRAM burst commands based on the user-supplied configuration, available write data, and unallocated read data space.

Write Data Block

The write data block transmits data to the single-port controller. The write data block maintains write data FIFO buffers and clock boundary crossing for the write data. The write data block informs the command block of the amount of pending write data for each transaction so that the command block can calculate eligibility for the next SDRAM write burst.

Read Data Block

The read data block receives data from the single-port controller. Depending on the port state, the read data block either buffers the data in its internal buffer or passes the data straight to the clock boundary crossing FIFO buffer. The read data block reorders out-of-order data for Avalon-MM ports.

In order to prevent the read FIFO buffer from overflowing, the read data block informs the command block of the available buffer area so the command block can pace read transaction dispatch.

Single-Port Controller

The single-port logic is responsible for following actions:

- Queuing the pending SDRAM bursts
- Choosing the most efficient burst to send next
- Keeping the SDRAM pipeline full
- Ensuring all SDRAM timing parameters are met

Transactions passed to the single-port logic for a single page in SDRAM are guaranteed to be executed in order, but transactions can be reordered between pages. Each SDRAM burst read or write is converted to the appropriate Altera PHY interface (AFI) command to open a bank on the correct row for the transaction (if required), execute the read or write command, and precharge the bank (if required).

The single-port logic implements command reordering (looking ahead at the command sequence to see which banks can be put into the correct state to allow a read or write command to be executed) and data reordering (allowing data transactions to be dispatched even if the data transactions are executed in an order different than they were received from the multiport logic).

Command Generator

The command generator accepts commands from the MPFE and from the internal ECC logic, and provides those commands to the timer bank pool.

Timer Bank Pool

The timer bank pool is a parallel queue that operates with the arbiter to enable data reordering. The timer bank pool tracks incoming requests, ensures that all timing requirements are met, and, on receiving write-data-ready notifications from the write data buffer, passes the requests to the arbiter.

Arbiter

The arbiter determines the order in which requests are passed to the memory device. When the arbiter receives a single request, that request is passed immediately. When multiple requests are received, the arbiter uses arbitration rules to determine the order to pass requests to the memory device.

Rank Timer

The rank timer performs the following functions:

- Maintains rank-specific timing information
- Ensures that only four activates occur within a specified timing window
- Manages the read-to-write and write-to-read bus turnaround time
- Manages the time-to-activate delay between different banks

Write Data Buffer

The write data buffer receives write data from the MPFE and passes the data to the PHY, on approval of the write request.

ECC Block

The ECC block consists of an encoder and a decoder-corrector, which can detect and correct single-bit errors, and detect double-bit errors. The ECC block can correct single-bit errors and detect double-bit errors resulting from noise or other impairments during data transmission.

AFI Interface

The AFI interface provides communication between the controller and the PHY.

CSR Interface

The CSR interface is accessible from the L4 bus. The interface allows code executing in the HPS MPU and FPGA fabric to configure and monitor the SDRAM controller.

Functional Description of the SDRAM Controller Subsystem

This section provides a functional description of the SDRAM controller subsystem.

MPFE Operational Behavior

This section describes the operational behavior of the MPFE.

Operation Ordering

Requests to the same SDRAM page arriving at a given port are executed in the order in which they are received. Requests arriving at different ports have no guaranteed order of service, except when a first transaction has completed before the second arrives.

Operation ordering is defined and enforced within a port, but not between ports. All transactions received on a single port for overlapping addresses execute in order. Transactions received on different ports have no guaranteed order unless the second transaction is presented after the first has completed.

Avalon-MM does not support write acknowledgement. When a port is configured to support Avalon-MM, you should read from the location that was previously written to ensure that the write operation has completed. When a port is configured to support AXI, the master accessing the port can safely issue a read operation to the same address as a write operation as soon as the write has been acknowledged. To keep write latency low, writes are acknowledged as soon as the transaction order is guaranteed—meaning that any operations received on any port to the same address as the write operation are executed after the write operation.

To ensure that the overall latency of traffic is as low as possible, the single port logic can return read data out of order to the multi-port logic which will reorder it when transactions return out of order. A large percentage of traffic reordering will be between ports and transactions only are ordered within a port. For traffic which is reordered between ports but not within a port, no reordering needs to be done. Eliminating unnecessary reordering reduces average latency.

Multiport Scheduling

Multiport scheduling is governed by two factors, the absolute priority of a request and the weighting of a port.

The evaluation of absolute priority ensures that ports carrying higher-priority traffic are served ahead of ports carrying lower-priority traffic. The scheduler recognizes eight priority levels (0-7), with higher values representing higher priorities. For example, any transaction with priority seven is scheduled before transactions of priority six or lower.

When ports carry traffic of the same absolute priority, relative priority is determined based on port weighting. Port weighting is a five-bit value (0-31), and is determined by a deficit-weighted round robin (DWRR) algorithm, which corrects for past over-servicing or under-servicing of a port. Each port has an associated weight which is updated every cycle, with a user-configured weight added to it and the amount of traffic served subtracted from it. The port with the highest weighting is considered the most eligible.

To ensure that high-priority traffic is served quickly and that long and short bursts are effectively interleaved between ports, incoming transactions longer than a single SDRAM burst are scheduled as a series of SDRAM bursts, with each burst arbitrated separately.

To ensure that lower priority ports do not build up large running weights while higher priority ports monopolize bandwidth, the controller's DWRR weights are updated only when a port matches the scheduled priority. Therefore, if three ports are being accessed, two being priority seven and one being priority four, the weights for both ports at priority seven are updated but the port with priority four remains unchanged.

Multiport scheduling is performed between all of the ports connected to the FPGA fabric and internally in the HPS to determine which transaction is serviced next. Arbitration is performed on a SDRAM burst basis to ensure that a long transaction does not lock other transactions or cause latency to significantly increase for high-priority ports.

Arbitration supports both absolute and relative priority. Absolute priority is intended for applications where one master should always get priority above or below others. Relative priority is supported through a programmable weight field which controls scheduling between ports at the same priority.

The scheduler is work-conserving. Write operations can only be scheduled when enough data for the SDRAM burst has been received. Read operations can only be scheduled when sufficient internal memory is free and the port is not occupying too much of the read buffer.

The multiport scheduling configuration can be updated while traffic is flowing. Both priority and weight for a port can be updated without interrupting traffic on a port. Updates are used in scheduling decisions within 10 memory clock cycles of being updated, so priority can be updated frequently if needed.

Read Data Handling

The MPFE contains a read buffer shared by all ports. If a port is capable of receiving returned data then the read buffer is bypassed. If the size of a read transaction is smaller than twice the memory interface width, the buffer RAM cannot be bypassed.

SDRAM Burst Scheduling

SDRAM burst scheduling recognizes addresses that access the same row/bank combination, known as open page accesses. Operations to a page are served in the order in which they are received by the single-port controller.

Selection of SDRAM operations is a two-stage process. First, each pending transaction must wait for its timers to be eligible for execution. Next, the transaction arbitrates against other transactions that are also eligible for execution.

The following rules govern transaction arbitration:

- High-priority operations take precedence over lower-priority operations
- If multiple operations are in arbitration, read operations have precedence over write operations
- If multiple operations still exist, the oldest is served first

A high-priority transaction in the SDRAM burst scheduler wins arbitration for that bank immediately if the bank is idle and the high-priority transaction's chip select, row, or column fields of the address do not match an address already in the single-port controller. If the bank is not idle, other operations to that bank yield until the high-priority operation is finished. If the chip select, row, and column fields match an earlier transaction, the high-priority transaction yields until the earlier transaction is completed.

Clocking

The FPGA fabric ports of the MPFE can be clocked at different frequencies. Synchronization is maintained by clock-domain crossing logic in the MPFE. Command ports can operate on different clock domains, but the data ports associated with a given command port must be attached to the same clock as that command port. For example, a command port paired with a read and write port to form an Avalon-MM interface must operate at the same clock frequency as the data ports associated with it.

Single-Port Controller Operational Behavior

This section describes the operational behavior of the single-port controller.

SDRAM Interface

The SDRAM interface is up to 40 bits wide and can accommodate 8-bit, 16-bit, 16-bit plus ECC, 32-bit, or 32-bit plus ECC configurations. The SDRAM interface supports LPDDR2, DDR2, and DDR3 memory protocols.

Command and Data Reordering

The heart of the SDRAM controller is a command and data reordering engine. Command reordering allows banks for future transactions to be opened before the current transaction finishes. Data reordering allows transactions to be serviced in a different order than they were received when that new order allows for improved utilization of the SDRAM bandwidth. Operations to the same bank and row are performed in order to ensure that operations which impact the same address preserve the data integrity.

Figure 8-3 shows the relative timing for a write/read/write/read command sequence performed in order and then the same command sequence performed with data reordering. Data reordering allows the write and read operations to occur in bursts, without bus turnaround timing delay or bank reassignment.

Figure 8-3. Data Reordering Effect



The SDRAM controller schedules among all pending row and column commands every clock cycle.

Bank Policy

The bank policy of the SDRAM controller allows users to request that a transaction's bank remain open after an operation has finished so that future accesses do not delay in activating the same bank and row combination. The controller supports only eight simultaneously-opened banks, so an open bank might get closed if the bank resource is needed for other operations.

Open bank resources are allocated dynamically as SDRAM burst transactions are scheduled. Bank allocation is requested automatically by the controller when an incoming transaction spans multiple SDRAM bursts or by the extended command interface. When a bank must be reallocated, the least-recently-used open bank is used as the replacement.

If the controller determines that the next pending command will cause the bank request to not be honored, the bank might be held open or closed depending on the pending operation. A request to close a bank with a pending operation in the timer bank pool to the same row address causes the bank to remain open. A request to leave a bank open with a pending command to the same bank but a different row address causes a precharge operation to occur.

Write Combining

The SDRAM controller combines write operations from successive bursts on a port where the starting address of the second burst is one greater than the ending address of the first burst and the resulting burst length does not overflow the 11-bit burst-length counters. Write combining does not occur if the previous bus command has finished execution before the new command has been received.

Burst Length Support

The controller supports burst lengths of 2, 4, 8, and 16, and data widths of 8, 16, and 32 bits for non-ECC operation, and widths of 24 and 40 operations with ECC enabled. [Table 8-3](#) shows the type of SDRAM for each burst length.

Table 8-3. SDRAM Burst Lengths

Burst Length	SDRAM
4	LPDDR2, DDR2
8	DDR2, DDR3, LPDDR2
16	LPDDR2

Width Matching

The SDRAM controller automatically performs data width conversion.

ECC

The single-port controller supports memory ECC calculated by the controller. The controller ECC employs standard Hamming logic to detect and correct single-bit errors and detect double-bit errors. The controller ECC is available for 16-bit and 32-bit widths, each requiring an additional 8 bits of memory, resulting in an actual memory width of 24-bits and 40-bits, respectively.

Controller ECC provides the following features:

- Byte writes—The memory controller performs a read-modify-write operation to ensure that the ECC data remains valid when a subset of the bits of a word is being written. If an entire word is being written (but less than a full burst) and the DM pins are connected, no read is necessary and only that word is updated. If controller ECC is disabled, byte-writes have no performance impact.

- ECC write backs—When a read operation detects a correctable error, the memory location is scheduled for a read-modify-write operation to correct the single-bit error. ECC write backs are enabled and disabled through the `cfg_enable_ecc_code_overwrites` field in the `ctrlcfg` register.
- Notification of ECC errors—The memory controller provides interrupts for single-bit and double-bit errors. The status of interrupts and errors are recorded in status registers, as follows:
 - The `dramsts` register records interrupt status.
 - The `dramintr` register records interrupt masks.
 - The `sbecount` register records the single-bit error count.
 - The `dbecount` register records the double-bit error count.
 - The `erraddr` register records the address of the most recent error.

Byte Writes

Byte writes with ECC enabled are executed as a read-modify-write. Typical operations only use a single entry in the timer bank pool. Controller ECC enabled sub-word writes use two entries. The first operation is a read and the second operation is a write. These two operations are transferred to the timer bank pool with an address dependency so that the write cannot be performed until the read data has returned. This approach ensures that any subsequent operations to the same address (from the same port) are executed after the write operation, because they are ordered on the row list after the write operation.

If an entire word is being written (but less than a full burst), then no read is necessary and only that word is updated.

ECC Write Backs

If the controller ECC is enabled and a read operation results in a correctable ECC error, the controller corrects the location in memory, if write backs are enabled. The correction results in scheduling a new read-modify-write. A new read is performed at the location to ensure that a write operation modifying the location is not overwritten. The actual ECC correction operation is performed as a read-modify-write operation.

User Notification of ECC Errors

The following methods notify you of an ECC error:

For the MPU subsystem, an interrupt signal provides notification and the ECC error information is stored in the status registers.



For more information, refer to the *Cortex-A9 Microprocessor Unit Subsystem* chapter in volume 3 of the *Arria V Device Handbook*.

Interleaving Options

The controller supports the following address-interleaving options:

- Noninterleaved
- Bank interleave without chip select interleave
- Bank interleave with chip select interleave


All of the interleaving examples use 512 megabits (Mb) x 16 DDR3 chips and are documented as byte addresses. For RAMs with smaller address fields, the order of the fields stays the same but the widths may change.

Noninterleaved

RAM mapping is noninterleaved.

Figure 8-4 shows noninterleaved address decoding.

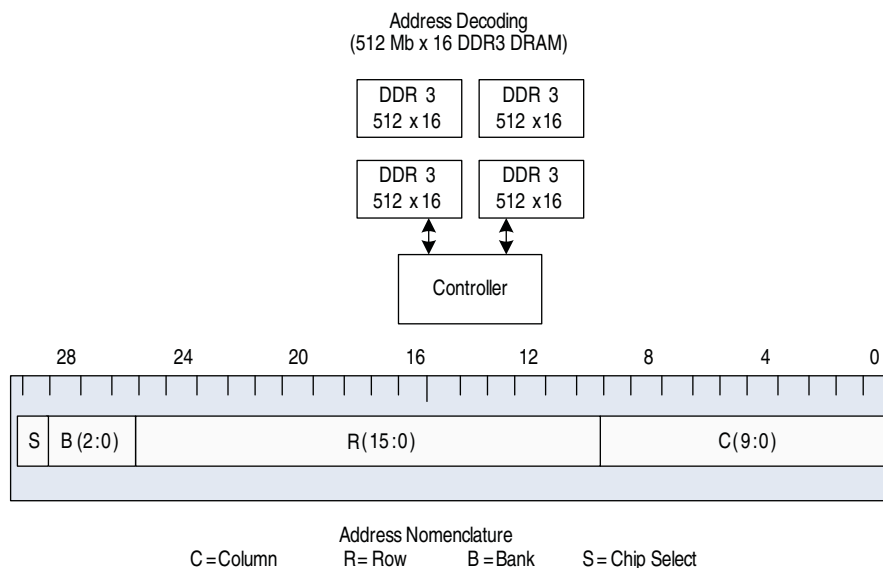Figure 8-4. Noninterleaved Address Decoding




Bank Interleave Without Chip Select Interleave

Bank interleave without chip select interleave swaps row and bank from the noninterleaved address mapping. This interleaving allows smaller data structures to spread across all banks in a chip.

Figure 8-5 shows bank interleave without chip select interleave address decoding.

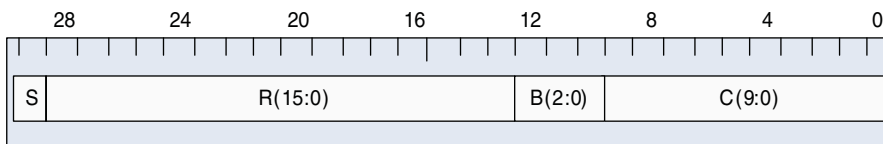Figure 8-5. Bank Interleave Without Chip Select Interleave Address Decoding




Bank Interleave with Chip Select Interleave

Bank interleave with chip select interleave moves the row address to the top, followed by chip select, then bank, and finally column address. This interleaving allows smaller data structures to spread across multiple banks and chips (giving access to 16 total banks for multithreaded access to blocks of memory). Memory timing is degraded when switching between chips.

Figure 8–6 shows bank interleave with chip select interleave address decoding.

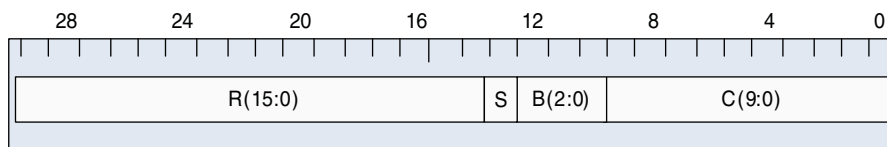Figure 8–6. Bank Interleave With Chip Select Interleave Address Decoding



AXI-Exclusive Support

The single-port controller supports AXI-exclusive operations. The controller implements a table shared across all masters, which can store up to 16 pending writes. Table entries are allocated on an exclusive read and table entries are deallocated on a successful write to the same address by any master.

Any exclusive write operation that is not present in the table returns an exclusive fail as acknowledgement to the operation. If the table is full when the exclusive read is performed, the table replaces a random entry.



When using AXI-exclusive operations, accessing the same location from Avalon-MM interfaces can result in unpredictable results.

Memory Protection

The single-port controller has address protection to allow the software to configure basic protection of memory from all masters in the system. If the system has been designed exclusively with AXI masters, TrustZone® is supported. Ports that use Avalon-MM can be configured for port level protection.



For information about TrustZone®, refer to the ARM website (www.arm.com).

Memory protection is based on physical addresses in memory. You can set rules to allow or disallow accesses to a range of memory, or to enable only secure accesses to a range of memory (or a combination of the two).

Secure and non-secure regions are specified by rules containing a starting address and ending address with 1 MB boundaries for both addresses. You can override the port defaults and allow or disallow all transactions.

The memory protection table, which is an internal table addressed through the CSR interface, contains rules to permit or deny memory access. You can configure up to a maximum of twenty rules to control memory access. Table 8–4 lists the fields that you can specify for each rule.

Table 8–4. Fields for Rules in Memory Protection Table (Part 1 of 2)

Field	Width	Description
Valid	1	Set to 1 to activate the rule. Set to 0 to deactivate the rule.
Port Mask ⁽¹⁾	10	Specifies the set of ports to which the rule applies, with one bit representing each port, as follows: bits 0 to 5 correspond to FPGA fabric ports 0 to 5, bit 6 corresponds to AXI L3 switch read, bit 7 is the CPU read, bit 8 is L3 switch write, and bit 9 is the CPU write.

Table 8–4. Fields for Rules in Memory Protection Table (Part 2 of 2)

Field	Width	Description
TID_low ⁽¹⁾	12	Low transfer ID of the rules to which this rule applies. Incoming transactions match if they are greater than or equal to this value. Ports with smaller TIDs have the TID shifted to the lower bits and zero padded at the top.
TID_high ⁽¹⁾	12	High transfer ID of the rules to which this rule applies. Incoming transactions match if they are less than or equal to this value.
Address_low	12	Points to a 1MB block and is the lower address. Incoming addresses match if they are greater than or equal to this value.
Address_high	12	Upper limit of address. Incoming addresses match if they are less than or equal to this value.
Protection	2	A value of 00 indicates that the protection bit is not set; a value of 01 sets the protection bit. Systems that do not set AXI protection to a known value should program this for either protection value.
Fail/allow	1	Set this value to 1 to force the operation to fail or succeed.

Note to Table 8–4:

- (1) Although TID and Port Mask could be redundant, including both in the table allows possible compression of rules. If masters connected to a port do not have contiguous TIDs, a port-based rule might be more efficient than a TID-based rule, in terms of the number of rules needed.

A port has a default access status of either allow or fail, and rules with the opposite allow/fail value can override the default. The system evaluates each transaction against every rule in the memory protection table. A transaction received on a port which by default allows access, would fail only if a rule with the fail bit matches the transaction. Conversely, a port which by default prevents access, would allow access only if a rule allows that transaction to pass.

Exclusive transactions are security checked on the read operation only. A write operation can occur only if a valid read is marked in the internal exclusive table. Consequently, a master performing an exclusive read followed by a write, can write to memory only if the exclusive read was successful.

Example of Configuration for TrustZone

For a TrustZone configuration, memory is divided into a range of memory accessible by secure masters and a range of memory accessible by nonsecure masters. The two memory address ranges may have a range of memory that overlaps.

This example implements the following memory configuration:

- 2 GB total RAM size
- 0—512 MB dedicated secure area
- 513—576 MB shared area
- 577—2048 MB dedicated nonsecure area

In this example, each port is configured by default to disallow all accesses. [Table 8-5](#) shows the two rules programmed into the memory protection table.

Table 8-5. Rules in Memory Protection Table for Example Configuration

Rule #	Port Mask	TID Low	TID High	Address Low	Address High	Prot	Fail/Allow
1	0'b1111111111	0	4095	0	576	b01	allow
2	0'b1111111111	0	4095	512	2047	b00	allow

The port mask value, TID Low, and TID High, apply to all ports and all transfers within those ports. Each access request is evaluated against the memory protection table, and will fail unless a rule matches allowing a transaction to complete successfully.

[Table 8-6](#) shows the result for a sample set of transactions.

Table 8-6. Result for a Sample Set of Transactions

Operation	Source	Address	Prot	Result	Comments
Read	CPU	4096	1	Allow	Matches rule 1.
Write	CPU	536, 870, 912 (512 MB)	1	Allow	Matches rule 1.
Write	L3 attached masters	605, 028, 350 (577 MB)	1	Fail	Does not match rule 1 (out of range of the address field), does not match rule 2 (protection bit incorrect).
Read	L3 attached masters	4096	0	Fail	Does not match rule 1 (prot value wrong), does not match rule 2 (not in address range).
Write	CPU	536, 870, 912 (512 MB)	0	Allow	Matches rule 2.
Write	L3 attached masters	605, 028, 350 (577 MB)	0	Allow	Matches rule 2.

If you did not want any overlap between the memory blocks, you could specify the address ranges in the two rules of [Table 8-5](#) to be mutually exclusive. Depending on your desired TrustZone configuration, you can add rules to the memory protection table to create multiple blocks of protected or unprotected space.

SDRAM Power Management

The SDRAM controller subsystem supports the following power saving features in the SDRAM:

- Partial array self-refresh (PASR)
- Power down
- Deep power down for LPDDR2

Power-saving mode initiates either due to a user command or from inactivity.

Power-down mode is initiated by writing to the appropriate control register. It forces the SDRAM burst-scheduling bank-management logic to close all banks and issue the power down command. You can program the controller to enable power-down when the SDRAM burst-scheduling queue is empty for a specified number of clock cycles. The SDRAM automatically reactivates when an active SDRAM command is received.

Other power-down modes are performed only under user control.

DDR PHY

The DDR PHY connects the memory controller and external memory devices in the speed critical command path.

The DDR PHY implements the following functions:

- Calibration—the DDR PHY supports the JEDEC-specified steps to synchronize the memory timing between the controller and the SDRAM chips. The calibration algorithm is implemented in software.
- Memory device initialization—the DDR PHY performs the mode register write operations to initialize the devices. The DDR PHY handles re-initialization after a deep power down.
- Single-data-rate to double-data-rate conversion.

Clocks

All clocks are assumed to be asynchronous with respect to the `ddr_dqs_clk` memory clock. All transactions are synchronized to memory clock domain.

Table 8-7 shows the SDRAM controller subsystem clock domains.

Table 8-7. SDRAM Controller Subsystem Clock Domains

Clock Name	Description
<code>ddr_dq_clk</code>	Clock for PHY
<code>ddr_dqs_clk</code>	Clock for MPFE, single-port controller, CSR access, and PHY
<code>ddr_2x_dqs_clk</code>	Clock for PHY
<code>l4_sp_clk</code>	Clock for CSR interface
<code>mpu_l2_ram_clk</code>	Clock for MPU interface
<code>l3_main_clk</code>	Clock for L3 interface
<code>f2h_sdr_clk[5:0]</code>	Six separate clocks used for the FPGA-to-HPS SDRAM ports to the FPGA fabric

In terms of clock relationships, the FPGA fabric connects the appropriate clocks to write data, read data, and command ports for the constructed ports.



For more information, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Resets

The SDRAM controller subsystem supports a full reset (cold reset) and a warm reset, which may or may not preserve the contents of memory. In order to preserve the memory contents, the reset manager can request that the single-port controller place the SDRAM in self-refresh mode prior to issuing the warm reset. If memory contents are preserved, the PHY and the memory timing logic is not reset, but the rest of the controller is reset.



For more information, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Initialization

The SDRAM controller subsystem has CSRs which control the operation of the controller including DRAM type, DRAM timing parameters and relative port priorities. It also has a small set of bits which depend on the FPGA fabric to configure ports between the memory controller and the FPGA fabric; these bits are set for you when you configure your implementation using the HPS GUI in Qsys.

The CSRs are configured using a dedicated slave interface, which provides accesses to registers. This region controls all SDRAM operation, MPFE scheduler configuration, and PHY calibration.

The FPGA fabric interface configuration is programmed into the FPGA fabric and the values of these register bits can be read by software. The ports can be configured without software developers needing to know how the FPGA-to-HPS SDRAM interface has been configured.

Protocol Details

Avalon-MM Bidirectional Port

The Avalon-MM bidirectional ports are standard Avalon-MM ports used to dispatch read and write operations. Each configured Avalon-MM bidirectional port consists of the signals listed in [Table 8-8](#).

Table 8-8. Avalon-MM Bidirectional Port Signals (Part 1 of 2)

Name	Bits	Direction	Function
clk	1	In	Clock for the Avalon-MM interface
read	1	In	Indicates read transaction
write	1	In	Indicates write transaction
address	32	In	Address of the transaction
readdata	32, 64, 128, or 256	Out	Read data return
readdatavalid	1	Out	Valid cycle flag for read data return
writedata	32, 64, 128, or 256	In	Write data for a transaction
byteenable	4 (32-bit data), 8(64-bit data), 16(128-bit data), 32(256-bit data)	In	Byte enables for each write byte

Table 8-8. Avalon-MM Bidirectional Port Signals (Part 2 of 2)

Name	Bits	Direction	Function
waitrequest	1	Out	Indicates need for additional cycles to complete a transaction
burstcount	11	In	Transaction burst length

The read and write interfaces are configured to the same size. The byte-enable size scales with the data bus size.



For information about the Avalon-MM protocol, refer to the [Avalon Interface Specifications](#).

Avalon-MM Write Port

The Avalon-MM write ports are standard Avalon-MM ports used only to dispatch write operations. Each configured Avalon-MM write port consists of the signals listed in [Table 8-9](#).

Table 8-9. Avalon-MM Write Port Signals

Name	Bits	Direction	Function
reset	1	In	Reset
clk	1	In	Clock
write	1	In	Indicates write transaction
address	32	In	Address of the transaction
writedata	32, 64, 128, or 256	In	Write data for a transaction
byteenable	4 (32-bit data), 8(64-bit data), 16(128-bit data), 32(256-bit data)	In	Byte enables for each write byte
waitrequest	1	Out	Indicates need for additional cycles to complete a transaction
burstcount	11	In	Transaction burst length



For information about the Avalon-MM protocol, refer to the [Avalon Interface Specifications](#).

Avalon-MM Read Port

The Avalon-MM read ports are standard Avalon-MM ports used only to dispatch read operations. Each configured Avalon-MM read port consists of the signals listed in [Table 8-10](#).

Table 8-10. Avalon-MM Read Port Signals (Part 1 of 2)

Name	Bits	Direction	Function
reset	1	In	Reset
clk	1	In	Clock
read	1	In	Indicates read transaction
address	32	In	Address of the transaction

Table 8-10. Avalon-MM Read Port Signals (Part 2 of 2)

Name	Bits	Direction	Function
readdata	32, 64, 128, or 256	Out	Read data return
readdatavalid	1	Out	Flags valid cycles for read data return
waitrequest	1	Out	Indicates the need for additional cycles to complete a transaction. Needed for read operations when delay is needed to accept the read command.
burstcount	11	In	Transaction burst length

 For information about the Avalon-MM protocol, refer to the *Avalon Interface Specifications*.

AXI Port

The AXI port uses an AXI-3 interface.

 For information about the AXI-3 interface, refer to the *AMBA Open Specifications* on the ARM website (www.arm.com).

 For information about the AXI interface ports in the high-performance II controller (HPC II), refer to the *Functional Description—HPC II Controller* chapter, in the *External Memory Interface Handbook*.

Each configured AXI port consists of the signals listed in **Table 8-11**. Each AXI interface signal is independent of the other interfaces for all signals, including clock and reset.

Table 8-11. AXI Port Signals (Part 1 of 2)

Name	Bits	Direction	Function
ARESETn	1	In	Reset
ACLK	1	In	Clock
Write Address Channel Signals			
AWID	4	In	Write identification tag
AWADDR	32	In	Write address
AWLEN	4	In	Write burst length
AWSIZE	3	In	Width of the transfer size
AWBURST	2	In	Burst type
AWREADY	1	Out	Indicates ready for a write command
AWVALID	1	In	Indicates valid write command.
Write Data Channel Signals			
WID	4	In	Write data transfer ID
WDATA	32, 64, 128 or 256	In	Write data
WSTRB	4, 8, 16, 32	In	Byte-based write data strobe. Each bit width corresponds to 8 bit wide transfer for 32-bit wide to 256-bit wide transfer.

Table 8–11. AXI Port Signals (Part 2 of 2)

Name	Bits	Direction	Function
WLAST	1	In	Last transfer in a burst
WVALID	1	In	Indicates write data+strokes are valid
WREADY	1	Out	Indicates ready for write data and strokes
Write Response Channel Signals			
BID	4	Out	Write response transfer ID
BRESP	2	Out	Write response status
BVALID	1	Out	Write response valid signal
BREADY	1	In	Write response ready signal
Read Address Channel Signals			
ARID	4	In	Read identification tag
ARADDR	32	In	Read address
ARLEN	4	In	Read burst length
ARSIZE	3	In	Width of the transfer size
ARBURST	2	In	Burst type
ARREADY	1	Out	Indicates ready for a read command
ARVALID	1	In	Indicates valid read command
Read Data Channel Signals			
RID	4	Out	Read data transfer ID
RDATA	32, 64, 128 or 256	Out	Read data
RRESP	2	Out	Read response status
RLAST	1	Out	Last transfer in a burs
RVALID	1	Out	Indicates read data is valid
RREADY	1	In	Read data channel ready signal

SDRAM Controller Subsystem Programming Model

Initialization

SDRAM controller configuration occurs through software programming of the configuration registers using the CSR interface. Initialization of the SDRAM controller has two separate regions with different controls.

Timing Parameters

The SDRAM controller supports a complete set of timing parameters, configurable at run time.

SDRAM Controller Address Map and Register Definitions



The address map resides in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the link for the following module instance:

■ **sdr**

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.



The base addresses of all modules are also listed in the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 8–12 shows the revision history for this document.

Table 8–12. Document Revision History

Date	Version	Changes
November 2012	1.1	Added address map and register definitions section.
January 2012	1.0	Initial release.

The hard processor system (HPS) contains the following on-chip memory:

- On-Chip RAM
- Boot ROM

The on-chip RAM provides 64 KB of general-purpose RAM. The boot ROM contains the code required to boot the HPS from cold or warm reset. Both memories connect to the level 3 (L3) interconnect.

On-Chip RAM

This section describes the HPS on-chip RAM.

Features of the On-Chip RAM

The on-chip RAM offers the following features:

- 64-bit interface
- 64 KB size
- Single-ported RAM
- Read acceptance of two, write acceptance of two, and a total acceptance of two.
- Error correction code (ECC) support
- Sustained ideal throughput (operating frequency times the data width) during read after read, write after write, write after read, and read after write.




For information about the operating frequency, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

On-Chip RAM Block Diagram and System Integration

Figure 9-1 shows a block diagram of the on-chip RAM.

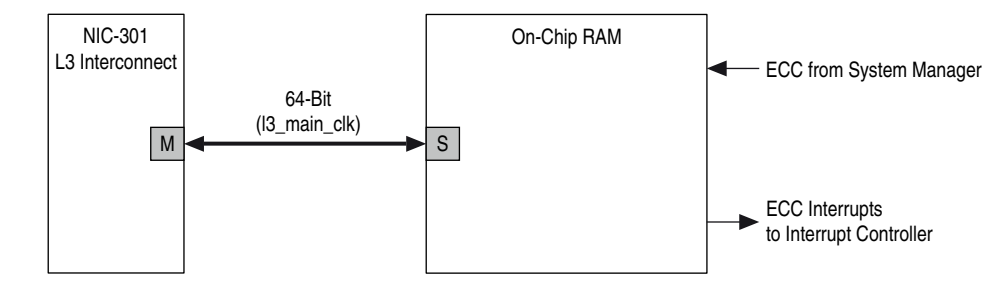Figure 9-1. On-Chip RAM Block Diagram



Transfers between memory and the NIC-301 L3 interconnect happen through a 64-bit interface, gated by the `l3_main_clk` interconnect clock. ECC logic detects single-bit, corrected and double-bit, uncorrected errors. The memory has a read acceptance of two, a write acceptance of two, and a total acceptance of two with round-robin arbitration.

The entire RAM is either secure or nonsecure. Security is enforced by the NIC-301 L3 interconnect.



For more information about security, refer to the *Interconnect* chapter in volume 3 of the *Arria V Device Handbook*.

Functional Description of the On-Chip RAM

The on-chip RAM serves as a general-purpose memory accessible from the FPGA.

The on-chip RAM uses an 64-bit slave interface. The slave interface supports transfers between memory and the NIC-301 L3 interconnect. All reads and writes are serviced in order.

Clocks

The on-chip RAM is driven by the `l3_main_clk` interconnect clock.



For information about the operating frequency and maximum throughput, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Resets

The contents of the RAM remain unchanged on a cold or warm reset. Reset only clears the state associated with the slave interface.

The on-chip RAM reset is driven by the `onchip_ram_rst_n` interconnect reset signal.



For more information, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Boot ROM

This section describes hardware aspects of the HPS boot ROM.

 For information about the boot ROM software, refer to the *Booting and Configuration* appendix in volume 3 of the *Arria V Device Handbook*.

Features of the Boot ROM

The boot ROM offers the following features:


- 32-bit interface
- 64 KB size
- Single-ported ROM
- Read acceptance of two
- Sustained ideal throughput (operating frequency times the data width) during read after read.

 For information about the operating frequency, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Boot ROM Block Diagram and System Integration

Figure 9-2 shows a block diagram of the boot ROM.

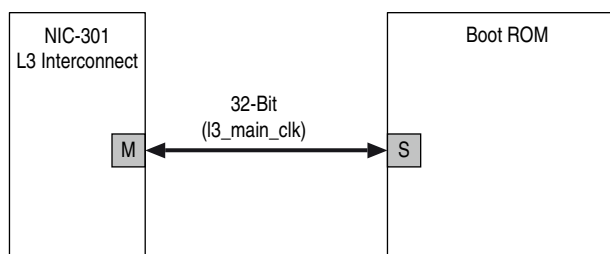Figure 9-2. Boot ROM Block Diagram



Transfers between memory and the NIC-301 L3 interconnect happen through a 32-bit interface, gated by the `l3_main_clk` interconnect clock.

The entire RAM is either secure or nonsecure. Security is enforced by the NIC-301 L3 interconnect.

 For more information about security, refer to the *Interconnect* chapter in volume 3 of the *Arria V Device Handbook*.

Functional Description of the Boot ROM

The boot ROM is used only for booting the system. On a cold or warm reset of the microprocessor unit (MPU) subsystem, MPU0 executes the pre-bootloader code stored in the boot ROM.

- For information about the boot ROM software, refer to the *Booting and Configuration* appendix in volume 3 of the *Arria V Device Handbook*.

The boot ROM uses an 32-bit slave interface. The slave interface supports transfers between memory and the NIC-301 L3 interconnect. All writes return an error response.

Clocks

The boot ROM is driven by the `l3_main_clk` interconnect clock.

- For information about the operating frequency and maximum throughput, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Resets

The contents of the ROM remain unchanged on a cold or warm reset. Reset only clears the state associated with the slave interface.

The boot ROM reset is driven by the `boot_rom_rst_n` interconnect clock.

- For more information, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

On-Chip Memory Address Map and Register Definitions

There are no registers for on-chip memory.

- The address map resides in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module descriptions and base addresses, scroll to and click the links for the following module instances:

- `rom`
- `ocram`

- The base addresses of all modules are also listed in the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 9-1 shows the revision history for this document.

Table 9-1. Document Revision History

Date	Version	Changes
November 2012	1.1	Added address map section.
January 2012	1.0	Initial release.

The hard processor system (HPS) provides a NAND flash controller to interface with external NAND flash memory in Altera® system-on-a-chip (SoC) FPGA systems. You can use external flash memory to store a processor boot image, software, or as extra storage capacity for large applications or user data. The HPS NAND flash controller is based on the Cadence® Design IP® NAND Flash Memory Controller.

NAND Flash Controller Features

The NAND flash controller provides the following functionality and features:

- Supports one x8 NAND flash device
- Supports Open NAND Flash Interface (ONFI) 1.0
- Supports NAND flash memories from Hynix, Samsung, Toshiba, Micron, and ST Micro
- Supports programmable 512 byte (4-, 8-, or 16-bit correction) or 1024 byte (24-bit correction) error correction code (ECC) sector size
- Supports pipeline read-ahead and write commands for enhanced read/write throughput
- Supports devices with 32, 64, 128, 256, 384, or 512 pages per block
- Supports multiplane devices
- Supports page sizes of 512 bytes, 2 kilobytes (KB), 4 KB, or 8 KB
- Supports single-level cell (SLC) and multi-level cell (MLC) devices with programmable correction capabilities
- Provides internal direct memory access (DMA)
- Provides programmable access timing

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.


Portions © 2011 Cadence Design Systems, Inc. Used with permission. All rights reserved worldwide. Cadence and the Cadence logo are registered trademarks of Cadence Design Systems, Inc. All others are the property of their respective holders.



NAND Flash Controller Block Diagram and System Integration

Figure 10-1 shows integration of the NAND flash controller in the HPS. The flash controller receives commands and data from the host through the command and data slave interface. The host accesses the flash controller's control and status registers (CSRs) through the register slave interface. The flash controller handles all command sequencing and flash device interactions. The bootstrap interface supports configuration of the NAND flash controller when booting the HPS from NAND flash memory. The flash controller generates interrupts to the HPS Cortex™-A9 MPCore™ processor generic interrupt controller. The DMA master interface provides accesses to and from the flash controller through the controller's built-in DMA.

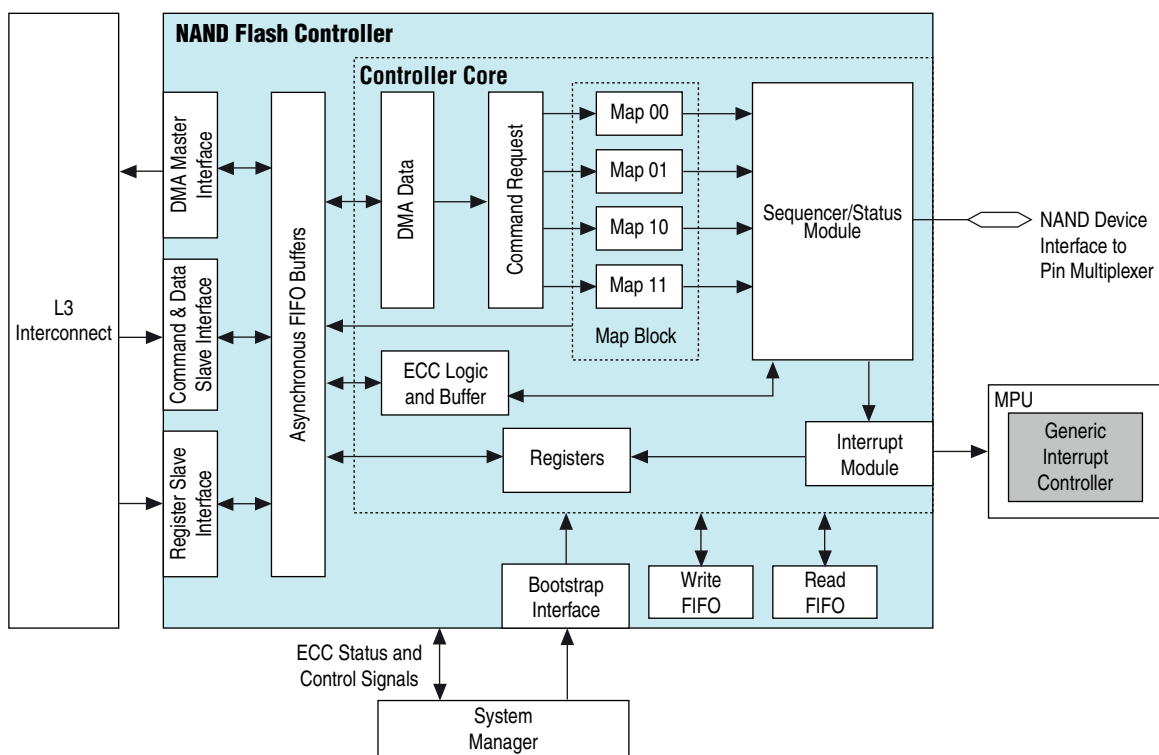Figure 10-1. NAND Flash Controller Block Diagram



Functional Description of the NAND Flash Controller

This section describes the functionality of the NAND flash controller.

Discovery and Initialization

The NAND flash controller requires a specific initialization sequence after the HPS receives power and the flash device is stable. During initialization, the flash controller queries the flash device and configures itself according to one of the following flash device types:

- ONFI 1.0 compliant devices
- Legacy (non-ONFI) NAND devices

The NAND flash controller identifies ONFI-compliant connected devices using ONFI discovery protocol, by sending the Read Electronic Signature command. For devices that do not recognize this command (especially for 512-byte page size devices), software must write to the system manager to assert the `bootstrap_512B_device` signal to identify the device type before reset is de-asserted.

To support booting and initialization, the `rdy_busy_in` pin must be connected. The NAND flash controller sends the reset command to the connected device.

The NAND flash controller performs the following initialization steps:

1. If the system manager is asserting `bootstrap_inhibit_init`, the flash controller goes directly to step 7.
2. When the device is ready, the flash controller sends the ONFI Read ID command to read the ONFI signature from the device, to determine whether an ONFI or a legacy device is connected.
3. If the data returned by the device has an ONFI signature, the flash controller then reads the device parameter page. The flash controller stores the relevant device feature information in internal memory control registers, enabling it to correctly program other registers in the flash device, and goes to step 5.
4. If the data does not have a valid ONFI signature, the flash controller assumes that it is a legacy (non-ONFI) device. The flash controller then performs the following steps:
 - a. Sends the reset command to the device
 - b. Reads the device signature information
 - c. Stores the relevant values into internal memory controller registers
5. The flash controller resets the device. At the same time, it verifies the width of the memory interface. The HPS supports one 8-bit NAND flash device. As a result, the flash controller always detects an 8-bit memory interface.
6. The flash controller sends the Page Load command to block 0, page 0 of the device, configuring direct read access, so the processor can boot from that page. The processor can start reading from the first page of the device, which is the expected location of the preloader software.



The system manager can bypass this step by asserting `bootstrap_inhibit_b0p0_load` before reset is deasserted.

7. The flash controller sends the reset command to the device.
8. The flash controller sets the value of the `rst_comp` bit in the `intr_status0` register in the status group.

Bootstrap Interface

The NAND flash controller provides a bootstrap interface that allows software to override the default behavior of the flash controller. The bootstrap interface contains four bits, which when set appropriately allow the flash controller to skip the initialization phase and begin loading from flash memory immediately after reset. These bits are driven by software through the system manager. They are sampled by the NAND flash controller when the controller is released from reset.

 For more information about the bootstrap interface control bits, refer to the *System Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Table 10-1 lists the relevant bootstrap setting bits, found in the system manager's bootstrap register, in the nandgrp group. This table also lists recommended bootstrap settings for a 512 byte page device.

Table 10-1. Recommended Bootstrap Settings for 512 Byte Page Device

Register	Value
noinit	1 ⁽¹⁾
page512	1
noloadb0p0	1
tworowaddr	■ 1—flash device supports two-cycle addressing ■ 0—flash device support three-cycle addressing
Note to Table 10-1: (1) When this register is set, the NAND flash controller expects the host to program the related device parameter registers. For more information, refer to "Configuration by Host".	

Configuration by Host

If the system manager sets bootstrap_inhibit_init to 1, the NAND flash controller does not perform the discovery and initialization process. In this case, the host processor must configure the flash controller.

When performance is not a concern in the design, the timing registers can be left unprogrammed.

Table 10-2 shows the recommended configuration by host settings to enable the basic read, write, and erase operations for a single-plane, 512 bytes/page device.

Table 10-2. Recommended Bootstrap Settings for 512 Byte Page Device

Register ⁽¹⁾	Value
devices_connected	1
device_width	0 indicating an 8-bit NAND flash device
number_of_planes	1 indicating a single-plane device
device_main_area_size	The value of this register must reflect the flash device's page main area size.
device_spare_area_size	The value of this register must reflect the flash device's page spare area size.
pages_per_block	The value of this register must reflect number of pages per block in the flash device.

Note to Table 10-2:

(1) All registers are in the config group.

Each NAND page has a main area and a spare area. The main area is intended for data storage. The spare area is intended for ECC and maintenance data, such as wear leveling information. Each block consists of a group of pages.

The sizes of the main and spare areas, and the number of blocks in a page, depend on the specific NAND device connected to the NAND flash controller. Therefore, the device-dependent registers, `device_main_area_size`, `device_spare_area_size`, and `pages_per_block`, must be programmed to match the characteristics of the device.

If your software does not perform the discovery and initialization sequence, the software must include an alternative method to determine the correct value of the device-dependent registers. The HPS boot ROM code enables discovery and initialization by default (that is, `bootstrap_inhibit_init = 0`).

Clocks

Table 10–3 lists the NAND flash controller clock inputs.

Table 10–3. Clock Inputs to NAND Flash Controller

Clock Signal	Description
nand_x_clk	Clock for master and slave interfaces and the ECC sector buffer
nand_clk	Clock for the NAND flash controller

The frequency of `nand_x_clk` is four times the frequency of `nand_clk`.



For more information about the clock inputs, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Resets

The NAND flash controller has one reset signal. The reset manager drives this signal to the NAND flash controller on a cold or warm reset.

Before the NAND flash controller comes out of the reset state, the pin multiplexers for the flash external interface must be configured.



For more information about the reset manager, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Indexed Addressing

The NAND flash controller uses indexed addressing to reduce the address span consumed by the flash controller. Indirect addressing is controlled by two registers, accessed through the command and data slave interface in the `nanddata` map, as described in [Table 10-4](#).

Table 10-4. Register Map for Indexed Addressing

Register Name	Offset Address	Usage
Control	0x0	Software writes the 32-bit control information consisting of MAP command type, block, and page address. The upper four bits must be set to 0. For specific usage of the <code>Control</code> register, refer to Table 10-5 through Table 10-8 .
Data	0x10	The Data register is a page-size window into the NAND flash. By reading from or writing to locations starting at this offset, the software reads directly from or writes directly to the page and block of NAND flash memory specified by the <code>Control</code> register.

The host uses indexed addressing as follows:

1. Program the 32-bit index-address field into the `Control` register at offset 0x0 of the data/command slave port. This action provides the flash address parameters to the NAND flash controller.
2. Perform 32-bit read or write in the Data register at offset 0x10 of the data/command slave port.
3. Perform additional 32-bit reads and writes if they are in the same page and block in flash memory.

It is unnecessary to write to the control register for every data transfer if a group of data transfers targets the same page and block address. For example, you can write the control register at the beginning of a page with the block and page address, and then read or write the entire page by directing consecutive transactions to the Data register.

Command Mapping

The NAND flash controller supports several flash controller-specific MAP commands, providing an abstraction level for programming a NAND flash device. By using the MAP commands, you can avoid directly programming device-specific commands. Using this abstraction layer provides enhanced performance. Commands take multiple cycles to send off-chip. The MAP commands let you initiate commands and let the flash controller sequence them off-chip to the NAND device.

The NAND flash controller supports the following flash controller-specific MAP commands:

- **MAP00 Commands**—boot-read or buffer read/write during read-modify-write operations
- **MAP01 Commands**—memory arrays read/write

- **MAP10 Commands**—NAND flash controller commands
- **MAP11 Commands**—low-level direct access

MAP00 Commands

MAP00 commands access a page buffer in the NAND flash device. Addressing always begins at 0x0 and extends to the page size specified by the `device_main_area_size` and `device_spare_area_size` registers in the config group. You can use this command to perform a boot read. Use MAP00 commands in read-modify-write (RMW) operations to read or write any word in the buffer. MAP00 commands allow a direct data path to the page buffer in the device.

The host can access the page buffer directly using the MAP00 commands only if there are no other MAP01 or MAP10 commands active on the NAND flash controller.

Table 10-5 lists the address bits as interpreted by the NAND flash controller for a MAP00 command.

Table 10-5. MAP00 Address Mapping

Address Bits	Name	Description
31:28	(reserved)	Set to 0
27:26	CMD_MAP	Set to 0
25:13	(reserved)	Set to 0
12:2	BUFF_ADDR	Data width-aligned buffer address on the memory device. Maximum page access is 8 KB.
1:0	(reserved)	Set to 0

The usage of this command under normal operations is limited to the following situations:

- It can be used to perform an Execute-in-Place (XIP) boot from the device; reading directly from the page buffer while booting directly from the device.
- MAP00 commands can be used to perform RMW operations where MAP00 writes are used to modify a read page in the device page buffer. Because the NAND flash controller does not perform ECC correction during such an operation, this method is not recommended in an MLC device.
- In association with MAP11 commands, MAP00 commands provide a way for the host to directly access the device bypassing the hardware abstractions provided by NAND flash controller with MAP01 and MAP10 commands. This method is also used for debugging, or for issuing an operation that the flash controller might not support with MAP01 or MAP10 commands.

Restrictions:

- MAP00 commands cannot be used with MAP01 commands to read part of a page. Accesses using MAP01 commands must perform a complete page transfer.
- No ECC is performed during a MAP00 data access.
- DMA must be disabled (the `flag` bit of the `dma_enable` register in the `dma` group must be set to 0) while performing MAP00 operations.

MAP01 Commands

MAP01 commands transfer complete pages between the host memory and a specific page of the NAND flash device. Because the NAND flash controller supports only page addresses, the entire page must be read or written at once. The actual number of commands required depends on the size of the data transfer. You must use the same address until the entire page is transferred, even if multiple commands are required.

When the NAND flash controller receives a read command, it issues a load operation on the device, waits for the load to complete, and then returns read data. Read data must be read from the start of the page to the end of the page. Write data must be written from the start of the page to the end of the page.

When the NAND flash controller receives confirmation of the transfer, it issues commands to program the data into the device. The flash controller ignores the byte enables for read and write commands and transfers the entire data width.

Table 10-6 lists the address bits as interpreted by the NAND flash controller for a MAP01 command.

Table 10-6. MAP01 Address Mapping

Address Bits	Name	Description
31:28	(reserved)	Set to 0
27:26	CMD_MAP	Set to 1
25:24	(reserved)	Set to 0
23:<M> (1)	BLK_ADDR	Block address in the device
(<M>-1):0 (1)	PAGE_ADDR	Page address in the device

Note to Table 10-6:

- (1) <M> depends on the number of pages per block in the device. $\langle M \rangle = \text{ceil}(\log_2(\text{device pages per block}))$.
Therefore, use the following values:
32 pages per block: $\langle M \rangle = 5$
64 pages per block: $\langle M \rangle = 6$
128 pages per block: $\langle M \rangle = 7$
256 pages per block: $\langle M \rangle = 8$
384 pages per block: $\langle M \rangle = 9$
512 pages per block: $\langle M \rangle = 9$

The NAND flash controller incorporates ECC on-the-fly correction that corrects data read from the device internally before transferring the data out from the flash controller. The ECC sector buffers store data, while the ECC engine computes the error location.

Use the MAP01 command as follows:

- A complete page must be read or written using a MAP01 command. During such transfers, every transaction from the host must have the same block and page address. The NAND flash controller internally keeps track of how much of data it reads or writes.
- MAP00 commands cannot be used in between using MAP01 commands for reading or writing a page.
- DMA must be disabled (the `flag` bit of the `dma_enable` register in the `dma` group must be set to 0) while the host is performing MAP01 operations directly. If the host issues MAP01 commands to the NAND flash controller while DMA is enabled, the flash controller discards the request and generates an `unsup_cmd` interrupt.

MAP10 Commands

MAP10 commands provide an interface to the control plane of the NAND flash controller. MAP10 commands control special functions of the flash device, such as erase, lock, unlock, copy back, and page spare area access. Data passed in this command pathway targets the NAND flash controller rather than the flash device. Unlike other command types, the data (input or output) related to these transactions does not affect the contents of the flash device. Rather, this data specifies and performs the exact commands of the flash controller. Only the lower 16 bits of the Data register contain the relevant information.

Table 10-7 lists the address bits as interpreted by the NAND flash controller for a MAP10 command.

Table 10-7. MAP10 Address Mapping

Address Bits	Name	Description
31:28	(reserved)	Set to 0
27:26	CMD_MAP	Set to 2
25:24	(reserved)	Set to 0
23:<M> ⁽¹⁾	BLK_ADDR	Block address in the device
(<M>-1):0 ⁽¹⁾	PAGE_ADDR	Page address in the device

Note to Table 10-7:

- (1) <M> depends on the number of pages per block in the device. $\langle M \rangle = \text{ceil}(\log_2(\text{device pages per block}))$. Therefore, use the following values:
- 32 pages per block: $\langle M \rangle = 5$
 - 64 pages per block: $\langle M \rangle = 6$
 - 128 pages per block: $\langle M \rangle = 7$
 - 256 pages per block: $\langle M \rangle = 8$
 - 384 pages per block: $\langle M \rangle = 9$
 - 512 pages per block: $\langle M \rangle = 9$

Table 10-8 lists the special functions defined by MAP10 command.

Table 10-8. MAP10 Operations

Command	Function
0x01	Sets block address for erase and initiates operation
0x10	Sets unlock start address
0x11	Sets unlock end address and initiates unlock
0x21	Initiates a lock of all blocks
0x31	Initiates a lock-tight of all blocks
0x41	Sets up for spare area access
0x42	Sets up for default area access
0x43	Sets up for main+spare area access
0x60	Loads page to the buffer for a RMW operation
0x61	Sets the destination address for the page buffer in RMW operation
0x62	Writes the page buffer for a RMW operation
0x1000	Sets copy source address
0x11<PP>	Sets copy destination address and initiates a copy of <PP> pages
0x20<PP>	Sets up a pipeline read-ahead of <PP> pages
0x21<PP>	Sets up a pipeline write of <PP> pages

Use the MAP10 command as follows:

- MAP10 commands should be used to issue commands to the device, such as erase, copy-back, lock, or unlock.
- MAP10 pipeline commands should also be used to read or write consecutive multiple pages from the flash device within a device block boundary. The host must first issue a MAP10 pipeline read or write command and then issue MAP01 commands to do the actual data transfers. The MAP10 pipeline read or write command instructs the NAND flash controller to use high-performance commands such as cache or multiplane because the flash controller has knowledge of multiple consecutive pages to be read. The pages must not cross a block boundary. If a block boundary is crossed, the flash controller generates an unsupported command (unsup_cmd) interrupt and drops the command.
- Up to four pipeline read or write commands can be issued to the NAND flash controller.
- While the NAND flash controller is performing MAP10 pipeline read or write commands, DMA must be disabled (the flag bit of the dma_enable register in the dma group must be set to 0). DMA must be disabled because the host is directly transferring data from and to the flash device through the flash controller.

MAP11 Commands

MAP11 commands provide direct access to the NAND flash controller's address and control cycles, allowing software to issue the commands directly to the flash device using the Command and Data registers. The MAP11 command is useful if the flash device supports a device-specific command not supported by standard flash commands. It can also be useful for low-level debugging.

MAP11 commands provide a direct control path to the flash device. These commands execute command, address, and data read/write cycles directly on the NAND device interface. Command, address, and write data values are placed in the Data register. On a read, the returned data also appears in the Data register. The indirect address register encodes the control operation type. Command and address cycles to the device must be a write transaction on the host bus. For data cycles, the type of transaction on the host bus (read/write) determines the data cycle type on the device interface. The host can issue only single-beat accesses to the data slave port while using MAP11 commands.

Table 10-9 lists the address bits as interpreted by the NAND flash controller for a MAP11 command.

Table 10-9. MAP11 Addressing Mapping

Address Bits	Name	Description
31:28	(reserved)	Set to 0
27:26	CMD_MAP	Set to 3
25:2	(reserved)	Set to 0
1:0	TYPE	Sets the control type as follows: ■ 0 = Command cycle ■ 1 = Address cycle ■ 2 = Data Read/Write Cycle

Use the MAP11 command as follows:

- Use MAP11 commands only in special cases, for debugging or sending device-specific commands that are not supported by the NAND flash controller.
- DMA must be disabled before you use MAP11 operations.
- The host can use only single beat access transfers when using MAP11 commands.



MAP11 commands provide direct, unstructured access to the NAND flash device. Incorrect use can lead to unpredictable behavior.

Data DMA

The DMA transfers data with minimal host involvement. Software initiates data DMA with the MAP10 command.

The flag bit of the dma_enable register in the dma group enables data DMA functionality. Only enable or disable this functionality when there are no active transactions pending in the NAND flash controller. When the DMA is enabled, the flash controller initiates one DMA transfer per MAP10 command over the DMA master interface. When the DMA is disabled, all operations with the flash controller occur through the data/command slave interface.

The NAND flash controller supports up to four outstanding DMA commands, and ignores additional DMA commands. If software issues more than four outstanding DMA commands, the flash controller issues the `unsup_cmd` interrupt. On receipt of a DMA command, the flash controller performs command sequencing to transfer the number of pages requested in the DMA command. The DMA master reads or writes page data from the system memory in programmed burst-length chunks. After the DMA command completes, the flash controller issues an interrupt, and starts working on the next queued DMA command.

Pipelining allows the NAND flash controller to optimize its performance while executing back-to-back commands of the same type.

With certain restrictions, non-DMA MAP10 commands can be issued to the NAND flash controller while the flash controller is servicing DMA transactions. MAP00, MAP01, and MAP11 commands cannot be issued while DMA mode is enabled because the flash controller is operating in an extremely tightly-coupled, high-performance data transfer mode. On receipt of erroneous commands (MAP00, MAP01 or MAP11), the flash controller issues an `unsup_cmd` interrupt to inform the host about the violating command.

When the host issues a data DMA command the NAND flash controller transfers data between the flash device and host memory if data DMA is enabled (the `flag` bit of the `dma_enable` register in the `dma` group is set to 1). On the completion of the transfer the flash controller informs the host by asserting an interrupt.

- A data DMA command is a type of MAP10 command. This command is interpreted by the data DMA engine and not by the flash controller core.
- No MAP01, MAP00, or MAP11 commands are allowed when DMA is enabled.
- Before the flash controller can accept data DMA commands, DMA must be enabled by setting the `flag` bit of the `dma_enable` register in the `dma` group.
- When DMA is enabled and the DMA engine initiates data transfers, ECC can be enabled for as-needed data correction concurrent with the data transfer.
- MAP10 commands are used along with data movements similar to MAP01 commands.
- With the exception of data DMA commands and MAP10 pipeline read and write commands, all other MAP10 commands such as erase, lock, unlock, and copy-back are forwarded to the flash controller.
- At any time, up to four outstanding data DMA commands can be handled by flash controller. During multi-page operations, the DMA transfer must not cross a flash block boundary. If it does, the flash controller generates an unsupported command (`unsup_cmd`) interrupt and drops the command.
- Data DMA commands are typically multi-page read and write commands with an associated pointer in host memory. The multi-page data is transferred to or from the host memory starting from the host memory pointer.
- Data DMA uses the `flash_burst_length` register in the `dma` group to determine the burst length value to drive on the interconnect. The data DMA hardware does not account for the interconnect's boundary crossing restrictions. The host must initialize the starting host address so that the DMA master burst does not cross a 4 KB boundary.

There are two methods for initiating a DMA transaction: the multitransaction DMA command, and the burst DMA command.

Multitransaction DMA Command

To initiate DMA with a multitransaction DMA command, you send four command-data pairs to the NAND flash controller's data and control slave port, as shown in Table 10-10 through Table 10-13.

The NAND flash controller processes multitransaction DMA commands only if it receives all four command-data pairs in order. The flash controller responds to out-of-order commands with an `unsup_cmd` interrupt. The flash controller also responds with an `unsup_cmd` interrupt if sequenced commands are interleaved with other flash controller MAP commands.

Table 10-10 through Table 10-13 show the format of each command-data pair.

Table 10-10. Command-Data Pair 1

	31:28	27:26	25:24	23:<M> ⁽¹⁾	(<M> - 1):0 ⁽¹⁾
Command	0x0	0x2	0x0	Block address	Page address

	31:16	15:12	11:8	7:0
Data	0x0	0x2	0x0 = Read 0x1 = Write	<PP>= Number of pages

Note to Table 10-10:

(1) <M> depends on the number of pages per block in the device. <M> = ceil (log2 (<device pages per block>)). Therefore, use the following values:

32 pages per block: <M>=5
64 pages per block: <M>=6
128 pages per block: <M>=7
256 pages per block: <M>=8
384 pages per block: <M>=9
512 pages per block: <M>=9

Table 10-11. Command-Data Pair 2

	31:28	27:26	25:24	23:8	7:0
Command	0x0	0x2	0x0	memory address high ⁽¹⁾	0x0

	31:16	15:12	11:8	7:0
Data	0x0	0x2	0x2	0x0

Note to Table 10-11:

(1) The buffer address in host memory, which must be aligned to 32 bits

Table 10-12. Command-Data Pair 3

	31:28	27:26	25:24	23:8	7:0
Command	0x0	0x2	0x0	memory address low ⁽¹⁾	0x0

	31:16	15:12	11:8	7:0
Data	0x0	0x2	0x3	0x0

Note to Table 10-12:

(1) The buffer address in host memory, which must be aligned to 32 bits

Table 10-13. Command-Data Pair 4

	31:28	27:26	25:24	23:17	16	15:8	7:0
Command	0x0	0x2	0x0	0x0	INT ⁽¹⁾	Burst length	0x0

	31:16	15:12	11:8	7:0
Data	0x0	0x2	0x4	0x0

Note to Table 10-13:

(1) INT specifies the host interrupt to be generated at the end of the complete DMA transfer. INT controls the value of the dma_cmd_comp bit of the intr_status0 register in the status group at the end of the DMA transfer. INT can take on one of the following values:

0—Do not interrupt host. The dma_cmd_comp bit is set to 0.

1—Interrupt host. The dma_cmd_comp bit is set to 1.

For more information, refer to “Indexed Addressing” on page 10-6.

If you want the NAND flash controller DMA to perform cacheable accesses then you must configure the cache bits by writing the l3master register in the nandgrp group in the system manager. The NAND flash controller DMA must be idle before you use the system manager to change its cache capabilities.



For more information about the system manager, refer to the *System Manager* chapter in volume 3 of the *Arria V Device Handbook*.

You can issue non-DMA MAP10 commands while the NAND flash controller is in DMA mode. For example, you might trigger a host-initiated page move between DMA commands, to achieve wear leveling. However, do not interleave non-DMA MAP10 commands between the command-data pairs in a set of multitransaction DMA commands. You must issue all four command-data pairs shown in Table 10-10 through Table 10-13 before sending a different command.

Do not issue MAP00, MAP01 or MAP11 commands while DMA is enabled.

MAP10 commands in multitransaction format are written to the Data register at offset 0x10 in nanddata, the same as MAP10 commands in increment four (INCR4) format (described in “Burst DMA Command”).

Burst DMA Command

You can initiate a DMA transfer by sending a command to the NAND flash controller as a burst transaction of four 16-bit accesses. This form of DMA command might be useful for initiating DMA transfers from custom IP in the FPGA fabric. Most processor cores cannot use this form of DMA command, because they cannot control the width of the burst.

When DMA is enabled, the NAND flash controller recognizes the MAP10 pipeline DMA command, in the format shown in Table 10-14, as an INCR4 command. The address decoding for MAP10 pipeline DMA command remains the same, as shown in Table 10-7 on page 10-9. Table 10-14 lists the MAP10 burst DMA command structure. The burst DMA command carries the same information as the multitransaction DMA command-data pairs, but in a very different format.

MAP10 commands in INCR4 format are written to the Data register at offset 0x10 in nanddata, the same as MAP10 commands in multitransaction format (described in “Multitransaction DMA Command”).

Table 10-14. MAP10 Burst DMA (INCR4) Command Structure

Data Beat	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Beat 0	0x2				0x0: read, 0x1: write				<PP>= number of pages							
Beat 1 (1)	memory address high															
Beat 2 (1)	memory address low															
Beat 3	0x0							INT (2)	Burst length							

Notes to Table 10-14:

- (1) The buffer address in host memory, which must be aligned to 32 bits
- (2) INT specifies the host interrupt to be generated at the end of the complete DMA transfer. INT controls the value of the dma_cmd_comp bit of the intr_status0 register in the status group at the end of the DMA transfer. INT can take on one of the following values:
0—Do not interrupt host. The dma_cmd_comp bit is set to 0.
1—Interrupt host. The dma_cmd_comp bit is set to 1.

You can optionally send the 16-bit fields in Table 10-14 to the NAND flash controller as four separate bursts of length 1 in sequential order. Altera recommends this method.

If you want the NAND flash controller DMA to perform cacheable accesses then you must configure the cache bits by writing the l3master register in the nandgrp group in the system manager. The NAND flash controller DMA must be idle before you use the system manager to modify its cache capabilities.



For more information about the system manager, refer to the *System Manager* chapter in volume 3 of the *Arria V Device Handbook*.

ECC

The NAND flash controller incorporates ECC logic to calculate and correct bit errors. The flash controller uses a Bose-Chaudhuri-Hocquenghem (BCH) algorithm for detection of multiple errors in a page.

The NAND flash controller supports 512- and 1024-byte ECC sectors. The flash controller inserts ECC check bits for every 512 or 1024 bytes of data, depending on the selected sector size. After 512 or 1024 bytes, the flash controller writes the ECC check bit information to the device page.

ECC information is striped in between 512 or 1024 bytes of data across the page. The NAND flash controller reads ECC information in the same pattern and the presence of errors is calculated according to 512 or 1024 bytes of data read.

Table 10-15 lists the relationship between different correction capabilities, sector sizes, and the required check-bit sizes written into the spare area.

Table 10-15. Correction Capability, Sector Size, and Check-bit Size

Correction	Sector Size in Bytes	Check-bit Size in Bytes
4	512	8
8	512	14
16	512	26
24	1024	46

The NAND flash controller provides the following ECC programming modes that software uses to format a page:

- Main Area Transfer Mode
- Spare Area Transfer Mode
- Main+Spare Area Transfer Mode

Main Area Transfer Mode

In main area transfer mode, when ECC is enabled, the NAND flash controller inserts ECC check bits in the data stream on writes and strips ECC check bits on reads. Software does not need to manage the ECC sectors when writing a page. ECC checking is performed by the flash controller, so software simply transfers the data.

If ECC is turned off, the NAND flash controller does not read or write ECC check bits. Figure 10-2 shows the main area transfer mode programming model.

Figure 10-2. Main Area Transfer Mode Programming Model for ECC

Sector 0	Sector 1	Sector 2	Sector 3

Spare Area Transfer Mode

The NAND flash controller does not introduce or interpret ECC check bits in spare area transfer mode, and acts as pass through for data transfer. Figure 10-3 shows the spare area transfer mode programming model.

Figure 10-3. Spare Area Transfer Mode Programming Model for ECC

Sector 3	ECC3	Flags

Main+Spare Area Transfer Mode

In main+spare area transfer mode, the NAND flash controller expects software to format a page as shown in Figure 10-4. When ECC is enabled during a write operation, the flash controller-generated ECC check bits replace the ECC check bit data provided by software. During read operations, the flash controller forwards the ECC check bits from the device to the host. If ECC is disabled, page data received from the software is written to the device, and read data received from the device is forwarded to the host.

Figure 10-4. Main+Spare Area Transfer Mode Programming Model for ECC

Sector 0	ECC0	Sector 1	ECC1	Sector 2	ECC2	Sector 3	ECC3	Flags

Preserving Bad Block Markers

When flash device manufacturers test their devices at the time of manufacture, they mark any bad device blocks that are found. Each bad block is marked at specific, known offsets, typically at the base of the spare area. A bad block marker is any byte value other than 0xFF (the normal state of erased flash).

Bad block markers can be overwritten by the last sector data in a page when ECC is enabled. This happens because the NAND flash controller also uses the main area of a page to store ECC information, which causes the last sector to spill over into the spare area. It is necessary for the system to preserve the bad block information prior to writing data, to ensure the correct identification of bad blocks in the flash device.

You can configure the NAND flash controller to skip over a specified number of bytes when it writes the last sector in a page to the spare area. This option allows the flash controller to preserve bad block markers. To use this option, write the desired offset to the `spare_area_skip_bytes` register in the config group. For example, if the device page size is 2 KB, and the device manufacturer stores the bad block markers in the first two bytes in the spare area, set the `spare_area_skip_bytes` register to 2. When the flash controller writes the last sector of the page that overlaps with the spare area, it starts at offset 2 in the spare area, skipping the bad block marker at offset 0. A value of 0 (default) specifies that no bytes are skipped. The value of `spare_area_skip_bytes` must be an even number. For example, if the bad block marker is a single byte, set `spare_area_skip_bytes` to 2.

In main area transfer mode, the NAND flash controller does not skip the bad block marker. Instead, it overrides the bad block marker with the value programmed in the `spare_area_marker` register in the config group. This 8-bit register is used in conjunction with the `spare_area_skip_bytes` register in the config group to determine which bytes in the spare area of a page should be written with a the new marker value. For example, to mark a block as good set the `spare_area_marker` register to 0xFF and set the `spare_area_skip_bytes` register to the number of bytes that the marker should be written to, starting from the base of the spare area.


In the spare area transfer mode, the NAND flash controller ignores the `spare_area_skip_bytes` and `spare_area_marker` registers. The flash controller transfers the data exactly as received from the host or device.

In the main+spare area transfer mode, the NAND flash controller starts writing the last sector in a page into the spare area, starting at the offset specified in the `spare_area_skip_bytes` register. However, the area containing the bad block identifier information is overwritten by the data the host writes into the page. The host writes both the data sectors and the bad block markers. The flash controller depends on the host software to set up the bad block markers properly before writing the data.

For more information about the formatting of this data, refer to [Figure 10-4 on page 10-17](#).

[Figure 10-5](#) shows an example of how the NAND flash controller can skip over a bad block marker. In this example, the flash device has a 2-KB page with a 64-byte spare area. A 14-byte sector ECC is shown, with 8 byte per sector correction.

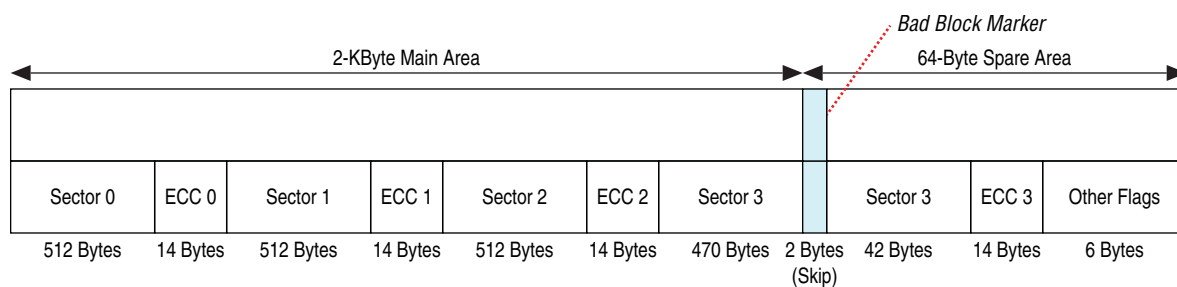Figure 10-5. Bad Block Marker



For detailed information about configuring the NAND flash controller for default, spare, or main+spare area transfer mode, refer to [“Transfer Mode Operations” on page 10-25](#).

Error Correction Status

The ECC error correction information (`ECCCorInfo_b01`) register, in the ecc group, contains error correction information for each read or write that the NAND flash controller performs. The `ECCCorInfo_b01` register contains ECC error correction information in the `max_errors_b0` and `uncor_err_b0` fields.

At the end of data correction for the transaction in progress, `ECCCorInfo_b01` holds the maximum number of corrections applied to any ECC sector in the transaction. In addition, this register indicates whether the transaction as a whole has correctable errors, uncorrectable errors, or no errors at all. A transaction has no errors when none of the ECC sectors in the transaction has any errors. The transaction is marked as uncorrectable if any one of the sectors is uncorrectable. The transaction is marked as correctable if any one sector has correctable errors and none is uncorrectable.

At the end of each transaction, the host must read this register. The value of this register provides data to the host about the block. The host can take corrective action after the number of correctable errors encountered reaches a particular threshold value.

Interface Signals

Table 10-16 lists I/O pin use for the NAND flash interface signals.

Table 10-16. NAND Flash Interface Signals

Signal	Width	I/O	Description
ad	8	in/out	Command, address and data for the flash device
ale	1	out	Address latch enable
ce_n	1	out	Output Active-low chip enable
cle	1	out	Command latch enable
re_n	1	out	Active-low read enable signal
rb	1	in	Ready/busy signal
we_n	1	out	Active-low write enable signal
wp_n	1	out	Active-low write protect signal

The HPS I/O pins support a single x8 device.

NAND Flash Controller Programming Model

This section describes how the NAND flash controller is to be programmed by software running on the microprocessor unit (MPU).



If you write a configuration register and follow it up with a data operation that is dependent on the value of this configuration register, Altera recommends that you read the value of the register before performing the data operation. This read operation ensures that the posted write of the register is completed and takes effect before the data operation is issued to the NAND flash controller.

Basic Flash Programming

This section describes the steps that must be taken by software to access and control NAND flash controller.

NAND Flash Controller Optimization Sequence

The software must configure the flash device for interrupt or polling mode, using the bank0 bit of the rb_pin_enabled register in the config group. If the device is in polling mode, the software must also program the additional registers, to select the times and frequencies of the polling. Program the following registers in the config group:

- Set the rb_pin_enabled register to the desired mode of operation for each flash device.
- For polling mode, set the load_wait_cnt register to the appropriate value depending on the speed of operation of the NAND flash controller, and the desired wait value.
- For polling mode, set the program_wait_cnt register to the appropriate value by software depending on the speed of operation of the NAND flash controller, and the desired wait value.

- For polling mode, set the `erase_wait_cnt` register to the appropriate value by software depending on the speed of operation of the NAND flash controller, and the desired wait value.
- For polling mode, set the `int_mon_cycnt` register to the appropriate value by software depending on the speed of operation of the NAND flash controller, and the desired wait value.

At any time, the software can change any flash device from interrupt mode to polling mode or vice-versa, using the `bank0` bit of the `rb_pin_enabled` register.

The software needs to ensure that the particular flash device does not have any outstanding transactions before changing the mode of operation for that particular flash device.

Device Initialization Sequence

At initialization, host software must program the following registers in the `config` group:

- Set the `devices_connected` register to 1.
- Set the `device_width` register to 8
- Set the `device_main_area_size` register to the appropriate value.
- Set the `device_spare_area_size` register to the appropriate value.
- Set the `pages_per_block` register according to the parameters of the flash device.
- Set the `number_of_planes` register according to the parameters of the flash device.
- If the device allows two ROW address cycles, the `flag` bit of the `two_row_addr_cycles` register must be set to 1. The host program can ensure this condition either of the following ways:
 - Set the `flag` bit of the `bootstrap_two_row_addr_cycles` register to 1 prior to the NAND flash controller's reset initialization sequence, causing the flash controller to initialize the bit automatically.
 - Set the `flag` bit of the `two_row_addr_cycles` register directly to 1.
- Clear the `chip_enable_dont_care` register in the `config` group to 0.

The NAND flash controller can identify the flash device features, allowing you to initialize the flash controller registers to interface correctly with the device, as described in [“Discovery and Initialization” on page 10-2](#).

However, a few NAND devices do not follow any universally accepted identification protocol. If connected to such a device, the NAND flash controller cannot identify it correctly. If you are using such a device, your software must use other means to ensure that the initialization registers are set up correctly.

Device Operation Control

This section provides a list of registers that you need to program while choosing to use multi-plane or cache operations on the device. If the device does not support multi-plane operations or cache operations, then these registers can be left at their power-on reset values with no impact on the functionality of the NAND flash controller. Even if the device supports these sequences, the software may choose not to use these sequences and can leave these registers at their power-on reset values.

Program the following registers in the config group to achieve the best performance from a given device:

- Set flag bit in the `multiplane_operation` register in the config group to 1 if the device supports multi-plane operations to access the data on the flash device connected to the NAND flash controller. If the flash controller is set up for multi-plane operations, the number of pages to be accessed is always a multiple of the number of planes in the device.
- If the NAND flash controller is configured for multi-plane operation, and if the device has support for multi-plane read command sequence, then set the `multiplane_read_enable` register in the config group.
- If the device implements multiplane address restrictions, set the flag bit in the `multiplane_addr_restrict` register to 1.
- Initialize the `die_mask` and `first_block_of_next_plane` registers as per device requirements.
- If the device supports cache command sequences, enable the `cache_write_enable` and `cache_read_enable` registers in the config group.
- Clear the flag bit of the `copyback_disable` register in the config group to 0 if the device does not support the copyback command sequences. The register defaults to enabled state.
- The `read_mode`, `write_mode` and `copyback_mode` registers, in the config group, currently need not be written by software, because the NAND flash controller is capable of using the correct sequences based on a combination of some multi-plane or cache-related settings of the NAND flash controller and the manufacturer ID. If at some future time these settings change, program the registers to accommodate the change.

ECC Enabling

Before you start any data operation on the flash device, you need to decide whether you want to have the ECC enabled or disabled. If the ECC needs to be enabled, then set up the appropriate correction level depending on the page size and the spare area available on the device.

Set the flag bit in the `ecc_enable` register in the config group to 1 to enable ECC. If enabled, the following registers in the config group need to be programmed accordingly, else they can be ignored.

- Initialize the `ecc_correction` register to the appropriate correction level.
- Program the `spare_area_skip_bytes` and `spare_area_marker` registers in the config group if the software needs to preserve the bad block marker.

For detailed information about ECCs, refer to [“ECC” on page 10-15](#).

NAND Flash Controller Performance Registers

These registers specify the size of the bursts on the device interface, which maximizes the overall performance on the NAND flash controller.

Initialize the `flash_burst_length` register in the `dma` group to a value which maximizes the performance of the device interface by minimizing the number of bursts required to transfer a page.

Interrupt and DMA Enabling

Prior to initiating any data operation on the NAND flash controller, the software must set appropriate interrupt status register bits. If the software chooses to use the DMA logic in the flash controller, then the appropriate DMA enable and interrupts bits in the register space must be set.

- Set the `flag` bit in the `global_int_enable` register in the `config` group to 1, to enable global interrupt.
- Set the relevant bits of the `intr_en0` register in the `status` group to 1 before sending any operations if the flash controller is in interrupt mode.
- Enable DMA if your application needs DMA mode. Enable DMA by setting the `flag` bit of the `dma_enable` register in the `dma` group. Altera recommends that the software reads back this register to ensure that the mode change is accepted before sending a DMA command to the flash controller.
- If the DMA is enabled, then set up the appropriate bits of the `dma_intr_en` register in the `dma` group.

Order of Interrupt Status Bits Assertion

The following interrupt status bits, in the `intr_status0` register in the `status` group, are listed in the order of interrupt bit setting:

1. `time_out`—All other interrupt bits are set to 0 when the watchdog `time_out` bit is asserted.
2. `dma_cmd_comp`—This interrupt status bit is the last to be asserted during a DMA operation to transfer data. This bit signifies the completion of data transfer sequence.
3. `pipe_cpybck_cmd_comp`—This bit is asserted when a copyback command or the last page of a pipeline command completes.
4. `locked_blk`—This bit is asserted when a program (or erase) is performed on a locked block.
5. `INT_act`—No relationship with other interrupt status bits. Indicates a transition from 0 to 1 on the `ready_busy` pin value for that flash device.
6. `rst_comp`—No relationship with other interrupt status bits. Occurs after a reset command has completed.
7. For an erase command:
 - a. `erase_fail` (if failure)
 - b. `erase_comp`

8. For a program command:
 - a. locked_blk (if performed on a locked block)
 - b. pipe_cmd_err (if the pipeline sequence is broken by a MAP01 command)
 - c. page_xfer_inc (at the end of each page data transfer)
 - d. program_fail (if failure)
 - e. pipe_cpybck_cmd_comp
 - f. program_comp
 - g. dma_cmd_comp (If DMA enabled)
9. For a read command:
 - a. pipe_cmd_err (if the pipeline sequence is broken by a MAP01 command)
 - b. page_xfer_inc (at the end of each page data transfer)
 - c. pipe_cpybck_cmd_comp
 - d. load_comp
 - e. ecc_uncor_error (if failure)
 - f. dma_cmd_comp (If DMA enabled)

Timing Registers

You must optimize the following registers for your flash device's speed grade and clock frequency. The NAND flash controller operates correctly with the power-on reset values. However, functioning with power-on reset values is a non-optimal mode that provides loose timing (large margins to the signals).

Set the following registers in the config group to optimize the NAND flash controller for the speed grade of the connected device and frequency of operation of the flash controller:

- twhr2_and_we_2_re
- tcwaw_and_addr_2_data
- re_2_we
- acc_clks
- rdwr_en_lo_cnt
- rdwr_en_hi_cnt
- max_rd_delay
- cs_setup_cnt
- re_2_re

Registers to Ignore

You do not need to initialize the following registers in the config group:

- The `transfer_spare_reg` register. The data transfer mode can be initialized using MAP10 commands.
- The `write_protect` register need not be initialized unless you are testing the write protection feature.

Flash-Related Special Function Operations

This section describes all the special functions that can be performed on the flash memory. The functions are defined by MAP10 commands as described in “[Command Mapping](#)” on page 10-6.

Erase Operations

Before data can be written to flash, an erase cycle must occur. The NAND flash memory controller supports single block and multi-plane erases. The controller decodes the block address from the indirect addressing shown in [Table 10-7](#) on page 10-9.

Single Block Erase

A single command is needed to complete a single-block erase, as follows:

1. Write to the command register, setting the `CMD_MAP` field to 2 and the `BLK_ADDR` field to the desired erase block.
2. Write 0x01 to the Data register.

For a single block erase, the register `multiplane_operation` in the config group must be reset.

After device completes erase operation, the controller generates an `erase_comp` interrupt. If the erase operation fails, the `erase_fail` interrupt is issued. The failing block's address is updated in the `err_block_addr0` register in the status group.

Multi-Plane Erase

For multi-plane erases, the `number_of_planes` register in the config group holds the number of planes in the flash device, and the block address specified must be aligned to the number of planes in the device. The NAND flash controller consecutively erases each block of the memory, up to the number of planes available. Issue this command as follows:

1. Write to the command register, setting the `CMD_MAP` field to 2 and the `BLK_ADDR` field to the desired erase block.
2. Write 0x01 to the Data register.

For multi-plane erase, the register `multiplane_operation` in the config group must be set.

After the device completes erase operation on all planes, the NAND flash controller generates an `erase_comp` interrupt. If the erase operation fails on any of the blocks in a multi-plane erase command, an `erase_fail` interrupt is issued. The failing block's address is updated in the `err_block_addr0` register in the status group.

Lock Operations

The NAND flash controller supports the following features:

- Flash locking—The NAND flash controller supports all flash locking operations.
The flash device itself might have limited support for these functions. If the device does not support locking functions, the flash controller ignores these commands.
- Lock-tight—With the lock-tight feature, the NAND flash controller can prevent lock status from being changed. After the memory is locked tight, the flash controller must be reset before any flash area can be locked or unlocked.

Unlocking a Span of Memory Blocks

To unlock several blocks of memory, perform the following steps:

1. Write to the command register, setting the CMD_MAP field to 2 and the BLK_ADDR field to the starting address of the area to unlock.
2. Write 0x10 to the Data register.
3. Write to the command register, setting the CMD_MAP field to 2 and the BLK_ADDR field to the ending address of the area to unlock.
4. Write 0x11 to the Data register.

When unlocking a range of blocks, the start block address must be less than the end block address. Otherwise, the NAND flash controller exhibits undetermined behavior.

Locking All Memory Blocks

To lock the entire memory:

1. Write to the command register, setting the CMD_MAP field to 2 and the BLK_ADDR field to any memory address.
2. Write 0x21 to the Data register.

Setting Lock-Tight on All Memory Blocks

After the lock-tight is applied, unlocked areas cannot be locked, and locked areas cannot be unlocked.

To lock-tight the entire memory:

1. Write to the command register, setting the CMD_MAP field to 2 and the BLK_ADDR field to any memory address.
2. Write 0x31 to the Data register.

To disable the lock-tight, reset the memory controller.

Transfer Mode Operations

You can configure the NAND flash controller in one of the following modes of data transfer:

- Default area transfer mode
- Spare area transfer mode
- Main+spare area transfer mode

The NAND flash controller determines the default transfer mode from the setting of `transfer_spare_reg` register in the config group. Use MAP10 commands to dynamically change the transfer mode from the existing mode to the new mode. All subsequent commands are in the new mode of transfer. You must consider that transfer modes can be changed at logical data transfer boundaries. For example:

- At the beginning or end of a page in case of single page read or write.
- At the beginning or end of a complete multi-page pipeline read or write command.

Refer to “MAP10 Commands” on page 10-9 for detailed information about the MAP10 commands. Table 10-17 lists the functionality of the MAP10 transfer mode commands, and their mappings to the `transfer_spare_reg` register in the config group.

Table 10-17. `transfer_spare_reg` and MAP10 Transfer Mode Commands

<code>transfer_spare_reg</code>	MAP10 Transfer Mode Commands	Resulting NAND Flash Controller Mode
0	0x42	Main ⁽¹⁾
0	0x41	Spare
0	0x43	Main+spare
1	0x42	Main+spare ⁽¹⁾
1	0x41	Spare
1	0x43	Main+spare

Note to Table 10-17:

- (1) Default access mode (0x42) maps to either main (only) or main+spare mode, depending on the value of `transfer_spare_reg`.

Configure for Default Area Access

You only need to configure for default area access if the transfer mode was previously changed to spare area or main+spare area. To configure default area access:

1. Write to the command register, setting the `CMD_MAP` field to 2 and the `BLK_ADDR` field to any block.
2. Write 0x42 to the Data register.

The NAND flash controller determines the default area transfer mode from the setting of the `transfer_spare_reg` register in the config group. If it is set to 1, then the transfer mode becomes main+spare area, otherwise it is main area.

Configure for Spare Area Access

To access only the spare area of the flash device, use the MAP10 command to set up the NAND flash controller to read or write only the spare area on the device. After the flash controller is set up, use MAP01 read and write commands to access the spare area of the appropriate block and page addresses. To configure the NAND flash controller to access the spare area only, perform the following steps:

1. Write to the command register, setting the `CMD_MAP` field to 2 and the `BLK_ADDR` field to the target block.
2. Write 0x41 to the Data register.

Configure for Main+Spare Area Access

To configure the NAND flash controller to access the main+spare area:

1. Write to the command register, setting the CMD_MAP field to 2 and the BLK_ADDR field to the target block.
2. Write 0x43 to the Data register.

Read-Modify-Write Operations

To read a specific page or modify a few words, bytes, or bits in a page, use the RMW operations. A read command copies the desired data from flash memory to a page buffer. You can then modify the information in the buffer using MAP00 buffer read and write commands and issue another command to write that information back to the memory.

The read-modify-write command operates on an entire page. This command is also useful for a copy type operation, where most of a page is saved to a new location. In this type of operation, the NAND flash controller reads the data, modifies a specified number of words in the page, and then writes the modified page to a new location.



Because the data is modified within the page buffer of the flash device, the NAND flash controller ECC hardware is not used in RMW operations. Software must update the ECC during RMW operations.



For a read-modify-write command to work with hardware ECC, the entire page must be read into system memory, modified, then written back to flash without relying on the RMW feature.

Read-Modify-Write Operation Flow

1. The flow starts by reading a page from the memory:
 - Write to the command register, setting the CMD_MAP field to 2 and the BLK_ADDR field to the starting address of the desired block.
 - Write 0x60 to the Data register.

This step makes the page available to you in the page buffer in the flash device.

2. Next provide destination page address:
 - Write to the command register, setting the CMD_MAP field to 2 and the BLK_ADDR field to the destination address of the desired block.
 - Write 0x61 to the Data register.

This step initiates the page program and provides the destination address to the device.

3. Use MAP00 page buffer read and write commands to modify the data in the page buffer.

4. Write the page buffer data back to memory:
 - Write to the command register, setting the CMD_MAP field to 2 and the BLK_ADDR field to the same destination address.
 - Write 0x62 to the Data register.

This step performs the write.

After the device completes the load operation, the NAND flash controller issues a `load_comp` interrupt. A `program_comp` interrupt is issued when the host issues the write command and the device completes the program operation.

If the page program operation (as a part of an RMW operation) results in a program failure in the device, `program_fail` interrupt is issued. The failing page's block and page address is updated in the `err_block_addr0` and `err_page_addr0` registers in the status group.

Copy-back Operations

The NAND flash controller supports copy back operations. However, the flash device might have limited support for this function. If you attempt to perform a copy-back operation on a device that does not support copy-back, the NAND flash controller triggers an interrupt. An interrupt is also triggered if the source block is not specified before the destination block is specified, or if the destination block is not specified in the next command following a source block specification.

The NAND flash controller cannot do ECC validation in case of copy-back commands. The flash controller copies the ECC data, but does not check it during the copy operation. Altera recommends that you use copy-back only if the ECC implemented in the flash controller is strong enough so that the next access can correct accumulated errors.

The 8-bit value `<PP>` specifies the number of pages for copy-back. With this feature, the NAND flash controller can copy multiple consecutive pages with a single command. When you issue a copy-back command, the flash controller performs the operation in the background. The flash controller puts other commands on hold until the current copy-back completes.

For a multi-plane device, if the `flag` bit in the `multiplane_operation` register in the `config` group is set to 1, multi-plane copy-back is available as an option. In this case, the block address specified must be plane-aligned and the value `<PP>` must specify the total number of pages to copy as a multiple of the number of planes. The block address continues incrementing, keeping the page address fixed, for the total number of planes in the device before incrementing the page address.

A `pipe_cpyback_cmd_comp` interrupt is generated when the flash controller has completed copy-back operation of all `<PP>` pages. If any page program operation (as a part of copy back operation) results in a program failure in the device, the `program_fail` interrupt is issued. The failing page's block and page address is updated in the `err_block_addr0` and `err_page_addr0` registers in the status group.

Copying a Memory Area (Single Plane)

To copy $\langle PP \rangle$ pages from one memory location to another:

1. Write to the command register, setting the CMD_MAP field to 2 and the BLK_ADDR field to the starting address of the area to be copied.
2. Write 0x1000 to the Data register.
3. Write to the command register, setting the CMD_MAP field to 2 and the BLK_ADDR field to the starting address of the new area to be written.
4. Write 0x11 $\langle PP \rangle$ to the Data register, where $\langle PP \rangle$ is the number of pages to copy.

Copying a Memory Area (Multi Plane)

To copy $\langle PP \rangle$ pages from one memory location to another:

1. Set the flag bit of the multiplane_operation register in the config group to 1.
2. Write to the command register, setting the CMD_MAP field to 2 and the BLK_ADDR field to the starting address of the area to be copied. The address must be plane-aligned.
3. Write 0x1000 to the Data register.
4. Write to the command register, setting the CMD_MAP field to 2 and the BLK_ADDR field to the starting address of the new area to be written. This address must also be plane-aligned.
5. Write 0x11 $\langle PP \rangle$ to the Data register, where $\langle PP \rangle$ is the number of pages to copy.

The parameter $\langle PP \rangle$ must be a multiple of the number of planes in the device.

Pipeline Read-Ahead and Write-Ahead Operations

The NAND flash controller supports pipeline read-ahead and write-ahead operations. However, the flash device might have limited support for this function. If the device does not support pipeline read-ahead or write-ahead, the flash controller processes these commands as standard reads or writes.

The NAND flash controller can handle at the most four outstanding pipeline commands, queued up in the order in which the flash controller received the commands. The flash controller operates on the pipeline command at the head of the queue until all the pages corresponding to the pipeline command are executed. The flash controller then pops the pipeline command at the head of the queue and proceeds to work on the next pipeline command in the queue.

The pipeline read-ahead function allows for a continuous reading of the flash memory. On receiving a pipeline read command, the flash controller immediately issues a load command to the device. While data is read out with MAP01 commands in a consecutive or multi-plane address pattern, the flash controller maintains additional cache or multi-plane read command sequencing for continuous streaming of data from the flash device.

The pipeline write-ahead function allows for a continuous writing of the flash memory. While data is written with MAP01 commands in a consecutive or multi-plane address pattern, the NAND flash controller maintains cache or multi-plane command sequences for continuous streaming of data into the flash device.

MAP01 commands must read or write pages in the same sequence that the pipelined commands were issued to the NAND flash controller. If the host issues multiple pipeline commands, pages must be read or written in the order the pipeline commands were issued. It is not possible to read or write pages for a second pipeline command before completing the first pipeline command. If the pipeline sequence is broken by a MAP01 command, the `pipe_cmd_err` interrupt is issued, and the flash controller clears the pipeline command queue. The flash controller services the violating incoming MAP01 read or write request with a normal page read or write sequence.

For a multi-plane device that supports multi-plane programming, you must set the `flag` bit of the `multiplane_operation` register in the `config` group to 1. In this case, the data is interleaved into page-size chunks to consecutive blocks.

Pipeline read-ahead commands can read data from the queue in this interleaved fashion. The parameter `<PP>` denotes the total number of pages in multiples of the number of planes available, and the block address must be plane-aligned, which keeps the page address constant while incrementing the block address for each page-size chunk of data. After reading from every plane, the NAND flash controller increments the page address and resets the block address to the initial address. You can also use pipeline write-ahead commands in multi-plane mode. The write operation works similarly to the read operation, holding the page address constant while incrementing the block address until all planes are written.



The same four-entry queue is used to queue the address and page count for pipeline read-ahead and write-ahead commands. This commonality requires that you use MAP01 commands to read out all pages for a pipeline read-ahead command before the next pipeline command can be processed. Similarly, you must write to all pages pertaining to pipeline write-ahead command before the next pipeline command can be processed.

Since the value of the `flag` bit of the `multiplane_operation` register in the `config` group determines pipeline read-ahead or write-ahead behavior, it can only be changed when the pipeline registers are empty.

When the host issues a pipeline read-ahead command, and the flash controller is idle, the load operation happens immediately.



The read-ahead command does not return the data to the host, and the write-ahead command does not write data to the flash address. The NAND flash controller loads the read data. The read data is returned to the host only when the host issues MAP01 commands to read the data. Similarly, the flash controller loads the write data, and writes it to the flash only when the host issues MAP01 commands to write the data.

A `pipe_cpyback_cmd_comp` interrupt is generated when the NAND flash controller has finished processing a pipeline command and has discarded that command from its queue. At this point of time, the host can send another pipeline command. A pipeline command is popped from the queue, and an interrupt is issued when the flash controller has started processing the last page of pipeline command. Hence, the `pipe_cpyback_cmd_comp` interrupt is issued prior to the last page load in case of pipeline read command and start of data transfer of the last page to be programmed in case of pipeline writes command.

An additional `program_comp` interrupt is generated when the last page program operation completes in case of pipeline write command.

If the device command set requires the NAND flash controller to issue a load command for the last page in the pipeline read command, a `load_comp` interrupt is generated after the last page load operation completes.

For pipeline write commands, if any page program results in a failure in the device, a `program_fail` interrupt is issued. The failing page's block and page address is updated in the `err_block_addr0` and `err_page_addr0` registers in the status group.

Pipeline commands sequence advanced commands in the device like cache and multi-plane. When the NAND flash controller receives a multi-page read or write pipeline command, it sequences commands sent to the device depending on settings in the following registers, in the config group:

- `cache_read_enable`
- `cache_write_enable`
- `multiplane_operation`

For a device that supports cache read sequences, the `flag` bit of the `cache_read_enable` register must be set to 1. The NAND flash controller sequences each multi-page pipeline read command as a cache read sequence. For a device that supports cache program command sequences, `cache_write_enable` must be set. The flash controller sequences each multi-page write pipeline command as a cache write sequence.

For a device that has multi-planes and supports multi-plane program commands, the NAND flash controller register `multiplane_operation`, in the config group, must be set. On receiving the multi-page pipeline write command, the flash controller sequences the device with multi-plane program commands and expects that the host transfers data to the flash controller in an even-odd block increment addressing mode.

Set Up a Single Area for Pipeline Read-Ahead

To set up an area for pipeline read-ahead, perform the following steps:

1. Write to the command register, setting the `CMD_MAP` field to 2 and the `BLK_ADDR` field to the starting address of the block to pre-read.
2. Write `0x20<PP>` to the Data register, where the 0 sets this command as a read-ahead and `<PP>` is the number of pages to pre-read. The pages must not cross a block boundary. If a block boundary is crossed, the NAND flash controller generates an unsupported command (`unsup_cmd`) interrupt and drops the command.

The read-ahead command is a hint to the flash device to start loading the next page in the page buffer as soon as the previous page buffer operation has completed. After you set up the read-ahead, use a `MAP01` command to actually read the data. In the `MAP01` command, specify the same starting address as in the read-ahead.

If the read command received following a pipeline read-ahead request is not to a pre-read page, then an interrupt bit is set to 1 and the pipeline read-ahead or write-ahead registers are cleared. You must issue a new pipeline read-ahead request must be issued to re-load the same data. You must use `MAP01` commands to read all of the data that is pre-read before the NAND flash controller returns to the idle state.

Set Up a Single Area for Pipeline Write-Ahead

To set up an area for pipeline write-ahead:

1. Write to the command register, setting the CMD_MAP field to 2 and the BLK_ADDR field to the starting address of the block to pre-write.
2. Write 0x21<PP> to the Data register, where the value 1 sets this command as a write-ahead and <PP> is the number of pages to pre-write. The pages must not cross a block boundary. If a block boundary is crossed, the NAND flash controller generates an unsupported command (unsup_cmd) interrupt and drops the command.

After you set up the write-ahead, use a MAP01 command to actually write the data. In the MAP01 command, specify the same starting address as in the write-ahead.

If the write command received following a pipeline write-ahead request is not to a pre-written page, then an interrupt bit is set to 1 and the pipeline read-ahead or write-ahead registers are cleared. You must issue a new pipeline write-ahead request to configure the write logic.

You must use MAP01 commands to write all of the data that is pre-written before the NAND flash controller returns to the idle state.

NAND Flash Controller Address Map and Register Definitions

 The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the following links for the module instance:

- **nanddata**
- **nandregs**

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.

 The base addresses of all modules are also listed in the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 10-18 lists the revision history for this document.

Table 10-18. Document Revision History

Date	Version	Changes
November 2012	1.2	■ Supports one 8-bit device ■ Show additional supported block sizes ■ Bad block marker handling
May 2012	1.1	Added programming model section.
January 2012	1.0	Initial release.

The hard processor system (HPS) provides a Secure Digital/MultiMediaCard (SD/MMC) controller for interfacing to external SD and MMC flash cards, secure digital I/O (SDIO) devices, and Consumer Electronics Advanced Transport Architecture (CE-ATA) hard drives. The SD/MMC controller enables you to store boot images and boot the processor system from the removable flash card. You can also use the flash card to expand the on-board storage capacity for larger applications or user data. Other applications include interfacing to embedded SD (eSD) and embedded MMC (eMMC) nonremovable flash devices.

The SD/MMC controller is based on the Synopsys® DesignWare® Mobile Storage Host (DWC_mobile_storage) controller.

 This document refers to SD/SDIO commands, which are documented in detail in the *Physical Layer Simplified Specification, Version 3.01* and the *SDIO Simplified Specification Version 2.00* as described in “References” on page 11–79.

Features of the SD/MMC Controller

The HPS SD/MMC controller offers the following features:

- Supports HPS boot from mobile storage
- Supports the following standards or card types:
 - SD, including eSD—version 3.0
 - SDIO, including embedded SDIO (eSDIO)—version 3.0
 - CE-ATA—version 1.1
 - MMC, including eMMC—version 4.41, 1-bit, 4-bit, and 8-bit (in some packages, as described in Table 11–2 on page 11–3)
- Integrated descriptor-based direct memory access (DMA)
- Internal 4 KB receive and transmit FIFO buffer

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

Portions © 2011 Synopsys, Inc. Used with permission. All rights reserved. Synopsys & DesignWare are registered trademarks of Synopsys, Inc. All documentation is provided “as is” and without any warranty. Synopsys expressly disclaims any and all warranties, express, implied, or otherwise, including the implied warranties of merchantability, fitness for a particular purpose, and non-infringement, and any warranties arising out of a course of dealing or usage of trade.

†Paragraphs marked with the dagger (†) symbol are Synopsys Proprietary. Used with permission.



Table 11-1 shows various SD card device types and the supported voltages, bus modes, and speeds.

The SD/MMC controller does not directly support voltage switching, card interrupts, or back-end power control of eSDIO card devices. However, you can connect these signals to general-purpose I/Os (GPIOs).

Table 11-1. SD Card Use Cases

Card Device Type	Voltages Supported		Bus Modes Supported				Bus Speed Modes Supported			
							Default Speed	High Speed	SDR12	SDR25 ⁽¹⁾
	3.3 V	1.8 V	SPI	1 bit	4 bit	8 bit	12.5 MBps 25 MHz	25 MBps 50 MHz	12.5 MBps 25 MHz	25 MBps 50 MHz
SDSC (SD)	✓	—	✓	✓	—	—	✓	✓	—	—
SDHC	✓	✓ ⁽²⁾	✓	✓	✓	—	✓	✓	✓	✓
SDXC	✓	✓ ⁽²⁾	✓	✓	✓	—	✓	✓	✓	✓
eSD	✓	✓ ⁽²⁾	✓	✓	✓	—	✓	✓	✓	✓
SDIO	✓	✓ ⁽²⁾	✓	✓	✓	—	✓	✓	✓	✓
eSDIO	✓	✓ ⁽²⁾	✓	✓	✓	✓ ⁽³⁾	✓	✓	✓	✓

Notes to Table 11-1:

- (1) SDR25 speed mode requires 1.8-V signaling. Note that even if a card supports UHS-I modes (for example SDR50, SDR104, DDR50) it can still communicate at the lower speeds (for example SDR12, SDR25).
- (2) Controls the voltage switch output to support 1.8-V signalling for SD.
- (3) Optional 8-bit bus mode for eSDIO is not supported in all FPGA packages.



Card form factors (such as mini and micro) are not enumerated in Table 11-1 because they do not impact the card interface functionality.

Table 11-2 shows various MMC card device types and the supported voltage, bus modes, and bus speeds.

The SD/MMC controller does not contain a reset output as part of the external card interface. To reset the flash card device, consider using a general purpose output pin.

Table 11-2. MMC Use Cases

Card Device Type	Max Clock Speed (MHz)	Max Data Rate (MBps)	Voltages Supported		Bus Modes Supported				Bus Speed Modes Supported	
			3.3 V	1.8 V	SPI ⁽¹⁾	1 bit	4 bit	8 bit	Default Speed	High Speed
MMC	20	2.5	✓	—	✓	✓	—	—	✓	—
RSMMC	20	10	✓	—	✓	✓	✓	—	✓	✓
MMCPPlus	50 ⁽³⁾	25	✓	—	—	✓	✓	✓ ⁽²⁾	✓	✓
MMCMobile	50	6.5	✓	✓	—	✓	—	—	✓	✓
eMMC	50	25	✓	✓	—	✓	✓	—	✓	✓

Notes to Table 11-2:


- (1) SPI mode is obsolete in the MMC 4.41 specification.
- (2) The optional 8-bit bus mode is not supported in all FPGA packages.
- (3) Supports a maximum clock rate of 50 MHz instead of 52 MHz (specified in MMC specification).

SD/MMC Controller Block Diagram and System Integration

The SD/MMC controller includes a bus interface unit (BIU) and a card interface unit (CIU). The BIU provides a slave interface for a host to access the control and status registers (CSRs). Additionally, this unit also provides independent FIFO buffer access through a DMA interface. The DMA controller is responsible for exchanging data between the system memory and FIFO buffer. The DMA registers are accessible by the host to control the DMA operation. The CIU supports the SD, MMC, and CE-ATA protocols on the controller, and provides clock management through the clock control block. The interrupt control block for generating an interrupt connects to the generic interrupt controller in the ARM® Cortex™-A9 microprocessor unit (MPU) subsystem.

Figure 11-1 shows a block diagram of the SD/MMC controller and how it integrates in the HPS.

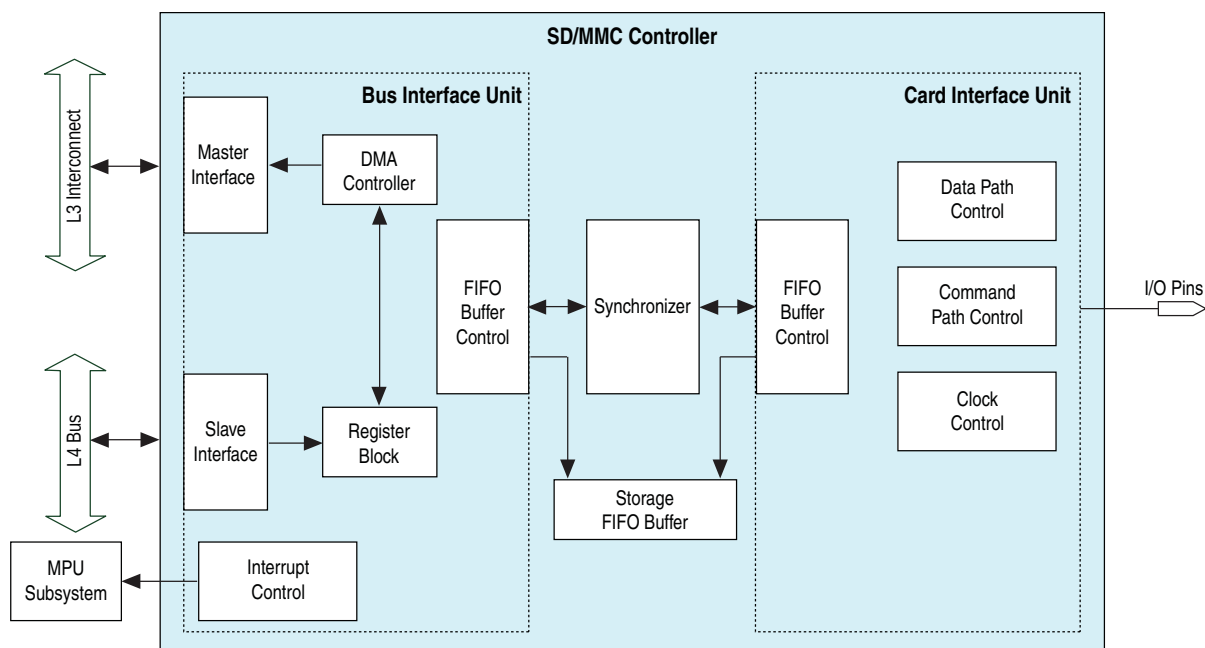Figure 11-1. SD/MMC Controller Connectivity



Functional Description of the SD/MMC Controller

This section describes the SD/MMC controller components and how the controller operates.

SD/MMC/CE-ATA Protocol

The SD/MMC/CE-ATA protocol is based on command and data bit streams that are initiated by a start bit and terminated by a stop bit. Additionally, the SD/MMC controller provides a reference clock and is the only master interface that can initiate a transaction.

- **Command**—a token transmitted serially on the CMD pin that starts an operation.
- **Response**—a token from the card transmitted serially on the CMD pin in response to certain commands.
- **Data**—transferred serially using the data pins for data movement commands.

Figure 11-2 illustrates an example of a multiple-block read operation. The clock is a representative only and does not show the exact number of clock cycles.

Figure 11-2. Multiple-Block Read Operation


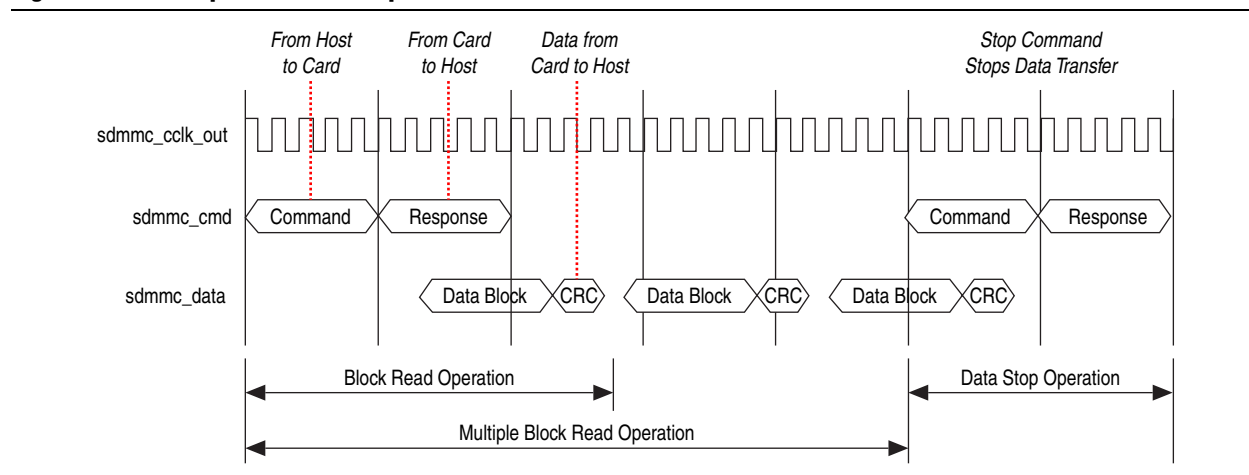


Figure 11-3 illustrates an example of a command token sent by the host in a multiple-block write operation.

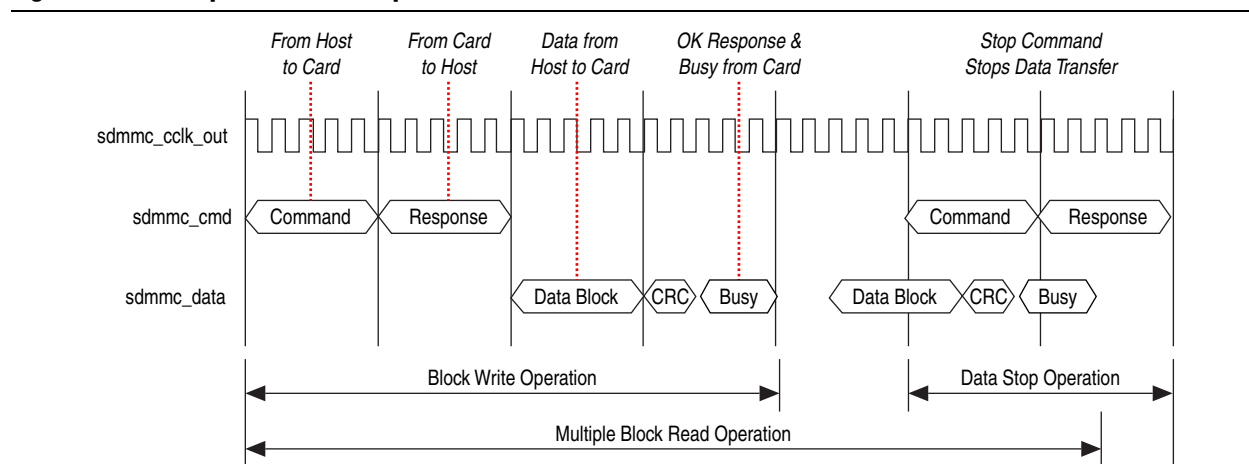Figure 11-3. Multiple-Block Write Operation



BIU

The BIU interfaces with the CIU, and is connected to the level 3 (L3) interconnect and level 4 (L4) peripheral buses. The BIU consists of the following primary functional blocks:

- Slave interface
- Register block
- FIFO buffer
- Internal DMA controller

Slave Interface

The host processor accesses the SD/MMC controller registers and data FIFO buffers through the slave interface.

Register Block

The register block is part of the BIU and provides read and write access to the CSRs.

All registers reside in the BIU clock domain. When a command is sent to a card by setting the start command bit (`start_cmd`) of the command register (`cmd`) to 1, all relevant registers needed for the CIU operation are transferred to the CIU block. During this time, software must not write to the registers that are transferred from the BIU to the CIU. The software must wait for the hardware to reset the `start_cmd` bit to 0 before writing to these registers again. The register unit has a hardware locking feature to prevent illegal writes to registers.

After a command start is issued by setting the `start_cmd` bit of the `cmd` register, the following registers cannot be rewritten until the command is accepted by the CIU:

- Command (`cmd`)
- Command argument (`cmdarg`)
- Byte count (`bytcnt`)
- Block size (`blksiz`)
- Clock divider (`clkdiv`)
- Clock enable (`clkena`)
- Clock source (`clksrc`)
- Timeout (`tmout`)
- Card type (`ctype`)

The hardware resets the `start_cmd` bit once the CIU accepts the command. If a host write to any of these registers is attempted during this locked time, the write is ignored and the hardware lock write error bit (`hle`) is set to 1 in the raw interrupt status register (`rintsts`). Additionally, if the interrupt is enabled and not masked for a hardware lock error, an interrupt is sent to the host.

After a command is accepted, you can send another command to the CIU—which has a one-deep command queue—under the following conditions:

- If the previous command is not a data transfer command, the new command is sent to the SD/MMC/CE-ATA card once the previous command completes.
- If the previous command is a data transfer command and if the wait previous data complete bit (`wait_prvdata_complete`) of the `cmd` register is set to 1 for the new command, the new command is sent to the SD/MMC/CE-ATA card only when the data transfer completes.
- If the `wait_prvdata_complete` bit is 0, the new command is sent to the SD/MMC/CE-ATA card as soon as the previous command is sent. Typically, use this feature to stop or abort a previous data transfer or query the card status in the middle of a data transfer.

Interrupt Controller Unit

The interrupt controller unit generates an interrupt that depends on the `rintsts` register, the interrupt mask register (`intmask`), and the interrupt enable bit (`int_enable`) of the control register (`ctrl`). Once an interrupt condition is detected, the controller sets the corresponding interrupt bit in the `rintsts` register. The bit in the `rintsts` register remains set to 1 until the software resets the bit to 0 by writing a 1 to the interrupt bit; writing a 0 leaves the bit untouched.

The interrupt port is an active-high, level-sensitive interrupt. The interrupt port is active only when at least one bit in the `rintsts` register is set to 1, the corresponding `intmask` register bit is 1, and the `int_enable` bit of the `ctrl` register is 1.

The following bits are available as top-level ports for debug purposes:

- All bits of the `intmask` register
- All bits of the `rintsts` register
- The `int_enable` bit of the `ctrl` register

The `int_enable` bit of the `ctrl` register is set to 0 on power-on, and the `intmask` register bits are set to 0x0000000, which masks all the interrupts.

The following conditions can cause the interrupt to occur:

- End-bit error on read
- No cyclic redundancy code (CRC) on write
- Auto command done
- Start-bit error
- Hardware locked write error
- FIFO buffer underflow or overflow error
- Data starvation by host timeout
- Data read timeout or boot data start
- Response timeout or boot ACK received
- Data CRC error
- Response CRC error

- Receive FIFO buffer data request
- Transmit FIFO buffer data request
- Data transfer over
- Command done
- Response error

The Receive FIFO Data Request and Transmit FIFO Data Request interrupts are set by level-sensitive interrupt sources. Therefore, the interrupt source must be first cleared before you can reset the interrupt's corresponding bit in the `rintsts` register to 0.

For example, on receiving the Receive FIFO Data Request interrupt, the FIFO buffer must be emptied so that the FIFO buffer count is not greater than the RX watermark, which causes the interrupt to be triggered.

The rest of the interrupts are triggered by single clock-pulse-width sources.

FIFO Buffer

The SD/MMC controller has a 4-KB data FIFO buffer for storing transmit and receive data. The FIFO buffer memory supports error correction codes (ECCs). Both interfaces to the FIFO buffer support single and double bit error injection. The enable and error injection pins are inputs driven by the system manager and the status pins are outputs driven to the MPU subsystem.

The SD/MMC controller provides outputs to notify the system manager when single-bit correctable errors are detected (and corrected), and when double-bit (uncorrectable) errors are detected. The system manager generates an interrupt to the GIC when an ECC error is detected.



For more information, refer to the *System Manager* chapter in volume 3 of the *Arria® V Device Handbook*.

Internal DMA Controller

The internal DMA controller has a CSR and a single transmit or receive engine, which transfers data from system memory to the card and vice versa. The controller uses a descriptor mechanism to efficiently move data from source to destination with minimal host processor intervention. You can set up the controller to interrupt the host processor in situations such as transmit and receive data transfer completion from the card, as well as other normal or error conditions. The DMA controller and the host driver communicate through a single data structure.

The internal DMA controller transfers the data received from the card to the data buffer in the system memory, and transfers transmit data from the data buffer in the memory to the controller's FIFO buffer. Descriptors that reside in the system memory act as pointers to these buffers.

A data buffer resides in the physical memory space of the system memory and consists of complete or partial data. The buffer status is maintained in the descriptor. Data chaining refers to data that spans multiple data buffers. However, a single descriptor cannot span multiple data buffers.

A single descriptor is used for both reception and transmission. The base address of the list is written into the descriptor list base address register (dbaddr). A descriptor list is forward linked. The last descriptor can point back to the first entry to create a ring structure. The descriptor list resides in the physical memory address space of the host. Each descriptor can point to a maximum of two data buffers.

Internal DMA Controller Descriptors

The internal DMA controller uses these types of descriptor structures:

- Dual-buffer structure—The distance between two descriptors is determined by the skip length value written to the descriptor skip length field (dsl) of the bus mode register (bmod).
- Chain structure—Each descriptor points to a unique buffer, and to the next descriptor in a linked list.

Figure 11-4 and Figure 11-5 illustrate the internal DMA controller dual-buffer descriptor structure and chain descriptor structure respectively.

Figure 11-4. Dual-Buffer Descriptor Structure

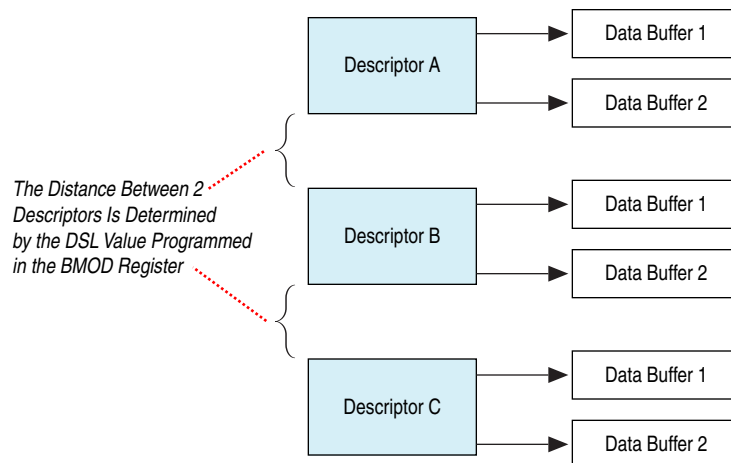


Figure 11-5. Chain Descriptor Structure

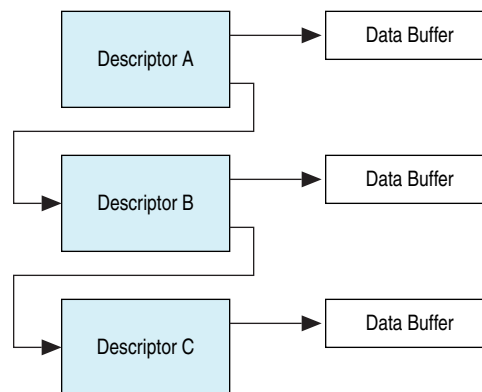


Table 11-3 shows the internal format of a descriptor. The descriptor address must be aligned to the 32-bit bus. Each descriptor contains 16 bytes of control and status information. For information about each of the bits of the descriptor, refer to Table 11-4 on page 11-11 through Table 11-7 on page 11-12.

Table 11-3. Descriptor Format

Name	Offset	31	30	29	...	26	25	...	13	12	...	6	5	4	3	2	1	0	
DES0	0	OWN	CES	—										ER	CH	FS	LD	DIC	—
DES1	4	—					BS2					BS1							
DES2	8	BAP1																	
DES3	12	BAP2 or Next Descriptor Address																	

The DES0 field in the internal DMA controller descriptor contains control and status information. Table 11-4 lists the bits in this descriptor.

Table 11-4. Internal DMA Controller DES0 Descriptor Field

Bits	Name	Description
31	OWN	When set to 1, this bit indicates that the descriptor is owned by the internal DMA controller. When this bit is set to 0, it indicates that the descriptor is owned by the host. The internal DMA controller resets this bit to 0 when it completes the data transfer.
30	Card Error Summary (CES)	The CES bit indicates whether a transaction error occurred. The CES bit is the logical OR of the following error bits in the rintsts register. ■ End-bit error (ebe) ■ Response timeout (rto) ■ Response CRC (rcrc) ■ Start-bit error (sbe) ■ Data read timeout (drto) ■ Data CRC for receive (dcrc) ■ Response error (re)
29:6	Reserved	—
5	End of Ring (ER)	When set to 1, this bit indicates that the descriptor list reached its final descriptor. The internal DMA controller returns to the base address of the list, creating a descriptor ring. ER is meaningful for only a dual-buffer descriptor structure.
4	Second Address Chained (CH)	When set to 1, this bit indicates that the second address in the descriptor is the next descriptor address rather than the second buffer address. When this bit is set to 1, BS2 (DES1[25:13]) must be all zeros.
3	First Descriptor (FS)	When set to 1, this bit indicates that this descriptor contains the first buffer of the data. If the size of the first buffer is 0, next descriptor contains the beginning of the data.
2	Last Descriptor (LD)	When set to 1, this bit indicates that the buffers pointed to by this descriptor are the last buffers of the data.
1	Disable Interrupt on Completion (DIC)	When set to 1, this bit prevents the setting of the TI/RI bit of the internal DMA controller status register (idsts) for the data that ends in the buffer pointed to by this descriptor.
0	Reserved	—

The DES1 descriptor field contains the buffer size. Table 11-5 lists the bits in this descriptor.

Table 11-5. Internal DMA Controller DES1 Descriptor Field

Bits	Name	Description
31:26	Reserved	—
25:13	Buffer 2 Size (BS2)	These bits indicate the second data buffer byte size. The buffer size must be a multiple of four. When the buffer size is not a multiple of four, the resulting behavior is undefined. This field is not valid if DES0[4] is set to 1.
12:0	Buffer 1 Size (BS1)	Indicates the data buffer byte size, which must be a multiple of four bytes. When the buffer size is not a multiple of four, the resulting behavior is undefined. If this field is 0, the DMA ignores the buffer and proceeds to the next descriptor for a chain structure, or to the next buffer for a dual-buffer structure. If there is only one descriptor and only one buffer to be programmed, you need to use only buffer 1 and not buffer 2.

The DES2 descriptor field contains the address pointer to the data buffer. Table 11-6 lists the bits in this descriptor.

Table 11-6. Internal DMA Controller DES2 Descriptor Field

Bits	Name	Description
31:0	Buffer Address Pointer 1 (BAP1)	These bits indicate the physical address of the first data buffer. The internal DMA controller ignores DES2 [1:0], because it only performs 32-bit-aligned accesses.

The DES3 descriptor field contains the address pointer to the next descriptor if the present descriptor is not the last descriptor in a chained descriptor structure or the second buffer address for a dual-buffer structure. Table 11-7 lists the bits in this descriptor.

Table 11-7. Internal DMA Controller DES3 Descriptor Field

Bits	Name	Description
31:0	Buffer Address Pointer 2 (BAP2) or Next Descriptor Address	These bits indicate the physical address of the second buffer when the dual-buffer structure is used. If the Second Address Chained (DES0[4]) bit is set to 1, this address contains the pointer to the physical memory where the next descriptor is present. If this is not the last descriptor, the next descriptor address pointer must be aligned to 32 bits. Bits 1 and 0 are ignored.

Host Bus Burst Access

The internal DMA controller attempts to execute fixed-length burst transfers on the master interface if configured using the fixed burst bit (fb) of the bmod register. The maximum burst length is indicated and limited by the programmable burst length (pbl) field of the bmod register. When descriptors are being fetched, the master interface always presents a burst size of four to the interconnect.

The internal DMA controller initiates a data transfer only when sufficient space to accommodate the configured burst is available in the FIFO buffer or the number of bytes to the end of transfer is less than the configured burst-length. When the DMA master interface is configured for fixed-length bursts, it transfers data using the most efficient combination of INCR4/8/16 and SINGLE transactions. If the DMA master interface is not configured for fixed length bursts, it transfers data using INCR (undefined length) and SINGLE transactions.

Host Data Buffer Alignment

The transmit and receive data buffers in system memory must be aligned to a 32-bit boundary.

Buffer Size Calculations

The driver knows the amount of data to transmit or receive. For transmitting to the card, the internal DMA controller transfers the exact number of bytes from the FIFO buffer, indicated by the buffer size field of the DES1 descriptor field.

If a descriptor is not marked as last (with the LD bit of the DES0 field set to 0) then the corresponding buffer(s) of the descriptor are considered full, and the amount of valid data in a buffer is accurately indicated by its buffer size field. If a descriptor is marked as last, the buffer might or might not be full, as indicated by the buffer size in the DES1 field. The driver is aware of the number of locations that are valid. The driver is expected to ignore the remaining, invalid bytes.

Internal DMA Controller Interrupts

Interrupts can be generated as a result of various events. The idsts register contains all the bits that might cause an interrupt. The internal DMA controller interrupt enable register (idinten) contains an enable bit for each of the events that can cause an interrupt to occur.

There are two summary interrupts—the normal interrupt summary bit (nis) and the abnormal interrupt summary bit (ais)—in the idsts register. The nis bit results from a logical OR of the transmit interrupt (ti) and receive interrupt (ri) bits in the idsts register. The ais bit is a logical OR result of the fatal bus error interrupt (fbe), descriptor unavailable interrupt (du), and card error summary interrupt (ces) bits in the idsts register.

Interrupts are cleared by writing a 1 to the corresponding bit position. If a 0 is written to an interrupt's bit position, the write is ignored, and does not clear the interrupt. When all the enabled interrupts within a group are cleared, the corresponding summary bit is set to 0. When both the summary bits are set to 0, the interrupt signal is de-asserted.

Interrupts are not queued. If another interrupt event occurs before the driver has responded to the previous interrupt, no additional interrupts are generated. For example, the `ri` bit of the `idsts` register indicates that one or more data has been transferred to the host buffer.

An interrupt is generated only once for simultaneous, multiple events. The driver must scan the `idsts` register for the interrupt cause. The final interrupt signal from the controller is a logical OR of the interrupts from the BIU and internal DMA controller.

Internal DMA Controller FSM

The following steps show the internal DMA controller functional state machine (FSM) operations:

1. The internal DMA controller performs four accesses to fetch a descriptor.
2. The DMA controller stores the descriptor information internally. If it is the first descriptor, the controller issues a FIFO buffer reset and waits until the reset is complete.
3. The internal DMA controller checks each bit of the descriptor for the correctness. If bit mismatches are found, the appropriate error bit is set to 1 and the descriptor is closed by setting the `OWN` bit in the `DES0` field to 1.

The `rintsts` register indicates one of the following conditions:

- Response timeout
 - Response CRC error
 - Data receive timeout
 - Response error
4. The DMA waits for the RX watermark to be reached before writing data to system memory, or the TX watermark to be reached before reading data from system memory. The RX watermark represents the number of bytes to be locally stored in the FIFO buffer before the DMA writes to memory. The TX watermark represents the number of free bytes in the local FIFO buffer before the DMA reads data from memory.
 5. If the value of the programmable burst length (PBL) field is larger than the remaining amount of data in the buffer, single transfers are initiated. If dual buffers are being used, and the second buffer contains no data (buffer size = 0), the buffer is skipped and the descriptor is closed.
 6. The `OWN` bit in descriptor is set to 0 by the internal DMA controller after the data transfer for one descriptor is completed. If the transfer spans more than one descriptor, the DMA controller fetches the next descriptor. If the transfer ends with the current descriptor, the internal DMA controller goes to idle state after setting the `ri` bit or the `ti` bit of the `idsts` register. Depending on the descriptor structure (dual buffer or chained), the appropriate starting address of descriptor is loaded. If it is the second data buffer of dual buffer descriptor, the descriptor is not fetched again.

Abort During Internal DMA Transfer

If the host issues an SD/SDIO STOP_TRANSMISSION command (CMD12) to the card while data transfer is in progress, the internal DMA controller closes the present descriptor after completing the data transfer until a Data Transfer Over (DTO) interrupt is asserted. Once a STOP_TRANSMISSION command is issued, the DMA controller performs single burst transfers.

1. For a card write operation, the internal DMA controller keeps writing data to the FIFO buffer after fetching it from the system memory until a DTO interrupt is asserted. This is done to keep the card clock running so that the STOP_TRANSMISSION command is reliably sent to the card.
2. For a card read operation, the internal DMA controller keeps reading data from the FIFO buffer and writes to the system memory until a DTO interrupt is generated. This is required because DTO interrupt is not generated until and unless all the FIFO buffer data is emptied.



For a card write abort, only the current descriptor during which a STOP_TRANSMISSION command is issued is closed by the internal DMA controller. The remaining unread descriptors are not closed by the internal DMA controller.



For a card read abort, the internal DMA controller reads the data out of the FIFO buffer and writes them to the corresponding descriptor data buffers. The remaining unread descriptors are not closed.

FIFO Buffer Overflow and Underflow

During normal data transfer conditions, FIFO buffer overflow and underflow does not occur. However, if there is a programming error, a FIFO buffer overflow or underflow can result. For example, consider the following scenarios.

For transmit:

- PBL=4
- TX watermark = 1

For these programming values, if the FIFO buffer has only one location empty, the DMA attempts to read four words from memory even though there is only one word of storage available. This results in a FIFO Buffer Overflow interrupt.

For receive:

- PBL=4
- RX watermark = 1

For these programming values, if the FIFO buffer has only one location filled, the DMA attempts to write four words, even though only one word is available. This results in a FIFO Buffer Underflow interrupt.

The driver must ensure that the number of bytes to be transferred, as indicated in the descriptor, is a multiple of four bytes. For example, if the bytcnt register = 13, the number of bytes indicated in the descriptor must be rounded up to 16 because the length field must always be a multiple of four bytes.

Table 11-8 lists the legal PBL and FIFO buffer watermark values for internal DMA controller data transfers operations.

Table 11-8. PBL and Watermark Levels

PBL (Number of transfers)	TX/RX Watermark Value
1	greater than or equal to 1
4	greater than or equal to 4
8	greater than or equal to 8
16	greater than or equal to 16
32	greater than or equal to 32
64	greater than or equal to 64
128	greater than or equal to 128
256	greater than or equal to 256

Fatal Bus Error Scenarios

A fatal bus error occurs due to an error response through the master interface. This error is a system error, so the software driver must not perform any further setup on the controller. The only recovery mechanism from such scenarios is to perform one of the following tasks:

- Issue a reset to the controller through the reset manager.
- Issue a program controller reset by writing to the controller reset bit (`controller_reset`) of the `ctrl` register.

CIU

The CIU interfaces with the BIU and SD/MMC cards or devices. The host processor writes command parameters to the SD/MMC controller's BIU control registers and these parameters are then passed to the CIU. Depending on control register values, the CIU generates SD/MMC command and data traffic on the card bus according to the SD/MMC protocol. The control register values also decide whether the command and data traffic is directed to the CE-ATA card, and the SD/MMC controller controls the command and data path accordingly.

The following list describes the CIU operation restrictions:

- After a command is issued, the CIU accepts another command only to check read status or to stop the transfer.
- Only one data transfer command can be issued at a time.
- During an open-ended card write operation, if the card clock is stopped because the FIFO buffer is empty, the software must first fill the data into the FIFO buffer and start the card clock. It can then issue only an SD/SDIO STOP_TRANSMISSION (CMD12) command to the card.
- During an SDIO/COMBO card transfer, if the card function is suspended and the software wants to resume the suspended transfer, it must first reset the FIFO buffer and start the resume command as if it were a new data transfer command.

- When issuing SD/SDIO card reset commands (GO_IDLE_STATE, GO_INACTIVE_STATE or CMD52_reset) while a card data transfer is in progress, the software must set the stop abort command bit (stop_abort_cmd) in the cmd register to 1 so that the controller can stop the data transfer after issuing the card reset command.
- If the card clock is stopped because the FIFO buffer is full during a card read, the software must read at least two FIFO buffer locations to start the card clock.
- If CE-ATA card device interrupts are enabled (the nIEN bit is set to 0 in the ATA control register), a new RW_BLK command must not be sent to the same card device if there is a pending RW_BLK command in progress (the RW_BLK command used in this document is the RW_MULTIPLE_BLOCK MMC command defined by the CE-ATA specification). Only the Command Completion Signal Disable (CCSD) command can be sent while waiting for the Command Completion Signal (CCS).
- For the same card device, a new command is allowed for reading status information, if interrupts are disabled in the CE-ATA card (the nIEN bit is set to 1 in the ATA control register).
- Open-ended transfers are not supported for the CE-ATA card devices.
- The send_auto_stop signal is not supported (software must not set the send_auto_stop bit in the cmd register) for CE-ATA transfers.

The CIU consists of the following primary functional blocks:

- Command path
- Data path
- Clock control

Command Path

The command path performs the following functions:

- Load card command parameters
- Send commands to card bus
- Receive responses from card bus
- Send responses to BIU
- Load clock parameters
- Drives the P-bit on command pin

A new command is issued to the controller by writing to the BIU registers and setting the start_cmd bit in the cmd register. The command path loads the new command (command, command argument, timeout) and sends an acknowledgement to the BIU.

After the new command is loaded, the command path state machine sends a command to the card bus—including the internally generated seven-term CRC (CRC-7)—and receives a response, if any. The state machine then sends the received response and signals to the BIU that the command is done, and then waits for eight clock cycles before loading a new command. In CE-ATA data payload transfer (RW_MULTIPLE_BLOCK) commands, if the card device interrupts are enabled (the nIEN bit is set to 0 in the ATA control register), the state machine performs the following actions after receiving the response:

- Does not drive the P-bit; it waits for CCS, decodes and goes back to idle state, and then drives the P-bit.
- If the host wants to send the CCSD command and if eight clock cycles are expired after the response, it sends the CCSD pattern on the command pin.

Load Command Parameters

Commands or responses are loaded in the command path in the following situations:

- New command from BIU—When the BIU sends a new command to the CIU, the start_cmd bit is set to 1 in the cmd register.
- Internally-generated send_auto_stop—When the data path ends, the SD/SDIO STOP command request is loaded.
- Interrupt request (IRQ) response with relative card address (RCA) 0x000—When the command path is waiting for an IRQ response from the MMC and a “send irq response” request is signaled by the BIU, the send IRQ request bit (send_irq_response) is set to 1 in the ctrl register.


Loading a new command from the BIU in the command path depends on the following cmd register bit settings:

- update_clock_registers_only—If this bit is set to 1 in the cmd register, the command path updates only the clkena, clkdiv, and clksrc registers. If this bit is set to 0, the command path loads the cmd, cmdarg, and tmout registers. It then processes the new command, which is sent to the card.
- wait_prvdata_complete—If this bit is set to 1, the command path loads the new command under one of the following conditions:
 - Immediately, if the data path is free (that is, there is no data transfer in progress), or if an open-ended data transfer is in progress (bytcnt = 0).
 - After completion of the current data transfer, if a predefined data transfer is in progress.

Send Command and Receive Response

After a new command is loaded in the command path (the `update_clock_registers_only` bit in the `cmd` register is set to 0), the command path state machine sends out a command on the card bus. Figure 11-6 illustrates the command path state machine.

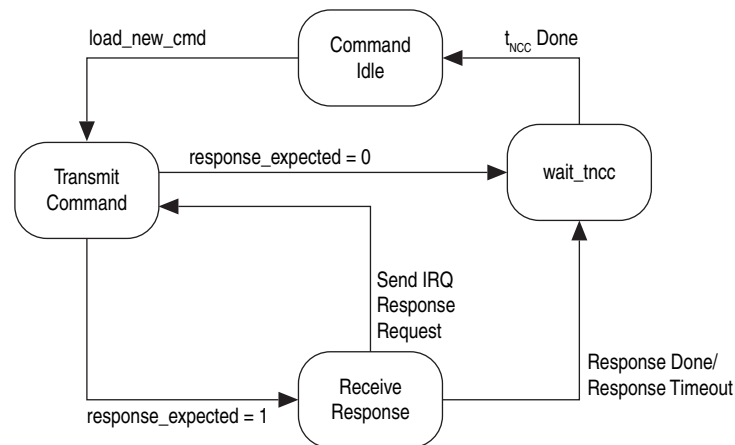Figure 11-6. Command Path State Machine



The command path state machine performs the following functions, according to `cmd` register bit values:

1. `send_initialization`—Initialization sequence of 80 clock cycles is sent before sending the command.
2. `response_expected`—A response is expected for the command. After the command is sent out, the command path state machine receives a 48-bit or 136-bit response and sends it to the BIU. If the start bit of the card response is not received within the number of clock cycles (as set up in the `tmout` register), the `rto` bit and command done (CD) bit are set to 1 in the `rintsts` register, to signal to the BIU. If the response-expected bit is set to 0, the command path sends out a command and signals a response done to the BIU, which causes the `cmd` bit to be set to 1 in the `rintsts` register.
3. `response_length`—If this bit is set to 1, a 136-bit long response is received; if it is set to 0, a 48-bit short response is received.
4. `check_response_crc`—If this bit is set to 1, the command path compares CRC-7 received in the response with the internally-generated CRC-7. If the two do not match, the response CRC error is signaled to the BIU, that is, the `rcrc` bit is set to 1 in the `rintsts` register.

Send Response to BIU

If the `response_expected` bit is set to 1 in the `cmd` register, the received response is sent to the BIU. Response register 0 (`resp0`) is updated for a short response, and the response register 3 (`resp3`), response register 2 (`resp2`), response register 1 (`resp1`), and `resp0` registers are updated on a long response, after which the `cmd` bit is set to 1 in the `rintsts` register. If the response is for an `AUTO_STOP` command sent by the CIU, the response is written to the `resp1` register, after which the auto command done bit (`acd`) is set to 1 in the `rintsts` register.

A correct card response contains the fields listed in Table 11-9. The command path verifies the contents of the card response.

Table 11-9. Card Response Fields

Field	Contents
Response transmission bit	0
Command index	Command index of the sent command
End bit	1

The command index is not checked for a 136-bit response or if the `check_response_crc` bit in the `cmd` register is set to 0. For a 136-bit response and reserved CRC 48-bit responses, the command index is reserved, that is, 0b111111.

For more information about response values, refer to *Physical Layer Simplified Specification, Version 3.01* as described in “References” on page 11-79.


Driving P-bit on CMD Line

The command path drives a one-cycle pull-up bit (P-bit) to 1 on the CMD line between two commands if a response is not expected. If a response is expected, the P-bit is driven after the response is received and before the start of the next command. While accessing a CE-ATA card device, for commands that expect a CCS, the P-bit is driven after the response only if the interrupts are disabled in the CE-ATA card (the `nIEN` bit is set to 1 in the ATA control register), that is, the CCS expected bit (`ccs_expected`) in the `cmd` register is set to 0. If the command expects the CCS, the P-bit is driven only after receiving the CCS.

Polling the CCS

CE-ATA card devices generate the CCS to notify the host controller of the normal ATA command completion or ATA command termination. After receiving the response from the card, the command path state machine performs the functions illustrated in Figure 11-7 according to `cmd` register bit values.

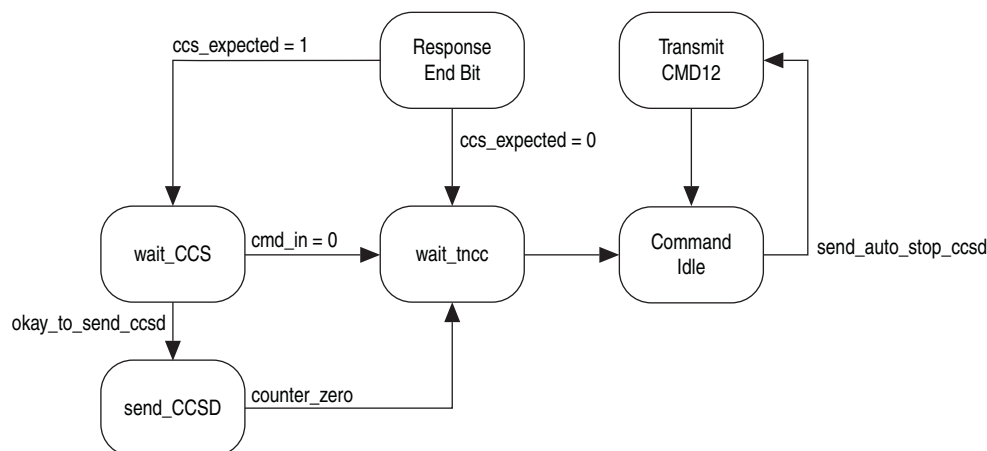Figure 11-7. CE-ATA Command Path State Machine



The following describe some of the details in [Figure 11-7](#):

1. Response end bit state—The state machine receives the end bit of the response from the card device. If the `ccs_expected` bit of the `cmd` register is set to 1, the state machine enters the wait CCS state.
2. Wait CCS—The state machine waits for the CCS from the CE-ATA card device. While waiting for the CCS, the following events can happen:
 - a. Software sets the send CCSD bit (`send_ccsd`) in the `ctrl` register, indicating not to wait for CCS and to send the CCSD pattern on the command line.
 - b. Receive the CCS on the CMD line.
3. Send CCSD command—Sends the CCSD pattern (0b00001) on the CMD line.

CCS Detection and Interrupt to Host Processor

If the `ccs_expected` bit in the `cmd` register is set to 1, the CCS from the CE-ATA card device is indicated by setting the data transfer over bit (`dto`) in the `rintsts` register. The controller generates a DTO interrupt if this interrupt is not masked.

For the `RW_MULTIPLE_BLOCK` commands, if the CE-ATA card device interrupts are disabled (the `nIEN` bit is set to 1 in the ATA control register)—that is, the `ccs_expected` bit is set to 0 in the `cmd` register—there are no CCSs from the card. When the data transfer is over—that is, when the requested number of bytes are transferred—the `dto` bit in the `rintsts` register is set to 1.

CCS Timeout

If the command expects a CCS from the card device (the `ccs_expected` bit is set to 1 in the `cmd` register), the command state machine waits for the CCS and remains in the wait CCS state. If the CE-ATA card fails to send out the CCS, the host software must implement a timeout mechanism to free the command and data path. The controller does not implement a hardware timer; it is the responsibility of the host software to maintain a software timer.

In the event of a CCS timeout, the host must issue a CCSD command by setting the `send_ccsd` bit in the `ctrl` register. The controller command path state machine sends the CCSD command to the CE-ATA card device and exits to an idle state. After sending the CCSD command, the host must also send an SD/SDIO `STOP_TRANSMISSION` command to the CE-ATA card to abort the outstanding ATA command.

Send CCSD Command

If the `send_ccsd` bit in the `ctrl` register is set to 1, the controller sends a CCSD pattern on the CMD line. The host can send the CCSD command while waiting for the CCS or after a CCS timeout happens.

After sending the CCSD pattern, the controller sets the `cmd` bit in the `rintsts` register and also generates an interrupt to the host if the Command Done interrupt is not masked.



Within the CIU block, if the `send_ccsd` bit in the `ctrl` register is set to 1 on the same clock cycle as CCS is sampled, the CIU block does not send a CCSD pattern on the CMD line. In this case, the `dto` and `cmd` bits in the `rintsts` register are set to 1.



Due to asynchronous boundaries, the CCS might have already happened and the `send_ccsd` bit is set to 1. In this case, the CCS command does not go to the CE-ATA card device and the `send_ccsd` bit is not set to 0. The host must reset the `send_ccsd` bit to 0 before the next command is issued.

If the send auto stop CCS (send_auto_stop_ccsd) bit in the `ctrl` register is set to 1, the controller sends an internally generated STOP_TRANSMISSION command (CMD12) after sending the CCS pattern. The controller sets the `acd` bit in the `rintsts` register.

I/O transmission delay (N_{ACIO} Timeout)

The host software maintains the timeout mechanism for handling the I/O transmission delay (N_{ACIO} cycles) time-outs while reading from the CE-ATA card device. The controller neither maintains any timeout mechanism nor indicates that N_{ACIO} cycles are elapsed while waiting for the start bit of a data token. The I/O transmission delay is applicable for read transfers using the `RW_REG` and `RW_BLK` commands; the `RW_REG` and `RW_BLK` commands used in this document refer to the `RW_MULTIPLE_REGISTER` and `RW_MULTIPLE_BLOCK` MMC commands defined by the CE-ATA specification.



After the N_{ACIO} timeout, the application must abort the command by sending the CCS and STOP commands, or the STOP command. The Data Read Timeout (DRTO) interrupt might be set to 1 while a STOP_TRANSMISSION command is transmitted out of the controller, in which case the data read timeout boot data start bit (`bds`) and the `dto` bit in the `rintsts` register are set to 1.

Data Path


The data path block reads the data FIFO buffer and transmits data on the card bus during a write data transfer, or receives data and writes it to the FIFO buffer during a read data transfer. The data path loads new data parameters—data expected, read/write data transfer, stream/block transfer, block size, byte count, card type, timeout registers—whenever a data transfer command is not in progress. If the data transfer expected bit (`data_expected`) in the `cmd` register is set to 1, the new command is a data transfer command and the data path starts one of the following actions:

- Transmits data if the read/write bit = 1
- Receives data if read/write bit = 0

Data Transmit

The data transmit state machine, illustrated in Figure 11–8, starts data transmission two clock cycles after a response for the data write command is received. This occurs even if the command path detects a response error or response CRC error. If a response is not received from the card because of a response timeout, data is not transmitted. Depending upon the value of the transfer mode bit (`transfer_mode`) in the `cmd` register, the data transmit state machine puts data on the card data bus in a stream or in blocks.

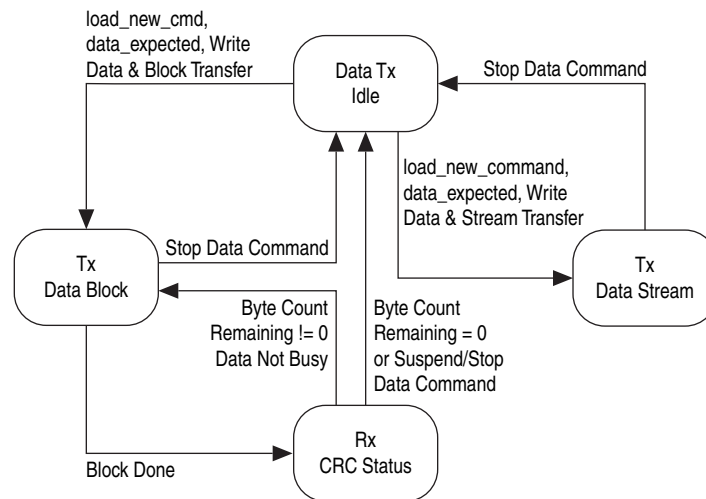Figure 11–8. Data Transmit State Machine



Stream Data Transmit

If the `transfer_mode` bit in the `cmd` register is set to 1, the transfer is a stream-write data transfer. The data path reads data from the FIFO buffer from the BIU and transmits in a stream to the card data bus. If the FIFO buffer becomes empty, the card clock is stopped and restarted once data is available in the FIFO buffer.

If the `bytcnt` register is reset to 0, the transfer is an open-ended stream-write data transfer. During this data transfer, the data path continuously transmits data in a stream until the host software issues an SD/SDIO STOP command. A stream data transfer is terminated when the end bit of the STOP command and end bit of the data match over two clock cycles.

If the `bytcnt` register is written with a nonzero value and the `send_auto_stop` bit in the `cmd` register is set to 1, the STOP command is internally generated and loaded in the command path when the end bit of the STOP command occurs after the last byte of the stream write transfer matches. This data transfer can also terminate if the host issues a STOP command before all the data bytes are transferred to the card bus.

Single Block Data

If the `transfer_mode` bit in the `cmd` register is set to 0 and the `bytcnt` register value is equal to the value of the `block_size` register, a single-block write-data transfer occurs. The data transmit state machine sends data in a single block, where the number of bytes equals the block size, including the internally-generated 16-term CRC (CRC-16).

If the `ctype` register is set for a 1-bit, 4-bit, or 8-bit data transfer, the data is transmitted on 1, 4, or 8 data lines, respectively, and CRC-16 is separately generated and transmitted for 1, 4, or 8 data lines, respectively.

After a single data block is transmitted, the data transmit state machine receives the CRC status from the card and signals a data transfer to the BIU. This happens when the `dto` bit in the `rintsts` register is set to 1.

If a negative CRC status is received from the card, the data path signals a data CRC error to the BIU by setting the `dcrc` bit in the `rintsts` register.

Additionally, if the start bit of the CRC status is not received by two clock cycles after the end of the data block, a CRC status start-bit error (SBE) is signaled to the BIU by setting the `sbe` bit in the `rintsts` register.

Multiple Block Data

A multiple-block write-data transfer occurs if the `transfer_mode` bit in the `cmd` register is set to 0 and the value in the `bytcnt` register is not equal to the value of the `block_size` register. The data transmit state machine sends data in blocks, where the number of bytes in a block equals the block size, including the internally-generated CRC-16.

If the `ctype` register is set to 1-bit, 4-bit, or 8-bit data transfer, the data is transmitted on 1, 4, or 8 data lines, respectively, and CRC-16 is separately generated and transmitted on 1, 4, or 8 data lines, respectively.

After one data block is transmitted, the data transmit state machine receives the CRC status from the card. If the remaining byte count becomes 0, the data path signals to the BIU that the data transfer is done. This happens when the `dto` bit in the `rintsts` register is set to 1.

If the remaining data bytes are greater than zero, the data path state machine starts to transmit another data block.

If a negative CRC status is received from the card, the data path signals a data CRC error to the BIU by setting the `dcrc` bit in the `rintsts` register, and continues further data transmission until all the bytes are transmitted.

If the CRC status start bit is not received by two clock cycles after the end of a data block, a CRC status SBE is signaled to the BIU by setting the `ebe` bit in the `rintsts` register and further data transfer is terminated.

If the `send_auto_stop` bit is set to 1 in the `cmd` register, the SD/SDIO STOP command is internally generated during the transfer of the last data block, where no extra bytes are transferred to the card. The end bit of the STOP command might not exactly match the end bit of the CRC status in the last data block.

If the block size is less than 4, 16, or 32 for card data widths of 1 bit, 4 bits, or 8 bits, respectively, the data transmit state machine terminates the data transfer when all the data is transferred, at which time the internally-generated STOP command is loaded in the command path.


If the `bytcnt` is zero (the block size must be greater than zero) the transfer is an open-ended block transfer. The data transmit state machine for this type of data transfer continues the block-write data transfer until the host software issues an SD/SDIO STOP or STOP_TRANSMISSION (CMD12) command.

Data Receive

The data-receive state machine, illustrated in Figure 11-9, receives data two clock cycles after the end bit of a data read command, even if the command path detects a response error or response CRC error. If a response is not received from the card because a response timeout occurs, the BIU does not receive a signal that the data transfer is complete. This happens if the command sent by the controller is an illegal operation for the card, which keeps the card from starting a read data transfer.

If data is not received before the data timeout, the data path signals a data timeout to the BIU and an end to the data transfer done. Based on the value of the `transfer_mode` bit in the `cmd` register, the data-receive state machine gets data from the card data bus in a stream or block(s).

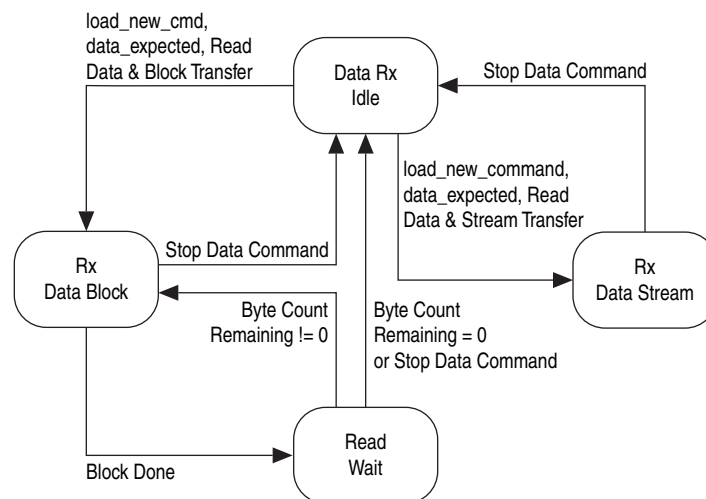Figure 11-9. Data Receive State Machine



Stream Data Read

A stream-read data transfer occurs if the `transfer_mode` bit in the `cmd` register is set to 1, at which time the data path receives data from the card and writes it to the FIFO buffer. If the FIFO buffer becomes full, the card clock stops and restarts once the FIFO buffer is no longer full.

An open-ended stream-read data transfer occurs if the `bytcnt` register is set to 0. During this type of data transfer, the data path continuously receives data in a stream until the host software issues an SD/SDIO STOP command. A stream data transfer terminates two clock cycles after the end bit of the STOP command.

If the `bytcnt` register contains a nonzero value and the `send_auto_stop` bit in the `cmd` register is set to 1, a STOP command is internally generated and loaded into the command path, where the end bit of the STOP command occurs after the last byte of the stream data transfer is received. This data transfer can terminate if the host issues an SD/SDIO STOP or STOP_TRANSMISSION (CMD12) command before all the data bytes are received from the card.

Single-block Data Read

If the `ctype` register is set to a 1-bit, 4-bit, or 8-bit data transfer, data is received from 1, 4, or 8 data lines, respectively, and CRC-16 is separately generated and checked for 1, 4, or 8 data lines, respectively. If there is a CRC-16 mismatch, the data path signals a data CRC error to the BIU. If the received end bit is not 1, the BIU receives an End-bit Error (EBE).

Multiple-block Data Read

If the `transfer_mode` bit in the `cmd` register is set to 0 and the value of the `bytcnt` register is not equal to the value of the `block_size` register, the transfer is a multiple-block read-data transfer. The data-receive state machine receives data in blocks, where the number of bytes in a block is equal to the block size, including the internally-generated CRC-16.

If the `ctype` register is set to a 1-bit, 4-bit, or 8-bit data transfer, data is received from 1, 4, or 8 data lines, respectively, and CRC-16 is separately generated and checked for 1, 4, or 8 data lines, respectively. After a data block is received, if the remaining byte count becomes zero, the data path signals a data transfer to the BIU.

If the remaining data bytes are greater than zero, the data path state machine causes another data block to be received. If CRC-16 of a received data block does not match the internally-generated CRC-16, a data CRC error to the BIU and data reception continue further data transmission until all bytes are transmitted. Additionally, if the end of a received data block is not 1, data on the data path signals terminate the bit error to the CIU and the data-receive state machine terminates data reception, waits for data timeout, and signals to the BIU that the data transfer is complete.

If the `send_auto_stop` bit in the `cmd` register is set to 1, the SD/SDIO STOP command is internally generated when the last data block is transferred, where no extra bytes are transferred from the card. The end bit of the STOP command might not exactly match the end bit of the last data block.

If the requested block size for data transfers to cards is less than 4, 16, or 32 bytes for 1-bit, 4-bit, or 8-bit data transfer modes, respectively, the data-transmit state machine terminates the data transfer when all data is transferred, at which point the internally-generated STOP command is loaded in the command path. Data received from the card after that are then ignored by the data path.

If the `bytcnt` register is 0 (the block size must be greater than zero), the transfer is an open-ended block transfer. For this type of data transfer, the data-receive state machine continues the block-read data transfer until the host software issues an SD/SDIO STOP or STOP_TRANSMISSION (CMD12) command.

Auto Stop

The controller internally generates an SD/SDIO STOP command and is loaded in the command path when the `send_auto_stop` bit in the `cmd` register is set to 1. The `AUTO_STOP` command helps to send an exact number of data bytes using a stream read or write for the MMC, and a multiple-block read or write for SD memory transfer for SD cards. The software must set the `send_auto_stop` bit according to details listed in [Table 11-10](#).

Table 11-10. Auto-Stop Generation

ird type	Transfer type	Byte Count	send_auto_stop bit set	Comments
VC	Stream read	0	No	Open-ended stream
VC	Stream read	> 0	Yes	Auto-stop after all bytes transfer
VC	Stream write	0	No	Open-ended stream
VC	Stream write	> 0	Yes	Auto-stop after all bytes transfer
VC	Single-block read	> 0	No	Byte count = 0 is illegal
VC	Single-block write	> 0	No	Byte count = 0 is illegal
VC	Multiple-block read	0	No	Open-ended multiple block
VC	Multiple-block read	> 0	Yes **	Pre-defined multiple block
VC	Multiple-block write	0	No	Open-ended multiple block
VC	Multiple-block write	> 0	Yes **	Pre-defined multiple block
MEM	Single-block read	> 0	No	Byte count = 0 is illegal
MEM	Single-block write	> 0	No	Byte count = 0 illegal
MEM	Multiple-block read	0	No	Open-ended multiple block
MEM	Multiple-block read	> 0	Yes	Auto-stop after all bytes transfer
MEM	Multiple-block write	0	No	Open-ended multiple block
MEM	Multiple-block write	> 0	Yes	Auto-stop after all bytes transfer
SDIO	Single-block read	> 0	No	Byte count = 0 is illegal
SDIO	Single-block write	> 0	No	Byte count = 0 illegal
SDIO	Multiple-block read	0	No	Open-ended multiple block
SDIO	Multiple-block read	> 0	No	Pre-defined multiple block
SDIO	Multiple-block write	0	No	Open-ended multiple block
SDIO	Multiple-block write	> 0	No	Per-defined multiple block

** The condition under which the transfer mode is set to block transfer and *byte_count* is equal to block size is treated as a single-block data transfer command for both MMC and SD cards. If *byte_count* = *n* * *block_size* (*n* = 2, 3, ...), the condition is treated as a predefined multiple-block data transfer command. In the case of an MMC card, the host software can perform a predefined data transfer in two ways: 1) Issue the CMD23 command before issuing CMD18/CMD25 commands to the card – in this case, issue CMD18/CMD25 commands without setting the *send_auto_stop* bit. 2) Issue CMD18/CMD25 commands without issuing CMD23 command to the card, with the *send_auto_stop* bit set. In this case, the multiple-block data transfer is terminated by an internally-generated auto-stop command after the programmed byte count.

The following list describes conditions for the AUTO_STOP command:

- Stream-read for MMC with byte count greater than zero—The controller generates an internal STOP command and loads it into the command path so that the end bit of the STOP command is sent when the last byte of data is read from the card and no extra data byte is received. If the byte count is less than six (48 bits), a few extra data bytes are received from the card before the end bit of the STOP command is sent.
- Stream-write for MMC with byte count greater than zero—The controller generates an internal STOP command and loads it into the command path so that the end bit of the STOP command is sent when the last byte of data is transmitted on the card bus and no extra data byte is transmitted. If the byte count is less than six (48 bits), the data path transmits the data last to meet these condition.
- Multiple-block read memory for SD card with byte count greater than zero—If the block size is less than four (single-bit data bus), 16 (4-bit data bus), or 32 (8-bit data bus), the AUTO_STOP command is loaded in the command path after all the bytes are read. Otherwise, the STOP command is loaded in the command path so that the end bit of the STOP command is sent after the last data block is received.
- Multiple-block write memory for SD card with byte count greater than zero—If the block size is less than three (single-bit data bus), 12 (4-bit data bus), or 24 (8-bit data bus), the AUTO_STOP command is loaded in the command path after all data blocks are transmitted. Otherwise, the STOP command is loaded in the command path so that the end bit of the STOP command is sent after the end bit of the CRC status is received.
- Precaution for host software during auto-stop—When an AUTO_STOP command is issued, the host software must not issue a new command to the controller until the AUTO_STOP command is sent by the controller and the data transfer is complete. If the host issues a new command during a data transfer with the AUTO_STOP command in progress, an AUTO_STOP command might be sent after the new command is sent and its response is received. This can delay sending the STOP command, which transfers extra data bytes. For a stream write, extra data bytes are erroneous data that can corrupt the card data. If the host wants to terminate the data transfer before the data transfer is complete, it can issue an SD/SDIO STOP or STOP_TRANSMISSION (CMD12) command, in which case the controller does not generate an AUTO_STOP command.

Non-Data Transfer Commands that Use Data Path

Some SD/SDIO non-data transfer commands (commands other than read and write commands) also use the data path. Table 11-11 lists the commands and their register setup requirements.

Table 11-11. Non-Data Transfer Commands and Requirements

	PROGRAM_CSD (CMD27)	SEND_WRITE_PROT (CMD30)	LOCK_UNLOCK (CMD42)	SD_STATUS (ACMD13)	SEND_NUM_WR_BLOCKS (ACMD22)	SEND_SCR (ACMD51)
cmd Register Setup						
Cmd_index	0x1B=27	0x1E=30	0x2A=42	0x0D=13	0x16=22	0x33=51
Response_expect	1	1	1	1	1	1
Response_length	0	0	0	0	0	0
Check_response_crc	1	1	1	1	1	1
Data_expected	1	1	1	1	1	1
Read/write	1	0	1	0	0	0
Transfer_mode	0	0	0	0	0	0
Send_auto_stop	0	0	0	0	0	0
Wait_prevdata_complete	0	0	0	0	0	0
Stop_abort_cmd	0	0	0	0	0	0
cmdarg Register Setup						
	Stuff bits	32-bit write protect data address	Stuff bits	Stuff bits	Stuff bits	Stuff bits
blksiz Register Setup						
	16	4	Num_bytes ⁽¹⁾	64	4	8
bytcnt Register Setup						
	16	4	Num_bytes ⁽¹⁾	64	4	8

Note to Table 11-11:

(1) Num_bytes = Number of bytes specified as per the lock card data structure. Refer to the SD specification and the MMC specification.

Table 11-12.

	CMD27	CMD30	CMD42	ACMD13	ACMD22	ACMD51
Command register programming						
Cmd_index	6'h1B	6'h1E	6'h2A	6'h0D	6'h16	6'h33
Response_expect	1	1	1	1	1	1
Response_length	0	0	0	0	0	0
Check_response_crc	1	1	1	1	1	1
Data_expected	1	1	1	1	1	1
Read/write	1	0	1	0	0	0
Transfer_mode	0	0	0	0	0	0
Send_auto_stop	0	0	0	0	0	0
Wait_prevdata_complete	0	0	0	0	0	0
Stop_abort_cmd	0	0	0	0	0	0
Command Argument register programming						
	Stuff bits	32-bit write protect data address	Stuff bits	Stuff bits	Stuff bits	Stuff bits
Block Size register programming						
	16	4	Num_bytes*	64	4	8
Byte Count register programming						
	16	4	Num_bytes*	64	4	8
*: Num_bytes = No. of bytes specified as per the lock card data structure (Refer to the SD specification and the MMC specification).						

Clock Control Block

The clock control block provides different clock frequencies required for SD/MMC/CE-ATA cards. The clock control block has one clock divider, which is used to generate different card clock frequencies.

The clock frequency of a card depends on the following clock ctrl register settings:

- **clkdiv register**—Internal clock dividers are used to generate different clock frequencies required for the cards. The division factor for the clock divider can be set by writing to the clkdiv register. The clock divider is an 8-bit value that provides a clock division factor from 1 to 510; a value of 0 represents a clock-divider bypass, a value of 1 represents a divide by 2, a value of 2 represents a divide by 4, and so on.
- **clksrc register**—Set this register to 0 as clock is divided by clock divider 0.

- **clkena register**—The `clk_out` card output clock can be enabled or disabled under the following conditions:
 - `clk_out` is enabled when the `clk_enable` bit in the `clkena` register is set to 1 and disabled when set to 0.
 - Low-power mode can be enabled by setting the `clk_low_power` bit of the `clkena` register to 1. If low-power mode is enabled to save card power, the `clk_out` signal is disabled when the card is idle for at least eight card clock cycles. Low-power mode is enabled when a new command is loaded and the command path goes to a non-idle state.

Under the following conditions, the card clock is stopped or disabled:

- Clock can be disabled by writing to the `clkena` register.
- When low-power mode is selected and the card is idle for at least eight clock cycles.
- FIFO buffer is full, data path cannot accept more data from the card, and data transfer is incomplete—to avoid FIFO buffer overflow.
- FIFO buffer is empty, data path cannot transmit more data to the card, and data transfer is incomplete—to avoid FIFO buffer underflow.



The card clock must be disabled through the `clkena` register before the host software changes the values of the `clkdiv` and `clksrc` registers.

Error Detection

Errors can occur during card operations within the CIU in the following situations.

Response

- Response timeout—did not receive the response expected with response start bit within the specified number of clock cycles in the timeout register.
- Response CRC error—response is expected and check response CRC requested; response CRC-7 does not match with the internally-generated CRC-7.
- Response error—response transmission bit is not 0, command index does not match with the command index of the send command, or response end bit is not 1.

Data Transmit

- No CRC status—during a write data transfer, if the CRC status start bit is not received for two clock cycles after the end bit of the data block is sent out, the data path performs the following actions:
 - Signals no CRC status error to the BIU
 - Terminates further data transfer
 - Signals data transfer done to the BIU

- Negative CRC—if the CRC status received after the write data block is negative (that is, not 0b010), the data path signals a data CRC error to the BIU and continues with the data transfer.
- Data starvation due to empty FIFO buffer—if the FIFO buffer becomes empty during a write data transmission, or if the card clock stopped and the FIFO buffer remains empty for a data-timeout number of clock cycles, the data path signals a data-starvation error to the BIU and the data path continues to wait for data in the FIFO buffer.

Data Receive

- Data timeout—during a read-data transfer, if the data start bit is not received before the number of clock cycles specified in the timeout register, the data path does the following action:
 - Signals a data-timeout error to the BIU
 - Terminates further data transfer
 - Signals data transfer done to BIU
- Data SBE—during a 4-bit or 8-bit read-data transfer, if the all-bit data line does not have a start bit, the data path signals a data SBE to the BIU and waits for a data timeout, after which it signals that the data transfer is done.
- Data CRC error—during a read-data-block transfer, if the CRC-16 received does not match with the internally generated CRC-16, the data path signals a data CRC error to the BIU and continues with the data transfer.
- Data EBE—during a read-data transfer, if the end bit of the received data is not 1, the data path signals an EBE to the BIU, terminates further data transfer, and signals to the BIU that the data transfer is done.
- Data starvation due to FIFO buffer full—during a read data transmission and when the FIFO buffer becomes full, the card clock stops. If the FIFO buffer remains full for a data-timeout number of clock cycles, the data path signals a data starvation error to the BIU, by setting the data starvation host timeout bit (hto) in rintsts register to 1, and the data path continues to wait for the FIFO buffer to empty.

Clocks

The SD/MMC controller clocks are listed in [Table 11-13](#).


Table 11-13. SD/MMC Controller Clocks (Part 1 of 2)

Clock Name	Direction	Description
sdmmc_clk	In	Clock for SD/MMC controller CIU
l4_mp_clk	In	Clock for SD/MMC controller BIU
sdmmc_cclk_out	Out	Generated output clock for card
sdmmc_sample_clk	Internal	Phase-shifted clock of sdmmc_clk used to sample the command and data from the card

Table 11-13. SD/MMC Controller Clocks (Part 2 of 2)

Clock Name	Direction	Description
sdmmc_drv_clk	Internal	Phase-shifted clock of sdmmc_clk for controller to drive command and data to the card to meet hold time requirements
sdmmc_clk_divided	Internal	Divide-by-four clock of sdmmc_clk

Figure 11-10 shows the connection of various clocks to the controller.

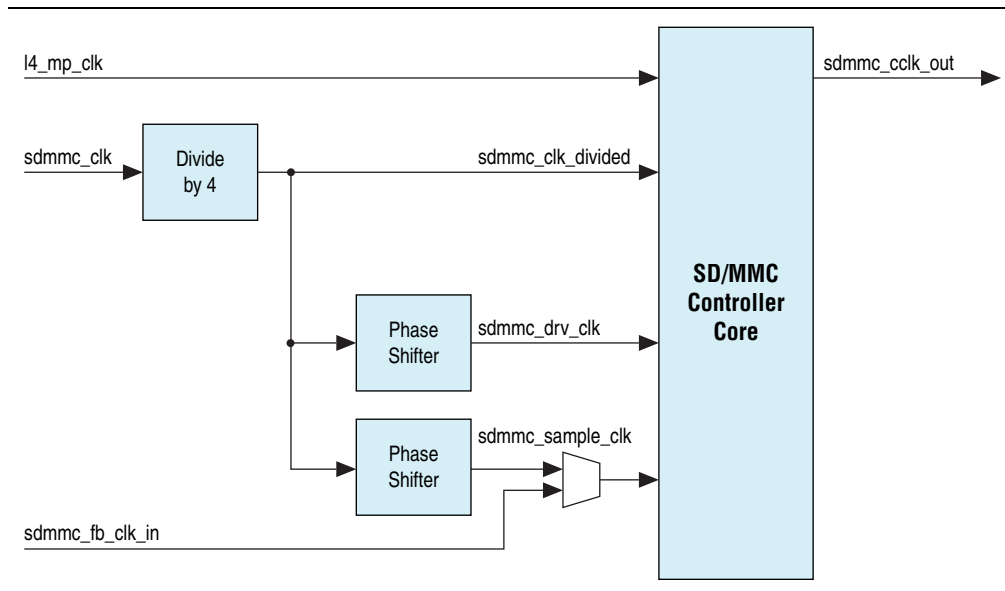Figure 11-10. SD/MMC Controller Clock Connections

The sdmmc_clk clock from the clock manager is divided by four (sdmmc_clk_divided clock) before passed to the phase shifters and controller. The phase shifters are used to generate the sdmmc_drv_clk and sdmmc_sample_clk clocks. These phase shifters provide up to eight phases shift which include 0, 45, 90, 135, 180, 225, 270, and 315 degrees. The sdmmc_sample_clk clock can be driven by the output from the phase shifter. The selections of phase shift degree and sdmmc_sample_clk source are done in the system manager. For information about setting the phase shift and selecting the source of the sdmmc_sample_clk clock, refer to “Clock Setup” on page 11-40.

The controller generates the sdmmc_clk_out clock, which is driven to the card. For more information about the generation of the sdmmc_clk_out clock, refer to “Clock Control Block” on page 11-31.

Resets

The SD/MMC controller has one reset signal. The reset manager drives this signal to the SD/MMC controller on a cold or warm reset.



For more information, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Interface Signals

Table 11-14 lists I/O pin use of the SD/MMC controller interface signals.

Table 11-14. SD/MMC Controller Interface I/O Pins

Signal	Width	Direction	Description
sdmmc_cclk_out	1	Out	Clock from controller to the card
sdmmc_cmd	1	In/Out	Card command
sdmmc_pwen	1	Out	External device power enable
sdmmc_data	8	In/Out	Card data


SD/MMC Controller Programming Model

Initialization

This section describes how to initialize the SD/MMC controller.

Figure 11-11 shows the initialization flow of the SD/MMC controller. After the power and clock to the controller are stable, the controller active-low reset is asserted. The reset sequence initializes the registers, FIFO buffer pointers, DMA interface controls, and state machines in the controller.

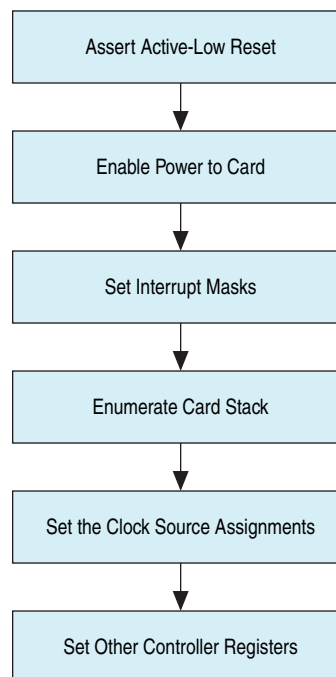Figure 11-11. SD/MMC Controller Initialization Sequence



Software must perform the following steps after the power-on-reset:

1. Before enabling power to the card, confirm that the voltage setting to the voltage regulator is correct.
2. Enable power to the card by setting the power enable bit (`power_enable`) in the power enable register (`pwren`) to 1. Wait for the power ramp-up time before proceeding to the next step.
3. Set the interrupt masks by resetting the appropriate bits to 0 in the `intmask` register.
4. Set the `int_enable` bit of the `ctrl` register to 1.



Altera recommends that you write 0xFFFFFFFF to the `rintsts` register to clear any pending interrupts before setting the `int_enable` bit to 1.

5. Discover the card stack according to the card type. For discovery, you must restrict the clock frequency to 400 kHz in accordance with SD/MMC/CE-ATA standards. For more information, refer to [“Enumerated Card Stack” on page 11-37](#).
6. Set the clock source assignments. Set the card frequency using the `clkdiv` and `clksrc` registers of the controller. For more information, refer to [“Clock Setup” on page 11-40](#).
7. The following common registers and fields can be set during initialization process:
 - The response timeout field (`response_timeout`) of the `tmout` register. A typical value is 0x64.
 - The data timeout field (`data_timeout`) of the `tmout` register, highest of the following:
 - $10 * N_{AC}$
 - $10 * ((TAAC * F_{OP}) + (100 * NSAC))$
 where:
 N_{AC} = card device total access time
 $TAAC$ = Time-dependent factor of the data access time

F_{OP} = The card clock frequency used for the card operation

NSAC = Worst-case clock rate-dependent factor of the data access time

- Host FIFO buffer latency

On read: Time elapsed before host starts reading from a full FIFO buffer

On write: Time elapsed before host starts writing to an empty FIFO buffer

- Debounce counter register (debncn). A typical debounce value is 25 ms.
- TX watermark field (tx_wmark) of the FIFO threshold watermark register (fifoth). Typically, the threshold value is set to 512, which is half the FIFO buffer depth.
- RX watermark field (rx_wmark) of the fifoth register. Typically, the threshold value is set to 511.

These registers do not need to be changed with every SD/MMC/CE-ATA command. Set them to a typical value according to the SD/MMC/CE-ATA specifications.

Enumerated Card Stack

The card stack performs the following tasks:

- Discovers the connected card
- Sets the relative Card Address Register (RCA) in the connected card
- Reads the card specific information
- Stores the card specific information locally

The card connected to the controller can be an MMC, CE-ATA, SD or SDIO (including IO ONLY, MEM ONLY and COMBO) card. To identify the connected card type, the following discovery sequence is needed:

1. Reset the card width 1 or 4 bit (card_width2) and card width 8 bit (card_width1) fields in the ctype register to 0.
2. Identify the card type as SD, MMC, SDIO or SDIO-COMBO:
 - a. Send an SD/SDIO IO_SEND_OP_COND (CMD5) command with argument 0 to the card.
 - b. Read resp0 on the controller. The response to the IO_SEND_OP_COND command gives the voltage that the card supports.
 - c. Send the IO_SEND_OP_COND command, with the desired voltage window in the arguments. This command sets the voltage window and makes the card exit the initialization state.
 - d. Check bit 27 in resp0.
 - If bit 27 is 0, the SDIO card is IO ONLY. In this case, proceed to step 5.
 - If bit 27 is 1, the card type is SDIO COMBO. Continue with the following steps.

3. Only continue with this step if the SDIO card type is COMBO or there is no response received from the previous IO_SEND_OP_COND command. Otherwise, skip to step 5.
 - a. Send the SD/SDIO SEND_IF_COND (CMD8) command with the following arguments:
 - Bit[31:12] = 0x0 (reserved bits)
 - Bit[11:8] = 0x1 (supply voltage value)
 - Bit[7:0] = 0xAA (preferred check pattern by SD memory cards compliant with *SDIO Simplified Specification Version 2.00* and later.)
 -  Refer to *SDIO Simplified Specification Version 2.00* as described in "References" on page 11-79:
 - b. If a response is received to the previous SEND_IF_COND command, the card supports SD High-Capacity, compliant with *SD Specifications, Part 1, Physical Layer Simplified Specification Version 2.00*.
If no response is received, proceed to step e.
 - c. Send the SD_SEND_OP_COND (ACMD41) command with the following arguments:
 - Bit[31] = 0x0 (reserved bits)
 - Bit[30] = 0x1 (high capacity status)
 - Bit[29:25] = 0x0 (reserved bits)
 - Bit[24] = 0x1 (S18R --supports voltage switching for 1.8V)
 - Bit[23:0] = supported voltage range
 - d. If a response is received to the previous SD_SEND_OP_COND command, the card type is SDHC. Otherwise, the card is MMC or CE-ATA. In either case, skip the following steps and proceed to step 5.
 - e. If a response is not received to the initial SEND_IF_COND command, the card does not support High Capacity SD2.0. Next, issue the GO_IDLE_STATE command followed by the SD_SEND_OP_COND command with the following arguments:
 - Bit[31] = 0x0 (reserved bits)
 - Bit[30] = 0x0 (high capacity status)
 - Bit[29:24] = 0x0 (reserved bits)
 - Bit[23:0] = supported voltage range
 - f. If a response is received to the previous SD_SEND_OP_COND command, the card is SD type. Otherwise, the card is MMC or CE-ATA.



You must issue the SEND_IF_COND command prior to the first SD_SEND_OP_COND command, to initialize the High Capacity SD memory card. The card returns busy as a response to the SD_SEND_OP_COND command when any of the following conditions are true:

- The card executes its internal initialization process.
 - A SEND_IF_COND command is not issued before the SD_SEND_OP_COND command.
 - The ACMD41 command is issued. In the command argument, the Host Capacity Support (HCS) bit is set to 0, for a high capacity SD card.
4. Use the following sequence to determine whether the card is a CE-ATA 1.1, CE-ATA 1.0, or MMC device:
- a. Determine whether the card is a CE-ATA v1.1 card device by attempting to select ATA mode. Send the SD/SDIO SEND_IF_COND command, querying byte 504 (S_CMD_SET) of the EXT_CSD register block in the external card.
- If bit 4 is set to 1, the card device supports ATA mode. Send the SWITCH_FUNC (CMD6) command, setting the ATA bit (bit 4) of the EXT_CSD register slice 191 (CMD_SET) to 1. This command selects ATA mode and activates the ATA command set.

You can verify the currently selected mode by reading it back from byte 191 of the EXT_CSD register.

Skip to step 5.

- If the card device does not support ATA mode, it might be an MMC card or a CE-ATA v1.0 card. Continue to Step b.
- b. Determine whether the card is a CE-ATA 1.0 card device or an MMC card device by sending the RW_REG command. If a response is received and the response data contains the CE-ATA signature, the card is a CE-ATA 1.0 card device. Otherwise, the card is an MMC card device.
5. At this point, the software has determined the card type as SD/SDHC, SDIO or SDIO-COMBO. Now it must enumerate the card stack according to the type that has been discovered.

6. Set the card clock source frequency to the frequency of identification clock rate, 400 KHz. Use one of the following discovery command sequences:
 - For an SD card or an SDIO memory section, send the following SD/SDIO command sequence:
 - GO_IDLE_STATE
 - SEND_IF_COND
 - SD_SEND_OP_COND (ACMD41)
 - ALL_SEND_CID (CMD2)
 - SEND_RELATIVE_ADDR (CMD3)
 - For an SDIO card, send the following command sequence:
 - IO_SEND_OP_COND.
 - If the function count is valid, send the SEND_RELATIVE_ADDR command.
 - For an MMC, send the following command sequence:
 - GO_IDLE_STATE
 - SEND_OP_COND (CMD1)
 - ALL_SEND_CID
 - SEND_RELATIVE_ADDR
7. You can change the card clock frequency after discovery by writing a value to the `clkdiv` register that divides down the `sdmmc_clk` clock.
The following list shows typical clock frequencies for various types of cards:
 - SD memory card, 25 MHz
 - MMC card device, 12.5 MHz
 - Full speed SDIO, 25 MHz
 - Low speed SDIO, 400 kHz

Clock Setup

The following registers of the SD/MMC controller allow software to select the desired clock frequency for the card:

- `clksrc`
- `clkdiv`
- `clkena`

The controller loads these registers when it receives an update clocks command, as described in this section. To change the card clock frequency, perform the following steps:

1. Before disabling the clocks, ensure that the card is not busy with any previous data command. To do so, verify that the `data_busy` bit of the status register (`status`) is 0.
2. Reset the `cclk_enable` bit of the `clkena` register to 0, to disable the card clock generation.

3. Reset the `clksrc` register to 0.
4. Set the following bits in the `cmd` register to 1:
 - `update_clk_regs_only`—Specifies the update clocks command
 - `wait_prvdata_complete`—Ensures that clock parameters do not change until any ongoing data transfer is complete
 - `start_cmd`—Initiates the command
5. Wait until the `start_cmd` and `update_clk_regs_only` bits change to 0. There is no interrupt when the clock modification completes. The controller does not set the `command_done` bit in the `rintsts` register upon command completion. The controller might signal a hardware lock error if it already has another command in the queue. In this case, return to Step 4.

For information about hardware lock errors, refer to [“Interrupt and Error Handling” on page 11-66](#).

6. Reset the `sdmmc_clk_enable` bit to 0 in the `enable` register of the clock manager peripheral PLL group (`perpllgrp`).
7. In the control register (`ctrl`) of the SDMMC controller group (`sdmmcgrp`) in the system manager, set the drive clock phase shift select (`drvsel`) and sample clock phase shift select (`smp1sel`) bits to specify the required phase shift value.
8. Set the `sdmmc_clk_enable` bit in the `Enable` register of the clock manager `perpllgrp` group to 1.
9. Set the `clkdiv` register of the controller to the correct divider value for the required clock frequency.
10. Set the `cclk_enable` bit of the `clkena` register to 1, to enable the card clock generation.

You can also use the `clkena` register to enable low-power mode, which automatically stops the `sdmmc_cclk_out` clock when the card is idle for more than eight clock cycles.

Controller/DMA/FIFO Buffer Reset Usage

The following list shows the effect of reset on various parts in the SD/MMC controller:

- **Controller reset**—resets the controller by setting the `controller_reset` bit in the `ctrl` register to 1. Controller reset resets the CIU and state machines, and also resets the BIU-to-CIU interface. Because this reset bit is self-clearing, after issuing the reset, wait until this bit changes to 0.
- **FIFO buffer reset**—resets the FIFO buffer by setting the FIFO reset bit (`fifo_reset`) in the `ctrl` register to 1. FIFO buffer reset resets the FIFO buffer pointers and counters in the FIFO buffer. Because this reset bit is self-clearing, after issuing the reset, wait until this bit changes to 0.

- **DMA reset**—resets the internal DMA controller logic by setting the DMA reset bit (`dma_reset`) in the `ctrl` register to 1, which immediately terminates any DMA transfer in progress. Because this reset bit is self-clearing, after issuing the reset, wait until this bit changes to 0.



Ensure that the DMA is idle before performing a DMA reset. Otherwise, the L3 interconnect might be left in an indeterminate state.

Altera recommends setting the `controller_reset`, `fifo_reset`, and `dma_reset` bits in the `ctrl` register to 1 first, and then resetting the `rintsts` register to 0 using another write, to clear any resultant interrupt.

Enabling FIFO Buffer ECC

To protect the FIFO buffer data with ECC, you must enable the ECC feature before performing any operations with the SD/MMC controller. Perform the following steps to enable the FIFO buffer ECC feature:

1. Verify there are no commands committed to the controller.
2. Ensure that the FIFO buffer is initialized. Initialize the FIFO buffer by writing 0 to all 1024 FIFO buffer locations. A FIFO buffer write to any address from 0x200 to the maximum FIFO buffer size is valid.
3. Set the SDMMC RAM ECC single and double, correctable error interrupt status bits (`serrporta`, `derrporta`, `serrportb`, and `derrportb`) to 1 in the `sdmmc` register in the `eccgrp` group of the system manager, to clear any previously-detected ECC errors.
4. Reset the FIFO buffer by setting the `fifo_reset` bit to 1 in the `ctrl` register. This action resets pointers and counters in the FIFO buffer. This reset bit is self-clearing, so after issuing the reset, wait until the bit changes to 0.
5. Set the `en` bit in `sdmmc` register in `eccgrp` group of the system manager to 1, to enable ECC for the FIFO buffer in SD/MMC controller.

Non-Data Transfer Commands

To send any non-data transfer command, the software needs to write the `cmd` register and the `cmdarg` register with appropriate parameters. Using these two registers, the controller forms the command and sends it to the `CMD` pin. The controller reports errors in the command response through the error bits of the `rintsts` register.

When a response is received—either erroneous or valid—the controller sets the `command_done` bit in the `rintsts` register to 1. A short response is copied to `resp0`, while a long response is copied to all four response registers (`resp0`, `resp1`, `resp2`, and `resp3`). For long responses, bit 31 of `resp3` represents the MSB and bit 0 of `resp0` represents the LSB.

For basic and non-data transfer commands, perform the following steps:

1. Write the `cmdarg` register with the appropriate command argument parameter.
2. Write the `cmd` register with the settings in [Table 11-15 on page 11-44](#).

3. Wait for the controller to accept the command. The `start_cmd` bit changes to 0 when the command is accepted.

The following actions occur when the command is loaded into the controller:

- If no previous command is being processed, the controller accepts the command for execution and resets the `start_cmd` bit in the `cmd` register to 0. If a previous command is being processed, the controller loads the new command in the command buffer.
 - If the controller is unable to load the new command—that is, a command is already in progress, a second command is in the buffer, and a third command is attempted—the controller generates a hardware lock error.
4. Check if there is a hardware lock error.
 5. Wait for command execution to complete. After receiving either a response from a card or response timeout, the controller sets the `command_done` bit in the `rintsts` register to 1. Software can either poll for this bit or respond to a generated interrupt (if enabled).
 6. Check if the response timeout boot acknowledge received (`bar`), `rcrc`, or `re` bit is set to 1. Software can either respond to an interrupt raised by these errors or poll the `re`, `rcrc`, and `bar` bits of the `rintsts` register. If no response error is received, the response is valid. If required, software can copy the response from the response registers.



Software cannot modify clock parameters while a command is being executed.

Table 11-15. cmd Register Settings for Non-Data Transfer Command

Parameter	Value	Comment
Default		
start_cmd	1	This bit resets itself to 0 after the command is committed.
use_hold_reg	1 or 0	Choose the value based on the speed mode being used.
update_clk_regs_only	0	Indicates that the command is not a clock update command
data_expected	0	Indicates that the command is not a data command
card_number	1	For one card
cmd_index	Command Index	Set this parameter to the command number. For example, set to 8 for the SD/SDIO SEND_IF_COND (CMD8) command.
send_initialization	0 or 1	1 for card reset commands such as the SD/SDIO GO_IDLE_STATE command 0 otherwise
stop_abort_cmd	0 or 1	1 for a command to stop data transfer, such as the SD/SDIO STOP_TRANSMISSION command 0 otherwise
response_length	0 or 1	1 for R2 (long) response 0 for short response
response_expect	0 or 1	0 for commands with no response, such as SD/SDIO GO_IDLE_STATE, SET_DSR (CMD4), or GO_INACTIVE_STATE (CMD15). 1 otherwise
User-Selectable		
wait_prvdata_complete	1	Before sending a command on the command line, the host must wait for completion of any data command already in process. Altera recommends that you set this bit to 1, unless the current command is to query status or stop data transfer when transfer is in progress.
check_response_crc	1 or 0	1 if the response includes a valid CRC, and the software is required to crosscheck the response CRC bits. 0 otherwise

Data Transfer Commands

Data transfer commands transfer data between the memory card and the controller. To issue a data command, the controller requires a command argument, total data size, and block size. Data transferred to or from the memory card is buffered by the controller FIFO buffer.

Before issuing a data transfer command, software must confirm that the card is not busy and is in a transfer state, by performing the following steps:

1. Issue an SD/SDIO SEND_STATUS (CMD13) command. The controller sends the status of the card as the response to the command.
2. Check the card's busy status.

3. Wait until the card is not busy.
4. Check the card's transfer status. If the card is in the stand-by state, issue an SD/SDIO SELECT/DESELECT_CARD (CMD7) command to place it in the transfer state.



During CE-ATA RW_BLK write transfers, the MMC busy signal might be asserted after the last block. If the CE-ATA card device interrupt is disabled (the nIEN bit in the card device's ATA control register is set to 1), the dt0 bit in the rintsts register is set to 1 even though the card sends MMC BUSY. The host cannot issue the CMD60 command to check the ATA busy status after a CMD61 command. Instead, the host must perform one of the following actions:

- Issue the SEND_STATUS command and check the MMC busy status before issuing a new CMD60 command
- Issue the CMD39 command and check the ATA busy status before issuing a new CMD60 command

For the data transfer commands, software must set the ctype register to the bus width that is programmed in the card.

The controller generates an interrupt for different conditions during data transfer, which are reflected in the following rintsts register bits:

1. dt0—Data transfer is over or terminated. If there is a response timeout error, the controller does not attempt any data transfer and the Data Transfer Over bit is never set.
2. Transmit FIFO data request bit (txdr)—The FIFO buffer threshold for transmitting data is reached; software is expected to write data, if available, into the FIFO buffer.
3. Receive FIFO data request bit (rxdr)—The FIFO buffer threshold for receiving data is reached; software is expected to read data from the FIFO buffer.
4. hto—The FIFO buffer is empty during transmission or is full during reception. Unless software corrects this condition by writing data for empty condition, or reading data for full condition, the controller cannot continue with data transfer. The clock to the card is stopped.
5. bds—The card has not sent data within the timeout period.
6. dcrc—A CRC error occurred during data reception.
7. sbe—The start bit is not received during data reception.
8. ebe—The end bit is not received during data reception, or for a write operation. A CRC error is indicated by the card.

Conditions 6, 7, and 8 indicate that the received data might have errors. If there is a response timeout, no data transfer occurs.

Single-Block or Multiple-Block Read

To implement a single-block or multiple-block read, the software performs the following steps:

1. Write the data size in bytes to the `bytcnt` register. For a multi-block read, `bytcnt` must be a multiple of the block size.
2. Write the block size in bytes to the `blksiz` register. The controller expects data to return from the card in blocks of size `blksiz`.
3. If the read round trip delay, including the card delay, is greater than half of `sdmmc_clk_divided`, write to the card threshold control register (`cardthrcntl`) to ensure that the card clock does not stop in the middle of a block of data being transferred from the card to the host. For more information, refer to “[Card Read Threshold](#)” on page 11-64.



If the card read threshold enable bit (`cardrdthren`) is 0, the host system must ensure that the RX FIFO buffer does not become full during a read data transfer by ensuring that the RX FIFO buffer is read at a rate faster than that at which data is written into the FIFO buffer. Otherwise, an overflow might occur.

4. Write the `cmdarg` register with the beginning data address for the data read.
5. Write the `cmd` register with the parameters listed in [Table 11-16](#). For SD and MMC cards, use the SD/SDIO `READ_SINGLE_BLOCK` (CMD17) command for a single-block read and the `READ_MULTIPLE_BLOCK` (CMD18) command for a multiple-block read. For SDIO cards, use the `IO_RW_EXTENDED` (CMD53) command for both single-block and multiple-block transfers. After writing to the `cmd` register, the controller starts executing the command. When the command is sent to the bus, the Command Done interrupt is generated.
6. Software must check for data error interrupts, reported in the `dcrc`, `bds`, `sbe`, and `ebe` bits of the `rintsts` register. If required, software can terminate the data transfer by sending an SD/SDIO STOP command.

7. Software must check for host timeout conditions in the rintsts register:
 - Receive FIFO buffer data request
 - Data starvation from host—the host is not reading from the FIFO buffer fast enough to keep up with data from the card. To correct this condition, software must perform the following steps:
 - Read the fifo_count field of the status register
 - Read the corresponding amount of data out of the FIFO buffer

In both cases, the software must read data from the FIFO buffer and make space in the FIFO buffer for receiving more data.

8. When a DTO interrupt is received, the software must read the remaining data from the FIFO buffer.

Table 11-16. cmd Register Settings for Single-Block and Multiple-Block Reads

Parameter	Value	Comment
Default		
start_cmd	1	This bit resets itself to 0 after the command is committed.
use_hold_reg	1 or 0	Choose the value based on speed mode being used.
update_clk_regs_only	0	Does not need to update clock parameters
data_expected	1	Data command
card_number	1	For one card
transfer_mode	0	Block transfer
send_initialization	0	1 for a card reset command such as the SD/SDIO GO_IDLE_STATE command 0 otherwise
stop_abort_cmd	0	1 for a command to stop data transfer such as the SD/SDIO STOP_TRANSMISSION command 0 otherwise
send_auto_stop	0 or 1	Set according to Table 11-10 on page 11-28
read_write	0	Read from card
response_length	0	1 for R2 (long) response 0 for short response
response_expect	1 or 0	0 for commands with no response, such as SD/SDIO GO_IDLE_STATE, SET_DSR, and GO_INACTIVE_STATE. 1 otherwise
User-Selectable		
wait_prvdata_complete	1 or 0	0—sends command to CIU immediately 1—sends command after previous data transfer ends
check_response_crc	1 or 0	0—Controller must not check response CRC 1—Controller must check response CRC
cmd_index	Command Index	Set this parameter to the command number. For example, set to 17 or 18 for SD/SDIO READ_SINGLE_BLOCK (CMS17) or READ_MULTIPLE_BLOCK (CMD18).

Single-Block or Multiple-Block Write

The following steps comprise a single-block or multiple-block write:

1. Write the data size in bytes to the `bytcnt` register. For a multi-block write, `bytcnt` must be a multiple of the block size.
2. Write the block size in bytes to the `blksiz` register. The controller sends data in blocks of size `blksiz` each.
3. Write the `cmdarg` register with the data address to which data must be written.
4. Write data into the FIFO buffer. For best performance, the host software should write data continuously until the FIFO buffer is full.
5. Write the `cmd` register with the parameters listed in [Table 11-17 on page 11-49](#). For SD and MMC cards, use the SD/SDIO `WRITE_BLOCK` (CMD24) command for a single-block write and the `WRITE_MULTIPLE_BLOCK` (CMD25) command for a multiple-block writes. For SDIO cards, use the `IO_RW_EXTENDED` command for both single-block and multiple-block transfers.

After writing to the `cmd` register, the controller starts executing a command if there is no other command already being processed. When the command is sent to the bus, a Command Done interrupt is generated.

6. Software must check for data error interrupts; that is, for `dcrc`, `bds`, and `ebe` bits of the `rintsts` register. If required, software can terminate the data transfer early by sending the SD/SDIO `STOP` command.

7. Software must check for host timeout conditions in the `rintsts` register:

- Transmit FIFO buffer data request
- Data starvation by the host—the controller wrote data to the card faster than the host could supply the data.

In both cases, the software must write data into the FIFO buffer.

There are two types of transfers: open-ended and fixed length.

- Open-ended transfers—For an open-ended block transfer, the byte count is 0. At the end of the data transfer, software must send the `STOP_TRANSMISSION` command (CMD12).
- Fixed-length transfers—The byte count is nonzero. You must already have written the number of bytes to the `bytcnt` register. The controller issues the `STOP` command for you if you set the `send_auto_stop` bit of the `cmd` register to 1. After completion of a transfer of a given number of bytes, the controller sends the `STOP` command. Completion of the `AUTO_STOP` command is reflected by the `Auto Command Done` interrupt. A response to the `AUTO_STOP` command is written to the `resp1` register.

If software does not set the `send_auto_stop` bit in the `cmd` register to 1, software must issue the `STOP` command just like in the open-ended case.

When the `dto` bit of the `rintsts` register is set, the data command is complete.

Table 11-17. cmd Register Settings for Single-Block and Multiple-Block Write (Part 1 of 2)

Parameter	Value	Comment
Default		
<code>start_cmd</code>	1	This bit resets itself to 0 after the command is committed (accepted by the BIU).
<code>use_hold_reg</code>	1 or 0	Choose the value based on speed mode being used.
<code>update_clk_regs_only</code>	0	Does not need to update clock parameters
<code>data_expected</code>	1	Data command
<code>card_number</code>	1	For one card
<code>transfer_mode</code>	0	Block transfer
<code>send_initialization</code>	0	Can be 1, but only for card reset commands such as SD/SDIO <code>GO_IDLE_STATE</code>
<code>stop_abort_cmd</code>	0	Can be 1 for commands to stop data transfer such as SD/SDIO <code>STOP_TRANSMISSION</code>
<code>send_auto_stop</code>	0 or 1	Set according to Table 11-10 on page 11-28
<code>read_write</code>	1	Write to card
<code>response_length</code>	0	Can be 1 for R2 (long) response
<code>response_expect</code>	1	Can be 0 for commands with no response. For example, SD/SDIO <code>GO_IDLE_STATE</code> , <code>SET_DSR</code> , <code>GO_INACTIVE_STATE</code> etc.

Table 11-17. cmd Register Settings for Single-Block and Multiple-Block Write (Part 2 of 2)

Parameter	Value	Comment
Default		
User-Selectable		
wait_prvdata_complete	1	0—Sends command to the CIU immediately 1—Sends command after previous data transfer ends
check_response_crc	1	0—Controller must not check response CRC 1—Controller must check response CRC
cmd_index	Command Index	Set this parameter to the command number. For example, set to 24 for SD/SDIO WRITE_BLOCK (CMD24) or 25 for WRITE_MULTIPLE_BLOCK (CMD25).

Stream Read and Write

In a stream transfer, if the byte count is equal to 0, the software must also send the SD/SDIO STOP command. If the byte count is not 0, when a given number of bytes completes a transfer, the controller sends the STOP command automatically. Completion of this AUTO_STOP command is reflected by the Auto_command_done interrupt. A response to an AUTO_STOP command is written to the resp1 register. A stream transfer is allowed only for card interfaces with a 1-bit data bus.

A stream read requires the same steps as the block read described in “Single-Block or Multiple-Block Read” on page 11-46, except for the following bits in the cmd register:

- transfer_mode = 0x1 (for stream transfer)
- cmd_index = 20 (SD/SDIO CMD20)

A stream write requires the same steps as the block write mentioned in “Single-Block or Multiple-Block Write” on page 11-48, except for the following bits in the cmd register:

- transfer_mode = 0x1 (for stream transfer)
- cmd_index = 11 (SD/SDIO CMD11)

Packed Commands

To reduce overhead, read and write commands can be packed in groups of commands—either all read or all write—that transfer the data for all commands in the group in one transfer on the bus. Use the SD/SDIO SET_BLOCK_COUNT (CMD23) command to state ahead of time how many blocks will be transferred. Then issue a single READ_MULTIPLE_BLOCK or WRITE_MULTIPLE_BLOCK command to read or write multiple blocks.

- SET_BLOCK_COUNT—set block count (number of blocks transferred using the READ_MULTIPLE_BLOCK or WRITE_MULTIPLE_BLOCK command)
- READ_MULTIPLE_BLOCK—multiple-block read command
- WRITE_MULTIPLE_BLOCK—multiple-block write command

Packed commands are organized in packets by the application software and are transparent to the controller.

 For more information about packed commands, refer to *JEDEC Standard No. 84-A441*, as referenced in “References” on page 11-79.

Transfer Stop and Abort Commands

This section describes stop and abort commands. The SD/SDIO STOP_TRANSMISSION command can terminate a data transfer between a memory card and the controller. The ABORT command can terminate an I/O data transfer for only an SDIO card.

STOP_TRANSMISSION (CMD12)

The host can send the STOP_TRANSMISSION (CMD12) command on the CMD pin at any time while a data transfer is in progress. Perform the following steps to send the STOP_TRANSMISSION command to the SD/SDIO card device:

1. Set the wait_prvdata_complete bit of the cmd register to 0.
2. Set the stop_abort_cmd in the cmd register to 1, which ensures that the CIU stops.

The STOP_TRANSMISSION command is a non-data transfer command. For more information, refer to “Non-Data Transfer Commands” on page 11-42.

ABORT

The ABORT command can only be used with SDIO cards. To abort the function that is transferring data, program the ABORT function number in the ASx[2:0] bits at address 0x06 of the card common control register (CCCR) in the card device, using the IO_RW_DIRECT (CMD52) command. The CCCR is located at the base of the card space 0x0 – 0xFF.

The ABORT command is a non-data transfer command. For more information, refer to “Non-Data Transfer Commands” on page 11-42.

Perform the following steps to send the ABORT command to the SDIO card device:

1. Set the cmdarg register to include the appropriate command argument parameters listed in Table 11-18.
2. Send the IO_RW_DIRECT command by setting the following fields of the cmd register:
 - Set the command index to 0x52 (IO_RW_DIRECT).
 - Set the stop_abort_cmd bit of the cmd register to 1 to inform the controller that the host aborted the data transfer.
 - Set the wait_prvdata_complete bit of the cmd register to 0.
3. Wait for the cmd bit in the rintsts register to change to 1.
4. Read the response to the IO_RW_DIRECT command (R5) in the response registers for any errors.

 For more information about response values, refer to the *Physical Layer Simplified Specification, Version 3.01* as described in “References” on page 11-79.

Table 11–18. cmdarg Register Settings for SD/SDIO ABORT Command

Bits	Contents	Value
31	R/W flag	1
30:28	Function number	0, for access to the CCCR in the card device
27	RAW flag	1, if needed to read after write
26	Don't care	-
25:9	Register address	0x06
8	Don't care	-
7:0	Write data	Function number to abort

Internal DMA Controller Operations

For better performance, you can use the internal DMA controller to transfer data between the host and the controller. This section describes the internal DMA controller's initialization process, and transmission sequence, and reception sequence.

Internal DMA Controller Initialization

To initialize the internal DMA controller, perform the following steps:

- Set the required bmod register bits:
 - If the internal DMA controller enable bit (de) of the bmod register is set to 0 during the middle of a DMA transfer, the change has no effect. Disabling only takes effect for a new data transfer command.
 - Issuing a software reset immediately terminates the transfer. Prior to issuing a software reset, Altera recommends the host reset the DMA interface by setting the dma_reset bit of the ctrl register to 1.
 - The pbl field of the bmod register is read-only and a direct reflection of the contents of the DMA multiple transaction size field (dw_dma_multiple_transaction_size) in the fifoth register.
 - The fb bit of the bmod register has to be set appropriately for system performance.
- Write to the idinten register to mask unnecessary interrupt causes according to the following guidelines:
 - When a Descriptor Unavailable interrupt is asserted, the software needs to form the descriptor, appropriately set its own bit, and then write to the poll demand register (pldmnd) for the internal DMA controller to re-fetch the descriptor.
 - It is always appropriate for the software to enable abnormal interrupts because any errors related to the transfer are reported to the software.

3. Populate either a transmit or receive descriptor list in memory. Then write the base address of the first descriptor in the list to the internal DMA controller's descriptor list base address register (dbaddr). The DMA controller then proceeds to load the descriptor list from memory.

The next two sections, “Internal DMA Controller Transmission Sequences” and “Internal DMA Controller Reception Sequences” on page 11-54, describe this step in detail.

Internal DMA Controller Transmission Sequences

To use the internal DMA controller to transmit data, perform the following steps:

1. The host sets up the Descriptor fields (DES0—DES3) for transmission and sets the OWN bit (DES0[31]) to 1. The host also loads the data buffer in system memory with the data to be written to the SD card.
2. The host writes the appropriate write data command (SD/SDIO WRITE_BLOCK or WRITE_MULTIPLE_BLOCK) to the cmd register. The internal DMA controller determines that a write data transfer needs to be performed.
3. The host sets the required transmit threshold level in the tx_wmark field in the fifoth register.
4. The internal DMA controller engine fetches the descriptor and checks the OWN bit. If the OWN bit is set to 0, the host owns the descriptor. In this case, the internal DMA controller enters the suspend state and asserts the Descriptor Unable interrupt. The host then needs to set the descriptor OWN bit to 1 and release the DMA controller by writing any value to the pldmnd register.
5. The host must write the descriptor base address to the dbaddr register.
6. The internal DMA controller waits for the Command Done (CD) bit in the rintsts register to be set to 1, with no errors from the BIU. This condition indicates that a transfer can be done.
7. The internal DMA controller engine waits for a DMA interface request from BIU. The BIU divides each transfer into smaller chunks. Each chunk is an internal request to the DMA. This request is generated based on the transmit threshold value.
8. The internal DMA controller fetches the transmit data from the data buffer in the system memory and transfers the data to the FIFO buffer in preparation for transmission to the card.
9. When data spans across multiple descriptors, the internal DMA controller fetches the next descriptor and continues with its operation with the next descriptor. The Last Descriptor bit in the descriptor DES0 field indicates whether the data spans multiple descriptors or not.
10. When data transmission is complete, status information is updated in the idsts register by setting the ti bit to 1, if enabled. Also, the OWN bit is set to 0 by the DMA controller by updating the DES0 field of the descriptor.

Internal DMA Controller Reception Sequences

To use the internal DMA controller to receive data, perform the following steps:

1. The host sets up the descriptor fields (DES0—DES3) for reception, sets the OWN (DES0 [31]) to 1.
2. The host writes the read data command to the cmd register in BIU. The internal DMA controller determines that a read data transfer needs to be performed.
3. The host sets the required receive threshold level in the rx_wmark field in the fifoth register.
4. The internal DMA controller engine fetches the descriptor and checks the OWN bit. If the OWN bit is set to 0, the host owns the descriptor. In this case, the internal DMA controller enters suspend state and asserts the Descriptor Unable interrupt. The host then needs to set the descriptor OWN bit to 1 and release the DMA controller by writing any value to the pldmnd register.
5. The host must write the descriptor base address to the dbaddr register.
6. The internal DMA controller waits for the CD bit in the rintsts register to be set to 1, with no errors from the BIU. This condition indicates that a transfer can be done.
7. The internal DMA controller engine waits for a DMA interface request from the BIU. The BIU divides each transfer into smaller chunks. Each chunk is an internal request to the DMA. This request is generated based on the receive threshold value.
8. The internal DMA controller fetches the data from the FIFO buffer and transfers the data to system memory.
9. When data spans across multiple descriptors, the internal DMA controller fetches the next descriptor and continues with its operation with the next descriptor. The Last Descriptor bit in the descriptor indicates whether the data spans multiple descriptors or not.
10. When data reception is complete, status information is updated in the idsts register by setting the ri bit to 1, if enabled. Also, the OWN bit is set to 0 by the DMA controller by updating the DES0 field of the descriptor.

Commands for SDIO Card Devices

This section describes the commands to temporarily halt the transfers between the controller and SDIO card device.

Suspend and Resume Sequence

For SDIO cards, a data transfer between an I/O function and the controller can be temporarily halted using the SUSPEND command. This capability might be required to perform a high-priority data transfer with another function. When desired, the suspended data transfer can be resumed using the RESUME command.

The SUSPEND and RESUME operations are implemented by writing to the appropriate bits in the CCCR (Function 0) of the SDIO card. To read from or write to the CCCR, use the controller's IO_RW_DIRECT command.

Suspend

To suspend data transfer, perform the following steps:

1. Check if the SDIO card supports the SUSPEND/RESUME protocol. This can be done through the SBS bit in the CCCR at offset 0x08 of the card.
2. Check if the data transfer for the required function number is in process. The function number that is currently active is reflected in the function select bits (FSx) of the CCCR, bits 3:0 at offset 0x0D of the card.



If the bus status bit (BS), bit 0 at address 0xC, is 1, only the function number given by the FSx bits is valid.

3. To suspend the transfer, set the bus release bit (BR), bit 2 at address 0xC, to 1.
4. Poll the BR and BS bits of the CCCR at offset 0x0C of the card until they are set to 0. The BS bit is 1 when the currently-selected function is using the data bus. The BR bit remains 1 until the bus release is complete. When the BR and BS bits are 0, the data transfer from the selected function is suspended.
5. During a read-data transfer, the controller can be waiting for the data from the card. If the data transfer is a read from a card, the controller must be informed after the successful completion of the SUSPEND command. The controller then resets the data state machine and comes out of the wait state. To accomplish this, set the abort read data bit (abort_read_data) in the ctrl register to 1.
6. Wait for data completion, by polling until the dt0 bit is set to 1 in the rintsts register.

To determine the number of pending bytes to transfer, read the transferred CIU card byte count (tcbcnt) register of the controller. Subtract this value from the total transfer size. You use this number to resume the transfer properly.

Resume

To resume the data transfer, perform the following steps:

1. Check that the card is not in a transfer state, which confirms that the bus is free for data transfer.
2. If the card is in a disconnect state, select it using the SD/SDIO SELECT/DESELECT_CARD command. The card status can be retrieved in response to an IO_RW_DIRECT or IO_RW_EXTENDED command.
3. Check that a function to be resumed is ready for data transfer. Determine this state by reading the corresponding RF<n> flag in CCCR at offset 0x0F of the card. If RF<n> = 1, the function is ready for data transfer.



For detailed information about the RF<n> flags, refer to *SDIO Simplified Specification Version 2.00* as described in ["References" on page 11-79](#):

4. To resume transfer, use the IO_RW_DIRECT command to write the function number at the FSx bits in the CCCR, bits 3:0 at offset 0x0D of the card. Form the command argument for the IO_RW_DIRECT command and write it to the cmdarg register. Bit values are listed in [Table 11-19](#).

Table 11-19. cmdarg Bit Values for RESUME Command

Bits	Content	Value
31	R/W flag	1
30:28	Function number	0, for CCCR access
27	RAW flag	1, read after write
26	Don't care	-
25:9	Register address	0x0D
8	Don't care	-
7:0	Write data	Function number that is to be resumed

5. Write the block size value to the blksiz register. Data is transferred in units of this block size.
6. Write the byte count value to the bytcnt register. Specify the total size of the data that is the remaining bytes to be transferred. It is the responsibility of the software to handle the data.

To determine the number of pending bytes to transfer, read the transferred CIU card byte count register (tbcnt). Subtract this value from the total transfer size to calculate the number of remaining bytes to transfer.
7. Write to the cmd register similar to a block transfer operation. When the cmd register is written, the command is sent and the function resumes data transfer. For more information, refer to [“Single-Block or Multiple-Block Read” on page 11-46](#) and [“Single-Block or Multiple-Block Write” on page 11-48](#).
8. Read the resume data flag (DF) of the SDIO card device. Interpret the DF flag as follows:
 - DF=1—The function has data for the transfer and begins a data transfer as soon as the function or memory is resumed.
 - DF=0—The function has no data for the transfer. If the data transfer is a read, the controller waits for data. After the data timeout period, it issues a data timeout error.

Read-Wait Sequence

Read_wait is used with SDIO cards only. It temporarily stalls the data transfer, either from functions or memory, and allows the host to send commands to any function within the SDIO card device. The host can stall this transfer for as long as required. The controller provides the facility to signal this stall transfer to the card. To signal the stall, perform the following steps:

1. Check if the card supports the read_wait facility by reading the SDIO card's SRW bit, bit 2 at offset 0x8 in the CCCR.
2. If this bit is 1, all functions in the card support the read_wait facility. Use the SD/SDIO IO_RW_DIRECT command to read this bit.
3. If the card supports the read_wait signal, assert it by setting the read wait bit (read_wait) in the ctrl register to 1.
4. Reset the read_wait bit to 0 in the ctrl register.

CE-ATA Data Transfer Commands

This section describes CE-ATA data transfer commands. For information about the basic settings and interrupts generated for different conditions, refer to [“Data Transfer Commands” on page 11-44](#).

Reset and Card Device Discovery Overview

Before starting any CE-ATA operations, the host must perform a MMC reset and initialization procedure. The host and card device must negotiate the MMC transfer (MMC TRAN) state before the card enters the MMC TRAN state.



For information about the MMC TRAN state, MMC reset and initialization, refer to *JEDEC Standard No. 84-A441*, as referenced in [“References” on page 11-79](#).

The host must follow the existing MMC discovery procedure to negotiate the MMC TRAN state. After completing normal MMC reset and initialization procedures, the host must query the initial ATA task file values using the RW_REG or CMD39 command.

By default, the MMC block size is 512 bytes—indicated by bits 1:0 of the srcControl register inside the CE-ATA card device. The host can negotiate the use of a 1 KB or 4 KB MMC block sizes. The card indicates MMC block sizes that it can support through the srcCapabilities register in the MMC; the host reads this register to negotiate the MMC block size. Negotiation is complete when the host controller writes the MMC block size into the srcControl register bits 1:0 of the card.

ATA Task File Transfer Overview

ATA task file registers are mapped to addresses 0x00h through 0x10h in the MMC register space. The RW_REG command is used to issue the ATA command, and the ATA task file is transmitted in a single RW_REG MMC command sequence.

The host software stack must write the task file image to the FIFO buffer before setting the cmdarg and cmd registers in the controller. The host processor then writes the address and byte count to the cmdarg register before setting the cmd register bits.

For the RW_REG command, there is no CCS from the CE-ATA card device.

ATA Task File Transfer Using the RW_MULTIPLE_REGISTER (RW_REG) Command

This command involves data transfer between the CE-ATA card device and the controller. To send a data command, the controller needs a command argument, total data size, and block size. Software receives or sends data through the FIFO buffer.

To implement an ATA task file transfer (read or write), perform the following steps:

1. Write the data size in bytes to the bytcnt register. bytcnt must equal the block size, because the controller expects a single block transfer.
2. Write the block size in bytes to the blksiz register.
3. Write the cmdarg register with the beginning register address.

You must set the cmdarg, cmd, blksiz, and bytcnt registers according to [Table 11-20](#) through [Table 11-23](#).

Table 11-20. cmdarg Register Settings for ATA Task File Transfer

Bit	Value	Comment
31	1 or 0	Set to 0 for read operation or set to 1 for write operation
30:24	0	Reserved (bits set to 0 by host processor)
23:18	0	Starting register address for read or write (DWORD aligned)
17:16	0	Register address (DWORD aligned)
15:8	0	Reserved (bits set to 0 by host processor)
7:2	16	Number of bytes to read or write (integral number of DWORD)
1:0	0	Byte count in integral number of DWORD

Table 11-21. cmd Register Settings for ATA Task File Transfer (Part 1 of 2)

Bit	Value	Comment
start_cmd	1	-
ccs_expected	0	CCS is not expected
read_ceata_device	0 or 1	Set to 1 if RW_BLK or RW_REG read
update_clk_regs_only	0	No clock parameters update command
card_num	0	-
send_initialization	0	No initialization sequence
stop_abort_cmd	0	-
send_auto_stop	0	-
transfer_mode	0	Block transfer mode. Block size and byte count must match number of bytes to read or write
read_write	1 or 0	1 for write and 0 for read
data_expected	1	Data is expected
response_length	0	-
response_expect	1	-
cmd_index	Command index	Set this parameter to the command number. For example, set to 24 for SD/SDIO WRITE_BLOCK (CMD24) or 25 for WRITE_MULTIPLE_BLOCK (CMD25).

Table 11-21. cmd Register Settings for ATA Task File Transfer (Part 2 of 2)

Bit	Value	Comment
wait_prvdata_complete	1	0 for send command immediately 1 for send command after previous DTO interrupt
check_response_crc	1	0 for not checking response CRC 1 for checking response CRC

Table 11-22. blksiz Register Settings for ATA Task File Transfer

Bits	Value	Comment
31:16	0	Reserved bits set to 0
15:0 (block_size)	16	For accessing entire task file (16, 8-bit registers). Block size of 16 bytes

Table 11-23. bytcnt Register Settings for ATA Task File Transfer

Bits	Value	Comment
31:0	16	For accessing entire task file (16, 8-bit registers). Byte count value of 16 is used with the block size set to 16.

ATA Payload Transfer Using the RW_MULTIPLE_BLOCK (RW_BLK) Command

This command involves data transfer between the CE-ATA card device and the controller. To send a data command, the controller needs a command argument, total data size, and block size. Software receives or sends data through the FIFO buffer.

To implement an ATA payload transfer (read or write), perform the following steps:

1. Write the data size in bytes to the bytcnt register.
2. Write the block size in bytes to the blksiz register. The controller expects a single/multiple block transfer.
3. Write to the cmdarg register to indicate the data unit count.

You must set the cmdarg, cmd, blksiz, and bytcnt registers according to [Table 11-24](#) through [Table 11-27](#).

Table 11-24. cmdarg Register Settings for ATA Payload Transfer

Bits	Value	Comment
31	1 or 0	Set to 0 for read operation or set to 1 for write operation
30:24	0	Reserved (bits set to 0 by host processor)
23:16	0	Reserved (bits set to 0 by host processor)
15:8	Data count	Data Count Unit [15:8]
7:0	Data count	Data Count Unit [7:0]

Table 11-25. cmd Register Settings for ATA Payload Transfer

Bits	Value	Comment
start_cmd	1	-
ccs_expected	1	CCS is expected. Set to 1 for the RW_BLK command if interrupts are enabled in CE-ATA card device (the nIEN bit is set to 0 in the ATA control register)
read_ceata_device	0 or 1	Set to 1 for a RW_BLK or RW_REG read command
update_clk_regs_only	0	No clock parameters update command
card_num	0	-
send_initialization	0	No initialization sequence
stop_abort_cmd	0	-
send_auto_stop	0	-
transfer_mode	0	Block transfer mode. Byte count must be integer multiple of 4kB. Block size can be 512, 1k or 4k bytes
read_write	1 or 0	1 for write and 0 for read
data_expected	1	Data is expected
response_length	0	-
response_expect	1	-
cmd_index	Command index	Set this parameter to the command number. For example, set to 24 for SD/SDIO WRITE_BLOCK (CMD24) or 25 for WRITE_MULTIPLE_BLOCK (CMD25).
wait_prvdata_complete	1	■ 0 for send command immediately ■ 1 for send command after previous DTO interrupt
check_response_crc	1	■ 0 for not checking response CRC ■ 1 for checking response CRC

Table 11-26. blksiz Register Settings for ATA Payload Transfer

Bits	Value	Comment
31:16	0	Reserved bits set to 0
15:0 (block_size)	512, 1024 or 4096	MMC block size can be 512, 1024 or 4096 bytes as negotiated by host

Table 11-27. bytcnt Register Settings for ATA Payload Transfer

Bits	Value	Comment
31:0	$\langle n \rangle * \text{block\_size}$	Byte count must be an integer multiple of the block size. For ATA media access commands, byte count must be a multiple of 4 KB. ($\langle n \rangle * \text{block\_size} = \langle x \rangle * 4 \text{ KB}$, where $\langle n \rangle$ and $\langle x \rangle$ are integers)

CE-ATA CCS

This section describes disabling the CCS, recovery after CCS timeout, and recovery after I/O read transmission delay (N_{ACIO}) timeout.

Disabling the CCS

While waiting for the CCS for an outstanding RW_BLK command, the host can disable the CCS by sending a CCSD command:

- Send a CCSD command—the controller sends the CCSD command to the CE-ATA card device if the `send_ccsd` bit is set to 1 in the `ctrl` register of the controller. This bit can be set only after a response is received for the RW_BLK command.
- Send an internal stop command—send an internally-generated SD/SDIO STOP_TRANSMISSION (CMD12) command after sending the CCSD pattern. If the `send_auto_stop_ccsd` bit of the `ctrl` register is also set to 1 when the controller is set to send the CCSD pattern, the controller sends the internally-generated STOP command to the CMD pin. After sending the STOP command, the controller sets the `acd` bit in the `rintsts` register to 1.

Recovery after CCS Timeout

If a timeout occurs while waiting for the CCS, the host needs to send the CCSD command followed by a STOP command to abort the pending ATA command. The host can set up the controller to send an internally-generated STOP command after sending the CCSD pattern:

- Send CCSD command—set the `send_ccsd` bit in the `ctrl` register to 1.
- Send external STOP command—terminate the data transfer between the CE-ATA card device and the controller. For more information about sending the STOP command, refer to [“Transfer Stop and Abort Commands” on page 11-51](#).
- Send internal STOP command—set the `send_auto_stop_ccsd` bit in the `ctrl` register to 1, which tells the controller to send the internally-generated STOP command. After sending the STOP command, the controller sets the `acd` bit in the `rintsts` register to 1. The `send_auto_stop_ccsd` bit must be set to 1 along with setting the `send_ccsd` bit.

Recovery after I/O Read Transmission Delay (N_{ACIO}) Timeout

If the I/O read transmission delay (N_{ACIO}) timeout occurs for the CE-ATA card device, perform one of the following steps to recover from the timeout:

- If the CCS is expected from the CE-ATA card device (that is, the `ccs_expected` bit is set to 1 in the `cmd` register), follow the steps in [“Recovery after CCS Timeout” on page 11-61](#).
- If the CCS is not expected from the CE-ATA card device, perform the following steps:
 - a. Send an external STOP command.
 - b. Terminate the data transfer between the controller and CE-ATA card device.

Reduced ATA Command Set

It is necessary for the CE-ATA card device to support the reduced ATA command subset. This section describes the reduced command set.

The IDENTIFY DEVICE Command

The IDENTIFY DEVICE command returns a 512-byte data structure to the host that describes device-specific information and capabilities. The host issues the IDENTIFY DEVICE command only if the MMC block size is set to 512 bytes. Any other MMC block size has indeterminate results.

The host issues a RW_REG command for the ATA command, and the data is retrieved with the RW_BLK command.

The host controller uses the following settings while sending a RW_REG command for the IDENTIFY DEVICE ATA command. The following list shows the primary bit settings:

- cmd register setting: data_expected bit set to 0
- cmdarg register settings:
 - Bit [31] set to 0
 - Bits [7:2] set to 128
 - All other bits set to 0
- Task file settings:
 - Command field of the ATA task file set to 0xEC
 - Reserved fields of the task file set to 0
- bytcnt register and block_size field of the blksiz register: set to 16

The host controller uses the following settings for data retrieval (RW_BLK command):

- cmd register settings:
 - ccs_expected set to 1
 - data_expected set to 1
- cmdarg register settings:
 - Bit [31] set to 0 (read operation)
 - Bits [15:0] set to 1 (data unit count = 1)
 - All other bits set to 0
- bytcnt register and block_size field of the blksiz register: set to 512

The READ DMA EXT Command

The READ DMA EXT command reads a number of logical blocks of data from the card device using the Data-In data transfer protocol. The host uses a RW_REG command to issue the ATA command and the RW_BLK command for the data transfer.

The WRITE DMA EXT Command

The WRITE DMA EXT command writes a number of logical blocks of data to the card device using the Data-Out data transfer protocol. The host uses a RW_REG command to issue the ATA command and the RW_BLK command for the data transfer.

The STANDBY IMMEDIATE Command

This ATA command causes the card device to immediately enter the most aggressive power management mode that still retains internal device context. No data transfer (RW_BLK) is expected for this command.

For card devices that do not provide a power savings mode, the STANDBY IMMEDIATE command returns a successful status indication. The host issues a RW_REG command for the ATA command, and the status is retrieved with the SD/SDIO CMD39 or RW_REG command. Only the status field of the ATA task file contains the success status; there is no error status.

The host controller uses the following settings while sending the RW_REG command for the STANDBY IMMEDIATE ATA command:

- cmd register setting: data_expected bit set to 0
- cmdarg register settings:
 - Bit [31] set to 1
 - Bits [7:2] set to 4
 - All other bits set to 0
- Task file settings:
 - Command field of the ATA task file set to 0xE0
 - Reserved fields of the task file set to 0
- bytcnt register and block_size field of the blksiz register: set to 16

The FLUSH CACHE EXT Command

For card devices that buffer/cache written data, the FLUSH CACHE EXT command ensures that buffered data is written to the card media. For cards that do not buffer written data, the FLUSH CACHE EXT command returns a success status. No data transfer (RW_BLK) is expected for this ATA command.

The host issues a RW_REG command for the ATA command, and the status is retrieved with the SD/SDIO CMD39 or RW_REG command. There can be error status for this ATA command, in which case fields other than the status field of the ATA task file are valid.

The host controller uses the following settings while sending the RW_REG command for the STANDBY IMMEDIATE ATA command:

- cmd register setting: data_expected bit set to 0
- cmdarg register settings:
 - Bit [31] set to 1
 - Bits [7:2] set to 4
 - All other bits set to 0

- Task file settings:
 - Command field of the ATA task file set to 0xEA
 - Reserved fields of the task file set to 0
- `bytcnt` register and `block_size` field of the `blksiz` register: set to 16

Card Read Threshold

When an application needs to perform a single or multiple block read command, the application must set the `cardthrc1` register with the appropriate card read threshold size in the card read threshold field (`cardrdthreshold`) and set the `cardrdthren` bit to 1. This additional information specified in the controller ensures that the controller sends a read command only if there is space equal to the card read threshold available in the RX FIFO buffer. This in turn ensures that the card clock is not stopped in the middle a block of data being transmitted from the card. Set the card read threshold to the block size of the transfer to guarantee there is a minimum of one block size of space in the RX FIFO buffer before the controller enables the card clock.

The card read threshold is required when the round trip delay is greater than half of `sdmmc_clk_divided`.

Recommended Usage Guidelines for Card Read Threshold

1. The `cardthrc1` register must be set before setting the `cmd` register for a data read command.
2. The `cardthrc1` register must not be set while a data transfer command is in progress.
3. The `cardrdthreshold` field of the `cardthrc1` register must be set to at the least the block size of a single or multiblock transfer. A `cardrdthreshold` field setting greater than or equal to the block size of the read transfer ensures that the card clock does not stop in the middle of a block of data.
4. If the round trip delay is greater than half of the card clock period, card read threshold must be enabled and the card threshold must be set as per guideline 3 to guarantee that the card clock does not stop in the middle of a block of data.
5. If the `cardrdthreshold` field is set to less than the block size of the transfer, the host must ensure that the receive FIFO buffer never overflows during the read transfer. Overflow can cause the card clock from the controller to stop. The controller is not able to guarantee that the card clock does not stop during a read transfer.



If the `cardrdthreshold` field of the `cardthrc1` register, and the `rx_wmark` and `dw_dma_multiple_transaction_size` fields of the `fifoth` register are set incorrectly, the card clock might stop indefinitely, with no interrupts generated by the controller.

Card Read Threshold Programming Sequence

Most cards, such as SDHC or SDXC, support block sizes that are either specified in the card or are fixed to 512 bytes. For SDIO, MMC, and standard capacity SD cards that support partial block read (`READ_BL_PARTIAL` set to 1 in the CSD register of the card device), the block size is variable and can be chosen by the application.

To use the card read threshold feature effectively and to guarantee that the card clock does not stop because of a FIFO Full condition in the middle of a block of data being read from the card, follow these steps:

1. Choose a block size that is a multiple of four bytes.
2. Enable card read threshold feature. The card read threshold can be enabled only if the block size for the given transfer is less than or equal to the total depth of the FIFO buffer:

$$(\text{block size} / 4) \leq 1024$$
3. Choose the card read threshold value:
 - If $(\text{block size} / 4) \geq 512$, choose `cardrdthreshold` such that $\text{cardrdthreshold} \leq (\text{block size} / 4)$ in bytes
 - If $(\text{block size} / 4) < 512$, choose `cardrdthreshold` such that $\text{cardrdthreshold} = (\text{block size} / 4)$ in bytes
4. Set the `dw_dma_multiple_transaction_size` field in the `fifoth` register to the number of transfers that make up a DMA transaction. For example, `size = 1` means 4 bytes are moved. The possible values for the size are 1, 4, 8, 16, 32, 64, 128, and 256 transfers. Select the size so that the value $(\text{block size} / 4)$ is evenly divided by the size.
5. Set the `rx_wmark` field in the `fifoth` register to the `size - 1`.
For example, if your block size is 512 bytes, legal values of `dw_dma_multiple_transaction_size` and `rx_wmark` are listed in [Table 11-28](#).

Table 11-28. Legal Values of `dw_dma_multiple_transaction_size` and `rx_wmark` for Block Size = 512


Block Size	<code>dw_dma_multiple_transaction_size</code>	<code>rx_wmark</code>
512	1	0
512	4	3
512	8	7
512	16	15
512	32	31
512	64	63
512	128	127

Card Read Threshold Programming Examples

This section shows examples of how to program the card read threshold.

- Choose a block size that is a multiple of 4 (the number of bytes per FIFO location), and less than 4096 (1024 FIFO locations). For example, a block size of 3072 bytes is legal, because $3072 / 4 = 768$ FIFO locations.
- For DMA mode, choose the size so that block size is a multiple of the size. For example `size = 128`, where $\text{block size} \% \text{size} = 0$.

- Set the `rx_wmark` field = size - 1. For example, the `rx_wmark` field = $128 - 1 = 127$.
- Because block size > $\frac{1}{2}$ `FifoDepth`, set the `cardrdthreshold` field to the block size. For example, the `cardrdthreshold` field = 3072 bytes.

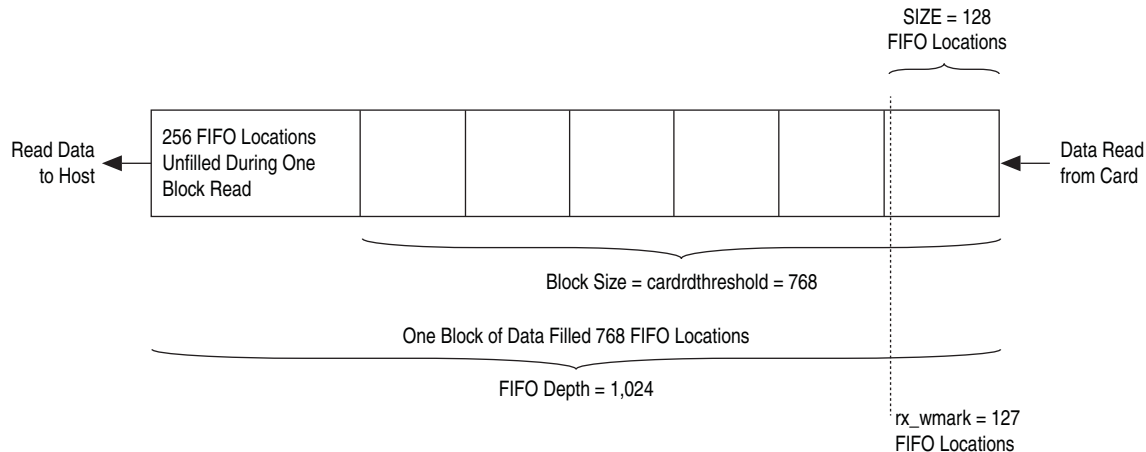Figure 11-12. FIFO Buffer content when Card Read Threshold is set to 768

Interrupt and Error Handling

This section describes how to use interrupts to handle errors. On power-on or reset, interrupts are disabled (the `int_enable` bit in the `ctrl` register is set to 0), and all the interrupts are masked (the `intmask` register default is 0). The controller error handling includes the following types of errors:

- Response and data timeout errors—For response time-outs, the host software can retry the command. For data time-outs, the controller has not received the data start bit from the card, so software can either retry the whole data transfer again or retry from a specified block onwards. By reading the contents of the `tbcnt` register later, the software can decide how many bytes remain to be copied (read).
- Response errors—Set to 1 when an error is received during response reception. If the response received is invalid, the software can retry the command.
- Data errors—Set to 1 when a data receive error occurs. Examples of data receive errors:
 - Data CRC
 - Start bit not found
 - End bit not found

These errors can occur on any block. On receipt of an error, the software can issue an SD/SDIO STOP or SEND_IF_COND command, and retry the command for either the whole data or partial data.

- Hardware locked error—Set to 1 when the controller cannot load a command issued by software. When software sets the `start_cmd` bit in the `cmd` register to 1, the controller tries to load the command. If the command buffer already contains a command, this error is raised, and the new command is discarded, requiring the software to reload the command.

- FIFO buffer underrun/overflow error—If the FIFO buffer is full and software tries to write data to the FIFO buffer, an overflow error is set. Conversely, if the FIFO buffer is empty and the software tries to read data from the FIFO buffer, an underrun error is set. Before reading or writing data in the FIFO buffer, the software must read the FIFO buffer empty bit (`fifo_empty`) or FIFO buffer full bit (`fifo_full`) in the status register.
- Data starvation by host timeout—This condition occurs when software does not service the FIFO buffer fast enough to keep up with the controller. Under this condition and when a read transfer is in process, the software must read data from the FIFO buffer, which creates space for further data reception. When a transmit operation is in process, the software must write data to fill the FIFO buffer so that the controller can write the data to the card.
- CE-ATA errors
 - CRC error on command—If a CRC error is detected for a command, the CE-ATA card device does not send a response, and a response timeout is expected from the controller. The ATA layer is notified that an MMC transport layer error occurred.
 - Write operation—Any MMC transport layer error known to the card device causes an outstanding ATA command to be terminated. The ERR bits are set in the ATA status registers and the appropriate error code is sent to the Error Register (Error) on the ATA card device.

If the device interrupt bit of the CE-ATA card (the `nIEN` bit in the ATA control register) is set to 0, the CCS is sent to the host.

If the device interrupt bit is set to 1, the card device completes the entire data unit count if the host controller does not abort the ongoing transfer.



During a multiple-block data transfer, if a negative CRC status is received from the card device, the data path signals a data CRC error to the BIU by setting the `dcrc` bit in the `rintsts` register to 1. It then continues further data transmission until all the bytes are transmitted.

- Read operation—If MMC transport layer errors are detected by the host controller, the host completes the ATA command with an error status. The host controller can issue a CCSD command followed by a `STOP_TRANSMISSION` (CMD12) command to abort the read transfer. The host can also transfer the entire data unit count bytes without aborting the data transfer.

Booting Operation for eMMC and MMC

This section describes how to set up the controller for eMMC and MMC boot operation.

Boot Operation by Holding Down the CMD Line

The controller can boot from MMC4.3, MMC4.4, and MMC4.41 cards by holding down the CMD line.




For information about this boot method, refer to the following specifications, as referenced in [“References” on page 11-79](#):

- JEDEC Standard No. 84-A441
- JEDEC Standard No. 84-A44
- JEDEC Standard No. JESD84-A43

Boot Operation for eMMC Card Device

Figure 11-13 illustrates the steps to perform the boot process for eMMC card devices. The detailed steps are described following the flow chart.

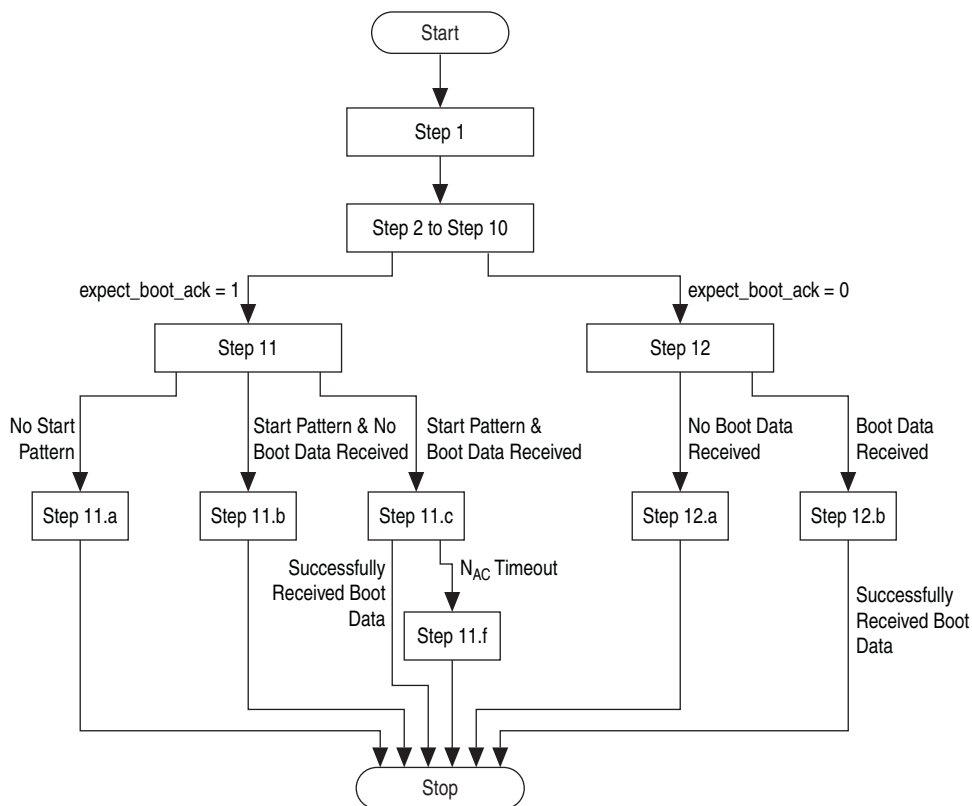Figure 11-13. Flow for eMMC Boot Operation



1. The software driver performs the following checks:
 - If the eMMC card device supports boot operation (the BOOT_PARTITION_ENABLE bit is set to 1 in the EXT_CSD register of the eMMC card).
 - The BOOT_SIZE_MULT and BOOT_BUS_WIDTH values in the EXT_CSD register, to be used during the boot process.

2. The software sets the following bits:
 - Sets masks for interrupts, by setting the appropriate bits to 0 in the `intmask` register.
 - Sets the global `int_enable` bit of the `ctrl` register to 1. Other bits in the `ctrl` register must be set to 0.

 Altera recommends that you write 0xFFFFFFFF to the `rintsts` and `idsts` registers to clear any pending interrupts before setting the `int_enable` bit. For internal DMA controller mode, the software driver needs to unmask all the relevant fields in the `idinten` register.
3. If the software driver needs to use the internal DMA controller to transfer the boot data received, it must perform the following steps:
 - Set up the descriptors as described in “Internal DMA Controller Transmission Sequences” on page 11-53 and “Internal DMA Controller Reception Sequences” on page 11-54.
 - Set the `use_internal_dmac` bit of the `ctrl` register to 1.
4. Set the card device frequency to 400 kHz using the `clkdiv` registers. For more information, refer to “Clock Setup” on page 11-40.
5. Set the `data_timeout` field of the `tmout` register equal to the card device total access time, N_{AC} .
6. Set the `blksiz` register to 0x200 (512 bytes).
7. Set the `bytcnt` register to a multiple of 128 KB, as indicated by the `BOOT_SIZE_MULT` value in the card device.
8. Set the `rx_wmark` field in the `fifoth` register. Typically, the threshold value can be set to 512, which is half the FIFO buffer depth.
9. Set the following fields in the `cmd` register:
 - Initiate the command by setting `start_cmd` = 1
 - Enable boot (`enable_boot`) = 1
 - Expect boot acknowledge (`expect_boot_ack`):
 - If a start-acknowledge pattern is expected from the card device, set `expect_boot_ack` to 1.
 - If a start-acknowledge pattern is not expected from the card device, set `expect_boot_ack` to 0.
 - Card number (`card_number`) = 0
 - `data_expected` = 1
 - Reset the remainder of `cmd` register bits to 0
10. If no start-acknowledge pattern is expected from the card device (`expect_boot_ack` set to 0) proceed to step 12.

11. This step handles the case where a start-acknowledge pattern is expected (expect_boot_ack was set to 1 in step 9).
 - a. If the Boot ACK Received interrupt is not received from the controller within 50 ms of initiating the command (step 9), the software driver must set the following cmd register fields:

- start_cmd = 1
- Disable boot (disable_boot)= 1
- card_number = 0
- All other fields = 0

The controller generates a Command Done interrupt after deasserting the CMD pin of the card interface.

If internal DMA controller mode is used for the boot process, the controller performs the following steps after the Boot ACK Received timeout:

- The DMA descriptor is closed.
- The ces bit in the idsts register is set, indicating the Boot ACK Received timeout.
- The ri bit of the idsts register is not set.

- b. If the Boot ACK Received interrupt is received, the software driver must clear this interrupt by writing 1 to the ces bit in the idsts register.

Within 0.95 seconds of the Boot ACK Received interrupt, the Boot Data Start interrupt must be received from the controller. If this does not occur, the software driver must write the following cmd register fields:

- start_cmd = 1
- disable_boot = 1
- card_number = 0
- All other fields = 0

The controller generates a Command Done interrupt after deasserting the CMD pin of the card interface.

If internal DMA controller mode is used for the boot process, the controller performs the following steps after the Boot ACK Received timeout:

- The DMA descriptor is closed
- The ces bit in the idsts register is set, indicating Boot Data Start timeout
- The ri bit of the idsts register is not set

- c. If the Boot Data Start interrupt is received, it indicates that the boot data is being received from the card device. When the DMA engine is not in internal DMA controller mode, the software driver can then initiate a data read from the controller based on the rxdr interrupt bit in the rintsts register.

In internal DMA controller mode, the DMA engine starts transferring the data from the FIFO buffer to the system memory as soon as the level set in the rx_wmark field of the fifoth register is reached.

At the end of a successful boot data transfer from the card, the following interrupts are generated:

- The cmd bit and dto bit in the rintsts register
 - The ri bit in the idsts register, in internal DMA controller mode only
- d. If an error occurs in the boot ACK pattern (0b010) or an EBE occurs:
- The controller automatically aborts the boot process by pulling the CMD line high
 - The controller generates a Command Done interrupt
 - The controller does not generate a Boot ACK Received interrupt
 - The application aborts the boot transfer
- e. In internal DMA controller mode:
- If the software driver creates more descriptors than required by the received boot data, the extra descriptors are not closed by the controller. Software cannot reuse the descriptors until they are closed.
 - If the software driver creates fewer descriptors than required by the received boot data, the controller generates a Descriptor Unavailable interrupt and does not transfer any further data to system memory.
- f. If N_{AC} is violated between data block transfers, the DRTO interrupt is asserted. In addition, if there is an error associated with the start or end bit, the SBE or EBE interrupt is also generated.

The boot operation for eMMC card devices is complete. Do not execute the remaining step (12).

12. This step handles the case where no start-acknowledge pattern is expected (expect_boot_ack was set to 0 in step 9).
- If the Boot Data Start interrupt is not received from the controller within 1 second of initiating the command (step 9), the software driver must write the cmd register with the following fields:

- start_cmd = 1
- disable_boot = 1
- card_number = 0
- All other fields = 0

The controller generates a Command Done interrupt after deasserting the CMD line of the card. In internal DMA controller mode, the descriptor is closed and the ces bit in the idsts register is set to 1, indicating a Boot Data Start timeout.

- If a Boot Data Start interrupt is received, it indicates that the boot data is being received from the card device. When the DMA engine is not in internal DMA controller mode, the software driver can then initiate a data read from the controller based on the rxdr interrupt bit in the rintsts register.

In internal DMA controller mode, the DMA engine starts transferring the data from the FIFO buffer to the system memory as soon as the level specified in the rx_wmark field of the fifoth register is reached.

At the end of a successful boot data transfer from the card, the following interrupts are generated:

- The cmd bit and dto bit in the rintsts register
 - The ri bit in the idsts register, in internal DMA controller mode only
- In internal DMA controller mode:
 - If the software driver creates more descriptors than required by the received boot data, the extra descriptors are not closed by the controller.
 - If the software driver creates fewer descriptors than required by the received boot data, the controller generates a Descriptor Unavailable interrupt and does not transfer any further data to system memory.

The boot operation for eMMC card devices is complete.

Boot Operation for Removable MMC4.3, MMC4.4 and MMC4.41 Cards

Removable MMC4.3, MMC4.4, and MMC4.41 cards differ with respect to eMMC in that the controller is not aware whether these cards support the boot mode of operation when plugged in. Thus, the controller must:

- Discover these cards as it would discover MMC4.0/4.1/4.2 cards for the first time
- Know the card characteristics
- Decide whether to perform a boot operation or not

For these cards, the software driver must perform the following steps:

1. Discover the card as described in [“Enumerated Card Stack” on page 11-37](#).
2. Read the EXT_CSD register of the card and examine the following fields:
 - BOOT_PARTITION_ENABLE
 - BOOT_SIZE_MULT
 - BOOT_INFO
3. If necessary, the software can manipulate the boot information in the card.
 - For more information, refer to “Access to Boot Partition” in the following specifications, as referenced in [“References” on page 11-79](#):
 - JEDEC Standard No. 84-A441
 - JEDEC Standard No. 84-A44
 - JEDEC Standard No. JESD84-A43
4. If the host processor needs to perform a boot operation at the next power-up cycle, it can manipulate the EXT_CSD register contents by using a SWITCH_FUNC command.
5. After this step, the software driver must power down the card by writing to the pwren register.
6. From here on, use the same steps as in [“Alternative Boot Operation for eMMC Card Devices” on page 11-74](#).

Alternative Boot Operation


The alternative boot operation differs from the previous boot operation in that software uses the SD/SDIO GO_IDLE_STATE command to boot the card, rather than holding down the CMD line of the card. The alternative boot operation can be performed only if bit 0 in the BOOT_INFO register is set to 1. BOOT_INFO is located at offset 228 in the EXT_CSD registers.

- For detailed information about alternative boot operation, refer to the following specifications, as referenced in [“References” on page 11-79](#):
 - JEDEC Standard No. 84-A441
 - JEDEC Standard No. 84-A44
 - JEDEC Standard No. JESD84-A43

Alternative Boot Operation for eMMC Card Devices

Figure 11-14 illustrates the sequence of steps required to perform the alternative boot operation for eMMC card devices. The detailed steps are described following the flow chart.

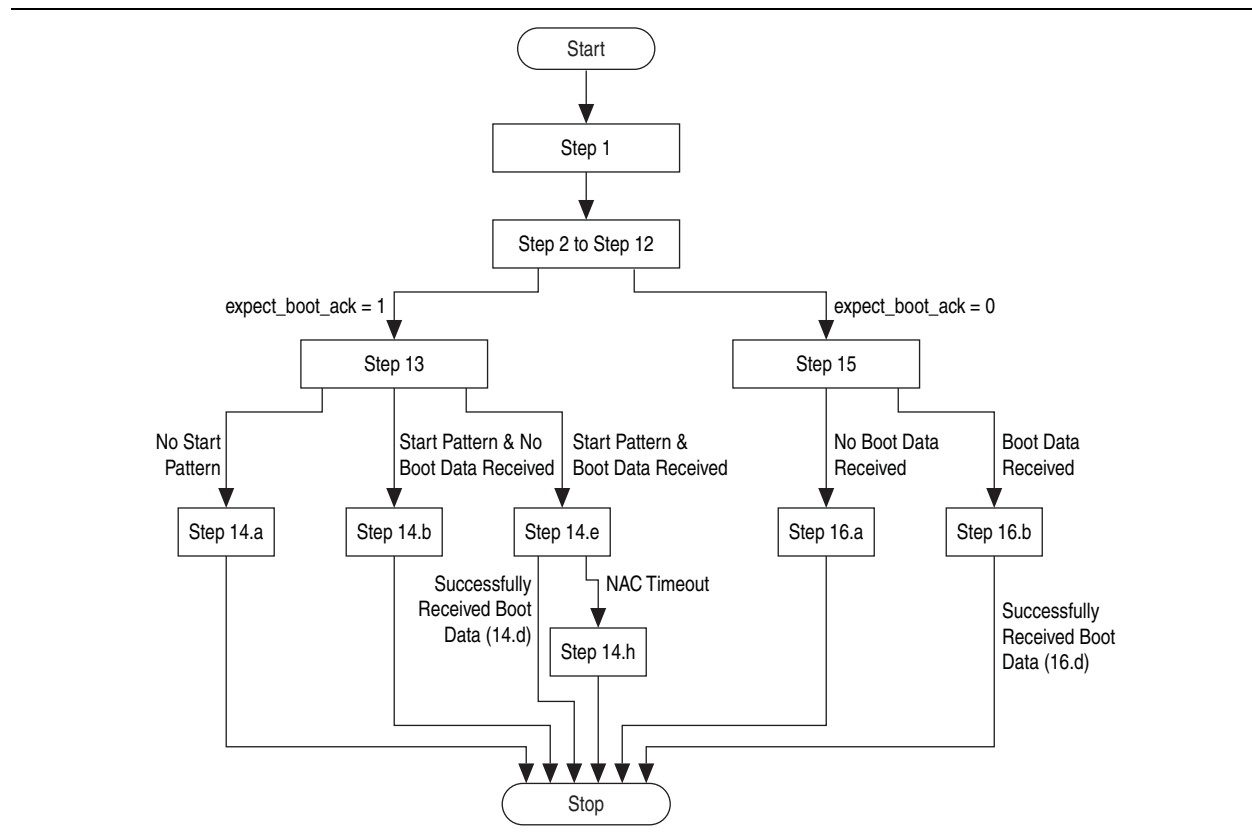Figure 11-14. Flow for eMMC Alternative Boot Operation



1. The software driver checks:
 - If the eMMC card device supports alternative boot operation (the `BOOT_INFO` bit is set to 1 in the eMMC card).
 - The `BOOT_SIZE_MULT` and `BOOT_BUS_WIDTH` values in the card device to use during the boot process.
2. The software sets the following bits:
 - Sets masks for interrupts by resetting the appropriate bits to 0 in the `intmask` register.
 - Sets the `int_enable` bit of the `ctrl` register to 1. Other bits in the `ctrl` register must be set to 0.



Altera recommends writing 0xFFFFFFFF to the `rintsts` register and `idsts` register to clear any pending interrupts before setting the `int_enable` bit. For internal DMA controller mode, the software driver needs to unmask all the relevant fields in the `idinten` register.

3. If the software driver needs to use the internal DMA controller to transfer the boot data received, it must perform the following actions:
 - Set up the descriptors as described in “Internal DMA Controller Transmission Sequences” on page 11-53 and “Internal DMA Controller Reception Sequences” on page 11-54.
 - Set the use internal DMAC bit (`use_internal_dmac`) of the `ctrl` register to 1.
4. Set the card device frequency to 400 kHz using the `clkdiv` registers. For more information, refer to “Clock Setup” on page 11-40. Ensure that the card clock is running.
5. Wait for a time that ensures that at least 74 card clock cycles have occurred on the card interface.
6. Set the `data_timeout` field of the `tmout` register equal to the card device total access time, N_{AC} .
7. Set the `blksiz` register to 0x200 (512 bytes).
8. Set the `bytcnt` register to multiples of 128K bytes, as indicated by the `BOOT_SIZE_MULT` value in the card device.
9. Set the `rx_wmark` field in the `fifoth` register. Typically, the threshold value can be set to 512, which is half the FIFO buffer depth.
10. Set the `cmdarg` register to 0xFFFFFFFF.
11. Initiate the command, by setting the `cmd` register with the following fields:
 - `start_cmd` = 1
 - `enable_boot` = 1
 - `expect_boot_ack`:
 - If a start-acknowledge pattern is expected from the card device, set `expect_boot_ack` to 1.
 - If a start-acknowledge pattern is not expected from the card device, set `expect_boot_ack` to 0.
 - `card_number` = 0
 - `data_expected` = 1
 - `cmd_index` = 0
 - Set the remainder of `cmd` register bits to 0.
12. If no start-acknowledge pattern is expected from the card device (`expect_boot_ack` set to 0) jump to step 15.
13. Wait for the Command Done interrupt.

14. This step handles the case where a start-acknowledge pattern is expected (expect_boot_ack was set to 1 in step 11).

- a. If the Boot ACK Received interrupt is not received from the controller within 50 ms of initiating the command (step 11), the start pattern was not received. The software driver must discontinue the boot process and start with normal discovery.

If internal DMA controller mode is used for the boot process, the controller performs the following steps after the Boot ACK Received timeout:

- The DMA descriptor is closed.
- The ces bit in the idsts register is set to 1, indicating the Boot ACK Received timeout.
- The ri bit of the idsts register is not set.

- b. If the Boot ACK Received interrupt is received, the software driver must clear this interrupt by writing 1 to it.

Within 0.95 seconds of the Boot ACK Received interrupt, the Boot Data Start interrupt must be received from the controller. If this does not occur, the software driver must discontinue the boot process and start with normal discovery.

If internal DMA controller mode is used for the boot process, the controller performs the following steps after the Boot ACK Received timeout:

- The DMA descriptor is closed.
- The ces bit in the idsts register is set to 1, indicating Boot Data Start timeout.
- The ri bit of the idsts register is not set.

- c. If the Boot Data Start interrupt is received, it indicates that the boot data is being received from the card device. When the DMA engine is not in internal DMA controller mode, the software driver can then initiate a data read from the controller based on the rxdr interrupt bit in the rintsts register.

In internal DMA controller mode, the DMA engine starts transferring the data from the FIFO buffer to the system memory as soon as the level specified in the rx_wmark field of the fifoth register is reached.

- d. The software driver must terminate the boot process by instructing the controller to send the SD/SDIO GO_IDLE_STATE command:

- Reset the cmdarg register to 0.
- Set the start_cmd bit of the cmd register to 1, and all other bits to 0.

- e. At the end of a successful boot data transfer from the card, the following interrupts are generated:

- The cmd bit and dto bit in the rintsts register
- The ri bit in the idsts register, in internal DMA controller mode only

- f. If an error occurs in the boot ACK pattern (0b010) or an EBE occurs:
 - The controller does not generate a Boot ACK Received interrupt.
 - The controller detects Boot Data Start and generates a Boot Data Start interrupt.
 - The controller continues to receive boot data.
 - The application must abort the boot process after receiving a Boot Data Start interrupt.
- g. In internal DMA controller mode:
 - If the software driver creates more descriptors than required by the received boot data, the extra descriptors are not closed by the controller.
 - If the software driver creates fewer descriptors than required by the received boot data, the controller generates a Descriptor Unavailable interrupt and does not transfer any further data to system memory.
- h. If N_{AC} is violated between data block transfers, a DRTO interrupt is asserted. Apart from this, if there is an error associated with the start or end bit, the SBE or EBE interrupt is also generated.

The alternative boot operation for eMMC card devices is complete. Do not execute the remaining steps (15 and 16).

15. Wait for the Command Done interrupt.

16. This step handles the case where a start-acknowledge pattern is not expected (expect_boot_ack was set to 0 in step 11).

- a. If the Boot Data Start interrupt is not received from the controller within 1 second of initiating the command (step 11), the software driver must discontinue the boot process and start with normal discovery.

In internal DMA controller mode:

- The DMA descriptor is closed.
 - The ces bit in the idsts register is set to 1, indicating Boot Data Start timeout.
 - The ri bit of the idsts register is not set.
- b. If a Boot Data Start interrupt is received, the boot data is being received from the card device. When the DMA engine is not in internal DMA controller mode, the software driver can then initiate a data read from the controller based on the rxdr interrupt bit in the rintsts register.

In internal DMA controller mode, the DMA engine starts transferring the data from the FIFO buffer to the system memory as soon as the level specified in the rx_wmark field of the fifoth register is reached.

- c. The software driver must terminate the boot process by instructing the controller to send the SD/SDIO GO_IDLE_STATE (CMD0) command:
 - Reset the cmdarg register to 0.
 - Set the start_cmd bit in the cmd register to 1, and all other bits to 0.

- d. At the end of a successful boot data transfer from the card, the following interrupts are generated:
 - The cmd bit and dto bit in the rintsts register
 - The ri bit in the idsts register, in internal DMA controller mode only
- e. In internal DMA controller mode:
 - If the software driver creates more descriptors than required by the received boot data, the extra descriptors are not closed by the controller.
 - If the software driver creates fewer descriptors than required by the received boot data, the controller generates a Descriptor Unavailable interrupt and does not transfer any further data to system memory.

The alternative boot operation for eMMC card devices is complete.

Alternative Boot Operation for MMC4.3 Cards

Removable MMC4.3 cards differ with respect to eMMC in that the controller is not aware whether these cards support the boot mode of operation. Thus, the controller must:

1. Discover these cards as it would discover MMC4.0/4.1/4.2 cards for the first time
2. Know the card characteristics
3. Decide whether to perform a boot operation or not

For these cards, the software driver must perform the following steps:

1. Discover the card as described in [“Enumerated Card Stack” on page 11-37](#).
2. Read the MMC card device’s EXT_CSD registers and examine the following fields:
 - BOOT_PARTITION_ENABLE
 - BOOT_SIZE_MULT
 - BOOT_INFO

 For more information, refer to “Access to Boot Partition” in *JEDEC Standard No. JESD84-A43*, as referenced in [“References” on page 11-79](#).
3. If the host processor needs to perform a boot operation at the next power-up cycle, it can manipulate the contents of the EXT_CSD registers in the MMC card device, by using a SWITCH_FUNC command.
4. After this step, the software driver must power down the card by writing to the pwren register.
5. From here on, use the same steps as in [“Alternative Boot Operation for eMMC Card Devices” on page 11-74](#).



Ignore the EBE if it is generated during an abort scenario.

If a boot acknowledge error occurs, the boot acknowledge received interrupt times out.

In internal DMA controller mode, the application needs to depend on the descriptor close interrupt instead of the data done interrupt.

SD/MMC Controller Address Map and Register Definitions



The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the following link:

■ [sdmmc](#)

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.



The base addresses of all modules are also listed in the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*.

References



The following industry specifications provide detailed information about the standards and protocols implemented by the SD/MMC controller.

The following specifications are available on the JEDEC website (www.jedec.org):

- JEDEC Standard No. 84-A441—*Embedded MultiMediaCard (eMMC) eMMC/Card Product Standard, High Capacity, including Reliable Write, Boot, Sleep Modes, Dual Data Rate, Multiple Partitions Supports, Security Enhancement, Background Operation and High Priority Interrupt (MMCA, 4.41)*
- JEDEC Standard No. 84-A44—*Embedded MultiMediaCard (eMMC) eMMC/Card Product Standard, High Capacity, including Reliable Write, Boot, Sleep Modes, Dual Data Rate, Multiple Partitions Supports and Security Enhancement (MMCA, 4.4)*
- JEDEC Standard No. JESD84-A43—*Embedded MultiMediaCard (eMMC) eMMC/Card Product Standard, High Capacity, including Reliable Write, Boot, and Sleep Modes (MMCA, 4.3)*

The following specifications are available on the SD Association website (www.sdcard.org):

- *Physical Layer Simplified Specification, Version 3.01—SD Specifications Part 1 Physical Layer Simplified Specification Version 3.01*
- *SDIO Simplified Specification Version 2.00—SD Specifications Part E1 SDIO Simplified Specification Version 2.00*

Document Revision History

Table 11-29 shows the revision history for this document.

Table 11-29. Document Revision History

Date	Version	Changes
November 2012	1.1	■ Added programming model section. ■ Reorganized programming information. ■ Added information about ECCs. ■ Added pin listing. ■ Updated clocks section.
January 2012	1.0	Initial release

The hardware processor system (HPS) provides a quad serial peripheral interface (SPI) flash controller for access to serial NOR flash devices. The quad SPI flash controller supports standard SPI flash devices as well as high-performance dual and quad SPI flash devices. The quad SPI flash controller is based on Cadence® Quad SPI Flash Controller (QSPI_FLASH_CTRL).

Features of the Quad SPI Flash Controller

The quad SPI flash controller supports the following features:

- Single, dual, and quad I/O commands
- Device frequencies up to 108 MHz
- Direct access and indirect access modes
- External direct memory access (DMA) controller support for indirect transfers
- Configurable polarity, phase, and delay
- Programmable write-protected regions
- Local buffering with error correction code (ECC) logic for indirect transfers
- Up to four devices
- eXecute-In-Place (XIP) flash devices

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.


Portions © 2011 Cadence Design Systems, Inc. Used with permission. All rights reserved worldwide. Cadence and the Cadence logo are registered trademarks of Cadence Design Systems, Inc. All others are the property of their respective holders.



Quad SPI Flash Controller Block Diagram and System Integration

Figure 12-1 shows the quad SPI flash controller block diagram.

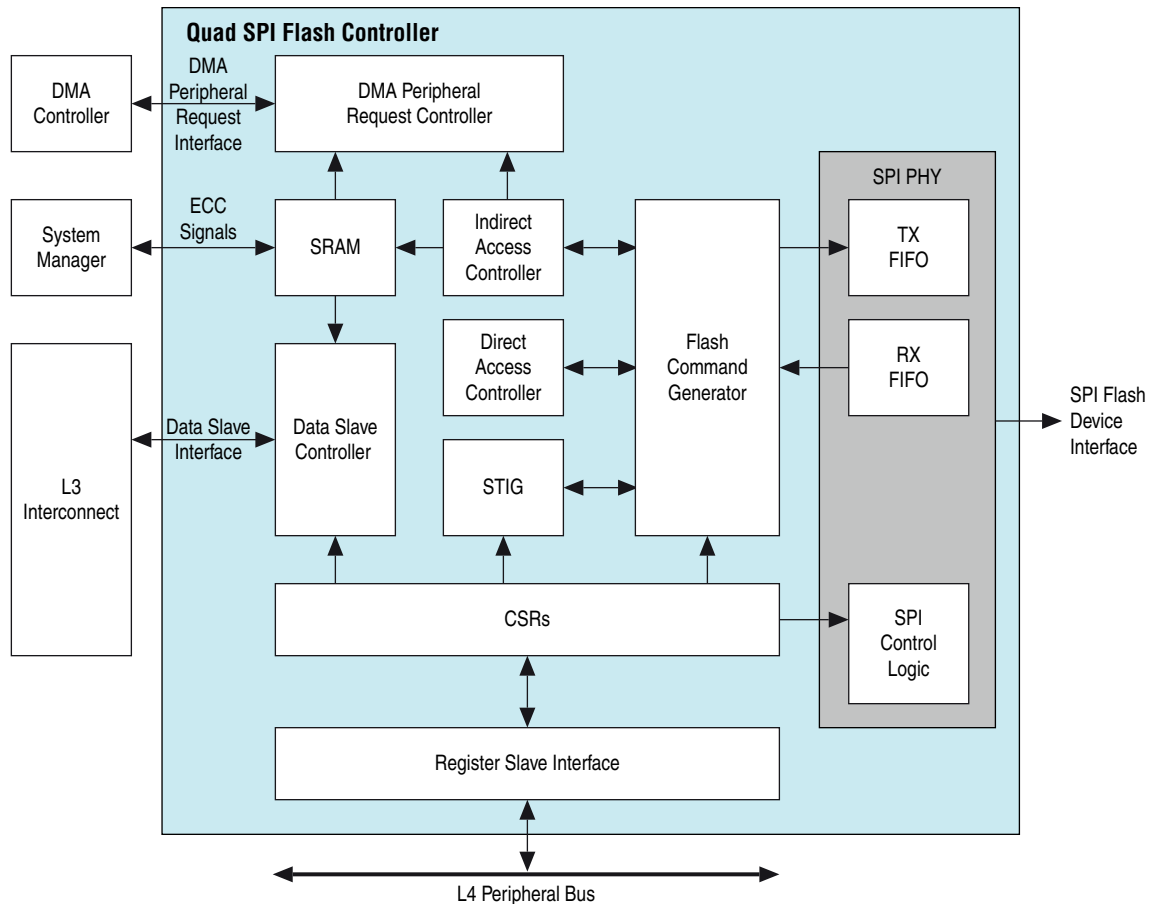Figure 12-1. Quad SPI Flash Controller Block Diagram



The quad SPI controller consists of the following blocks and interfaces:

- Register slave interface—Slave interface that provides access to the control and status registers (CSRs)
- Data slave controller—Slave interface and controller that provides the following functionality:
 - Performs data transfers to and from the level 3 (L3) interconnect
 - Validates incoming accesses
 - Performs byte or half-word reordering
 - Performs write protection
 - Forwards transfer requests to direct and indirect controller
- Direct access controller—provides memory-mapped slaves direct access to the flash memory

- Indirect access controller—provides higher-performance access to the flash memory through local buffering and software transfer requests
- Software triggered instruction generator (STIG)—generates flash commands through the flash command register (`flashcmd`) and provides low-level access to flash memory
- Flash command generator—generates flash command and address instructions based on instructions from the direct and indirect access controllers or the STIG
- DMA peripheral request controller—issues requests to the DMA peripheral request interface to communicate with the external DMA controller
- SPI PHY—serially transfers data and commands to the external SPI flash devices

Functional Description of the Quad SPI Flash Controller

This section describes the functions of the quad SPI flash controller.

Overview



Terms used in this section are defined in detail in the sections that follow.

The quad SPI flash controller uses the register slave interface to select the operation modes and configure the data slave interface for data transfers. The quad SPI flash controller uses the data slave interface for direct and indirect accesses, and the register slave interface for STIG operation and SPI legacy mode accesses.

Accesses to the data slave are forwarded to the direct or indirect access controller. If the access address is within the configured indirect address range, the access is sent to the indirect access controller.

Data Slave Interface

The quad SPI flash controller uses the data slave interface for direct, indirect, and SPI legacy mode accesses. For information about these modes, refer to the following sections.

The data slave is 32 bits wide. Byte, half-word, and word accesses are permitted.

For write accesses, only incrementing bursts are supported, and only of sizes 1, 4, 8, and 16 transfers. For read accesses, all burst types and sizes are supported.

Register Slave Interface

The quad SPI flash controller uses the register slave interface to configure the quad SPI controller through the quad SPI configuration registers, and to access flash memory under software control, through the `flashcmd` register in the STIG.


Direct Access Mode

In direct access mode, an access to the data slave triggers a read or write command to the flash memory. To use the direct access mode, enable the direct access controller with the enable direct access controller bit (`endiracc`) of the quad SPI configuration register (`cfg`).

An external master, for example a processor, triggers the direct access controller with a read or write operation to the data slave interface. The data slave exposes a 1 MB window into the flash device. You can remap this window to any 1 MB location within the flash device.

Figure 12-2 shows an example remapping.

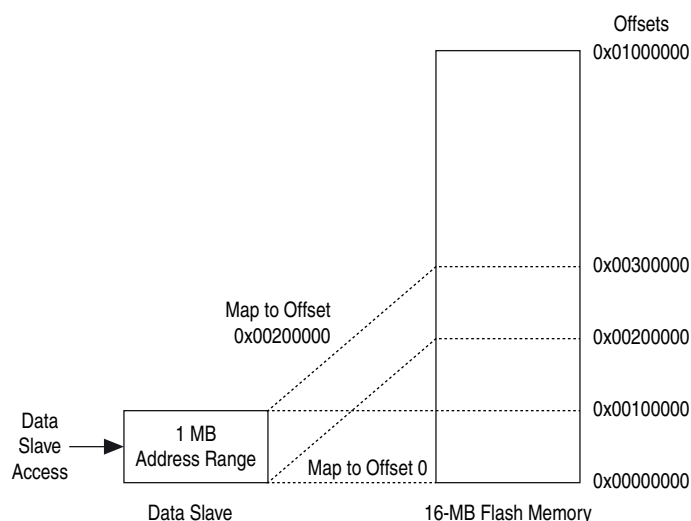Figure 12-2. Data Slave Remapping Example



To remap the data slave to access other 1 MB regions of the flash device, enable address remapping in the enable AHB address remapping field (`enahbremap`) of the `cfg` register. All incoming data slave accesses remap to the offset specified in the remap address register (`remapaddr`).

The 20 LSBs of incoming addresses are used for accessing the 1 MB region and the higher bits are ignored.



The quad SPI controller does not issue any error status for accesses that lie outside the connected flash memory space.

Indirect Access Mode

In indirect access mode, flash data is temporarily buffered in the quad SPI controller's SRAM. Software controls and triggers indirect accesses through the register slave interface. The controller transfers data through the data slave interface.

Indirect Read Operation

An indirect read operation reads data from the flash memory, places the data into the SRAM, and transfers the data to an external master through the data slave interface. The indirect read operations are controlled by the following registers:

- Indirect read transfer register (`indr`)
- Indirect read transfer watermark register (`indrwater`)
- Indirect read transfer start address register (`indrstaddr`)
- Indirect read transfer number bytes register (`indrcnt`)
- Indirect address trigger register (`indrtrig`)

These registers need to be configured prior to issuing indirect read operations. The start address needs to be defined in the `indrstaddr` register and the total number of bytes to be fetched is specified in the `indrcnt` register. Writing 1 to the start indirect read bit (`start`) of the `indr` register triggers the indirect read operation from the flash memory to populate the SRAM with the returned data.

To read data from the flash device into the SRAM, an external master issues 32-bit read transactions to the data slave interface. The address of the read access must be in the indirect address range. You can configure the indirect address through the `indrtrig` register. The external master can issue 32-bit reads until the last word of an indirect transfer. On the final read, the external master may issue a 32-bit, 16-bit or 8-bit read to complete the transfer. If there are less than four bytes of data to read on the last transfer, the external master can still issue a 32-bit read and the quad SPI controller will pad the upper bits of the response data with zeros.

Assuming the requested data is present in the SRAM at the time the data slave read is received by the quad SPI controller, the data is fetched from SRAM and the response to the read burst is achieved with minimum latency. If the requested data is not immediately present in the SRAM, the data slave interface enters a wait state until the data has been read from flash memory into SRAM. Once the data has been read from SRAM by the external master, the quad SPI controller frees up the associated resource in the SRAM. If the SRAM is full, reads on the SPI interface are backpressured until space is available in the SRAM. The quad SPI controller completes any current read burst, waits for SRAM to free up, and issues a new read burst at the address where the previous burst was terminated.

The processor can also use the SRAM fill level in the SRAM fill register (`sramfill`) to control when data should be fetched from the SRAM.

Another alternative is to use the fill level watermark of the SRAM, which you configure in the `indrwater` register. When the SRAM fill level passes the watermark level, the indirect transfer watermark interrupt is generated. You can disable the watermark feature by writing zero to the `indrwater` register.

For the final bytes of data read by the quad SPI controller and placed in the SRAM, if the watermark level is greater than zero, the indirect transfer watermark interrupt is generated even when the actual SRAM fill level has not risen above the watermark.

If the address of the read access is outside the range of the indirect trigger address, one of the following actions occurs:

- When direct access mode is enabled, the read uses direct access mode.

- When direct access mode is disabled, the slave returns an error back to the requesting master.

You can cancel an indirect operation by setting the cancel indirect read bit (cancel) of the `indrdr` register to 1. For more information, refer to [“Indirect Read Operation” on page 12-15](#).

Indirect Write Operation

An indirect write operation programs data from the SRAM to the flash memory. The indirect write operations are controlled by the following registers:

- Indirect write transfer register (`indwr`)
- Indirect write transfer watermark register (`indwrwater`)
- Indirect write transfer start address register (`indwrstaddr`)
- Indirect write transfer number bytes register (`indwrcnt`)
- `indaddrtrig` register

These registers need to be configured prior to issuing indirect write operations. The start address needs to be defined in the `indwrstaddr` register and the total number of bytes to be written is specified in the `indwrcnt` register. The start indirect write bit (start) of the `indwr` register triggers the indirect write operation from the SRAM to the flash memory.

To write data from the SRAM to the flash device, an external master issues 32-bit write transactions to the data slave. The address of the write access must be in the indirect address range. You can configure the indirect address through the `indaddrtrig` register. The external master can issue 32-bit writes until the last word of an indirect transfer. On the final write, the external master may issue a 32-bit, 16-bit or 8-bit write to complete the transfer. If there are less than four bytes of data to write on the last transfer, the external master can still issue a 32-bit write and the quad SPI controller discards the extra bytes.

The SRAM size can limit the amount of data that the quad SPI controller can accept from the external master. If the SRAM is not full at the point of the write access, the data is pushed to the SRAM with minimum latency. If the external master attempts to push more data to the SRAM than the SRAM can accept, the quad SPI controller backpressures the external master with wait states. When the SRAM resource is freed up by pushing the data from SRAM to the flash memory, the SRAM is ready to receive more data from the external master. When the SRAM holds an equal or greater number of bytes than the size of a flash page, or when the SRAM holds all the remaining bytes of the current indirect transfer, the quad SPI controller initiates a write operation to the flash memory.

The processor can also use the SRAM fill level, in the `sramfill` register, to control when to write more data into the SRAM.

Alternatively, you can configure the fill level watermark of the SRAM in the `indwrwater` register. When the SRAM fill level falls below the watermark level, an indirect transfer watermark interrupt is generated to tell software to write the next page of data to SRAM. Because the quad SPI controller initiates non-end-of-data writes to the flash memory only when the SRAM contains a full flash page of data, you must set the watermark level to a value greater than one flash page to avoid the system stalling. You can disable the watermark feature by writing zero to the `indwrwater` register.

If the address of the write access is outside the range of the indirect trigger address, one of the following actions occurs:

- When direct access mode is enabled, the write uses direct access mode.
- When direct access mode is disabled, the slave returns an error back to the requesting master.

You can cancel an indirect operation by setting the cancel indirect write bit (`cancel`) of the `indwr` register to 1.

For more information, refer to [“Indirect Write Operation” on page 12-16](#).

Consecutive Reads and Writes

It is possible to trigger two indirect operations at a time by triggering the start bit of the `indr` or `indwr` register twice in short succession. The second operation can be triggered while the first operation is in progress. For example, software may trigger an indirect read or write operation while an indirect write operation is in progress. The corresponding start and count registers must be configured properly before software triggers each transfer operation.

This approach allows for a short turnaround time between the completion of one indirect operation and the start of a second operation. Any attempt to queue more than two operations causes the indirect read reject interrupt to be generated.

Local Memory Buffer

The SRAM local memory buffer is a 128 by 32-bit (512 total bytes) memory and includes support for ECC. The ECC logic provides outputs to notify the system manager when single-bit correctable errors are detected (and corrected) and when double-bit uncorrectable errors are detected. The ECC logic also allows the injection of single- and double-bit errors for test purposes.



For more information, refer to the [System Manager](#) chapter in volume 3 of the *Arria V Device Handbook*.

The SRAM has two partitions, with the lower partition reserved for indirect read operations and the upper partition for indirect write operations. The size of the partitions is specified in the SRAM partition register (`srampart`), based on 32-bit word sizes. For example, to specify four bytes of storage, write the value 1. The value written to the indirect read partition size field (`addr`) defines the number of entries reserved for indirect read operations. For example, write the value 32 (0x20) to partition the 128-entry SRAM to 32 entries (25%) for read usage and 96 entries (75%) for write usage.

DMA Peripheral Request Controller

The DMA peripheral request controller is only used for the indirect mode of operation where data is temporarily stored in the SRAM. The quad SPI flash controller uses the DMA peripheral request interface to trigger the external DMA into performing data transfers between memory and the quad SPI controller.

There are two DMA peripheral request interfaces, one for indirect reads and one for indirect writes. The DMA peripheral request controller can issue two types of DMA requests, single or burst, to the external DMA. The number of bytes for each single or burst request is specified in the number of single bytes (`numsglreqbytes`) and number of burst bytes (`numburstreqbytes`) fields of the DMA peripheral register (`dmaper`). The DMA peripheral request controller splits the total amount of data to be transferred into a number of DMA burst and single requests by dividing the total number of bytes by the number of bytes specified in the burst request, and then dividing the remainder by the number of bytes in a single request.



When programming the DMA controller, the burst request size must match the burst request size set in the quad SPI controller to avoid quickly reaching an overflow or underflow condition.

For indirect reads, the DMA peripheral request controller only issues DMA requests after the data has been retrieved from flash memory and written to SRAM. The rate at which DMA requests are issued depends on the watermark level. The `indrwater` register defines the minimum fill level in bytes at which the DMA peripheral request controller can issue the DMA request. The higher this number is, the more data that must be buffered in SRAM before the external DMA moves the data. When the SRAM fill level passes the watermark level, the transfer watermark reached interrupt is generated.

For example, consider the following conditions:

- The total amount of data to be read using indirect mode is 256 bytes
- The SRAM watermark level is set at 128 bytes
- Software configures the burst type transfer size to 64 bytes

Under these conditions, the DMA peripheral request controller issues the first DMA burst request when the SRAM fill level passes 128 bytes (the watermark level). The DMA peripheral request controller triggers consecutive DMA burst requests as long as there is sufficient data in the SRAM to perform burst type requests. In this example, DMA peripheral request controller can issue at least two consecutive DMA burst requests to transfer a total of 128 bytes. If there is sufficient data in the SRAM, the DMA peripheral request controller requests the third DMA burst immediately. Otherwise the DMA peripheral request controller waits for the SRAM fill level to pass the watermark level again to trigger the next burst request. When the watermark level is triggered, there is sufficient data in the SRAM to perform the third and fourth burst requests to complete the entire transaction.

For the indirect writes, the DMA peripheral request controller issues DMA requests immediately after the transfer is triggered and continues to do so until the entire indirect write transfer has been transferred. The rate at which DMA requests are issued depends on the watermark level. The `indwrwater` register defines the maximum fill level in bytes at which the controller can issue the first DMA burst or single request. When the SRAM fill level falls below the watermark level, the transfer watermark reached interrupt is generated. When there is one flash page of data in the SRAM, the quad SPI controller initiates the write operation from SRAM to the flash memory.

Software can disable the DMA peripheral request interface with the `endma` field of the `cfg` register. If a master other than the DMA performs the data transfer for indirect operations, the DMA peripheral request interface must be disabled. By default, the indirect watermark registers are set to zero, which means the DMA peripheral request controller can issue DMA request as soon as possible.



For more information about the HPS DMA controller, refer to the [DMA Controller](#) chapter in volume 3 of the *Arria V Device Handbook*.

STIG Operation

The STIG provides software a method to access the flash device registers directly. The `flashcmd` register uses the following parameters to define the command to be issued to the flash device:

- Instruction opcode
- Number of address bytes
- Number of dummy bytes
- Number of write data bytes
- Write data
- Number of read data bytes

The address is specified through the flash command address register (`flashcmdaddr`). Once these settings have been specified, software can trigger the command with the execute command field (`execcmd`) of the `flashcmd` register and wait for its completion by polling the command execution status bit (`cmdexecstat`) of the `flashcmd` register. A maximum of eight data bytes may be read from the flash command read data lower (`flashcmdrddatalo`) and flash command read data upper (`flashcmdrddataup`) registers or written to the flash command write data lower (`flashcmdwrdatao`) and flash command write data upper (`flashcmdwrdataup`) registers per command.

Commands issued through the STIG have a higher priority than all other read accesses and therefore interrupt any read commands being requested by the direct or indirect controllers. However, the STIG does not interrupt a write sequence that may have been issued through the direct or indirect access controller. In these cases, it might take a long time for the `cmdexecstat` bit of the `flashcmd` register indicates the operation is complete.



Altera recommends using the STIG instead of the SPI legacy mode to access the flash device registers and perform erase operations.

SPI Legacy Mode

SPI legacy mode allows software to access the internal TX FIFO and RX FIFO buffers directly, thus bypassing the direct, indirect and STIG controllers. Software accesses the TX FIFO and RX FIFO buffers by writing any value to any address through the data slave while legacy mode is enabled. You can enable legacy mode with the legacy IP mode enable bit (`enlegacyip`) of the `cfg` register.

Legacy mode allows the user to issue any flash instruction to the flash device, but imposes a heavy software overhead in order to manage the fill levels of the FIFO buffers effectively. The legacy SPI mode is bidirectional in nature, with data continuously being transferred both directions while the chip select is enabled. If the driver only needs to read data from the flash device, dummy data must be written to ensure the chip select stays active, and vice versa for write transactions.

For example, to perform a basic read of four bytes to a flash device that has three address bytes, software must write a total of eight bytes to the TX FIFO buffer. The first byte would be the instruction opcode, the next three bytes are the address, and the final four bytes would be dummy data to ensure the chip select stays active while the read data is returned. Similarly, because eight bytes were written to the TX FIFO buffer, software should expect eight bytes to be returned in the RX FIFO buffer. The first four bytes of this would be discarded, leaving the final four bytes holding the data read from the device.

Because the TX FIFO and RX FIFO buffers are four bytes deep each, software must maintain the FIFO buffer levels to ensure the TX FIFO buffer does not underflow and the RX FIFO buffer does not overflow. Interrupts are provided to indicate when the fill levels pass the watermark levels, which are configurable through the TX threshold register (`txtresh`) and RX threshold register (`rxtresh`).

Configuring the Flash Device

For read and write accesses, software must initialize the device read instruction register (`devrd`) and the device write instruction register (`devwr`). These registers include fields to initialize the instruction opcodes that should be used as well as the instruction type, and whether the instruction uses single, dual or quad pins for address and data transfer. To ensure the quad SPI controller can operate from a reset state, the opcode registers reset to opcodes compatible with single I/O flash devices.

The quad SPI flash controller uses the instruction transfer width field (`instwidth`) of the `devrd` register to set the instruction transfer width for both reads and writes. There is no `instwidth` field in the `devwr` register. If instruction type is set to dual or quad mode, the address transfer width (`addrwidth`) and data transfer width (`datawidth`) fields of both registers are redundant because the address and data type is based on the instruction type. Thus, software can support the less common flash instructions where the opcode, address, and data are sent on two or four lanes. For most

instructions, the opcodes are sent serially to the flash device, even for dual and quad instructions. One of the flash devices that supports instructions that can send the opcode over two or four lanes is the Micron N25Q128. For reference, [Table 12-1](#) shows how software should configure the quad SPI controller for each specific read and write instruction supported by the Micron N25Q128 device.

Table 12-1. Quad SPI Configuration for Micron N25Q128 Device

Instruction	Lanes Used By Opcode	Lanes Used to Send Address	Lanes Used to Send Data	instwidth Value	addrwidth Value	datawidth Value
Read Instructions						
Read	1	1	1	0	0	0
Fast read	1	1	1	0	0	0
Dual output fast read (DOFR)	1	1	2	0	0	1
Dual I/O fast read (DIOFR)	1	2	2	0	1	1
Quad output fast read (QOFR)	1	1	4	0	0	2
Quad I/O fast read (QIOFR)	1	4	4	0	2	2
Dual command fast read (DCFR)	2	2	2	1	Don't care	Don't care
Quad command fast read (QCFR)	4	4	4	2	Don't care	Don't care
Write Instructions						
Page program	1	1	1	0	0	0
Dual input fast program (DIFP)	1	1	2	0	0	1
Dual input extended fast program (DIEFP)	1	2	2	0	1	1
Quad input fast program (QIFP)	1	1	4	0	0	2
Quad input extended fast program (QIEFP)	1	4	4	0	2	2
Dual command fast program (DCFP)	2	2	2	1	Don't care	Don't care
Quad command fast program (QCFP)	4	4	4	2	Don't care	Don't care

XIP Mode

The quad SPI controller supports XIP mode, if the flash devices support XIP mode. Depending on the flash device, XIP mode puts the flash device in read-only mode, reducing command overhead.

The quad SPI controller must instruct the flash device to enter XIP mode by sending the mode bits. When the enter XIP mode on next read bit (enterxipnextrd) of the cfg register is set to 1, the quad SPI controller and the flash device are ready to enter XIP mode on the next read instruction. When the enter XIP mode immediately bit (enterxipimm) of the cfg register is set to 1, the quad SPI controller and flash device enter XIP mode immediately.

When the enterxipnextrd or enterxipimm bit of the cfg register is set to 0, the quad SPI controller and flash device exit XIP mode on the next read instruction.

For more information, refer to [“XIP Mode Operations” on page 12-17](#).

Write Protection

You can program the controller to write protect a specific region of the flash device. The protected region is defined as a set of blocks, specified by a starting and ending block. Writing to an area of protected flash region memory generates an error and triggers an interrupt.

You define the block size by specifying the number of bytes per block through the number of bytes per block field (`bytespersubsector`) of the device size register (`devsz`). The lower write protection register (`lowwrprot`) specifies the first flash block in the protected region. The upper write protection register (`upwrprot`) specifies the last flash block in the protected region.

The write protection enable bit (`en`) of the write protection register (`wrprot`) enables and disables write protection. The write protection inversion bit (`inv`) of the `wrprot` register flips the definition of protection so that the region specified by `lowwrprt` and `upwrprt` is unprotected and all flash memory outside that region is protected.

Data Slave Sequential Access Detection

The quad SPI flash controller detects sequential accesses to the data slave interface by comparing the current access with the previous access. An access is sequential when it meets the following conditions:

- The address of the current access sequentially follows the address of the previous access.
- The direction of the current access (read or write) is the same as previous access.
- The size of the current access (byte, half-word, or word) is the same as previous access.

When the access is detected as nonsequential, the sequential access to the flash device is terminated and a new sequential access begins. Altera recommends accessing the data slave sequentially. Sequential access has less command overhead, and therefore, increases data throughput.

Clocks

There are two clock inputs to the quad SPI controller (`l4_mp_clk` and `qspi_clk`) and one clock output (`sclk_out`). The quad SPI flash controller uses the `l4_mp_clk` clock to clock the data slave transfers and register slave accesses. The `qspi_clk` clock is the reference clock for the quad SPI controller and is used to serialize the data and drive the external SPI interface. The `sclk_out` clock is the clock source for the connected flash devices.

The `qspi_clk` clock must be greater than two times the `l4_mp_clk`. The `sclk_out` clock is derived by dividing down the `qspi_clk` clock by the baud rate divisor field (`bauddiv`) of the `cfg` register.



For more information, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Resets

A single reset signal (`qspi_flash_rst_n`) is provided as an input to the quad SPI controller. The reset manager drives the signal on a cold or warm reset.



For more information, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Interrupts

All interrupt sources are combined to create a single level-sensitive, active-high interrupt (`qspi_intr_in`). Software can determine the source of the interrupt by reading the interrupt status register (`irqstat`). By default, the interrupt source is cleared when software writes the interrupt status register. The interrupts are individually maskable through the interrupt mask register (`irqmask`). Table 12-2 lists the interrupt sources in the `irqstat` register.

Table 12-2. Interrupt Sources in the `irqstat` Register

Interrupt Source	Description
Underflow detected	When 0, no underflow has been detected. When 1, the data slave write data is being supplied too slowly. This situation can occur when data slave write data is being supplied too slowly to keep up with the requested write operation. This bit is reset only by a system reset and cleared to zero only when the register is written to.
Indirect operation complete	The controller has completed a triggered indirect operation.
Indirect read reject	An indirect operation was requested but could not be accepted because two indirect operations are already in the queue.
Protected area write attempt	A write to a protected area was attempted and rejected.
Illegal data slave access detected	An illegal data slave access has been detected. Data slave wrapping bursts and the use of split and retry accesses can cause this interrupt. It is usually an indicator that soft masters in the FPGA fabric are attempting to access the HPS in an unsupported way.
Transfer watermark reached	The indirect transfer watermark level has been reached.
Receive overflow	This condition occurs only in legacy SPI mode. When 0, no overflow has been detected. When 1, an overflow to the RX FIFO buffer has occurred. This bit is reset only by a system reset and cleared to zero only when this register is written to. If a new write to the RX FIFO buffer occurs at the same time as a register is read, this flag remains set to 1.
TX FIFO not full	This condition occurs only in legacy SPI mode. When 0, the TX FIFO buffer is full. When 1, the TX FIFO buffer is not full.
TX FIFO full	This condition occurs only in legacy SPI mode. When 0, the TX FIFO buffer is not full. When 1, the TX FIFO buffer is full.
RX FIFO not empty	This condition occurs only in legacy SPI mode. When 0, the RX FIFO buffer is empty. When 1, the RX FIFO buffer is not empty.

Table 12-2. Interrupt Sources in the irqstat Register

Interrupt Source	Description
RX FIFO full	This condition occurs only in legacy SPI mode. When 0, the RX FIFO buffer is not full. When 1, the RX FIFO buffer is full.
Indirect read partition overflow	Indirect Read Partition of SRAM is full and unable to immediately complete indirect operation

Interface Signals

The quad SPI controller provides four chip select outputs to allow control of up to four external quad SPI flash devices. The outputs serve different purposes depending on whether the device is used in single, dual, or quad operation mode. Table 12-3 lists the I/O pin use of the quad SPI controller interface signals for each operation mode.

Table 12-3. Interface Signals

Signal	Mode	Direction	Function
data[0]	Single	Output	Data output 0
	Dual or quad	Bidirectional	Data I/O 0
data[1]	Single	Input	Data input 0
	Dual or quad	Bidirectional	Data I/O 1
data[2]	Single or dual	Output	Active low write protect
	Quad	Bidirectional	Data I/O 2
data[3]	Single, dual, or quad	Bidirectional	Data I/O 3
ss_n[0]	Single, dual, or quad	Output	Active low slave select 0
ss_n[1]			Active low slave select 1
ss_n[2]			Active low slave select 2
ss_n[3]			Active low slave select 3
sclk			Serial clock

Quad SPI Flash Controller Programming Model

This section describes the programming model for the quad SPI controller.

Setting Up the Quad SPI Flash Controller

The following steps describe how to set up the quad SPI controller:

1. Wait until any pending operation has completed.
2. Disable the quad SPI controller with the quad SPI enable field (en) of the cfg register.
3. Update the instwidth field of the devrd register with the instruction type you wish to use for indirect and direct writes and reads.
4. If mode bit enable bit (enmodebits) of the devrd register is enabled, update the mode bit register (modebit).

5. Update the `devsz` register as needed. Parts or all of this register might have been updated after initialization. The number of address bytes is a key configuration setting required for performing reads and writes. The number of bytes per page is required for performing any write. The number of bytes per device block is only required if the write protect feature is used.
6. Update the device delay register (`delay`). This register allows the user to adjust how the chip select is driven after each flash access. Each device may have different timing requirements. If the serial clock frequency is increased, these timing requirements become more critical. The numbers specified in this register are based on the period of the `qspi_clk` clock.

For example, on some devices need 50 ns minimum time before the slave select can be reasserted after it has been deasserted. When the device is operating at 100 MHz, the clock period is 10 ns, so 40 ns extra is required. If the `qspi_clk` clock is running at 400 MHz (2.5 ns period), specify a value of at least 16 to the clock delay for chip select deassert field (`nss`) of the `delay` register.
7. Update the `remapaddr` register as needed. This register only affects direct access mode.
8. Set up and enable the write protection registers (`wrprot`, `lowwrprot`, and `upwrprot`), when write protection is required.
9. Enable required interrupts through the `irqmask` register.
10. Set up the `bauddiv` field of the `cfg` register to define the required clock frequency of the target device.
11. Update the read data capture register (`rddatacap`) as needed. This register delays when the read data is captured and can help when the read data path from the device to the quad SPI controller is long and the device clock frequency is high.
12. Enable the quad SPI controller with the `en` field of the `cfg` register.

Indirect Read Operation

The following steps describe the general software flow to set up the quad SPI controller for indirect read operation with the DMA disabled:

1. Perform the steps described in [“Setting Up the Quad SPI Flash Controller” on page 12-14](#).
2. Set the flash memory start address in the `indrdstaddr` register.
3. Set the number of bytes to be transferred in the `indrdcnt` register.
4. Set the indirect transfer trigger address in the `indaddrtrig` register.
5. Set up the required interrupts through the `irqmask` register.
6. If the watermark level is used, set the SRAM watermark level through the `indrwater` register.
7. Start the indirect read operation by setting the `start` field of the `indr` register to 1.
8. Either use the watermark level interrupt or poll the SRAM fill level in the `sramfill` register to determine when there is sufficient data in the SRAM.

9. Issue a read transaction to the indirect address to access the SRAM. Repeat step 8 if more read transactions are needed to complete the indirect read transfer.
10. Either use the indirect complete interrupt to determine when the indirect read operation has completed or poll the completion status of the indirect read operation through the indirect completion status bit (`ind_ops_done_status`) of the `indr` register.

The following steps describe the general software flow to set up the quad SPI controller for indirect read operation with the DMA enabled:

1. Perform the steps described in [“Setting Up the Quad SPI Flash Controller” on page 12-14](#).
2. Set the flash memory start address in the `indrstaddr` register.
3. Set the number of bytes to be transferred in the `indrcnt` register.
4. Set the indirect transfer trigger address in the `indaddrtrig` register.
5. Set the number of bytes for single and burst type DMA transfers in the `dmaper` register.
6. Optionally set the SRAM watermark level in the `indrwater` register to control the rate DMA requests are issued.
7. Start an indirect read access by setting the `start` field of the `indr` register to 1.
8. Either use the indirect complete interrupt to determine when the indirect read operation has completed or poll the completion status of the indirect read operation through the `ind_ops_done_status` field of the `indr` register.

Indirect Write Operation

The following steps describe the general software flow to set up the quad SPI controller for indirect write operation with the DMA disabled:

1. Perform the steps described in [“Setting Up the Quad SPI Flash Controller” on page 12-14](#).
2. Set the flash memory start address in the `indwrstaddr` register.
3. Set up the number of bytes to be transferred in the `indwrcnt` register.
4. Set the indirect transfer trigger address in the `indaddrtrig` register.
5. Set up the required interrupts through the interrupt mask register (`irqmask`).
6. Optionally set the SRAM watermark level in the `indwrwater` register to control the rate DMA requests are issued. The value set must be greater than one flash page. For more information, refer to [“Indirect Write Operation” on page 12-6](#).
7. Start the indirect write operation by setting the `start` field of the `indwr` register to 1.
8. Either use the watermark level interrupt or poll the SRAM fill level in the `sramfill` register to determine when there is sufficient space in the SRAM.
9. Issue a write transaction to the indirect address to write one flash page of data to the SRAM. Repeat step 8 if more write transactions are needed to complete the indirect write transfer. The final write may be less than one page of data.

The following steps describe the general software flow to set up the quad SPI controller for indirect write operation with the DMA enabled:

1. Perform the steps described in [“Setting Up the Quad SPI Flash Controller” on page 12-14](#).
2. Set the flash memory start address in the `indwrstaddr` register.
3. Set the number of bytes to be transferred in the `indcnt` field of the `indwr` register.
4. Set the indirect transfer trigger address in the `indaddrtrig` register.
5. Set the number of bytes for single and burst type DMA transfers in the `dmaper` register.
6. Optionally set the SRAM watermark level in the `indwrwater` register to control the rate DMA requests are issued. The value set must be greater than one flash page. For more information, refer to [“Indirect Write Operation” on page 12-6](#).
7. Start the indirect write access by setting the `start` field of the `indirwr` register to 1.
8. Either use the indirect complete interrupt to determine when the indirect write operation has completed or poll the completion status of the indirect write operation through the `ind_ops_done_status` field of the `indwr` register.

XIP Mode Operations

This section describes entering and exiting XIP mode. XIP mode is supported in most SPI flash devices. However, flash device manufacturers do not use a consistent standard approach. Most use signature bits that are sent to the device immediately following the address bytes. Some devices use signature bits and also require a flash device configuration register write to enable XIP mode.

Entering XIP Mode

The following sections describe the software steps to enter XIP mode for various types of flash devices.

Micron Quad SPI Flash Devices with Support for Basic-XIP

To enter XIP mode in a Micron quad SPI flash device with support for Basic-XIP, perform the following steps:

1. Save the values in the mode bits, if you intend to restore them upon exit.
2. Disable the direct access controller and indirect access controller to ensure no new read or write accesses are sent to the flash device.
3. Set the XIP mode bits in the `modebit` register to 0x80.
4. Enable the quad SPI controller's XIP mode by setting the `enterxipnextrd` bit of the `cfg` register to 1.
5. Re-enable the direct access controller and, if required, the indirect access controller.

Micron Quad SPI Flash Devices without Support for Basic-XIP

To enter XIP mode in a Micron quad SPI flash device without support for Basic-XIP, perform the following steps:

1. Save the values in the mode bits, if you intend to restore them upon exit.

2. Disable the direct access controller and indirect access controller to ensure no new read or write accesses will be sent to the flash device.
3. Ensure XIP mode is enabled in the flash device by setting the volatile configuration register (VCR) bit 3 to 1. Use the `flashcmd` register to issue the VCR write command.
4. Set the XIP mode bits in the `modebit` register to 0x00.
5. Enable the quad SPI controller's XIP mode by setting the `enterxipnextrd` bit of the `cfg` register to 1.
6. Re-enable the direct access controller and, if required, the indirect access controller.

Winbond Quad SPI Flash Devices

To enter XIP mode in a Winbond quad SPI flash device, perform the following steps:

1. Save the values in the mode bits, if you intend to restore them upon exit.
2. Disable the direct access controller and indirect access controller to ensure no new read or write accesses are sent to the flash device.
3. Set the XIP mode bits in the `modebit` register to 0x20.
4. Enable the quad SPI controller's XIP mode by setting the `enterxipnextrd` bit of the `cfg` register to 1.
5. Re-enable the direct access controller and, if required, the indirect access controller.

Spansion Quad SPI Flash Devices

To enter XIP mode a Spansion quad SPI flash device, perform the following steps:

1. Save the values in the mode bits, if you intend to restore them upon exit.
2. Disable the direct access controller and indirect access controller to ensure no new read or write accesses are sent to the flash device.
3. Set the XIP mode bits in the `modebit` register to 0xA0.
4. Enable the quad SPI controller's XIP mode by setting the `enterxipnextrd` bit of the `cfg` register to 1.
5. Re-enable the direct access controller and, if required, the indirect access controller.

Exiting XIP Mode

To exit XIP mode, perform the following steps:

1. Disable the direct access controller and indirect access controller to ensure no new read or write accesses are sent to the flash device.
2. Restore the mode bits to the values before entering XIP mode, depending on the flash device and manufacturer.
3. Set the `enterxipnextrd` bit of the `cfg` register to 0.

The flash device must receive a read instruction before it can disable its internal XIP mode state. Thus, XIP mode internally stays active until the next read instruction is serviced. Ensure that XIP mode is disabled before the end of any read sequence.

XIP Mode at Power on Reset

Some flash devices can be XIP-enabled as a nonvolatile configuration setting, allowing the flash device to enter XIP mode at power-on reset (POR) without software intervention. Software cannot discover the XIP state at POR through flash status register reads because an XIP-enabled flash device can only be accessed through the XIP read operation. If you know the device will enter XIP mode at POR, have your initial boot software configure the `modebit` register and set the `enterxipimm` bit of the `cfg` register to 1.

If you do not know in advance whether or not the device will enter XIP mode at POR, have your initial boot software issue an XIP mode exit command through the `flashcmd` register, then follow the steps in “[Entering XIP Mode](#)” on page 12-17. Software must be aware of the mode bit requirements of the device, because XIP mode entry and exit varies by device.

Quad SPI Flash Controller Address Map and Register Definitions

 The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the following links for the module instance:

- [qspiregs](#)
- [qspidata](#)

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.

 The base addresses of all modules are also listed in the [Introduction to the Hard Processor System](#) chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

[Table 12-4](#) shows the revision history for this document.

Table 12-4. Document Revision History

Date	Version	Changes
November 2012	1.2	Minor updates.
May 2012	1.1	Added block diagram and system integration, functional description, programming model, and address map and register definitions sections.
January 2012	1.0	Initial release.

This section includes the following chapters:

- Chapter 13, FPGA Manager
- Chapter 14, System Manager
- Chapter 15, Scan Manager
- Chapter 16, DMA Controller
- Chapter 17, Ethernet Media Access Controller
- Chapter 18, USB 2.0 OTG Controller
- Chapter 19, SPI Controller
- Chapter 20, I²C Controller
- Chapter 21, UART Controller
- Chapter 22, General-Purpose I/O Interface
- Chapter 23, Timer
- Chapter 24, Watchdog Timer



For information about the revision history for chapters in this section, refer to “Document Revision History” in each individual chapter.

The FPGA manager in the hard processor system (HPS) manages and monitors the FPGA portion of the system on a chip (SoC) FPGA device. The FPGA manager can configure the FPGA fabric from the HPS, monitor the state of the FPGA, and drive or sample signals to or from the FPGA fabric.

Features of the FPGA Manager


The FPGA manager provides the following functionality and features:

- Full configuration and partial reconfiguration of the FPGA portion of the SoC device
- Drives 32 general-purpose output signals to the FPGA fabric
- Receives 32 general-purpose input signals from the FPGA fabric
- Receives two boot handshaking input signals from the FPGA fabric (used when the HPS boots from the FPGA)
- Monitors the FPGA configuration and power status
- Generates interrupts based on the FPGA status changes
- Can reset the FPGA

FPGA Manager Block Diagram and System Integration

Figure 13-1 shows a block diagram of the FPGA manager.

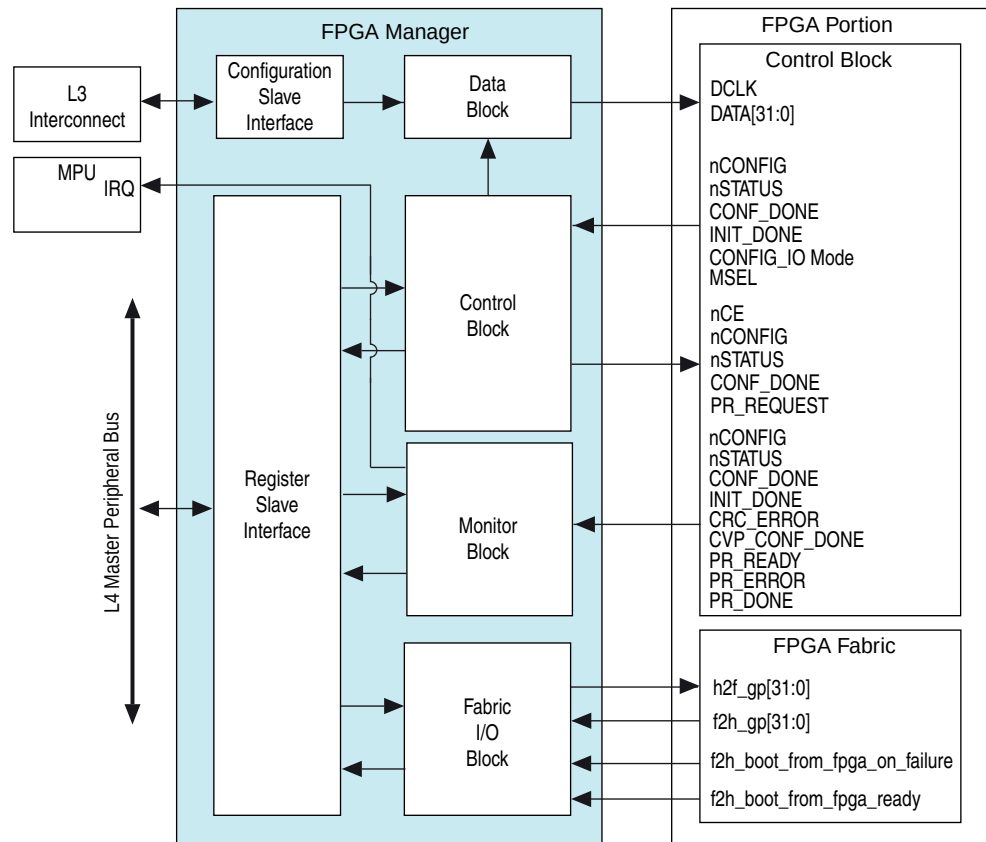Figure 13-1. FPGA Manager Block Diagram



The register slave interface connects to the level 4 (L4) master peripheral bus for control and status register (CSR) access. The configuration slave interface connects to the level 3 (L3) interconnect for the microprocessor unit (MPU) subsystem or other masters to write the FPGA configuration image to the FPGA control block (CB) when configuring the FPGA portion of the SoC device.

The general-purpose I/O and boot handshaking input interfaces connect to the FPGA fabric. The FPGA manager also connects to the FPGA CB signals to monitor and control the FPGA portion of the device.

The FPGA manager consists of the following blocks:

- Configuration slave interface—accepts and transfers the configuration image to the data interface.
- Register slave interface—accesses the CSRs in the FPGA manager.
- Data—accepts the FPGA configuration image from the configuration slave interface and sends it to the FPGA CB.
- Control—controls the FPGA CB.

- Monitor—monitors the configuration signals in the FPGA CB and sends interrupts to the MPU subsystem.
- Fabric I/O—reads and writes signals from or to the FPGA fabric.

Functional Description of the FPGA Manager

FPGA Manager Building Blocks

The FPGA manager has the following blocks to monitor the signals coming from the FPGA portion of the device.

Fabric I/O

The fabric I/O block contains the following registers to allow simple low-latency communication between the HPS and the FPGA fabric:

- General-purpose input register (gpi)
- General-purpose output register (gpo)
- Boot handshaking input register (misci)

These registers are only valid when the FPGA is in user mode. Reading from these registers while the FPGA is not in user mode provides undefined data.

The 32 general-purpose input signals from the FPGA fabric are read by reading the gpi register using the register slave interface. The 32 general-purpose output signals to the FPGA fabric are generated from writes to the gpo register. For more information about FPGA manager registers, refer to [“FPGA Manager Address Map and Register Definitions” on page 13-7](#).

The boot handshaking input signals from the FPGA fabric are read by reading the misci register. The f2h_boot_from_fpga_ready signal indicates to the boot ROM when logic in the FPGA fabric is ready to accept configuration interface requests from the HPS-to-FPGA bridge when the boot ROM is booting from the FPGA. The f2h_boot_from_fpga_on_failure signal serves as a fallback in the event that the boot ROM code fails to boot from the primary boot flash device. In this case, the boot ROM code checks these two handshaking signals to determine if it should use the boot code hosted in the FPGA memory as the next stage in the boot process.

There is no interrupt support for this block.

Monitor

The monitor block is an instance of the Synopsys® DesignWare® GPIO IP (DW_apb_gpio), which is a separate instance of the IP that comprises the three HPS GPIO interfaces. The monitor block connects to the configuration signals in the FPGA. This block monitors key signals related to FPGA configuration such as INIT_DONE, CRC_ERROR, and PR_DONE. Software configures the monitor block through the register slave interface, and can either poll FPGA signals or be interrupted. The **mon** address map within the FPGA manager register address map contains the monitor registers. For more information about FPGA manager registers, refer to [“FPGA Manager Address Map and Register Definitions” on page 13-7](#).

You can program the FPGA manager to treat any of the monitor signals as interrupt sources. Independent of the interrupt source type, the monitor block always drives an active-high level interrupt to the MPU. Each interrupt source can be of the following types:

- Active-high level
- Active-low level
- Rising edge
- Falling edge

FPGA Configuration

You can configure the FPGA using an external device or through the HPS. This section only covers configuring the FPGA through the HPS.



For information about configuring the FPGA using an external device, refer to the *Configuration, Design Security, and Remote System Upgrades in Arria V Devices* chapter in volume 1 of the *Arria V Device Handbook*.

The FPGA CB uses the FPGA mode select (MSEL) pins to determine which configuration scheme to use. The MSEL pins must be tied to the appropriate values for the configuration scheme. [Table 13-1](#) lists supported MSEL values when the FPGA is configured by the HPS.

HPS software sets the clock-to-data ratio field (`cdratio`) and configuration data width bit (`cfgwidth`) in the control register (`ctrl`) to match the MSEL pins. The `cdratio` field and `cfgwidth` bit must be set before the start of configuration.

The FPGA manager connects to the configuration logic in the FPGA portion of the device using a mode similar to how external logic (for example, MAX II or an intelligent host) configures the FPGA in fast passive parallel (FPP) mode. FPGA configuration through the HPS supports all the capabilities of FPP mode, including the following items:

- FPGA configuration
- Partial FPGA reconfiguration
- FPGA I/O configuration, followed by PCI Express® (PCIe®) configuration of the remainder of FPGA
- External single event upset (SEU) scrubbing
- Decompression
- Advanced Encryption Standard (AES) encryption
- FPGA DCLK clock used for initialization phase clock



The FPGA manager supports a data width of 32 or 16 bits. When configuring the FPGA fabric from the HPS, Altera recommends that you always set the data width to 32 bits. For partial reconfiguration, the 16-bit data width is the only option.

Table 13–1 lists the supported configuration schemes and their respective MSEL and control register settings when the HPS configures the FPGA.

Table 13–1. Configuration Schemes for FPGA Configuration by the HPS

Configuration Scheme	Compression Feature	Design Security Feature	POR Delay ⁽²⁾	MSEL[4..0] ⁽³⁾	cfgwidth	cdratio	Supports Partial Reconfiguration
FPP ×16	Disabled	AES Disabled	Fast	00000	0	1	Yes
			Standard	00100	0	1	No
	Disabled	AES Enabled	Fast	00001	0	2	Yes
			Standard	00101	0	2	No
	Enabled	Optional ⁽¹⁾	Fast	00010	0	4	Yes
			Standard	00110	0	4	No
FPP ×32	Disabled	AES Disabled	Fast	01000	1	1	No
			Standard	01100	1	1	No
	Disabled	AES Enabled	Fast	01001	1	4	No
			Standard	01101	1	4	No
	Enabled	Optional ⁽¹⁾	Fast	01010	1	8	No
			Standard	01110	1	8	No

Notes to Table 13–1:

- (1) You can select to enable or disable this feature.
- (2) For information about POR delay, refer to the *Configuration, Design Security, and Remote System Upgrades in Arria V Devices* chapter in volume 1 of the Arria V Device Handbook.
- (3) Other MSEL values are allowed when the FPGA is configured from a non-HPS source. For information, refer to the *Configuration, Design Security, and Remote System Upgrades in Arria V Devices* chapter in volume 1 of the Arria V Device Handbook.

Configuring the FPGA portion of the SoC device comprises the following phases:

1. Power up phase
2. Reset phase
3. Configuration phase
4. Initialization phase
5. User mode

Power Up Phase

In this phase, the V_{CC} is ramping up and has yet to reach normal levels. This phase completes when the on-chip voltage detector determines that the V_{CC} has reached normal levels.

Reset Phase

The FPGA manager resets the FPGA portion of the SoC device when the FPGA configuration signal (nCONFIG) is driven low. The HPS configures the FPGA by writing a 1 to the nconfigpull bit of the ctrl register. This action causes the FPGA portion of the device to reset and perform the following actions:

1. Clear the FPGA configuration RAM bits

2. Tri-state all FPGA user I/O pins
3. Pull the nSTATUS and CONF_DONE pins low
4. Use the FPGA CB to read the values of the MSEL pins to determine the configuration scheme

The nconfigpull bit of the ctrl register needs to be set to 0 when the FPGA has successfully entered the reset phase. Setting the bit releases the FPGA from the reset phase and transitions to the configuration phase.



You must set the cdratio and cfgwidth bits of the ctrl register appropriately before the FPGA enters the reset phase.

Configuration Phase

To configure the FPGA using the HPS, software sets the axicfggen bit of the ctrl register to 1. Software then sends configuration data to the FPGA by writing data to the write data register (data) in the FPGA manager module configuration data address map. Software polls the CONF_DONE pin by reading the gpio_instatus register to determine if the FPGA configuration is successful. When configuration is successful, software sets the axicfggen bit of the ctrl register to 0. The FPGA user I/O pins are still tri-stated in this phase.



For more information about configuring the FPGA through the HPS, refer to the *Booting and Configuration* appendix in volume 3 of the *Arria V Device Handbook*.

After successfully completing the configuration phase, the FPGA transitions to the initialization phase. To delay configuring the FPGA, set the confdonepull bit of the ctrl register to 1.

Initialization Phase

In this phase, the FPGA prepares to enter user mode. The internal oscillator in the FPGA portion of the device is the default clock source for the initialization phase. Alternatively, the configuration image can specify the CLKUSR or the DCLK pins as the clock source. The alternate clock source controls when the FPGA enters user mode.

If DCLK is selected as the clock source, software uses the DCLK count (dclkcnt) register to drive DCLK pulses to the FPGA. Writing to the cnt field of the dclkcnt register triggers the FPGA manager to generate the specified number of DCLK pulses. When all of the DCLK pulses have been sent, the dcntdone bit of the DCLK status (dclkstat) register is set to 1. Software polls the dcntdone bit to know when all of the DCLK pulses have been sent.



Before another write to the dclkcnt register, software needs to write a value of 1 to the dcntdone bit to clear the done state.

The FPGA user I/O pins are still tri-stated in this phase. When the initialization phase completes, the FPGA releases the optional INIT_DONE pin and an external resistor pulls the pin high.

User Mode

The FPGA enters the user mode after exiting the initialization phase. The FPGA user I/O pins are no longer tri-stated in this phase and the configured soft logic in the FPGA becomes active.

The FPGA remains in user mode until the nCONFIG pin is driven low. If the nCONFIG pin is driven low, the FPGA reenters the reset phase. The internal oscillator is disabled in user mode, but is enabled as soon as the nCONFIG pin is driven low.

-  For more information about configuring the FPGA through the HPS, refer to the *Booting and Configuration* appendix in volume 3 of the *Arria V Device Handbook*.
-  For more information about configuring the FPGA in general, refer to the *Configuration, Design Security, and Remote System Upgrades in Arria V Devices* chapter in volume 1 of the *Arria V Device Handbook*.

Clock

The FPGA manager has two clock input signals which are asynchronous to each other. The clock manager generates these two clocks:

- `cfg_clk`—the configuration slave interface clock input and also the DCLK output reference for FPGA configuration. Enable this clock in the clock manager only when configuration is active or when the configuration slave interface needs to respond to master requests.
- `l4_mp_clk`—the register slave interface clock.

-  For more information about the clock manager, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Reset

The FPGA manager has one reset signal. The reset manager drives this signal to FPGA manager on a cold or warm reset. All distributed reset signals in the FPGA manager are asserted asynchronously at the same time and de-asserted synchronously to their associated clocks.

-  For more information about the reset manager, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

FPGA Manager Address Map and Register Definitions

-  The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the following links for the module instance:

- [fpgamgrregs](#)
- [fpgamgrdata](#)

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.



The base addresses of all modules are also listed in the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 13-2 shows the revision history for this document.

Table 13-2. Document Revision History

Date	Version	Changes
November 2012	1.3	Minor updates.
June 2012	1.2	Updated the FPGA configuration section.
May 2012	1.1	■ Updated the configuration schemes table. ■ Updated the FPGA configuration section. ■ Added address map and register definitions section.
January 2012	1.0	Initial release.

The system manager in the hard processor system (HPS) contains memory-mapped control and status registers (CSRs) and logic to control system level functions as well as other modules in the HPS.

The system manager connects to the following modules in the HPS:

- Watchdog timers
- Ethernet media access controllers (EMAC0 and EMAC1)
- Direct memory access (DMA) controller
- USB 2.0 On-The-Go (OTG) controllers (USB0 and USB1)
- NAND flash controller
- Secure Digital/MultiMediaCard (SD/MMC) controller
- Quad serial peripheral interface (SPI) flash controller
- Microprocessor unit (MPU) subsystem

Features of the System Manager

Software accesses the CSRs in the system manager to control and monitor various functions in other HPS modules that require external control signals. The system manager connects to these modules to perform the following functions:

- Sends pause signals to pause the watchdog timers when the processors in the MPU subsystem are in debug mode.
- Freezes the I/O pins after the HPS comes out of cold reset and during serial configuration.
- Selects the EMAC level 3 (L3) master signal options.
- Selects the SD/MMC controller clock options and L3 master signal options.
- Selects the NAND flash controller bootstrap options and L3 master signal options.
- Selects USB controller L3 master signal options.
- Provides control over the DMA security settings when the HPS exits from reset.
- Provides boot source and clock source information that can be read during the boot process.
- Sends error correction code (ECC) enable signals to all HPS modules with ECC-protected RAM.


- Provides the capability to inject errors during testing in modules with ECC-protected RAM.
- Controls I/O pin multiplexing in the HPS.
- Provides information about device-specific HPS options such as the number of processor cores.
- Triggers parity failures during testing in parity-protected RAMs in the MPU subsystem.
- Allows the HPS to access the FPGA JTAG controller through the scan manager for testing purposes.

System Manager Block Diagram and System Integration

The system manager has a slave interface which connects to the level 4 (L4) bus. The CSRs interface connects to signals in the FPGA and also to other HPS modules.

Figure 14-1 shows a block diagram of the system manager.

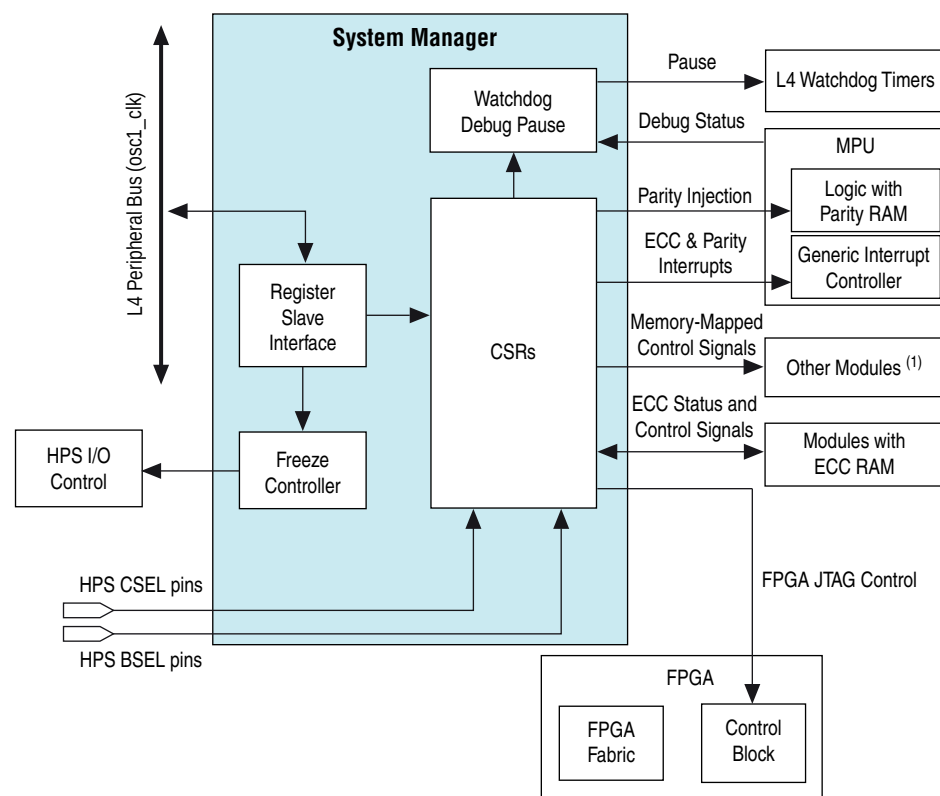Figure 14-1. System Manager Block Diagram



Note to Figure 14-1:

(1) Refer to the list of modules on the following page.

The system manager consists of the following blocks:

- CSRs—provide the following functionality:
 - Provide memory-mapped access to control signals for the following HPS modules:
 - EMACs
 - Debug core
 - Reset manager
 - SD/MMC controller
 - NAND controller
 - SPI masters
 - Quad SPI controller
 - USB controllers
 - DMA controller
 - On-chip RAM
 - Route ECC and parity interrupts to the MPU
 - Store status information received from other HPS modules
 - Controls multiplexing between the FPGA JTAG pins and the scan manager
- Register slave interface—provides connected masters access to the CSRs in the system manager.
- Watchdog debug pause—accepts the debug mode status from the MPU subsystem and pauses the L4 watchdog timers.
- Freeze controller—responsible for placing the HPS I/O pins into a safe state so that they can be configured by software.

Functional Description of the System Manager

This section describes the functional operation of the system manager. The system manager serves the following purposes:

- Provides software access to boot configuration and system information
- Provides software access to control and status signals in other HPS modules
- Enables and controls ECC and parity in HPS modules
- Provides freeze signals to the HPS-configurable I/O pins during configuration
- Enables and disables HPS interfaces
- Controls I/O pin multiplexing
- Provides eight registers that software can use to pass information between boot stages

Boot Configuration and System Information

The system manager provides boot configuration information through the `bootinfo` register. The following information is available to software:

- Sampled value of the HPS boot select (BSEL) pins
- Sampled value of the HPS clock select (CSEL) pins

The boot configuration information comes from the HPS BSEL and CSEL pins. The BSEL signal informs software which flash device CPU0 booted from. The CSEL signal informs software which clock frequency is used for the flash controllers (NAND, SD/MMC, quad SPI).



For boot and clock source values, refer to the *Booting and Configuration* appendix in volume 3 of the *Arria V Device Handbook*.

The system manager also provides information about the type of HPS variant available in the system on a chip (SoC) FPGA through the HPS information register (hpsinfo) so that software can determine how many processor cores are present in the HPS.

Additional Module Control

Each module in the HPS has its own CSRs, providing access to the internal state of the module. Other modules, as well as logic in the FPGA fabric, can use these CSRs to control and monitor functions in the HPS modules. The system manager CSRs provide access to additional module state information, enabling additional control and monitoring. Therefore, to fully control each module, you must manipulate both the module's own CSRs, and CSRs in the system manager. This section describes system manager CSR usage for each module.

Scan Manager

Either the FPGA JTAG pins or the scan manager can drive JTAG signals to the FPGA. Registers in the system manager control a multiplexer that determines which source drives the JTAG signals to the FPGA. Set the FPGA JTAG enable bit (fpga_jtagen) of the control register (ctrl) in the scan manager group (scanmgrgrp) to control this selection.



Software running on the HPS must ensure that the FPGA JTAG pins and scan manager's connection to the FPGA control block are inactive before changing the source that drives JTAG signals to the FPGA.



For more information about the scan manager, refer to the *Scan Manager* chapter in volume 3 of the *Arria V Device Handbook*.

DMA Controller

The security state of the DMA controller is controlled by the manager thread security (mgrnnonsecure) and interrupt security (irqnnonsecure) bits of the ctrl register, all in the dmagrp group.

The security state of each DMA peripheral request interface is controlled by the peripheral nonsecure bits (nonsecure[31:0]) of the peripheral security register (persecurity) in the dmagrp group. The DMA controller samples these register bits when it is brought out of reset.



Register bits should be accessed only when the DMA master interface is guaranteed to be in an inactive state.



For more information about the DMA controller, refer to the *DMA Controller* chapter in volume 3 of the *Arria V Device Handbook*.

NAND Flash Controller

Software uses the bootstrap control register (bootstrap) in the NAND flash controller group (nandgrp) to modify the default behavior of the NAND flash controller after reset. The NAND flash controller samples the register bits when it is brought out of reset.

The following bootstrap register bits control configuration of the NAND flash controller:

- Bootstrap inhibit initialization bit (noinit)—inhibits the NAND flash controller from performing initialization when coming out of reset, and allows software to program all registers pertaining to device parameters such as page size and width.
- Bootstrap 512 byte device bit (page512)—informs the NAND flash controller that a NAND flash device of 512 byte page size is connected to the system.
- Bootstrap inhibit load block 0 page 0 bit (no loadb0p0)—inhibits the NAND flash controller from loading page 0 of block 0 of the NAND flash device as part of the initialization procedure.
- Bootstrap two row address cycles bit (two rowaddr)—informs the NAND flash controller that only two ROW address cycles are required instead of the default three row address cycles.

Registers in the system manager control the L3 master ARCACHE and AWCACHE signals. Set the NAND arcache (arcache[0]) and NAND awcache (awcache[0]) bits of the NAND L3 master AxCACHE register (l3master) in the nandgrp group to control these selections. These bits define the cache attributes for the master transactions of the DMA engine in the NAND controller.



Register bits should be accessed only when the master interface is guaranteed to be in an inactive state.



For more information about the NAND flash controller, refer to the *NAND Flash Controller* chapter in volume 3 of the *Arria V Device Handbook*.

EMAC

The system manager allows software to select either osc1_clk or fpga_ptp_ref_clk as the source of the IEEE 1588 reference clock for each EMAC. Set the PTP clock select (ptpclksel[0]) and (ptpclksel[1]) bits of the ctrl register in the EMAC group (emacgrp) to control this selection.



For more information about the reference clock, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Registers in the system manager control the L3 master ARCACHE and AWCACHE signals. Set the `arcache[0]`, `arcache[1]`, `awcache[0]`, and `awcache[1]` bits of the EMAC L3 master `AxCACHE` register (`l3master`) in the `emacgrp` group to control these selections. These bits define the cache attributes for the master transactions of the DMA engine in the EMAC controllers.



Register bits should be accessed only when the master interface is guaranteed to be in an inactive state.



For more information about the EMAC, refer to the *Ethernet Media Access Controller* chapter in volume 3 of the *Arria V Device Handbook*.

USB 2.0 OTG Controller

Registers in the system manager control whether the USB 2.0 OTG controller L3 master is used for data or opcode access. Set the USB HPROT data/opcode bits (`hprotdata[0]` and `hprotdata[1]`) of the USB L3 master HPROT register (`l3master`) in the USB controller group (`usbgrp`) to specify the access for each USB controller.

You can also use the system manager to specify whether the USB controller L3 master access is privileged, bufferable, or cacheable for each USB controller by setting the USB HPROT privileged (`hprotpriv[0]` and `hprotdata[1]`), USB HPROT bufferable (`hprotbuff[0]` and `hprotbuff[1]`), and USB HPROT cacheable (`hprotcache[0]` and `hprotcache[1]`) bits of the `l3master` register in the `usbgrp` group.



Register bits should be accessed only when the master interface is guaranteed to be in an inactive state.



For more information about the USB 2.0 OTG controller, refer to the *USB 2.0 OTG Controller* chapter in volume 3 of the *Arria V Device Handbook*.

SD/MMC Controller

Registers in the system manager control whether the SD/MMC controller L3 master is used for data or opcode access. Set the SD/MMC `hprotdata[0]` bit of the SD/MMC `l3master` register in the SD/MMC controller group (`sdmmcgrp`) to specify the access mode.

You can use the system manager to specify whether the SD/MMC controller L3 master access is privileged, bufferable, or cacheable by setting the SD/MMC `hprotpriv[0]`, `hprotbuff[0]`, and `hprotcache[0]` bits of the `l3master` register in the `sdmmcgrp` group.



Register bits should be accessed only when the master interface is guaranteed to be in an inactive state.

The system manager allows software to select the clock's phase shift for `cclk_in_drv` and `cclk_in_sample` by setting the drive clock phase shift select (`drvsel`) and sample clock phase shift select (`smplsel`) bits of the `ctrl` register in the `sdmmcgrp` group. You can also select which feedback clock (`fb_clk`) to use as the `cclk_in_sample` clock. Set the feedback clock select (`fbclkselect`) bit of the `ctrl` register to control this selection.

-  For more information about the SD/MMC controller, refer to the [SD/MMC Controller](#) chapter in volume 3 of the *Arria V Device Handbook*.

Watchdog Timer

The system manager controls the watchdog timer behavior when the CPUs are in debug mode. The system manager sends a pause signal to the watchdog timers depending on the setting of the debug mode (`mode[0]` and `mode[1]`) bits of the L4 watchdog debug register (`wddbgb`). Each watchdog timer built into the MPU subsystem is automatically paused when its associated CPU enters debug mode.

-  For more information about the watchdog timer, refer to the [Watchdog Timer](#) chapter in volume 3 of the *Arria V Device Handbook*.

Boot ROM Code

Registers in the system manager control whether the boot ROM code configures the pin multiplexing for boot pins after a warm reset. Set the warm reset configure pin multiplex for boot pins bit (`warmrstcfpgpinmux`) of the `ctrl` register in the boot ROM code register group (`romcodegrp`) to enable or disable this control.

-  The boot ROM code always configures the pin multiplexing for boot pins after a cold reset.

Registers in the system manager also control whether the boot ROM code configures the I/O pins used during the boot process after a warm reset. Set the warm reset configure IOs for boot pins bit (`warmrstcfgio`) of the `ctrl` register in the `romcodegrp` group to enable or disable this control. By default, the boot ROM code always configures the I/O pins used by boot after a cold reset.

When CPU1 is released from reset and the boot ROM code is located at the CPU1 reset exception address (for a typical case), the boot ROM reset handler code reads the address stored in the CPU1 start address register (`cpu1startaddr`) and jumps to that address to pass control to software.

The preloader state register (`initswstate`) stores the magic number `0x49535756` written by the preloader to indicate there is a valid preloader software image in the on-chip RAM.

There can be up to four preloader images stored in flash memory. The preloader last image loaded register (`initswlastld`) contains the index of the preloader image loaded in the on-chip RAM.

The boot ROM software state register (`bootromswstate`) is a 32-bit general-purpose register reserved for the boot ROM.

The registers in the warm boot from on-chip RAM group (warmramgrp) in the romcodegrp group are used by the boot ROM code to support booting from the on-chip RAM on a warm reset. Table 14-1 lists the registers and their purposes.

Table 14-1. The warmramgrp Registers

Register	Name	Purpose
enable	Enable	Controls whether the boot ROM attempts to boot from the contents of the on-chip RAM on a warm reset.
datastart	Data start	Contains the byte offset of the warm boot CRC validation region in the on-chip RAM. The offset must be word-aligned to an integer multiple of four.
length	Length	Contains the length in bytes of the region in the on-chip RAM available for warm boot CRC validation.
execution	Execution offset	Contains the byte offset into the on-chip RAM that the boot code jumps to if the CRC validation succeeds.
crc	Expected CRC	Contains the expected CRC of the region in the on-chip RAM.

All the registers in Table 14-1 must be written by software prior to the warm reset occurring.

The number of wait states applied to the boot ROM's read operation is determined by the wait state bit (waitstate) of the ctrl register in the romhwgrp group. After the boot process, software might require reading the code in the boot ROM. If software has changed the clock frequency of the l3_main_clk after reset, an additional wait state is necessary to access the boot ROM. Set the waitstate bit of the ctrl register in the romhwgrp group to add an additional wait state to the read access of the boot ROM. The enable safe mode warm reset update bit (ensfmdwru) of the ctrl register controls whether the waitstate bit is updated during a warm reset.

Freeze Controller

The freeze controller provides freeze signals to the HPS configurable I/O elements. These freeze signals ensure that the I/O pins are in a safe state upon FPGA power on and until they are configured.

The freeze controller divides the HPS configurable I/O pins into four groups. Each group has an independent set of freeze signals, referred to as a freeze channel, which is driven by the freeze controller. Separate freeze channels allow each group of I/O pins to be independently frozen, configured, and thawed.

The HPS I/O pins are divided into six banks. Each I/O bank is either a vertical (VIO) or horizontal (HIO) I/O, based on its location on the die. Table 14-2 lists the I/O banks and bank types that each freeze channel controls.

Table 14-2. Freeze Channels and HPS I/O Banks (Part 1 of 2)

Freeze Channel	Bank Type	HPS I/O Bank
0	VIO	I/O bank 7D and bank 7E
1	VIO	I/O bank 7B and bank 7C

Table 14–2. Freeze Channels and HPS I/O Banks (Part 2 of 2)

Freeze Channel	Bank Type	HPS I/O Bank
2	VIO	I/O bank 7A
3	HIO	I/O bank 6

When the I/O elements are frozen, the configuration registers in the I/O elements are not placed in a reset state. Instead, the outputs of the configuration registers are gated off by the freeze signals until software running on the HPS thaws the I/O elements. The scan manager must configure the I/O elements in each group before software thaws them.

While frozen, the HPS I/O pins are in the following state:

- I/O buffers are in tri-state mode
- Weak pull-up is enabled
- Outputs of configuration registers are gated
- Internal registers are reset to their initial states
- Bus hold is in tri-state mode
- On-chip termination (OCT) internal timer is reset

Software can generate HPS I/O freeze signals by setting the VIO control (`vioctrl`) and HIO control (`hioctrl`) registers in the freeze control group (`frzctrl`). The system manager allows the following options to be set in the HPS VIO and HIO banks:

- Enable or disable I/O pin configuration
- Allow I/O pin configuration to control the bus hold circuit
- Allow I/O pin configuration to control I/O tri-state
- Allow I/O pin configuration to control weak pull-up resistor
- Allow I/O pin configuration to control the slew-rate
- Reset registers in the delay-locked loop (DLL)
- Reset registers in the OCT
- Reset registers in the I/O elements and data strobe (DQS)
- Disable I/O pin configuration in the OCT calibration block, or start OCT calibration state machine and enable I/O pin configuration in the OCT calibration block

Software controls each freeze channel through a set of memory-mapped control register fields in the system manager. The freeze signals for VIO channel 1 is controlled either by a software state machine, or by a hardware state machine in the freeze controller. Software chooses between the two freeze signal sources by setting the source register (`src`) in the `frzctrl` group.

The system manager initiates a freeze or thaw operation on VIO channel 1 through the hardware state machine. Freeze or thaw is initiated by requesting the hardware state machine to generate a freeze signal sequence. This sequence transitions between frozen and thawed states by setting the VIO channel 1 freeze/thaw request bit (`vio1req`) of the hardware control register (`hwctrl`) in the `frzctrl` group.

The system manager allows software to determine the current state of the VIO channel 1 (frozen or thawed) or to determine when a freeze or thaw request is made by reading the VIO channel 1 state bit (`vi01state`) of the `hwctrl` register in the `frzctrl` group.

FPGA Interface Enables

The system manager can enable or disable interfaces between the FPGA and HPS. The interfaces must be disabled when not in use to avoid undefined behavior.

The global interface bit (`intf`) of the global disable register (`gbl`) in the FPGA interface group (`fpgaintfgrp`) disables all interfaces between the FPGA and HPS.



Ensure that all interfaces between the FPGA and HPS are inactive before disabling them.

You can set the individual disable register (`indiv`) in the `fpgaintfgrp` group to disable the following interfaces between the FPGA and HPS:

- Reset request interface
- JTAG enable interface
- I/O configuration interface
- Boundary scan interface
- Trace interface
- System Trace Macrocell (STM) interface
- Cross-trigger interface (CTI)

ECC and Parity Control

The system manager can enable or disable ECC for each of the following HPS modules with ECC-protected RAM:

- MPU L2 cache data RAM
- On-chip RAM
- USB 2.0 OTG controller (USB0 and USB1) RAM
- EMAC (EMAC0 and EMAC1) RAM
- DMA controller RAM
- CAN controller RAM
- NAND flash controller RAM
- Quad SPI flash controller RAM
- SD/MMC controller RAM

With the exception of L2 cache data RAM, each of the ECC memories generates a single- and double-bit interrupt to the global interrupt controller (GIC) through the system manager. Set the registers in the ECC management register group (`eccgrp`) to enable or disable the ECC. The L2 cache generates the L2 cache data RAM interrupt directly.

The system manager can inject single-bit or double-bit errors into each of the ECC memories for testing purposes. Set the bits in the appropriate memory enable register to inject errors. For example, to inject a single bit EEC error into the USB0 module, set the `injs` bit of the USB0 RAM ECC enable register (`usb0`) in the ECC management register group (`eccgrp`).

The system manager can also inject parity failures into the parity-protected RAM in the MPU to test the parity failure interrupt handler. Set the bits of the parity fail injection register (`parityinj`) to inject parity failures.

Pin Multiplexing Control

In the HPS, many of the pins are available for use by as many as four peripherals. The system manager allows software to control pin multiplexing selections to select which peripheral in the HPS has access to each shared pin. Some pins also provide boot source and clock source information, which are sampled upon deassertion of a cold reset event. Set the registers in the pin multiplexing control group (`pinmuxgrp`) to control this selection.



Do not modify the pin multiplexing selection registers after I/O configuration.

Preloader Handoff Information

The system manager provides eight 32-bit registers to store handoff information between the preloader and the operating system. The preloader can store any information in these registers. These register contents have no impact on the state of the HPS hardware. When the operating system kernel boots, it retrieves the information by reading the preloader to OS handoff information register (`handoff`) array in the preloader register group (`iswgrp`). These registers are reset only by a cold reset.

Clocks

The system manager is driven by the `osc1_clk` clock generated by the clock manager.



For more information about the clock manager, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Resets

The system manager receives two reset signals from the reset manager. The `sys_manager_rst_n` signal is driven on a cold or warm reset and the `sys_manager_cold_rst_n` signal is driven only on a cold reset. This functionality allows the system manager to reset some CSR fields on either a cold or warm reset and others only on a cold reset.

Table 14-3 lists the registers and groups of registers that are reset by a cold or warm reset.

Table 14-3. Registers and Corresponding Reset Signal

Register or Group	Cold Reset	Warm Reset
fpgaintfgrp	✓	—
scanmgrgrp	✓	—
frzctrl	✓	—
emacgrp	✓	✓
dmagr	✓	✓
sdmmcgrp	✓	✓
nandgrp	✓	✓
usbgrp	✓	✓
eccgrp	✓	—
pinmuxgrp	✓	—
wddbg	✓	—
parityinj	✓	✓
romcodegrp	✓	—
romhwgrp	✓	—

 For more information about the reset manager, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

System Manager Address Map and Register Definitions

 The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the link for the following module instance:

■ sysmgr

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.

 The base addresses of all modules are also listed in the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 14-4 shows the revision history for this document.

Table 14-4. Document Revision History

Date	Version	Changes
November 2012	1.2	Minor updates.
May 2012	1.1	Added functional description, address map and register definitions sections.
January 2012	1.0	Initial release.

The scan manager is used to configure and manage the hard processor system (HPS) I/O pins, and communicate with the FPGA JTAG test access port (TAP) controller. The scan manager drives the HPS I/O scan chains to configure the I/O bank properties before the pins are used by the peripherals in HPS. The scan manager can also optionally communicate with the FPGA JTAG TAP controller to send commands for purposes such as managing cyclic redundancy check (CRC) errors detected by the FPGA control block. When the scan manager communicates with the FPGA JTAG TAP controller, input on the FPGA JTAG pins is ignored.

The scan manager contains an ARM® JTAG Access Port (JTAG-AP). The JTAG-AP implements a multiple scan-chain JTAG master interface. One scan chain connects to the FPGA JTAG and uses the standard JTAG signals. Four other scan chains connect to the HPS I/O banks, using the JTAG clock and data outputs as a parallel-to-serial converter.



For more information about the ARM JTAG-AP, refer to the *ARM Debug Interface v5 Architecture Specification*, which you can download from the ARM website (infocenter.arm.com).

Features of the Scan Manager


The scan manager has the following features:

- Drives all the I/O scan chains for HPS I/O banks
- Allows the HPS to access the FPGA JTAG TAP controller

Scan Manager Block Diagram and System Integration

Figure 15-1 shows a block diagram of the scan manager, showing how it is integrated in the SoC device.

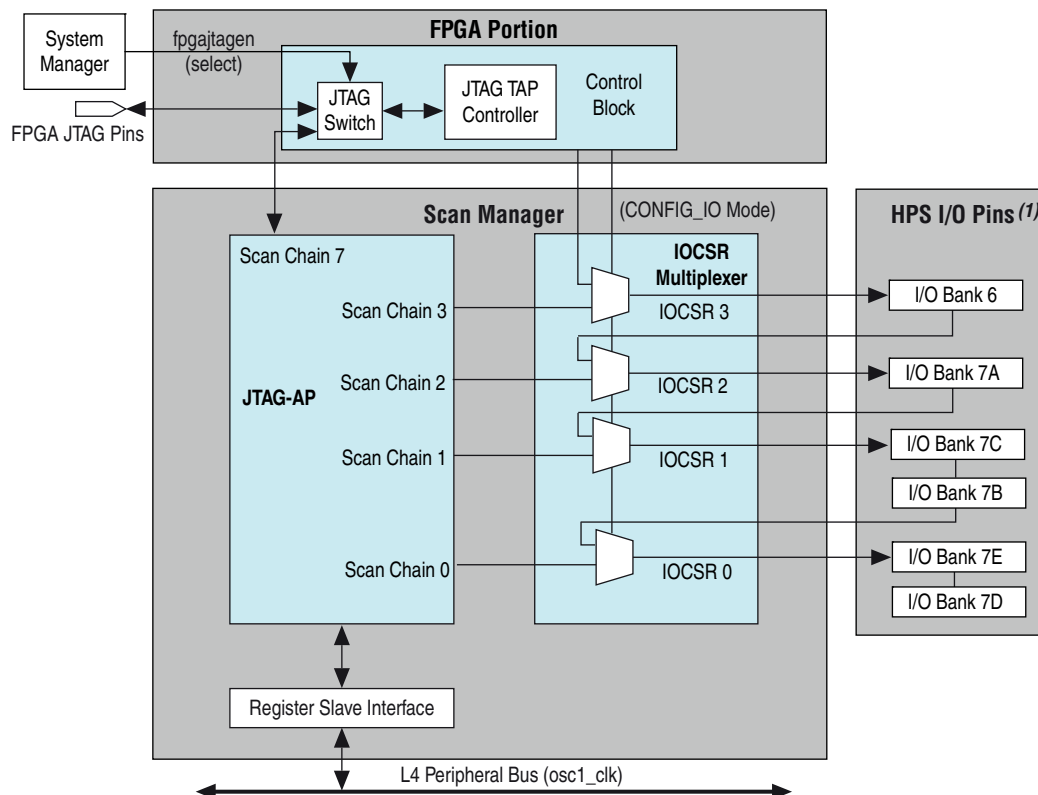Figure 15-1. Scan Manager Block Diagram



Note to Figure 15-1:

(1) Not all devices contain all the banks depicted.

The processor accesses the scan manager through the register slave interface connected to the level 4 (L4) peripheral bus.

Table 15-1 describes how the ARM JTAG-AP signals are connected in the scan manager. These signals are internal to the scan manager, are provided here for reference only, and are not shown in Figure 15-1. The signal, register, and field names listed in the table match the names used in the *ARM Debug Interface v5 Architecture Specification*. The remainder of this chapter uses register and field names as listed in the Altera SoC register documentation. Refer to Table 15-3 to cross-reference the two sets of register names.

Table 15-1. ARM JTAG-AP Signal Use in the Scan Manager (Part 1 of 2)

Signal	Direction	Implementation
SRSTCONNECTED[7:0]	Input	Tied to 0. The read-only SRSTCONNECTED field in the CSW register always reads as 0.
PORTCONNECTED[7:0]	Input	Tied to 0x8F, which connects only ports 0-3 and 7. The read-only PORTCONNECTED field in the CSW register reads as 1 when the PORTSEL register is written with a value that enables one of the connected ports, and reads as 0 otherwise.

Table 15–1. ARM JTAG-AP Signal Use in the Scan Manager (Part 2 of 2)

Signal	Direction	Implementation
PORTENABLED[7:0]	Input	Tied to 0x8F, so all connected ports are always considered powered on. The PSTA register does not contain a useful value, so there is no reason for software to access it. Software does not need to monitor the status of ports 0-3 because are always on. For port 7, software can read the mode field of the stat register in the FPGA manager to determine the FPGA power status.
nSRSTOUT[7:0]	Output	Not connected. Writing to the SRST_OUT field of the CSW register has no effect.
nTRST*[7:0]	Output	nTRST*[7] is connected to the FPGA JTAG TAP controller and nTRST*[6:0] are not connected. Writing to the TRST_OUT field of the CSW register (the trst bit of the stat register in the scan manager) has an effect only when port 7 is enabled by software. For details, refer to “Communicating with the JTAG TAP Controller” on page 15–5 .

The ARM JTAG-AP supports up to eight scan chains. The scan manager uses only scan chains 0, 1, 2, 3, and 7.

Scan chain 7 of the JTAG-AP connects to FPGA JTAG TAP controller. When the system manager undergoes a cold reset, this connection is disabled and the FPGA JTAG pins are connected to the FPGA JTAG TAP controller. You can configure the system manager to enable the connection, which allows software running on the HPS to communicate with the FPGA JTAG TAP controller. In this case, software can send JTAG commands (such as the SHIFT_EDERROR_REG JTAG instruction) to the FPGA JTAG and get responses to determine details about CRC errors detected by the control block when the FPGA fabric is in user mode. Through the FPGA manager, software can determine that a CRC error was detected. For more information about the TAP controller, refer to [“Communicating with the JTAG TAP Controller” on page 15–5](#).

Scan chains 0 to 3 of the JTAG-AP connect to the configuration information in the HPS I/O scan chain banks through the I/O configuration shift register (IOCSR) multiplexer. For more information, refer to [“Configuring HPS I/O Scan Chains” on page 15–4](#).



The I/O scan chains do not use the JTAG protocol. The scan manager uses the JTAG-AP as a parallel-to-serial converter for the I/O scan chains. The I/O scan chains are connected only to the serial output data (TDI JTAG signal) and serial clock (TCK JTAG signal).

The HPS I/O pins are divided into six banks. Each I/O bank is either a vertical (VIO) or horizontal (HIO) I/O, based on its location on the die. [Table 15–2](#) shows the mapping of the IOCSR scan chains to the I/O banks.

Table 15–2. Bank Usage of IOCSR Scan Chains

IOCSR Scan Chain	Bank Type	HPS I/O Bank	Usage
0	VIO	I/O bank 7D and I/O bank 7E	EMAC
1	VIO	I/O bank 7B and I/O bank 7C	SD/MMC, NAND, and quad SPI
2	VIO	I/O bank 7A	Trace, SPI, UART, I ² C, and CAN
3	HIO	I/O bank 6	SDRAM DDR

When the FPGA JTAG TAP controller is in CONFIG_I0 mode, the controller can override the scan manager JTAG-AP and configure the HPS I/O pins. For more information, refer to “Configuring HPS I/O Scan Chains” on page 15-4.



CONFIG_I0 mode is commonly used to configure the I/O pin properties prior to performing boundary scan testing.

Functional Description of the Scan Manager

This section describes the functional operation of the scan manager. The scan manager serves the following two purposes:

- Configuring HPS I/O Scan Chains
- Communicating with the JTAG TAP Controller

Configuring HPS I/O Scan Chains

The HPS I/O pins are configured through a series of scan chains.



The HPS I/O pins need to be frozen before configuring them. For more information, refer to the *System Manager* chapter in volume 3 of the *Arria V Device Handbook*.

I/O pin configuration involves such steps as setting the I/O standard and drive strength for each I/O bank. After a cold reset, all the I/O scan chains in the HPS must be configured prior to being used to communicate with external devices.

Software uses the scan manager to write configuration data to the scan chains. Separate I/O configuration data files for FPGA and HPS are generated by the Quartus® II software when the configuration image for the FPGA portion of the system-on-a-chip (SoC) device is assembled. The HPS configuration data is written to the scan manager by software.

Before configuring a specific IO bank, the corresponding scan chain must be enabled by writing to the bits in en register. The scan manager must not be active during this process. Software reads the active bit of stat register to determine the scan manager state.

Alternatively, when the FPGA JTAG TAP controller receives the CONFIG_I0 JTAG instruction, the control block enters CONFIG_I0 mode. When the control block is in CONFIG_I0 mode, the controller can override the scan manager JTAG-AP and configure the HPS I/O pins. The CONFIG_I0 instruction configures all configurable I/O pins in the SoC device including the FPGA I/O pins and the HPS I/O pins. The FPGA and HPS portions of the device must be both powered on to execute the CONFIG_I0 instruction. External logic connected to the FPGA JTAG pins sends the CONFIG_I0 instruction, which provides I/O configuration data for all FPGA and HPS I/O pins. While CONFIG_I0 mode is active, the HPS is held in cold reset to prevent software from potentially interfering with the I/O configuration.

Communicating with the JTAG TAP Controller

After the system manager undergoes a cold reset, access to the JTAG TAP controller in the FPGA control block is through the dedicated FPGA JTAG I/O pins. If necessary, you can configure your system to use the scan manager to provide the HPS processor access to the JTAG TAP controller instead. This feature allows the processor to send JTAG instructions to the FPGA portion of the device.

To connect scan chain 7 between the scan manager and the FPGA JTAG TAP controller, the following features must be enabled:

- The scan chain for the FPGA JTAG TAP controller—To enable scan chain 7, set the `fpgajtag` field of the `en` register in the scan manager. For more information, refer to [“Scan Manager Address Map and Register Definitions”](#) on page 15-6.
- The FPGA JTAG logic source select—This source select determines whether the scan manager or the dedicated FPGA JTAG pins are connected to the FPGA JTAG TAP controller in the FPGA portion of the device. On system manager cold reset, the dedicated FPGA JTAG pins are selected. The source select is configured through the `fpgajtagen` bit of the `ctrl` register in the `scanmgrgrp` group of the system manager. The FPGA JTAG pins and scan manager connection to the TAP controller must both be inactive when switching between them. The mechanism to ensure both are inactive is user-defined.



For more information, refer to the [System Manager](#) chapter in volume 3 of the *Arria V Device Handbook*.



Before connecting or disconnecting the scan chain between the scan manager and the FPGA JTAG TAP controller, ensure that both the FPGA JTAG TCK and scan manager TCK signals are de-asserted. Altera recommends resetting the FPGA JTAG TAP controller using the scan manager's `nTRST` signal after the scan manager is connected to the controller.

JTAG-AP FIFO Buffer Access and Byte Command Protocol

The JTAG-AP contains FIFO buffers for byte commands and responses. The buffers are accessed through the `fifosinglebyte`, `fifodoublebyte`, `fifotriplebyte`, and `fifoquadbyte` registers. The JTAG-AP stalls processor access to the registers when the buffer does not contain enough data for read access, or when the buffer does not contain enough free space to accept data for write access.



Software should read the `rfifocnt` and `wfifocnt` fields of the `stat` register to determine the buffer status before performing the access to avoid being stalled by the JTAG-AP.

JTAG-AP scan chains 0, 1, 2 and 3 are write-only ports connected to the HPS IOCSRs and JTAG-AP scan chain 7 is a read-write port connected to the FPGA JTAG TAP controller. The processor can send data to scan chains 0-3, and send and receive data from scan chain 7 by accessing the command and response FIFO buffers in the JTAG-AP.



Attempting to access data at invalid or non-aligned offsets can produce unpredictable results that require a reset to recover.

The JTAG commands and TDI data must be sent to the JTAG-AP using an encoded byte protocol. Similarly, the TDO data received from JTAG-AP is encoded. All commands are 8 bits wide in the byte command protocol.



For details about the byte command protocol, refer to the JTAG-AP chapter in the *ARM Debug Interface v5 Architecture Specification*, which you can download from the ARM website (infocenter.arm.com).

Clocks

The scan manager is connected to the `spl_m_clk` clock generated by the clock manager.



For more information, including minimum and maximum clock frequencies, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

The scan manager generates two clocks. One clock routes to the control block of the FPGA portion of the SoC device with a frequency of `spl_m_clk` / 6 and runs at a maximum of 33 MHz. The other clock routes to the HPS I/O scan chains with a frequency of `spl_m_clk` / 2 and runs at a maximum frequency of 100 MHz.



The `spl_m_clk` can potentially run faster than the scan manager supports so that SPI masters can support 60 Mbps rates. When the SPI master is running faster than what is supported by the scan manager, the scan manager cannot be used and must be held in reset.

Resets

The reset manager provides the `scan_manager_rst_n` reset signal to the scan manager for both cold and warm resets.

Because glitches can happen on the output clocks during a warm reset, the scan manager temporarily stops generation of the JTAG-AP and I/O configuration clocks. This action ensures that a warm reset does not cause output clock glitches.

Before asserting warm reset, the reset manager sends a request to the scan manager. The scan manager stops the output clock generation and acknowledges the reset manager. The reset manager then issues the warm reset. To enable this warm reset handshake, configure the `scanmgrhsen` bit of the reset manager `ctrl` register.



For more information about reset handshaking, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Scan Manager Address Map and Register Definitions



The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the link for the following module instance:

■ `scanmgr`

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.

 The base addresses of all modules are also listed in the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*.

To improve clarity regarding how Altera uses the JTAG-AP, the ARM register names are changed in the SoC device. Table 15-3 cross references the ARM and Altera names.

Table 15-3. JTAG-AP Register Names

Altera Name	ARM Name
stat	CSW (control/status word)
en	PSEL
fifosinglebyte	BWFIF01 for writes, BRFIF01 for reads
fifodoublebyte	BWFIF02 for writes, BRFIF02 for reads
fifotriplebyte	BWFIF03 for writes, BRFIF03 for reads
fifoquadbyte	BWFIF04 for writes, BRFIF04 for reads

 For more information about the ARM JTAG-AP, refer to the *ARM Debug Interface v5 Architecture Specification*, which you can download from the ARM website (infocenter.arm.com).

Document Revision History

Table 15-4 shows the revision history for this document.

Table 15-4. Document Revision History

Date	Version	Changes
November 2012	1.2	Added JTAG-AP descriptions.
May 2012	1.1	Added block diagram and system integration, functional description, and address map and register definitions sections.
January 2012	1.0	Initial release.

This chapter describes the direct memory access controller (DMAC) contained in the hard processor system (HPS). The DMA controller is used to transfer data between memory and peripherals and other memory locations in the system. The DMA controller is an instance of the ARM® CoreLink™ DMA Controller (DMA-330).

 For more information about ARM's DMA-330 controller, refer to the *CoreLink DMA Controller DMA-330 Revision: r1p1 Technical Reference Manual*, available from the ARM website (infocenter.arm.com).

Features of the DMA Controller

The HPS provides one DMAC to handle the data transfer between memory-mapped peripherals and memories, off-loading this work from the microprocessor unit (MPU) subsystem. The DMAC supports memory-to-memory, memory-to-peripheral, and peripheral-to-memory transfers. The DMAC supports up to eight logical channels for different levels of service requirements. It provides up to 31 peripheral handshake interfaces for peripheral hardware flow control.

The DMA controller contains an instruction processing block that enables it to process program code that controls a DMA transfer. It also contains an ARM Advanced Microcontroller Bus Architecture (AMBA®) Advanced eXtensible Interface (AXI™) master interface unit to fetch the program code from system memory into its instruction cache. The AXI master interface is used to perform DMA data transfer as well. The DMA instruction execution engine executes the program code from its instruction cache and schedules read or write AXI instructions through the respective instruction queues. It also contains a multi-FIFO (MFIFO) data buffer that it uses to store data that it reads, or writes, during a DMA transfer.

The DMAC provides 11 interrupt outputs to enable efficient communication of events to the MPU subsystem. The peripheral request interfaces support the connection of DMA-capable peripherals to enable memory-to-peripheral and peripheral-to-memory transfers to occur, without intervention from the processor. Since the HPS supports some peripherals that do not comply with ARM DMA peripheral interface protocol, adapters are added to allow these peripherals to work with the DMAC. The following peripheral interface protocols are supported:

- Synopsys protocol
 - Serial peripheral interface (SPI)
 - Universal asynchronous receiver/transmitter (UART)
 - Inter-integrated circuit (I²C)
 - FPGA

- ARM protocol
 - Quad SPI flash controller
 - System trace macrocell (STM™)

Dual slave interfaces enable the operation of the DMA controller to be partitioned into the Secure state and Non-secure state. The network interconnect must be configured to ensure that only secure transactions can access the secure interface. The slave interfaces can access status registers and also directly execute instructions in the DMA controller.


The DMAC has the following features:

- A small instruction set that provides a flexible method of specifying the DMA operations. This architecture provides greater flexibility than the fixed capabilities of a Linked-List Item (LLI) based DMA controller
- Supports multiple transfer types
 - Memory-to-memory
 - Memory-to-peripheral
 - Peripheral-to-memory
 - Scatter-gather
- Supports up to eight DMA channels
- Supports up to eight outstanding AXI read and eight outstanding AXI write transactions.
- Enables software to schedule up to 16 outstanding read and 16 outstanding write instructions
- Supports 11 interrupt lines into the MPU subsystem
 - 1 for DMA thread abort
 - 8 for events
 - 2 for MFIFO buffer ECC
- Supports 31 peripheral request interfaces
 - 8 for FPGA
 - 8 for I²C
 - 8 for SPI
 - 2 for quad SPI
 - 1 for System Trace Macrocell
 - 4 for UART

DMA Controller Block Diagram and System Integration

Figure 16-1 shows a block diagram of the DMAC and how it is integrated into the rest of the HPS system.

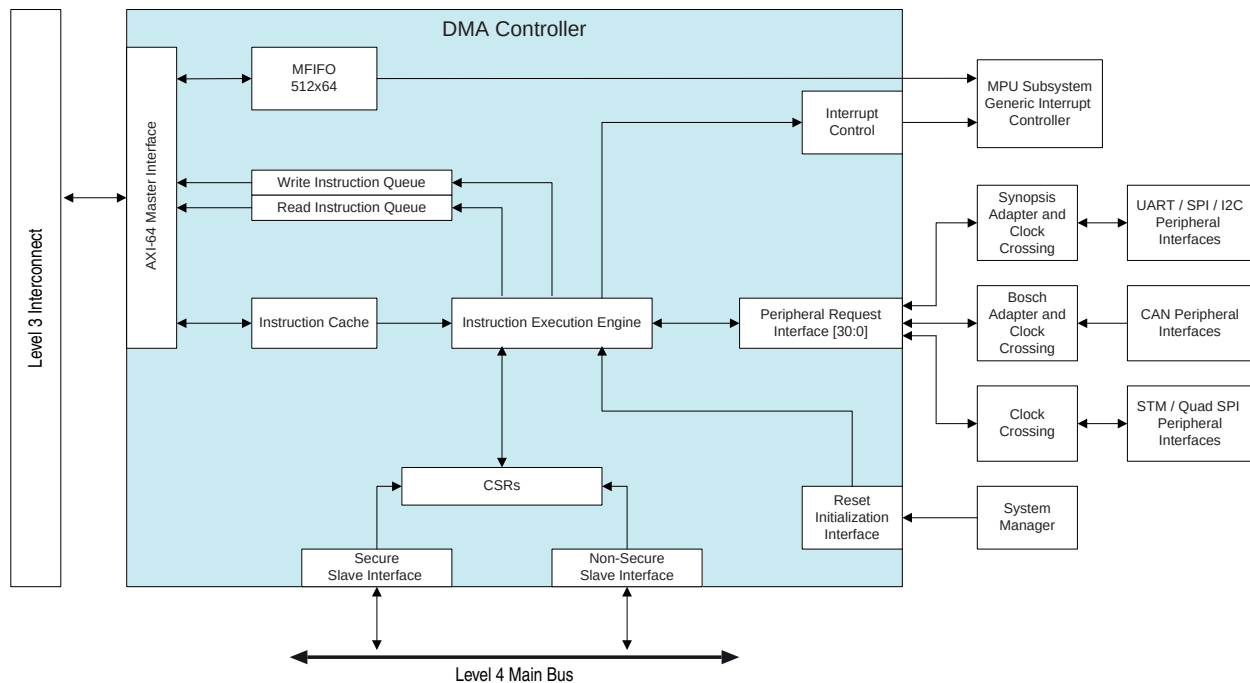Figure 16-1. DMA Controller Connectivity



The DMA controller is driven by the `l4_main_clk` clock, which is used for the controller logic as well as all the interfaces. The DMA controller accesses the level 3 (L3) main switch with its 64-bit AXI master interface.

The DMA controller provides the following slave interfaces:

- Non-secure slave interface
- Secure slave interface

You can use these slave interfaces to access the registers that control the functionality of the DMA controller. The DMA controller implements TrustZone® secure technology with one interface operating in the Secure state and the other operating in the Non-secure state.

Functional Description of the DMA Controller

This section describes the major interfaces and components of the DMAC, and how it operates.

Overview

The DMAC contains an instruction processing block that enables it to process program code that controls a DMA transfer. The program code is stored in a region of system memory that the DMAC accesses using its AXI master interface. The DMAC stores instructions temporarily in an internal cache.

The DMAC is configured with eight DMA channels, with each channel capable of supporting a single concurrent thread of DMA operation. In addition, a single DMA manager thread exists, and you can use it to initialize the DMA channel threads. The DMAC executes up to one instruction per clock cycle. To ensure that it regularly executes each active thread, it alternates by processing the DMA manager thread and then a DMA channel thread. It uses a round-robin process when selecting the next active DMA channel thread to execute.

The DMAC uses variable-length instructions that consist of one to six bytes. It provides a separate program counter (PC) register for each DMA channel. When a thread requests an instruction from an address, the cache performs a lookup. If a cache hit occurs, then the cache immediately provides the instruction. Otherwise, the thread is stalled while the DMAC uses the AXI master interface to perform a cache line fill. If an instruction spans the end of a cache line, the DMAC performs multiple cache accesses to fetch the instruction.



When a cache line fill is in progress, the DMAC enables other threads to access the cache, but if another cache miss occurs, this stalls the pipeline until the first line fill is complete.

When a DMA channel thread executes a load or store instruction, the DMAC adds the instruction to the relevant read or write queue. The DMAC uses these queues as an instruction storage buffer prior to it issuing the instructions on the AXI. The DMAC also contains an MFIFO data buffer that it uses to store data that it reads, or writes, during a DMA transfer.

The DMAC provides multiple interrupt outputs to enable efficient communication of events to external microprocessors. The peripheral request interfaces support the connection of DMA-capable peripherals to enable memory-to-peripheral and peripheral-to-memory DMA transfers to occur, without intervention from a microprocessor.


Dual slave interfaces enable the operation of the DMAC to be partitioned into the Secure state and Non-secure states. You can use the slave interfaces to access status registers and also directly execute instructions in the DMAC.

Operating States

Figure 16-2 shows the transitions among operating states for the DMA manager thread and DMA channel threads.

The DMAC provides a separate state machine for each thread.

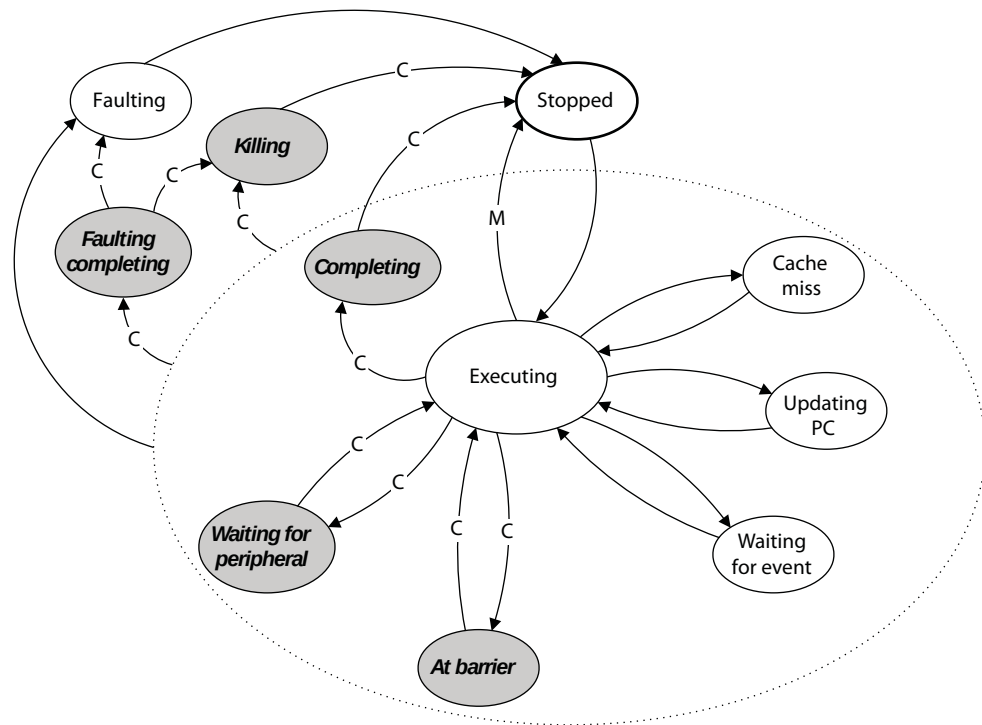Figure 16-2. Thread Operating States



 In Figure 16-2, the DMAC permits that:

- Only DMA channel threads can use states shown in gray
- Arcs with no letter designator indicate state transitions for the DMA manager and DMA channel threads, otherwise use is restricted as follows:
 - C—DMA channel threads only.
 - M—DMA manager thread only.
- States within the dotted line can transition to the Faulting completing, Faulting, or Killing

After the DMAC exits from reset, it sets all DMA channel threads to the Stopped state, and DMA manager thread moves to the Stopped state.

The following sections describe the states:

- “Stopped” on page 16-6
- “Executing” on page 16-6
- “Cache Miss” on page 16-7
- “Updating PC” on page 16-7
- “Waiting For Event” on page 16-7
- “At Barrier” on page 16-7
- “Waiting For Peripheral” on page 16-7

- “Faulting Completing” on page 16-7
- “Faulting” on page 16-7
- “Killing” on page 16-7
- “Completing” on page 16-7

Stopped

The thread has an invalid PC and it is not fetching instructions. Depending on the thread type, you can cause the thread to move to the Executing state by:

- DMA manager thread—Issuing the DMAGO instruction through the slave interface.
- DMA channel thread—Programming the DMA manager thread to execute DMAGO for a DMA channel thread in the Stopped state.

Executing

The thread has a valid PC and therefore the DMAC includes the thread when it arbitrates. The thread can then change to one of the following states under the following conditions:

- Stopped—When the DMA manager thread executes DMAEND.
- Cache miss—When the instruction cache does not contain the next instruction for either the DMA manager thread or the DMA channel thread.
- Updating PC—When the DMAC calculates the address of the next access in the cache.
- Waiting for event—When a thread executes DMAWFE.
- At barrier—When a DMA channel thread either:
 - Executes DMARMB, DMAWMB, or DMAFLUSHP
 - Updates control registers that affect alignment, refer to “Updating DMA Channel Control Registers During a DMA Cycle” on page 16-25.
- Waiting for peripheral—When a DMA channel thread executes DMAWFP.
- Killing—When a DMA channel thread executes DMAKILL.
- Faulting completing—For a DMA channel thread when either:
 - The thread executes an undefined or invalid instruction
 - An AXI error occurs during an instruction fetch or data transfer.
- Faulting—For the DMA manager thread when either:
 - The thread executes an undefined or invalid instruction
 - An AXI error occurs during an instruction fetch.

For a DMA channel thread when a watchdog timeout abort occurs.
- Completing—When a DMA channel thread executes DMAEND.

Cache Miss

The thread is stalled and the DMAC is performing a cache line fill. After it completes the cache fill, the thread returns to the Executing state.

Updating PC

The DMAC is calculating the address of the next access in the cache. After it calculates the PC, the thread returns to the Executing state.

Waiting For Event

The thread is stalled and is waiting for the DMAC to execute DMASEV using the corresponding event number. After the corresponding event occurs, the thread returns to the Executing state.

At Barrier

A DMA channel thread is stalled and the DMAC is waiting for transactions on the AXI to complete. After the AXI transactions complete, the thread returns to the Executing state.

Waiting For Peripheral

A DMA channel thread is stalled and the DMAC is waiting for the peripheral to provide the requested data. After the peripheral provides the data, the thread returns to the Executing state.

Faulting Completing

A DMA channel thread is waiting for the AXI master interface to signal that the outstanding load or store transactions are complete. After the transactions complete, the thread moves to the Faulting state.

Faulting

The thread is stalled indefinitely. The thread moves to the Stopped state when you use the DBGCMD register to instruct the DMAC to execute DMAKILL for that thread.

Killing

A DMA channel thread is waiting for the AXI master interface to signal that the outstanding load or store transactions are complete. After the transactions complete, the thread moves to the Stopped state.

Completing

A DMA channel thread is waiting for the AXI master interface to signal that the outstanding load or store transactions are complete. After the transactions complete, the thread moves to the Stopped state.

Initializing the DMAC

The DMAC provides several memory-mapped control signals that initialize its operating state when it exits from reset. The DMAC is configured so that it does not automatically begin executing code when it exits from reset. The three memory-mapped control signals are controlled by the system manager.



For further information, refer to the *System Manager* chapter in volume 3 of the *Arria® V Device Handbook*.

How to Set the Security State of the DMA Manager

The `boot_manager_ns` signal is the only method to set the security state of the DMA manager.

When the DMAC exits from reset, it reads the status of the `boot_manager_ns` signal and sets the security of the DMA manager.



When set, the security state remains constant until a state transition on the `dma_rst_n` signal resets the DMAC.

Refer to “DMA Manager Thread in Secure State” on page 16–20 and “DMA Manager Thread in Non-Secure State” on page 16–20 for a description of how the security state of the DMA manager affects how the DMAC operates.

How to Set the Security State for the Interrupt Outputs

The DMAC provides the `boot_irq_ns[7:0]` signals to enable you to assign each `irq[x]` signal to a security state.

The `boot_irq_ns[7:0]` signals are connected to the system manager. Before taking the DMA out of reset, you should program `boot_irq_ns[7:0]` through the system manager to control which interrupt bits are secure.



The DMAC samples these bits immediately after it comes out of reset, and then ignores them until the next reset.

When set, the security state of each `irq[x]` remains constant until a state transition on the `dma_rst_n` signal resets the DMAC.

Refer to “Security Usage” on page 16–19 for a description of how the security state of the `irq[x]` signals affects how the DMAC executes the DMAWFE and DMASEV instructions.

How to Set the Security State for a Peripheral Request Interface

The DMAC provides the `boot_periph_ns[31:0]` signals to enable you to assign each peripheral request interface to a security state.

The `boot_periph_ns[31:0]` signals are connected to the system manager. Before taking the DMA out of reset, you should program the `boot_periph_ns[31:0]` signals through the system manager to control which peripheral interfaces are secure.



The DMAC samples these bits immediately after it comes out of reset, and then ignores them until the next reset. When set, the security state of each peripheral request interface remains constant until a state transition on the `dma_rst_n` signal resets the DMAC.

Refer to “[Security Usage](#)” on page 16–19 for how the security state of the peripheral request interfaces affects how a DMA channel thread executes the DMAWFP, DMALDP, DMASTP, or DMAFLUSHP instructions.

Using the Slave Interfaces

The slave interfaces connect the DMAC to the level 4 (L4) main bus and enable a microprocessor to access the registers. Using these registers, a microprocessor can:

- Access the status of the DMA manager thread
- Access the status of the DMA channel threads
- Enable or clear interrupts
- Enable events
- Issue an instruction for the DMAC to execute by programming the following debug registers:
 - DBGCMD register
 - DBGINST0 register
 - DBGINST1 register

Issuing Instructions to the DMAC using a Slave Interface

When the DMAC is operating, you can only issue the following limited subset of instructions:

- DMAGO—Starts a DMA transaction using a DMA channel that you specify.
- DMASEV—Signals the occurrence of an event, or interrupt, using an event number that you specify.
- DMAKILL—Terminates a thread.

You must ensure that you use the appropriate slave interface, depending on the security state in which the `boot_manager_ns` signal initializes the DMAC to operate. For example, if the DMAC is in the Secure state, you must issue the instruction using the secure slave interface, otherwise the DMAC ignores the instruction. You can use the secure or non-secure slave interface to start or restart a DMA channel when the DMAC is in the Non-secure state.



Before you can issue instructions using the debug instruction registers or the DBGCMD register, you must read the DBGSTATUS register to ensure that debug is idle, otherwise the DMAC ignores the instructions.

When the DMAC receives an instruction from a slave interface, it can take several clock cycles before it can process the instruction, for example, if the pipeline is busy processing another instruction.



Prior to issuing DMAGO, you must ensure that the system memory contains a suitable program for the DMAC to execute, starting at the address that the DMAGO specifies.

Using DMAGO with the Debug Instruction Registers

This example shows the necessary steps to start a DMA channel thread using the debug instruction registers.


1. Create a program for the DMA channel.
2. Store the program in a region of system memory.
3. Use one of the slave interfaces on the DMAC to program a DMAGO instruction as follows:
 - a. Poll the DBGSTATUS register to ensure that debug is idle, that is, the dbgstatus bit is 0.
 - b. Write to the DBGINST0 register and enter the:
 - Instruction byte 0 encoding for DMAGO.
 - Instruction byte 1 encoding for DMAGO.
 - Debug thread bit to 0. This selects the DMA manager thread.
 - c. Write to the DBGINST1 register with the DMAGO instruction byte [5:2] data. You must set these four bytes to the address of the first instruction in the program, that is written to system memory in step b.
4. Instruct the DMAC to execute the instruction that the debug instruction registers contain by writing zero to the DBGCMD register. The DMAC starts the DMA channel thread and sets the dbgstatus bit to 1. After the DMAC completes execution of the instruction, it clears the dbgstatus bit to 0.

Peripheral Request Interface

Figure 16-3 shows that the peripheral request interface consists of a peripheral request bus and a DMAC acknowledge bus that use the prefixes:

- dr—The peripheral request bus.
- da—The DMAC acknowledge bus.

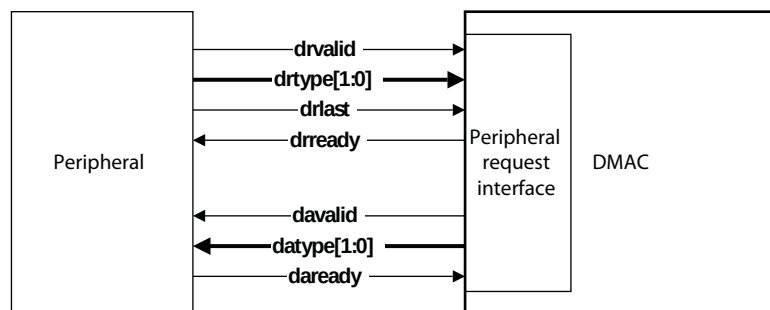Figure 16-3. Request and Acknowledge Buses on the Peripheral Request Interface



The peripheral signals the following on the request bus:

- Request a single transfer
- Request a burst transfer
- Acknowledge a flush request.

The peripheral signals the DMAC when it issues the last request of the DMA transfer sequence.

The DMAC can signal the following on the acknowledge bus:

- Signal when it completes the requested single transfer
- Signal when it completes the requested burst transfer
- Issue a flush request.

The DMAC allows you to assign a peripheral request interface to any of the DMA channels. When a DMA channel thread executes DMAWFP, the value programmed in the peripheral [4:0] field specifies the peripheral associated with that DMA channel. For more information, refer to “DMAWFP” on page 16-43.

The DMAC supports 31 peripheral request handshakes. Each request handshake can receive up to four outstanding requests, and is assigned a specific peripheral device ID. Table 16-1 lists the peripheral device ID assignments.

Table 16-1. Peripheral Request Interface Mapping

Peripheral	Request Interface ID	Protocol	Peripheral	Request Interface ID	Protocol
FPGA 0	0	Synopsys	SPI Master 0 TX	16	Synopsys
FPGA 1	1	Synopsys	SPI Master 0 RX	17	Synopsys
FPGA 2	2	Synopsys	SPI Slave 0 TX	18	Synopsys
FPGA 3	3	Synopsys	SPI Slave 0 RX	19	Synopsys
FPGA 4	4	Synopsys	SPI Master 1 TX	20	Synopsys
FPGA 5	5	Synopsys	SPI Master 1 RX	21	Synopsys
FPGA 6	6	Synopsys	SPI Slave 1 TX	22	Synopsys
FPGA 7	7	Synopsys	SPI Slave 1 RX	23	Synopsys
I ² C 0 TX	8	Synopsys	Quad SPI Flash TX	24	ARM
I ² C 0 RX	9	Synopsys	Quad SPI Flash RX	25	ARM
I ² C 1 TX	10	Synopsys	STM	26	ARM
I ² C 1 RX	11	Synopsys	Reserved	27	—
I ² C 2 TX (EMAC)	12	Synopsys	UART 0 TX	28	Synopsys
I ² C 2 RX (EMAC)	13	Synopsys	UART 0 RX	29	Synopsys
I ² C 3 TX (EMAC)	14	Synopsys	UART 1 TX	30	Synopsys
I ² C 3 RX (EMAC)	15	Synopsys	UART 1 RX	31	Synopsys

Request Acceptance Capability

The DMAC is able to accept one active request for each peripheral request interface. An active request is where the DMAC has not started the requested AXI data transfers.

Peripheral Length Management

The peripheral request interface enables a peripheral to control the quantity of data that a DMA cycle contains, without the DMAC being aware of how many data transfers it contains. The peripheral controls the DMA cycle in one of the following ways:

- Selects a single transfer
- Selects a burst transfer
- Notifies the DMAC when it commences the final request in the current series

When the DMAC executes a DMAWFP *periph* instruction, it halts execution of the thread and waits for the peripheral to send a request. When the peripheral sends the request, the DMAC sets the state of the request flags depending on the state of the following signals:

- *drtype_<x>*[1:0]—The DMAC sets the state of the *request_type* flag:
 - *drtype_<x>*[1:0]=b00—*request_type<x>* = Single.
 - *drtype_<x>*[1:0]=b01—*request_type<x>* = Burst.
- *dr last_<x>*—The DMAC sets the state of the *request_last* flag:
 - *dr last_<x>*=0—*request_last<x>* = 0.
 - *dr last_<x>*=1—*request_last<x>* = 1.



If the DMAC executes a DMAWFP single or DMAWFP burst instruction then the DMAC sets:

- The *request_type<x>* flag to Single or Burst, respectively
- The *request_last<x>* flag to 0.

DMALPFE is an assembler directive which forces the associated DMALPEND instruction to have its *nf* bit set to 0. This creates a program loop that does not use a loop counter to terminate the loop.

The DMAC exits the loop when the *request_last* flag is set to 1.

The DMAC conditionally executes the following instructions, depending on the state of the *request_type* and *request_last* flags:

- DMALD, DMAST, DMALPEND

When these instructions use the optional B|S suffix then the DMAC executes a DMANOP if the *request_type* flag does not match.

- DMALDP<B|S>, DMASTP<B|S>

The DMAC executes a DMANOP if the *request_type<x>* flag does not match the B|S

- DMALPEND

When the *nf* bit is 0, the DMAC executes a DMANOP if the *request_last* flag is set.

Use the DMALDB, DMALDPB, DMASTB and DMASTPB instructions if you require the DMAC to issue a burst transfer when the DMAC receives a burst request. The values in the CCR*n* register control the amount of data that the DMAC transfers.

Use the DMALDS, DMALDPS, DMASTS and DMASTPS instructions if you require the DMAC to issue a single transfer when the DMAC receives a single request. The DMAC ignores the value of the `src_burst_len` and `dst_burst_len` fields in the `CCRN` register and sets the `arlen[3:0]` or `awlen[3:0]` buses to 0x0.

DMAC Length Management

DMAC length management is when the DMAC controls the total amount of data to transfer. The peripheral uses the peripheral request interface to notify the DMAC when it requires the DMAC to transfer data to or from the peripheral. The DMA channel thread controls how the DMAC responds to the peripheral requests.

The following constraints apply to DMAC length management:

- The total quantity of data for all the single requests from a peripheral must be less than the quantity of data for a burst request for that peripheral.



The `CCRN` register controls how much data is transferred for a burst request and a single request. Altera recommends that you do not update a `CCRN` register when a transfer is in progress for channel *n*.

- When the peripheral sends a burst request then the peripheral must not send a single request until the DMAC acknowledges that the burst request is complete.

Use the DMAWFP single instruction when you require the program thread to halt execution until the peripheral request interface receives any request type. If the head entry in the request FIFO buffer is of request type:

- Single—The DMAC pops the entry from the FIFO buffer and continues program execution.
- Burst—The DMAC leaves the entry in the FIFO buffer and continues program execution.



The burst request entry remains in the request FIFO buffer until the DMAC executes a DMAWFP burst instruction or a DMAFLUSHP instruction.

Use the DMAWFP burst instruction when you require the program thread to halt execution until the peripheral request interface receives a burst request. If the head entry in the request FIFO buffer is of request type:

- Single—The DMAC removes the entry from the FIFO buffer and program execution remains
- Burst—The DMAC pops the entry from the FIFO buffer and continues program execution.

Use the DMALDP instruction when you require the DMAC to send an acknowledgement to the peripheral when it completes the AXI read transfers. Similarly, use the DMASTP instruction when you require the DMAC to send an acknowledgement to the peripheral when it completes the AXI write transfers. The DMAC uses the acknowledge bus to signal a transfer acknowledgement to peripheral `<x>`.



The DMAC sends an acknowledgement for a read transaction when the `rvalid` and `rlast` signals are high and for a write transaction when `bvalid` signal is high. The DMAC might send an acknowledgement to the peripheral while the transfer of write data to the end destination is still in progress.

Use the `DMAFLUSHP` instruction to reset the request FIFO buffer for the peripheral request interface. After the DMAC executes `DMAFLUSHP`, it ignores peripheral requests until the peripheral acknowledges the flush request. This enables the DMAC and peripheral to synchronize with each other.

Limitations

The peripherals connected to the DMA peripheral request interface use one of the following protocols:

- ARM
- Synopsys

For a peripheral using the ARM protocol, the only logic between the DMA and the peripheral is clock crossing logic. For other protocols, clock crossing and protocol adaptation logic is located between the DMA and peripheral. The following sections discuss the limitations of the peripheral handshake interface for peripherals using the Synopsys protocols.

No Flush Support

For peripherals that use the Synopsys peripheral request protocols the flush command is not supported. Issuing a flush to any peripheral interface supporting the Synopsys protocols is dropped before reaching the peripheral.

No Acknowledge Type

For the Synopsys peripheral request interface protocol, there is no acknowledge type available. As a result peripherals using the Synopsys protocol cannot distinguish between acknowledges to burst and single transfers.

Using Events and Interrupts

The DMAC can support eight events and interrupts. The `INTEN` register is used to control if each event-interrupt resource is either an event or an interrupt.

When the DMAC executes a `DMASEV` instruction it modifies the event-interrupt resource that you specify. The `INTEN` register sets the event-interrupt resource to function as an:

- **Event**—The DMAC generates an event for the specified event-interrupt resource. When the DMAC executes a `DMAWFE` instruction for the same event-interrupt resource then it clears the event.
- **Interrupt**—The DMAC sets the `irq<event_num>` signal high, where `<event_num>` is the number of the specified event resource. To clear the interrupt you must write to the `INTCLR` register.

Using an Event to Restart DMA Channels

When you program the INTEN register to generate an event, you can use the DMASEV and DMAWFE instructions to restart one or more DMA channels.

DMAC executes DMAWFE before DMASEV

To restart a single DMA channel:

1. The first DMA channel executes DMAWFE and then stalls while it waits for the event to occur.
2. The other DMA channel executes DMASEV using the same event number. This generates an event, and the first DMA channel restarts. The DMAC clears the event, one clock cycle after it executes DMASEV.

You can program multiple channels to wait for the same event. For example, if four DMA channels have all executed DMAWFE for event 2, then when another DMA channel executes DMASEV for event 2, the four DMA channels all restart at the same time. The DMAC clears the event, one clock cycle after it executes DMASEV.

DMAC executes DMASEV before DMAWFE

If the DMAC executes DMASEV before another channel executes DMAWFE then the event remains pending until the DMAC executes DMAWFE. When the DMAC executes DMAWFE it halts execution for one ac1k clock cycle, clears the event and then continues execution of the channel thread.

For example, if the DMAC executes DMASEV 6 and none of the other threads have executed DMAWFE 6 then the event remains pending. If the DMAC executes DMAWFE 6 instruction for channel 4 and then executes DMAWFE 6 instruction for channel 3, then:

1. The DMAC halts execution of the channel 4 thread for one ac1k clock.
2. The DMAC clears event 6.
3. The DMAC resumes execution of the channel 4 thread.
4. The DMAC halts execution of the channel 3 thread and the thread stalls while it waits for the next occurrence of event 6.

Interrupting the MPU Subsystem

The DMAC provides the `irq[x]` signals for use as active-high level-sensitive interrupts to the MPU subsystem. When you program the INTEN register to generate an interrupt, after the DMAC executes DMASEV, it sets the corresponding `irq[x]` signal high.

The MPU subsystem can clear the interrupt by writing to the INTCLR register.



Executing DMAWFE does not clear an interrupt.

If you use the DMASEV instruction to notify a microprocessor when the DMAC completes a DMALD or DMAST instruction then Altera recommends that you insert a memory barrier instruction before the DMASEV. Otherwise the DMAC might signal an interrupt before the AXI transfers complete. Refer to [Example 16-1](#).

Example 16-1. Memory Barrier Instruction

```
DMALD
DMAST
# Issue a write memory barrier
# Wait for the AXI write transfer to complete before the DMAC
# can send an interrupt
DMAWMB
# The DMAC sends the interrupt
DMASEV
```

Aborts

This section describes:

- [Abort Types](#)
- [Abort Sources](#)
- [Watchdog Abort](#)
- [Abort Handling](#)

Abort Types

An abort can be classified as either precise or imprecise, depending on whether the DMAC provides an abort handler with the precise state of the DMAC when the abort occurs. If an abort is:

- **Precise** The DMAC updates the PC register with the address of the instruction that created the abort.
- **Imprecise** The PC register might contain the address of an instruction which did not cause the abort to occur.

Abort Sources

The DMAC signals a precise abort under the following conditions:

- A DMA channel thread in the Non-secure state attempts to program its CCR*n* register and generate a secure AXI transaction.
- A DMA channel thread in the Non-secure state executes DMAWFE or DMASEV for an event that is set as secure. The boot_irq_ns memory-mapped control signals initialize the security state for an event.



For each event, the INTEN register controls if the DMAC generates an event or signals an interrupt.

- A DMA channel thread attempts to execute DMAST but the DMAC calculates that when it eventually performs the store, the MFIFO buffer contains insufficient data to enable it to complete the store.

- A DMA channel thread in the Non-secure state executes DMAWFP, DMALDP, DMASTP, or DMAFLUSHP for a peripheral request interface that is set as secure. The boot_periph_ns memory-mapped control signals initialize the security state for a peripheral request interface.
- A DMA manager thread in the Non-secure state executes DMAG0 to attempt to start a secure DMA channel thread.
- The DMAC receives an ERROR response on the AXI master interface when it performs an instruction fetch.
- A thread executes an undefined instruction.
- A thread executes an instruction with an operand that is invalid for the configuration of the DMAC.



When the DMAC signals a precise abort, the instruction that triggers the abort is not executed. Instead, the DMAC executes a DMANOP.

The DMAC signals an imprecise abort under the following conditions:

- The DMAC receives an ERROR response on the AXI master interface when it performs a data load
- The DMAC receives an ERROR response on the AXI master interface when it performs a data store
- A DMA channel thread executes DMALD or DMAST, and the MFIFO buffer is too small to hold the required amount of data
- A DMA channel thread executes DMAST but the thread has not executed sufficient DMALD instructions
- A DMA channel thread locks up because of resource starvation, and this causes the internal watchdog timer to time out.

Watchdog Abort

The DMAC can lock up if one or more DMA channel programs are running and the MFIFO buffer is too small to satisfy the storage requirements of the DMA programs.

The DMAC contains logic to prevent it from remaining in a state where it is unable to complete a DMA transfer.

The DMAC detects a lock up when all of the following conditions occur:

- Load queue is empty
- Store queue is empty
- All of the running channels are prevented from executing a DMALD instruction either because the MFIFO buffer does not have sufficient free space or another channel owns the load-lock.

When the DMAC detects a lockup it signals an interrupt and can also abort the contributing channels. The DMAC behavior depends on the state of the wd_irq_only bit in the WD register.

If:

- `wd_irq_only=0`—The DMAC aborts all of the contributing DMA channels and sets the `irq_abort` signal high.
- `wd_irq_only=1`—The DMAC sets the `irq_abort` signal high.


For more information, refer to [“Resource Sharing Between DMA Channels”](#) on page 16-26.

Abort Handling

The architecture of the DMAC is not designed to recover from an abort and you must therefore use an external agent, such as a microprocessor, to terminate a thread when an abort occurs.

Figure 16-4 shows the operating states for the DMA channel and DMA manager threads after an abort occurs.

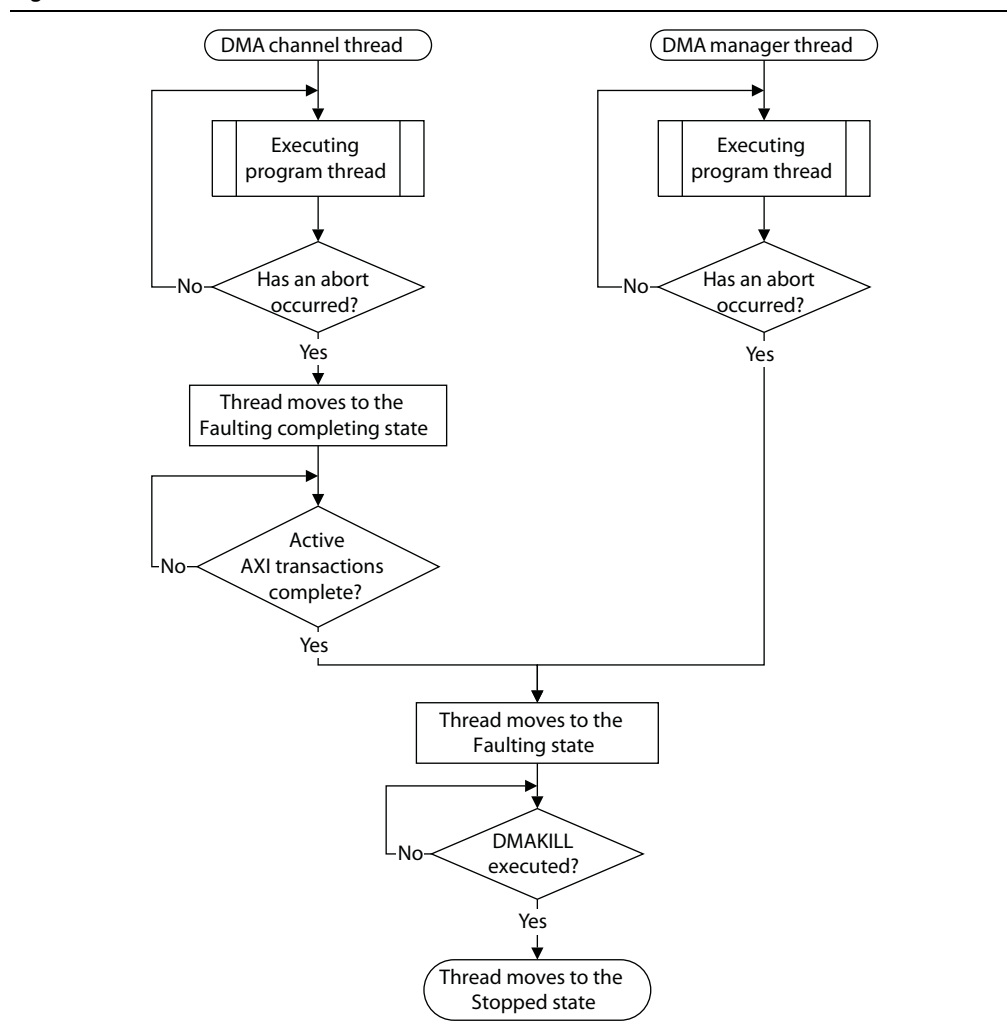Figure 16-4. Abort Process



After an abort occurs, the action the DMAC takes depends on the thread type:

- DMA channel thread—The thread immediately moves to the Faulting completing state. In this state, the DMAC:
 - Sets the `irq_abort` signal high
 - Stops executing instructions for the DMA channel
 - Invalidates all cache entries for the DMA channel updates the `CPCn` register to contain the address of the aborted instruction provided that the abort is precise
 - Does not generate AXI accesses for any instructions remaining in the read queue and write queue
 - Permits currently active AXI transactions to complete.



After the transactions for the DMA channel complete, the thread moves to the Faulting state.

- DMA manager thread—The thread immediately moves to the Faulting state and the DMAC sets the `irq_abort` signal high.

The external agent can respond to the assertion of the `irq_abort` signal by:

- Reading the status of the FSRD register to determine if the DMA manager is Faulting. In the Faulting state, the FSRD register provides the cause of the abort.
- Reading the status of the FSRC register to determine if a DMA channel is Faulting. In the Faulting state, the FSRC register provides the cause of the abort.

To enable a thread in the Faulting state to move to the Stopped state, the external agent must:

- Program the `DBGINST0` register with the encoding for the `DMAKILL` instruction.
- Write to the `DBGCMD` register.



If the aborted thread is secure, you must use the secure slave interface to update these

After a thread in the Faulting state executes `DMAKILL`, it moves to the Stopped state.

Security Usage

When the DMAC exits from reset, the status of the configuration signals configures the security for:

- DMA manager thread—The `DNS` bit in the `DSR` register returns the security state of the DMA manager thread.
- Events and interrupts—The `INS` bit in the `CR3` register returns the security state of the event-interrupt resources.
- Peripheral request interfaces—The `PNS` bit in the `CR4` register returns the security state of these interfaces.

Additionally, each DMA channel thread contains a dynamic non-secure bit, `CNS`, that is valid when the channel is not in the Stopped state.

DMA Manager Thread in Secure State

If the DNS bit is 0, the DMA manager thread operates in the Secure state and it only performs secure instruction fetches. When a DMA manager thread in the Secure state processes:

- DMAGO—The DMAC uses the status of the ns bit, to set the security state of the DMA channel thread by writing to the CNS bit for that channel.
- DMAWFE—The DMAC halts execution of the thread until the event occurs. When the event occurs, the DMAC continues execution of the thread, irrespective of the security state of the corresponding INS bit.
- DMASEV—The DMAC sets the corresponding bit in the INT_EVENT_RIS register, irrespective of the security state of the corresponding INS bit.

DMA Manager Thread in Non-Secure State

If the DNS bit is 1, the DMA manager thread operates in the Non-secure state, and it only performs non-secure instruction fetches. When a DMA manager thread in the Non-secure state processes:

- DMAGO—The DMAC uses the status of the ns bit, to control if it starts a DMA channel thread. If:
 - ns = 0—The DMAC does not start a DMA channel thread and instead it:
 - Executes a NOP.
 - Sets the FSRD register.
 - Sets the dmago_err bit in the FTRD register.
 - Moves the DMA manager to the Faulting state.
 - ns = 1—The DMAC starts a DMA channel thread in the Non-secure state and programs the CNS bit to be non-secure.
- DMAWFE—The DMAC uses the status of the corresponding INS bit, in the CR3 register, to control if it waits for the event. If:
 - INS = 0—The event is in the Secure state. The DMAC:
 - Executes a NOP.
 - Sets the FSRD register.
 - Sets the mgr_evt_err bit in the FTRD register.
 - Moves the DMA manager to the Faulting state.
 - INS = 1—The event is in the Non-secure state. The DMAC halts execution of the thread and waits for the event to occur.

- **DMASEV**—The DMAC uses the status of the corresponding INS bit, in the CR3 register, to control if it creates the event interrupt. If:
 - **INS = 0**—The event-interrupt resource is in the Secure state. The DMAC:
 - Executes a NOP.
 - Sets the FSRD register.
 - Sets the mgr_evnt_err bit in the FTRD register.
 - Moves the DMA manager to the Faulting state.
 - **INS = 1**—The event-interrupt resource is in the Non-secure state. The DMAC creates the event interrupt.

DMA Channel Thread in Secure State

When the CNS bit is 0, the DMA channel thread is programmed to operate in the Secure state and it only performs secure instruction fetches.

When a DMA channel thread in the Secure state processes the following instructions:

- **DMAWFE**—The DMAC halts execution of the thread until the event occurs. When the event occurs, the DMAC continues execution of the thread, irrespective of the security state of the corresponding INS bit, in the CR3 register.
- **DMASEV**—The DMAC creates the event interrupt, irrespective of the security state of the corresponding INS bit, in the CR3 register.
- **DMAWFP**—The DMAC halts execution of the thread until the peripheral signals a DMA request. When this occurs, the DMAC continues execution of the thread, irrespective of the security state of the corresponding PNS bit, in the CR4 register.
- **DMAALDP and DMASTP**—The DMAC sends a message to the peripheral to communicate that data transfer is complete, irrespective of the security state of the corresponding PNS bit, in the CR4 register.
- **DMAFLUSHP**—The DMAC clears the state of the peripheral and sends a message to the peripheral to resend its level status, irrespective of the security state of the corresponding PNS bit, in the CR4 register.

When a DMA channel thread is in the Secure state, it enables the DMAC to perform secure and non-secure AXI accesses.

DMA Channel Thread in Non-Secure State

When the CNS bit is 1, the DMA channel thread is programmed to operate in the Non-secure state and it only performs non-secure instruction fetches.

When a DMA channel thread in the Non-secure state processes the following instructions:

- **DMAWFE**—The DMAC uses the status of the corresponding INS bit, in the CR3 register, to control if it waits for the event. If:
 - **INS = 0**—The event is in the Secure state. The DMAC:
 - Executes a NOP.
 - Sets the appropriate bit in the FSRC register that corresponds to the DMA channel number.
 - Sets the `ch_evnt_err` bit in the `FTRn` register.
 - Moves the DMA channel to the Faulting completing state.
 - **INS = 1**—The event is in the Non-secure state. The DMAC halts execution of the thread and waits for the event to occur.
- **DMASEV**—The DMAC uses the status of the corresponding INS bit, in the CR3 register, to control if it creates the event. If:
 - **INS = 0**—The event-interrupt resource is in the Secure state. The DMAC:
 - Executes a NOP.
 - Sets the appropriate bit in the FSRC register that corresponds to the DMA channel number.
 - Sets the `ch_evnt_err` bit in the `FTRn` register.
 - Moves the DMA channel to the Faulting completing state.
 - **INS = 1**—The event-interrupt resource is in the Non-secure state. The DMAC creates the event interrupt.
- **DMAWFP**—The DMAC uses the status of the corresponding PNS bit, in the CR4 register, to control if it waits for the peripheral to signal a request. If:
 - **PNS = 0**—The peripheral is in the Secure state. The DMAC:
 - Executes a NOP.
 - Sets the appropriate bit in the FSRC register that corresponds to the DMA channel number.
 - Sets the `ch_periph_err` bit in the `FTRn` register.
 - Moves the DMA channel to the Faulting completing state.
 - **PNS = 1**—The peripheral is in the Non-secure state. The DMAC halts execution of the thread and waits for the peripheral to signal a request.

- **DMALDP and DMASTP**—The DMAC uses the status of the corresponding PNS bit, in the CR4 register, to control if it sends an acknowledgement to the peripheral. If:
 - **PNS = 0**—The peripheral is in the Secure state. The DMAC:
 - Executes a NOP.
 - Sets the appropriate bit in the FSRC register that corresponds to the DMA channel number.
 - Sets the ch_periph_err bit in the FTR n register.
 - Moves the DMA channel to the Faulting completing state.
 - **PNS = 1**—The peripheral is in the Non-secure state. The DMAC sends a message to the peripheral to communicate when the data transfer is complete.
- **DMAFLUSHP**—The DMAC uses the status of the corresponding PNS bit, in the CR4 register, to control if it sends a flush request to the peripheral. If:
 - **PNS = 0**—The peripheral is in the Secure state. The DMAC:
 - Executes a NOP.
 - Sets the appropriate bit in the FSRC register that corresponds to the DMA channel number.
 - Sets the ch_periph_err bit in the FTR n register.
 - Moves the DMA channel to the Faulting completing state.
 - **PNS = 1**—The peripheral is in the Non-secure state. The DMAC clears the state of the peripheral and sends a message to the peripheral to resend its level status.

When a DMA channel thread is in the Non-secure state, and a DMAMOV CCR instruction attempts to program the channel to perform a secure AXI transaction, the DMAC:

1. Executes a DMANOP.
2. Sets the appropriate bit in the FSRC register that corresponds to the DMA channel number.
3. Sets the ch_rdw_err bit in the FTR n register.
4. Moves the DMA channel thread to the Faulting completing state.

Constraints and Limitations of Use

This section describes constraints and use limitations.

DMA Channel Arbitration

The DMAC uses a round-robin scheme to service the active DMA channels. To ensure that the DMAC continues to service the DMA manager, it always services the DMA manager prior to servicing the next DMA channel.

It is not possible to alter the arbitration process of the DMAC.

DMA Channel Prioritization

The DMAC responds to all active DMA channels with equal priority. It is not possible to increase the priority of a DMA channel over any other DMA channels.

Instruction Cache Latency

When a cache miss occurs, the latency to service the request is mainly dependent on the read latency of the memory containing the DMA code. The latency that the DMAC adds is minimal.

AXI Data Transfer Size

The DMAC can only perform data accesses up to 64 bits in width. If you program the `src_burst_size` or `dst_burst_size` fields to be larger, the DMAC signals a precise abort. Refer to *“Abort Sources” on page 16-16* for more information.

AXI Bursts Crossing 4 KB Boundaries

The AXI specification does not permit AXI bursts to cross 4 KB address boundaries. If you program the DMAC with a combination of burst start address, size, and length that would cause a single burst to cross a 4 KB address boundary, then the DMAC instead generates a pair of bursts with a combined length equal to that specified. This operation is transparent to the DMAC channel thread program so that, for example, the DMAC responds to a single DMALD instruction by generating the appropriate pair of AXI read bursts.

AXI Burst Types

You can program the DMAC to generate only fixed-address or incrementing-address burst types for data accesses. It does not generate wrapping-address bursts for data accesses or for instruction fetches.

AXI Write Addresses

The DMAC can issue up to eight outstanding write addresses. The DMAC does not issue a write address until it has read in all of the data bytes required to fulfill that write transaction.

AXI Write Data Interleaving

The DMAC does not generate interleaved write data. All write data beats for one write transaction are output before any write data beat for the next write transaction.

Programming Restrictions

The following sections describe restrictions that apply when programming the DMAC.

Fixed Unaligned Bursts

The DMAC does not support fixed unaligned bursts. If you program the following conditions, the DMAC treats this as a programming error:

- Unaligned read
 - `src_inc` field is 0 in the `CCRn` register.
 - The `SARn` register contains an address that is not aligned to the size of data that the `src_burst_size` field contains.
- Unaligned write
 - `dst_inc` field is 0 in the `CCRn` register.
 - The `DARn` register contains an address that is not aligned to the size of data that the `dst_burst_size` field contains.

Endian Swap Size Restrictions

If you program the `endian_swap_size` field in the `CCRn` register, to enable a DMA channel to perform an endian swap, then you must set the corresponding `SARn` register and the corresponding `DARn` register to contain an address that is aligned to the size that the `endian_swap_size` field specifies before executing any DMALD or DMAST instructions.



If you update any of `endian_swap_size`, `SARn`, or `DARn`, for example, using a DMAADDH SAR instruction, then you must ensure that the `SARn` and `DARn` registers contain an address aligned to the size that the `endian_swap_size` field specifies before executing any additional DMALD or DMAST instructions.

If you program the `src_inc` field in the `CCRn` register to use a fixed address, you must program the `src_burst_size` field to select a burst size that is greater than or equal to the value that the `endian_swap_size` field specifies. Similarly, if you program the `dst_inc` field to select a fixed destination address, you must program the `dst_burst_size` field to select a burst size that is greater than or equal to the value that the `endian_swap_size` field specifies.

If you program the `dst_inc` field in the `CCRn` register to use an incrementing address, you must program the `CCRn` register so that `dst_burst_len` times `dst_burst_size` is a multiple of `endian_swap_size`. For example, if `endian_swap_size` = 2, 32-bit, and `dst_burst_size` = 1, 2 bytes per beat, then you can program `dst_burst_len` = 1, 3, 5, ..., 15, that is 2, 4, 6, ..., 16 transfers.

Updating DMA Channel Control Registers During a DMA Cycle

Prior to the DMAC executing a sequence of DMALD and DMAST instructions, the values you program in to the `CCRn` register, `SARn` register, and `DARn` register control the data byte lane manipulation that the DMAC performs when it transfers the data from the source address to the destination address.

You can update these registers during a DMA cycle but if you change certain register fields then it can cause the DMAC to discard data. The following sections describe the register fields that might have a detrimental impact on a data transfer.

Updates that affect the destination address

If you use a DMAMOV instruction to update the `DARn` register or `CCRn` register part way through a DMA cycle then this might cause a discontinuity in the destination data stream.

A discontinuity occurs if you change any of the following:

- `endian_swap_size` field.
- `dst_inc` bit.
- `dst_burst_size` field when `dst_inc = 0`, that is, fixed-address burst.
- `DARn` register so that it modifies the destination byte lane alignment. Because the bus width is 64 bits, you change bits [2:0] in the `DARn` register.

When a discontinuity in the destination data stream occurs, the DMAC:

1. Halts execution of the DMA channel thread.
2. Completes all outstanding read and write operations for the channel. That is, as if the DMAC were executing `DMARMB` and `DMAWMB`.
3. Discards any residual MFIFO buffer data for the channel.
4. Resumes execution of the DMA channel thread.

Updates that affect the source address

If you use a `DMAMOV` instruction to update the `SARn` register or `CCRn` register part way through a DMA cycle then this might cause a discontinuity in the source data stream.

A discontinuity occurs if you change any of the following:

- `src_inc` bit.
- `src_burst_size` field.
- `SARn` register so that it modifies the source byte lane alignment. Because the bus width is 64 bits, you change bits [2:0] in the `SARn` register.

When a discontinuity in the source data stream occurs, the DMAC:

1. Halts execution of the DMA channel thread.
2. Completes all outstanding read operations for the channel. That is, as if the DMAC were executing `DMARMB`.
3. Resumes execution of the DMA channel thread. No data is discarded from the MFIFO buffer.

Resource Sharing Between DMA Channels

DMA channel programs share the MFIFO buffer data storage resource. You must not start a set of concurrently running DMA channel programs with a resource requirement that exceeds 512, the size of the MFIFO buffer. If you exceed this limit then the DMAC might lock up and generate a Watchdog abort, refer to [“Watchdog Abort” on page 16-17](#).

The DMAC includes a mechanism called the *load-lock* to ensure that the shared MFIFO buffer resource is used correctly. The load-lock is either owned by one channel, or it is free. The channel that owns the load-lock can execute `DMALD` instructions successfully. A channel that does not own the load-lock pauses at a `DMALD` instruction until it takes ownership of the load-lock.

A channel claims ownership of the load lock when:

- It executes a `DMALD` or `DMALDP` instruction

- No other channel currently owns the load-lock.

A channel releases ownership of the load-lock when any of the following occur:

- It executes a DMAST, DMASTP, or DMASTZ
- It reaches a barrier, that is, it executes DMARMB or DMAWMB
- It waits, that is, it executes DMAWFP or DMAWFE
- It terminates normally, that is, it executes DMAEND
- It aborts for any reason, including DMAKILL.

The MFIFO buffer resource usage of a DMA channel program is measured in MFIFO buffer entries, and rises and falls as the program proceeds. The MFIFO buffer resource requirement of a DMA channel program is described using a *static requirement* and a *dynamic requirement* which are affected by the load-lock mechanism.

The static requirement is defined to be the maximum number of MFIFO buffer entries that a channel is currently using before that channel does one of the following:

- Executes a WFP or WFE instruction
- Claims ownership of the load-lock.

The dynamic requirement is defined to be the difference between the static requirement and the maximum number of MFIFO buffer entries that a channel program uses at any time during its

To calculate the total MFIFO buffer requirement, add the largest dynamic requirement to the sum of all the static requirements.

To avoid DMAC lockup, the total MFIFO buffer requirement of the set of channel programs must be equal to or less than 512, the MFIFO buffer depth.

For more information, refer to “*MFIFO Buffer Usage Overview*” on page 16-47.

DMA Controller Programming Model

This section describes the instruction set of the DMAC.

Instruction Syntax Conventions

The following conventions are used in assembler syntax prototype lines and their subfields:

- < >

Any item bracketed by < and > is mandatory. A description of the item and of how it is encoded in the instruction is supplied by subsequent text.

- []

Any item bracketed by [and] is optional. A description of the item and of how its presence or absence is encoded in the instruction is supplied by subsequent

- Spaces

Single spaces are used for clarity, to separate items. When a space is obligatory in the assembler syntax, two or more consecutive spaces are used.

Instruction Set Summary

The DMAC instructions:

- Use a DMA prefix, to provide a unique name-space
- Have 8-bit opcodes that might use a variable data payload of 0, 8, 16, or 32 bits
- Use suffixes that are consistent.

Table 16-2 shows a summary of the instruction syntax.

Table 16-2. Instruction Syntax Summary

Mnemonic	Instruction	DMA Manager Usage	DMA Channel Usage	Description
DMAADDH	Add Halfword	No	Yes	Refer to “DMAADDH” on page 16-28.
DMAADNH	Add Negative Halfword	No	Yes	Refer to “DMAADNH” on page 16-29.
DMAEND	End	Yes	Yes	Refer to “DMAEND” on page 16-30.
DMAFLUSHP	Flush and Notify Peripheral	No	Yes	Refer to “DMAFLUSHP” on page 16-30.
DMAGO	Go	Yes	No	Refer to “DMAGO” on page 16-31.
DMAKILL	Kill	Yes	Yes	Refer to “DMAKILL” on page 16-32.
DMALD	Load	No	Yes	Refer to “DMALD[S B]” on page 16-33.
DMALDP	Load and Notify Peripheral	No	Yes	Refer to “DMALDP<S B>” on page 16-34.
DMALP	Loop	No	Yes	Refer to “DMALP” on page 16-35.
DMALPEND	Loop End	No	Yes	Refer to “DMALPEND[S B]” on page 16-36.
DMALPFE	Loop Forever	No	Yes	Refer to “DMALPFE” on page 16-38.
DMAMOV	Move	No	Yes	Refer to “DMAMOV” on page 16-38.
DMANOP	No Operation	Yes	Yes	Refer to “DMANOP” on page 16-39.
DMARMB	Read Memory Barrier	No	Yes	Refer to “DMARMB” on page 16-39.
DMASEV	Send Event	Yes	Yes	Refer to “DMASEV” on page 16-40.
DMAST	Store	No	Yes	Refer to “DMAST[S B]” on page 16-40.
DMASTP	Store and Notify Peripheral	No	Yes	Refer to “DMASTP<S B>” on page 16-41.
DMASTZ	Store Zero	No	Yes	Refer to “DMASTZ” on page 16-42.
DMAWFE	Wait For Event	Yes	Yes	Refer to “DMAWFE” on page 16-43.
DMAWFP	Wait For Peripheral	No	Yes	Refer to “DMAWFP” on page 16-43.
DMAWMB	Write Memory Barrier	No	Yes	Refer to “DMAWMB” on page 16-44.

Instructions

The following sections describe the instructions that a DMAC can execute.

DMAADDH

Add Halfword adds an immediate 16-bit value to the SAR_n register or DAR_n register, for the DMA channel thread. This enables the DMAC to support 2D DMA operations.



The immediate unsigned 16-bit value is zero-extended before the DMAC adds it to the address, using 32-bit addition. The DMAC discards the carry bit so that addresses wrap from 0xFFFFFFFF to 0x00000000.

Figure 16-5 shows the instruction encoding.

Figure 16-5. DMAADDH Encoding

23	16	15	8	7	6	5	4	3	2	1	0
imm[15:8]								imm[7:0]			
								0	1	0	1
								0	1	ra	0

Assembler syntax

DMAADDH <address_register>, <16-bit immediate>

where:

<address_register> Selects the address register to use. It must be either:

SAR SAR*n* register and sets ra to 0

DAR DAR*n* register and sets ra to 1

<16-bit immediate> The immediate value to be added to the <address_register>.

Operation

You can only use this instruction in a DMA channel thread.

DMAADNH

Add Negative Halfword adds an immediate negative 16-bit value to the SAR*n* register or DAR*n* register, for the DMA channel thread. This enables the DMAC to support 2D DMA operations, or reading or writing an area of memory in a different order to naturally incrementing addresses.



The immediate unsigned 16-bit value is one-extended to 32 bits, to create a value that is the two's complement representation of a negative number between -65536 and -1, before the DMAC adds it to the address using 32-bit addition. The DMAC discards the carry bit so that addresses wrap from 0xFFFFFFFF to 0x00000000. The net effect is to subtract between 65536 and 1 from the current value in the source or destination address register.

Figure 16-6 shows the instruction encoding.

Figure 16-6. DMAADNH Encoding

23	16	15	8	7	6	5	4	3	2	1	0
imm[15:8]								imm[7:0]			
								0	1	0	1
								1	1	ra	0

Assembler syntax

DMAADNH <address_register>, <16-bit immediate>

where:

<address_register> Selects the address register to use. It must be either:

SAR SAR n register and sets ra to 0

DAR DAR n register and sets ra to 1

<16-bit immediate> The immediate value to be added to the <address_register>.



You should specify the 16-bit immediate as the number that is to be represented in the instruction encoding. For example, DMAADNH DAR, 0xFFFF0 causes the value 0xFFFFFFF0 to be added to the current value of the Destination Address register, effectively subtracting 16 from the DAR.

Operation

You can only use this instruction in a DMA channel thread.

DMAEND

End signals to the DMAC that the DMA sequence is complete. After all DMA transfers are complete for the DMA channel, the DMAC moves the channel to the Stopped state. It also flushes data from the MFIFO buffer and invalidates all cache entries for the thread.

Figure 16-7 shows the instruction encoding.

Figure 16-7. DMAEND Encoding

7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	0

Assembler syntax

DMAEND

Operation

You can use the instruction with the DMA manager thread and the DMA channel thread.

DMAFLUSHP

Flush Peripheral clears the state in the DMAC that describes the contents of the peripheral and sends a message to the peripheral to resend its level status.

Figure 16-8 shows the instruction encoding.

Figure 16-8. DMAFLUSHP Encoding



Assembler syntax

DMAFLUSHP <peripheral>

where:

<peripheral> 5-bit immediate, value 0-31

Operation

You can only use this instruction in a DMA channel thread.

DMAGO

When the DMA manager executes Go for a DMA channel that is in the Stopped state, it performs the following steps on the DMA channel:


1. Moves a 32-bit immediate into the program counter
2. Sets its security state
3. Updates it to the Executing state.



If a DMA channel is not in the Stopped state when the DMA manager executes DMAGO then the DMAC does not execute DMAGO but instead it executes DMANOP.

Figure 16-9 shows the instruction encoding.

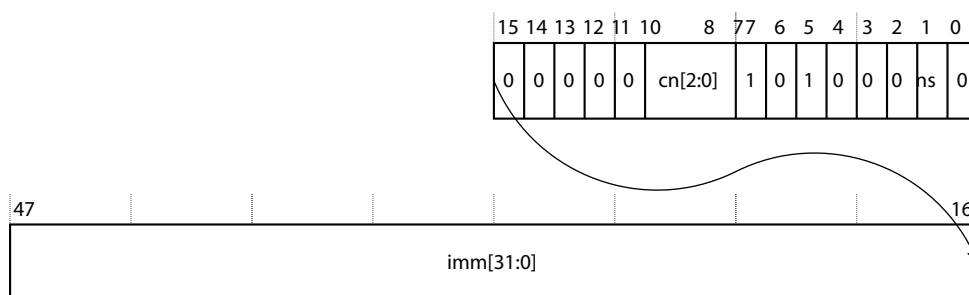Figure 16-9. DMAGO Encoding



Assembler syntax

DMAGO <channel_number>, <32-bit_immediate> [, ns]

where:

<channel_number> Selects a DMA channel. It must be one of:

- C0 DMA channel 0
- C1 DMA channel 1
- C2 DMA channel 2
- C3 DMA channel 3
- C4 DMA channel 4
- C5 DMA channel 5
- C6 DMA channel 6
- C7 DMA channel 7



If you provide a channel number that is not available for your configuration of the DMAC, the DMA manager thread aborts.

<32-bit_immediate> The immediate value that is written to the CPCn register for the selected <channel_number>.

[ns]

- If ns is present, the DMA channel operates in the Non-secure state.
- Otherwise, the execution of the instruction depends on the security state of the DMA manager:

DMA manager is in the Secure state—DMA channel operates in the Secure state.

DMA manager is in the Non-secure state—The DMAC aborts.

Operation

You can only use this instruction with the DMA manager thread.

DMAKILL

Kill instructs the DMAC to immediately terminate execution of a thread. Depending on the thread type, the DMAC performs the following steps:

DMA Manager Thread

1. Invalidates all cache entries for the DMA manager.
2. Moves the DMA manager to the Stopped state.

DMA Channel Thread

1. Moves the DMA channel to the Killing state.
2. Waits for AXI transactions, with an ID equal to the DMA channel number, to complete.
3. Invalidates all cache entries for the DMA channel.

4. Remove all entries in the MFIFO buffer for the DMA channel.
5. Remove all entries in the read buffer queue and write buffer queue for the DMA channel.
6. Moves the DMA channel to the Stopped state.

Figure 16-10 shows the instruction encoding.

Figure 16-10. DMAKILL Encoding

7	6	5	4	3	2	1	0
0	0	0	0	0	0	0	1

Assembler syntax

DMAKILL

Operation

You can use the instruction with the DMA manager thread and the DMA channel thread.



You must not use the DMAKILL instruction in DMA channel programs. To issue a DMAKILL instruction, use the DBGINST0 register.

DMALD[S | B]

Load instructs the DMAC to perform a DMA load, using AXI transactions that the source address registers and channel control registers specify. It places the read data into the MFIFO buffer and tags it with the corresponding channel number. DMALD is an unconditional instruction but DMALDS and DMALDB are conditional on the state of the request_type flag. If the src_inc bit in the channel control registers is set to incrementing, the DMAC updates the source address registers after it executes DMALD[S|B].



The DMAC sets the value of request_type when it executes a DMAWFP instruction. Refer to “DMAWFP” on page 16-43.

Figure 16-11 shows the instruction encoding.

Figure 16-11. DMALD[S|B] Encoding

7	6	5	4	3	2	1	0
0	0	0	0	0	1	bs	x

Assembler syntax

DMALD[S|B]

where:

[S] If S is present, the assembler sets bs to 0 and x to 1. The instruction is conditional on the state of the request_type flag:

- request_type = Single

The DMAC performs a DMALD instruction and it sets ar len[3:0]=0x0 so that the AXI read transaction length is one. The DMAC ignores the value of the src_burst_len field in the channel control registers.

- request_type = Burst

The DMAC performs a DMANOP instruction. The DMAC increments the channel PC to the next instruction. No state change occurs.

[B] If B is present, the assembler sets bs to 1 and x to 1. The instruction is conditional on the state of the request_type flag:

- request_type = Single

The DMAC performs a DMANOP instruction. The DMAC increments the channel PC to the next instruction. No state change occurs.

- request_type = Burst

The DMAC performs a DMALD.

If you do not specify the S or B operand, the assembler sets bs to 0 and x to 0, and the DMAC always executes a DMA load.

Operation

You can only use this instruction in a DMA channel thread. If you specify the S or B operand, execution of the instruction is conditional on the state of request_type matching that of the instruction.

DMALDP<S | B>

Load and notify Peripheral instructs the DMAC to perform a DMA load, using AXI transactions that source address registers and channel control registers specify. It places the read data into a FIFO buffer that is tagged with the corresponding channel number and after it receives the last data item, it sends an acknowledgement to the peripheral that the data transfer is complete. If the src_inc bit in the channel control registers is set to incrementing, the DMAC updates source address registers after it executes DMALDP<S | B>.

Figure 16-12 shows the instruction encoding.

Figure 16-12. DMALDP<S | B> Encoding

15	11	10	9	8	7	6	5	4	3	2	1	0
periph[4:0]				0	0	0	0	0	1	0	bs	1

Assembler syntax

DMALDP<S | B> <peripheral>

where:

<S> When S is present, the assembler sets bs to 0. The instruction is conditional on the state of the request_type flag:

- request_type = Single

The DMAC performs a DMALDP instruction and it sets ar len[3:0]=0x0 so that the AXI read transaction length is one. The DMAC ignores the value of the src_burst_len field in the channel control registers.

- request_type = Burst

The DMAC performs a DMANOP.

 When B is present, the assembler sets bs to 1. The instruction is conditional on the state of the request_type flag:

- request_type = Single

The DMAC performs a DMANOP.

- request_type = Burst

The DMAC performs a load using a burst DMA transfer.

<peripheral> 5-bit immediate, value 0-31.



The DMAC sets the value of the request_type flag when it executes a DMAWFP instruction. Refer to “DMAWFP” on page 16-43.

Operation

You can only use this instruction in a DMA channel thread. Execution of the instruction is conditional on the state of the request_type flag matching that of the instruction.

DMALP

Loop instructs the DMAC to load an 8-bit value into the loop counter register you specify.

This instruction indicates the start of a section of instructions, and you set the end of the section using the DMALPEND instruction. Refer to “DMALPEND[S | B]” on page 16-36. The DMAC repeats the set of instructions that you insert between DMALP and DMALPEND until the value in the loop counter register reaches zero.



The DMAC saves the value of the PC for the instruction that follows DMALP. After the DMAC executes DMALPEND, and the loop counter register is not zero, this enables it to execute the first instruction in the loop.

Figure 16-13 shows the instruction encoding.

Figure 16-13. DMALP Encoding

15	8	7	6	5	4	3	2	1	0
iter[7:0]		0	0	1	0	0	0	lc	0

Assembler syntax

DMALP <loop_iterations>

where:

<loop_iterations>

Specifies the number of loops to perform, range 1-256.

- The assembler determines the loop counter register to use and either:
 - Sets lc to 0, and the DMAC writes the value loop_iterations minus 1 to the loop counter 0 registers
 - Sets lc to 1, and the DMAC writes the value loop_iterations minus 1 to the loop counter 1 registers.

Operation

You can only use this instruction in a DMA channel thread.

DMALPEND[S | B]

Loop End indicates the last instruction in the program loop but the behavior of the DMAC depends on whether DMALP or DMALPFE starts the loop. If a loop starts with:

- DMALP The loop has a defined loop count and DMALPEND[S|B] instructs the DMAC to read the value of the loop counter register. If a loop counter register returns:
 - Zero—The DMAC executes a DMANOP and therefore exits the loop.
 - Nonzero—The DMAC decrements the value in the loop counter register and updates the thread PC to contain the address of the first instruction in the program loop, that is, the instruction that follows the DMALP.
- DMALPFE The loop has an undefined loop count and the DMAC uses the state of the request_last flag to control when it exits the loop. If the request_last flag is:
 - 0—The DMAC updates the thread PC to contain the address of the first instruction in the program loop, that is, the instruction that follows the DMALP.
 - 1—The DMAC executes a DMANOP and therefore exits the loop.

Figure 16-14 shows the instruction encoding.

Figure 16-14. DMALPEND[S|B] Encoding

15	8	7	6	5	4	3	2	1	0
backwards_jump[7:0]		0	0	1	nf	1	lc	bs	x

Assembler syntax

DMALPEND[S|B]

where:

[S] If S is present and the loop starts with DMALP, then the assembler sets bs to 0 and x to 1. The instruction is conditional on the state of the request_type flag:

- request_type = Single
 - The DMAC executes the DMALPEND.
- request_type = Burst
 - The DMAC performs a DMANOP and therefore exits the loop.

[B] If B is present and the loop starts with DMALP, then the assembler sets bs to 1 and x to 1. The instruction is conditional on the state of the request_type flag:

- request_type = Single
 - The DMAC performs a DMANOP and therefore exits the loop.
- request_type = Burst
 - The DMAC executes the DMALPEND

If you do not specify the S or B operand, the assembler sets bs to 0 and x to 0, and the DMAC always executes the DMALPEND.



You must not specify the S or B operand when a loop starts with DMALPFE. If you do, the assembler issues a warning message and sets bs to 0, x to 0, and nf to 1. In the same way as for DMALPFE, the DMAC uses the state of the request_last flag to control when it exits the loop.



The DMAC sets the value of the:

- request_type flag when it executes a DMAWFP instruction. Refer to “DMAWFP” on page 16-43.
- request_last flag to 1 when the corresponding peripheral issues the last request command through the peripheral request interface. For more information, refer to “Peripheral Length Management” on page 16-12.

To correctly assign the additional bits in the DMALPEND instruction, that Figure 16-14 shows, the assembler determines the values for:

backwards_jump[7:0] Sets the relative location of the first instruction in the program loop. The assembler calculates the value for backwards_jump[7:0] by subtracting the address of the first instruction in the loop from the address of the DMALPEND.

- nf sets it to:
 - 0 if DMALPFE started the program loop
 - 1 if DMALP started the program loop.
- lc sets it to:
 - 0 if the loop counter 0 registers contains the loop counter value
 - 1 if the loop counter 1 registers contains the loop counter value
 - 1 if DMALPFE started the program loop.

Operation

You can only use this instruction in a DMA channel thread. If you specify the S or B operand, execution of the instruction is conditional on the state of the request_type flag matching that of the instruction.

DMALPFE

The assembler uses Loop Forever to configure certain bits in DMALPEND. Refer to “DMALPEND[S | B]” on page 16-36.



When the assembler encounters DMALPFE, it does not create an instruction for the DMAC, but instead, it modifies the behavior of DMALPEND. The insertion of DMALPFE in program code identifies the start of the loop.

Assembler syntax

DMALPFE


DMAMOV

Move instructs the DMAC to move a 32-bit immediate into the following registers:

- source address registers
- destination address registers
- channel control registers

Figure 16-15 shows the instruction encoding.

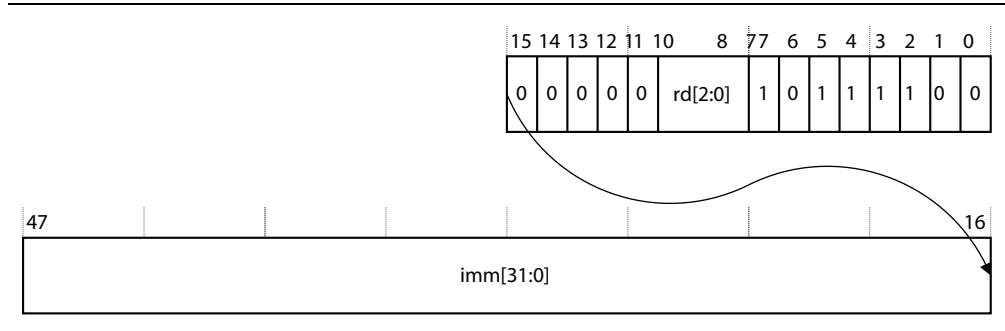Figure 16-15. DMAMOV Encoding



Assembler syntax

DMAMOV <destination_register>, <32-bit_immediate>

where:

<destination_register>

The valid registers are:

- SAR—selects the source address registers and sets rd to b000
- CCR—selects the channel control registers and sets rd to b001
- DAR—selects the destination address registers and sets rd to b010

<32-bit_immediate>

A 32-bit value that is written to the specified destination register.



For information about using the assembler to program the various fields that the channel control registers, refer to “DMAMOV CCR” on page 16-46.

Operation

You can only use this instruction in a DMA channel thread.

DMANOP

No Operation does nothing. You can use this instruction for code alignment purposes.

Figure 16-16 shows the instruction encoding.

Figure 16-16. DMANOP Encoding

7	6	5	4	3	2	1	0
0	0	0	1	1	0	0	0

Assembler syntax

DMANOP

Operation

You can use the instruction with the DMA manager thread and the DMA channel thread.

DMARMB

Read Memory Barrier forces the DMA channel to wait until all of the executed DMALD instructions for that channel have been issued on the AXI master interface and have completed.

This enables write-after-read sequences to the same address location with no hazards.

Figure 16-17 shows the instruction encoding.

Figure 16-17. DMARMB Encoding

7	6	5	4	3	2	1	0
0	0	0	1	0	0	1	0

Assembler syntax

DMARMB

Operation

You can only use this instruction in a DMA channel thread.

DMASEV

Send Event instructs the DMAC to modify an event-interrupt resource. Depending on how you program the interrupt enable register, this either:

- Generates event `<event_num>`



Typically, you use DMAWFE to stall a thread and then another thread executes DMASEV, using the appropriate event number, to unstall the waiting thread. Refer to “Using an Event to Restart DMA Channels” on page 16-15.

- Signals an interrupt using `irq<event_num>`.

Figure 16-18 shows the instruction encoding.

Figure 16-18. DMASEV Encoding

15	11	10	9	8	7	6	5	4	3	2	1	0
event_num[4:0]	0	0	0	0	0	1	1	0	1	0	0	

Assembler syntax

DMASEV `<event_num>`

where:

`<event_num>` 5-bit immediate, value 0-31



The DMAC aborts the thread if you select an event number that is not available.

Operation

You can use the instruction with the DMA manager thread and the DMA channel thread. For more information, refer to “Using Events and Interrupts” on page 16-14.

DMAST[S | B]

Store instructs the DMAC to transfer data from the FIFO buffer to the location that the destination address registers specifies, using AXI transactions that the DA register and channel control registers specify. If the `dst_inc` bit in the channel control registers is set to incrementing, the DMAC updates the destination address registers after it executes DMAST[S|B].

Figure 16-19 shows the instruction encoding.

Figure 16-19. DMAST[S|B] Encoding

7	6	5	4	3	2	1	0
0	0	0	0	1	0	0s	x

Assembler syntax

DMAST[S|B]

where:

[S] If S is present, the assembler sets bs to 0 and x to 1. The instruction is conditional on the state of the request_type flag:

- request_type = Single
 - The DMAC performs a DMAST instruction and it sets awlen[3:0]=0x0 so that the AXI write transaction length is one. The DMAC ignores the v value of the dst_burst_len field in the channel control registers.
- request_type = Burst
 - The DMAC performs a DMANOP instruction. The DMAC increments the channel PC to the next instruction. No state change occurs.

[B] If B is present, the assembler sets bs to 1 and x to 1. The instruction is conditional on the state of the request_type flag:

- request_type = Single
 - The DMAC performs a DMANOP instruction. The DMAC increments the channel PC to the next instruction. No state change occurs.
- request_type = Burst
 - The DMAC performs a DMAST.
 - If you do not specify the S or B operand, the assembler sets bs to 0 and x to 0, and the DMAC always executes a DMA store.



The DMAC sets the value of the request_type flag when it executes a DMAWFP instruction. Refer to “DMAWFP” on page 16-43.

Operation

You can only use this instruction in a DMA channel thread. If you specify the S or B operand, execution of the instruction is conditional on the state of the request_type flag matching that of the instruction.

The DMAC only commences the burst when the MFIFO buffer contains all of the data necessary to complete the burst transfer.

DMASTP<S | B>

Store and notify Peripheral instructs the DMAC to transfer data from the FIFO buffer to the location that the destination address registers specifies, using AXI transactions that the DA register and channel control registers specify. It uses the DMA channel number to access the appropriate location in the FIFO buffer. After the DMA store is complete, and the DMAC has received a buffered write response, it issues an acknowledgement to the peripheral that the data transfer is complete. If the dst_inc bit in the channel control registers is set to incrementing, the DMAC updates the destination address registers after it executes DMASTP<S|B>.

Figure 16-20 shows the instruction encoding.

Figure 16-20. DMASTP<S|B> Encoding

15	11	10	9	8	7	6	5	4	3	2	1	0
periph[4:0]					0	0	0	0	0	1	0	bs

Assembler syntax

DMASTP<S|B> <peripheral>

where:

<S> Sets bs to 0. This instructs the DMAC to perform:

- A single DMA store operation if request_type is programmed to Single



The DMAC ignores the state of the dst_burst_len field in the channel control registers and always performs an AXI transfer with a burst length of one.

- A DMANOP if request_type is programmed to Burst.

 Sets bs to 1. This instructs the DMAC to perform:

- The DMA store if request_type is programmed to Burst
- A DMANOP if request_type is programmed to Single.

<peripheral> 5-bit immediate, value 0-31.



The DMAC sets the value of the request_type flag when it executes a DMAWFP instruction. Refer to “DMAWFP” on page 16-43.

Operation

You can only use this instruction in a DMA channel thread.

The DMAC only commences the burst when the MFIFO buffer contains all of the data necessary to complete the burst transfer.

DMASTZ

Store Zero instructs the DMAC to store zeros, using AXI transactions that the destination address registers and channel control registers specify. If the dst_inc bit in the channel control registers is set to incrementing, the DMAC updates the destination address registers after it executes DMASTZ.

Figure 16-21 shows the instruction encoding.

Figure 16-21. DMASTZ Encoding

7	6	5	4	3	2	1	0
0	0	0	0	1	1	0	0

Assembler syntax

DMASTZ

Operation

You can only use this instruction in a DMA channel thread.

DMAWFE

Wait For Event instructs the DMAC to halt execution of the thread until the event, that *<event_num>* specifies, occurs. When the event occurs, the thread moves to the Executing state and the DMAC clears the event. Refer to “Using Events and Interrupts” on page 16-14.

Figure 16-22 shows the instruction encoding.

Figure 16-22. DMAWFE Encoding

15	11	10	9	8	7	6	5	4	3	2	1	0
event_num[4:0]	0	i	0	0	0	1	1	0	1	1	0	

Assembler syntax

DMAWFE *<event_num>*[, *invalid*]

where:

<event_num> 5-bit immediate, value 0-31

[*invalid*] Sets *i* to 1. If *invalid* is present, the DMAC invalidates the instruction cache for the current DMA thread. If *invalid* is not present, then the assembler sets *i* to 0 and the DMAC does not invalidate the instruction cache for the current DMA.



The DMAC aborts the thread if you select an event number that is not available for your configuration of the DMAC.

To ensure cache coherency, you must use *invalid* when a processor writes the instruction stream for a DMA channel.

Operation

You can use the instruction with the DMA manager thread and the DMA channel thread.

DMAWFP

Wait For Peripheral instructs the DMAC to halt execution of the thread until the specified peripheral signals a DMA request for that DMA channel.

Figure 16-23 shows the instruction encoding.

Figure 16-23. DMAWFP Encoding

15	11	10	9	8	7	6	5	4	3	2	1	0
peripheral[4:0]	0	0	0	0	0	1	1	0	0	bs	p	

Assembler syntax

DMAWFP <peripheral>, <single|burst|periph>

where:

<peripheral> 5-bit immediate, value 0-31



The DMAC aborts the thread if you select a peripheral number that is not available.

<single> Sets bs to 0 and p to 0. This instructs the DMAC to continue executing the DMA channel thread after it receives a single or burst DMA request. The DMAC sets the request_type to Single, for that DMA channel.

<burst> Sets bs to 1 and p to 0. This instructs the DMAC to continue executing the DMA channel thread after it receives a burst DMA request. The DMAC sets the request_type to Burst.



The DMAC ignores single burst DMA requests.

<periph> Sets bs to 0 and p to 1. This instructs the DMAC to continue executing the DMA channel thread after it receives a single or burst DMA request. The DMAC sets the request_type to:

Single When it receives a single DMA request.

Burst When it receives a burst DMA request.

Operation

You can only use this instruction in a DMA channel thread.

DMAWMB

Write Memory Barrier forces the DMA channel to wait until all of the executed DMAST instructions for that channel have been issued on the AXI master interface and have completed.

This permits read-after-write sequences to the same address location with no hazards.

Figure 16-24 shows the instruction encoding.

Figure 16-24. DMAWMB Encoding

7	6	5	4	3	2	1	0
0	0	0	1	0	0	1	1

Assembler syntax

DMAWMB

Operation

You can only use this instruction in a DMA channel thread.

Assembler Directives

The assembler provides the following additional commands:

- DCD
- DCB
- DMALP
- DMALPFE
- DMAMOV CCR

DCD

Assembler directive to place a 32-bit immediate in the instruction stream.

Syntax

DCD imm32

DCB

Assembler directive to place an 8-bit immediate in the instruction stream.

Syntax

DCB imm8

DMALP

Assembler directive to insert an iterative loop.

Syntax

DMALP [<LC0>|<LC1>] <loop_iterations>

where:

<loop_iterations>

An 8-bit value that specifies the number of loops to perform.



For clarity in writing assembler instructions, the 8-bit value is the actual number of iterations of the loop to be executed. The assembler decrements this by one to create the actual value, 0-255, that the DMAC uses.

[LC0] If LC0 is present, the DMAC stores <loop_iterations> in the loop counter 0 registers.

[LC1] If LC1 is present, the DMAC stores <loop_iterations> in the loop counter 1 registers.

 If LC0 or LC1 is not present, the assembler determines the loop counter register to use.

DMALPFE

Assembler directive to insert a repetitive loop.

Syntax

DMALPFE

Enables the assembler to clear the nf bit that is present in DMALPEND. Refer to “DMALPEND[S | B]” on page 16-36.

DMAMOV CCR

Assembler directive that enables you to program the channel control registers using the specified format.

Syntax

```
DMAMOV CCR,
    [SB<1-16>] [SS<8|16|32|64|128>] [SA<I|F>]
    [SP<imm3>] [SC<imm4>]
    [DB<1-16>] [DS<8|16|32|64|128>] [DA<I|F>]
    [DP<imm3>] [DC<imm4>]
    [ES<8|16|32|64|128>]
```

Table 16-3 shows the argument descriptions and the default values.

Table 16-3. DMAMOV CCR argument description and the default values

Syntax	Description	Options	Default
SA	Source address increment. Sets the value of arburst[0]	I = Increment F = Fixed	I
SS	Source burst size in bits. Sets the value of arsize[2:0]	8, 16, 32, or 64	8
SB	Source burst length. Sets the value of arlen[3:0]	1 to 16	1
SP	Source protection	0 to 7 ⁽¹⁾	0
SC	Source cache	0 to 15 ⁽¹⁾ ⁽²⁾	0
DA	Destination address increment. Sets the value of awburst[0]	I = Increment F = Fixed	I
DS	Destination burst size in bits. Sets the value of awsize[2:0]	8, 16, 32, or 64	8
DB	Destination burst length. Sets the value of awlen[3:0]	1 to 16	1
DP	Destination protection	0 to 7 ⁽¹⁾	0
DC	Destination cache	0 to 15 ⁽¹⁾ ⁽³⁾	0
ES	Endian swap size, in bits	8, 16, 32, or 64	8

Notes to Table 16-3:

- (1) You must use decimal values when programming this immediate value
- (2) Because the DMAC ties ARCACHE[3] LOW, the assembler always sets bit 3 to 0 and uses bits [2:0] of your chosen value for SC.
- (3) Because the DMAC ties AWCACHE[2] LOW, the assembler always sets bit 2 to 0 and uses bit [3] and bits [1:0] of your chosen value for DC.

MFIFO Buffer Usage Overview

This section shows MFIFO buffer usage for some example DMA channel programs.

About MFIFO Buffer Usage Overview

The MFIFO buffer is a shared resource that is utilized on a first-come, first-served basis by all currently active channels. To a program, it appears as a set of variable-depth parallel FIFO buffers, one per channel, with the restriction that the total depth of all the Fifes cannot exceed the buffer depth, 512. The width of the AXI master interface is the same as the MFIFO buffer width.

The DMAC is capable of realigning data from the source to the destination. For example, the DMAC shifts the data by two byte lanes when it reads a word from address 0x103 and writes to address 0x205. All byte manipulations occur when data enters the MFIFO buffer, as a result of an AXI read due to a DMALD instruction, so that the DMAC does not need to manipulate the data when it removes it from the MFIFO buffer, as a result of an AXI write due to a DMAST instruction. Therefore the storage and packing of the data in the MFIFO buffer is determined by the destination address and transfer characteristics.

When a program specifies that incrementing transactions are to be performed to the destination, the DMAC packs data into the MFIFO buffer to minimize the usage of the MFIFO buffer entries. For example, the DMAC packs two 32-bit words into a single entry in the MFIFO buffer when the DMAC has a 64-bit AXI data bus and the program uses a source address of 0x100, and destination address of 0x200.

In certain situations, the number of entries required to store the data loaded from a source is not a simple calculation of amount of source data divided by MFIFO buffer width. The calculation of the number of entries required is not simple when any of the following occur:

- The source address is not aligned to the AXI bus width.
- The destination address is not aligned to the AXI bus width.
- The transactions are to a fixed destination, that is, a non-incrementing address.

The DMALD and DMAST instructions each specify that an AXI transaction is to be performed. The amount of data transferred by an AXI transaction depends on the values programmed in to the CCR*n* register and the address of the transaction.



For information about unaligned transfers, refer to the *AMBA AXI Protocol Specification v1.0*, available from the ARM website (infocenter.arm.com).

The following sections provide several example DMAC programs together with illustrations of the MFIFO buffer usage.



These sections show MFIFO buffer usage in the following ways:

- a graph of the number of MFIFO buffer entries versus time
- a diagram of the byte-lane manipulation that the DMAC performs when data enters the MFIFO buffer.



The numbers 0 and 7 in the MFIFO buffer diagrams indicate the byte lanes in the MFIFO buffer.

Aligned Transfers

The following sections show examples of aligned transfers.

Simple Aligned Program


In this program, the source address and destination address are aligned with the AXI data bus width.

Example 16-2. Simple Aligned Program

```
DMAMOV CCR, SB4 SS64 DB4 DS64
DMAMOV SAR, 0x1000
DMAMOV DAR, 0x4000
DMALP 16
DMALD ; shown as a in Figure 16-25
DMAST ; shown as b in Figure 16-25
DMALPEND
DMAEND
```

Figure 16-25 shows the MFIFO buffer usage for this program.

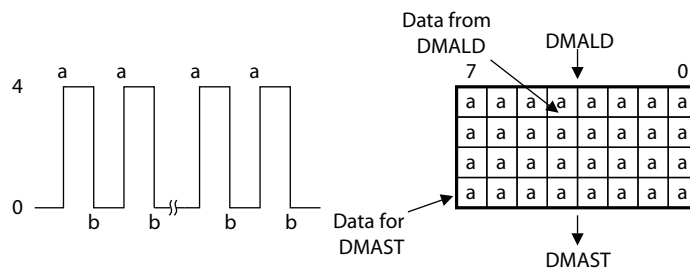Figure 16-25. Simple Aligned Program



In Figure 16-25, each DMALD requires four entries and each DMAST removes four entries.

This example has a static requirement of zero MFIFO buffer entries and a dynamic requirement of four MFIFO buffer entries.

Aligned Asymmetric Program with Multiple Loads


The following program performs four loads for each store and the source address and destination address are aligned with the AXI data bus width.

Example 16-3. Aligned Asymmetric Program with Multiple Loads

```
DMAMOV CCR, SB1 SS64 DB4 DS64
DMAMOV SAR, 0x1000
DMAMOV DAR, 0x4000
DMALP 16
DMALD ; shown as a in Figure 16-26
DMALD ; shown as b in Figure 16-26
DMALD ; shown as c in Figure 16-26
DMALD ; shown as d in Figure 16-26
DMAST ; shown as e in Figure 16-26
DMALPEND
DMAEND
```

Figure 16-26 shows the MFIFO buffer usage for this program.

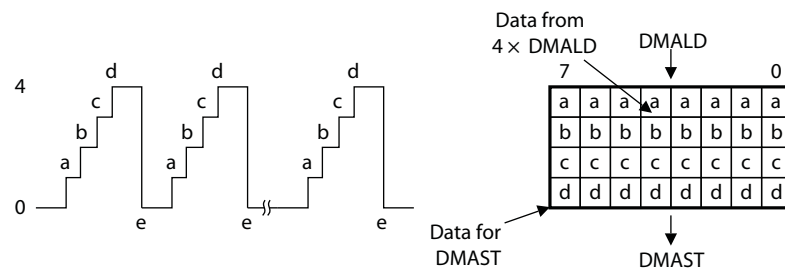Figure 16-26. Aligned Asymmetric Program with Multiple Loads



In Figure 16-26, each DMALD requires one entry and each DMAST removes four entries.

This example has a static requirement of zero MFIFO buffer entries and a dynamic requirement of four MFIFO buffer entries.

Aligned Asymmetric Program with Multiple Stores


The following program performs four stores for each load and the source address and destination address are aligned with the AXI data bus width.

Example 16-4. Aligned Asymmetric Program with Multiple Stores

```
DMAMOV CCR, SB4 SS64 DB1 DS64
DMAMOV SAR, 0x1000
DMAMOV DAR, 0x4000
DMALP 16
DMALD ; shown as a in Figure 16-27
DMAST ; shown as b in Figure 16-27
DMAST ; shown as c in Figure 16-27
DMAST ; shown as d in Figure 16-27
DMAST ; shown as e in Figure 16-27
DMALPEND
DMAEND
```

Figure 16-27 shows the MFIFO buffer usage for this program.

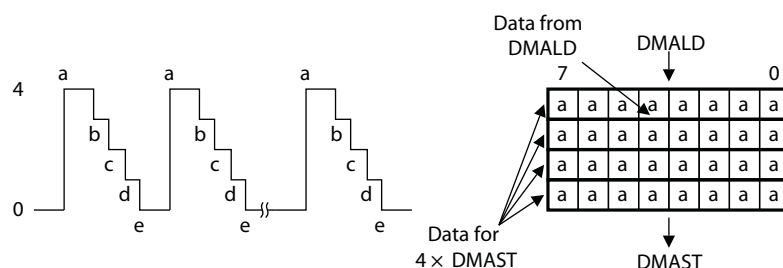Figure 16-27. Aligned Asymmetric Program with Multiple Stores



In Figure 16-27, each DMALD requires four entries and each DMAST removes one entry. This example has a static requirement of zero MFIFO buffer entries and a dynamic requirement of four MFIFO buffer entries.

Unaligned Transfers

The following sections show examples of unaligned transfers.

Aligned Source Address to Unaligned Destination Address


In this program, the source address is aligned with the AXI data bus width but the destination address is unaligned. The destination address is not aligned to the destination burst size so the first DMAST instruction removes less data than the first DMALD instruction reads. Therefore, a final DMAST of a single word is required to clear the data from the MFIFO buffer.

Example 16-5. Aligned Source Address to Unaligned Destination Address

```
DMAMOV CCR, SB4 SS64 DB4 DS64
DMAMOV SAR, 0x1000
DMAMOV DAR, 0x4004
DMALP 16
DMALD ; shown as a1, ... a, an in Figure 16-28
DMAST ; shown as b in Figure 16-28
DMALPEND
DMAMOV CCR, SB4 SS64 DB1 DS32
DMAST ; shown as c in Figure 16-28
DMAEND
```

Figure 16-28 shows the MFIFO buffer usage for this program.

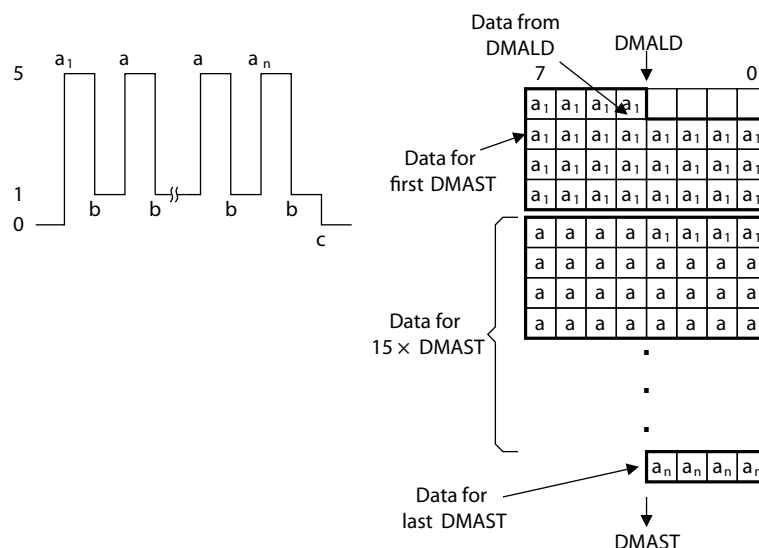Figure 16-28. Aligned to Unaligned Program



The first DMALD instruction loads four doublewords but because the destination address is unaligned, the DMAC shifts them by four bytes and therefore it uses five entries in the MFIFO buffer.

Each DMAST requires only four entries of data and therefore the extra entry remains in use for the duration of the program until it is emptied by the last DMAST.

This example has a static requirement of one MFIFO buffer entry and a dynamic requirement of four MFIFO buffer entries.

Unaligned Source Address to Aligned Destination Address


In this program, the source address is unaligned with the AXI data bus width but the destination address is aligned. The source address is not aligned to the source burst size so the first DMALD instruction reads in less data than the DMAST. Therefore, an extra DMALD is required to satisfy the first DMAST.

Example 16-6. Unaligned Source Address to Aligned Destination Address

```
DMAMOV CCR, SB4 SS64 DB4 DS64
DMAMOV SAR, 0x1004
DMAMOV DAR, 0x4000
DMALD ; shown as a in Figure 16-29
DMALP 15
DMALD ; shown as b1, ... b, bn in Figure 16-29
DMAST ; shown as c in Figure 16-29
DMALPEND
DMAMOV CCR, SB1 SS32 DB4 DS64
DMALD ; shown as d in Figure 16-29
DMAST ; shown as e in Figure 16-29
DMAEND
```

Figure 16-29 shows the MFIFO buffer usage for this program.

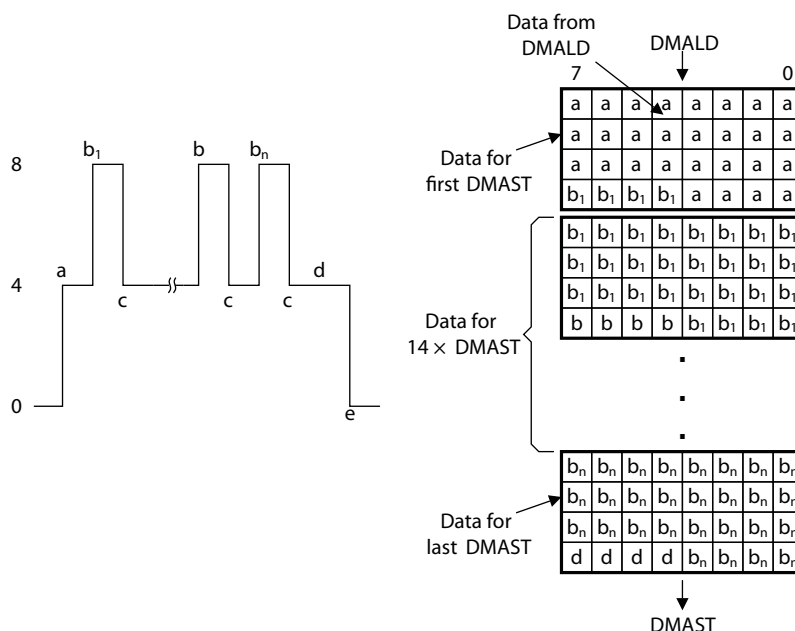Figure 16-29. Unaligned to Aligned Program



The DMALD shown as **d** does not increase the MFIFO buffer usage because it loads four bytes into an MFIFO buffer entry that the DMAC has already allocated to this channel.

The first DMALD instruction does not load sufficient data to enable the DMAC to execute a DMAST and therefore the program includes an additional DMALD, prior to the start of the loop. After the first DMALD, the subsequent DMALDs align with the source burst size. This optimizes the performance but it requires a larger number of MFIFO buffer entries.

This example has a static requirement of four MFIFO buffer entries and a dynamic requirement of four MFIFO buffer entries.

Unaligned Source Address to Aligned Destination Address with Excess Initial Load


This program is an alternative to that described in “Unaligned Source Address to Aligned Destination Address” on page 16-51. The program uses a different sequence of source bursts which might be less efficient but requires fewer MFIFO buffer entries.

Example 16-7. Unaligned Source Address to Aligned Destination Address with Excess Initial Load

```
DMAMOV CCR, SB5 SS64 DB4 DS64
DMAMOV SAR, 0x1004
DMAMOV DAR, 0x4000
DMALD ; shown as a in Figure 16-30
DMAST ; shown as b in Figure 16-30
DMAMOV CCR, SB4 SS64 DB4 DS64
DMALP 14
DMALD ; shown as c and cn in Figure 16-30
DMAST ; shown as d in Figure 16-30
DMALPEND
DMAMOV CCR, SB3 SS64 DB4 DS64
DMALD ; shown as e in Figure 16-30
DMAMOV CCR, SB1 SS32 DB4 DS64
DMALD ; shown as f in Figure 16-30
DMAST ; shown as g in Figure 16-30
DMAEND
```

Figure 16-30 shows the MFIFO buffer usage for this program.

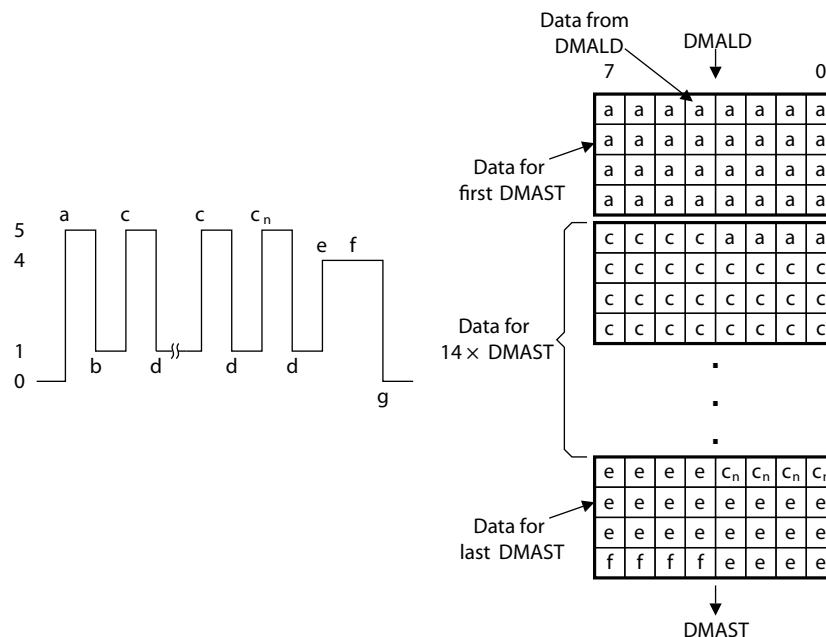Figure 16-30. Unaligned to Aligned with Excess Initial Load



The DMALD shown as f does not increase the MFIFO buffer usage because it loads four bytes into an MFIFO buffer entry that the DMAC has already allocated to this channel.

The first DMALD instruction loads five beats of data to enable the DMAC to execute the first DMAST.

After the first DMALD, the subsequent DMALDs are not aligned to the source burst size, for example the second DMALD reads from address 0x1028. After the loop, the final two DMALDs read the data required to satisfy the final DMAST.

This example has a static requirement of one MFIFO buffer entry and a dynamic requirement of four MFIFO buffer entries.

Aligned Burst Size Unaligned MFIFO Buffer


In this program, the destination address, which is narrower than the MFIFO buffer width, aligns with the burst size but does not align with the MFIFO buffer width.

Example 16-8. Aligned Burst Size Unaligned MFIFO Buffer

```
DMAMOV CCR, SB4 SS32 DB4 DS32
DMAMOV SAR, 0x1000
DMAMOV DAR, 0x4004
DMALP 16
DMALD ; shown as a in Figure 16-31
DMAST ; shown as b in Figure 16-31
DMALPEND
DMAEND
```

Figure 16-31 shows the MFIFO buffer usage for this program.

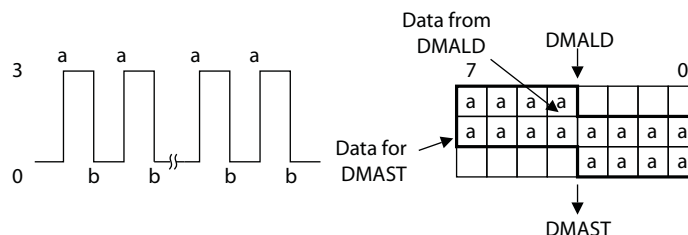Figure 16-31. Aligned Burst with Unaligned MFIFO Buffer Width



In this example, the destination address is not 64-bit aligned, it requires three rather than the expected two MFIFO buffer entries.

This example has a static requirement of zero MFIFO buffer entries and a dynamic requirement of three MFIFO buffer entries.

Fixed Transfers

The following section shows an example of a fixed destination with aligned address.

Fixed Destination with Aligned Address


In this program, the source address and destination address are aligned with the AXI data bus width, and the destination address is fixed.

Example 16-9. Fixed Destination with Aligned Address

```
DMAMOV CCR, SB2 SS64 DB4 DS32 DAF
DMAMOV SAR, 0x1000
DMAMOV DAR, 0x4000
DMALP 16
DMALD ; shown as a in Figure 16-32
DMAST ; shown as b in Figure 16-32
DMALPEND
DMAEND
```

Figure 16-32 shows the MFIFO buffer usage for this program.

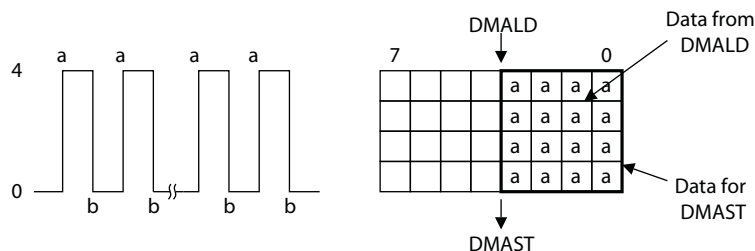Figure 16-32. Fixed Destination with Aligned Address




Each DMALD in the program loads two 64-bit data transfers into the MFIFO buffer. Because the destination address is a 32-bit fixed address then the DMAC splits each 64-bit data item across two entries in the MFIFO buffer.

This example has a static requirement of zero MFIFO buffer entries and a dynamic requirement of four MFIFO buffer entries.

DMA Controller Registers

The register map of the DMAC spans a 4 KB region as shown in [Figure 16-33](#).

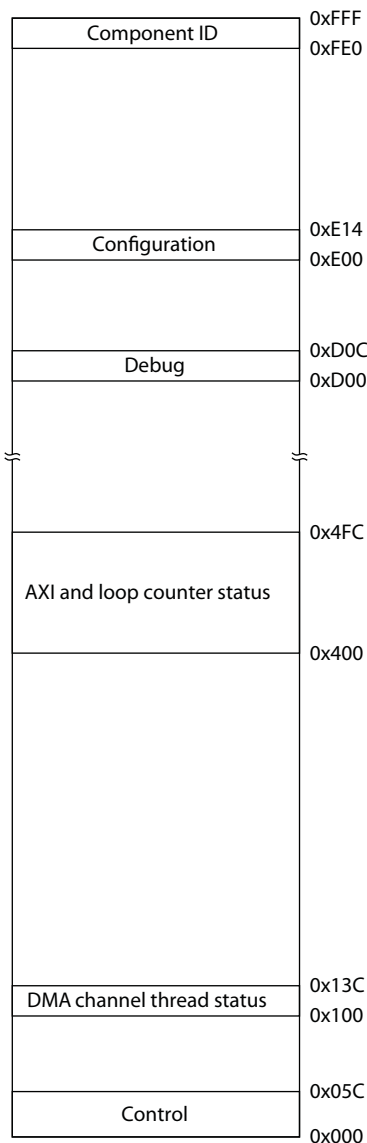Figure 16-33. DMAC Summary Register Map



In [Figure 16-33](#), the register map consists of the following sections.

- Control registers—allow you to control the DMAC.
- DMA channel thread status registers—provide the status of the DMA channel threads.
- AXI and loop counter status registers—provide the AXI transfer status and the loop counter status, for each DMA channel thread.

- Debug registers—enable the following functionality:
 - Allows you to send instructions to a thread when debugging the program code.
 - Allows system firmware to send instructions to the DMA manager thread, as “Issuing Instructions to the DMAC using a Slave Interface” on page 16-9 describes.
- Configuration registers—enable system firmware to discover the configuration of the DMAC and control the behavior of the watchdog.
- Component ID registers— enable system firmware to identify peripherals. Do not attempt to access reserved or unused address locations. Attempting to access these locations can result in unpredictable behavior.

Address Map and Register Definitions

-  The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the following links for the module instance:

- **dmanonsecure**
- **dmasecure**

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.

-  The base addresses of all modules are also listed in the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 16-4 shows the revision history for this document.

Table 16-4. Document Revision History

Date	Version	Changes
November 2012	1.1	Minor updates.
January 2012	1.0	Initial release.

The hard processor system (HPS) provides two Ethernet media access controller (EMAC) peripherals. Each EMAC can be used to transmit and receive data at 10/100/1000 Mbps over Ethernet connections in compliance with the IEEE 802.3 specification. The EMACs are instances of the Synopsys® DesignWare® 3504-0 Universal 10/100/1000 Ethernet MAC (DWC_gmac).

The EMAC has an extensive memory-mapped control and status register (CSR) set, which can be accessed by the ARM Cortex™-A9® MPCore™.

For an understanding of this chapter, you should be familiar with the basics of IEEE 802.3 media access control (MAC).

 For complete information about IEEE 802.3 MAC, refer to *IEEE Std 802.3-2008 Part 3: Carrier sense multiple access with Collision Detection (CSMA/CD) Access Method and Physical Layer Specifications*, available on the IEEE website (standards.ieee.org/findstds/).

Features of the Ethernet MAC

Here is a summary of the features supported by the EMAC peripheral.

MAC

- IEEE 802.3-2008 compliant
- Data rates of 10/100/1000 Mbps
- Full duplex and half duplex modes
- IEEE 802.3x flow control automatic transmission of zero-quanta pause frame on flow control input deassertion
- Optional forwarding of received pause control frames to the user
- Packet bursting and frame extension in 1000 Mbps half-duplex
- IEEE 802.3x flow control in full-duplex
- Back-pressure support for half-duplex
- IEEE 1588-2002 and IEEE 1588-2008 precision networked clock synchronization
- IEEE 802.3-az, version D2.0 for Energy Efficient Ethernet (EEE)
- IEEE 802.1Q virtual local area network (VLAN) tag detection for reception frames

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

Portions © 2011 Synopsys, Inc. Used with permission. All rights reserved. Synopsys & DesignWare are registered trademarks of Synopsys, Inc. All documentation is provided "as is" and without any warranty. Synopsys expressly disclaims any and all warranties, express, implied, or otherwise, including the implied warranties of merchantability, fitness for a particular purpose, and non-infringement, and any warranties arising out of a course of dealing or usage of trade.

†Paragraphs marked with the dagger (†) symbol are Synopsys Proprietary. Used with permission.



- Preamble and start-of-frame data (SFD) insertion in transmit and deletion in receive paths
- Automatic cyclic redundancy check (CRC) and pad generation controllable on a per-frame basis
- Options for automatic pad/CRC stripping on receive frames
- Programmable frame length supporting standard and jumbo Ethernet frames (with size up to 16 KB)
- Programmable inter-frame gap (IFG), from 40 to 96 bit times in steps of 8

PHY Interface

- Reduced Gigabit Media Independent Interface (RGMII) for 10/100/1000
- Management Data Input/Output (MDIO) (IEEE 802.3) or I²C PHY management interface

DMA Interface

- 32-bit interface
- Programmable burst size for optimal bus utilization
- Single-channel mode transmit and receive engines
- Byte-aligned addressing mode for data buffer support
- Dual-buffer (ring) or linked-list (chained) descriptor chaining
- Descriptors can each transfer up to 8 KB of data

Management Interface

- 32-bit host interface to CSR set
- Comprehensive status reporting for normal operation and transfers with errors
- Configurable interrupt options for different operational conditions
- Per-frame transmit/receive complete interrupt control
- Separate status returned for transmission and reception packets

Acceleration

- Transmit and receive checksum offload for transmission control protocol (TCP), user datagram protocol (UDP), or Internet control message protocol (ICMP) over Internet protocol (IP)

Other Features


- Supports a variety of flexible address filtering modes
- Up to 31 additional 48-bit perfect destination address (DA) filters with masks for each byte
- Up to 31 48-bit source address (SA) comparison check with masks for each byte

- 256-bit hash filter (optional) for multicast and uni-cast DAs
- Option to pass all multicast addressed frames
- Promiscuous mode support to pass all frames without any filtering for network monitoring
- Passes all incoming packets (as per filter) with a status report

EMAC Block Diagram and System Integration

The EMACs are integrated into the HPS portion of the system on a chip (SoC) FPGA device. They communicate with the I/O pins. [Figure 17-1 on page 17-3](#) shows the EMAC integration from a high level point of view.

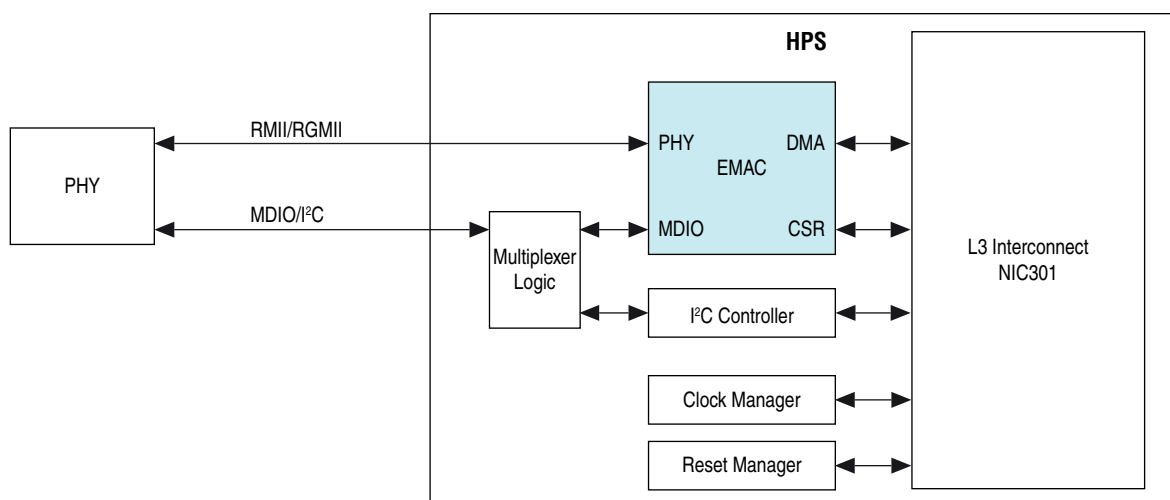Figure 17-1. EMAC System Integration



EMAC to RGMII Interface

The PHY datapath I/O is described in [Table 17-1](#).

Table 17-1. External PHY Data Interface (Part 1 of 2)

EMAC Port	I/O	Width	Description
clk_tx_i	In	1	Transmit Clock. This is the transmit clock (125/25/2.5 MHz in 1G/100M/10Mbps) provided for the RGMII. All PHY transmit signals generated by the EMAC are synchronous to this clock.
phy_txd_o	Out	8	PHY Transmit Data. This is a group of eight transmit data signals driven by the MAC. Unused bits in the RGMII interface configuration are tied to low. RGMII: Bits [3:0] provide the RGMII transmit data. The data bus changes with both rising and falling edges of the transmit clock (clk_tx_i). The validity of the data is qualified with phy_txen_o. Synchronous to: clk_tx_i, clk_tx_180_i
phy_txen_o	Out	1	PHY Transmit Data Enable. This signal is driven by the EMAC component. RGMII: This signal is the control signal (rgmii_tctl) for the transmit data, and is driven on both edges of the clock. Synchronous to: clk_tx_i, clk_tx_180_i

Table 17-1. External PHY Data Interface (Part 2 of 2)

EMAC Port	I/O	Width	Description
rst_clk_tx_n_o	Out	1	Transmit clock reset output.
clk_rx_i	In	1	Receive clock. Clock frequency is 125/25/2.5 MHz in 1G/100M/10Mbps modes. It is provided by the external PHY. All PHY signals received by the EMAC are synchronous to this clock.
phy_rxd_i	In	8	PHY Receive Data. This is a bundle of eight data signals received from the PHY. RGMII: Bits [3:0] provide the RGMII receive data. The data bus is sampled with both rising and falling edges of the receive clock (clk_rx_i). The validity of the data is qualified with phy_rxdv_i. Synchronous to: clk_rx_i, clk_rx_180_i
phy_rxdv_i	In	1	PHY Receive Data Valid. This signal is driven by PHY. RGMII: This is the receive control signal used to qualify the data received on phy_rxd. This signal is sampled on both edges of the clock. Synchronous to: clk_rx_i, clk_rx_180_i
rst_clk_rx_n_o	Out	1	Receive clock reset output.
phy_intf_sel_i[1:0]	In	2	PHY Interface Select: These pins select one of the PHY interfaces of the EMAC. This is sampled only during reset assertion and ignored after that. ■ 01: RGMII ■ 00, 10, and 11: Invalid
clk_ref_i	In	1	This is the reference clock to the EMAC. The clock is emac0_clk or emac1_clk supplied by the clock manager. The system manager drives the phy_intf_sel signal to control which clock is used. The clock rate is 250 MHz.

PHY Management Interface

The HPS can provide support for either MDIO or I²C PHY management interfaces.

MDIO Interface

The MDIO interface signals are synchronous to l4_mp_clk in all supported modes.

Table 17-2. PHY MDIO Management Interface

Signal	I/O	Width	Description
gmii_mdi_i	In	1	Management Data In. The PHY generates this signal to transfer register data during a read operation. This signal is driven synchronously with the gmii_mdc_o clock.
gmii_mdo_o	Out	1	Management Data Out. The EMAC uses this signal to transfer control and data information to the PHY.

Table 17–2. PHY MDIO Management Interface

Signal	I/O	Width	Description
gmii_mdo_o_e	Out	1	Management Data Output Enable. This enable signal drives the gmii_mdo_o signal from an external three-state I/O buffer. This signal is asserted whenever valid data is driven on the gmii_mdo_o signal. The active state of this signal is high.
gmii_mdc_o	Out	1	Management Data Clock. The EMAC provides timing reference for the gmii_mdio_i and gmii_mdo_o signals on MII through this aperiodic clock. The maximum frequency of this clock is 2.5 MHz. This clock is generated from the application clock through a clock divider.

I²C External PHY Management Interface

Some PHY devices use the I²C instead of MDIO for their control interface. Small form factor pluggable (SFP) optical or pluggable modules are often among those with this interface.

The HPS can use two of the four general purpose I²C peripherals for controlling the PHY devices.


IEEE 1588

The EMAC supports IEEE 1588 operation in all modes with a resolution of one μ s. It can be used by the ARM[®] Cortex[™]-A9 microprocessor unit (MPU) subsystem to maintain synchronization between the time counters internal to the two MACs.

Functional Description of the EMAC

Figure 17-2 illustrates a high level block diagram of the EMAC with its interfaces.

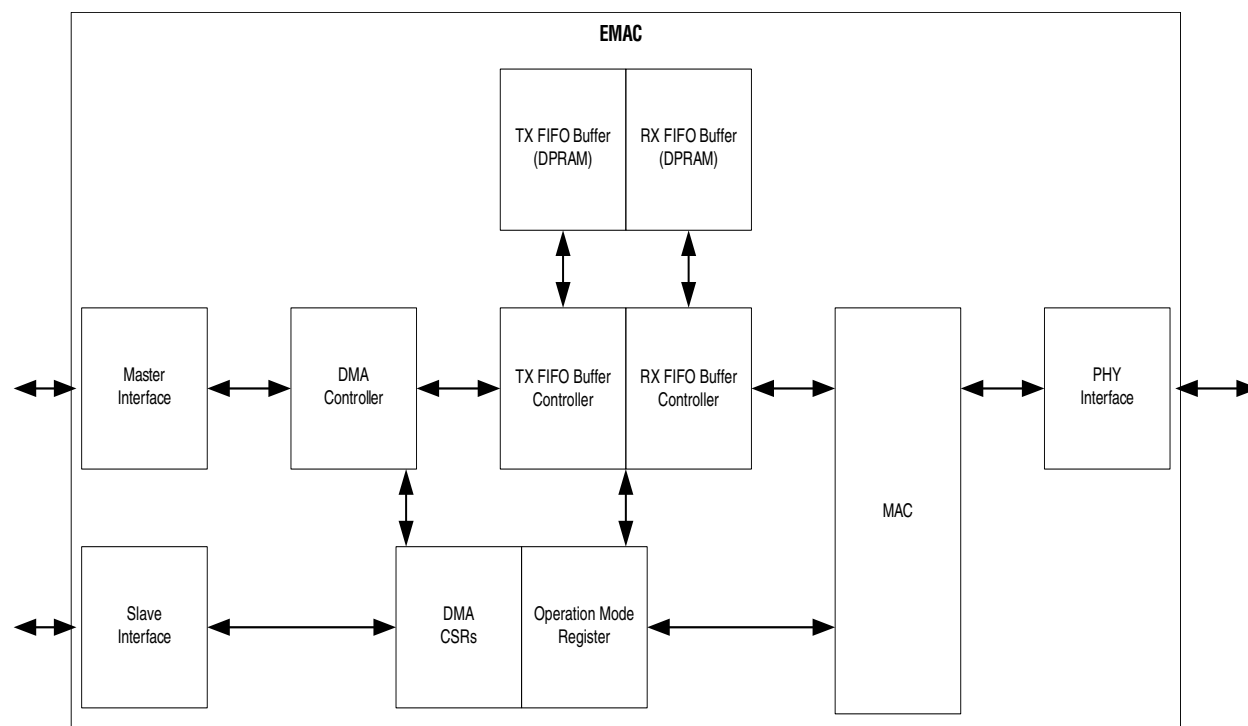Figure 17-2. EMAC Block Diagram



There are two host interfaces to the MAC. The management host interface, a 32-bit slave interface, provides access to the CSR set. The data interface is a 32-bit interface. It controls data transfer between the direct memory access (DMA) controller channels and the rest of the HPS system through the NIC-301 L3 interconnect.

There is a built-in DMA controller which is optimized for data transfer between the MAC controller and system memory. The DMA controller has independent transmit and receive engines, and a CSR set. The transmit engine transfers data from system memory to the device port, while the receive engine transfers data from the device port to the system memory. The controller uses descriptors to efficiently move data from source to destination with minimal host intervention.

The EMAC also contains FIFO buffer memory to buffer and regulate the Ethernet frames between the application system memory and the EMAC controller. On transmit, the Ethernet frames read into the transmit FIFO buffer (1024 x 42 bits), and eventually trigger the MAC to perform the transfer. Received Ethernet frames are stored in the receive FIFO buffer, also indicating the FIFO buffer fill level to the DMA controller. The DMA controller then initiates the configured burst transfers. Both receive and transmit transfer status are taken from the MAC and transferred to the DMA.

Host Interfaces

There are two host interfaces in the EMAC: a slave and a master. The master is connected to the L3 master peripheral switch interface in the L3 interconnect block.

Slave

The EMAC CSR set access is provided by a slave interface. The slave is connected to the level 4 (L4) bus.

Master

The DMA interface is provided by a master interface. Two types of data are transferred on the interface: data descriptors and actual data packets. The interface is very efficient in transferring full duplex Ethernet packet traffic. Read and write data transfers from different DMA channels can be performed simultaneously on this port. The only exceptions to this are transmit descriptor reads and write-backs which cannot happen simultaneously.

DMA transfers are split into a software configurable number of burst transactions on the interface. The `AXI_Bus_Mode` register in the `dmagrp` group is used to configure bursting behavior.

The interface assigns a unique ID for each DMA channel and also for each read DMA or write DMA request in a channel. Data transfers with distinct IDs can be reordered and interleaved.

Write data transfers are generally performed as posted writes with OK responses returned as soon as the interconnect has accepted the last beat of a data burst. Descriptors (status or timestamp) however are always transferred as non-posted writes in order to prevent race conditions with the transfer complete interrupt logic.

The slave may issue an error response. When that happens, the EMAC disables the DMA channel which generated the original request and asserts an interrupt signal. The host needs to reset the EMAC with a hard or soft reset to restart the DMA to recover from this condition.

The EMAC supports up to 16 outstanding transactions on the interface. Buffering outstanding transactions smooths out back pressure behavior. This is important when resource contention bottlenecks arise under high system load conditions.

Cache Control Interface

The system manager provides the values for the master cache outputs through this interface. These inputs are used as the outputs to the L3 interconnect extending the capabilities of this block with respect to the cacheable characteristics of master transfers.

To configure EMAC DMA controller to perform cacheable accesses, configure the cache bits in the system manager. Cache bits should only be accessed at boot time, before the EMAC controller is brought out of reset.



For more information, refer to the *System Manager* chapter in volume 3 of the *Arria V Device Handbook*.

External PHY

The following PHY interfaces are supported for the HPS:

- RGMII for 10/100/1000

The EMAC also has a control interface used for configuration and status monitoring of the PHY. In this case, the PHY is the slave device. There are two choices of control interface:

- MDIO
- I²C interface

The MDIO interface is built into the EMAC while the I²C interface uses separate I²C peripherals residing on the HPS. The interfaces are multiplexed externally to the EMAC.

Transmit and Receive Data FIFO Buffers

Each EMAC component has associated transmit and receive data FIFO buffer instances. Both FIFO buffer instances are 1024 x 42 bits. The FIFO buffer word consists of:

- Data: 32 bits
- Sideband:
 - End of frame (EOF): one bit
 - Byte enables (BE): two bits
 - Error correction code (ECC): seven bits


The data and sideband are protected by the seven-bit single error correct, double error detect (SEC-DED) code word. These FIFO buffer RAMs also contain ECC enable, error injection and status pins. The enable and error injection pins are inputs driven by the system manager and the status pins are outputs driven to the MPU subsystem.

IEEE 1588-2002 Time Stamps

The IEEE 1588-2002 standard defines the Precision Time Protocol (PTP) which enables precise synchronization of clocks in a distributed network of devices. The PTP applies to systems communicating by local area networks supporting multicast messaging. This protocol enables heterogeneous systems that include clocks of varying inherent precision, resolution, and stability to synchronize. It is frequently used in automation systems where a collection of communicating machines such as robots must be synchronized and hence operate over a common time base. †

The PTP is transported over UDP/IP. The system or network is classified into Master and Slave nodes for distributing the timing and clock information. Figure 17-3 shows the process that PTP uses for synchronizing a slave node to a master node by exchanging PTP messages. †

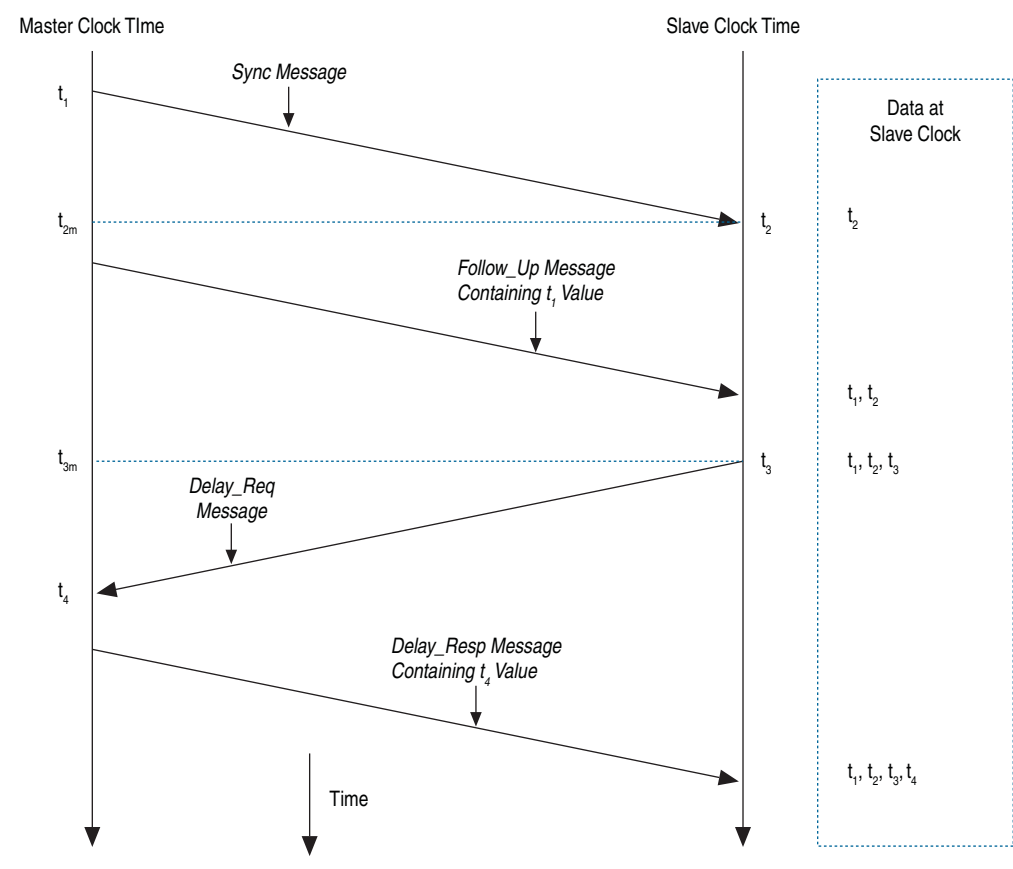Figure 17-3. Networked Time Synchronization



As shown in Figure 17-3, the PTP uses the following process: †

1. The master broadcasts the PTP Sync messages to all its nodes. The Sync message contains the master's reference time information. The time at which this message leaves the master's system is t_1 . This time must be captured, for Ethernet ports, at the PHY interface. †
2. The slave receives the Sync message and also captures the exact time, t_2 , using its timing reference. †
3. The master sends a Follow_up message to the slave, which contains t_1 information for later use. †
4. The slave sends a Delay_Req message to the master, noting the exact time, t_3 , at which this frame leaves the PHY interface. †
5. The master receives the message, capturing the exact time, t_4 , at which it enters its system. †
6. The master sends the t_4 information to the slave in the Delay_Resp message. †

7. The slave uses the four values of t1, t2, t3, and t4 to synchronize its local timing reference to the master's timing reference. †

Most of the PTP implementation is done in the software above the UDP layer. However, the hardware support is required to capture the exact time when specific PTP packets enter or leave the Ethernet port at the PHY interface. This timing information must be captured and returned to the software for the proper implementation of PTP with high accuracy. †

The EMAC is intended to support IEEE 1588 operation in all modes with a resolution of one μ s. When the two EMACs are operating in an IEEE 1588 environment, the MPU subsystem is responsible for maintaining synchronization between the time counters internal to the two MACs. †

The IEEE 1588 interface to the FPGA allows the FPGA to provide an alternate source for the `emac_ptp_ref_clk` input as well to allow it to monitor the pulse per second output from each EMAC controller. †

The EMAC component provides a hardware assisted implementation of the IEEE 1588 protocol. Hardware support is for timestamp maintenance. Timestamps are updated when receiving any frame on the PHY interface and the receive descriptor is updated with this value. Timestamps are also updated when the SFD of a frame is transmitted and updates the transmit descriptor accordingly. †



For details about the IEEE 1588-2002 standard, refer to *IEEE Standard 1588-2002 - IEEE Standard for a Precision Clock Synchronization Protocol for Networked Measurement and Control Systems*, available on the IEEE Standards Association website (standards.ieee.org). †

Reference Timing Source

To get a snapshot of the time, the EMAC takes the reference clock input and uses it to generate the reference time (64-bit) internally and capture timestamps. †

System Time Register Module

The 64-bit time is maintained in this module and updated using the input reference clock, `osc1_clk`. The `osc1_clk` clock comes from the clock manager and the `emac_ptp_ref_clk` clock comes from the FPGA fabric. This time is the source for taking snapshots (timestamps) of Ethernet frames being transmitted or received at the PHY interface.

The system time counter can be initialized or corrected using the coarse correction method. In this method, the initial value or the offset value is written to the Timestamp Update register. For initialization, each EMAC's system time counter is written with the value in the Timestamp Update registers, while for system time correction, the offset value is added to or subtracted from the system time.

In the fine correction method, a slave clock's frequency drift with respect to the master clock is corrected over a period of time instead of in one clock, as in coarse correction. This helps maintain linear time and does not introduce drastic changes (or a large jitter) in the reference time between PTP sync message intervals. †


In this method, an accumulator sums up the contents of the Timestamp_Addend register, as shown in Figure 17-4. The arithmetic carry that the accumulator generates is used as a pulse to increment the system time counter. The accumulator and the addend are 32-bit registers. Here, the accumulator acts as a high-precision frequency multiplier or divider.



You must connect a PTP clock with a frequency higher than the frequency required for the specified accuracy. †

This algorithm is depicted in Figure 17-4: †

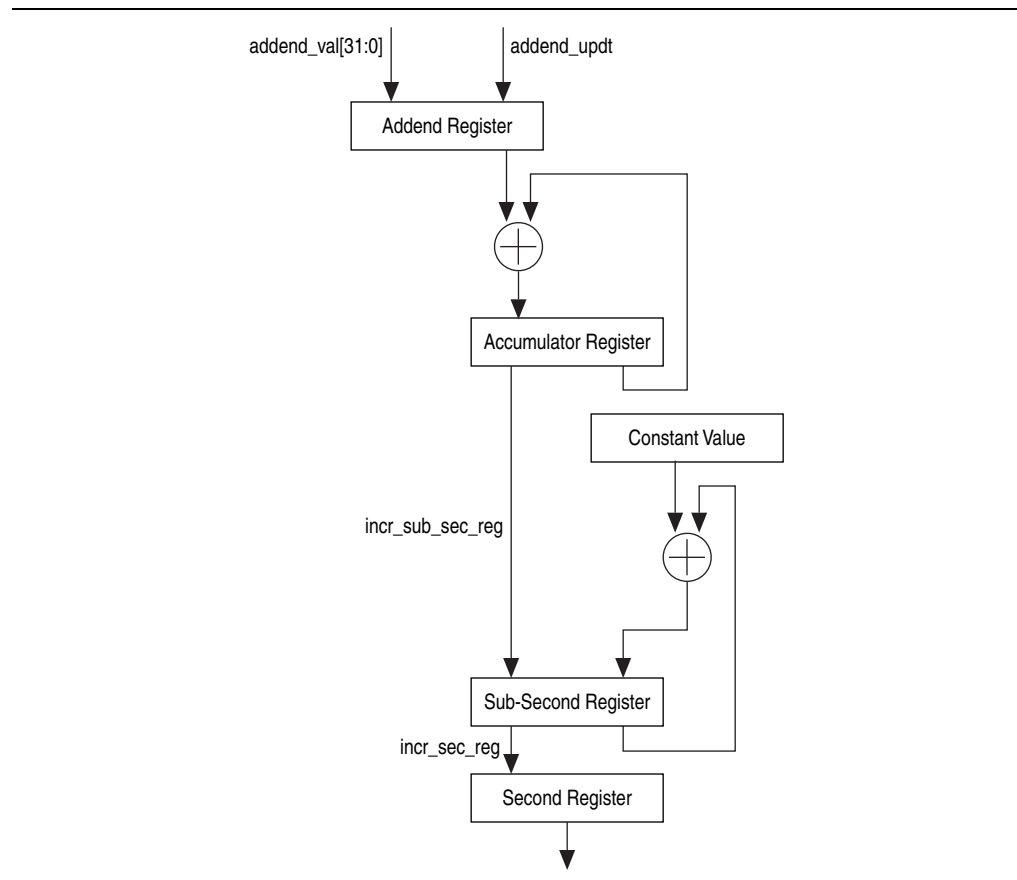Figure 17-4. System Time Update Using Fine Method



The System Time Update logic requires a 50-MHz clock frequency to achieve 20-ns accuracy. The frequency division ratio (FreqDivisionRatio) is the ratio of the reference clock frequency to the required clock frequency. Hence, if the reference clock (`clk_ptp_ref_i`) is, for example, 66 MHz, this ratio is calculated as $66 \text{ MHz} / 50 \text{ MHz} = 1.32$. Hence, the default addend value to be set in the register is $232 / 1.32$, `0xC1F07C1F`.

If the reference clock drifts lower, to 65 MHz for example, the ratio is $65 / 50$, or 1.3 and the value to set in the addend register is $232 / 1.30$, or `0xC4EC4EC4`. If the clock drifts higher, to 67 MHz for example, the addend register must be set to `0xBF0B7672`. When the clock drift is nil, the default addend value of `0xC1F07C1F` ($232 / 1.32$) must be programmed. †

In Figure 17-4, the constant value used to accumulate the sub-second register is decimal 43, which achieves an accuracy of 20 ns in the system time (in other words, it is incremented in 20-ns steps).

The software must calculate the drift in frequency based on the Sync messages and update the Addend register accordingly. †

Initially, the slave clock is set with FreqCompensationValue₀ in the Addend register. This value is as follows: †

$$\text{FreqCompensationValue}_0 = 232 / \text{FreqDivisionRatio} \dagger$$

If MasterToSlaveDelay is initially assumed to be the same for consecutive Sync messages, the algorithm described below must be applied. After a few Sync cycles, frequency lock occurs. The slave clock can then determine a precise MasterToSlaveDelay value and re-synchronize with the master using the new value. †

The algorithm is as follows: †

- At time MasterSyncTime_n the master sends the slave clock a Sync message. The slave receives this message when its local clock is SlaveClockTime_n and computes MasterClockTime_n as: †

$$\text{MasterClockTime}_n = \text{MasterSyncTime}_n + \text{MasterToSlaveDelay}_n \dagger$$

- The master clock count for current Sync cycle, MasterClockCount_n is given by: †

$$\text{MasterClockCount}_n = \text{MasterClockTime}_n - \text{MasterClockTime}_{n-1} \dagger$$

(assuming that MasterToSlaveDelay is the same for Sync cycles n and n – 1) †

- The slave clock count for current Sync cycle, SlaveClockCount_n is given by: †

$$\text{SlaveClockCount}_n = \text{SlaveClockTime}_n - \text{SlaveClockTime}_{n-1} \dagger$$

- The difference between master and slave clock counts for current Sync cycle, ClockDiffCount_n is given by: †

$$\text{ClockDiffCount}_n = \text{MasterClockCount}_n - \text{SlaveClockCount}_n \dagger$$

- The frequency-scaling factor for slave clock, FreqScaleFactor_n is given by: †

$$\text{FreqScaleFactor}_n = (\text{MasterClockCount}_n + \text{ClockDiffCount}_n) / \text{SlaveClockCount}_n \dagger$$

- The frequency compensation value for Addend register, FreqCompensationValue_n is given by: †

$$\text{FreqCompensationValue}_n = \text{FreqScaleFactor}_n \times \text{FreqCompensationValue}_{n-1} \dagger$$

In theory, this algorithm achieves lock in one Sync cycle; however, it may take several cycles, because of changing network propagation delays and operating conditions. †

This algorithm is self-correcting: if for any reason the slave clock is initially set to a value from the master that is incorrect, the algorithm corrects it at the cost of more Sync cycles. †

Transmit Path Functions

The MAC captures a timestamp when the SFD of a frame is sent on the PHY interface. The frames for which you want to capture timestamps are controllable on a per-frame basis. In other words, each transmit frame can be marked to indicate whether a timestamp should be captured for that frame. The MAC does not process the transmitted frames to identify the PTP frames. You need to specify the frames for which you want to capture timestamps. The MAC returns the timestamp, along with the Transmit status of the frame, to hardware implemented in the FPGA. You can use the control bits in the transmit descriptor. The MAC returns the timestamp to the software inside the corresponding transmit descriptor, thus connecting the timestamp automatically to the specific PTP frame. †

Receive Path Functions

The MAC captures the timestamp of all frames received on the PHY interface. The DMA returns the timestamp to the software in the corresponding receive descriptor. The timestamp is written only to the last receive descriptor. †

Timestamp Error Margin

According to the IEEE 1588 specifications, a timestamp must be captured at the SFD of the transmitted and received frames at the PHY interface. Because the PHY interface receive and transmit clocks are not synchronous to the reference timestamp clock (`osc1_clk`) a small amount of drift is introduced when a timestamp is moved between asynchronous clock domains. In the transmit path, the captured and reported timestamp has a maximum error margin of two PTP clocks. It means that the captured timestamp has the reference timing source value that is given within two clocks after the SFD is transmitted on the PHY interface. †

Similarly, in the receive path, the error margin is three PHY interface clocks, plus up to two PTP clocks. You can ignore the error margin because of the PHY interface clocks by assuming that this constant delay is present in the system (or link) before the SFD data reaches the PHY interface of the MAC. †

Frequency Range of Reference Timing Clock

The timestamp information is transferred across asynchronous clock domains, that is, from MAC clock domain to the FPGA clock domain. Therefore, a minimum delay is required between two consecutive timestamp captures. This delay is four clock cycles of the PHY interface and three clock cycles of PTP clocks. If the delay between two timestamp captures is less than this delay, the MAC does not take a timestamp snapshot for the second frame. †

The maximum PTP clock frequency is limited by the maximum resolution of the reference time (20 ns resulting in 50 MHz) and the timing constraints achievable for logic operating on the PTP clock. In addition, the resolution, or granularity, of the reference time source determines the accuracy of the synchronization. Therefore, a higher PTP clock frequency gives better system performance. †

The minimum PTP clock frequency depends on the time required between two consecutive SFD bytes. Because the PHY interface clock frequency is fixed by the IEEE 1588 specification, the minimum PTP clock frequency required for proper operation depends upon the operating mode and operating speed of the MAC as shown in Table 17-3. †

Table 17-3. Minimum PTP Clock Frequency Example

Mode	Minimum Gap Between Two SFDs	Minimum PTP Frequency
100-Mbps full-duplex operation	168 MII clocks (128 clocks for a 64-byte frame + 24 clocks of min IFG + 16 clocks of preamble)	$(3 * \text{PTP}) + (4 * \text{MII}) \leq 168 * \text{MII}$, that is, ~0.5 MHz $((168 - 4) * 40 \text{ ns} \div 3 = 2180 \text{ ns period})$
1000-Mbps half-duplex operation	24 GMII clocks (4 for a jam pattern sent just after SFD because of collision + 12 IFG + 8 preamble) ⁽¹⁾	$3 * \text{PTP} + 4 * \text{GMII} \leq 24 * \text{GMII}$, that is, 18.75 MHz
Notes to Table 17-3: (1) For details about jam patterns, refer to <i>IEEE Std 802.3-2008 Part 3: Carrier sense multiple access with Collision Detection (CSMA/CD) Access Method and Physical Layer Specifications</i> , available on the IEEE website (standards.ieee.org/findstds/).		

IEEE 1588-2008 Advanced Timestamps

In addition to the basic timestamp features mentioned in IEEE 1588-2002 Timestamps, the EMAC supports the following advanced timestamp features defined in the IEEE 1588-2008 standard. †

- Supports the IEEE 1588-2008 (version 2) timestamp format. †
- Provides an option to take a timestamp of all frames or only PTP type frames. †
- Provides an option to take a timestamp of only event messages. †
- Provides an option to take the timestamp based on the clock type: ordinary, boundary, end-to-end, or peer-to-peer. †
- Provides an option to configure the EMAC to be a master or slave for ordinary and boundary clock. †
- Identifies the PTP message type, version, and PTP payload in frames sent directly over Ethernet and sends the status. †
- Provides an option to measure sub-second time in digital or binary format. †



For details about the IEEE 1588-2008 standard, refer to *IEEE Standard 1588-2008 - IEEE Standard for a Precision Clock Synchronization Protocol for Networked Measurement and Control Systems*, available on the IEEE Standards Association website (standards.ieee.org). †

Peer-to-Peer PTP Transparent Clock (P2P TC) Message Support

The IEEE 1588-2008 version supports Peer-to-Peer PTP (Pdelay) messages in addition to SYNC, Delay Request, Follow-up, and Delay Response messages. †

Clock Types

The EMAC supports the following clock types defined in the IEEE 1588-2008 standard: †

- Ordinary clock †
- Boundary clock †
- End-to-End transparent clock †
- Peer-to-Peer transparent clock †

Reference Timing Source

The EMAC supports the following reference timing source features defined in the IEEE 1588-2008 standard: †

- 48-Bit seconds Field †
- Fixed pulse-per-second output †
- Flexible pulse-per-second output †
- Auxiliary snapshots (timestamps) with external events

Transmit Path Functions

The advanced timestamp feature is supported only through the alternate (enhanced) descriptors format. †

Receive Path Functions

The MAC processes the received frames to identify valid PTP frames. You can control the snapshot of the time, to be sent to the application, by using the following options: †

- Enable timestamp for all frames. †
- Enable timestamp for IEEE 1588 version 2 or version 1 timestamp. †
- Enable timestamp for PTP frames transmitted directly over Ethernet or UDP/IP Ethernet. †
- Enable timestamp snapshot for the received frame for IPv4 or IPv6. †
- Enable timestamp snapshot for EVENT messages (SYNC, DELAY_REQ, PDELAY_REQ, or PDELAY_RESP) only. †
- Enable the node to be a master or slave and select the timestamp type. This controls the type of messages for which timestamps are taken. †

The DMA returns the timestamp to the software inside the corresponding transmit or receive descriptor. The advanced timestamp feature is supported only with the 32-byte alternate (enhanced) descriptor. †

Auxiliary Snapshot

The auxiliary snapshot feature allows you to store a snapshot (timestamp) of the system time based on an external event. The event is considered to be the rising edge of the sideband signal `ptp_aux_ts_trig_i`. One Auxiliary snapshot input is available. The depth of the Auxiliary snapshot FIFO buffer is 16. †

The timestamps taken for any input are stored in a common FIFO buffer. The host can read a register to know which input's timestamp is available for reading at the top of this FIFO buffer. The MAC stores these timestamps in a FIFO buffer. Only 64 bits of the timestamp are stored in the FIFO buffer. When a timestamp is stored, the MAC indicates this to the host with an interrupt. The value of the timestamp is read through a FIFO buffer register access. †

IEEE 802.3az Energy Efficient Ethernet

Energy Efficient Ethernet (EEE) standardized by IEEE 802.3-az, version D2.0 is supported by the EMAC. It is supported by the MAC operating in 10/100/1000 Mbps rates. EEE is only supported when the EMAC is configured to operate with the RGMII PHY interface operating in full-duplex mode. It does not support half-duplex mode. †



For details about the IEEE 802.3az Energy Efficient Ethernet standard, refer to the IEEE 802.3 Ethernet Working Group website (www.ieee802.org/3/). †

EEE enables the MAC to operate in Low-Power Idle (LPI) mode. Either end point of an Ethernet link can disable functionality to save power during periods of low link utilization. The MAC controls whether the system should enter or exit LPI mode and communicates this to the PHY. †

LPI Timers

Two timers internal to the EMAC are associated with LPI mode: †

- LPI Link Status (LS) Timer †
- LPI TW Timer †

The LPI LS timer counts, in ms, the time expired since the link status is up. This timer is cleared every time the link goes down and is incremented when the link is up again and the terminal count as programmed by the software is reached. The PHY interface does not assert the LPI pattern unless the terminal count is reached. This ensures a minimum time for which no LPI pattern is asserted after a link is established with the remote station. This period is defined as one second in the IEEE standard 802.3-az, version D2.0. The LPI LS timer is 10 bits wide. Therefore, the software can program up to 1023 ms. †

The LPI TW timer counts, in μ s, the time expired since the deassertion of LPI. The terminal count of the timer is the value of resolved transmit TW that is the auto-negotiated time after which the MAC can resume the normal transmit operation. The MAC supports the LPI TW timer in units of μ s. The LPI TW timer is 16 bits wide. Therefore, the software can program up to 65535 μ s. †

The EMAC generates the LPI interrupt when the transmit or receive channel enters or exits the LPI state. †

Checksum Offload

Communication protocols such as TCP and UDP implement checksum fields, which help determine the integrity of data transmitted over a network. Because the most widespread use of Ethernet is to encapsulate TCP and UDP over IP datagrams, the EMAC has a Checksum Offload Engine (COE) to support checksum calculation and insertion in the transmit path, and error detection in the receive path. Supported offloading types are shown below: †

- Transmit IP header checksum †
- Transmit TCP/UDP/ICMP checksum †
- Receive IP header checksum †
- Receive full checksum †

Frame Filtering

The EMAC implements the following types of filtering for receive frames. †

Source Address or Destination Address Filtering

The Address Filtering Module checks the destination and source address field of each incoming packet. †

- “Unicast Destination Address Filter”
- “Multicast Destination Address Filter”
- “Hash or Perfect Address Filter”
- “Broadcast Address Filter”
- “Unicast Source Address Filter”
- “Inverse Filtering Operation (Invert the filter-match result at final output)”

Unicast Destination Address Filter

Up to 128 MAC addresses for unicast perfect filtering are supported. The filter compares all 48 bits of the received unicast address with the programmed MAC address for any match. Default MacAddr0 is always enabled, other addresses MacAddr1–MacAddr127 are selected with an individual enable bit. For MacAddr1–MacAddr31 addresses, you can mask each byte during comparison with the corresponding received DA byte. This enables group address filtering for the DA. The MacAddr32–MacAddr127 addresses do not have mask control and all six bytes of the MAC address are compared with the received six bytes of DA. †

In hash filtering mode, the filter performs imperfect filtering for unicast addresses using a 64-bit hash table. It uses the upper six bits of the CRC of the received destination address to index the content of the hash table. A value of 0 selects Bit 0 of the selected register, and a value of 111111 binary selects Bit 63 of the Hash Table register. If the corresponding bit is set to one, the unicast frame is said to have passed the hash filter; otherwise, the frame has failed the hash filter. †

Multicast Destination Address Filter

The MAC can be programmed to pass all multicast frames. In Perfect Filtering mode, the multicast address is compared with the programmed MAC Destination Address registers (1–31). Group address filtering is also supported. In hash filtering mode, the filter performs imperfect filtering using a 64-bit hash table. For hash filtering, it uses the upper six bits of the CRC of the received multicast address to index the contents of the hash table. A value of 0 selects Bit 0 of the selected register and a value of 111111 binary selects Bit 63 of the Hash Table register. If the corresponding bit is set to one, then the multicast frame is said to have passed the hash filter; otherwise, the frame has failed the hash filter. †

Hash or Perfect Address Filter

The filter can be configured to pass a frame when its DA matches either the hash filter or the Perfect filter. This configuration applies to both unicast and multicast frames. †

Broadcast Address Filter

The filter does not filter any broadcast frames in the default mode. However, if the MAC is programmed to reject all broadcast frames, the filter drops any broadcast frame. †

Unicast Source Address Filter

The MAC can also perform a perfect filtering based on the source address field of the received frames. Group filtering with SA is also supported. You can filter a group of addresses by masking one or more bytes of the address. †

Inverse Filtering Operation (Invert the filter-match result at final output)

For both Destination and Source address filtering, there is an option to invert the filter-match result at the final output. The result of the unicast or multicast destination address filter is inverted in this mode. †

VLAN Filtering

The EMAC supports the two kinds of VLAN filtering: †

- VLAN tag-based filtering †
- VLAN hash filtering †

VLAN tag-based filtering

In the VLAN tag-based frame filtering, the MAC compares the VLAN tag of the received frame and provides the VLAN frame status to the application. Based on the programmed mode, the MAC compares the lower 12 bits or all 16 bits of the received VLAN tag to determine the perfect match. If VLAN tag filtering is enabled, the MAC forwards the VLAN-tagged frames along with VLAN tag match status and drops the VLAN frames that do not match. You can also enable the inverse matching for VLAN frames. In addition, you can enable matching of SVLAN tagged frames along with the default Customer Virtual Local Area Network (C-VLAN) tagged frames. †

VLAN hash filtering with a 16-bit hash table

The MAC provides VLAN hash filtering with a 16-bit hash table. The MAC also supports the inverse matching of the VLAN frames. In inverse matching mode, when the VLAN tag of a frame matches the perfect or hash filter, the packet should be dropped. If the VLAN perfect and VLAN hash match are enabled, a frame is considered as matched if either the VLAN hash or the VLAN perfect filter matches. When inverse match is set, a packet is forwarded only when both perfect and hash filters indicate mismatch. †

Layer 3 and Layer 4 Filters

Layer 3 filtering refers to source address and destination address filtering. Layer 4 filtering refers to source port and destination port filtering. The frames are filtered in the following ways: †

- Matched frames †
- Unmatched frames †
- Non-TCP or UDP IP frames †

Matched Frames

The MAC forwards the frames, which match all enabled fields, to the application along with the status. The MAC gives the matched field status only if one of the following conditions is true: †

- All enabled Layer 3 and Layer 4 fields match. †
- At least one of the enabled field matches and other fields are bypassed or disabled. †

Using the CSR set, you can define up to four filters, identified as filter 0 through filter 3. When multiple Layer 3 and Layer 4 filters are enabled, any filter match is considered as a match. If more than one filter matches, the MAC provides status of the lowest filter with filter 0 being the lowest and filter 3 being the highest. For example, if filter 0 and filter 1 match, the MAC gives the status corresponding to filter 0. †

Unmatched Frames

The MAC drops the frames that do not match any of the enabled fields. You can use the inverse match feature to block or drop a frame with specific TCP or UDP over IP fields and forward all other frames. You can configure the EMAC so that when a frame is dropped, it receives a partial frame with appropriate abort status or drops it completely. †

Non-TCP or UDP IP Frames

By default, all non-TCP or UDP IP frames are bypassed from the Layer 3 and Layer 4 filters. You can optionally program the MAC to drop all non-TCP or UDP over IP frames. †

Clocks and Resets

The Ethernet MAC controller uses the clocks shown in [Table 17-4](#).

Table 17-4. Clocks

Name	Nominal Frequency	Functional Usage	Notes
clk_ref_i	250 Mhz	Reference Clock to the EMAC	If supplied from clock interface, clock is emac0_clk or emac1_clk
clk_tx_i	125/25/2.5 Mhz	Autonegotiates speed down to 10/100Mbps	
clk_rx_i		PHY provides this reference to MAC	All PHY signals received by the MAC are synchronous to this clock

Clock Gating for EEE

For the RGMII PHY interface, you can gate the transmit clock for Energy Efficient Ethernet (EEE) applications. For more information, refer to [“Programming Guidelines for Energy Efficient Ethernet”](#) on page 17-63.

Resets

The Ethernet MAC controller uses the reset signals shown in [Table 17-5](#).

Table 17-5. Resets

Name	Nominal Frequency	Functional Usage	Notes
rst_clk_tx_n_o		Transmit clock reset output	Used to reset external PHY transmit clock domain logic
rst_clk_rx_n_o		Receive clock reset output	Used to reset external PHY receive clock domain logic

Interrupts

Interrupts are generated as a result of specific events in the EMAC and external PHY device. The interrupt status register indicates all conditions which may trigger an interrupt and the interrupt enable register determines which interrupts can propagate.

Ethernet MAC Programming Model

DMA Controller

The DMA has independent transmit and receive engines, and a CSR space. The transmit engine transfers data from system memory to the device port or MAC transaction layer (MTL), while the receive engine transfers data from the device port to the system memory. The controller use descriptors to efficiently move data from source to destination with minimal Host CPU intervention. The DMA is designed for packet-oriented data transfers such as frames in Ethernet. The controller can be programmed to interrupt the Host CPU for situations such as frame transmit and receive transfer completion, and other normal/error conditions.

The DMA and the Host driver communicate through two data structures: †

- Control and Status registers (CSR) †
- Descriptor lists and data buffers †

For information about Control and Status registers, refer to “Ethernet MAC Address Map and Register Definitions” on page 17-67. Descriptors are described in “Normal Descriptor” on page 17-36 and “Alternate or Enhanced Descriptors” on page 17-47.



You can select an alternative descriptor structure during RTL configuration. The control bits in this descriptor structure are reassigned so that the application can use a larger buffer size (8 KB). For a detailed bit map of this alternative descriptor structure, refer to “Alternate or Enhanced Descriptors” on page 17-47. All descriptions in “DMA Controller” on page 17-21 refer to the default descriptor structure, not this new alternative. If you are using the alternate descriptor structure, ignore the descriptor-specific mapping in “DMA Controller” on page 17-21 and refer to the alternate descriptor-specific bit maps.

The DMA transfers data frames received by the MAC to the receive Buffer in the Host memory, and transmit data frames from the transmit Buffer in the Host memory. Descriptors that reside in the Host memory act as pointers to these buffers. †

There are two descriptor lists; one for reception, and one for transmission. The base address of each list is written into Register 3 (Receive Descriptor List Address Register) and Register 4 (Transmit Descriptor List Address Register), respectively. A descriptor list is forward linked (either implicitly or explicitly). The last descriptor may point back to the first entry to create a ring structure. Explicit chaining of descriptors is accomplished by setting the second address chained in both receive and transmit descriptors (RDES1[24] and TDES1[24]). The descriptor lists resides in the Host physical memory address space. Each descriptor can point to a maximum of two buffers. This enables two buffers to be used, physically addressed, rather than contiguous buffers in memory. †

A data buffer resides in the Host physical memory space, and consists of an entire frame or part of a frame, but cannot exceed a single frame. Buffers contain only data, buffer status is maintained in the descriptor. Data chaining refers to frames that span multiple data buffers. However, a single descriptor cannot span multiple frames. The DMA skips to the next frame buffer when end-of-frame is detected. Data chaining can be enabled or disabled. †

The descriptor ring and chain structures are shown in Figure 17-5 and Figure 17-6. †

Figure 17-5. Descriptor Ring Structure


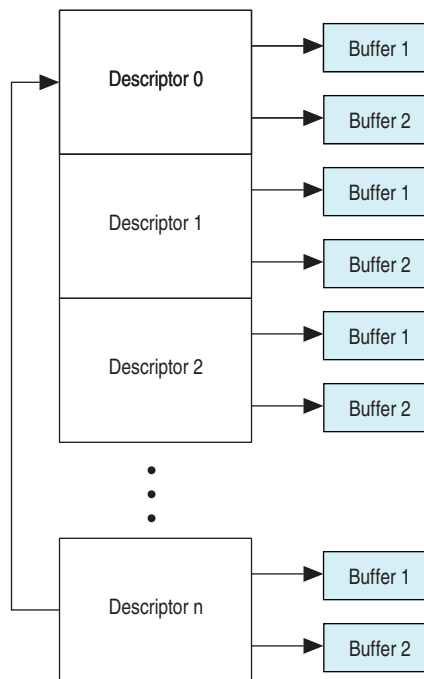


Figure 17-6. Descriptor Chain Structure

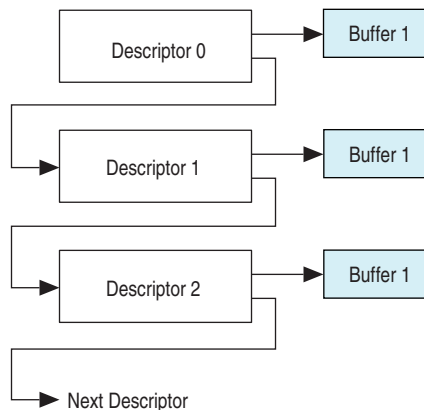

Initialization

Initialization for the EMAC is as follows.

1. Write to Register 0 (Bus Mode Register) to set Host bus access parameters. †
2. Write to Register 7 (Interrupt Enable Register) to mask unnecessary interrupt causes. †
3. Create the transmit and receive descriptor lists, and then write to DMA Register 3 (Receive Descriptor List Address Register) and Register 4 (Transmit Descriptor List Address Register), providing the DMA with the starting address of each list. †

4. Write to Register 1 (MAC Frame Filter), Register 2 (Hash Table High Register), and Register 3 (Hash Table Low Register) for desired filtering options. †
5. Write to Register 1 (MAC Frame Filter) to configure the operating mode and enable the transmit operation (Bit 3: Transmitter Enable). The PS and DM bits are set based on the auto-negotiation result (read from the PHY). †
6. Write to Register 6 (Operation Mode Register) to set Bits 13 and 1 to start transmission and reception. †
7. Write to Register 0 (MAC Configuration Register) to enable the receive operation (Bit 2: Receiver Enable). †

The transmit and receive engines enter the Running state and attempt to acquire descriptors from the respective descriptor lists. The receive and transmit engines then begin processing receive and transmit operations. The transmit and receive processes are independent of each other and can be started or stopped separately. †

Host Bus Burst Access

The DMA attempts to execute fixed-length Burst transfers on the master interface if configured to do so through FB bit of Register 0 (Bus Mode Register). The maximum Burst length is indicated and limited by the PBL field (Bits [13:8]) Register 0 (Bus Mode Register). The receive and transmit descriptors are always accessed in the maximum possible (limited by PBL or $16 * 8 / \text{bus width}$) burst-size for the 16- bytes to be read.

The transmit DMA initiates a data transfer only when sufficient space to accommodate the configured burst is available in MTL transmit FIFO buffer or the number of bytes till the end of frame (when it is less than the configured burst-length). The DMA indicates the start address and the number of transfers required to the master interface. When the interface is configured for fixed-length burst, then it transfers data using the best combination of INCR4, 8, or 16 and SINGLE transactions. Otherwise (no fixed-length burst), it transfers data using INCR (undefined length) and SINGLE transactions.

The receive DMA initiates a data transfer only when sufficient data to accommodate the configured burst is available in MTL receive FIFO buffer or when the end of frame (when it is less than the configured burst-length) is detected in the receive FIFO buffer. The DMA indicates the start address and the number of transfers required to the master interface. When the interface is configured for fixed-length burst, then it transfers data using the best combination of INCR4, 8, or 16 and SINGLE transactions. If the end-of frame is reached before the fixed-burst ends on the interface, then dummy transfers are performed in order to complete the fixed-burst. Otherwise (FB bit of Register 0 (Bus Mode Register) is reset), it transfers data using INCR (undefined length) and SINGLE transactions.

When the interface is configured for address-aligned beats, both DMA engines ensure that the first burst transfer initiated is less than or equal to the size of the configured PBL. Thus, all subsequent beats start at an address that is aligned to the configured PBL. The DMA can only align the address for beats up to size 16 (for $\text{PBL} > 16$), because the interface does not support more than INCR16.

Host Data Buffer Alignment

The transmit and receive data buffers do not have any restrictions on start address alignment. For example, in systems with 32-bit memory, the start address for the buffers can be aligned to any of the four bytes. However, the DMA always initiates transfers with address aligned to the bus width with dummy data for the byte lanes not required. This typically happens during the transfer of the beginning or end of an Ethernet frame. The software driver should discard the dummy bytes based on the start address of the buffer and size of the frame. †

Example: Buffer Read

If the transmit buffer address is 0x0000FF2 (for 32-bit data bus), and 15 bytes need to be transferred, then the DMA reads five full words from address 0x0000FF0, but when transferring data to the MTL transmit FIFO buffer, the extra bytes (the first two bytes) are dropped or ignored. Similarly, the last 3 bytes of the last transfer are also ignored. The DMA always ensures it transfers a full 32-bit data to the MTL transmit FIFO buffer, unless it is the end-of-frame.

Example: Buffer Write

If the receive buffer address is 0x0000FF2 (for 64-bit data bus) and 16 bytes of a received frame need to be transferred, then the DMA writes 3 full words from address 0x0000FF0. But the first 2 bytes of first transfer and the last 6 bytes of the third transfer have dummy data.

Buffer Size Calculations

The DMA does not update the size fields in the transmit and receive descriptors. The DMA updates only the status fields (RDES and TDES) of the descriptors. The driver has to perform the size calculations. †

The transmit DMA transfers the exact number of bytes (indicated by buffer size field of TDES1) towards the MAC. If a descriptor is marked as first (FS bit of TDES1 is set), then the DMA marks the first transfer from the buffer as the start of frame. If a descriptor is marked as last (LS bit of TDES1), then the DMA marks the last transfer from that data buffer as the end-of frame to the MTL. †

The receive DMA transfers data to a buffer until the buffer is full or the end-of frame is received from the MTL. If a descriptor is not marked as last (LS bit of RDES0), then the descriptor's corresponding buffer(s) are full and the amount of valid data in a buffer is accurately indicated by its buffer size field minus the data buffer pointer offset when the FS bit of that descriptor is set. The offset is zero when the data buffer pointer is aligned to the data bus width. If a descriptor is marked as last, then the buffer may not be full (as indicated by the buffer size in RDES1). To compute the amount of valid data in this final buffer, the driver must read the frame length (FL bits of RDES0[29:16]) and subtract the sum of the buffer sizes of the preceding buffers in this frame. The receive DMA always transfers the start of next frame with a new descriptor. †



Even when the start address of a receive buffer is not aligned to the data width of system bus, the system should allocate a receive buffer of a size aligned to the system bus width. For example, if the system allocates a 1,024-byte (1 KB) receive buffer starting from address 0x1000, the software can program the buffer start address in the receive descriptor to have a 0x1002 offset. The receive DMA writes the frame to this buffer with dummy data in the first two locations (0x1000 and 0x1001). The actual frame is written from location 0x1002. Thus, the actual useful space in this buffer is 1,022 bytes, even though the buffer size is programmed as 1,024 bytes, because of the start address offset. †

Transmission

Transmission functions use transmit descriptors, described in detail in “[Transmit Descriptor](#)” on page 17-36.

TX DMA Operation: Default (Non-OSF) Mode


The transmit DMA engine in default mode proceeds as follows: †

1. The Host sets up the transmit descriptor (TDES0-TDES3) and sets the Own bit (TDES0[31]) after setting up the corresponding data buffer(s) with Ethernet frame data. †
2. When Bit 13 (ST) of Register 6 (Operation Mode Register) is set, the DMA enters the Run state. †
3. While in the Run state, the DMA polls the transmit descriptor list for frames requiring transmission. After polling starts, it continues in either sequential descriptor ring order or chained order. If the DMA detects a descriptor flagged as owned by the Host (TDES0[31] = 0), or if an error condition occurs, transmission is suspended and both the Bit 2 (Transmit Buffer Unavailable) and Bit 16 (Normal Interrupt Summary) of the Register 5 (Status Register) are set. The transmit Engine proceeds to Step 9.
4. If the acquired descriptor is flagged as owned by DMA (TDES0[31] = 1), the DMA decodes the transmit Data Buffer address from the acquired descriptor.
5. The DMA fetches the transmit data from the Host memory and transfers the data to the MTL for transmission. †
6. If an Ethernet frame is stored over data buffers in multiple descriptors, the DMA closes the intermediate descriptor and fetches the next descriptor. Steps 3, 4, and 5 are repeated until the end-of-Ethernet-frame data is transferred to the MTL. †
7. When frame transmission is complete, if IEEE 1588 timestamping was enabled for the frame (as indicated in the transmit status) the timestamp value obtained from MTL is written to the transmit descriptor (TDES2 and TDES3) that contains the end-of-frame buffer. The status information is then written to this transmit descriptor (TDES0). Because the Own bit is cleared during this step, the Host now owns this descriptor. If timestamping was not enabled for this frame, the DMA does not alter the contents of TDES2 and TDES3. †

8. Bit 0 (Transmit Interrupt) of Register 5 (Status Register) is set after completing transmission of a frame that has Interrupt on Completion (TDES1[31]) set in its Last descriptor. The DMA engine then returns to Step 3. †
9. In the Suspend state, the DMA tries to re-acquire the descriptor (and thereby return to Step 3) when it receives a Transmit Poll demand and the Underflow Interrupt Status bit is cleared. †

The TX DMA transmission flow in default mode is shown in Figure 17-7. †

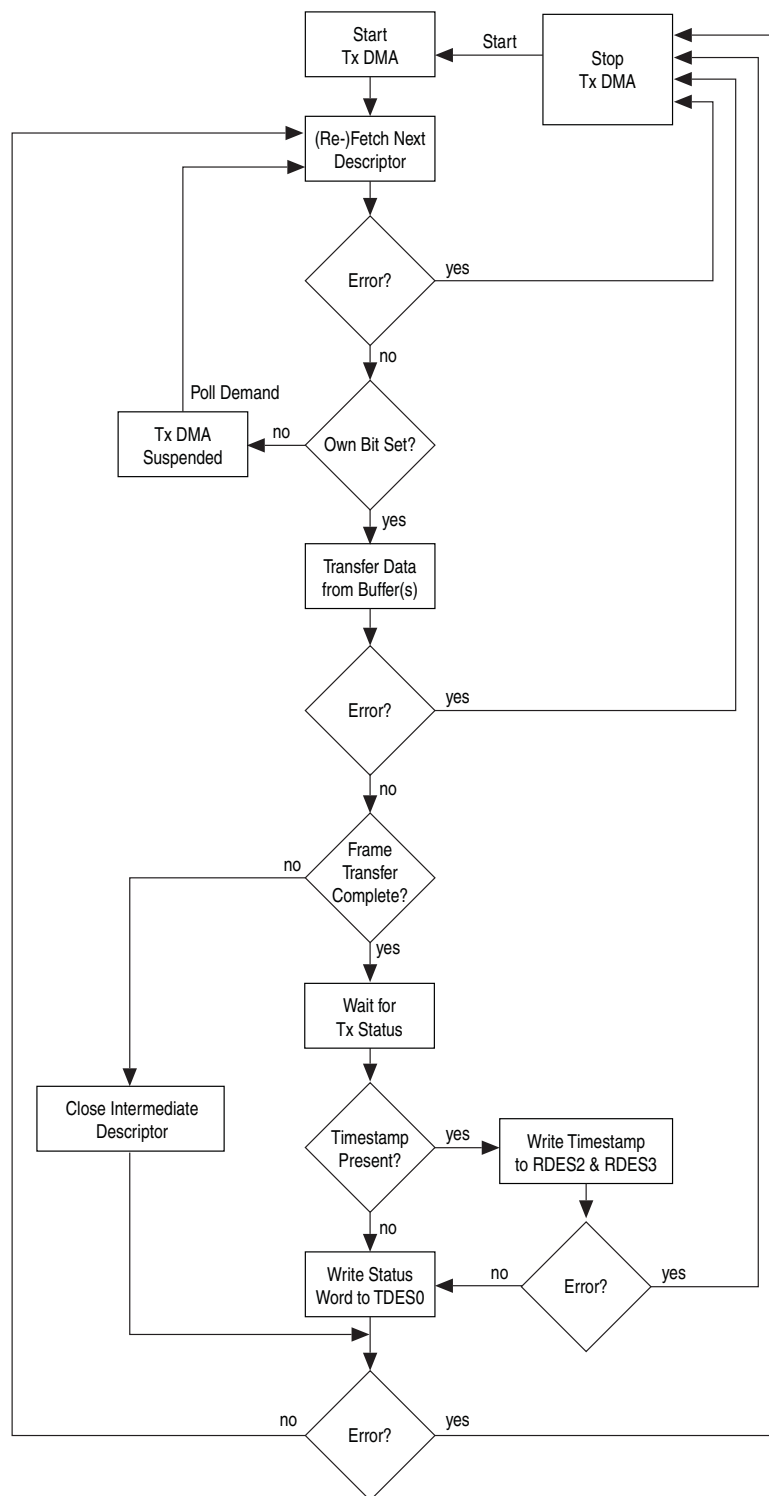Figure 17-7. TX DMA Operation in Default Mode



TX DMA Operation: OSF Mode

While in the Run state, the transmit process can simultaneously acquire two frames without closing the Status descriptor of the first [if Bit 2 (OSF) in Register 6 (Operation Mode Register) is set]. As the transmit process finishes transferring the first frame, it immediately polls the transmit descriptor list for the second frame. If the second frame is valid, the transmit process transfers this frame before writing the first frame's status information. †

In OSF mode, the Run state transmit DMA operates in the following sequence: †


1. The DMA operates as described in steps 1–6 of “TX DMA Operation: Default (Non-OSF) Mode” on page 17–25. †
2. Without closing the previous frame's last descriptor, the DMA fetches the next descriptor. †
3. If the DMA owns the acquired descriptor, the DMA decodes the transmit buffer address in this descriptor. If the DMA does not own the descriptor, the DMA goes into Suspend mode and skips to Step 7. †
4. The DMA fetches the transmit frame from the Host memory and transfers the frame to the MTL until the End-of-frame data is transferred, closing the intermediate descriptors if this frame is split across multiple descriptors. †
5. The DMA waits for the previous frame's frame transmission status and timestamp. Once the status is available, the DMA writes the timestamp to TDES2 and TDES3, if such timestamp was captured (as indicated by a status bit). The DMA then writes the status, with a cleared Own bit, to the corresponding TDES0, thus closing the descriptor. If timestamping was not enabled for the previous frame, the DMA does not alter the contents of TDES2 and TDES3. †
6. If enabled, the transmit interrupt is set, the DMA fetches the next descriptor, then proceeds to Step 3 (when Status is normal). If the previous transmission status shows an underflow error, the DMA goes into Suspend mode (Step 7). †
7. In Suspend mode, if a pending status and timestamp are received from the MTL, the DMA writes the timestamp (if enabled for the current frame) to TDES2 and TDES3, then writes the status to the corresponding TDES0. It then sets relevant interrupts and returns to Suspend mode. †
8. The DMA can exit Suspend mode and enter the Run state (go to Step 1 or Step 2 depending on pending status) only after receiving a Transmit Poll demand (Register 1 (Transmit Poll Demand Register)). †



As the DMA fetches the next descriptor in advance before closing the current descriptor, the descriptor chain should have more than two different descriptors for correct and proper operation. †

The basic flow is described in Figure 17–8. †

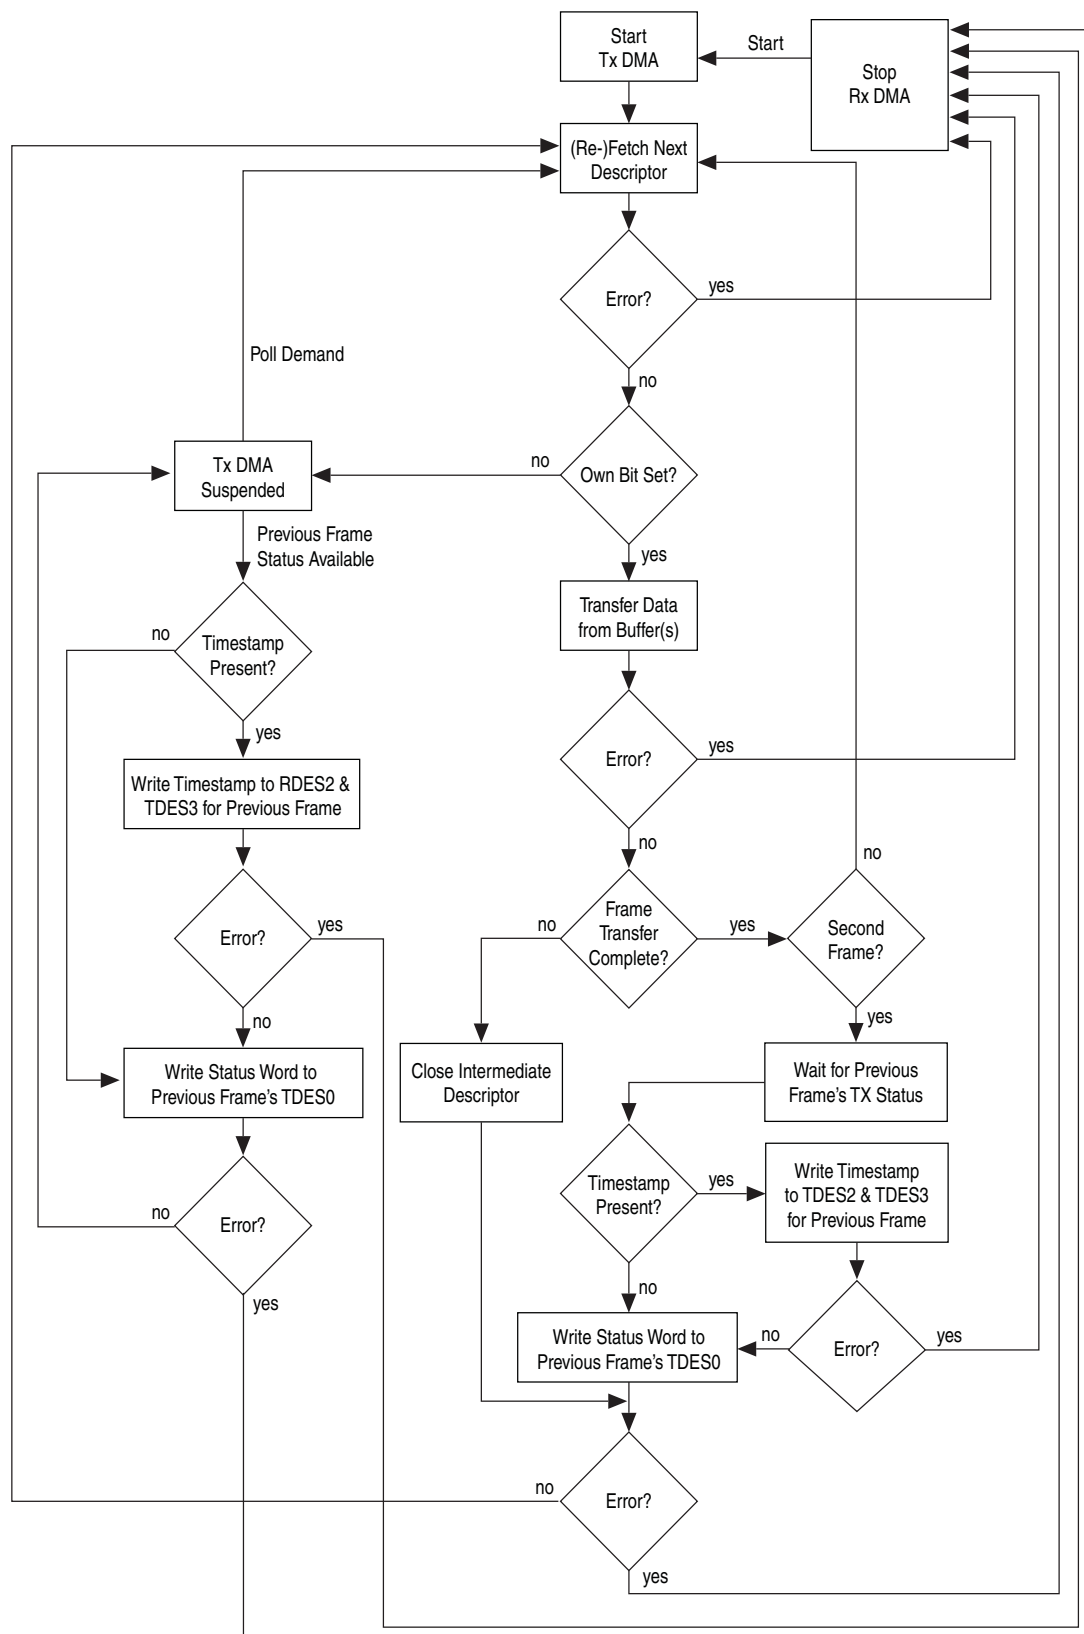Figure 17-8. TX DMA Operation in OSF Mode



Transmit Frame Processing

The transmit DMA expects that the data buffers contain complete Ethernet frames, excluding preamble, pad bytes, and FCS fields. The DA, SA, and Type/Len fields contain valid data. If the transmit descriptor indicates that the MAC must disable CRC or PAD insertion, the buffer must have complete Ethernet frames (excluding preamble), including the CRC bytes. †

Frames can be data-chained and can span several buffers. Frames must be delimited by the First Descriptor (TDES1[29]) and the Last Descriptor (TDES1[30]), respectively. †

As transmission starts, the First Descriptor must have (TDES1[29]) set. When this occurs, frame data transfers from the Host buffer to the MTL transmit FIFO buffer. Concurrently, if the current frame has the Last Descriptor (TDES1[30]) clear, the transmit Process attempts to acquire the Next descriptor. The transmit Process expects this descriptor to have TDES1[29] clear. If TDES1[30] is clear, it indicates an intermediary buffer. If TDES1[30] is set, it indicates the last buffer of the frame. †

After the last buffer of the frame has been transmitted, the DMA writes back the final status information to the Transmit Descriptor 0 (TDES0) word of the descriptor that has the last segment set in Transmit Descriptor 1 (TDES1[30]). At this time, if Interrupt on Completion (TDES1[31]) is set, the Bit 0 (Transmit Interrupt) of Register 5 (Status Register) is set, the Next descriptor is fetched, and the process repeats. †

The actual frame transmission begins after the MTL transmit FIFO buffer has reached either a programmable transmit threshold (Bits [16:14] of Register 6 (Operation Mode Register)), or a full frame is contained in the FIFO buffer. There is also an option for Store and Forward Mode (Bit 21 of Register 6 (Operation Mode Register)). Descriptors are released (Own bit TDES0[31] clears) when the DMA finishes transferring the frame. †



To ensure proper transmission of a frame and the next frame, you must specify a non-zero buffer size for the transmit descriptor that has the Last Descriptor (TDES1[30]) set. †

Transmit Polling Suspended

Transmit polling can be suspended by either of the following conditions: †

- The DMA detects a descriptor owned by the Host (TDES0[31]=0). To resume, the driver must give descriptor ownership to the DMA and then issue a Poll Demand command. †
- A frame transmission is aborted when a transmit error because of underflow is detected. The appropriate Transmit Descriptor 0 (TDES0) bit is set. †

If the DMA goes into SUSPEND state because of the first condition, then both Bit 16 (Normal Interrupt Summary) and Bit 2 (Transmit Buffer Unavailable) of Register 5 (Status Register) are set. If the second condition occurs, both Bit 15 (Abnormal Interrupt Summary) and Bit 5 (Transmit Underflow) of Register 5 (Status Register) are set, and the information is written to Transmit Descriptor 0, causing the suspension. †

In both cases, the position in the transmit List is retained. The retained position is that of the descriptor following the Last descriptor closed by the DMA. †

The driver must explicitly issue a Transmit Poll Demand command after rectifying the suspension cause. †

Reception


Receive functions use receive descriptors, described in detail in “Receive Descriptor” on page 17-40.

The receive DMA engine’s reception sequence is depicted in Figure 17-9 on page 17-32 and proceeds as follows: †

1. The host sets up receive descriptors (RDES0-RDES3) and sets the Own bit (RDES0[31]). †
2. When Bit 1 (SR) of Register 6 (Operation Mode Register) is set, the DMA enters the Run state. While in the Run state, the DMA polls the receive descriptor list, attempting to acquire free descriptors. If the fetched descriptor is not free (is owned by the host), the DMA enters the Suspend state and jumps to Step 9. †
3. The DMA decodes the receive data buffer address from the acquired descriptors. †
4. Incoming frames are processed and placed in the acquired descriptor’s data buffers. †
5. When the buffer is full or the frame transfer is complete, the receive engine fetches the next descriptor. †
6. If the current frame transfer is complete, the DMA proceeds to Step 7. If the DMA does not own the next fetched descriptor and the frame transfer is not complete (EOF is not yet transferred), the DMA sets the Descriptor Error bit in the RDES0 (unless flushing is disabled in Bit 24 of Register 6 (Operation Mode Register)). The DMA closes the current descriptor (clears the Own bit) and marks it as intermediate by clearing the Last Segment (LS) bit in the RDES0 value (marks it as Last Descriptor if flushing is not disabled), then proceeds to Step 8. If the DMA does own the next descriptor but the current frame transfer is not complete, the DMA closes the current descriptor as intermediate and reverts to Step 4. †
7. If IEEE 1588 timestamping is enabled, the DMA writes the timestamp (if available) to the current descriptor’s RDES2 and RDES3. It then takes the receive frame’s status from the MTL and writes the status word to the current descriptor’s RDES0, with the Own bit cleared and the Last Segment bit set. †
8. The receive engine checks the latest descriptor’s Own bit. If the host owns the descriptor (Own bit is 0), the Bit 7 (Receive Buffer Unavailable) of Register 5 (Status Register) is set and the DMA receive engine enters the Suspended state (Step 9). If the DMA owns the descriptor, the engine returns to Step 4 and awaits the next frame.
9. Before the receive engine enters the Suspend state, partial frames are flushed from the receive FIFO buffer. You can control flushing using Bit 24 of Register 6 (Operation Mode Register). †

10. The receive DMA exits the Suspend state when a Receive Poll demand is given or the start of next frame is available from the MTL's receive FIFO buffer. The engine proceeds to Step 2 and refetches the next descriptor. †

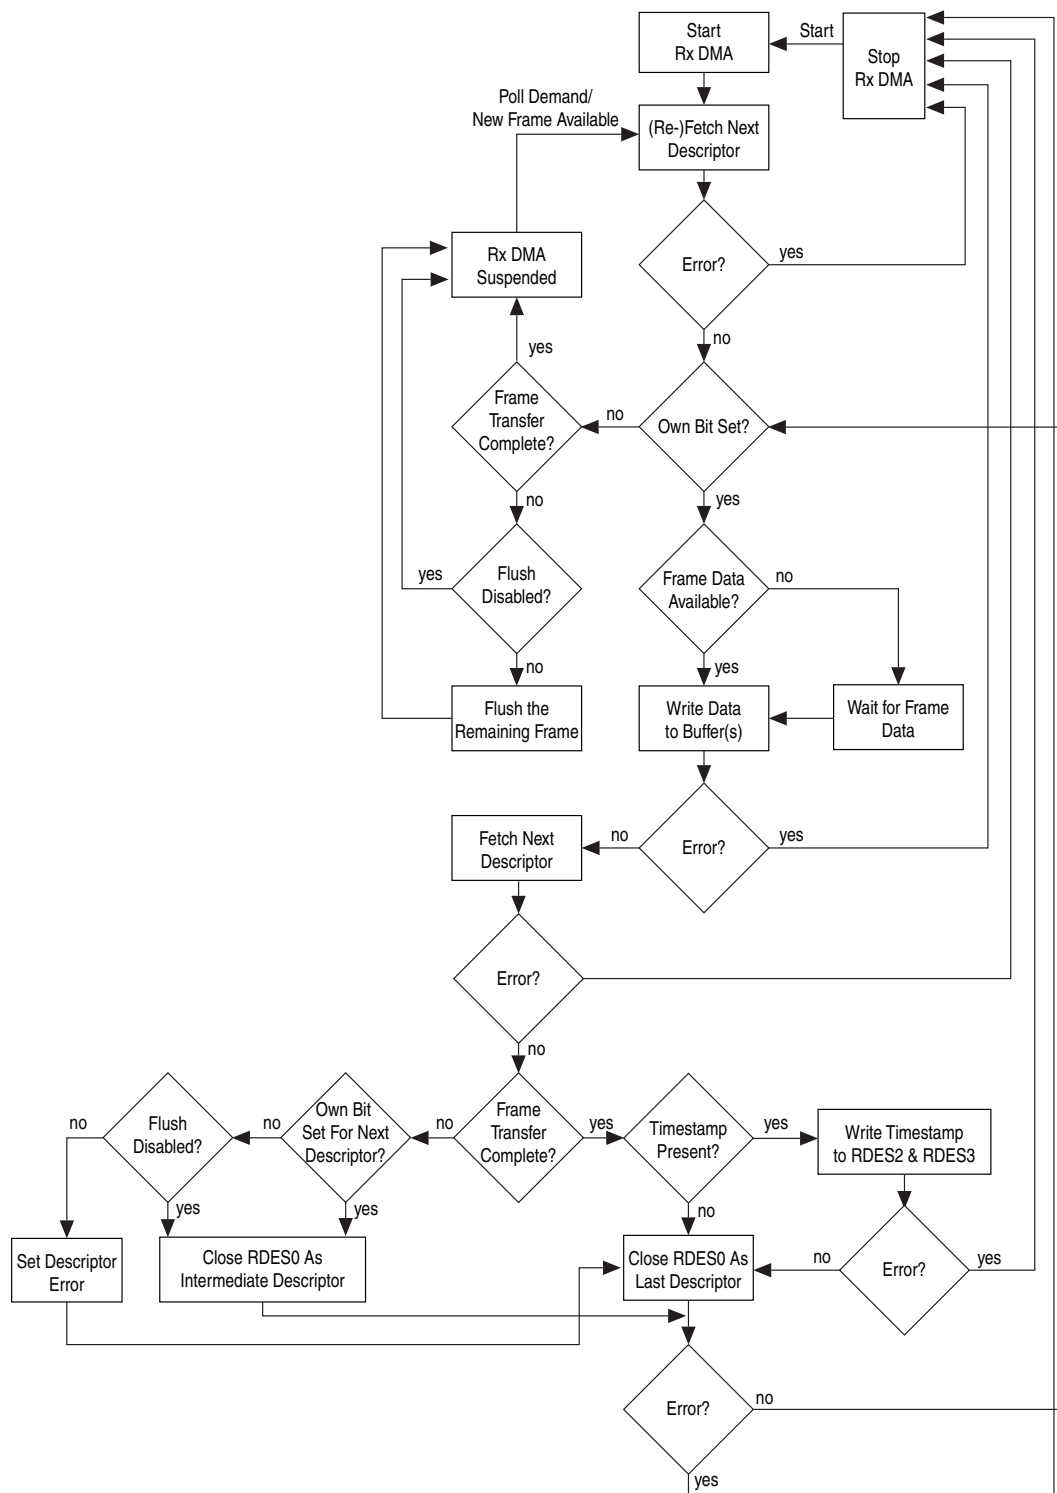Figure 17-9. Receive DMA Operation



If software has enabled timestamping through CSR, when a valid timestamp value is not available for the frame (for example, because the receive FIFO buffer was full before the timestamp could be written to it), the DMA writes all-ones to RDES2 and RDES3. Otherwise (that is, if timestamping is not enabled), the RDES2 and RDES3 remain unchanged. †

Receive Descriptor Acquisition

The receive Engine always attempts to acquire an extra descriptor in anticipation of an incoming frame. Descriptor acquisition is attempted if any of the following conditions is satisfied: †

- Bit 1 (Start or Stop Receive) of Register 6 (Operation Mode Register) has been set immediately after being placed in the Run state. †
- The data buffer of current descriptor is full before the frame ends for the current transfer. †
- The controller has completed frame reception, but the current receive descriptor is not yet closed. †
- The receive process has been suspended because of a host-owned buffer ($RDES0[31] = 0$) and a new frame is received. †
- A Receive poll demand has been issued. †

Receive Frame Processing

The MAC transfers the received frames to the Host memory only when the frame passes the address filter and frame size is greater than or equal to configurable threshold bytes set for the receive FIFO buffer of MTL, or when the complete frame is written to the FIFO buffer in Store-and-Forward mode. †

If the frame fails the address filtering, it is dropped in the MAC block itself (unless Bit 31 (Receive All) of Register 1 (MAC Frame Filter) is set). Frames that are shorter than 64 bytes, because of collision or premature termination, can be removed from the MTL receive FIFO buffer. †

After 64 (configurable threshold) bytes have been received, the MTL block requests the DMA block to begin transferring the frame data to the receive Buffer pointed by the current descriptor. The DMA sets First Descriptor ($RDES0[9]$) after the DMA Host interface becomes ready to receive a data transfer (if DMA is not fetching transmit data from the host), to delimit the frame. The descriptors are released when the Own ($RDES[31]$) bit is reset to 0, either as the Data buffer fills up or as the last segment of the frame is transferred to the receive buffer. If the frame is contained in a single descriptor, both Last Descriptor ($RDES[8]$) and First Descriptor ($RDES[9]$) are set.

The DMA fetches the next descriptor, sets the Last Descriptor ($RDES[8]$) bit, and releases the $RDES0$ status bits in the previous frame descriptor. Then the DMA sets the Bit 6 (Receive Interrupt) of Register 5 (Status Register). The same process repeats unless the DMA encounters a descriptor flagged as being owned by the host. If this occurs, the receive Process sets the Bit 7 (Receive Buffer Unavailable) of Register 5 (Status Register) and then enters the Suspend state. The position in the receive list is retained. †

Receive Process Suspended

If a new receive frame arrives while the receive Process is in Suspend state, the DMA refetches the current descriptor in the Host memory. If the descriptor is now owned by the DMA, the receive Process re-enters the Run state and starts frame reception. If the descriptor is still owned by the host, by default, the DMA discards the current frame at the top of the MTL RX FIFO buffer and increments the missed frame counter. If more than one frame is stored in the MTL EX FIFO buffer, the process repeats. †


The discarding or flushing of the frame at the top of the MTL EX FIFO buffer can be avoided by disabling Flushing (Bit 24 of Register 6 (Operation Mode Register)). In such conditions, the receive process sets the Receive Buffer Unavailable status and returns to the Suspend state. †

Interrupts

Interrupts can be generated as a result of various events. The DMA Register 5 (Status Register) contains all the bits that might cause an interrupt. Register 7 (Interrupt Enable Register) contains an enable bit for each of the events that can cause an interrupt. †

There are two groups of interrupts, Normal and Abnormal, as described in Register 5 (Status Register). Interrupts are cleared by writing a 1 to the corresponding bit position. When all the enabled interrupts within a group are cleared, the corresponding summary bit is cleared. When both the summary bits are cleared, the `sbd_intr_o` interrupt signal is de-asserted. If the MAC is the cause for assertion of the interrupt, then any of the GLL, GMI, GPI, TTI, or GLPII bits of Register 5 (Status Register) are set high, as shown in Figure 17-10.

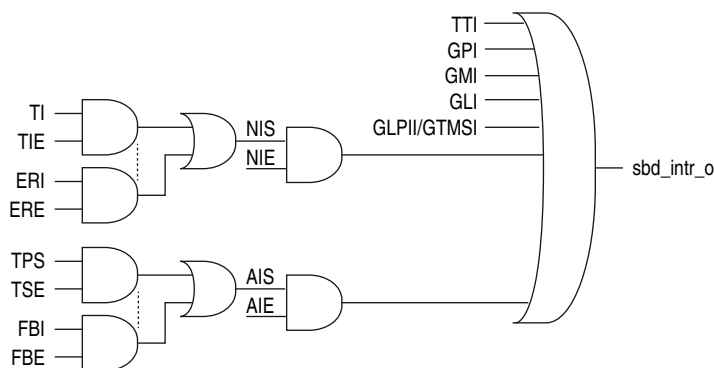Figure 17-10. `sbd_intr_o` Generation ⁽¹⁾



Note to Figure 17-10:

(1) Signals NIS and AIS are registered.



The Register 5 (Status Register) is the interrupt status register. The interrupt pin (`sbd_intr_o`) is asserted because of any event in this status register only if the corresponding interrupt enable bit is set in Register 7 (Interrupt Enable Register). †

Interrupts are not queued and if the interrupt event occurs before the driver has responded to it, no additional interrupts are generated. For example, Bit 6 (Receive Interrupt) of Register 5 (Status Register) indicates that one or more frames were transferred to the Host buffer. The driver must scan all descriptors, from the last recorded position to the first one owned by the DMA. †

An interrupt is generated only once for simultaneous, multiple events. The driver must scan the Register 5 (Status Register) for the cause of the interrupt. The interrupt is not generated again unless a new interrupting event occurs, after the driver has cleared the appropriate bit in Register 5 (Status Register). For example, the controller generates a Bit 6 (Receive Interrupt) of Register 5 (Status Register) and the driver begins reading Register 5 (Status Register). Next, Bit 7 (Receive Buffer Unavailable) of Register 5 (Status Register) occurs. The driver clears the receive interrupt. Even then, the `sbd_intr_0` signal is not de-asserted, because of the active or pending Receive Buffer Unavailable interrupt. †

Bits 7:0 (Interrupt Timer) of Register 9 (Receive Interrupt Watchdog Timer Register) is given for flexible control of receive Interrupt. When this Interrupt timer is programmed with a non-zero value, it gets activated as soon as the RX DMA completes a transfer of a received frame to system memory without asserting the receive Interrupt because it is not enabled in the corresponding Receive Descriptor (RDES1[31] in [Table 17-12 on page 17-43](#)). When this timer runs out as per the programmed value, RI bit is set and the interrupt is asserted if the corresponding RI is enabled in Register 7 (Interrupt Enable Register). This timer gets disabled before it runs out, when a frame is transferred to memory and the RI is set because it is enabled for that descriptor. †

Error Response to DMA

For any data transfer initiated by a DMA channel, if the slave replies with an error response, that DMA stops all operations and updates the error bits and the Fatal Bus Error bit in the Register 5 (Status Register). The DMA controller can resume operation only after soft resetting or hard resetting the EMAC and reinitializing the DMA.

Descriptor Overview

This section describes the HPS EMAC DMA descriptors.

The DMA in the Ethernet subsystem transfers data based on a linked list of descriptors, as explained in [“DMA Controller” on page 17-21](#). The descriptors are created in the system memory. The EMAC DMA supports the following two types of descriptors:

- Normal descriptor—This is the default descriptor format which can have 4 DWORDS. For information about this descriptor type, refer to [“Normal Descriptor” on page 17-36](#). †
- Enhanced descriptor—This is the alternate descriptor format which can have 8 DWORDS (32 bytes). For information about this descriptor type, refer to [“Alternate or Enhanced Descriptors” on page 17-47](#).

Each descriptor contains two buffers, two byte-count buffers, and two address pointers, which enable the adapter port to be compatible with various types of memory management schemes. Once configured, you cannot change the descriptor structure. †

Descriptor Endianness

The descriptor addresses must be aligned to the used bus width (Word, DWord, or LWord for 32-bit, 64-bit, or 128-bit bus respectively). The data bus is configured as little-endian.



The figures in this section show the normal transmit and receive descriptors. If you are using the enhanced descriptors, you must ensure that the descriptors are created accordingly in system memory. For more information about enhanced descriptors, refer to [“Alternate or Enhanced Descriptors” on page 17-47](#). †

Normal Descriptor

This is the default descriptor format which can have 4 DWORDS. You can use this descriptor format when advanced features such as IEEE 1588 advanced timestamping are not enabled.

Transmit Descriptor

The DMA in the EMAC requires at least one descriptor for a transmit frame. In addition to two buffers, two byte-count buffers, and two address pointers, the transmit descriptor has control fields which can be used to control the MAC operation on per-transmit frame basis.

Transmit Descriptor 0 (TDES0)

TDES0 contains the transmitted frame status and the descriptor ownership information.

Table 17-6. Transmit Descriptor 0 (Part 1 of 3)

Bit	Description
31	OWN: Own Bit When set, this bit indicates that the descriptor is owned by the DMA. When this bit is reset, it indicates that the descriptor is owned by the Host. The DMA clears this bit either when it completes the frame transmission or when the buffers allocated in the descriptor are empty. The ownership bit of the First descriptor of the frame should be set after all subsequent descriptors belonging to the same frame have been set. This avoids a possible race condition between fetching a descriptor and the driver setting an ownership bit. †
30:18	Reserved †
17	TTSS: TX Timestamp Status This status bit indicates that a timestamp has been captured for the corresponding transmit frame. When this bit is set, TDES2 and TDES3 have timestamp values that were captured for the transmit frame. This field is valid only when the Last Segment control bit (TDES1[30]) in a descriptor is set.
16	IHE: IP Header Error When set, this bit indicates that the Checksum Offload engine detected an IP header error and consequently did not modify the transmitted frame for any checksum insertion.

Table 17–6. Transmit Descriptor 0 (Part 2 of 3)

Bit	Description
15	ES: Error Summary Indicates the logical OR of the following bits: ■ TDES0[16]: IP Header Error ■ TDES0[14]: Jabber Timeout ■ TDES0[13]: Frame Flush ■ TDES0[12]: Payload Checksum Error ■ TDES0[11]: Loss of Carrier ■ TDES0[10]: No Carrier ■ TDES0[9]: Late Collision ■ TDES0[8]: Excessive Collision ■ TDES0[2]: Excessive Deferral ■ TDES0[1]: Underflow Error †
14	JT: Jabber Timeout When set, this bit indicates that the MAC transmitter has experienced a jabber time-out. This bit is only set when the JD bit of Register 0 (MAC Configuration Register) is not set. †
13	FF: Frame Flushed When set, this bit indicates that the DMA or MAC transaction layer (MTL) flushed the frame because of a software flush command given by the CPU. †
12	12 PCE: Payload Checksum Error This bit, when set, indicates that the Checksum Offload engine had a failure and did not insert any checksum into the encapsulated TCP, UDP, or ICMP payload. This failure can be either because of insufficient bytes, as indicated by the IP Header's Payload Length field, or the MTL starting to forward the frame to the MAC transmitter in Store-and-Forward mode without the checksum having been calculated yet. This second error condition only occurs when the transmit FIFO buffer depth is less than the length of the Ethernet frame being transmitted to avoid deadlock, the MTL starts forwarding the frame when the FIFO buffer is full, even in the store-and-forward mode.
11	LC: Loss of Carrier When set, this bit indicates that Loss of Carrier occurred during frame transmission (that is, the gmi_i_crs_i signal was inactive for one or more transmit clock periods during frame transmission). This is valid only for the frames transmitted without collision and when the MAC operates in the half-duplex mode. †
10	NC: No Carrier When set, this bit indicates that the carrier sense signal from the PHY was not asserted during transmission. †
9	Reserved
8	EC: Excessive Collision When set, this bit indicates that the transmission was aborted after 16 successive collisions while attempting to transmit the current frame. If Bit 9 (Disable Retry) in Register 0 (MAC Configuration Register) is set, this bit is set after the first collision and the transmission of the frame is aborted. †
7	VF: VLAN Frame When set, this bit indicates that the transmitted frame was a VLAN-type frame. †
6:3	CC: Collision Count This 4-bit counter value indicates the number of collisions occurring before the frame was transmitted. The count is not valid when the Excessive Collisions bit (TDES0[8]) is set. †

Table 17-6. Transmit Descriptor 0 (Part 3 of 3)

Bit	Description
2	ED: Excessive Deferral When set, this bit indicates that the transmission has ended because of excessive deferral of over 24,288 bit times (155,680 bits times in 1000-Mbps mode, or in Jumbo frame enabled mode) if Bit 4 (Deferral Check) is set high in Register 0 (MAC Configuration Register). †
1	UF: Underflow Error When set, this bit indicates that the MAC aborted the frame because data arrived late from the Host memory. Underflow Error indicates that the DMA encountered an empty transmit Buffer while transmitting the frame. The transmission process enters the suspended state and sets both Transmit Underflow (Register 5[5]) and Transmit Interrupt (Register 5[0]). †
0	DB: Deferred Bit When set, this bit indicates that the MAC defers before transmission because of the presence of carrier. This bit is valid only in the half-duplex mode. †

Transmit Descriptor 1 (TDES1)

TDES1 contains the buffer sizes and other bits which control the descriptor chain or ring and the frame being transferred. †



Refer to “[Buffer Size Calculations](#)” on page 17-24 for further detail on calculating buffer sizes. †

Table 17-7. Transmit Descriptor 1 (Part 1 of 2)

Bit	Description
31	IC: Interrupt on Completion When set, this bit sets Transmit Interrupt (Register 5[0]) after the present frame has been transmitted. †
30	LS: Last Segment When set, this bit indicates that the buffer contains the last segment of the frame. When this bit is set, the TBS1 or TBS2 field should have a non-zero value. †
29	FS: First Segment When set, this bit indicates that the buffer contains the first segment of a frame. †
28:27	CIC: Checksum Insertion Control These bits control the insertion of checksums in Ethernet frames that encapsulate TCP, UDP, or ICMP over IPv4 or IPv6 as described below. ■ 0: Do nothing. Checksum Engine is bypassed ■ 1: Insert IPv4 header checksum. Use this value to insert IPv4 header checksum when the frame encapsulates an IPv4 datagram. ■ 2: Insert TCP/UDP/ICMP checksum. The checksum is calculated over the TCP, UDP, or ICMP segment only and the TCP, UDP, or ICMP pseudo-header checksum is assumed to be present in the corresponding input frame's Checksum field. An IPv4 header checksum is also inserted if the encapsulated datagram conforms to IPv4. ■ 3: Insert a TCP/UDP/ICMP checksum that is fully calculated in this engine. In other words, the TCP, UDP, or ICMP pseudo-header is included in the checksum calculation, and the input frame's corresponding Checksum field has an all-zero value. An IPv4 Header checksum is also inserted if the encapsulated datagram conforms to IPv4. The Checksum engine detects whether the TCP, UDP, or ICMP segment is encapsulated in IPv4 or IPv6 and processes its data accordingly.

Table 17-7. Transmit Descriptor 1 (Part 2 of 2)

Bit	Description
26	DC: Disable CRC When set, the MAC does not append the CRC to the end of the transmitted frame. This is valid only when the first segment (TDES1[29]) is set. †
25	TER: Transmit End of Ring When set, this bit indicates that the descriptor list reached its final descriptor. The returns to the base address of the list, creating a descriptor ring. †
24	TCH: Second Address Chained When set, this bit indicates that the second address in the descriptor is the Next descriptor address rather than the second buffer address. When TDES1[24] is set, TBS2 (TDES1[21-11]) are “don’t care” values. TDES1[25] takes precedence over TDES1[24]. †
23	DP: Disable Padding When set, the MAC does not automatically add padding to a frame shorter than 64 bytes. When this bit is reset, the DMA automatically adds padding and CRC to a frame shorter than 64 bytes and the CRC field is added despite the state of the DC (TDES1[26]) bit. This is valid only when the first segment (TDES1[29]) is set. †
22	TTSE: Transmit Timestamp Enable When set, this bit enables IEEE1588 hardware timestamping for the transmit frame referenced by the descriptor. This field is valid only when the First Segment control bit (TDES1[29]) is set. †
21:11	TBS2: Transmit Buffer 2 Size These bits indicate the second Data Buffer in bytes. This field is not valid if TDES1[24] is set. †
10:0	TBS1: Transmit Buffer 1 Size These bits indicate the First Data Buffer byte size. If this field is 0, the DMA ignores this buffer and uses Buffer 2 or next descriptor depending on the value of TCH (Bit 24). †

Transmit Descriptor 2 (TDES2)

TDES2 contains the address pointer to the first buffer of the descriptor. †

Table 17-8. Transmit Descriptor 2

Bit	Description
31:0	Buffer 1 Address Pointer These bits indicate the physical address of Buffer 1. There is no limitation on the buffer address alignment. Refer to “Host Data Buffer Alignment” on page 17-24 for further detail on buffer address alignment. †

Transmit Descriptor 3 (TDES3)

TDES3 contains the address pointer either to the second buffer of the descriptor or the next descriptor. †

Table 17-9. Transmit Descriptor 3

Bit	Description
31:0	Buffer 2 Address Pointer (Next Descriptor Address) Indicates the physical address of Buffer 2 when a descriptor ring structure is used. If the Second Address Chained (TDES1[24]) bit is set, this address contains the pointer to the physical memory where the Next descriptor is present. The buffer address pointer must be aligned to the bus width only when TDES1[24] is set. (LSBs are ignored internally.) †

Receive Descriptor

The DMA in the EMAC requires at least two descriptors when receiving a frame. The receive state machine of the DMA always attempts to acquire an extra descriptor in anticipation of an incoming frame. (The size of the incoming frame is unknown). Before the RX DMA closes a descriptor, it attempts to acquire the next descriptor even if no frames are received.

In a single descriptor (receive) system, the subsystem generates a descriptor error if receive buffer is unable to accommodate the incoming frame and the next descriptor is not owned by the DMA. Thus, the Host is forced to increase either its descriptor pool or the buffer size. Otherwise, the subsystem starts dropping all incoming frames. †

Receive Descriptor 0 (RDES0)

RDES0 contains the received frame status, the frame length, and the descriptor ownership information.

Table 17-10. Receive Descriptor 0 (Part 1 of 3)

Bit	Description
31	OWN: Own Bit When set, this bit indicates that the descriptor is owned by the DMA of the EMAC. When this bit is reset, this bit indicates that the descriptor is owned by the Host. The DMA clears this bit either when it completes the frame reception or when the buffers that are associated with this descriptor are full.
30	AFM: Destination Address Filter Fail When set, this bit indicates a frame that failed in the DA Filter in the MAC. †
29:16	FL: Frame Length These bits indicate the byte length of the received frame that was transferred to host memory (including CRC). This field is valid when Last Descriptor (RDES0[8]) is set and either the Descriptor Error (RDES0[14]) or Overflow Error bit is reset. The frame length also includes the two bytes appended to the Ethernet frame when IP checksum calculation (Type 1) is enabled and the received frame is not a MAC control frame. This field is valid when Last Descriptor (RDES0[8]) is set. When the Last Descriptor and Error Summary bits are not set, this field indicates the accumulated number of bytes that have been transferred for the current frame. †
15	ES: Error Summary Indicates the logical OR of the following bits: ■ RDES0[0]: Payload Checksum Error ■ RDES0[1]: CRC Error ■ RDES0[3]: Receive Error ■ RDES0[4]: Watchdog Timeout ■ RDES0[6]: Late Collision ■ RDES0[7]: IPC Checksum (Type 2) ■ RDES0[11]: Overflow Error ■ RDES0[14]: Descriptor Error This field is valid only when the Last Descriptor (RDES0[8]) is set. †
14	DE: Descriptor Error When set, this bit indicates a frame truncation caused by a frame that does not fit within the current descriptor buffers, and that the DMA does not own the Next descriptor. The frame is truncated. This field is valid only when the Last Descriptor (RDES0[8]) is set. †

Table 17–10. Receive Descriptor 0 (Part 2 of 3)

Bit	Description
13	SAF: Source Address Filter Fail When set, this bit indicates that the SA field of frame failed the SA Filter in the MAC. †
12	LE: Length Error When set, this bit indicates that the actual length of the frame received and that the Length/ Type field does not match. This bit is valid only when the Frame Type (RDES0[5]) bit is reset. Length error status is not valid when CRC error is present. †
11	OE: Overflow Error When set, this bit indicates that the received frame is damaged because of buffer overflow in RX FIFO buffer. Note: This bit is set only when the DMA transfers a partial frame to the application. This happens only when the RX FIFO buffer is operating in the threshold mode. In the store-and-forward mode, all partial frames are dropped completely in RX FIFO buffer. †
10	VLAN: VLAN Tag When set, this bit indicates that the frame pointed to by this descriptor is a VLAN frame tagged by the MAC. The VLAN tagging depends on checking VLAN fields of the received frame based on the Register 7 (VLAN Tag Register) settings. †
9	FS: First Descriptor When set, this bit indicates that this descriptor contains the first buffer of the frame. If the size of the first buffer is 0, the second buffer contains the beginning of the frame. If the size of the second buffer is also 0, the next descriptor contains the beginning of the frame. †
8	LS: Last Descriptor When set, this bit indicates that the buffers pointed to by this descriptor are the last buffers of the frame †
7	IPC Checksum Error When IP Checksum Engine (Type 1) is enabled, this bit, when set, indicates that the 16-bit IPv4 Header checksum calculated by the MAC did not match the received checksum bytes. Bit 15 (ES) is NOT set when this bit is set in this mode. If this bit is set when Full Checksum Offload Engine (Type 2) is enabled, it indicates an error in the IPv4 or IPv6 header. This error can be due to inconsistent Ethernet Type field and IP header Version field values, a header checksum mismatch in IPv4, or an Ethernet frame lacking the expected number of IP header bytes. For more information, refer to Table 17–11 on page 17–42 .
6	LC: Late Collision When set, this bit indicates that a late collision has occurred while receiving the frame in half-duplex mode. †
5	FT: Frame Type When set, this bit indicates that the receive frame is an Ethernet-type frame (the LT field is greater than or equal to 0x0600). When this bit is reset, it indicates that the received frame is an IEEE802.3 frame. This bit is not valid for Runt frames less than 14 bytes. For more information, refer to Table 17–11 on page 17–42 . †
4	RWT: Receive Watchdog Timeout When set, this bit indicates that the receive Watchdog Timer has expired while receiving the current frame and the current frame is truncated after the Watchdog Timeout. †
3	RE: Receive Error When set, this bit indicates that the <code>gmii_rxdv_i</code> signal is asserted while <code>gmii_rxdv_i</code> is asserted during frame reception. Error can be of less or no extension, or error (<code>rx! = 0xf</code>) during extension. †
2	DE: Dribble Bit Error When set, this bit indicates that the received frame has a non-integer multiple of bytes (odd nibbles). This bit is valid only in MII Mode. †

Table 17-10. Receive Descriptor 0 (Part 3 of 3)

Bit	Description
1	CE: CRC Error When set, this bit indicates that a CRC error occurred on the received frame. This field is valid only when the Last Descriptor (RDES0[8]) is set. †
0	RX MAC Address or Payload Checksum Error When set, this bit indicates that the RX MAC Address registers value (1 to 15) matched the frame's DA field. When reset, this bit indicates that the RX MAC Address Register 0 value matched the DA field. If Full Checksum Offload Engine is enabled, this bit, when set, indicates the TCP, UDP, or ICMP checksum the EMAC calculated does not match the received encapsulated TCP, UDP, or ICMP segment's Checksum field. This bit is also set when the received number of payload bytes does not match the value indicated in the Length field of the encapsulated IPv4 or IPv6 datagram in the received Ethernet frame. For more information, refer to Table 17-11 on page 17-42 . †

When the Full Checksum Offload Engine (Type 2) is enabled, the permutations of Bits 5, 7, and 0 reflect the conditions discussed in [Table 17-11](#). †

Table 17-11. Receive Descriptor 0 when COE (Type 2) is Enabled

Bit 5: Frame Type	Bit 7: IPC Checksum Error	Bit 0: Payload Checksum Error	Frame Status
0	0	0	IEEE 802.3 Type frame (Length field value is less than 0x0600.) †
1	0	0	IPv4/IPv6 Type frame, no checksum error detected †
1	0	1	IPv4/IPv6 Type frame with a payload checksum error (as described for PCE) detected †
1	1	0	IPv4/IPv6 Type frame with an IP header checksum error (as described for IPC CE) detected †
1	1	1	IPv4/IPv6 Type frame with both IP header and payload checksum errors detected †
0	0	1	IPv4/IPv6 Type frame with no IP header checksum error and the payload check bypassed, due to an unsupported payload †
0	1	1	A Type frame that is neither IPv4 or IPv6 (the Checksum Offload engine bypasses checksum completely.) †
0	1	0	Reserved †

Receive Descriptor 1 (RDES1)

RDES1 contains the buffer sizes and other bits that control the descriptor chain or ring. †



For more information about calculating buffer sizes, refer to “[Buffer Size Calculations](#)” on page 17-24. †

Table 17-12. Receive Descriptor 1

Bit	Description
31	Disable Interrupt on Completion When set, this bit prevents the setting of the bit 6 (RI) of the Register 5 (Status Register) for the received frame that ends in the buffer pointed to by this descriptor. This, in turn, disables the assertion of the interrupt to Host due to RI for that frame. †
30:26	Reserved †
25	RER: Receive End of Ring When set, this bit indicates that the descriptor list reached its final descriptor. The DMA returns to the base address of the list, creating a descriptor Ring. †
24	RCH: Second Address Chained When set, this bit indicates that the second address in the descriptor is the Next descriptor address rather than the second buffer address. When RDES1[24] is set, RBS2 (RDES1[21-11]) is a “don’t care” value. RDES1[25] takes precedence over RDES1[24]. †
23:22	Reserved †
21:11	RBS2: Receive Buffer 2 Size These bits indicate the second data buffer size in bytes. The buffer size must be a multiple of 4, even if the value of RDES3 (buffer2 address pointer) is not aligned to bus width. In the case where the buffer size is not a multiple of 4, the resulting behavior is undefined. This field is not valid if RDES1[24] is set.
10:0	RBS1: Receive Buffer 1 Size Indicates the first data buffer size in bytes. The buffer size must be a multiple of 4, even if the value of RDES2 (buffer1 address pointer) is not aligned. In the case where the buffer size is not a multiple of 4, the resulting behavior is undefined. If this field is 0, the DMA ignores this buffer and uses Buffer 2 or next descriptor depending on the value of RCH (Bit 24).

Receive Descriptor 2 (RDES2)

RDES2 contains the address pointer to the first data buffer in the descriptor. †



For more information about buffer address alignment, refer to “[Host Data Buffer Alignment](#)” on page 17-24. †

Table 17-13. Receive Descriptor 2 (Default Operation)

Bit	Description
31:0	Buffer 1 Address Pointer These bits indicate the physical address of Buffer 1. There are no limitations on the buffer address alignment except for the following condition: The DMA uses the value programmed in RDES2[1:0] for its address generation when the RDES2 value is used to store the start of frame. The DMA performs a write operation with the RDES2[1:0] bits as 0 during the transfer of the start of frame but the frame data is shifted as per the actual Buffer address pointer. The DMA ignores RDES2[1:0], if the address pointer is to a buffer where the middle or last part of the frame is stored.

Receive Descriptor 3 (RDES3)

RDES3 contains the address pointer either to the second data buffer in the descriptor or to the next descriptor. †

Table 17-14. Receive Descriptor 3

Bit	Description
31:0	Buffer 2 Address Pointer (Next Descriptor Address) These bits indicate the physical address of Buffer 2 when a descriptor ring structure is used. If the Second Address Chained (RDES1[24]) bit is set, this address contains the pointer to the physical memory where the Next descriptor is present. If RDES1[24] is set, the buffer (Next descriptor) address pointer must be bus width-aligned (RDES3[1:0] = 0. LSBs are ignored internally.) However, when RDES1[24] is reset, there are no limitations on the RDES3 value, except for the following condition: The DMA uses the value programmed in RDES3[1:0] for its buffer address generation when the RDES3 value is used to store the start of frame. The DMA ignores RDES3[1:0], if the address pointer is to a buffer where the middle or last part of the frame is stored.

Descriptor Format With IEEE 1588-2005 Timestamps Enabled

The default descriptor format (as described in “[Transmit Descriptor](#)” on page 17-36 and “[Receive Descriptor](#)” on page 17-40), and field descriptions remain unchanged when created by software (Own bit is set in DES0). †

However, if the software has enabled IEEE 1588-2005 functionality, the DES2 and DES3 descriptor fields (refer to [Table 17-15](#)) take on a different meaning when the DMA closes the descriptor (Own bit in DES0 is cleared). †

The DMA updates the DES2 and DES3 with the timestamp value before clearing the Own bit in DES0. When the EMAC is operating in 32-bit mode, DES2 is updated with the lower 32 timestamp bits (the Sub-second field, called TSL in subsequent sections) and DES3 is updated with the upper 32 timestamp bits (the seconds field, called TSH in subsequent sections).

Table 17-15. Descriptor Fields when DMA Clears the Own Bit

	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
DES0																																
DES1																																
DES2	Timestamp Low [31:0]																															
DES3	Timestamp High [31:0]																															

The following sections describe the details specific to receive and transmit descriptors in this mode. †

Transmit Descriptor

In addition to the changes described in “[Descriptor Format With IEEE 1588-2005 Timestamps Enabled](#)” on page 17-44, the transmit descriptor has additional control and status bits (TTSE and TTSS, respectively) for timestamping, as shown in [Table 17-16](#). Software sets the TTSE bit (when the Own bit is set), instructing the EMAC to generate a timestamp for the corresponding Ethernet frame being transmitted. The DMA sets the TTSS bit if the timestamp has been updated in the TDES2 and TDES3 fields when the descriptor is closed (Own bit is cleared).

Table 17-16. Transmit Descriptor Fields - Normal Format

	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
TDES0	O W N	RES														T T S S	Status [16:0]															
TDES1	Other Control Fields									T T S E	Buffer 2Byte Count [21:11]										Buffer 1 Byte Count [10:0]											
TDES2	TTSL																															
TDES3	TTSH																															

Transmit Timestamp Control and Status Fields

The position of these fields is different for normal transmit descriptor and enhanced format transmit descriptor. The value of this field in both the cases shall be preserved by the DMA at the time of closing the descriptor. †

Updates to [Table 17-14 on page 17-44](#) and [Table 17-6 on page 17-36](#) for the default (normal) descriptor format are described below. †

Table 17-17. Transmit Timestamp Status – Normal Descriptor Format Case (TDES0)

Bit	Description
17	TTSS: Transmit Timestamp Status This field is a status bit indicating that a timestamp was captured for the corresponding transmit frame. When this bit is set, both TDES2 and TDES3 have a timestamp value that was captured for the transmit frame. This field is valid only when the Last Segment control bit (TDES1[30] in the descriptor) is set. †

Table 17-18. Transmit Timestamp Control – Normal Descriptor Format Case (TDES1)

Bit	Description
22	TTSE: Transmit Timestamp Enable When set, this field enables IEEE1588 hardware timestamping for the transmit frame described by the descriptor. This field is valid only when the First Segment control bit (TDES1[29] in the descriptor) is set. †

Transmit Timestamp Field

The transmit descriptor format and field descriptions remain unchanged when they are created by software (when the Own bit is set). However, when the DMA closes the last descriptor (marked, in the alternative descriptor format, by the LS bit in TDES1 or TDES0) and IEEE 1588 functionality is enabled (the Own bit is cleared), the TDES2 and TDES3 descriptor fields are updated with the timestamp, if taken, for that frame. †

Table 17-19 and Table 17-20 describe the fields that have different meaning when the descriptor is closed. †

Table 17-19. Transmit Descriptor Fields (TDES2)

Bit	Description
31:0	TTSL: Transmit Frame Timestamp Low This field is updated by DMA with the least significant 32 bits of the timestamp captured for the corresponding transmit frame. This field has the timestamp only if the Last Segment control bit (LS) in the descriptor is set. †

Table 17-20. Transmit Descriptor Fields (TDES3)

Bit	Description
31:0	TTSH: Transmit Frame Timestamp High This field is updated by DMA with the most significant 32 bits of the timestamp captured for the corresponding transmit frame. This field has the timestamp only if the Last Segment control bit (LS) in the descriptor is set. †

Receive descriptor**Receive Timestamp**

Table 17-21 shows the format of receive descriptor when timestamping is enabled.

Table 17-21. Receive Timestamp Fields

	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
RDES0																																
RDES1																																
RDES2	Receive Frame Timestamp Low [31:0]																															
RDES3	Receive Frame Timestamp High [31:0]																															

Table 17-22 on page 17-47 and Table 17-23 on page 17-47 describe the fields that have different meaning for RDES2 and RDES3 when the receive descriptor is closed and timestamping is enabled.



When software disables the Timestamp feature (the TSENA bit in Register 448 is low), the DMA does not update the RDES2 or RDES3 fields of descriptor before closing the RDES0. †

Table 17-22. Receive Descriptor Fields (RDES2)

Bit	Description
31:0	RTSL: Receive Frame Timestamp Low The DMA updates this field with the least significant 32 bits of the timestamp captured for the corresponding receive frame. The DMA updates this field only for the last descriptor of the receive frame indicated by Last Descriptor status bit (RDES0[8]). When this field and the RTSH field in RDES3 show an all-ones value, the timestamp must be treated as corrupt. †

Table 17-23. Receive descriptor Fields (RDES3)

Bit	Description
31:0	RTSH: Receive Frame Timestamp High The DMA updates this field with the most significant 32 bits of the timestamp captured for the corresponding receive frame. The DMA updates this field only for the last descriptor of the receive frame indicated by Last Descriptor status bit (RDES0[8]). When this field and RDES2's RTSL field show all-ones values, the timestamp must be treated as corrupt. †

Alternate or Enhanced Descriptors

The alternate (or enhanced) descriptor structure can have 8 DWORDS (32-bytes) instead of the 4 DWORDS as in the case of normal descriptor format. The features of the alternate descriptor structure are:

- The normal descriptor structure allows data buffers of up to 2,048 bytes. The alternate descriptor structure is implemented to support buffers of up to 8 KB (useful for Jumbo frames).
- There is a re-assignment of control and status bits in TDES0, TDES1, RDES0 (advanced timestamp or IPC full offload configuration), and RDES1. †
- The transmit descriptor stores the timestamp in TDES6 and TDES7 when you select the advanced timestamp. †
- This receive descriptor structure is also used for storing the extended status (RDES4) and timestamp (RDES6 and RDES7) when advanced timestamp, IPC Full Checksum Offload Engine, or Layer 3 and Layer 4 filter feature is selected. †

- You can select one of the following options for descriptor structure:
 - If timestamping is enabled in Register 448 (Timestamp Control Register) or Checksum Offload is enabled in Register 0 (MAC Configuration Register), the software needs to allocate 32-bytes (8 DWORDS) of memory for every descriptor. For this, the software should set Bit 7 (Alternate Descriptor Size) of Register 0 (Bus Mode Register). †
 - If timestamping or Checksum Offload is not enabled, the extended descriptors (DES4 to DES7) are not required. Therefore, the software can use alternate descriptors with the default size of 16 bytes (4 DWORDS). For this, the software should reset Bit 7 (Alternate Descriptor Size) of Register 0 (Bus Mode Register) to 0. †
- When alternate descriptor is selected without Timestamp or Receive IPC Full Checksum Offload Engine (Type 2) feature, the descriptor size is always 4 DWORDs (DES0-DES3). Therefore, the software can use alternate descriptors with the default size of 16 bytes. †

Transmit Descriptor

The transmit descriptor structure is shown in [Table 17-24 on page 17-49](#). The application software must program the control bits TDES0[31:18] during descriptor initialization. When the DMA updates the descriptor, it write backs all the control bits except the OWN bit (which it clears) and updates the status bits[7:0]. The contents of the transmitter descriptor word 0 (TDES0) through word 3 (TDES3) are given in [Table 17-26 on page 17-50](#), [Table 17-27 on page 17-53](#), [Table 17-28 on page 17-53](#), and [Table 17-29 on page 17-53](#), respectively. †

With the advance timestamp support, the snapshot of the timestamp to be taken can be enabled for a given frame by setting Bit 25 (TTSE) of TDES0. When the descriptor is closed (that is, when the OWN bit is cleared), the timestamp is written into TDES6 and TDES7. This is indicated by the status Bit 17 (TTSS) of TDES0 shown in [Table 17-24 on page 17-49](#). The contents of TDES6 and TDES7 are mentioned in [Table 17-30 on page 17-53](#) and [Table 17-31 on page 17-53](#). †



When advanced timestamp feature is enabled, the software should set Bit 7 of Register 0 (Bus Mode Register), so that the DMA operates with extended descriptor size. When this control bit is reset, the TDES4-TDES7 descriptor space is not valid. †

Table 17-24. Transmit Descriptor Fields - Alternate (Enhanced) Format

	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
TDES0	O W N	Ctrl [30:26]					T T S E	Ctrl [24:18]						T T S S	Status [16:7]								Ctrl/Status [6:3]				Status [2:0]						
TDES1	Ctrl [31:29]		Buffer 2Byte Count [28:16]												RES			Buffer 1 Byte Count [12:0]															
TDES2	Buffer 1 Address [31:0]																																
TDES3	Buffer 2 Address [31:0] or Next Descriptor Address [31:0]																																
TDES4	Reserved																																
TDES5	Reserved																																
TDES6	Transmit Timestamp Low [31:0]																																
TDES7	Transmit Timestamp High [31:0]																																

The DMA always reads or fetches four DWORDS of the descriptor from system memory to obtain the buffer and control information as shown in Table 17-25. †

Table 17-25. Transmit Descriptor Fetch (Read) for Alternate (Enhanced) Format

	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
TDES0	OWN	Ctrl [30:26]					TTSE	Ctrl [24:18]							Reserved for Status [17:7]										SLOT Number [6:3]			Reserved for Status [2:0]				
TDES1	Ctrl [31:29]		Buffer 2 Byte Count [28:16]												RES			Buffer 1 Byte Count [12:0]														
TDES2	Buffer 1 Address [31:0]																															
TDES3	Buffer 2 Address [31:0] or Next Descriptor Address [31:0]																															

Table 17-26. Transmit Descriptor Word 0 (TDES0) (Part 1 of 3)

Bit	Description
31	OWN: Own Bit When set, this bit indicates that the descriptor is owned by the DMA. When this bit is reset, it indicates that the descriptor is owned by the Host. The DMA clears this bit either when it completes the frame transmission or when the buffers allocated in the descriptor are read completely. The ownership bit of the frame's first descriptor must be set after all subsequent descriptors belonging to the same frame have been set. This avoids a possible race condition between fetching a descriptor and the driver setting an ownership bit. †
30	IC: Interrupt on Completion When set, this bit sets the Transmit Interrupt (Register 5[0]) after the present frame has been transmitted. †
29	LS: Last Segment When set, this bit indicates that the buffer contains the last segment of the frame. When this bit is set, the TBS1 or TBS2 field in TDES1 should have a non-zero value. †
28	FS: First Segment When set, this bit indicates that the buffer contains the first segment of a frame. †
27	DC: Disable CRC When this bit is set, the MAC does not append a CRC to the end of the transmitted frame. This is valid only when the first segment (TDES0[28]) is set. †
26	DP: Disable Pad When set, the MAC does not automatically add padding to a frame shorter than 64 bytes. When this bit is reset, the DMA automatically adds padding and CRC to a frame shorter than 64 bytes, and the CRC field is added despite the state of the DC (TDES0[27]) bit. This is valid only when the first segment (TDES0[28]) is set. †
25	TTSE: Transmit Timestamp Enable When set, this bit enables IEEE1588 hardware timestamping for the transmit frame referenced by the descriptor. This field is valid only when the First Segment control bit (TDES0[28]) is set.
24	Reserved

Table 17–26. Transmit Descriptor Word 0 (TDES0) (Part 2 of 3)

Bit	Description
23:22	CIC: Checksum Insertion Control These bits control the checksum calculation and insertion. The following list describes the bit encoding: ■ 0: Checksum Insertion Disabled. ■ 1: Only IP header checksum calculation and insertion are enabled. ■ 2: IP header checksum and payload checksum calculation and insertion are enabled, but pseudoheader checksum is not calculated in hardware. ■ 3: IP Header checksum and payload checksum calculation and insertion are enabled, and pseudoheader checksum is calculated in hardware. This field is valid when the First Segment control bit (TDES0[28]) is set.
21	TER: Transmit End of Ring When set, this bit indicates that the descriptor list reached its final descriptor. The DMA returns to the base address of the list, creating a descriptor ring. †
20	TCH: Second Address Chained When set, this bit indicates that the second address in the descriptor is the Next descriptor address rather than the second buffer address. When TDES0[20] is set, TBS2 (TDES1[28:16]) is a “don’t care” value. TDES0[21] takes precedence over TDES0[20]. †
19:18	Reserved
17	TTSS: Transmit Timestamp Status This field is used as a status bit to indicate that a timestamp was captured for the described transmit frame. When this bit is set, TDES2 and TDES3 have a timestamp value captured for the transmit frame. This field is only valid when the descriptor’s Last Segment control bit (TDES0[29]) is set. †
16	IHE: IP Header Error When set, this bit indicates that the MAC transmitter detected an error in the IP datagram header. The transmitter checks the header length in the IPv4 packet against the number of header bytes received from the application and indicates an error status if there is a mismatch. For IPv6 frames, a header error is reported if the main header length is not 40 bytes. Furthermore, the Ethernet Length/Type field value for an IPv4 or IPv6 frame must match the IP header version received with the packet. For IPv4 frames, an error status is also indicated if the Header Length field has a value less than 0x5. †
15	ES: Error Summary Indicates the logical OR of the following bits: ■ TDES0[14]: Jabber Timeout ■ TDES0[13]: Frame Flush ■ TDES0[11]: Loss of Carrier ■ TDES0[10]: No Carrier ■ TDES0[9]: Late Collision ■ TDES0[8]: Excessive Collision ■ TDES0[2]: Excessive Deferral ■ TDES0[1]: Underflow Error ■ TDES0[16]: IP Header Error ■ TDES0[12]: IP Payload Error †

Table 17-26. Transmit Descriptor Word 0 (TDES0) (Part 3 of 3)

Bit	Description
14	JT: Jabber Timeout When set, this bit indicates the MAC transmitter has experienced a jabber time-out. This bit is only set when Bit 22 (Jabber Disable) of Register 0 (MAC Configuration Register) is not set. †
13	FF: Frame Flushed When set, this bit indicates that the DMA or MTL flushed the frame because of a software Flush command given by the CPU. †
12	IPE: IP Payload Error When set, this bit indicates that MAC transmitter detected an error in the TCP, UDP, or ICMP IP datagram payload. The transmitter checks the payload length received in the IPv4 or IPv6 header against the actual number of TCP, UDP, or ICMP packet bytes received from the application and issues an error status in case of a mismatch. †
11	LC: Loss of Carrier When set, this bit indicates that a loss of carrier occurred during frame transmission (that is, the <code>gmii_crs_i</code> signal was inactive for one or more transmit clock periods during frame transmission). This is valid only for the frames transmitted without collision when the MAC operates in the half-duplex mode. †
10	NC: No Carrier When set, this bit indicates that the Carrier Sense signal from the PHY was not asserted during transmission. †
9	Reserved
8	EC: Excessive Collision When set, this bit indicates that the transmission was aborted after 16 successive collisions while attempting to transmit the current frame. If Bit 9 (Disable Retry) bit in the Register 0 (MAC Configuration Register) is set, this bit is set after the first collision, and the transmission of the frame is aborted. †
7	VF: VLAN Frame When set, this bit indicates that the transmitted frame is a VLAN-type frame. †
6:3	CC: Collision Count (Status field) These status bits indicate the number of collisions that occurred before the frame was transmitted. This count is not valid when the Excessive Collisions bit (TDES0[8]) is set. The EMAC updates this status field only in the half-duplex mode.
2	ED: Excessive Deferral When set, this bit indicates that the transmission has ended because of excessive deferral of over 24,288 bit times (155,680 bits times in 1,000-Mbps mode or if Jumbo frame is enabled) if Bit 4 (Deferral Check) bit in Register 0 (MAC Configuration Register) is set high. †
1	UF: Underflow Error When set, this bit indicates that the MAC aborted the frame because the data arrived late from the Host memory. Underflow Error indicates that the DMA encountered an empty transmit buffer while transmitting the frame. The transmission process enters the Suspended state and sets both Transmit Underflow (Register 5[5]) and Transmit Interrupt (Register 5[0]). †
0	DB: Deferred Bit When set, this bit indicates that the MAC defers before transmission because of the presence of carrier. This bit is valid only in the half-duplex mode. †

Table 17-27. Transmit Descriptor Word 1 (TDES1)

Bit	Description
31:29	Reserved
28:16	TBS2: Transmit Buffer 2 Size This field indicates the second data buffer size in bytes. This field is not valid if TDES0[20] is set. For more information about calculating buffer sizes, refer to “Buffer Size Calculations” on page 17-24 . †
15:13	Reserved †
12:0	TBS1: Transmit Buffer 1 Size These bits indicate the first data buffer byte size, in bytes. If this field is 0, the DMA ignores this buffer and uses Buffer 2 or the next descriptor, depending on the value of TCH (TDES0[20]). †

Table 17-28. Transmit Descriptor 2 (TDES2)

Bit	Description
31:0	Buffer 1 Address Pointer These bits indicate the physical address of Buffer 1. There is no limitation on the buffer address alignment. For more information about buffer address alignment, refer to “Host Data Buffer Alignment” on page 17-24 . †

Table 17-29. Transmit Descriptor 3 (TDES3)

Bit	Description
31:0	Buffer 2 Address Pointer (Next Descriptor Address) Indicates the physical address of Buffer 2 when a descriptor ring structure is used. If the Second Address Chained (TDES1[24]) bit is set, this address contains the pointer to the physical memory where the Next descriptor is present. The buffer address pointer must be aligned to the bus width only when TDES1[24] is set. (LSBs are ignored internally.) †

Table 17-30. Transmit Descriptor 6 (TDES6)

Bit	Description
31:0	TTSL: Transmit Frame Timestamp Low This field is updated by DMA with the least significant 32 bits of the timestamp captured for the corresponding transmit frame. This field has the timestamp only if the Last Segment bit (LS) in the descriptor is set and Timestamp status (TTSS) bit is set. †

Table 17-31. Transmit Descriptor 7 (TDES7)

Bit	Description
31:0	TTSH: Transmit Frame Timestamp High This field is updated by DMA with the most significant 32 bits of the timestamp captured for the corresponding receive frame. This field has the timestamp only if the Last Segment bit (LS) in the descriptor is set and Timestamp status (TTSS) bit is set. †

Receive Descriptor

The structure of the received descriptor is shown in [Table 17-32](#). This can have 32 bytes of descriptor data (8 DWORDs) when advanced timestamp or IPC Full Offload feature is selected. When either of these features is enabled, the Software should set Bit 7 of Register 0 (Bus Mode Register) so that the DMA operates with extended descriptor size. When this control bit is reset, the RDES0[0] is always cleared and the RDES4-RDES7 descriptor space is not valid. †

Table 17-32. Receive Descriptor Fields - Alternate (Enhanced) Format

	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
TDES0	O W N	Status [30:0]																														
TDES1	C T R L	RES [30:29]	Buffer 2Byte Count [28:16]														Ctrl [15:14]		R E S	Buffer 1 Byte Count [12:0]												
TDES2	Buffer 1 Address [31:0]																															
TDES3	Buffer 2 Address [31:0] or Next Descriptor Address [31:0]																															
TDES4	Extended status [31:0]																															
TDES5	Reserved																															
TDES6	Transmit Timestamp Low [31:0]																															
TDES7	Transmit Timestamp High [31:0]																															

The contents of RDES0 are identified in [Table 17-33](#). The contents of RDES1 through RDES3 are identified in [Table 17-34 on page 17-56](#), [Table 17-35 on page 17-57](#), and [Table 17-36 on page 17-57](#), respectively. †

Table 17-33. Receive Descriptor Fields (RDES0)

Bit	Description
31	OWN: Own Bit When set, this bit indicates that the descriptor is owned by the DMA of the EMAC. When this bit is reset, this bit indicates that the descriptor is owned by the Host. The DMA clears this bit either when it completes the frame reception or when the buffers that are associated with this descriptor are full.
30	AFM: Destination Address Filter Fail When set, this bit indicates a frame that failed in the DA Filter in the MAC. †

Table 17-33. Receive Descriptor Fields (RDES0)

Bit	Description
29:16	FL: Frame Length These bits indicate the byte length of the received frame that was transferred to host memory (including CRC). This field is valid when Last Descriptor (RDES0[8]) is set and either the Descriptor Error (RDES0[14]) or Overflow Error bits are reset. The frame length also includes the two bytes appended to the Ethernet frame when IP checksum calculation (Type 1) is enabled and the received frame is not a MAC control frame. This field is valid when Last Descriptor (RDES0[8]) is set. When the Last Descriptor and Error Summary bits are not set, this field indicates the accumulated number of bytes that have been transferred for the current frame. †
15	ES: Error Summary Indicates the logical OR of the following bits: ■ RDES0[1]: CRC Error ■ RDES0[3]: Receive Error ■ RDES0[4]: Watchdog Timeout ■ RDES0[6]: Late Collision ■ RDES0[7]: Giant Frame ■ RDES4[4:3]: IP Header or Payload Error ■ RDES0[11]: Overflow Error ■ RDES0[14]: Descriptor Error This field is valid only when the Last Descriptor (RDES0[8]) is set. †
14	DE: Descriptor Error When set, this bit indicates a frame truncation caused by a frame that does not fit within the current descriptor buffers, and that the DMA does not own the Next descriptor. The frame is truncated. This field is valid only when the Last Descriptor (RDES0[8]) is set. †
13	SAF: Source Address Filter Fail When set, this bit indicates that the SA field of frame failed the SA Filter in the MAC. †
12	LE: Length Error When set, this bit indicates that the actual length of the frame received and that the Length/ Type field does not match. This bit is valid only when the Frame Type (RDES0[5]) bit is reset. †
11	OE: Overflow Error When set, this bit indicates that the received frame was damaged because of buffer overflow in MTL. Note: This bit is set only when the DMA transfers a partial frame to the application. This happens only when the RX FIFO buffer is operating in the threshold mode. In the store-and-forward mode, all partial frames are dropped completely in RX FIFO buffer. †
10	VLAN: VLAN Tag When set, this bit indicates that the frame to which this descriptor is pointing is a VLAN frame tagged by the MAC. The VLAN tagging depends on checking the VLAN fields of received frame based on the Register 7 (VLAN Tag Register) setting. †
9	FS: First Descriptor When set, this bit indicates that this descriptor contains the first buffer of the frame. If the size of the first buffer is 0, the second buffer contains the beginning of the frame. If the size of the second buffer is also 0, the next descriptor contains the beginning of the frame. †
8	LS: Last Descriptor When set, this bit indicates that the buffers pointed to by this descriptor are the last buffers of the frame †

Table 17-33. Receive Descriptor Fields (RDES0)

Bit	Description
7	Timestamp Available, IP Checksum Error (Type1), or Giant Frame When advanced timestamp feature is present, when set, this bit indicates that a snapshot of the Timestamp is written in descriptor words 6 (RDES6) and 7 (RDES7). This is valid only when the Last Descriptor bit (RDES0[8]) is set. When IP Checksum Engine (Type 1) is selected, this bit, when set, indicates that the 16-bit IPv4 Header checksum calculated by the EMAC did not match the received checksum bytes. Otherwise, this bit, when set, indicates the Giant frame Status. Giant frames are larger than 1,518-byte (or 1,522-byte for VLAN or 2,000-byte when Bit 27 (2KPE) of MAC Configuration register is set) normal frames and larger than 9,018-byte (9,022-byte for VLAN) frame when Jumbo frame processing is enabled.
6	LC: Late Collision When set, this bit indicates that a late collision has occurred while receiving the frame in the half-duplex mode. †
5	FT: Frame Type When set, this bit indicates that the receive frame is an Ethernet-type frame (the LT field is greater than or equal to 0x0600). When this bit is reset, it indicates that the received frame is an IEEE802.3 frame. This bit is not valid for Runt frames less than 14 bytes.
4	RWT: Receive Watchdog Timeout When set, this bit indicates that the receive Watchdog Timer has expired while receiving the current frame and the current frame is truncated after the Watchdog Timeout. †
3	RE: Receive Error When set, this bit indicates that the <code>gmii_rxr_i</code> signal is asserted while <code>gmii_rxdv_i</code> is asserted during frame reception. Error can be of less or no extension, or error (<code>rx_d != 0xf</code>) during extension. †
2	DE: Dribble Bit Error When set, this bit indicates that the received frame has a non-integer multiple of bytes (odd nibbles). This bit is valid only in the MII Mode. †
1	CE: CRC Error When set, this bit indicates that a CRC error occurred on the received frame. This field is valid only when the Last Descriptor (RDES0[8]) is set. †
0	Extended Status Available/RX MAC Address When either advanced timestamp or IP Checksum Offload (Type 2) is present, this bit, when set, indicates that the extended status is available in descriptor word 4 (RDES4). This is valid only when the Last Descriptor bit (RDES0[8]) is set. When Advance Timestamp Feature or IPC Full Offload is not selected, this bit indicates RX MAC Address status. When set, this bit indicates that the RX MAC Address registers value (1 to 15) matched the frame's DA field. When reset, this bit indicates that the RX MAC Address Register 0 value matched the DA field. †

Table 17-34. Receive Descriptor Fields 1 (RDES1)

Bit	Description
31	DIC: Disable Interrupt on Completion When set, this bit prevents setting the Status Register's RI bit (CSR5[6]) for the received frame ending in the buffer indicated by this descriptor. This, in turn, disables the assertion of the interrupt to Host because of RI for that frame. †
30:29	Reserved †

Table 17-34. Receive Descriptor Fields 1 (RDES1)

Bit	Description
28:16	RBS2: Receive Buffer 2 Size These bits indicate the second data buffer size, in bytes. The buffer size must be a multiple of 4, even if the value of RDES3 (buffer2 address pointer) is not aligned to bus width. If the buffer size is not an appropriate multiple of 4, the resulting behavior is undefined. This field is not valid if RDES1[14] is set. For more information about calculating buffer sizes, refer to “Buffer Size Calculations” on page 17-24.
15	RER: Receive End of Ring When set, this bit indicates that the descriptor list reached its final descriptor. The DMA returns to the base address of the list, creating a descriptor ring. †
14	RCH: Second Address Chained When set, this bit indicates that the second address in the descriptor is the Next descriptor address rather than the second buffer address. When this bit is set, RBS2 (RDES1[28:16]) is a “don’t care” value. RDES1[15] takes precedence over RDES1[14]. †
13	Reserved †
12:0	RBS1: Receive Buffer 1 Size Indicates the first data buffer size in bytes. The buffer size must be a multiple of 4, even if the value of RDES2 (buffer1 address pointer) is not aligned. When the buffer size is not a multiple of 4, the resulting behavior is undefined. If this field is 0, the DMA ignores this buffer and uses Buffer 2 or next descriptor depending on the value of RCH (Bit 14). For more information about calculating buffer sizes, refer to “Buffer Size Calculations” on page 17-24.

Table 17-35. Receive Descriptor Fields 2 (RDES2)

Bit	Description
31:0	Buffer 1 Address Pointer These bits indicate the physical address of Buffer 1. There are no limitations on the buffer address alignment except for the following condition: The DMA uses the value programmed in RDES2[1:0] for its address generation when the RDES2 value is used to store the start of the frame. The DMA performs a write operation with the RDES2[1:0] bits as 0 during the transfer of the start of the frame but the frame is shifted as per the actual buffer address pointer. The DMA ignores RDES2[1:0] if the address pointer is to a buffer where the middle or last part of the frame is stored. For more information about buffer address alignment, refer to “Host Data Buffer Alignment” on page 17-24.

Table 17-36. Receive descriptor Fields 3 (RDES3)

Bit	Description
31:0	Buffer 2 Address Pointer (Next Descriptor Address) These bits indicate the physical address of Buffer 2 when a descriptor ring structure is used. If the Second Address Chained (RDES1[24]) bit is set, this address contains the pointer to the physical memory where the Next descriptor is present. If RDES1[24] is set, the buffer (Next descriptor) address pointer must be bus width-aligned (RDES3[1:0] = 0. LSBs are ignored internally.) However, when RDES1[24] is reset, there are no limitations on the RDES3 value, except for the following condition: The DMA uses the value programmed in RDES3 [1:0] for its buffer address generation when the RDES3 value is used to store the start of frame. The DMA ignores RDES3 [1:0] if the address pointer is to a buffer where the middle or last part of the frame is stored.

The extended status written is as shown in Table 17-37. The extended status is written only when there is status related to IPC or timestamp available. The availability of extended status is indicated by Bit 0 of RDES0. This status is available only when the Advance Timestamp or IPC Full Offload feature is selected. †

Table 17-37. Receive Descriptor Fields 4 (RDES4) (Part 1 of 2)

Bit	Description
31:28	Reserved †
27:26	Layer 3 and Layer 4 Filter Number Matched These bits indicate the number of the Layer 3 and Layer 4 Filter that matched the received frame. ■ 00: Filter 0 ■ 01: Filter 1 ■ 10: Filter 2 ■ 11: Filter 3 This field is valid only when Bit 24 or Bit 25 is set high. When more than one filter matches, these bits give only the lowest filter number. †
25	Layer 4 Filter Match When set, this bit indicates that the received frame matches one of the enabled Layer 4 Port Number fields. This status is given only when one of the following conditions is true: ■ Layer 3 fields are not enabled and all enabled Layer 4 fields match. ■ All enabled Layer 3 and Layer 4 filter fields match. When more than one filter matches, this bit gives the layer 4 filter status of filter indicated by Bits [27:26]. †
24	Layer 3 Filter Match When set, this bit indicates that the received frame matches one of the enabled Layer 3 IP Address fields. This status is given only when one of the following conditions is true: ■ All enabled Layer 3 fields match and all enabled Layer 4 fields are bypassed. ■ All enabled filter fields match. When more than one filter matches, this bit gives the layer 3 filter status of filter indicated by Bits [27:26]. †
23:15	Reserved
14	Timestamp Dropped When set, this bit indicates that the timestamp was captured for this frame but got dropped in the MTL RX FIFO buffer because of overflow.
13	PTP Version When set, this bit indicates that the received PTP message is having the IEEE 1588 version 2 format. When reset, it has the version 1 format.
12	PTP Frame Type When set, this bit indicates that the PTP message is sent directly over Ethernet. When this bit is not set and the message type is non-zero, it indicates that the PTP message is sent over UDP-IPv4 or UDP-IPv6. The information about IPv4 or IPv6 can be obtained from Bits 6 and 7.

Table 17-37. Receive Descriptor Fields 4 (RDES4) (Part 2 of 2)

Bit	Description
11:8	Message Type These bits are encoded to give the type of the message received. ■ 0000: No PTP message received ■ 0001: SYNC (all clock types) ■ 0010: Follow_Up (all clock types) ■ 0011: Delay_Req (all clock types) ■ 0100: Delay_Resp (all clock types) ■ 0101: Pdelay_Req (in peer-to-peer transparent clock) ■ 0110: Pdelay_Resp (in peer-to-peer transparent clock) ■ 0111: Pdelay_Resp_Follow_Up (in peer-to-peer transparent clock) ■ 1000: Announce ■ 1001: Management ■ 1010: Signaling ■ 1011-1110: Reserved ■ 1111: PTP packet with Reserved message type
7	IPv6 Packet Received When set, this bit indicates that the received packet is an IPv6 packet. This bit is updated only when Bit 10 (IPC) of Register 0 (MAC Configuration Register) is set.
6	IPv4 Packet Received When set, this bit indicates that the received packet is an IPv4 packet. This bit is updated only when Bit 10 (IPC) of Register 0 (MAC Configuration Register) is set.
5	IP Checksum Bypassed When set, this bit indicates that the checksum offload engine is bypassed.
4	IP Payload Error When set, this bit indicates that the 16-bit IP payload checksum (that is, the TCP, UDP, or ICMP checksum) that the EMAC calculated does not match the corresponding checksum field in the received segment. It is also set when the TCP, UDP, or ICMP segment length does not match the payload length value in the IP Header field. This bit is valid when either Bit 7 or Bit 6 is set.
3	IP Header Error When set, this bit indicates that either the 16-bit IPv4 header checksum calculated by the EMAC does not match the received checksum bytes, or the IP datagram version is not consistent with the Ethernet Type value. This bit is valid when either Bit 7 or Bit 6 is set.
2:0	IP Payload Type These bits indicate the type of payload encapsulated in the IP datagram processed by the receive Checksum Offload Engine (COE). The COE also sets these bits to 0 if it does not process the IP datagram's payload due to an IP header error or fragmented IP. ■ 0: Unknown or did not process IP payload ■ 1: UDP ■ 2: TCP ■ 3: ICMP ■ 4-7: Reserved This bit is valid when either Bit 7 or Bit 6 is set.

RDES6 and RDES7 contain the snapshot of the timestamp. The availability of the snapshot of the timestamp in RDES6 and RDES7 is indicated by Bit 7 in the RDES0 descriptor. The contents of RDES6 and RDES7 are identified in [Table 17-38](#) and [Table 17-39 on page 17-60](#), respectively. †

Table 17-38. Receive Descriptor Fields 6 (RDES6)

Bit	Description
31:0	RTSL: Receive Frame Timestamp Low This field is updated by DMA with the least significant 32 bits of the timestamp captured for the corresponding receive frame. This field is updated by DMA only for the last descriptor of the receive frame which is indicated by Last Descriptor status bit (RDES0[8]). †

Table 17-39. Receive Descriptor Fields 7 (RDES7)

Bit	Description
31:0	RTSH: Receive Frame Timestamp High This field is updated by DMA with the most significant 32 bits of the timestamp captured for the corresponding receive frame. This field is updated by DMA only for the last descriptor of the receive frame which is indicated by Last Descriptor status bit (RDES0[8]). †

Initializing DMA

This section provides the instructions for initializing the DMA/MAC registers in the proper sequence. Perform the following steps to initialize the DMA:

1. Provide a software reset. This resets all of the EMAC internal registers and logic. (DMA Register 0 (Bus Mode Register) – bit 0). †
2. Wait for the completion of the reset process (poll bit 0 of the DMA Register 0 (Bus Mode Register), which is only cleared after the reset operation is completed). †
3. Poll the bits of Register 11 (AHB or AXI Status) to confirm that all previously initiated (before software-reset) or ongoing transactions are complete.



If the application cannot poll the register after soft reset (because of performance reasons), then it is recommended that you continue with the next steps and check this register again (as mentioned in [step 12](#)) before triggering the DMA operations. †

4. Program the following fields to initialize the Bus Mode Register by setting values in DMA Register 0 (Bus Mode Register): †
 - a. Mixed Burst and AAL
 - b. Fixed burst or undefined burst †
 - c. Burst length values and burst mode values. †
 - d. Descriptor Length (only valid if Ring Mode is used) †
 - e. TX and RX DMA Arbitration scheme †
5. Program the interface options in Register 10 (AXI Bus Mode Register). If fixed burst-length is enabled, then select the maximum burst-length possible on the bus (bits[7:1]). †

6. Create a proper descriptor chain for transmit and receive. In addition, ensure that the receive descriptors are owned by DMA (bit 31 of descriptor should be set). When OSF mode is used, at least two descriptors are required. For more information about descriptors, refer to “Normal Descriptor” on page 17-36 and “Alternate or Enhanced Descriptors” on page 17-47. †
 7. Make sure that your software creates three or more different transmit or receive descriptors in the chain before reusing any of the descriptors. †
 8. Initialize receive and transmit descriptor list address with the base address of the transmit and receive descriptor (Register 3 (Receive Descriptor List Address Register) and Register 4 (Transmit Descriptor List Address Register) respectively). †
 9. Program the following fields to initialize the mode of operation in Register 6 (Operation Mode Register)
 - a. Receive and Transmit Store And Forward †
 - b. Receive and Transmit Threshold Control (RTC and TTC) †
 - c. Hardware Flow Control enable †
 - d. Flow Control Activation and De-activation thresholds for MTL Receive and Transmit FIFO buffers (RFA and RFD) †
 - e. Error frame and undersized good frame forwarding enable †
 - f. OSF Mode †
 10. Clear the interrupt requests, by writing to those bits of the status register (interrupt bits only) that are set. For example, by writing 1 into bit 16, the normal interrupt summary clears this bit (DMA Register 5 (Status Register)). †
 11. Enable the interrupts by programming the Register 7 (Interrupt Enable Register). †
-  Perform step 12 only if you did not perform step 3. †
12. Read Register 11 (AHB or AXI Status) to confirm that all previous transactions are complete. †
-  If any previous transaction is still in progress when you read the Register 11 (AHB or AXI Status), then it is strongly recommended to check the slave components addressed by the master interface.
13. Start the receive and transmit DMA by setting SR (bit 1) and ST (bit 13) of the control register (DMA Register 6 (Operation Mode Register)). †

Initializing MAC

The following MAC Initialization operations can be performed after DMA initialization. If the MAC initialization is done before the DMA is set-up, then enable the MAC receiver (last step below) only after the DMA is active. Otherwise, received frames fills the RX FIFO buffer and overflow. †

1. Program the EMAC Register 4 (GMII Address Register) for controlling the management cycles for external PHY. For example, Physical Layer Address PA (bits 15-11). In addition, set bit 0 (GMII Busy) for writing into PHY and reading from PHY. †
2. Read the 16-bit data of Register 5 (GMII Data Register) from the PHY for link up, speed of operation, and mode of operation, by specifying the appropriate address value in bits 15-11 of Register 4 (GMII Address Register). †
3. Provide the MAC address registers (Register 16 (MAC Address0 High Register) and Register 17 (MAC Address0 Low Register)). Because 128 MAC addresses are supported, you need to program the MAC addresses accordingly.
4. Program Register 2 (Hash Table High Register) and Register 3 (Hash Table Low Register).
5. Program the following fields to set the appropriate filters for the incoming frames in Register 1 (MAC Frame Filter): †
 - a. Receive All †
 - b. Promiscuous mode †
 - c. Hash or Perfect Filter †
 - d. Unicast, multicast, broadcast, and control frames filter settings †
6. Program the following fields for proper flow control in Register 6 (Flow Control Register): †
 - a. Pause time and other pause frame control bits †
 - b. Receive and Transmit Flow control bits †
 - c. Flow Control Busy/Backpressure Activate †
7. Program the Interrupt Mask register bits, as required, and if applicable, for your configuration. †
8. Program the appropriate fields in Register 0 (MAC Configuration Register). For example, Interframe gap while transmission and jabber disable. Based on the Auto-negotiation you can set the Duplex mode (bit 11) or port select (bit 15). †
9. Set Bit 3 (TE) and Bit 2 (RE) in Register 0 (MAC Configuration Register). †



Do not change the configuration (such as duplex mode, speed, port, or loopback) when the EMAC DMA is actively transmitting or receiving. The Software should change these parameters only when the EMAC DMA transmitter and receiver are not active.

Performing Normal Receive and Transmit Operation

For normal operation, perform the following steps: †

1. For normal transmit and receive interrupts, read the interrupt status. Then, poll the descriptors, reading the status of the descriptor owned by the Host (either transmit or receive). †

2. Set appropriate values for the descriptors, ensuring that transmit and receive descriptors are owned by the DMA to resume the transmission and reception of data. †
3. If the descriptors are not owned by the DMA (or no descriptor is available), the DMA goes into SUSPEND state. The transmission or reception can be resumed by freeing the descriptors and issuing a poll demand by writing 0 into the TX/RX poll demand register (Register 1 (Transmit Poll Demand Register) and Register 2 (Receive Poll Demand Register)). †
4. The values of the current host transmitter or receiver descriptor address pointer can be read for the debug process (Register 18 (Current Host Transmit Descriptor Register) and Register 19 (Current Host Receive Descriptor Register)). †
5. The values of the current host transmit buffer address pointer and receive buffer address pointer can be read for the debug process (Register 20 (Current Host Transmit Buffer Address Register) and Register 21 (Current Host Receive Buffer Address Register)). †

Stopping and Starting Transmission

Perform the following steps to pause the transmission for some time: †

1. Disable the transmit DMA (if applicable), by clearing bit 13 (Start or Stop Transmission Command) of Register 6 (Operation Mode Register). †
2. Wait for any previous frame transmissions to complete. You can check this by reading the appropriate bits of Register 9 (Debug Register). †
3. Disable the MAC transmitter and MAC receiver by clearing Bit 3 (TE) and Bit 2 (RE) in Register 0 (MAC Configuration Register). †
4. Disable the receive DMA (if applicable), after making sure that the data in the RX FIFO buffer is transferred to the system memory (by reading Register 9 (Debug Register)). †
5. Make sure that both TX FIFO buffer and RX FIFO buffer are empty. †
6. To re-start the operation, first start the DMAs, and then enable the MAC transmitter and receiver. †

Programming Guidelines for Energy Efficient Ethernet

Entering and Exiting the TX LPI Mode

The Energy Efficient Ethernet (EEE) feature is available in the EMAC. To use it, perform the following steps during EMAC initialization:

1. Read the PHY register through the MDIO interface, check if the remote end has the EEE capability, and then negotiate the timer values. †
2. Program the PHY registers through the MDIO interface (including the RX_CLK_stoppable bit that indicates to the PHY whether to stop RX clock in LPI mode.) †
3. Program Bits[16:5], LST, and Bits[15:0], TWT, in Register 13 (LPI Timers Control Register). †

4. Read the link status of the PHY chip by using the MDIO interface and update Bit 17 (PLS) of Register 12 (LPI Control and Status Register) accordingly. This update should be done whenever the link status in the PHY chip changes. †
5. Set Bit 16 (LPIEN) of Register 12 (LPI Control and Status Register) to make the MAC enter the LPI state. The MAC enters the LPI mode after completing the transmission in progress and sets Bit 0 (TLPIEN). †

 To make the MAC enter the LPI state only after it completes the transmission of all queued frames in the TX FIFO buffer, you should set Bit 19 (LPITXA) in Register 12 (LPI Control and Status Register). †

 To switch off the transmit clock during the LPI state, use the `sbd_tx_clk_gating_ctrl_0` signal for gating the clock input. †

 To switch off the CSR clock or power to the rest of the system during the LPI state, you should wait for the TLPIEN interrupt of Register 12 (LPI Control and Status Register) to be generated. Restore the clocks before performing the step 6 when you want to come out of the LPI state. †

6. Reset Bit 16 (LPIEN) of Register 12 (LPI Control and Status Register) to bring the MAC out of the LPI state. †

The MAC waits for the time programmed in Bits [15:0], TWT, before setting the TLPIEX interrupt status bit and resuming the transmission. †

Gating Off the CSR Clock in the LPI Mode

You can gate off the CSR clock to save the power when the MAC is in the Low-Power Idle (LPI) mode. †

Gating Off the CSR Clock in the RX LPI Mode

The following operations are performed when the MAC receives the LPI pattern from the PHY. †

1. The MAC RX enters the LPI mode and the RX LPI entry interrupt status [RLPIEN interrupt of Register 12 (LPI_Control_Status)] is set. †
2. The interrupt pin (`sbd_intr_0`) is asserted. The `sbd_intr_0` interrupt is cleared when the host reads the Register 12 (LPI_Control_Status). †

After the `sbd_intr_0` interrupt is asserted and the MAC TX is also in the LPI mode, you can gate-off the CSR clock. If the MAC TX is not in the LPI mode when you gate off the CSR clock, the events on the MAC transmitter do not get reported or updated in the CSR. †

For restoring the CSR clock, wait for the LPI exit indication from the PHY after which the MAC asserts the LPI exit interrupt on `lpi_intr_0` (synchronous to `clk_rx_i`). The `lpi_intr_0` interrupt is cleared when Register 12 is read. †

Gating Off the CSR Clock in the TX LPI Mode

The following operations are performed when Bit 16 (LPIEN) of Register 12 (LPI Control and Status Register) is set: †

1. The Transmit LPI Entry interrupt (TLPIEN bit of Register 12) is set. †

2. The interrupt pin (sbd_intr_0) is asserted. The sbd_intr_0 interrupt is cleared when the host reads the Register 12. †

After the sbd_intr_0 interrupt is asserted and the MAC RX is also in the LPI mode, you can gate off the CSR clock. If the MAC RX is not in the LPI mode when you gate off the CSR clock, the events on the MAC receiver do not get reported or updated in the CSR. †

For restoring the CSR clock, switch on the CSR clock when the MAC has to come out of the TX LPI mode. †

After the CSR clock is resumed, reset Bit 16 (LPIEN) of Register 12 (LPI Control and Status Register) to bring the MAC out of the LPI mode. †

Programming Guidelines for Flexible Pulse-Per-Second (PPS) Output

Generating Single Pulse on PPS

To generate single Pulse on PPS: †

1. Program 11 or 10 (for interrupt) in Bits [6:5], TRGTMODESEL, of Register 459 (PPS Control Register). This instructs the MAC to use the Target Time registers (register 455 and 456) for start time of PPS signal output. †
2. Program the start time value in the Target Time registers (register 455 and 456). †
3. Program the width of the PPS signal output in Register 473 (PPS0 Width Register). †
4. Program Bits [3:0], PPSCMD, of Register 459 (PPS Control Register) to 0001. This instructs the MAC to generate single pulse on the PPS signal output at the time programmed in the Target Time registers (register 455 and 456). †

Once the PPSCMD is executed (PPSCMD bits = 0), you can cancel the pulse generation by giving the Cancel Start Command (PPSCMD=0011) before the programmed start time elapses. You can also program the behavior of the next pulse in advance. To program the next pulse: †

1. Program the start time for the next pulse in the Target Time registers (register 455 and 456). This time should be more than the time at which the falling edge occurs for the previous pulse. †
2. Program the width of the next PPS signal output in Register 473 (PPS0 Width Register). †
3. Program Bits [3:0], PPSCMD, of Register 459 (PPS Control Register) to generate a single pulse after the time at which the previous pulse is de-asserted. This instructs the MAC to generate single pulse on the PPS signal output, at the time programmed in Target Time registers. If you give this command before the previous pulse becomes low, then the new command overwrites the previous command and the EMAC may generate only 1 extended pulse.

Generating a Pulse Train on PPS

To generate a pulse train on PPS: †

1. Program 11 or 10 (for interrupt) in Bits [6:5], TRGTMODSEL, of Register 459 (PPS Control Register). This instructs the MAC to use the Target Time registers (register 455 and 456) for start time of the PPS signal output. †
2. Program the start time value in the Target Time registers (register 455 and 456). †
3. Program the interval value between the train of pulses on the PPS signal output in Register 473 (PPS0 Width Register). †
4. Program the width of the PPS signal output in Register 473 (PPS0 Width Register). †
5. Program Bits[3:0], PPSCMD, of Register 459 (PPS Control Register) to 0010. This instructs the MAC to generate train of pulses on the PPS signal output with start time programmed in Target Time registers (register 455 and 456). By default, the PPS pulse train is free-running unless stopped by 'STOP Pulse train at time' or 'STOP Pulse Train immediately' commands. †
6. Program the stop value in the Target Time registers (register 455 and 456). Ensure that Bit 31 (TSTRBUSY) of Register 456 (Target Time Nanoseconds Register) is reset before programming the Target Time registers (register 455 and 456) again. †
7. Program the PPSCMD field (bit 3:0) of Register 459 (PPS Control Register) to 0100. This stops the train of pulses on PPS signal output after the programmed stop time specified in Step 6 elapses. †

You can stop the pulse train at any time by programming 0101 in the PPSCMD field. Similarly, you can cancel the Stop Pulse train command (given in step 7) by programming 0110 in the PPSCMD field before the time (programmed in step 6) elapses. You can cancel the pulse train generation by programming 0011 in the PPSCMD field before the programmed start time (in step 2) elapses. †

Generating an Interrupt without Affecting the PPS

The Bits [6:5], TRGTMODSEL, of the Register 459 (PPS Control Register) enable you to program the Target Time registers (register 455 and 456) to do any one of the following: †

- Generate only interrupts. †
- Generate interrupts and the PPS start and stop time. †
- Generate only PPS start and stop time. †

To program the Target Time registers (register 455 and 456) to generate only interrupt event: †

1. Program 00 (for interrupt) in Bits [6:5], TRGTMODSEL, of Register 459 (PPS Control Register). This instructs the MAC to use the Target Time registers (register 455 and 456) for target time interrupt. †
2. Program a target time value in the Target Time registers (register 455 and 456). This instructs the MAC to generate an interrupt when the target time elapses. If Bits [6:5], TRGTMODSEL, are changed (for example, to control the PPS), then the interrupt generation is over-written with the new mode and new programmed Target Time register value.

Ethernet MAC Address Map and Register Definitions

 The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the link for either of the following module instances:

- **emac0**
- **emac1**

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.

 The base addresses of all modules are also listed in the [Introduction to the Hard Processor System](#) chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

[Table 17-40](#) shows the revision history for this document.

Table 17-40. Document Revision History

Date	Version	Changes
November 2012	1.2	Minor updates.
May 2012	1.1	Added programming model section.
January 2012	1.0	Initial release.

The hard processor system (HPS) provides two instances of a USB On-The-Go (OTG) controller that supports both device and host functions. The controller supports all high-speed, full-speed, and low-speed transfers in both device and host modes. The controller is fully compliant with the *On-The-Go and Embedded Host Supplement to the USB Revision 2.0 Specification*. The controller can be programmed for both device and host functions to support data movement over the USB protocol.

The controllers are operationally independent of each other. Each USB OTG controller supports a single USB port connected through a USB 2.0 Transceiver Macrocell Interface Plus (UTMI+) Low Pin Interface (ULPI) compliant PHY. The USB OTG controllers are instances of the Synopsys® DesignWare® Cores USB 2.0 Hi-Speed On-The-Go (DWC_otg) controller.

The USB OTG controller is optimized for the following applications and systems: †

- Portable electronic devices †
- Point-to-point applications (no hub, direct connection to HS, FS, or LS device) †
- Multi-point applications (as an embedded USB host) to devices (hub and split support) †

Each of the two USB OTG ports supports both host and device modes, as described in the *On-The-Go and Embedded Host Supplement to the USB Revision 2.0 Specification*. The USB OTG ports support connections for all types of USB peripherals, including the following peripherals:

- Mouse
- Keyboard
- Digital cameras
- Network adapters
- Hard drives
- Generic hubs



Additional information is available in the *On-The-Go and Embedded Host Supplement to the USB Revision 2.0 Specification*, which you can download from the USB Implementers Forum website (www.usb.org).

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

Portions © 2011 Synopsys, Inc. Used with permission. All rights reserved. Synopsys & DesignWare are registered trademarks of Synopsys, Inc. All documentation is provided "as is" and without any warranty. Synopsys expressly disclaims any and all warranties, express, implied, or otherwise, including the implied warranties of merchantability, fitness for a particular purpose, and non-infringement, and any warranties arising out of a course of dealing or usage of trade.

†Paragraphs marked with the dagger (†) symbol are Synopsys Proprietary. Used with permission.



Features of the USB OTG Controller

The USB OTG controller has the following USB-specific features:

- Complies with both Revision 1.3 and Revision 2.0 of the *On-The-Go and Embedded Host Supplement to the USB Revision 2.0 Specification*
- Supports software-configurable modes of operation between OTG 1.3 and OTG 2.0
- Supports all USB 2.0 speeds:
 - High speed (HS, 480-Mbps)
 - Full speed (FS, 12-Mbps)
 - Low speed (LS, 1.5-Mbps)



In host mode, all speeds are supported. However, in device mode, only high speed and full speed are supported.

- Supports all USB transaction types:
 - Control transfers
 - Bulk transfers
 - Isochronous transfers
 - Interrupts
- Supports automatic ping capability
- Supports Session Request Protocol (SRP) and Host Negotiation Protocol (HNP)
- Supports suspend, resume, and remote wake
- Supports up to 16 host channels



In host mode, when the number of device endpoints is greater than the number of host channels, software can reprogram the channels to support up to 127 devices, each having 32 endpoints (IN + OUT), for a maximum of 4,064 endpoints.

- Supports up to 16 bidirectional endpoints, including control endpoint 0



Only seven periodic device IN endpoints are supported.

- Supports a generic root hub
- Performs transaction scheduling in hardware

On the USB PHY layer, the USB OTG controller supports the following features:

- A single USB port connected to each OTG instance
- A ULPI connection to an off-chip USB transceiver

- Software-controlled access, supporting vendor-specific or optional PHY registers access to ease debug
- The OTG 2.0 support for Attach Detection Protocol (ADP) only through an external (off-chip) ADP controller

On the integration side, the USB OTG controller supports the following features:

- Different clocks for system and PHY interfaces
- Dedicated TX FIFO buffer for each device IN endpoint in direct memory access (DMA) mode
- Packet-based, dynamic FIFO memory allocation for endpoints for small FIFO buffers and flexible, efficient use of RAM that can be dynamically sized by software
- Ability to change an endpoint's FIFO memory size during transfers
- Clock gating support during USB suspend and session-off modes
 - PHY clock gating support
 - System clock gating support
- Data FIFO RAM clock gating support



The USB OTG controller does not support the following protocols:

- Enhanced Host Controller Interface (EHCI)
- Open Host Controller Interface (OHCI)
- Universal Host Controller Interface (UHCI)

Supported PHYs

Table 18–1 lists some PHYs that are compatible with the USB OTG.


Table 18–1. Supported PHYs

Manufacturer	Part Number
TI	TUSB1210
NXP	ISP1504
Cypress	CY7C68003
SMSC	USB3300

USB OTG Controller Block Diagram and System Integration

Figure 18-1 is a block diagram showing one USB OTG controller subsystem in the HPS. Two subsystems are included in the HPS.

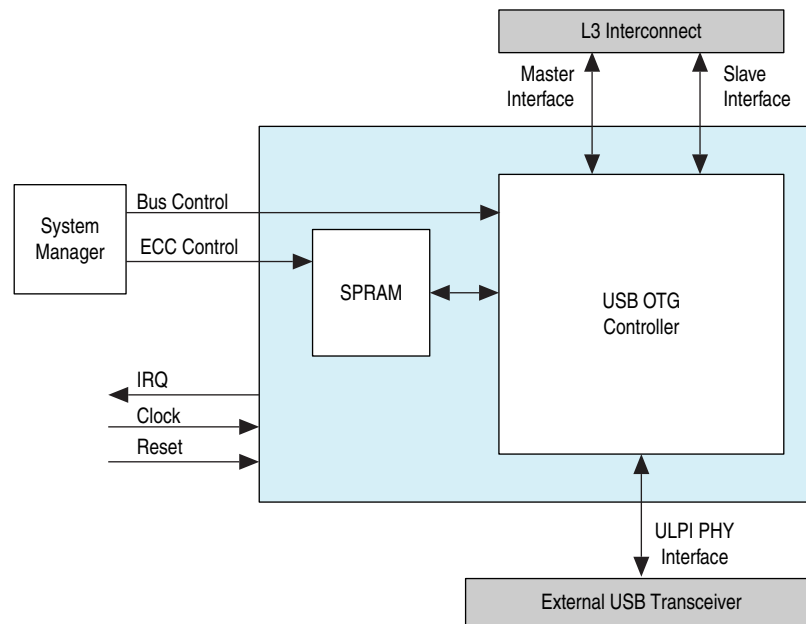Figure 18-1. USB OTG Controller System Integration



The USB OTG controller connects to the level 3 (L3) interconnect through a slave interface, allowing other masters to access the control and status registers (CSRs) in the controller. The controller also connects to the L3 interconnect through a master interface, allowing the DMA engine in the controller to move data between external memory and the controller.

A single-port RAM (SPRAM) connected to the USB OTG controller is used to store USB data packets for both host and device modes. It is configured as FIFO buffers for receive and transmit data packets on the USB link.

Through the system manager, the USB OTG controller has control to use and test error correction codes (ECCs) in the SPRAM. Through the system manager, the USB OTG controller can also control the behavior of the master interface to the L3 interconnect.



For more information, refer to the *System Manager* chapter in volume 3 of the *Arria V Device Handbook*.

The USB OTG controller connects to the external USB transceiver through a ULPI PHY interface. This interface also connects through pin multiplexers within the HPS. The pin multiplexers are controlled by the system manager.

Additional connections on the USB OTG controller include:


- Clock input from the clock manager to the USB OTG controller
- Reset input from the reset manager to the USB OTG controller
- Interrupt line from the USB OTG controller to the microprocessor unit (MPU) global interrupt controller (GIC).

Functional Description of the USB OTG Controller

USB OTG Controller Block Description

Figure 18–2 is a block diagram of the USB OTG controller. The following sections provide detail about each of the units that comprise the USB OTG controller.

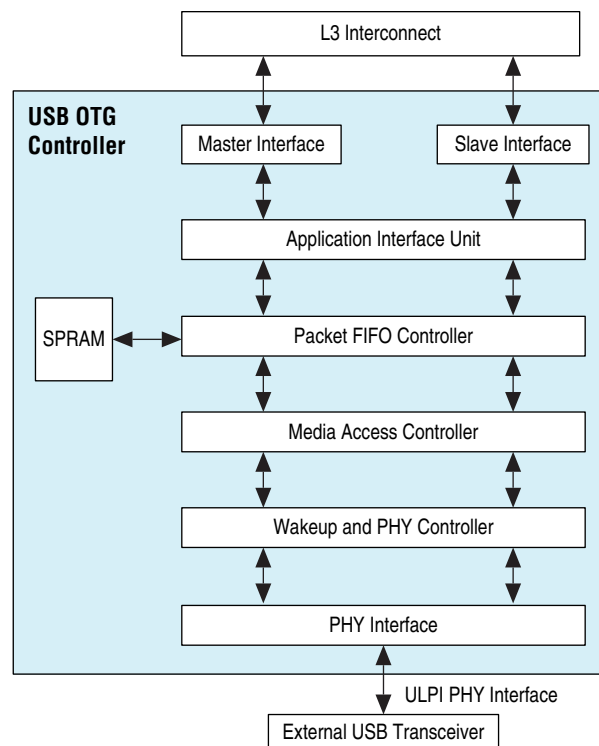Figure 18–2. USB OTG Controller Block Diagram



Master Interface

The master interface includes a built-in DMA controller. The DMA controller moves data between external memory and the media access controller (MAC).

Properties of the master interface are controlled through the USB L3 Master HPROT Register (l3master) in the system manager. These bits provide access information to the L3 interconnect, including whether or not transactions are cacheable, bufferable, or privileged.



Bits in the l3master register can be updated only when the master interface is guaranteed to be in an inactive state.

Slave Interface

The slave interface allows other masters in the system to access the USB OTG controller's CSRs. For testing purposes, other masters can also access the SPRAM.

Slave Interface CSR Unit

The slave interface can read from and write to all the CSRs in the USB OTG controllers. All register accesses are 32 bits.

The CSR is divided into the following groups of registers:

- Global
- Host
- Device
- Power and clock gating

Some registers are shared between host and device modes, because the controller can only be in one mode at a time. The controller generates a mode mismatch interrupt if a master attempts to access device registers when the controller is in host mode, or attempts to access host registers when the controller is in device mode. Writing to unimplemented registers is ignored. Reading from unimplemented registers returns indeterminate values.

Application Interface Unit

The application interface unit (AIU) generates DMA requests based on programmable FIFO buffer thresholds. The AIU generates interrupts to the GIC for both host and device modes. A DMA scheduler is included in the AIU to arbitrate and control the data transfer between packets in system memory and their respective USB endpoints.

Packet FIFO Controller

The Packet FIFO Controller (PFC) connects the AIU with the MAC through data FIFO buffers located in the SPRAM. In device mode, one FIFO buffer is implemented for each IN endpoint. In host mode, a single FIFO buffer stores data for all periodic (isochronous and interrupt) OUT endpoints, and a single FIFO buffer is used for nonperiodic (control and bulk) OUT endpoints. Host and device mode share a single receive data FIFO buffer.

SPRAM

An SPRAM implements the data FIFO buffers for host and device modes. The size of the FIFO buffers can be programmed dynamically.

The SPRAM supports ECCs. ECCs can be enabled through the system manager, by setting the RAM ECC Enable (en) bit in the USB0 or USB1 RAM ECC Enable Register (usb0 or usb1), in the ECC Management Register Group (eccgrp). Single-bit and double-bit errors in each USB instance can be injected using this register.

The SPRAM provides outputs to notify the system manager when single-bit correctable errors are detected (and corrected), and when double-bit (uncorrectable) errors are detected. The system manager generates an interrupt to the GIC when an ECC error is detected.

MAC

The MAC module implements the following functionality:

- USB transaction support
- Host protocol support
- Device protocol support
- OTG protocol support
- Link power management (LPM) functions

USB Transactions

In device mode, the MAC decodes and checks the integrity of all token packets. For valid OUT or SETUP tokens, the following DATA packet is also checked. If the data packet is valid, the MAC performs the following steps:

1. Writes the data to the receive FIFO buffer
2. Sends the appropriate handshake when required to the USB host.

If a receive FIFO buffer is not available, the MAC sends a NAK response to the host. The MAC also supports ping protocol.

For IN tokens, if data is available in the transmit FIFO buffer, the MAC performs the following steps:

1. Reads the data from the FIFO buffer
2. Forms the data packet
3. Transmits the packet to the host
4. Receives the response from the host
5. Sends the updated status to the PFC

In host mode, the MAC receives a token request from the AIU. The MAC performs the following steps:

1. Builds the token packet
2. Sends the packet to the device

For OUT or SETUP transactions, the MAC also performs the following steps:

1. Reads the data from the transmit FIFO buffer
2. Assembles the data packet
3. Sends the packet to the device
4. Waits for a response

The response from the device causes the MAC to send a status update to the AIU.

For IN or PING transactions, the MAC waits for the data or handshake response from the device. For data responses, the MAC performs the following steps:

1. Validates the data
2. Writes the data to the receive FIFO buffer

3. Sends a status update to the AIU
4. Sends a handshake to the device, if appropriate

Host Protocol

In host mode, the MAC performs the following functions:

- Detects connect, disconnect, and remote wakeup events on the USB link
- Initiates reset
- Initiates speed enumeration processes
- Generates Start of Frame (SOF) packets.

Device Protocol

In device mode, the MAC performs the following functions:

- Handles USB reset sequence
- Handles speed enumeration
- Detects USB suspend and resume activity on the USB link
- Initiates remote wakeup
- Decodes SOF packets

OTG Protocol

The MAC handles HNP and SRP for OTG operation. HNP provides a mechanism for swapping host and device roles. SRP provides mechanisms for the host to turn off V_{BUS} to save power, and for a device to request a new USB session.

LPM Functions

The USB OTG controller supports LPM in both host and device modes. With this feature, the USB OTG controller can enter a sleep state when a successful LPM transaction occurs on the USB link.

Wakeup and Power Control

To reduce power, the USB OTG controller supports a power-down mode. In power-down mode, the controller and the PHY can shut down their clocks. The controller supports wakeup on the detection of the following events:

- Resume
- Remote wakeup
- Session request protocol
- New session start

PHY Interface Unit

The USB OTG controller supports synchronous SDR data transmission to a ULPI PHY. The SDR mode implements an eight-bit data bus.

ULPI PHY Interface

The ULPI PHY interface is synchronous to the `ulpi_clk` signal coming from the PHY. Table 18-2 lists the ULPI PHY interface names and related information.

Table 18-2. ULPI PHY Interfaces

Port Name	Bit Width	Direction	Description
<code>ulpi_clk</code>	1	Input	ULPI Clock Receives the 60-MHz clock supplied by the high-speed ULPI PHY. All signals are synchronous to the positive edge of the clock.
<code>ulpi_dir</code>	1	Input	ULPI Data Bus Control 1—The PHY has data to transfer to the USB OTG controller. 0—The PHY does not have data to transfer.
<code>ulpi_nxt</code>	1	Input	ULPI Next Data Control Indicates that the PHY has accepted the current byte from the USB OTG controller. When the PHY is transmitting, this signal indicates that a new byte is available for the controller.
<code>ulpi_stp</code>	1	Output	ULPI Stop Data Control The controller drives this signal high to indicate the end of its data stream. The controller can also drive this signal high to request data from the PHY.
<code>ulpi_data[7:0]</code>	8	Bidirectional	Bidirectional data bus. Driven low by the controller during idle.

Clocks

All clocks must be operational when reset is released. No special handling is required on the clocks.

Table 18-3 lists the USB OTG controller clock inputs.

Table 18-3. USB OTG Controller Clock Inputs

Clock Signal	Frequency	Functional Usage
<code>usb_mp_clk</code>	60 – 200 MHz	Drives the master and slave interfaces, DMA controller, and internal FIFO buffers
<code>usb0_ulpi_clk</code>	60 MHz	ULPI reference clock for usb0 from external ULPI PHY I/O pin
<code>usb1_ulpi_clk</code>	60 MHz	ULPI reference clock for usb1 from external ULPI PHY I/O pin

Resets

The USB OTG controller can be reset either through the hardware reset input or through software.

Reset Requirements

There must be a minimum of 12 cycles on the `ulpi_clk` clock before the controller is taken out of reset. During reset, the USB OTG controller asserts the `ulpi_stp` signal. The PHY outputs a clock when it sees the `ulpi_stp` signal asserted. However, if the pin multiplexers are not programmed, the PHY does not see the `ulpi_stp` signal. As a result, the `ulpi_clk` clock signal does not arrive at the USB OTG controller.

Software must ensure that the reset is active for a minimum of two `usb_mp_clk` cycles. There is no maximum assertion time.

Hardware Reset

Each of the USB OTG controllers has one reset input from the reset manager. The reset signal is asserted during a cold or warm reset event. The reset manager holds the controllers in reset until software releases the resets. Software releases resets by clearing the appropriate USB bits in the Peripheral Module Reset Register (`permodrst`) in the HPS reset manager.

The reset input resets the following blocks:

- The master and slave interface logic
- The integrated DMA controller
- The internal FIFO buffers
- The CSR

The reset input is synchronized to the `usb_mp_clk` domain. The reset input is also synchronized to the ULPI clock within the USB OTG controller and is used to reset the ULPI PHY domain logic.

Software Reset

Software can reset the controller by setting the Core Soft Reset (`csftrst`) bit in the Reset Register (`grstctl`) in the Global Registers (`globgrp`) group of the USB OTG controller.

Software resets are useful in the following situations:

- A PHY selection bit is changed by software. Resetting the USB OTG controller is part of clean-up to ensure that the PHY can operate with the new configuration or clock.
- During software development and debugging.

Interrupts

Each USB OTG controller has a single interrupt output. Interrupts are asserted on the conditions shown in [Table 18-4](#).

Table 18-4. USB OTG Interrupt Conditions

Condition	Mode
Device-initiated remote wakeup is detected.	Host mode
Session request is detected from the device.	Host mode
Device disconnect is detected.	Host mode
Host LPM entry retry has expired or LPM transaction(s) are complete.	Host mode
Host periodic TX FIFO buffer is empty (can be further programmed to indicate half-empty).	Host mode
Host channels interrupt received.	Host mode
Incomplete periodic transfer is pending at the end of the microframe.	Host mode
Host port status interrupt received.	Host mode
External host initiated resume is detected.	Device mode
LPM handshake is sent.	Device mode
Reset is detected when in suspend or normal mode.	Device mode
USB suspend mode is detected.	Device mode
Data fetch is suspended due to TX FIFO buffer full or request queue full.	Device mode
At least one isochronous OUT endpoint is pending at the end of the microframe.	Device mode
At least one isochronous IN endpoint is pending at the end of the microframe.	Device mode
At least one IN or OUT endpoint interrupt is pending at the end of the microframe.	Device mode
The end of the periodic frame is reached.	Device mode
Failure to write an isochronous OUT packet to the RX FIFO buffer. The RX FIFO buffer does not have enough space to accommodate the maximum packet size for the isochronous OUT endpoint.	Device mode
Enumeration has completed.	Device mode
Connector ID change.	Common modes
Mode mismatch. Software accesses registers belonging to an incorrect mode.	Common modes
Nonperiodic TX FIFO buffer is empty.	Common modes
RX FIFO buffer is not empty.	Common modes
Start of microframe.	Common modes
Device connection debounce is complete in host mode.	OTG interrupts
A-Device timeout while waiting for B-Device connection.	OTG interrupts
Host negotiation is complete.	OTG interrupts
Session request is complete.	OTG interrupts
Session end is detected in device mode.	OTG interrupts

USB OTG Controller Programming Model

For detailed information about using the USB OTG controller, consult your operating system (OS) driver documentation. The OS vendor provides application programming interfaces (APIs) to control USB host, device and OTG operation. This section provides a brief overview of the following software operations:

- Enabling SPRAM ECCs
- Host operation
- Device operation

Enabling SPRAM ECCs

To avoid false ECC errors, you must initialize the ECC bits in the SPRAM before using ECCs. To initialize the ECC bits, software writes data to all locations in the SPRAM.

The L3 interconnect has access to the SPRAM is accessible through the USB OTG L3 slave interface. Software accesses the SPRAM through the `directfifo` memory space, in the USB OTG controller address space.

The SPRAM contains 8192 (32 KB) locations. The L3 slave provides 32-bit access to the SPRAM. Physically the SPRAM is implemented as a 35-bit memory, with the highest three bits reserved for the USB OTG controller's internal use. When a write is performed to the SPRAM through the L3 slave interface, bits 32 through 34 of the internal data bus are tied to 1, to enable the ECC bits to be initialized.

The `directfifo` memory space is described in the controller address map. Refer to [“USB OTG Controller Address Map and Register Definitions” on page 18–15](#).



Software cannot access the SPRAM beyond the 32-KB range. Out-of-range read transactions return indeterminate data. Out-of-range write transactions are ignored.

Host Operation

Host Initialization

After power up, the USB port is in its default mode. No V_{BUS} is applied to the USB cable. The following process sets up the USB OTG controller as a USB host.

1. To enable power to the USB port, the software driver sets the Port Power (`prtpwr`) bit to 1 in the Host Port Control and Status Register (`hprt`) of the Host Mode Registers (`hostgrp`) group. This action drives the V_{BUS} signal on the USB link.
The controller waits for a connection to be detected on the USB link.
2. When a USB device connects, an interrupt is generated. The Port Connect Detected (`PrtConnDet`) bit in `hprt` is set to 1.
3. Upon detecting a port connection, the software driver initiates a port reset by setting the Port Reset (`prtrst`) bit to 1 in `hprt`.
4. The software driver must wait a minimum of 10 ms so that speed enumeration can complete on the USB link.
5. After the 10 ms, the software driver sets `prtrst` back to 0 to release the port reset.

6. The USB OTG controller generates an interrupt. The Port Enable Disable Change (`prtENCHng`) and Port Speed (`prtSPD`) bits, in `hprt`, are set to reflect the enumerated speed of the device that attached.

At this point the port is enabled for communication. Keep alive or SOF packets are sent on the port. If a USB 2.0-capable device fails to initialize correctly, it is reported as a USB 1.1 device.

The Host Frame Interval Register (`hfir`) is updated with the corresponding PHY clock settings. The `hfir`, used for sending SOF packets, is in the Host Mode Registers (`hostgrp`) group.

7. The software driver must program the following registers in the Global Registers (`globgrp`) group, in the order listed:
 - a. Receive FIFO Size Register (`grxfSiz`)—selects the size of the receive FIFO buffer
 - b. Non-periodic Transmit FIFO Size Register (`gnptxfSiz`)—selects the size and the start address of the non-periodic transmit FIFO buffer for nonperiodic transactions
 - c. Host Periodic Transmit FIFO Size Register (`hptxfSiz`)—selects the size and start address of the periodic transmit FIFO buffer for periodic transactions
8. System software initializes and enables at least one channel to communicate with the USB device.

Host Transaction

When configured as a host, the USB OTG controller pipes the USB transactions through one of two request queues (one for periodic transactions and one for nonperiodic transactions). Each entry in the request queue holds the SETUP, IN, or OUT channel number along with other information required to perform a transaction on the USB link. The sequence in which the requests are written to the queue determines the sequence of transactions on the USB link.

The host processes the requests in the following order at the beginning of each frame or microframe:

1. Periodic request queue, including isochronous and interrupt transactions
2. Nonperiodic request queue (bulk or control transfers)

The host schedules transactions for each enabled channel in round-robin fashion. When the host controller completes the transfer for a channel, the controller updates the DMA descriptor status in the system memory.

For OUT transactions, the host controller uses two transmit FIFO buffers to hold the packet payload to be transmitted. One transmit FIFO buffer is used for all nonperiodic OUT transactions and the other is used for all periodic OUT transactions.

For IN transactions, the USB host controller uses one receive FIFO buffer for all periodic and nonperiodic transactions. The controller holds the packet payload from the USB device in the receive FIFO buffer until the packet is transferred to the system memory. The receive FIFO buffer also holds the status of each packet received. The status entry holds the IN channel number along with other information, including received byte count and validity status.

For generic hub operations, the USB OTG controller uses SPLIT transfers to communicate with slower-speed devices downstream of the hub. For these transfers, the transaction accumulation or buffering is performed in the generic hub, and is scheduled accordingly. The USB OTG controller ensures that enough transmit and receive buffers are allocated when the downstream transactions are completed or when accumulated data is ready to be sent upstream.

Device Operation

Device Initialization

The following process sets up the USB OTG controller as a USB device:

1. After power up, the USB OTG controller must be set to the desired device speed by writing to the Device Speed (`devspd`) bits in the Device Configuration Register (`dcfg`) in the Device Mode Registers (`devgrp`) group. After the device speed is set, the controller waits for a USB host to detect the USB port as a device port.
2. When an external host detects the USB port, the host performs a port reset, which generates an interrupt to the USB device software. The USB Reset (`usbrst`) bit in the Interrupt (`port reset`) register in the Global Registers (`globgrp`) group is set. The device software then sets up the data FIFO buffer to receive a SETUP packet from the external host. Endpoint 0 is not enabled yet.
3. After completion of the port reset, the operation speed required by the external host is known. Software reads the device speed status and sets up all the remaining required transaction fields to enable control endpoint 0.

After completion of this process, the device is receiving SOF packets, and is ready for the USB host to set up the device's control endpoint.

Device Transaction

When configured as a device, the USB OTG controller uses a single FIFO buffer to receive the data for all the OUT endpoints. The receive FIFO buffer holds the status of the received data packet, including the byte count, the data packet ID (PID), and the validity of the received data. The DMA controller reads the data out of the FIFO buffer as the data are received. If a FIFO buffer overflow condition occurs, the controller responds to the OUT packet with a NAK, and internally rewinds the pointers.

For IN endpoints, the controller uses dedicated transmit buffers for each endpoint. The application does not need to predict the order in which the USB host will access the nonperiodic endpoints. If a FIFO buffer underrun condition occurs during transmit, the controller inverts the cyclic redundancy code (CRC) to mark the packet as corrupt on the USB link.

The application handles one data packet at a time per endpoint in transaction-level operations. The software receives an interrupt on completion of every packet. Based on the handshake response received on the USB link, the application determines whether to retry the transaction or proceed with the next transaction, until all packets in the transfer are completed.

IN Transactions

For an IN transaction, the application performs the following steps:

1. Enables the endpoint
2. Triggers the DMA engine to write the associated data packet to the corresponding transmit FIFO buffer
3. Waits for the packet completion interrupt from the controller

When an IN token is received on an endpoint when the associated transmit FIFO buffer does not contain sufficient data, the controller performs the following steps:

1. Generates an interrupt
2. Returns a NAK handshake to the USB host

If sufficient data is available, the controller transmits the data to the USB host.

OUT Transactions

For an OUT transaction, the application performs the following steps:

1. Enables the endpoint
2. Waits for the packet received interrupt from the USB OTG controller
3. Retrieves the packet from the receive FIFO buffer

When an OUT token or PING token is received on an endpoint where the receive FIFO buffer does not have sufficient space, the controller performs the following steps:

1. Generates an interrupt
2. Returns a NAK handshake to USB host

If sufficient space is available, the controller stores the data in the receive FIFO buffer and returns an ACK handshake to the USB link.

Control Transfers

For control transfers, the application performs the following steps:

1. Waits for the packet received interrupt from the controller
2. Retrieves the packet from the receive buffer

Because the control transfer is governed by USB protocol, the controller always responds with an ACK handshake.

USB OTG Controller Address Map and Register Definitions



The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the link for either of the following module instances:

- **usb0**
- **usb1**

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.



The base addresses of all modules are also listed in the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 18-5 shows the revision history for this document.

Table 18-5. Document Revision History

Date	Version	Changes
November 2012	1.2	■ Described interrupt generation. ■ Described software initialization in host and device modes. ■ Described software operation in host and device modes. ■ Simplified features list. ■ Simplified hardware description.
June 2012	1.1	Added information about ECCs.
January 2012	1.0	Initial release.

The hard processor system (HPS) provides two serial peripheral interface (SPI) masters and two SPI slaves. The SPI masters and slaves are instances of the Synopsys® DesignWare® Synchronous Serial Interface (SSI) controller (DW_apb_ssi).

Features of the SPI Controller

The SPI controller has the following features: †

- Serial master and serial slave controllers – Enable serial communication with serial-master or serial-slave peripheral devices. †
- Serial interface operation – Programmable choice of the following protocols:
 - Motorola SPI protocol
 - Texas Instruments Synchronous Serial Protocol
 - National Semiconductor Microwire
- DMA controller interface integrated with HPS DMA controller
- SPI master supports rxd sample delay
- Transmit and receive FIFO buffers are 256 words deep
- SPI master supports up to four slave selects
- Programmable master serial bit rate
- Programmable data item size of 4 to 16 bits

SPI Block Diagram and System Integration

The SPI supports data bus widths of 32 bits. †

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

Portions © 2011 Synopsys, Inc. Used with permission. All rights reserved. Synopsys & DesignWare are registered trademarks of Synopsys, Inc. All documentation is provided "as is" and without any warranty. Synopsys expressly disclaims any and all warranties, express, implied, or otherwise, including the implied warranties of merchantability, fitness for a particular purpose, and non-infringement, and any warranties arising out of a course of dealing or usage of trade.


†Paragraphs marked with the dagger (†) symbol are Synopsys Proprietary. Used with permission.



SPI Block Diagram

Figure 19-1 shows the functional groupings of the main interfaces to the SPI block. †

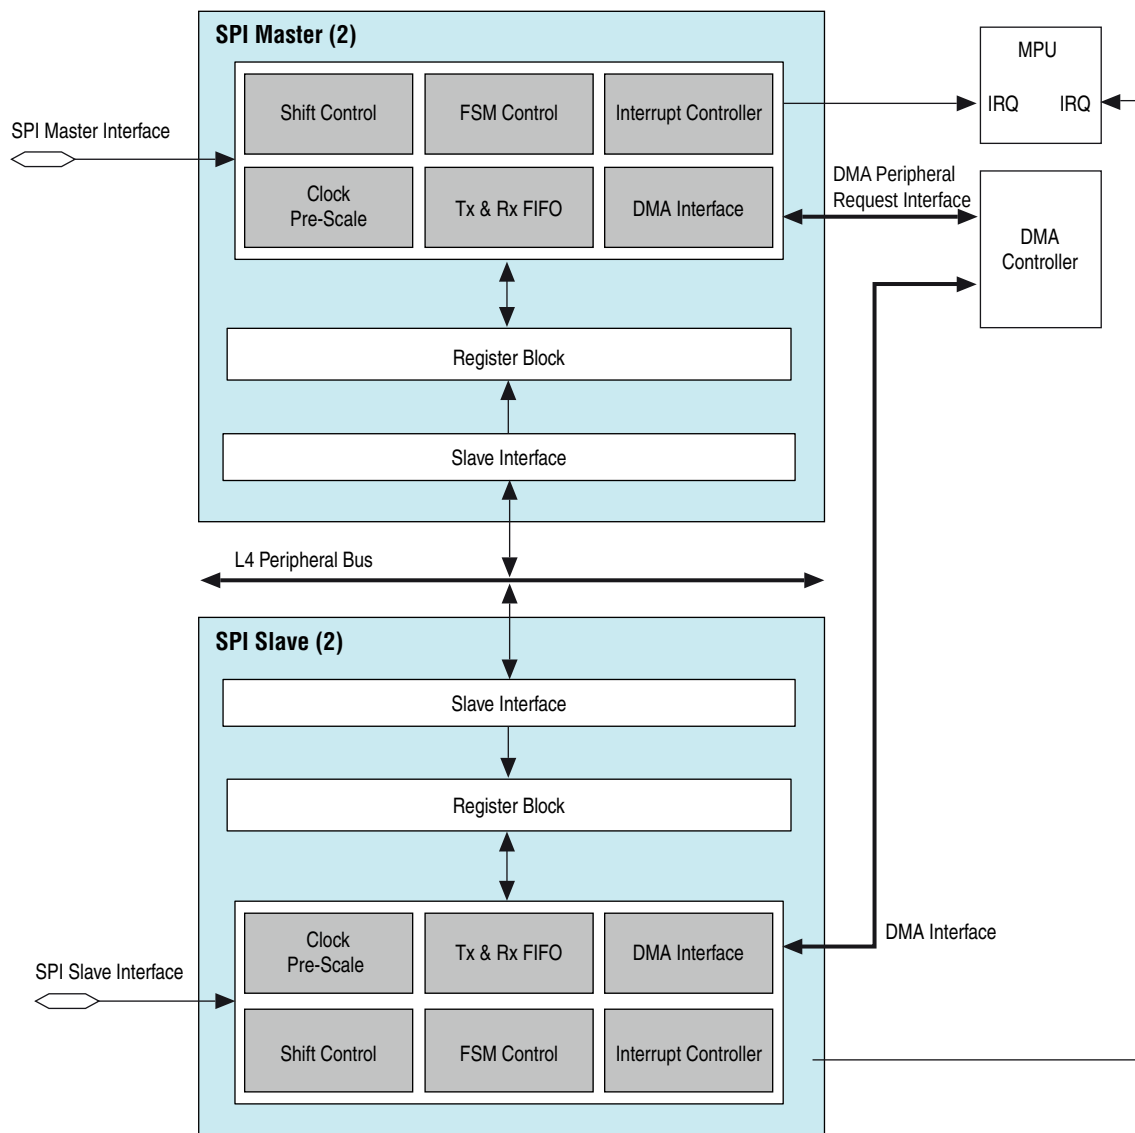Figure 19-1. SPI Block Diagram



The functional groupings of the main interfaces to the SPI block are as follows: †

- System bus interface
- DMA peripheral request interface
- Interrupt interface
- SPI interface

Functional Description of the SPI Controller

Protocol Details and Standards Compliance

This chapter describes the functional operation of the SPI controller. †

The host processor accesses data, control, and status information about the SPI controller through the system bus interface. The SPI also interfaces with the DMA Controller. †

The HPS includes two general-purpose SPI master controllers and two general-purpose SPI slave controllers.

The SPI controller can connect to any other SPI device using any of the following protocols:

- Motorola SPI Protocol †
- Texas Instruments Serial Protocol (SSP) †
- National Semiconductor Microwire Protocol †

SPI Controller Overview

In order for the SPI controller to connect to a serial-master or serial-slave peripheral device, the peripheral must have a least one of the following interfaces: †


- Motorola SPI protocol – A four-wire, full-duplex serial protocol from Motorola. The slave select line is held high when the SPI controller is idle or disabled. For more information, refer to [“Motorola SPI Protocol” on page 19–13](#). †
- Texas Instruments Serial Protocol (SSP) – A four-wire, full-duplex serial protocol. The slave select line used for SPI and Microwire protocols doubles as the frame indicator for the SSP protocol. For more information, refer to [“Texas Instruments Synchronous Serial Protocol \(SSP\)” on page 19–14](#). †
- National Semiconductor Microwire – A half-duplex serial protocol, which uses a control word transmitted from the serial master to the target serial slave. For more information, refer to [“National Semiconductor Microwire Protocol” on page 19–15](#). You can program the FRF (frame format) bit field in the Control Register 0 (CTRLR0) to select which protocol is used. †

The serial protocols supported by the SPI controller allow for serial slaves to be selected or addressed using hardware. Serial slaves are selected under the control of dedicated hardware select lines. The number of select lines generated from the serial master is equal to the number of serial slaves present on the bus. The serial-master device asserts the select line of the target serial slave before data transfer begins. This architecture is illustrated in part A of [Figure 19–2](#). †

When implemented in software, the input select line for all serial slave devices should originate from a single slave select output on the serial master. In this mode it is assumed that the serial master has only a single slave select output. If there are multiple serial masters in the system, the slave select output from all masters can be logically ANDed to generate a single slave select input for all serial slave devices. †

The main program in the software domain controls selection of the target slave device; this architecture is illustrated in part B of Figure 19-2. Software would control which slave is to respond to the serial transfer request from the master device. †

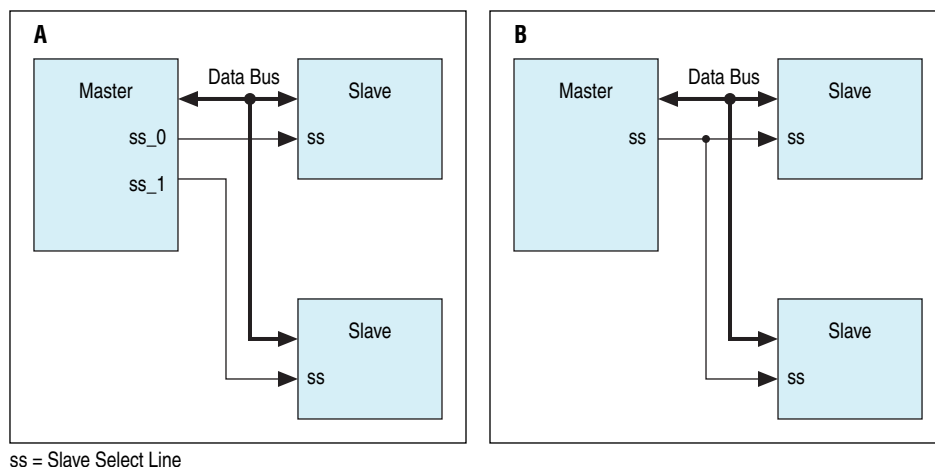Figure 19-2. Hardware/Software Slave Selection †




Serial Bit-Rate Clocks

SPI Master Bit-Rate Clock

The maximum frequency of the SPI master bit-rate clock (`sclk_out`) is one-half the frequency of SPI master clock (`spi_m_clk`). This allows the shift control logic to capture data on one clock edge of `sclk_out` and propagate data on the opposite edge, as shown in Figure 19-3. The `sclk_out` line toggles only when an active transfer is in progress. At all other times it is held in an inactive state, as defined by the serial protocol under which it operates. †

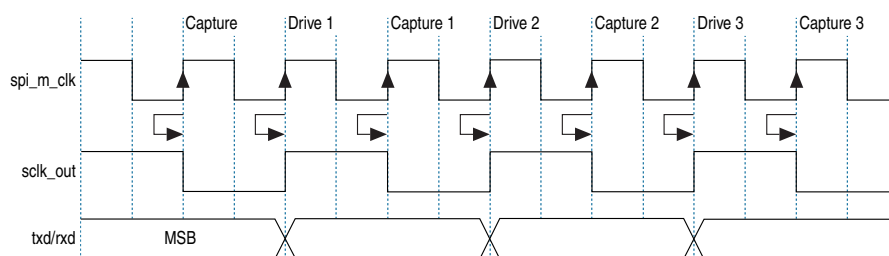Figure 19-3. Maximum `sclk_out`/`spi_m_clk` Ratio



The frequency of `sclk_out` can be derived from Equation 19-1, where `<SPI clock>` is `spi_m_clk` for the master SPI modules and `l4_main_clk` for the slave SPI modules. †

Equation 19-1.

$$F_{\text{sclk\_out}} = F_{\text{<SPI clock>}} / \text{SCKDV}$$

SCKDV is a bit field in the register BAUDR, holding any even value in the range 2 to 65,534. If SCKDV is 0, then `sclk_out` is disabled. †

Equation 19-2 describes the frequency ratio restrictions between the bit-rate clock `sclk_out` and the SPI master peripheral clock. The SPI master peripheral clock must be at least double the offchip master clock. †

Equation 19-2. SPI Master Peripheral Clock

$$F_{\text{spl\_m\_clk}} \geq 2 \times (\text{maximum } F_{\text{sclk\_out}}) \quad \dagger$$

SPI Slave Bit-Rate Clock

The minimum frequency of `l4_main_clk` depends on the operation of the slave peripheral. If the slave device is *receive only*, the minimum frequency of `l4_main_clk` is six times the maximum expected frequency of the bit-rate clock from the master device (`sclk_in`). The `sclk_in` signal is double synchronized to the `l4_main_clk` domain, and then it is edge detected; this synchronization requires three `l4_main_clk` periods. †

If the slave device is *transmit and receive*, the minimum frequency of `l4_main_clk` is eight times the maximum expected frequency of the bit-rate clock from the master device (`sclk_in`). This ensures that data on the master `rx` line is stable before the master shift control logic captures the data. †

The frequency ratio restrictions between the bit-rate clock `sclk_in` and the SPI slave peripheral clock are as follows: †

- Slave (receive only): $F_{\text{l4\_main\_clk}} \geq 6 \times (\text{maximum } F_{\text{sclk\_in}})$ †
- Slave: $F_{\text{l4\_main\_clk}} \geq 8 \times (\text{maximum } F_{\text{sclk\_in}})$ †

Transmit and Receive FIFO Buffers

There are two 16-bit FIFO buffers, a transmit FIFO buffer and a receive FIFO buffer, with a depth of 256. Data frames that are less than 16 bits in size must be right-justified when written into the transmit FIFO buffer. The shift control logic automatically right-justifies receive data in the receive FIFO buffer. †

Each data entry in the FIFO buffers contains a single data frame. It is impossible to store multiple data frames in a single FIFO buffer location; for example, you may not store two 8-bit data frames in a single FIFO buffer location. If an 8-bit data frame is required, the upper 8-bits of the FIFO buffer entry are ignored or unused when the serial shifter transmits the data. †



The transmit and receive FIFO buffers are cleared when the SPI controller is disabled (`SSIENR=0`) or reset. For detailed information about reset signals, refer to the *Reset Manager* chapter in volume 3 of the *Arria® V Device Handbook*.

The transmit FIFO buffer is loaded by write commands to the SPI data register (DR). Data are popped (removed) from the transmit FIFO buffer by the shift control logic into the transmit shift register. The transmit FIFO buffer generates a transmit FIFO empty interrupt request when the number of entries in the FIFO buffer is less than or equal to the FIFO buffer threshold value. The threshold value, set through the register `TXFTLR`, determines the level of FIFO buffer entries at which an interrupt is generated. The threshold value allows you to provide early indication to the processor that the transmit FIFO buffer is nearly empty. A Transmit FIFO Overflow Interrupt is generated if you attempt to write data into an already full transmit FIFO buffer. †

Data are popped from the receive FIFO buffer by read commands to the SPI data register (DR). The receive FIFO buffer is loaded from the receive shift register by the shift control logic. The receive FIFO buffer generates a receive FIFO full interrupt request when the number of entries in the FIFO buffer is greater than or equal to the FIFO buffer threshold value plus one. The threshold value, set through register RXFTLR, determines the level of FIFO buffer entries at which an interrupt is generated. †

The threshold value allows you to provide early indication to the processor that the receive FIFO buffer is nearly full. A Receive FIFO Overflow Interrupt is generated when the receive shift logic attempts to load data into a completely full receive FIFO buffer. However, the newly received data are lost. A Receive FIFO Underflow Interrupt is generated if you attempt to read from an empty receive FIFO buffer. This alerts the processor that the read data are invalid. †

SPI Interrupts

The SPI controller supports combined interrupt requests, which can be masked. The combined interrupt request is the ORed result of all other SPI interrupts after masking. All SPI interrupts have active-high polarity level. The SPI interrupts are described as follows: †

- Transmit FIFO Empty Interrupt – Set when the transmit FIFO buffer is equal to or below its threshold value and requires service to prevent an underrun. The threshold value, set through a software-programmable register, determines the level of transmit FIFO buffer entries at which an interrupt is generated. This interrupt is cleared by hardware when data are written into the transmit FIFO buffer, bringing it over the threshold level. †
- Transmit FIFO Overflow Interrupt – Set when a master attempts to write data into the transmit FIFO buffer after it has been completely filled. When set, new data writes are discarded. This interrupt remains set until you read the transmit FIFO overflow interrupt clear register (TXOICR). †
- Receive FIFO Full Interrupt – Set when the receive FIFO buffer is equal to or above its threshold value plus 1 and requires service to prevent an overflow. The threshold value, set through a software-programmable register, determines the level of receive FIFO buffer entries at which an interrupt is generated. This interrupt is cleared by hardware when data are read from the receive FIFO buffer, bringing it below the threshold level. †
- Receive FIFO Overflow Interrupt – Set when the receive logic attempts to place data into the receive FIFO buffer after it has been completely filled. When set, newly received data are discarded. This interrupt remains set until you read the receive FIFO overflow interrupt clear register (RXOICR). †
- Receive FIFO Underflow Interrupt – Set when a system bus access attempts to read from the receive FIFO buffer when it is empty. When set, zeros are read back from the receive FIFO buffer. This interrupt remains set until you read the receive FIFO underflow interrupt clear register (RXUICR). †
- Combined Interrupt Request – ORed result of all the above interrupt requests after masking. To mask this interrupt signal, you must mask all other SPI interrupt requests. †

Transmit FIFO Overflow, Transmit FIFO Empty, Receive FIFO Full, Receive FIFO Underflow, and Receive FIFO Overflow interrupts can all be masked independently, using the Interrupt Mask Register (IMR). †

Transfer Modes

When transferring data on the serial bus, the SPI controller operates in the modes discussed in this section.

The transfer mode (TMOD) is set by writing to control register 0 (CTRLR0). †



The transfer mode setting does not affect the duplex of the serial transfer. TMOD is ignored for Microwire transfers, which are controlled by the MWCR register. †

Transmit and Receive

When TMOD = 0, both transmit and receive logic are valid. The data transfer occurs as normal according to the selected frame format (serial protocol). Transmit data are popped from the transmit FIFO buffer and sent through the txd line to the target device, which replies with data on the rxd line. The receive data from the target device is moved from the receive shift register into the receive FIFO buffer at the end of each data frame. †

Transmit Only

When TMOD = 1, any receive data are ignored. The data transfer occurs as normal, according to the selected frame format (serial protocol). Transmit data are popped from the transmit FIFO buffer and sent through the txd line to the target device, which replies with data on the rxd line. At the end of the data frame, the receive shift register does not load its newly received data into the receive FIFO buffer. The data in the receive shift register is overwritten by the next transfer. You should mask interrupts originating from the receive logic when this mode is entered. †

Receive Only

When TMOD = 2, the transmit data are invalid. In the case of the SPI slave, the transmit FIFO buffer is never popped in Receive Only mode. The txd output remains at a constant logic level during the transmission. The data transfer occurs as normal according to the selected frame format (serial protocol). The receive data from the target device is moved from the receive shift register into the receive FIFO buffer at the end of each data frame. You should mask interrupts originating from the transmit logic when this mode is entered. †

EEPROM Read



This transfer mode is only valid for serial masters. †

When $TMOD = 3$, the transmit data is used to transmit an opcode and/or an address to the EEPROM device. Typically this takes three data frames (8-bit opcode followed by 8-bit upper address and 8-bit lower address). During the transmission of the opcode and address, no data is captured by the receive logic (as long as the SPI master is transmitting data on its `txd` line, data on the `rx` line is ignored). The SPI master continues to transmit data until the transmit FIFO buffer is empty. Therefore, you should ONLY have enough data frames in the transmit FIFO buffer to supply the opcode and address to the EEPROM. If more data frames are in the transmit FIFO buffer than are needed, then read data is lost. †

When the transmit FIFO buffer becomes empty (all control information has been sent), data on the receive line (`rx`) is valid and is stored in the receive FIFO buffer; the `txd` output is held at a constant logic level. The serial transfer continues until the number of data frames received by the SPI master matches the value of the NDF field in the `CTRLR1` register plus one. †



EEPROM read mode is not supported when the SPI controller is configured to be in the SSP mode. †

SPI Master

The SPI master initiates and controls all serial transfers with serial-slave peripheral devices. [Figure 19-1 on page 19-2](#) shows a SPI master. †

The serial bit-rate clock, generated and controlled by the SPI controller, is driven out on the `sclk_out` line. When the SPI controller is disabled, no serial transfers can occur and `sclk_out` is held in “inactive” state, as defined by the serial protocol under which it operates. †

RXD Sample Delay

SPI master device is capable of delaying the default sample time of the `rx` signal in order to increase the maximum achievable frequency on the serial bus.

Round trip routing delays on the `sclk_out` signal from the master and the `rx` signal from the slave can mean that the timing of the `rx` signal, as seen by the master, has moved away from the normal sampling time.


Without the RXD sample delay, you must increase the baud rate for the transfer in order to ensure that the setup times on the `rx` signal are within range. This reduces the frequency of the serial interface.

Additional logic is included in the SPI master to delay the default sample time of the `rx` signal. This additional logic can help to increase the maximum achievable frequency on the serial bus. †

By writing to the `rsd` field of the RX Sample Delay Register (`rx_sample_dly`), you specify an additional amount of delay applied to the `rx` sample, in number of `spi_m_clk` clock cycles, up to 64 cycles. If the `rsd` field is programmed with a value exceeding 64, zero delay is applied to the `rx` sample.

Round trip routing delays on the `sclk_out` signal from the master and the `rx_d` signal from the slave can mean that the timing of the `rx_d` signal, as seen by the master, has moved away from the normal sampling time. Figure 19-4 illustrates this situation. Red arrows indicate routing delay between master and slave devices. Blue arrow indicates sampling delay within slave from receiving `sclk_in` to driving `tx_d` out. †

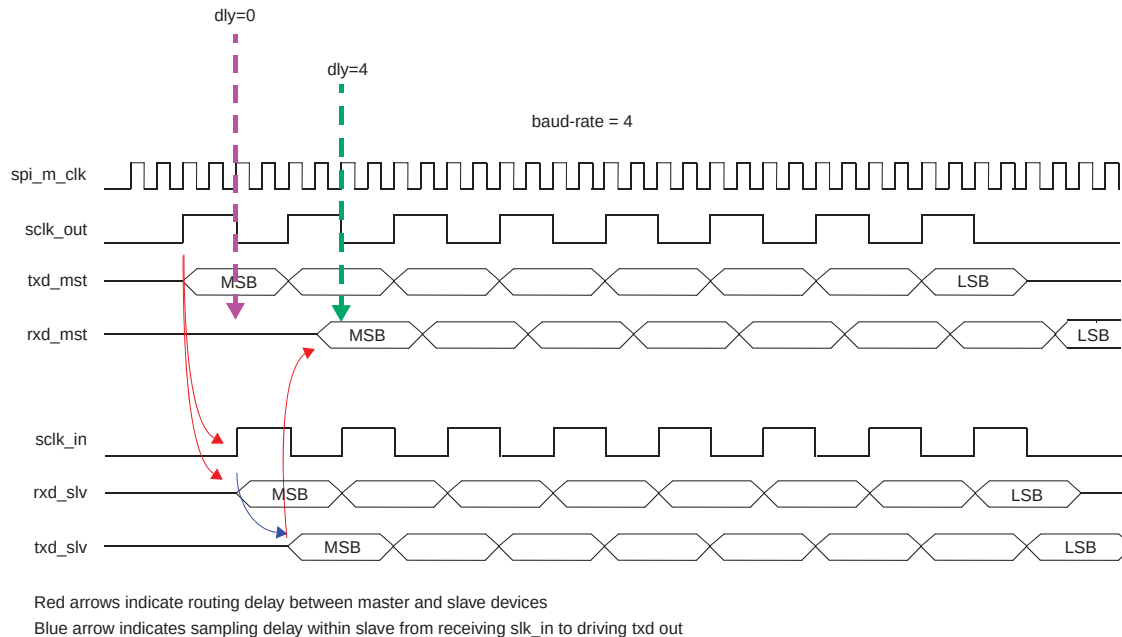Figure 19-4. Effects of Round-Trip Routing Delays on `sclk_out` Signal



Data Transfers

The SPI master starts data transfers when all the following conditions are met:

- The SPI master is enabled
- There is at least one valid entry in the transmit FIFO buffer
- A slave device is selected

When actively transferring data, the busy flag (BUSY) in the status register (SR) is set. You must wait until the busy flag is cleared before attempting a new serial transfer. †



The BUSY status is not set when the data are written into the transmit FIFO buffer. This bit gets set only when the target slave has been selected and the transfer is underway. After writing data into the transmit FIFO buffer, the shift logic does not begin the serial transfer until a positive edge of the `sclk_out` signal is present. The delay in waiting for this positive edge depends on the baud rate of the serial transfer. Before polling the BUSY status, you should first poll the Transit FIFO Empty (TFE) status (waiting for 1) or wait for (BAUDR * SPI clock) clock cycles. †

Master SPI and SSP Serial Transfers

“Motorola SPI Protocol” on page 19-13 and “Texas Instruments Synchronous Serial Protocol (SSP)” on page 19-14 describe the SPI and SSP serial protocols, respectively. †

When the transfer mode is “transmit and receive” or “transmit only” (TMOD = 0 or TMOD = 1, respectively), transfers are terminated by the shift control logic when the transmit FIFO buffer is empty. For continuous data transfers, you must ensure that the transmit FIFO buffer does not become empty before all the data have been transmitted. The transmit FIFO threshold level (TXFTLR) can be used to early interrupt (Transmit FIFO Empty Interrupt) the processor indicating that the transmit FIFO buffer is nearly empty. †

When the DMA is used in conjunction with the SPI master, the transmit data level (DMATDLR) can be used to early request the DMA Controller, indicating that the transmit FIFO buffer is nearly empty. The FIFO buffer can then be refilled with data to continue the serial transfer. The user may also write a block of data (at least two FIFO buffer entries) into the transmit FIFO buffer before enabling a serial slave. This ensures that serial transmission does not begin until the number of data frames that make up the continuous transfer are present in the transmit FIFO buffer. †

When the transfer mode is “receive only” (TMOD = 2), a serial transfer is started by writing one “dummy” data word into the transmit FIFO buffer when a serial slave is selected. The txd output from the SPI controller is held at a constant logic level for the duration of the serial transfer. The transmit FIFO buffer is popped only once at the beginning and may remain empty for the duration of the serial transfer. The end of the serial transfer is controlled by the “number of data frames” (NDF) field in control register 1 (CTRLR1). †

If, for example, you want to receive 24 data frames from a serial-slave peripheral, you should program the NDF field with the value 23; the receive logic terminates the serial transfer when the number of frames received is equal to the NDF value plus one. This transfer mode increases the bandwidth of the system bus as the transmit FIFO buffer never needs to be serviced during the transfer. The receive FIFO buffer should be read each time the receive FIFO buffer generates a FIFO full interrupt request to prevent an overflow. †

When the transfer mode is “eeprom_read” (TMOD = 3), a serial transfer is started by writing the opcode and/or address into the transmit FIFO buffer when a serial slave (EEPROM) is selected. The opcode and address are transmitted to the EEPROM device, after which read data is received from the EEPROM device and stored in the receive FIFO buffer. The end of the serial transfer is controlled by the NDF field in the control register 1 (CTRLR1). †



EEPROM read mode is not supported when the SPI controller is configured to be in the SSP mode. †

The receive FIFO threshold level (RXFTLR) can be used to give early indication that the receive FIFO buffer is nearly full. When a DMA is used, the receive data level (DMARDLR) can be used to early request the DMA Controller, indicating that the receive FIFO buffer is nearly full. †

Master Microwire Serial Transfers

“National Semiconductor Microwire Protocol” on page 19-15 describes the Microwire serial protocol in detail. †

Microwire serial transfers from the SPI serial master are controlled by the Microwire Control Register (MWCR). The MHS bit field enables and disables the Microwire handshaking interface. The MDD bit field controls the direction of the data frame (the control frame is always transmitted by the master and received by the slave). The MWMOD bit field defines whether the transfer is sequential or nonsequential. †

All Microwire transfers are started by the SPI serial master when there is at least one control word in the transmit FIFO buffer and a slave is enabled. When the SPI master transmits the data frame (MDD = 1), the transfer is terminated by the shift logic when the transmit FIFO buffer is empty. When the SPI master receives the data frame (MDD = 1), the termination of the transfer depends on the setting of the MWMOD bit field. If the transfer is nonsequential (MWMOD = 0), it is terminated when the transmit FIFO buffer is empty after shifting in the data frame from the slave. When the transfer is sequential (MWMOD = 1), it is terminated by the shift logic when the number of data frames received is equal to the value in the CTRLR1 register plus one. †

When the handshaking interface on the SPI master is enabled (MHS = 1), the status of the target slave is polled after transmission. Only when the slave reports a *ready status* does the SPI master complete the transfer and clear its BUSY status. If the transfer is continuous, the next control/data frame is not sent until the slave device returns a *ready status*. †

SPI Slave

The SPI slave handles serial communication with transfer initiated and controlled by serial master peripheral devices.

Figure 19-5 shows an example of a SPI slave in a single-master bus system, including the following signals: †


- `sclk_in`—serial clock to the SPI slave †
- `ss_in_n`—slave select input to the SPI slave †
- `ss_oe_n`—output enable for the SPI master or slave †
- `txd`—transmit data line for the SPI master or slave †
- `rxn`—receive data line for the SPI master or slave †

When the SPI serial slave is selected, it enables its `txd` data onto the serial bus. All data transfers to and from the serial slave are regulated on the serial clock line (`sclk_in`), driven from the SPI master device. Data are propagated from the serial slave on one edge of the serial clock line and sampled on the opposite edge. †

When the SPI serial slave is not selected, it must not interfere with data transfers between the serial-master and other serial-slave devices. When the serial slave is not selected, its `txd` output is buffered, resulting in a high impedance drive onto the SPI master `rxn` line. The buffers shown in Figure 19-5 are external to SPI controller. `spi_oe_n` is the SPI slave output enable signal. †

The serial clock that regulates the data transfer is generated by the serial-master device and input to the SPI slave on `sclk_in`. The slave remains in an idle state until selected by the bus master. When not actively transmitting data, the slave must hold its `txd` line in a high impedance state to avoid interference with serial transfers to other slave devices. The SPI slave output enable (`ss_oe_n`) signal is available for use to control the `txd` output buffer. The slave continues to transfer data to and from the master device as long as it is selected. If the master transmits to all serial slaves, a control bit (`SLV_OE`) in the SPI control register 0 (`CTRLR0`) can be programmed to inform the slave if it should respond with data from its `txd` line. †

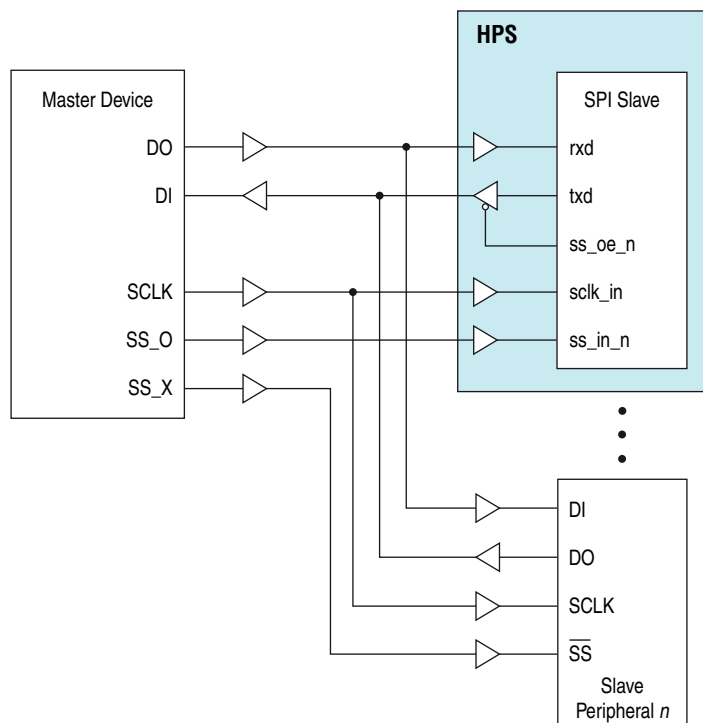Figure 19-5. SPI Slave †



Slave SPI and SSP Serial Transfers †

“Motorola SPI Protocol” on page 19-13 and “Texas Instruments Synchronous Serial Protocol (SSP)” on page 19-14 contain a description of the SPI and SSP serial protocols, respectively. †

If the SPI slave is *receive only* (`TMOD=2`), the transmit FIFO buffer need not contain valid data because the data currently in the transmit shift register is resent each time the slave device is selected. The `TXE` error flag in the status register (`SR`) is not set when `TMOD=2`. You should mask the Transmit FIFO Empty Interrupt when this mode is used. †

If the SPI slave transmits data to the master, you must ensure that data exists in the transmit FIFO buffer before a transfer is initiated by the serial-master device. If the master initiates a transfer to the SPI slave when no data exists in the transmit FIFO buffer, an error flag (`TXE`) is set in the SPI status register, and the previously transmitted data frame is resent on `txd`. For continuous data transfers, you must ensure that the transmit FIFO buffer does not become empty before all the data have

been transmitted. The transmit FIFO threshold level register (TXFTLR) can be used to early interrupt (Transmit FIFO Empty Interrupt) the processor, indicating that the transmit FIFO buffer is nearly empty. When a DMA Controller is used, the DMA transmit data level register (DMATDLR) can be used to early request the DMA Controller, indicating that the transmit FIFO buffer is nearly empty. The FIFO buffer can then be refilled with data to continue the serial transfer. †

The receive FIFO buffer should be read each time the receive FIFO buffer generates a FIFO full interrupt request to prevent an overflow. The receive FIFO threshold level register (RXFTLR) can be used to give early indication that the receive FIFO buffer is nearly full. When a DMA Controller is used, the DMA receive data level register (DMARDLR) can be used to early request the DMA controller, indicating that the receive FIFO buffer is nearly full. †

Serial Transfers

“National Semiconductor Microwire Protocol” on page 19-15 describes the Microwire serial protocol in detail, including timing diagrams and information about how data are structured in the transmit and receive FIFO buffers before and after a serial transfer. The Microwire protocol operates in much the same way as the SPI protocol. There is no decode of the control frame by the SPI slave device. †

Partner Connection Interfaces

The SPI can connect to any serial-master or serial-slave peripheral device using one of the interfaces discussed in the following sections. †

Motorola SPI Protocol

The inactive state of the serial clock is low. The data frame can be 4 to 16 bits in length. †

Data transmission begins on the falling edge of the slave select signal. The first data bit is captured by the master and slave peripherals on the first edge of the serial clock; therefore, valid data must be present on the txd and rxd lines prior to the first serial clock edge. †



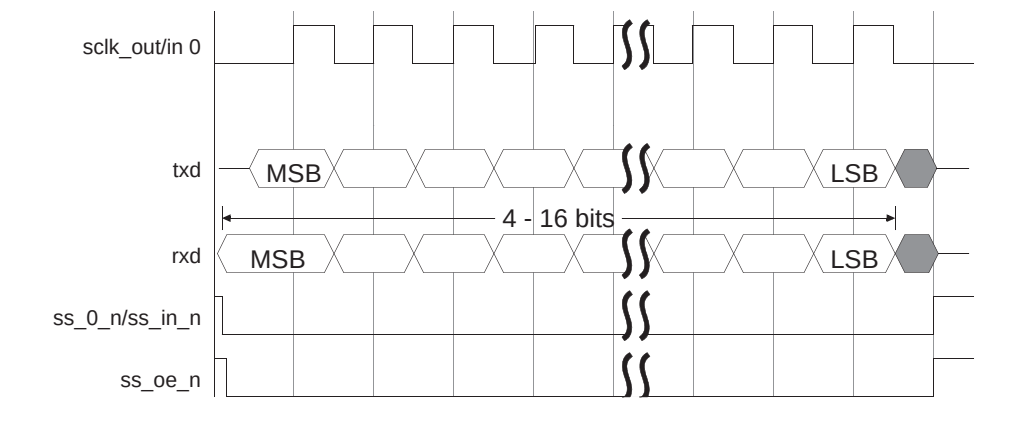
The slave select signal takes effect only when used as slave SPI. For master SPI, the data transmission begins as soon as the output enable signal is deasserted.

Figure 19-6 shows a timing diagram for a single SPI data transfer. †

The following signals are illustrated in the timing diagrams in this section: †

- `clk_out`—serial clock from SPI master †
- `clk_in`—serial clock from SPI slave †
- `ss_0_n`—slave select signal from SPI master †
- `ss_oe_n`—output enable for the SPI master or slave †

- txd—transmit data line for the SPI master or slave †
- rxd—receive data line for the SPI master or slave †

Figure 19-6. SPI Serial Format

There are four possible transfer modes on the SPI controller for performing SPI serial transactions; refer to “[Transfer Modes](#)” on page 19-7. For *transmit and receive transfers* (transfer mode field (9:8) of the Control Register 0 = 0), data transmitted from the SPI controller to the external serial device is written into the transmit FIFO buffer. Data received from the external serial device into the SPI controller is pushed into the receive FIFO buffer. †

For *transmit only* transfers (transfer mode field (9:8) of the Control Register 0 = 1), data transmitted from the SPI controller to the external serial device is written into the transmit FIFO buffer. As the data received from the external serial device is deemed invalid, it is not stored in the SPI receive FIFO buffer. †

For *receive only* transfers (transfer mode field (9:8) of the Control Register 0 = 2), data transmitted from the SPI controller to the external serial device is invalid, so a single dummy word is written into the transmit FIFO buffer to begin the serial transfer. The `txd` output from the SPI controller is held at a constant logic level for the duration of the serial transfer. Data received from the external serial device into the SPI controller is pushed into the receive FIFO buffer. †

For *eeprom_read* transfers (transfer mode field [9:8] of the Control Register 0 = 3), opcode and/or EEPROM address are written into the transmit FIFO buffer. During transmission of these control frames, received data is not captured by the SPI master. After the control frames have been transmitted, receive data from the EEPROM is stored in the receive FIFO buffer.

Texas Instruments Synchronous Serial Protocol (SSP)


Data transfers begin by asserting the frame indicator line (`ss_0_n`) for one serial clock period. Data to be transmitted are driven onto the `txd` line one serial clock cycle later; similarly data from the slave are driven onto the `rxd` line. Data are propagated on the rising edge of the serial clock (`sclk_out/sclk_in`) and captured on the falling edge. The length of the data frame ranges from 4 to 16 bits.



The slave select signal (`ss_0_n`) takes effect only when used as slave SPI. For master SPI, the data transmission begins as soon as the output enable signal is deasserted.


Figure 19-7 shows the timing diagram for a single SSP serial transfer. †

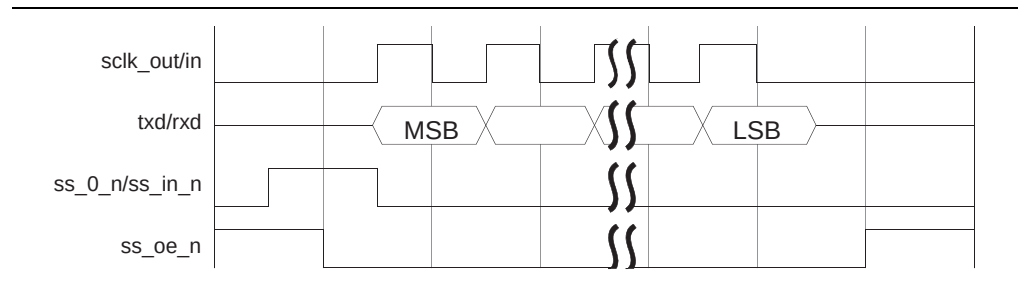Figure 19-7. SSP Serial Format



Continuous data frames are transferred in the same way as single data frames. The frame indicator is asserted for one clock period during the same cycle as the LSB from the current transfer, indicating that another data frame follows. Figure 19-8 shows the timing for a continuous SSP transfer. †

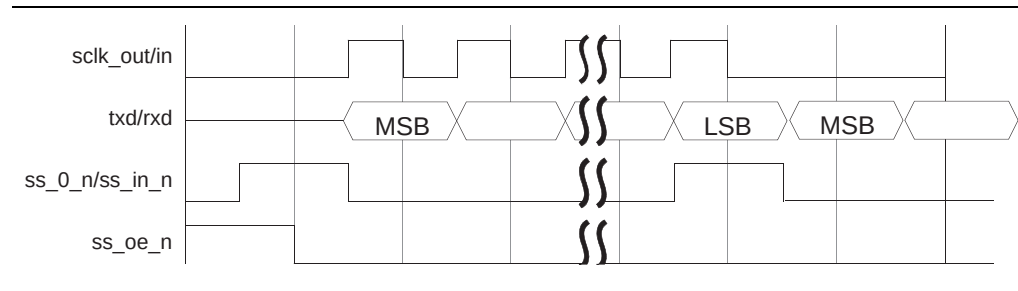Figure 19-8. SSP Serial Format Continuous Transfer



National Semiconductor Microwire Protocol

For the master SPI, data transmission begins as soon as the output enable signal is deasserted. One-half serial clock (`sclk_out`) period later, the first bit of the control is sent out on the `txd` line. The length of the control word can be in the range 1 to 16 bits and is set by writing bit field `CFS` (bits 15:12) in `CTRLR0`. The remainder of the control word is transmitted (propagated on the falling edge of `sclk_out`) by the SPI serial master. During this transmission, no data are present (high impedance) on the serial master's `rx` line. †

The direction of the data word is controlled by the `MDD` bit field (bit 1) in the Microwire Control Register (`MWCR`). When `MDD=0`, this indicates that the SPI serial master receives data from the external serial slave. One clock cycle after the LSB of the control word is transmitted, the slave peripheral responds with a dummy 0 bit, followed by the data frame, which can be 4 to 16 bits in length. Data are propagated on the falling edge of the serial clock and captured on the rising edge. †

Continuous transfers from the Microwire protocol can be sequential or nonsequential, and are controlled by the `MWMOD` bit field (bit 0) in the `MWCR`. †

Nonsequential continuous transfers occur, with the control word for the next transfer following immediately after the LSB of the current data word. †

The only modification needed to perform a continuous nonsequential transfer is to write more control words into the transmit FIFO buffer. †

During sequential continuous transfers, only one control word is transmitted from the SPI master. The transfer is started in the same manner as with nonsequential read operations, but the cycle is continued to read further data. The slave device automatically increments its address pointer to the next location and continues to provide data from that location. Any number of locations can be read in this manner; the SPI master terminates the transfer when the number of words received is equal to the value in the CTRLR1 register plus one. †

When MDD = 1, this indicates that the SPI serial master transmits data to the external serial slave. Immediately after the LSB of the control word is transmitted, the SPI master begins transmitting the data frame to the slave peripheral. †



The SPI controller does not support continuous sequential Microwire writes, where MDD = 1 and MWMOD = 1. †

Continuous transfers occur with the control word for the next transfer following immediately after the LSB of the current data word.

The Microwire handshaking interface can also be enabled for SPI master write operations to external serial-slave devices. To enable the handshaking interface, you must write 1 into the MHS bit field (bit 2) on the MWCR register. When MHS is set to 1, the SPI serial master checks for a ready status from the slave device before completing the transfer, or transmitting the next control word for continuous transfers. †

After the first data word has been transmitted to the serial-slave device, the SPI master polls the rxd input waiting for a ready status from the slave device. Upon reception of the ready status, the SPI master begins transmission of the next control word. After transmission of the last data frame has completed, the SPI master transmits a start bit to clear the ready status of the slave device before completing the transfer. †

In the SPI slave, data transmission begins with the falling edge of the slave select signal (ss_in_0). One-half serial clock (sclk_in) period later, the first bit of the control is present on the rxd line. The length of the control word can be in the range of 1 to 16 bits and is set by writing bit field CFS in the CTRLR0 register. The CFS bit field must be set to the size of the expected control word from the serial master. The remainder of the control word is received (captured on the rising edge of sclk_in) by the SPI serial slave. During this reception, no data are driven (high impedance) on the serial slave's txd line. †

The direction of the data word is controlled by the MDD bit field (bit 1) MWCR register. When MDD=0, this indicates that the SPI serial slave is to receive data from the external serial master. Immediately after the control word is transmitted, the serial master begins to drive the data frame onto the SPI slave rxd line. Data are propagated on the falling edge of the serial clock and captured on the rising edge. The slave-select signal is held active-low during the transfer and is deasserted one-half clock cycle later after the data are transferred. The SPI slave output enable signal is held inactive for the duration of the transfer. †

When MDD=1, this indicates that the SPI serial slave transmits data to the external serial master. Immediately after the LSB of the control word is transmitted, the SPI slave transmits a dummy 0 bit, followed by the 4- to 16-bit data frame on the txd line. †

Continuous transfers for a SPI slave occur in the same way as those specified for the SPI master. The SPI slave does not support the handshaking interface, as there is never a busy period. †

Figure 19-9 shows the timing diagram for a single SPI serial master read from an external serial slave.

Figure 19-9. Single SPI Serial Master Microwire Serial Transfer (MDD=0)


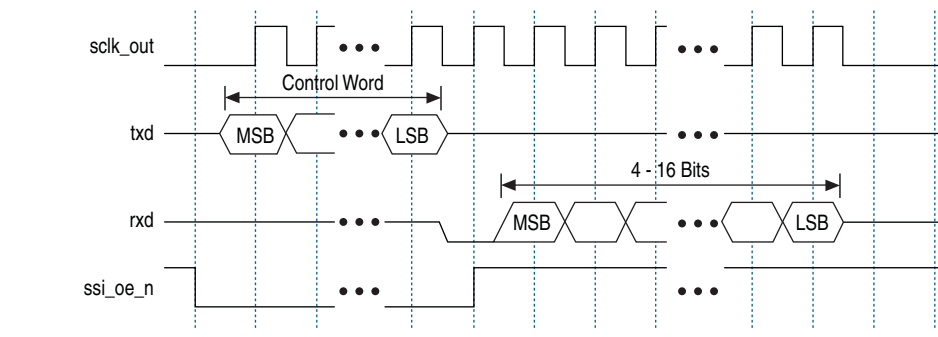


Figure 19-10 shows the timing diagram for a single SPI serial slave write to an external serial master.

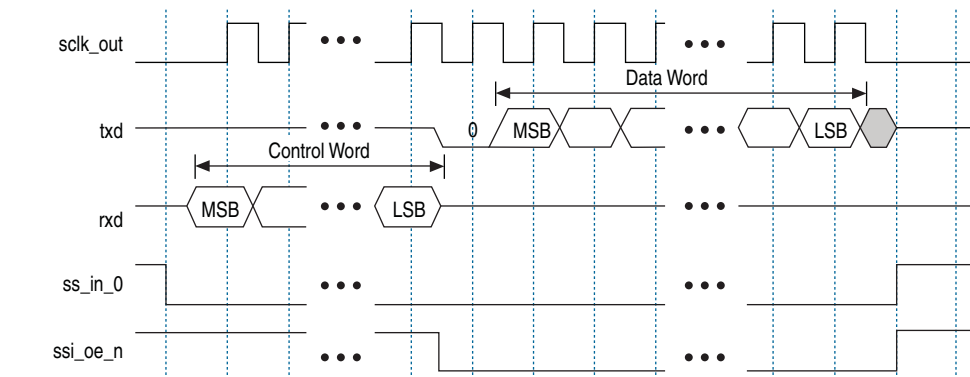Figure 19-10. Single SPI Slave Microwire Serial Transfer (MDD=1)



DMA Controller Interface

The SPI controller supports DMA signaling to indicate when the receive FIFO buffer has data ready to be read or when the transmit FIFO buffer needs data. It requires two DMA channels, one for transmit data and one for receive data. The SPI controller can issue single or burst DMA transfers and accepts burst acknowledges from the DMA. System software can trigger the DMA burst mode by programming an appropriate value into the threshold registers. The typical setting of the threshold register value is half full.

To enable the DMA Controller interface on the SPI controller, you must write the DMA Control Register (DMACR). Writing a 1 into the TDMAE bit field of DMACR register enables the SPI transmit handshaking interface. Writing a 1 into the RDMAE bit field of the DMACR register enables the SPI receive handshaking interface. †

Slave Interface

The host processor accesses data, control, and status information about the SPI controller through the slave interface. The SPI supports a data bus width of 32 bits. Accesses to the SPI peripheral are described in the following subsections. †

Control and Status Register Access

Control and status registers within the SPI controller are byte-addressable. The maximum width of the control or status register in the SPI controller is 16 bits. Therefore, all read and write operations to the SPI control and status registers require only one access. †

Data Register Access

The data register (DR) within the SPI controller is 16 bits wide in order to remain consistent with the maximum serial transfer size (data frame). A write operation to DR moves data from the slave write data bus into the transmit FIFO buffer. An read operation from DR moves data from the receive FIFO buffer onto the slave readback data bus. †



The DR register in the SPI controller occupies sixty-four 32-bit locations of the memory map to facilitate burst transfers. There are no burst transactions on the system bus itself, but SPI supports bursts on the system interconnect. Writing to any of these address locations has the same effect as pushing the data from the slave write data bus into the transmit FIFO buffer. Reading from any of these locations has the same effect as popping data from the receive FIFO buffer onto the slave readback data bus. The FIFO buffers on the SPI controller are not addressable.

Clocks and Resets

The SPI controller uses the clock and reset signals shown in [Table 19-1](#).

Table 19-1. SPI Controller Clocks and Resets

	Master	Slave
SPI clock	spi_m_clk	l4_main_clk
SPI bit-rate clock	sclk_out	sclk_in
Reset	spim_rst_n	spis_rst_n

SPI Programming Model


This section describes the programming model for the SPI controller based on the following master and slave transfers:

- Master SPI and SSP Serial Transfers
- Master Microwire Serial Transfers
- Slave SPI and SSP Serial Transfers
- Slave Microwire Serial Transfers
- Software Control for Slave Selection

Master SPI and SSP Serial Transfers

Figure 19-11 shows the software flow for a master SPI or SSP serial transfer.

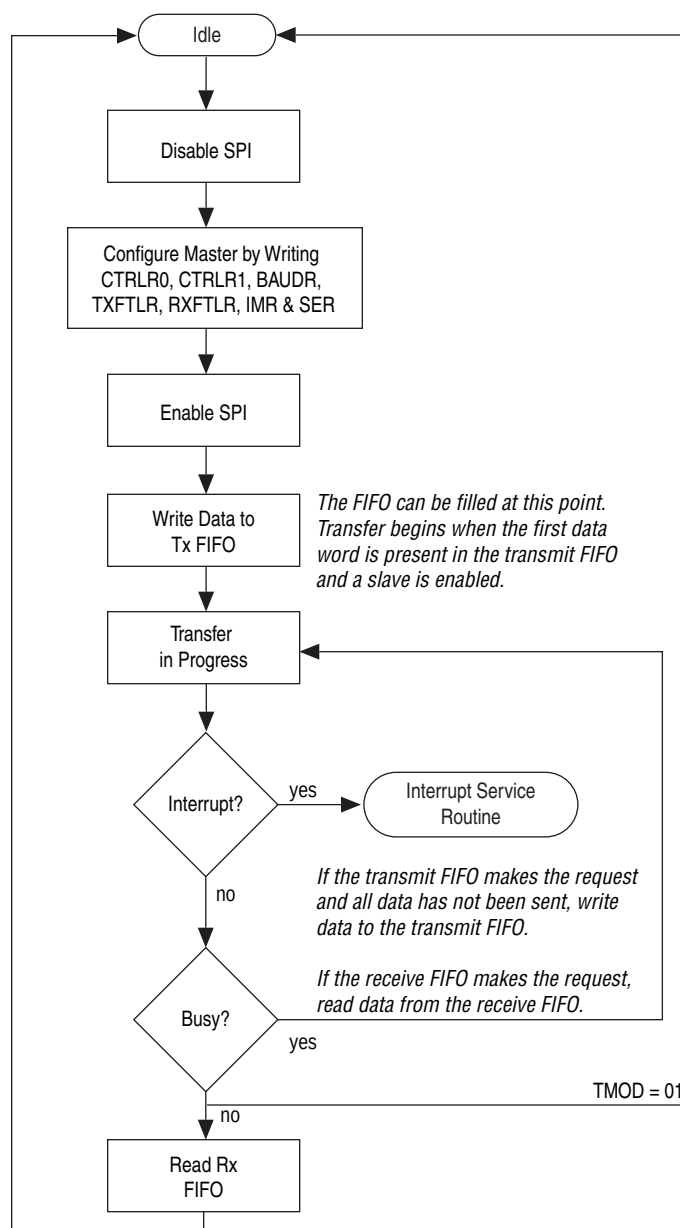Figure 19-11. Master SPI or SSP Serial Transfer Software Flow



To complete an SPI or SSP serial transfer from the SPI master, follow these steps:


1. If the SPI master is enabled, disable it by writing 0 to the SSI Enable register (SSIENR).

2. Set up the SPI master control registers for the transfer; you can set these transfers in any order.
 - Write Control Register 0 (CTRLR0). For SPI transfers, you must set the serial clock polarity and serial clock phase parameters identical to the target slave device.
 - If the transfer mode is receive only, write Control Register 1 (CTRLR1) with the number of frames in the transfer minus 1. For example, if you want to receive four data frames, write this register with 3.
 - Write the Baud Rate Select Register (BAUDR) to set the baud rate for the transfer.
 - Write the Transmit and Receive FIFO Threshold Level registers (TXFTLR and RXFTLR) to set FIFO buffer threshold levels.
 - Write the IMR register to set up interrupt masks.
 - Write the Slave Enable Register (SER) register here to enable the target slave for selection. If a slave is enabled here, the transfer begins as soon as one valid data entry is present in the transmit FIFO buffer. If no slaves are enabled prior to writing to the Data Register (DR), the transfer does not begin until a slave is enabled.
3. Enable the SPI master by writing 1 to the SSIENR register.
4. Write data for transmission to the target slave into the transmit FIFO buffer (write DR). If no slaves were enabled in the SER register at this point, enable it now to begin the transfer.
5. Poll the BUSY status to wait for the transfer to complete. If a transmit FIFO empty interrupt request is made, write the transmit FIFO buffer (write DR). If a receive FIFO full interrupt request is made, read the receive FIFO buffer (read DR).
6. The shift control logic stops the transfer when the transmit FIFO buffer is empty. If the transfer mode is receive only (TMOD = 2'b10), the shift control logic stops the transfer when the specified number of frames have been received. When the transfer is done, the BUSY status is reset to 0.
7. If the transfer mode is not transmit only (TMOD != 01), read the receive FIFO buffer until it is empty.
8. Disable the SPI master by writing 0 to SSIENR.

Master Microwire Serial Transfers

Figure 19-12 shows the software flow for a Microwire serial transfer.

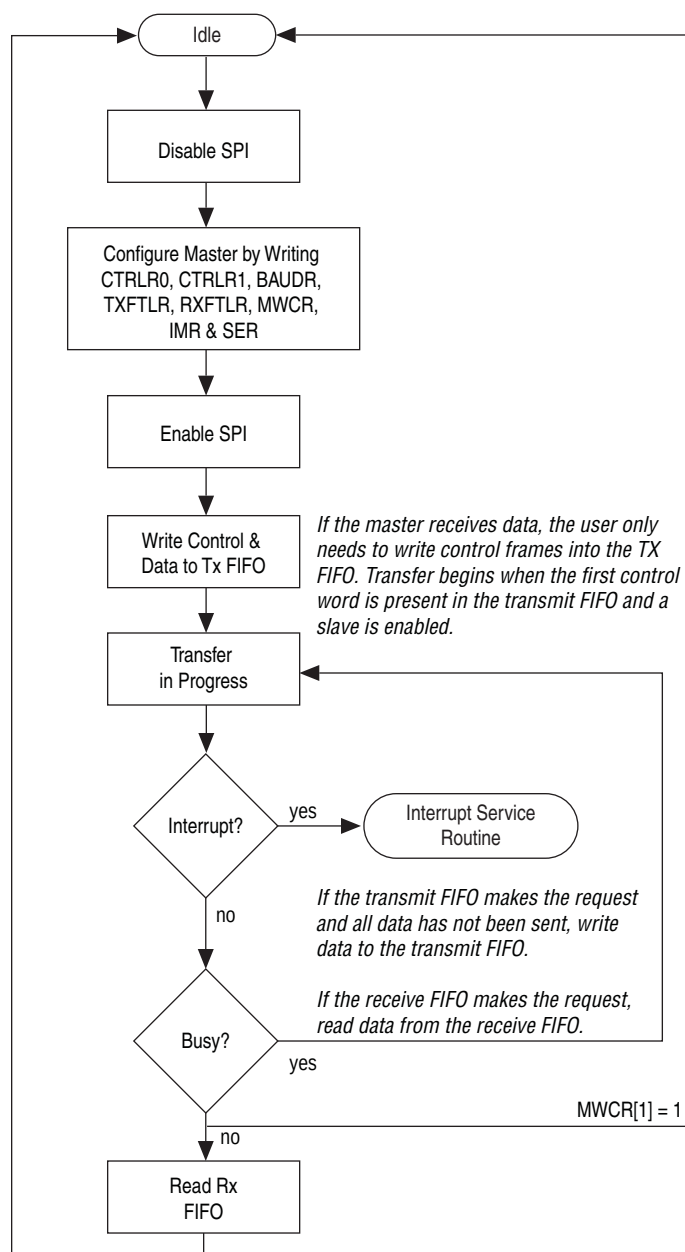Figure 19-12. Microwire Serial Transfer Software Flow



To complete a Microwire serial transfer from the SPI master, follow these steps:

1. If the SPI master is enabled, disable it by writing 0 to SSIENR.

2. Set up the SPI control registers for the transfer. You can set these registers in any order.
 - Write CTRLR0 to set transfer parameters. If the transfer is sequential and the SPI master receives data, write CTRLR1 with the number of frames in the transfer minus 1. For example, if you want to receive four data frames, write this register with 3.
 - Write BAUDR to set the baud rate for the transfer.
 - Write TXFTLR and RXFTLR to set FIFO buffer threshold levels.
 - Write the IMR register to set up interrupt masks.


You can write the SER register to enable the target slave for selection. If a slave is enabled here, the transfer begins as soon as one valid data entry is present in the transmit FIFO buffer. If no slaves are enabled prior to writing to the DR register, the transfer does not begin until a slave is enabled.

3. Enable the SPI master by writing 1 to the SSIENR register.
4. If the SPI master transmits data, write the control and data words into the transmit FIFO buffer (write DR). If the SPI master receives data, write the control word or words into the transmit FIFO buffer. If no slaves were enabled in the SER register at this point, enable now to begin the transfer.
5. Poll the BUSY status to wait for the transfer to complete. If a transmit FIFO empty interrupt request is made, write the transmit FIFO buffer (write DR). If a receive FIFO full interrupt request is made, read the receive FIFO buffer (read DR).
6. The shift control logic stops the transfer when the transmit FIFO buffer is empty. If the transfer mode is sequential and the SPI master receives data, the shift control logic stops the transfer when the specified number of data frames is received. When the transfer is done, the BUSY status is reset to 0.
7. If the SPI master receives data, read the receive FIFO buffer until it is empty.
8. Disable the SPI master by writing 0 to SSIENR.

Slave SPI and SSP Serial Transfers

Figure 19-13 shows the software flow for a slave SPI or SSP serial transfer.

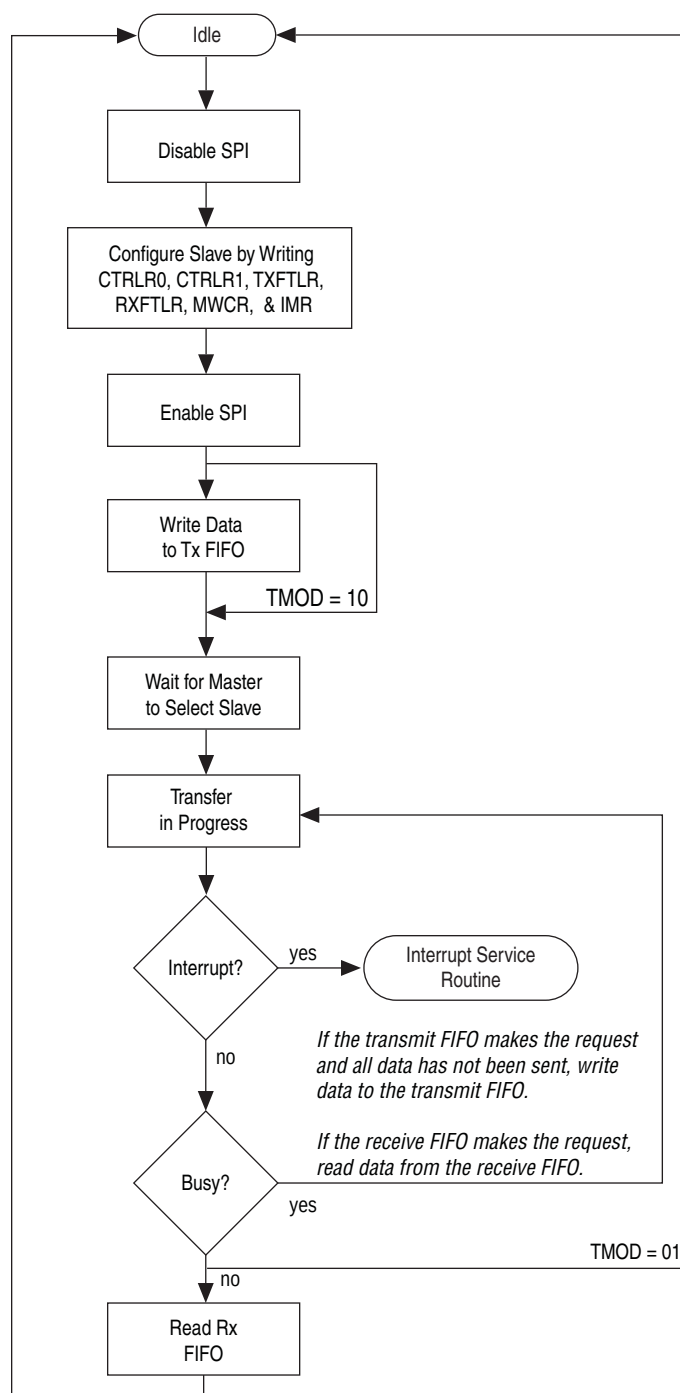Figure 19-13. Slave SPI or SSP Serial Transfer Software Flow



To complete a continuous serial transfer from a serial master to the SPI slave, follow these steps:

1. If the SPI slave is enabled, disable it by writing 0 to SSIENR.

2. Set up the SPI control registers for the transfer. You can set these registers in any order.
 - Write CTRLR0 (for SPI transfers, set SCPH and SCPOL identical to the master device).
 - Write TXFTLR and RXFTLR to set FIFO buffer threshold levels.
 - Write the IMR register to set up interrupt masks.
3. Enable the SPI slave by writing 1 to the SSIENR register.
4. If the transfer mode is transmit and receive (TMOD=2'b00) or transmit only (TMOD=2'b01), write data for transmission to the master into the transmit FIFO buffer (write DR). If the transfer mode is receive only (TMOD=2'b10), you need not write data into the transmit FIFO buffer. The current value in the transmit shift register is retransmitted.
5. The SPI slave is now ready for the serial transfer. The transfer begins when a serial-master device selects the SPI slave.
6. When the transfer is underway, the BUSY status can be polled to return the transfer status. If a transmit FIFO empty interrupt request is made, write the transmit FIFO buffer (write DR). If a receive FIFO full interrupt request is made, read the receive FIFO buffer (read DR).
7. The transfer ends when the serial master removes the select input to the SPI slave. When the transfer is completed, the BUSY status is reset to 0.
8. If the transfer mode is not transmit only (TMOD != 01), read the receive FIFO buffer until empty.
9. Disable the SPI slave by writing 0 to SSIENR.

Slave Microwire Serial Transfers

For SPI slave, the Microwire protocol operates in much the same way as the SPI protocol. There is no decode of the control frame by the SPI slave.

Software Control for Slave Selection

When using software to select slave devices, the input select lines from serial slave devices is connected to a single slave select output on the SPI master. The following examples show the software flow for slave selection:

- For SPI master:
 1. If the SPI master is enabled, disable it by writing 0 to SSIENR.
 2. Write CTRLR0 to match the required transfer.
 3. If the transfer is receive only, write the number of frames into CTRLR1.
 4. Write BAUDR to set the transfer baud rate.
 5. Write TXFTLR and RXFTLR to set FIFO buffer threshold levels.
 6. Write IMR register to set interrupt masks.
 7. Write SER register bit[0] to logic '1' to select slave 1 in this example.

8. Write SSIENR register bit[0] to logic '1' to enable SPI master.
- For SPI slave:
9. If the SPI slave is enabled, disable it by writing 0 to SSIENR.
10. Write CTRLR0 to match the required transfer.
11. Write TXFTLR and RXFTLR to set FIFO buffer threshold levels.
12. Write IMR register to set interrupt masks.
13. Write SSIENR register bit[0] to logic '1' to enable SPI slave.
14. If the SPI slave transmits data, write data into TX FIFO buffer. Note all other SPI slaves are disabled (SSIENR = 0) and therefore will not respond to an active level on their `ss_in_n` port.

The FIFO buffer depth (FIFO_DEPTH) for both the RX and TX buffers in the SPI controller is 256 entries.

DMA Controller Operation

To enable the DMA controller interface on the SPI controller, you must write the DMA Control Register (DMACR). Writing a 1 to the TDMAE bit field of DMACR register enables the SPI controller transmit handshaking interface. Writing a 1 to the RDMAE bit field of the DMACR register enables the SPI controller receive handshaking.†



For details about the DMA controller, refer to the *DMA Controller* chapter in volume 3 of the *Arria V Device Handbook*.

DMA Operation

For more information about the DMA operation, refer to the ARM DMA chapter.

Transmit FIFO Buffer Underflow

During SPI serial transfers, transmit FIFO buffer requests are made to the DMA Controller whenever the number of entries in the transmit FIFO buffer is less or equal to the value in DMA Transmit Data Level Register (DMATDLR); also known as the watermark level. The DMA Controller responds by writing a burst of data to the transmit FIFO buffer, of length specified as DMA burst length.†



For details about the DMA burst length microcode setup, refer to the *DMA Controller* chapter in volume 3 of the *Arria V Device Handbook*.

Data should be fetched from the DMA often enough for the transmit FIFO buffer to perform serial transfers continuously, that is, when the FIFO buffer begins to empty, another DMA request should be triggered. Otherwise, the FIFO buffer will run out of data (underflow). To prevent this condition, you must set the watermark level correctly.†

Transmit Watermark Level

Consider the example where the assumption is made: †


$$\text{DMA burst length} = \text{FIFO\_DEPTH} - \text{DMATDLR}$$

Here the number of data items to be transferred in a DMA burst is equal to the empty space in the transmit FIFO buffer. Consider the following two different watermark level settings. †

- Case 1: DMATDLR = 64: †
 - Transmit FIFO watermark level = DMATDLR = 64: †
 - DMA burst length = FIFO_DEPTH - DMATDLR = 192: †
 - SPI transmit FIFO_DEPTH = 256: †
 - Block transaction size = 960: †

Figure 19-14 shows the transmit FIFO buffer when the watermark level equals 64.

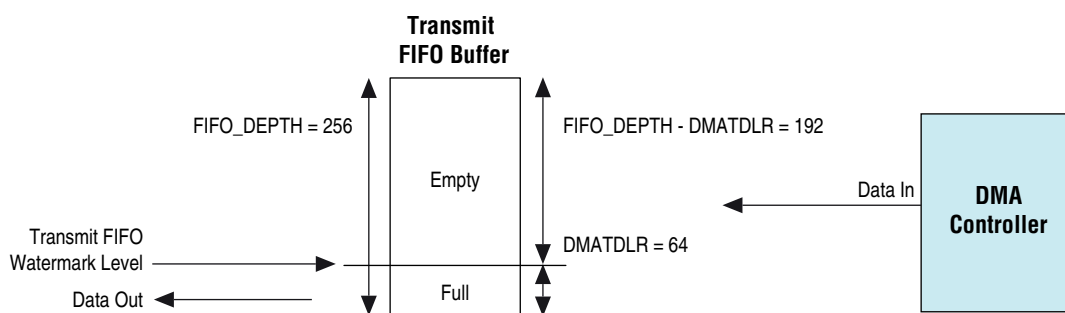Figure 19-14. Transmit FIFO Watermark Level = 64



The number of burst transactions needed equals the block size divided by the number of data items per burst:


$$\text{Block transaction size} / \text{DMA burst length} = 960 / 192 = 5$$

The number of burst transactions in the DMA block transfer is 5. But the watermark level, DMATDLR, is quite low. Therefore, the probability of transmit underflow is high where the SPI serial transmit line needs to transmit data, but there is no data left in the transmit FIFO buffer. This occurs because the DMA has not had time to service the DMA request before the FIFO buffer becomes empty.

- Case 2: DMATDLR = 192†
 - Transmit FIFO watermark level = DMATDLR = 192 †
 - DMA burst length = FIFO_DEPTH - DMATDLR = 64 †
 - SPI transmit FIFO_DEPTH = 256 †
 - Block transaction size = 960 †

Figure 19-15 shows the transmit FIFO buffer when the watermark level equals 192.

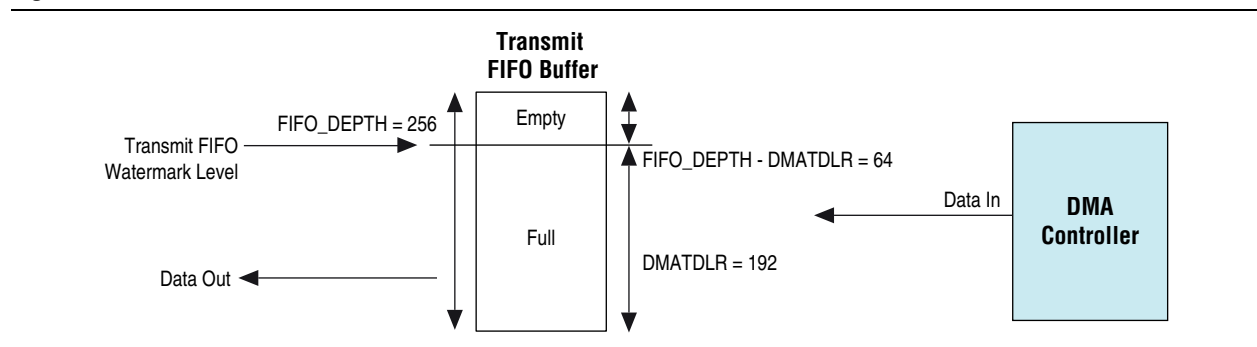Figure 19-15. Transmit FIFO Watermark Level = 192



Number of burst transactions in block: †

Block transaction size/DMA burst length = $960/64 = 15$ †

In this block transfer, there are 15 destination burst transactions in a DMA block transfer. But the watermark level, DMATDLR, is high. Therefore, the probability of SPI transmit underflow is low because the DMA controller has plenty of time to service the destination burst transaction request before the SPI transmit FIFO buffer becomes empty. †

Thus, the second case has a lower probability of underflow at the expense of more burst transactions per block. This provides a potentially greater amount of bursts per block and worse bus utilization than the former case. †

Therefore, the goal in choosing a watermark level is to minimize the number of transactions per block, while at the same time keeping the probability of an underflow condition to an acceptable level. In practice, this is a function of the ratio of the rate at which the SPI transmits data to the rate at which the DMA can respond to destination burst requests. †

Transmit FIFO Buffer Overflow

Setting the DMA transaction burst length to a value greater than the watermark level that triggers the DMA request may cause overflow when there is not enough space in the transmit FIFO buffer to service the destination burst request. Therefore, the following equation must be adhered to in order to avoid overflow: †

$$\text{DMA burst length} \leq \text{FIFO\_DEPTH} - \text{DMATDLR}$$

In case 2: DMATDLR = 192, the amount of space in the transmit FIFO buffer at the time of the burst request is made is equal to the DMA burst length. Thus, the transmit FIFO buffer may be full, but not overflowed, at the completion of the burst transaction. †

Therefore, for optimal operation, DMA burst length should be set at the FIFO buffer level that triggers a transmit DMA request; that is: †

$$\text{DMA burst length} = \text{FIFO\_DEPTH} - \text{DMATDLR}$$

Adhering to this equation reduces the number of DMA bursts needed for block transfer, and this in turn improves bus utilization. †



The transmit FIFO buffer will not be full at the end of a DMA burst transfer if the SPI controller has successfully transmitted one data item or more on the serial transmit line during the transfer. †

Receive FIFO Buffer Overflow

During SPI serial transfers, receive FIFO buffer requests are made to the DMA whenever the number of entries in the receive FIFO buffer is at or above the DMA Receive Data Level Register, that is $\text{DMATDLR} + 1$. This is known as the watermark level. The DMA responds by fetching a burst of data from the receive FIFO buffer. †

Data should be fetched by the DMA often enough for the receive FIFO buffer to accept serial transfers continuously, that is, when the FIFO buffer begins to fill, another DMA transfer is requested. Otherwise the FIFO buffer will fill with data (overflow). To prevent this condition, the user must set the watermark level correctly. †

Choosing Receive Watermark Level

Similar to choosing the transmit watermark level, the receive watermark level, $\text{DMATDLR} + 1$, should be set to minimize the probability of overflow, as shown in Figure 8. It is a trade off between the number of DMA burst transactions required per block versus the probability of an overflow occurring. †

Receive FIFO Buffer Underflow

Setting the source transaction burst length greater than the watermark level can cause underflow where there is not enough data to service the source burst request. Therefore, the following equation must be adhered to avoid underflow: †

$$\text{DMA burst length} = \text{DMATDLR} + 1$$

If the number of data items in the receive FIFO buffer is equal to the source burst length at the time of the burst request is made, the receive FIFO buffer may be emptied, but not underflowed, at the completion of the burst transaction. For optimal operation, DMA burst length should be set at the watermark level, $\text{DMATDLR} + 1$. †


Adhering to this equation reduces the number of DMA bursts in a block transfer, which in turn can improve bus utilization. †



The receive FIFO buffer will not be empty at the end of the source burst transaction if the SPI controller has successfully received one data item or more on the serial receive line during the burst. †

Figure 19-16 shows the receive FIFO buffer.

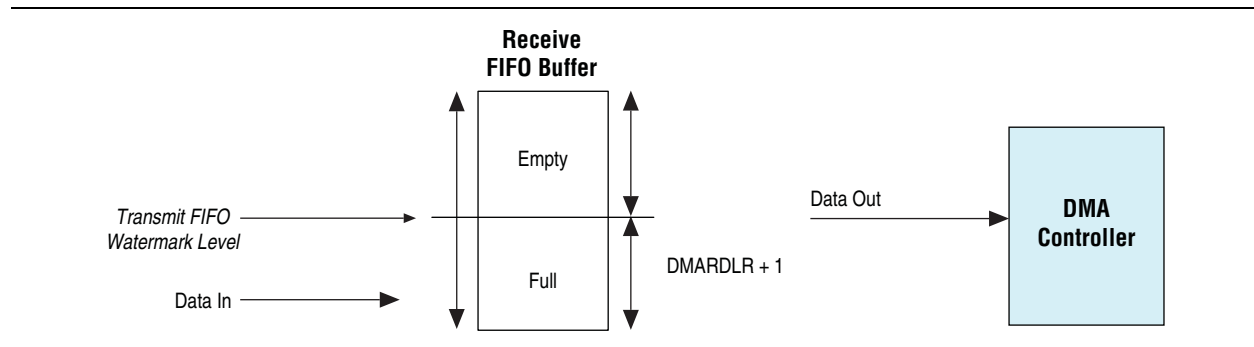Figure 19-16. Receive FIFO Buffer



SPI Controller Address Map and Register Definitions

The address map and register definitions reside in [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the link for any of the following module instances:

- **spis0**
- **spis1**
- **spim0**
- **spim1**

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.

The base addresses of all modules are also listed in the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 19-2 shows the revision history for this document.

Table 19-2. Document Revision History

Date	Version	Changes
November 2012	1.2	Minor updates.
May 2012	1.1	Added programming model, address map and register definitions, clocks, and reset sections.
January 2012	1.0	Initial release.

The I²C controller provides support for a communication link between integrated circuits on a board. It is a simple two-wire bus which consists of a serial data line (SDA) and a serial clock (SCL) for use in applications such as temperature sensors and voltage level translators to EEPROMs, A/D and D/A converters, CODECs, and many types of microprocessors. †

The hard processor system (HPS) provides four I²C controllers to enable system software to communicate serially with I²C buses. Each I²C controller can operate in master or slave mode, and support standard mode of up to 100 kilobits per second (Kbps) or fast mode of up to 400 Kbps. These I²C controllers are instances of the Synopsys® DesignWare® APB I²C (DW_apb_i2c) controller.



Each I²C controller must be programmed to operate in either master or slave mode only. Operating as a master and slave simultaneously is not supported. †

Features of the I²C Controller

The I²C controller has the following features:

- Maximum clock speed of up to 400 Kbps
- One of the following I²C operations:
 - A master in an I²C system and programmed only as a master †
 - A slave in an I²C system and programmed only as a slave †
- 7- or 10-bit addressing †
- Mixed read and write combined-format transactions in both 7-bit and 10-bit addressing mode †
- Bulk transmit mode †
- Transmit and receive buffers †
- Handles bit and byte waiting at all bus speeds †
- DMA handshaking interface †

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

Portions © 2011 Synopsys, Inc. Used with permission. All rights reserved. Synopsys & DesignWare are registered trademarks of Synopsys, Inc. All documentation is provided "as is" and without any warranty. Synopsys expressly disclaims any and all warranties, express, implied, or otherwise, including the implied warranties of merchantability, fitness for a particular purpose, and non-infringement, and any warranties arising out of a course of dealing or usage of trade.

†Paragraphs marked with the dagger (†) symbol are Synopsys Proprietary. Used with permission.




I²C Controller Block Diagram and System Integration

The I²C controller consists of a slave interface, an I²C interface, and FIFO logic to buffer data between the two interfaces. †

The host processor accesses data, control, and status information about the I²C controller through a 32-bit slave interface. Figure 20-1 shows the I²C controller block diagram.

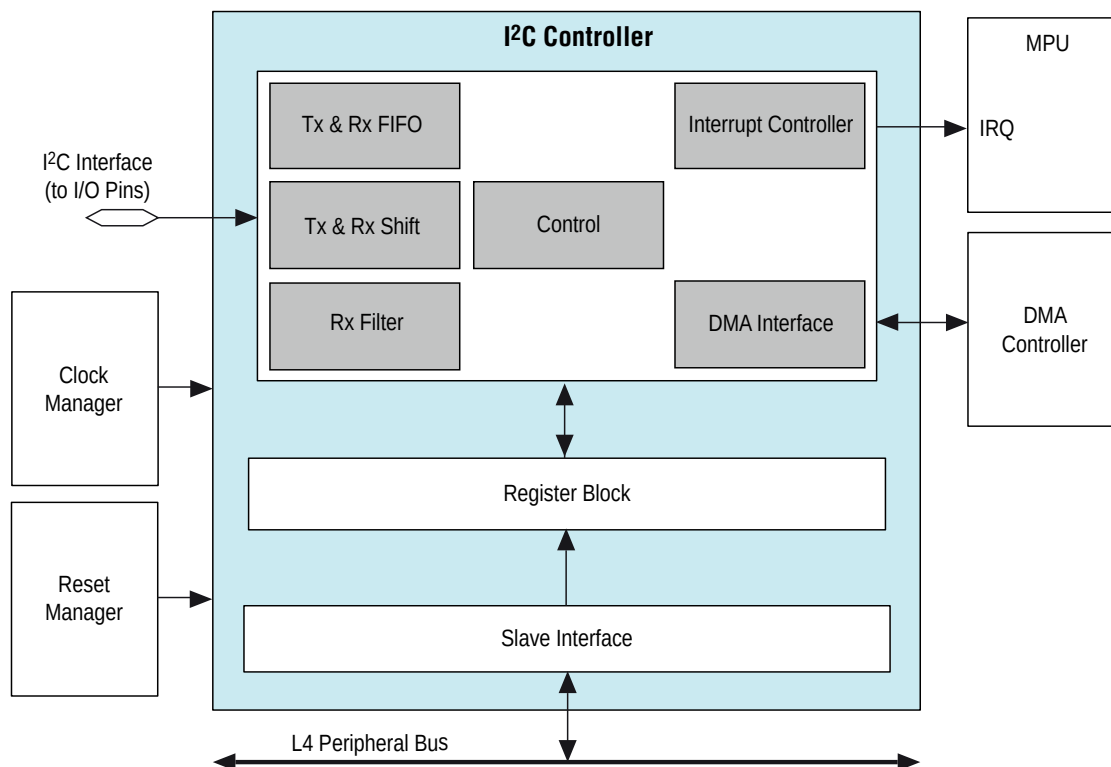Figure 20-1. I²C Controller Block Diagram



The I²C controller consists of the following modules and interfaces:

- Slave interface for control and status register (CSR) accesses and DMA transfers, allowing a master to access the CSRs and the DMA to read or write data directly.
- Two FIFO buffers for transmit and receive data, which hold the Rx FIFO and Tx FIFO buffer register banks and controllers, along with their status levels. †
- Shift logic for parallel-to-serial and serial-to-parallel conversion
 - Rx shift – Receives data into the design and extracts it in byte format. †
 - Tx shift – Presents data supplied by CPU for transfer on the I²C bus. †
- Control logic responsible for implementing the I²C protocol.
- DMA interface that generates handshaking signals to the DMA controller in order to automate the data transfer without CPU intervention. †

- Interrupt controller that generates raw interrupt and interrupt flags, allowing them to be set and cleared. †
- Receive filter for detecting events, such as start and stop conditions, in the bus; for example, start, stop and arbitration lost. †

Functional Description of the I²C Controller

This section describes the functional operation of the I²C controller.

Feature Usage

The I²C controller can operate in standard mode (with data rates 0 to 100 Kbps) or fast mode (with data rates less than or equal to 400 Kbps). Additionally, fast mode devices are downward compatible. For instance, fast mode devices can communicate with standard mode devices in 0 to 100 Kbps I²C bus system. However, standard mode devices are not upward compatible and should not be incorporated in a fast-mode I²C bus system as they cannot follow the higher transfer rate and therefore unpredictable states would occur. †

You can attach any I²C controller to an I²C-bus and every device can talk with any master, passing information back and forth. There needs to be at least one master (such as a microcontroller or DSP) on the bus and there can be multiple masters, which require them to arbitrate for ownership. Multiple masters and arbitration are explained later in this chapter. †

Behavior

You can control the I²C controller via software to be either mode:

- An I²C master only, communicating with other I²C slaves; OR
- An I²C slave only, communicating with one or more I²C masters.


The master is responsible for generating the clock and controlling the transfer of data. The slave is responsible for either transmitting or receiving data to/from the master. The acknowledgement of data is sent by the device that is receiving data, which can be either a master or a slave. As mentioned previously, the I²C protocol also allows multiple masters to reside on the I²C bus and uses an arbitration procedure to determine bus ownership. †

Each slave has a unique address that is determined by the system designer. When a master wants to communicate with a slave, the master transmits a START/RESTART condition that is then followed by the slave's address and a control bit (R/W) to determine if the master wants to transmit data or receive data from the slave. The slave then sends an acknowledge (ACK) pulse after the address. †

If the master (master-transmitter) is writing to the slave (slave-receiver), the receiver receives one byte of data. This transaction continues until the master terminates the transmission with a STOP condition. If the master is reading from a slave (master-receiver), the slave transmits (slave-transmitter) a byte of data to the master, and the master then acknowledges the transaction with an ACK pulse. This transaction continues until the master terminates the transmission by not acknowledging (NACK) the transaction after the last byte is received, and then the master issues a STOP condition or addresses another slave after issuing a RESTART condition. †

Figure 20-2 illustrates the data transfer behavior on the I²C bus.

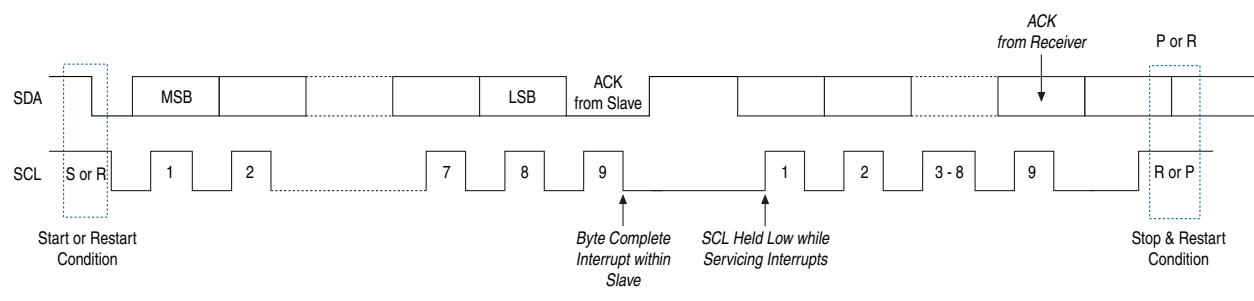Figure 20-2. Data transfer on the I²C Bus †



The I²C controller is a synchronous serial interface. The SDA line is a bidirectional signal and changes only while the SCL line is low, except for STOP, START, and RESTART conditions. The output drivers are open-drain or open-collector to perform wire-AND functions on the bus. The maximum number of devices on the bus is limited by only the maximum capacitance specification of 400 pF. Data is transmitted in byte packages. †

START and STOP Generation

When operating as a master, putting data into the transmit FIFO causes the I²C controller to generate a START condition on the I²C bus. Allowing the transmit FIFO to empty causes the I²C controller to generate a STOP condition on the I²C bus. †

When operating as a slave, the I²C controller does not generate START and STOP conditions, as per the protocol. However, if a read request is made to the I²C controller, it holds the SCL line low until read data has been supplied to it. This stalls the I²C bus until read data is provided to the slave I²C controller, or the I²C controller slave is disabled by writing a 0 to IC_ENABLE register. †

Combined Formats

The I²C controller supports mixed read and write combined format transactions in both 7-bit and 10-bit addressing modes. †

The I²C controller does not support mixed address and mixed address format—that is, a 7-bit address transaction followed by a 10-bit address transaction or vice versa—combined format transactions. †

To initiate combined format transfers, the IC_RESTART_EN bit in the IC_CON register should be set to 1. With this value set and operating as a master, when the I²C controller completes an I²C transfer, it checks the transmit FIFO and executes the next transfer. If the direction of this transfer differs from the previous transfer, the combined format is used to issue the transfer. If the transmit FIFO is empty when the current I²C transfer completes, a STOP is issued and the next transfer is issued following a START condition. †

Protocol Details


This section describes the I²C controller protocols.

START and STOP Conditions

When the bus is idle, both the SCL and SDA signals are pulled high through pull-up resistors on the bus. When the master wants to start a transmission on the bus, the master issues a START condition. This is defined to be a high-to-low transition of the SDA signal while SCL is 1. When the master wants to terminate the transmission, the master issues a STOP condition. This is defined to be a low-to-high transition of the SDA line while SCL is 1. †

Figure 20–3 shows the timing of the START and STOP conditions. When data is being transmitted on the bus, the SDA line must be stable when SCL is 1. †

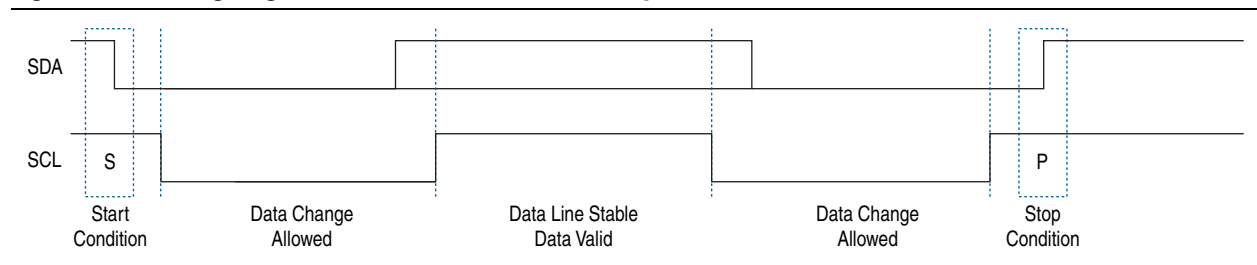Figure 20–3. Timing Diagram for START and STOP Condition †





The signal transitions for the START or STOP condition, as shown in Figure 20-3, reflect those observed at the output signals of the master driving the I²C bus. Care should be taken when observing the SDA or SCL signals at the input signals of the slave(s), because unequal line delays may result in an incorrect SDA or SCL timing relationship. †


Addressing Slave Protocol

There are two address formats: the 7-bit address format and the 10-bit address format.

7-Bit Address Format

During the 7-bit address format, the first seven bits (bits 7:1) of the first byte set the slave address and the LSB bit (bit 0) is the R/W bit as shown in Figure 20-4. When bit 0 (R/W) is set to 0, the master writes to the slave. When bit 0 (R/W) is set to 1, the master reads from the slave. †

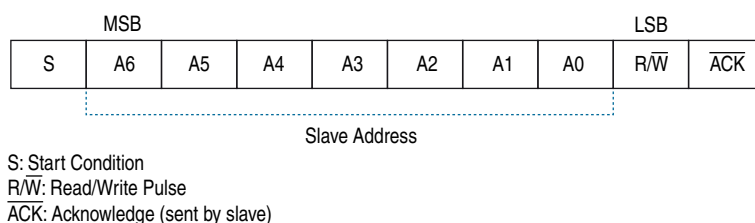Figure 20-4. 7-bit Address Format †



10-Bit Address Format

During 10-bit addressing, two bytes are transferred to set the 10-bit address. The transfer of the first byte contains the following bit definition. The first five bits (bits 7:3) notify the slaves that this is a 10-bit transfer followed by the next two bits (bits 2:1), which set the slaves address bits 9:8, and the LSB bit (bit 0) is the R/W bit. The second byte transferred sets bits 7:0 of the slave address. Figure 20-5 shows the 10-bit address format. †

Figure 20-5. 10-Bit Address Format †

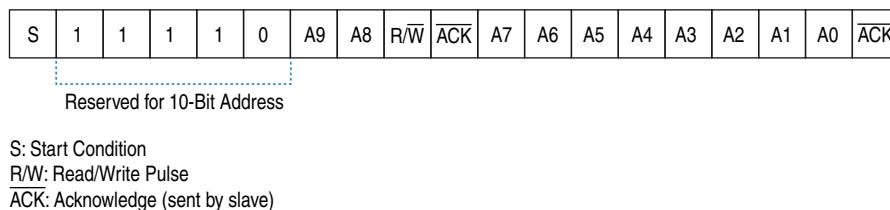


Table 20-1 defines the special purpose and reserved first byte addresses. †

Table 20-1. I²C Definition of Bits in First Byte †

Slave Address	R/W Bit	Description
0000 000	0	General call address. The I ² C controller places the data in the receive buffer and issues a general call interrupt.
0000 000	1	START byte. For more details, refer to “ START BYTE Transfer Protocol ” on page 20-9
0000 001	X	CBUS address. The I ² C controller ignores these accesses.
0000 010	X	Reserved
0000 011	X	Reserved
0000 1XX	X	Unused
1111 1XX	X	Reserved
1111 0XX	X	10-bit slave addressing.
Note to Table 20-1: (1) ‘X’ indicates do not care.		

Transmitting and Receiving Protocol


The master can initiate data transmission and reception to or from the bus, acting as either a master-transmitter or master-receiver. A slave responds to requests from the master to either transmit data or receive data to or from the bus, acting as either a slave-transmitter or slave-receiver, respectively. †

Master-Transmitter and Slave-Receiver

All data is transmitted in byte format, with no limit on the number of bytes transferred per data transfer. After the master sends the address and R/W bit or the master transmits a byte of data to the slave, the slave-receiver must respond with the acknowledge signal (ACK). When a slave-receiver does not respond with an ACK pulse, the master aborts the transfer by issuing a STOP condition. The slave must leave the SDA line high so that the master can abort the transfer. †

If the master-transmitter is transmitting data as shown in Figure 20-6, then the slave-receiver responds to the master-transmitter with an ACK pulse after every byte of data is received. †

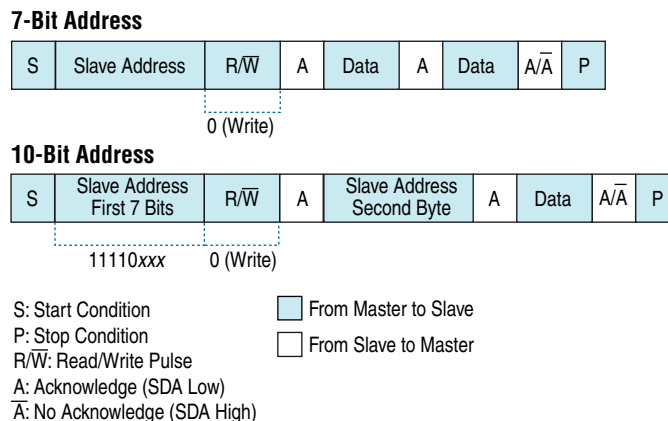Figure 20-6. Master-Transmitter Protocol †




Master-Receiver and Slave-Transmitter

If the master is receiving data as shown in Figure 20-7, then the master responds to the slave-transmitter with an ACK pulse after a byte of data has been received, except for the last byte. This is the way the master-receiver notifies the slave-transmitter that this is the last byte. The slave-transmitter relinquishes the SDA line after detecting the No Acknowledge (NACK) bit so that the master can issue a STOP condition. †

When a master does not want to relinquish the bus with a STOP condition, the master can issue a RESTART condition. This is identical to a START condition except it occurs after the ACK pulse. Operating in master mode, the I²C controller can then communicate with the same slave using a transfer of a different direction. For a description of the combined format transactions that the I²C controller supports, refer to "Combined Formats" on page 20-5. †

 The I²C controller must be inactive on the serial port (I2C_DYNAMIC_TAR_UPDATE = 1) before the target slave address register, IC_TAR can be reprogrammed. †

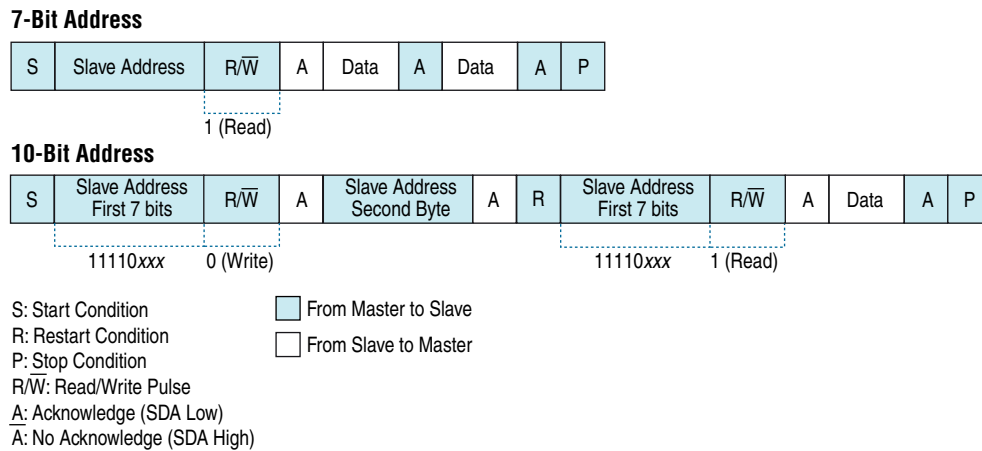
Figure 20-7. Master-Receiver Protocol †



START BYTE Transfer Protocol

The START BYTE transfer protocol is set up for systems that do not have an on-board dedicated I²C hardware module. When the I²C controller is set as a slave, it always samples the I²C bus at the highest speed supported so that it never requires a START BYTE transfer. However, when I²C controller is set as a master, it supports the generation of START BYTE transfers at the beginning of every transfer in case a slave device requires it. This protocol consists of seven zeros being transmitted followed by a 1, as illustrated in [Figure 20-8](#). This allows the processor that is polling the bus to under-sample the address phase until the microcontroller detects a 0. Once the microcontroller detects a 0, it switches from the under sampling rate to the correct rate of the master. †

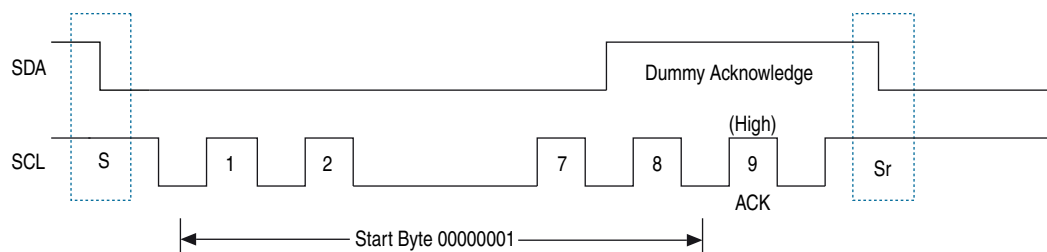Figure 20-8. START BYTE Transfer †



The START BYTE has the following procedure: †

1. Master generates a START condition. †
2. Master transmits the START byte (0000 0001). †
3. Master transmits the ACK clock pulse. (Present only to conform with the byte handling format used on the bus) †
4. No slave sets the ACK signal to 0. †

5. Master generates a RESTART (R) condition. †

A hardware receiver does not respond to the START BYTE because it is a reserved address and resets after the RESTART condition is generated. †

Multiple Master Arbitration


The I²C controller bus protocol allows multiple masters to reside on the same bus. If there are two masters on the same I²C-bus, there is an arbitration procedure if both try to take control of the bus at the same time by simultaneously generating a START condition. Once a master (for example, a microcontroller) has control of the bus, no other master can take control until the first master sends a STOP condition and places the bus in an idle state. †

Arbitration takes place on the SDA line, while the SCL line is 1. The master, which transmits a 1 while the other master transmits 0, loses arbitration and turns off its data output stage. The master that lost arbitration can continue to generate clocks until the end of the byte transfer. If both masters are addressing the same slave device, the arbitration could go into the data phase. †

Upon detecting that it has lost arbitration to another master, the I²C controller stops generating SCL. †

Figure 20-9 illustrates the timing of when two masters are arbitrating on the bus.

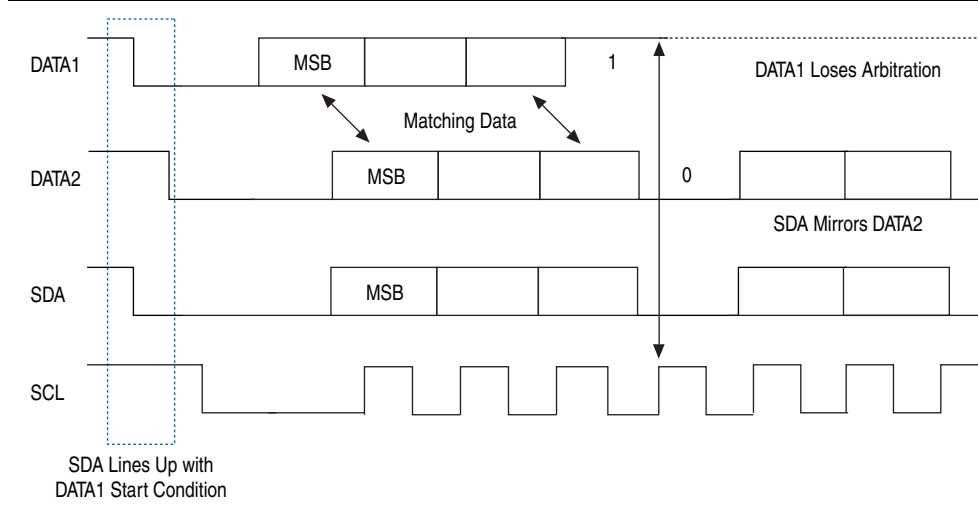Figure 20-9. Multiple Master Arbitration †



The bus control is determined by address or master code and data sent by competing masters, so there is no central master nor any order of priority on the bus. †

Arbitration is not allowed between the following conditions: †

- A RESTART condition and a data bit †
- A STOP condition and a data bit †
- A RESTART condition and a STOP condition †


Slaves are not involved in the arbitration process. †

Clock Synchronization

When two or more masters try to transfer information on the bus at the same time, they must arbitrate and synchronize the SCL clock. All masters generate their own clock to transfer messages. Data is valid only during the high period of SCL clock. Clock synchronization is performed using the wired-AND connection to the SCL signal. When the master transitions the SCL clock to 0, the master starts counting the low time of the SCL clock and transitions the SCL clock signal to 1 at the beginning of the next clock period. However, if another master is holding the SCL line to 0, then the master goes into a HIGH wait state until the SCL clock line transitions to 1. †

All masters then count off their high time, and the master with the shortest high time transitions the SCL line to 0. The masters then counts out their low time and the one with the longest low time forces the other master into a HIGH wait state. Therefore, a synchronized SCL clock is generated, which is illustrated in Figure 20-10. Optionally, slaves may hold the SCL line low to slow down the timing on the I²C bus. †

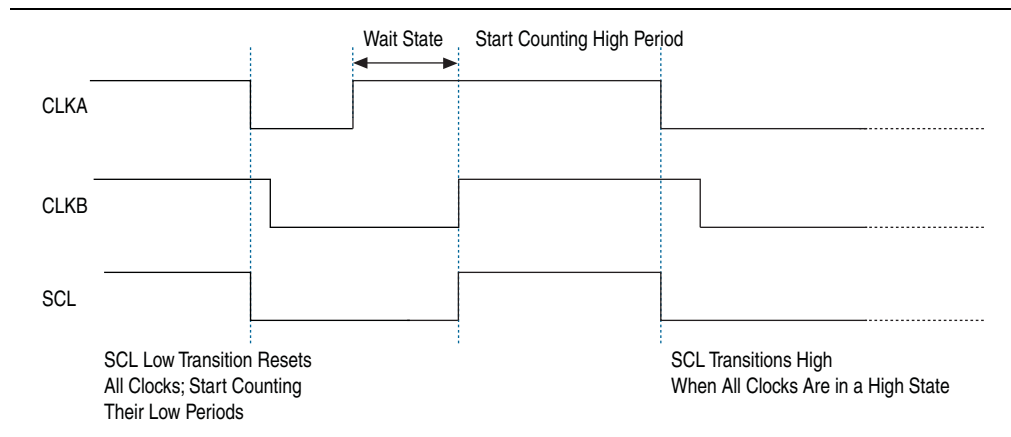Figure 20-10. Multiple Master Clock Synchronization †



Clock Frequency Configuration

When you configure the I²C controller as a master, the SCL count registers must be set before any I²C bus transaction can take place in order to ensure proper I/O timing. † There are four SCL count registers:

- Standard speed I²C clock SCL high count, IC_SS_SCL_HCNT †
- Standard speed I²C clock SCL low count, IC_SS_SCL_LCNT †
- Fast speed I²C clock SCL high count, IC_FS_SCL_HCNT †
- Fast speed I²C clock SCL low count, IC_FS_SCL_LCNT †



It is not necessary to program any of the SCL count registers if the I²C controller is enabled to operate only as an I²C slave, since these registers are used only to determine the SCL timing requirements for operation as an I²C master. †

Minimum High and Low Counts

When the I²C controller operates as an I²C master in both transmit and receive transfers, the minimum value that can be programmed in the SCL low count registers is 8 while the minimum value allowed for the SCL high count registers is 6. †

The minimum value of 8 for the low count registers is due to the time required for the I²C controller to drive SDA after a negative edge of SCL. The minimum value of 6 for the high count register is due to the time required for the I²C controller to sample SDA during the high period of SCL. †

The I²C controller adds one cycle to the low count register values in order to generate the low period of the SCL clock.

The I²C controller adds seven cycles to the high count register values in order to generate the high period of the SCL clock. This is due to the following factors: †

- The digital filtering applied to the SCL line incurs a delay of four `l4_sp_clk` cycles. This filtering includes metastability removal and a 2-out-of-3 majority vote processing on SDA and SCL edges. †
- Whenever SCL is driven 1 to 0 by the I²C controller—that is, completing the SCL high time—an internal logic latency of three `l4_sp_clk` cycles incurs. †

Consequently, the minimum SCL low time of which the I²C controller is capable is nine (9) `l4_sp_clk` periods (8+1), while the minimum SCL high time is thirteen (13) `l4_sp_clk` periods (6+1+3+3). †

Calculating High and Low Counts

The calculations below show an example of how to calculate SCL high and low counts for each speed mode in the I²C controller.

The equation to calculate the proper number of l4_sp_clk clock pulses required for setting the proper SCL clocks high and low times is as follows: †

Equation 20-1.

$IC\_HCNT = \text{ceil}(\text{MIN\_SCL\_HIGHTime} * OSCFREQ)$

$IC\_LCNT = \text{ceil}(\text{MIN\_SCL\_LOWtime} * OSCFREQ)$

MIN_SCL_HIGHTime = minimum high period

MIN_SCL_HIGHTime =

4000 ns for 100 kbps

600 ns for 400 kbps

60 ns for 3.4 Mbs, bus loading = 100pF

160 ns for 3.4 Mbs, bus loading = 400pF

MIN_SCL_LOWtime = minimum low period

MIN_SCL_LOWtime =

4700 ns for 100 kbps

1300 ns for 400 kbps

120 ns for 3.4Mbs, bus loading = 100pF

320 ns for 3.4Mbs, bus loading = 400pF

OSCFREQ = l4_sp_clk clock frequency (Hz)

For example:

OSCFREQ = 100 MHz

I2Cmode = fast, 400 kbps

MIN_SCL_HIGHTime = 600 ns

MIN_SCL_LOWtime = 1300 ns

$IC\_HCNT = \text{ceil}(600 \text{ ns} * 100 \text{ MHz})$ IC_HCNTSCL PERIOD = 60

$IC\_LCNT = \text{ceil}(1300 \text{ ns} * 100 \text{ MHz})$ IC_LCNTSCL PERIOD = 130

Actual MIN_SCL_HIGHTime = $60 * (1/100 \text{ MHz}) = 600 \text{ ns}$

Actual MIN_SCL_LOWtime = $130 * (1/100 \text{ MHz}) = 1300 \text{ ns}$ †

SDA Hold Time

The I²C protocol specification requires 300 ns of hold time on the SDA signal in standard and fast speed modes. Board delays on the SCL and SDA signals can mean that the hold time requirement is met at the I²C master, but not at the I²C slave (or vice-versa). As each application encounters differing board delays, the I²C controller contains a software programmable register, IC_SDA_HOLD, to enable dynamic adjustment of the SDA hold time. †

DMA Controller Interface

The I²C controller supports DMA signaling to indicate when data is ready to be read or when the transmit FIFO needs data. This support requires 2 DMA channels, one for transmit data and one for receive data. The I²C controller supports both single and burst DMA transfers. System software can choose the DMA burst mode by programming an appropriate value into the threshold registers. The recommended setting of the FIFO threshold register value is half full.

To enable the DMA controller interface on the I²C controller, you must write to the DMA control register (DMACR) bits. Writing a 1 into the TDMAE bit field of DMACR register enables the I²C controller transmit handshaking interface. Writing a 1 into the RDMAE bit field of the DMACR register enables the I²C controller receive handshaking interface. †



For details about the DMA controller, refer to the *DMA Controller* chapter in volume 3 of the *Arria V Device Handbook*.

Clocks

Each I²C controller is connected to the l4_sp_clk clock, which clocks transfers in standard and fast mode. The clock input is driven by the clock manager.



For more information, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Resets

Each I²C controller has a separate reset signal. The reset manager drives the signals on a cold or warm reset.



For more information, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Interface Pins

All instances of the I²C controller connect to external pins through pin multiplexers. Pin multiplexing allows all instances to function simultaneously and independently. The pins must be connected to a pull-up resistors and the I²C bus capacitance cannot exceed 400 pF.

Table 20-2 shows I/O pin use of the I²C controller interface.

Table 20-2. I²C Controller Interface Pins

Pin Name	Signal Width	Direction	Description
SCL	1 bit	Bidirectional	Serial clock
SDA	1 bit	Bidirectional	Serial data

I²C Controller Programming Model

This section describes the programming model for the I²C controllers based on the two master and slave operation modes. †



Each I²C controller should be set to operate only as an I²C master or as an I²C slave, never both simultaneously. Ensure that bit 6 (IC_SLAVE_DISABLE) and 0 (IC_MASTER_MODE) of the IC_CON register are never set to 0 and 1, respectively. †

Slave Mode Operation

This section discusses slave mode procedures. †

Initial Configuration

To use the I²C controller as a slave, perform the following steps: †

1. Disable the I²C controller by writing a 0 to bit 0 of the IC_ENABLE register. †
2. Write to the IC_SAR register (bits 9:0) to set the slave address. This is the address to which the I²C controller responds. †



The reset value for the I²C controller slave address is 0x55. If you are using 0x55 as the slave address, you can safely skip this step.

3. Write to the IC_CON register to specify which type of addressing is supported (7- or 10-bit by setting bit 3). Enable the I²C controller in slave-only mode by writing a 0 into bit 6 (IC_SLAVE_DISABLE) and a 0 to bit 0 (MASTER_MODE). †



Slaves and masters do not have to be programmed with the same type of addressing 7- or 10-bit address. For instance, a slave can be programmed with 7-bit addressing and a master with 10-bit addressing, and vice versa. †

4. Enable the I²C controller by writing a 1 in bit 0 of the IC_ENABLE register. †

Slave-Transmitter Operation for a Single Byte

When another I²C master device on the bus addresses the I²C controller and requests data, the I²C controller acts as a slave-transmitter and the following steps occur: †

1. The other I²C master device initiates an I²C transfer with an address that matches the slave address in the IC_SAR register of the I²C controller †
2. The I²C controller acknowledges the sent address and recognizes the direction of the transfer to indicate that it is acting as a slave-transmitter. †

3. The I²C controller asserts the RD_REQ interrupt (bit 5 of the IC_RAW_INTR_STAT register) and waits for software to respond. †

If the RD_REQ interrupt has been masked, due to bit 5 of the IC_INTR_MASK register (M_RD_REQ bit field) being set to 0, then it is recommended that you instruct the CPU to perform periodic reads of the IC_RAW_INTR_STAT register. †

- a. Reads that indicate bit 5 of the IC_RAW_INTR_STAT register (R_RD_REQ bit field) being set to 1 must be treated as the equivalent of the RD_REQ interrupt being asserted. †
- b. Software must then act to satisfy the I²C transfer. †
- c. The timing interval used should be in the order of 10 times the fastest SCL clock period the I²C controller can handle. For example, for 400 Kbps, the timing interval is 25 us. †



The value of 10 is recommended here because this is approximately the amount of time required for a single byte of data transferred on the I²C bus. †

4. If there is any data remaining in the TX FIFO before receiving the read request, the I²C controller asserts a TX_ABRT interrupt (bit 6 of the IC_RAW_INTR_STAT register) to flush the old data from the TX FIFO. †



Because the I²C controller's TX FIFO is forced into a flushed/reset state whenever a TX_ABRT event occurs, it is necessary for software to release the I²C controller from this state by reading the IC_CLR_TX_ABRT register before attempting to write into the TX FIFO. For more information, refer to the C_RAW_INTR_STAT register description in the register map. †

If the TX_ABRT interrupt has been masked, due to of IC_INTR_MASK[6] register (M_TX_ABRT bit field) being set to 0, then it is recommended that the CPU performs periodic reads of the IC_RAW_INTR_STAT register. †

- a. Reads that indicate bit 6 (R_TX_ABRT) being set to 1 must be treated as the equivalent of the TX_ABRT interrupt being asserted. †
- b. There is no further action required from software. †
- c. The timing interval used should be similar to that described in the previous step for the IC_RAW_INTR_STAT[5] register. †
5. Software writes to the DAT bits of the IC_DATA_CMD register with the data to be written and writes a 0 in bit 8. †
6. Software must clear the RD_REQ and TX_ABRT interrupts (bits 5 and 6, respectively) of the IC_RAW_INTR_STAT register before proceeding. †

If the RD_REQ and/or TX_ABRT interrupts have been masked, then clearing of the IC_RAW_INTR_STAT register will have already been performed when either the R_RD_REQ or R_TX_ABRT bit has been read as 1. †

7. The I²C controller transmits the byte. †
8. The master may hold the I²C bus by issuing a RESTART condition or release the bus by issuing a STOP condition. †

Slave-Receiver Operation for a Single Byte

When another I²C master device on the bus addresses the I²C controller and is sending data, the I²C controller acts as a slave-receiver and the following steps occur:†

1. The other I²C master device initiates an I²C transfer with an address that matches the I²C controller's slave address in the IC_SAR register. †
2. The I²C controller acknowledges the sent address and recognizes the direction of the transfer to indicate that the I²C controller is acting as a slave-receiver. †
3. I²C controller receives the transmitted byte and places it in the receive buffer. †



If the RX FIFO is completely filled with data when a byte is pushed, then an overflow occurs and the I²C controller continues with subsequent I²C transfers. Because a NACK is not generated, software must recognize the overflow when indicated by the I²C controller (by the R_RX_OVER bit in the IC_INTR_STAT register) and take appropriate actions to recover from lost data. Hence, there is a real time constraint on software to service the RX FIFO before the latter overflow as there is no way to reapply pressure to the remote transmitting master. †

4. I²C controller asserts the RX_FULL interrupt (IC_RAW_INTR_STAT[2] register). †

If the RX_FULL interrupt has been masked, due to setting IC_INTR_MASK[2] register to 0 or setting IC_TX_TL to a value larger than 0, then it is recommended that the CPU does periodic reads of the IC_STATUS register. Reads of the IC_STATUS register, with bit 3 (RFNE) set at 1, must then be treated by software as the equivalent of the RX_FULL interrupt being asserted. †

5. Software may read the byte from the IC_DATA_CMD register (bits 7:0). †
6. The other master device may hold the I²C bus by issuing a RESTART condition or release the bus by issuing a STOP condition. †

Slave-Transfer Operation for Bulk Transfers

In the standard I²C protocol, all transactions are single byte transactions and the programmer responds to a remote master read request by writing one byte into the slave's TX FIFO. When a slave (slave-transmitter) is issued with a read request (RD_REQ) from the remote master (master-receiver), at a minimum there should be at least one entry placed into the slave-transmitter's TX FIFO. The I²C controller is designed to handle more data in the TX FIFO so that subsequent read requests can receive that data without raising an interrupt to request more data. Ultimately, this eliminates the possibility of significant latencies being incurred between raising the interrupt for data each time had there been a restriction of having only one entry placed in the TX FIFO. †

This mode only occurs when I²C controller is acting as a slave-transmitter. If the remote master acknowledges the data sent by the slave-transmitter and there is no data in the slave's TX FIFO, the I²C controller raises the read request interrupt (RD_REQ) and waits for data to be written into the TX FIFO before it can be sent to the remote master. †

If the RD_REQ interrupt is masked, due to bit 5 (M_RD_REQ) of the IC_INTR_STAT register being set to 0, then it is recommended that the CPU does periodic reads of the IC_RAW_INTR_STAT register. Reads of IC_RAW_INTR_STAT that return bit 5 (R_RD_REQ) set to 1 must be treated as the equivalent of the RD_REQ interrupt referred to in this section.†

The RD_REQ interrupt is raised upon a read request, and like interrupts, must be cleared when exiting the interrupt service handling routine (ISR). The ISR allows you to either write 1 byte or more than 1 byte into the TX FIFO. During the transmission of these bytes to the master, if the master acknowledges the last byte then the slave must raise the RD_REQ again because the master is requesting for more data. †

If the programmer knows in advance that the remote master is requesting a packet of n bytes, then when another master addresses the I²C controller and requests data, the TX FIFO could be written with n number bytes and the remote master receives it as a continuous stream of data. For example, the I²C controller slave continues to send data to the remote master as long as the remote master is acknowledging the data sent and there is data available in the TX FIFO. There is no need to issue RD_REQ again. †

If the remote master is to receive n bytes from the I²C controller but the programmer wrote a number of bytes larger than n to the TX FIFO, then when the slave finishes sending the requested n bytes, it clears the TX FIFO and ignores any excess bytes. †

The I²C controller generates a transmit abort (TX_ABRT) event to indicate the clearing of the TX FIFO in this example. At the time an ACK/NACK is expected, if a NACK is received, then the remote master has all the data it wants. At this time, a flag is raised within the slave's state machine to clear the leftover data in the TX FIFO. This flag is transferred to the processor bus clock domain where the FIFO exists and the contents of the TX FIFO are cleared at that time. †

Master Mode Operation

This section discusses master mode procedures. †

Initial Configuration

For master mode operation, the target address and address format can be changed dynamically without having to disable the I²C controller. This feature is only applicable when the I²C controller is acting as a master because the slave requires the component to be disabled before any changes can be made to the address. To use the I²C controller as a master, perform the following steps: †

1. Disable the I²C controller by writing 0 to the IC_ENABLE register. †
2. Write to the IC_CON register to set the maximum speed mode supported for slave operation (bits 2:1) and to specify whether the I²C controller starts its transfers in 7/10 bit addressing mode when the device is a slave (bit 3). †
3. Write to the IC_TAR register the address of the I²C device to be addressed. It also indicates whether a General Call or a START BYTE command is going to be performed by I²C. The desired speed of the I²C controller master-initiated transfers, either 7-bit or 10-bit addressing, is controlled by the IC_10BITADDR_MASTER bit field (bit 12). †
4. Enable the I²C controller by writing a 1 in the IC_ENABLE register. †

- Now write the transfer direction and data to be sent to the IC_DATA_CMD register. If the IC_DATA_CMD register is written before the I²C controller is enabled, the data and commands are lost as the buffers are kept cleared when the I²C controller is not enabled. †



For multiple I²C transfers, perform additional writes to the TX FIFO such that the TX FIFO does not become empty during the I²C transaction. If the TX FIFO is completely emptied at any stage, then further writes to the TX FIFO results in an independent I²C transaction. †

Dynamic IC_TAR or IC_10BITADDR_MASTER Update

The I²C controller supports dynamic updating of the IC_TAR (bits 9:0) and IC_10BITADDR_MASTER (bit 12) bit fields of the IC_TAR register. You can dynamically write to the IC_TAR register provided the following conditions are met: †

- The I²C controller is not enabled (IC_ENABLE=0); †
- The I²C controller is enabled (IC_ENABLE=1); AND I²C controller is NOT engaged in any Master (TX, RX) operation (IC_STATUS[5]=0); AND I²C controller is enabled to operate in Master mode (IC_CON[0]=1); AND there are no entries in the TX FIFO (IC_STATUS[2]=1) †

Master Transmit and Master Receive

The I²C controller supports switching back and forth between reading and writing dynamically. To transmit data, write the data to be written to the lower byte of the I²C Rx/Tx Data Buffer and Command Register (IC_DATA_CMD). The CMD bit [8] should be written to 0 for I²C write operations. Subsequently, a read command may be issued by writing "don't cares" to the lower byte of the IC_DATA_CMD register, and a 1 should be written to the CMD bit. The I²C controller in master mode continues to initiate transfers as long as there are commands present in the transmit FIFO. If the transmit FIFO becomes empty, the I²C controller inserts a STOP condition after completing the current transfers. †

Disabling the I²C Controller

The register IC_ENABLE_STATUS is added to allow software to unambiguously determine when the hardware has completely shutdown in response to the IC_ENABLE register being set from 1 to 0. †

- Define a timer interval (ti2c_poll) equal to the 10 times the signaling period for the highest I²C transfer speed used in the system and supported by the I²C controller. For example, if the highest I²C transfer mode is 400 Kbps, then ti2c_poll is 25 us. †
- Define a maximum time-out parameter, MAX_T_POLL_COUNT, such that if any repeated polling operation exceeds this maximum value, an error is reported. †
- Execute a blocking thread/process/function that prevents any further I²C master transactions to be started by software, but allows any pending transfers to be completed.



This step can be ignored if the I²C controller is programmed to operate as an I²C slave only. †

4. The variable POLL_COUNT is initialized to zero. †
5. Set IC_ENABLE to 0. †
6. Read the IC_ENABLE_STATUS register and test the IC_EN bit (bit 0). Increment POLL_COUNT by one. If POLL_COUNT >= MAX_T_POLL_COUNT, exit with the relevant error code. †
7. If IC_ENABLE_STATUS[0] is 1, then sleep for ti2c_poll and proceed to the previous step. Otherwise, exit with a relevant success code. †

DMA Controller Operation

To enable the DMA controller interface on the I²C controller, you must write the DMA Control Register (IC_DMA_CR). Writing a 1 to the TDMAE bit field of IC_DMA_CR register enables the I²C controller transmit handshaking interface. Writing a 1 to the RDMAR bit field of the IC_DMA_CR register enables the I²C controller receive handshaking interface. †



For details about the DMA controller, refer to the *DMA Controller* chapter in volume 3 of the *Arria V Device Handbook*.

The FIFO buffer depth (FIFO_DEPTH) for both the RX and TX buffers in the I²C controller is 64 entries.

Transmit FIFO Underflow

During I²C serial transfers, transmit FIFO requests are made to the DMA controller whenever the number of entries in the transmit FIFO is less than or equal to the value in DMA Transmit Data Level Register (IC_DMA_TDLR), also known as the watermark level. The DMA controller responds by writing a burst of data to the transmit FIFO buffer, of length specified as DMA burst length. †



For details about the DMA burst length microcode setup, refer to the *DMA Controller* chapter in volume 3 of the *Arria V Device Handbook*.

Data should be fetched from the DMA often enough for the transmit FIFO to perform serial transfers continuously, that is, when the FIFO begins to empty, another DMA request should be triggered. Otherwise, the FIFO will run out of data (underflow) causing a STOP to be inserted on the I²C bus. To prevent this condition, you must set the watermark level correctly. †

Transmit Watermark Level

Consider the example where the assumption is made: †


$$\text{DMA burst length} = \text{FIFO\_DEPTH} - \text{IC\_DMA\_TDLR} \quad \dagger$$

Here the number of data items to be transferred in a DMA burst is equal to the empty space in the transmit FIFO. Consider the following two different watermark level settings: †

- Case 1: IC_DMA_TDLR = 16: †
 - Transmit FIFO watermark level = IC_DMA_TDLR = 16: †
 - DMA burst length = FIFO_DEPTH - IC_DMA_TDLR = 48: †
 - I²C transmit FIFO_DEPTH = 64: †
 - Block transaction size = 240: †

Figure 20-11 shows the transmit FIFO when the watermark level equals 16.

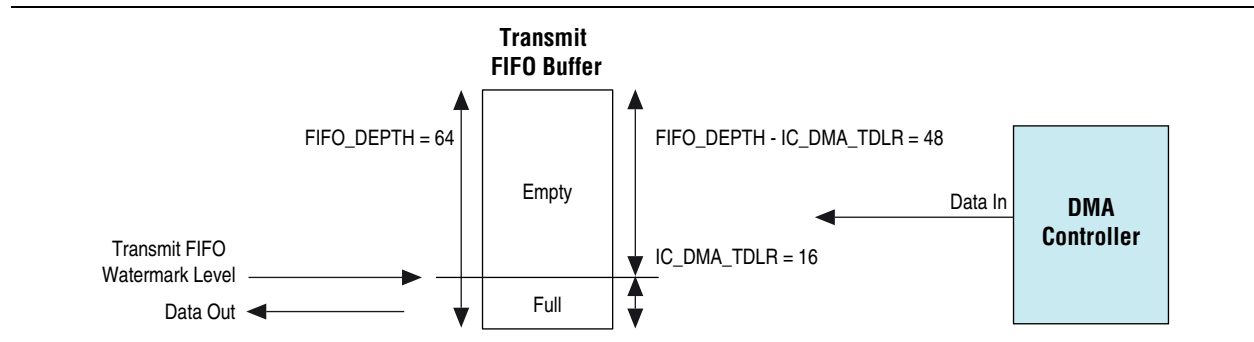Figure 20-11. Transmit FIFO Watermark Level = 16



The number of burst transactions needed equals the block size divided by the number of data items per burst:


$$\text{Block transaction size} / \text{DMA burst length} = 240 / 48 = 5$$

The number of burst transactions in the DMA block transfer is 5. But the watermark level, IC_DMA_TDLR, is quite low. Therefore, the probability of transmit underflow is high where the I²C serial transmit line needs to transmit data, but there is no data left in the transmit FIFO. This occurs because the DMA has not had time to service the DMA request before the FIFO becomes empty.

- Case 2: IC_DMA_TDLR = 48 †
 - Transmit FIFO watermark level = IC_DMA_TDLR = 48 †
 - DMA burst length = FIFO_DEPTH - IC_DMA_TDLR = 16 †
 - I²C transmit FIFO_DEPTH = 64 †
 - Block transaction size = 240 †

Figure 20-12 shows the transmit FIFO when the watermark level equals 48.

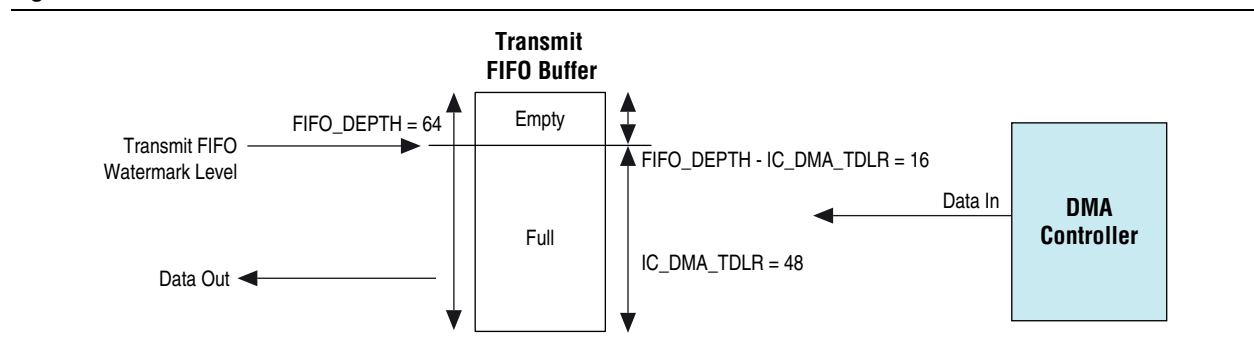Figure 20-12. Transmit FIFO Watermark Level = 48



Number of burst transactions in block: †

$$\text{Block transaction size/DMA burst length} = 240/16 = 15 \dagger$$

In this block transfer, there are 15 destination burst transactions in a DMA block transfer. But the watermark level, IC_DMA_TDLR, is high. Therefore, the probability of I²C transmit underflow is low because the DMA controller has plenty of time to service the destination burst transaction request before the I²C transmit FIFO becomes empty. †

Thus, the second case has a lower probability of underflow at the expense of more burst transactions per block. This provides a potentially greater amount of bursts per block and worse bus utilization than the former case. †

Therefore, the goal in choosing a watermark level is to minimize the number of transactions per block, while at the same time keeping the probability of an underflow condition to an acceptable level. In practice, this is a function of the ratio of the rate at which the I²C transmits data to the rate at which the DMA can respond to destination burst requests. †

Transmit FIFO Overflow

Setting the DMA burst length to a value greater than the watermark level that triggers the DMA request might cause overflow when there is not enough space in the transmit FIFO to service the destination burst request. Therefore, the following equation must be adhered to in order to avoid overflow: †

$$\text{DMA burst length} \leq \text{FIFO\_DEPTH} - \text{IC\_DMA\_TDLR}$$

In case 2: IC_DMA_TDLR = 48, the amount of space in the transmit FIFO at the time of the burst request is made is equal to the DMA burst length. Thus, the transmit FIFO may be full, but not overflowed, at the completion of the burst transaction. †

Therefore, for optimal operation, DMA burst length should be set at the FIFO level that triggers a transmit DMA request; that is: †

$$\text{DMA burst length} = \text{FIFO\_DEPTH} - \text{IC\_DMA\_TDLR}$$

Adhering to this equation reduces the number of DMA bursts needed for block transfer, and this in turn improves bus utilization. †



The transmit FIFO will not be full at the end of a DMA burst transfer if the I²C controller has successfully transmitted one data item or more on the I²C serial transmit line during the transfer. †

Receive FIFO Overflow

During I²C serial transfers, receive FIFO requests are made to the DMA whenever the number of entries in the receive FIFO is at or above the DMA Receive Data Level Register, that is IC_DMA_RDLR + 1. This is known as the watermark level. The DMA responds by fetching a burst of data from the receive FIFO. †

Data should be fetched by the DMA often enough for the receive FIFO to accept serial transfers continuously, that is, when the FIFO begins to fill, another DMA transfer is requested. Otherwise the FIFO will fill with data (overflow). To prevent this condition, the user must set the watermark level correctly. †

Receive Watermark Level

Similar to choosing the transmit watermark level described earlier, the receive watermark level, $IC\_DMA\_RDLR + 1$, should be set to minimize the probability of overflow, as shown in Figure 20-13. It is a trade off between the number of DMA burst transactions required per block versus the probability of an overflow occurring. †

Receive FIFO Underflow

Setting the source transaction burst length greater than the watermark level can cause underflow where there is not enough data to service the source burst request. Therefore, the following equation must be adhered to avoid underflow: †

$$DMA \text{ burst length} = IC\_DMA\_RDLR + 1$$


If the number of data items in the receive FIFO is equal to the source burst length at the time of the burst request is made, the receive FIFO may be emptied, but not underflowed, at the completion of the burst transaction. For optimal operation, DMA burst length should be set at the watermark level, $IC\_DMA\_RDLR + 1$. †

Adhering to this equation reduces the number of DMA bursts in a block transfer, which in turn can avoid underflow and improve bus utilization. †

 The receive FIFO will not be empty at the end of the source burst transaction if the I²C controller has successfully received one data item or more on the I²C serial receive line during the burst. †

Figure 20-13 shows the receive FIFO buffer.

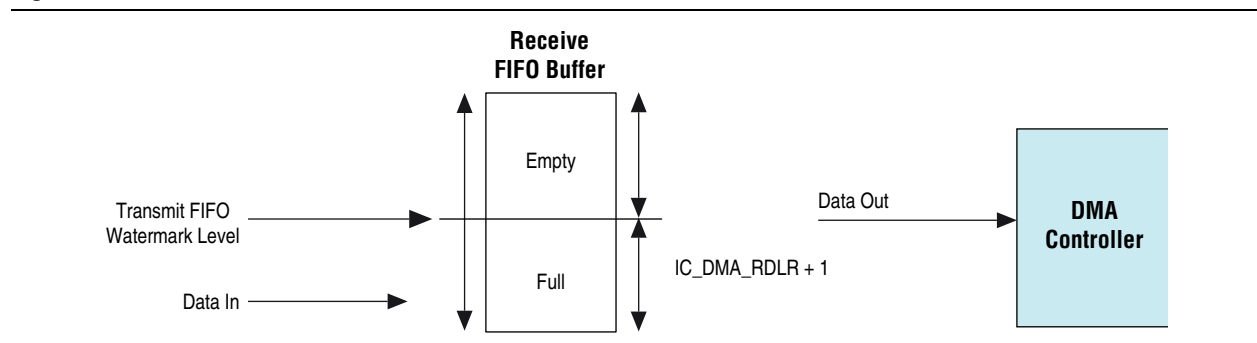Figure 20-13. Receive FIFO Buffer



I²C Controller Address Map and Register Definitions

 The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the link for any of the following module instances:

- **i2c0**
- **i2c1**

- i2c2

- i2c3

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.



The base addresses of all modules are also listed in the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 20–3 shows the revision history for this document.

Table 20–3. Document Revision History

Date	Version	Changes
November 2012	1.2	Minor updates.
May 2012	1.1	Added programming model, address map and register definitions, clocks, reset, and interface pins sections.
January 2012	1.0	Initial release.

The hard processor system (HPS) provides two UART controllers for asynchronous serial communication. The UART controllers are based on an industry standard 16550 UART controller. The UART controllers are instances of the Synopsys® DesignWare® APB Universal Asynchronous Receiver/Transmitter (DW_apb_uart) peripheral.

UART Controller Features

The UART controller provides the following functionality and features:

- Programmable character properties, such as number of data bits per character, optional parity bits, and number of stop bits †
- Line break generation and detection †
- Direct memory access (DMA) controller interface
- Prioritized interrupt identification †
- Programmable baud rate
- False start bit detection †
- Automatic flow control mode per 16750 standard †
- Internal loopback mode support
- 128-bit transmit and receive FIFO buffer depth
 - FIFO buffer status registers †
 - FIFO buffer access mode (for FIFO buffer testing) enables write of receive FIFO buffer by master and read of transmit FIFO buffer by master †
- Shadow registers reduce software overhead and provide programmable reset †
- Transmitter holding register empty (THRE) interrupt mode †

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

Portions © 2011 Synopsys, Inc. Used with permission. All rights reserved. Synopsys & DesignWare are registered trademarks of Synopsys, Inc. All documentation is provided "as is" and without any warranty. Synopsys expressly disclaims any and all warranties, express, implied, or otherwise, including the implied warranties of merchantability, fitness for a particular purpose, and non-infringement, and any warranties arising out of a course of dealing or usage of trade.

†Paragraphs marked with the dagger (†) symbol are Synopsys Proprietary. Used with permission.



UART Controller Block Diagram and System Integration

Figure 21-1 shows the integration of the UART controller in the HPS system.

Figure 21-1. UART Block Diagram

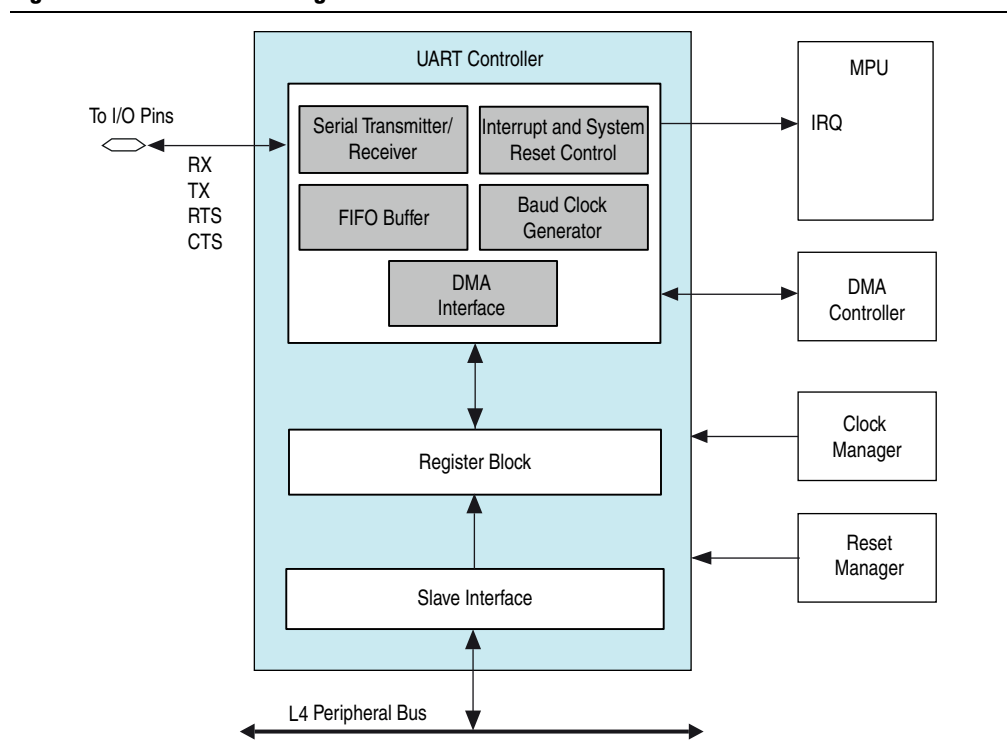


Table 21-1 provides a summary description of the major blocks in the UART controller.

Table 21-1. UART Controller Block Descriptions

Block	Description
Slave interface	Slave interface between the component and L4 peripheral bus.
Register block	Provides main UART control, status, and interrupt generation functions. †
FIFO buffer	Provides FIFO buffer control and storage. †
Baud clock generator	Generates the transmitter and receiver baud clock. With a reference clock of 100 MHz, the UART controller supports transfer rates of 95 baud to 6.25 Mbaud. This supports communication with all known 16550 devices. The baud rate is controlled by programming the interrupt enable or divisor latch high (IER_DLH) and receive buffer, transmit holding, or divisor latch low (RBR_THR_DLL) registers.
Serial transmitter	Converts parallel data written to the UART into serial data and adds all additional bits, as specified by the control register, for transmission. This makeup of serial data, referred to as a character, exits the block in serial UART. †

Table 21-1. UART Controller Block Descriptions

Block	Description
Serial receiver	Converts the serial data character (as specified by the control register) received in the UART format to parallel form. Parity error detection, framing error detection and line break detection is carried out in this block. †
DMA interface	The UART controller includes a DMA controller interface to indicate when received data is available or when the transmit FIFO buffer requires data. The DMA requires two channels, one for transmit and one for receive. The UART controller supports single and burst transfers. You can use DMA in FIFO buffer and non-FIFO buffer mode. For more specific information, refer to the <i>DMA Controller</i> chapter in volume 3 of the <i>Arria® V Device Handbook</i>.

Functional Description of the UART Controller

The HPS UART is based on an industry-standard 16550 UART. The UART supports serial communication with a peripheral, modem (data carrier equipment), or data set. The master (CPU) writes data over the slave bus to the UART. The UART converts the data to serial format and transmits to the destination device. The UART also receives serial data and stores it for the master (CPU). †

The UART's registers control the character length, baud rate, parity generation and checking, and interrupt generation. The UART's single interrupt output signal is supported by several prioritized interrupt types that trigger assertion. You can separately enable or disable each of the interrupt types with the control registers. †

FIFO Buffer Support

The UART controller includes 128-byte FIFO buffers to buffer transmit and receive data. FIFO buffer access mode allows the master to write the receive FIFO buffer and to read the transmit FIFO buffer for test purposes. FIFO buffer access mode is enabled with the FIFO access register (FAR). Once enabled, the control portions of the transmit and receive FIFO buffers are reset and the FIFO buffers are treated as empty. †

When FIFO buffer access mode is enabled, you can write data to the transmit FIFO buffer as normal; however, no serial transmission occurs in this mode and no data leaves the FIFO buffer. You can read back the data that is written to the transmit FIFO buffer with the transmit FIFO read (TFR) register. The TFR register provides the current data at the top of the transmit FIFO buffer. †

Similarly, you can also read data from the receive FIFO buffer in FIFO buffer access mode. Since the normal operation of the UART is halted in this mode, you must write data to the receive FIFO buffer to read it back. The receive FIFO write (RFW) register writes data to the receive FIFO buffer. The upper two bits of the 10-bit register write framing errors and parity error detection information to the receive FIFO buffer. Bit 9 of RFW indicates a framing error and bit 8 of RFW indicates a parity error. Although you cannot read these bits back from the receive buffer register, you can check the bits by reading the line status register (LSR), and by checking the corresponding bits when the data in question is at the top of the receive FIFO buffer. †

Automatic Flow Control

The UART includes 16750-compatible request-to-send (RTS) and clear-to-send (CTS) serial data automatic flow control mode. You enable automatic flow control with the modem control register (MCR.AFCE). †

Automatic RTS mode

Automatic RTS mode becomes active when the following conditions occur: †

- RTS (MCR.RTS bit and MCR.AFCE bit are both set)
- FIFO buffers are enabled (IIR_FCR.FIFOE bit is set)


When automatic RTS is enabled, the rts_n output pin is forced inactive (high) when the receive FIFO buffer level reaches the threshold set by RCVR trigger (IIR_FCR.RT). When rts_n is connected to the cts_n input pin of another UART device, the other UART stops sending serial data until the receive FIFO buffer has available space (until it is completely empty). †

The selectable receive FIFO buffer threshold values are 1, $\frac{1}{4}$, $\frac{1}{2}$, and 2 less than full. Because one additional character may be transmitted to the UART after rts_n is inactive (due to data already having entered the transmitter block in the other UART), setting the threshold to 2 less than full allows maximum use of the FIFO buffer with a margin of one character. †

Once the receive FIFO buffer is completely emptied by reading the receiver buffer register (RBR_THR_DLL), rts_n again becomes active (low), signalling the other UART to continue sending data. †

Even when you set the correct MCR bits, if the FIFO buffers are disabled through FCR.FIFOE, automatic flow control is also disabled. When auto RTS is not implemented or disabled, rts_n is controlled solely by MCR.RTS. Figure 21-2 illustrates automatic RTS operation. In Figure 21-2, the character T is received because rts_n is not detected prior to the next character entering the sending UART transmitter. †

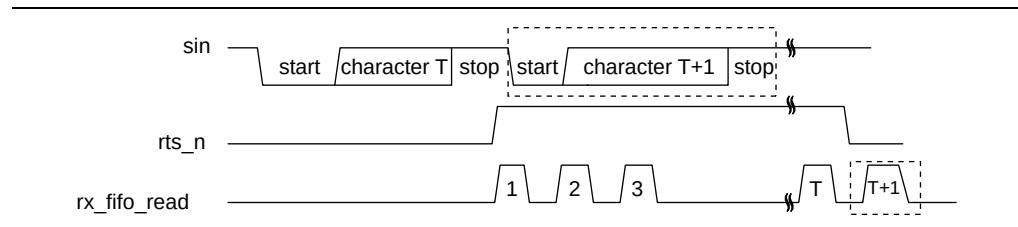Figure 21-2. Automatic RTS Timing



Automatic CTS mode

Automatic CTS mode becomes active when the following conditions occur: †

- AFCE (MCR.AFCE bit is set)
- FIFO buffers are enabled (through FIFO buffer control register IIR_FCR.FIFOE) bit

When automatic CTS is enabled (active), the UART transmitter is disabled whenever the cts_n input becomes inactive (high). This prevents overflowing the FIFO buffer of the receiving UART. †


If the `cts_n` input is not deactivated before the middle of the last stop bit, another character is transmitted before the transmitter is disabled. While the transmitter is disabled, you can continue to write and even overflow to the transmit FIFO buffer. †

Automatic CTS mode requires the following sequence:

1. The UART status register are read to verify that the transmit FIFO buffer is full (UART status register `USR.TFNF` set to zero). †
2. The current FIFO buffer level is read via the transmit FIFO level (TFL) register. †
3. Programmable THRE interrupt mode must be enabled to access the FIFO buffer full status from the LSR. †

When using the FIFO buffer full status, software can poll this before each write to the transmit FIFO buffer. When the `cts_n` input becomes active (low) again, transmission resumes. If the FIFO buffers are disabled with the `IIR_FCR.FIFOE` bit, automatic flow control is also disabled regardless of any other settings. When auto CTS is not implemented or disabled, the transmitter is unaffected by `cts_n`. Figure 21-3 timing diagram shows auto CTS operation.†

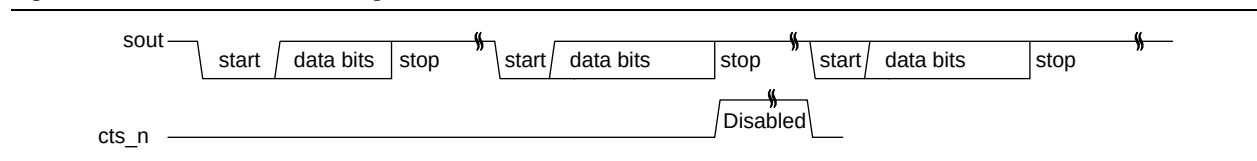Figure 21-3. Automatic CTS Timing



Clocks

The UART controller is connected to the `l4_sp_clk` clock. The clock input is driven by the clock manager.



For more information about the clock manager, refer to the [Clock Manager](#) chapter in volume 3 of the *Arria V Device Handbook*.

Resets

The UART controller is connected to the `uart_rst_n` reset signal. The reset manager drives the signal on a cold or warm reset.

For more information, refer to the [Reset Manager](#) chapter in volume 3 of the *Arria V Device Handbook*.

Interrupts

The assertion of the UART interrupt output signal occurs when one of the following interrupt types are enabled and active: †

Table 21-2. Interrupt Types and Priority †

Interrupt Type	Priority
Receiver line status	Highest
Received data available	Second


Table 21–2. Interrupt Types and Priority †

Interrupt Type	Priority
Character timeout indication	Second
Transmit holding register empty	Third

You can enable the interrupt types with the interrupt enable register (IER_DLH).

Programmable THRE Interrupt

The UART has a programmable THRE interrupt mode to increase system performance. You enable the programmable THRE interrupt mode with the interrupt enable register (IER_DLH.PTIME). When the THRE mode is enabled, THRE interrupts and the dma_tx_req signal are active at and below a programmed transmit FIFO buffer empty threshold level, as shown in the flowchart in [Figure 21–4](#). †

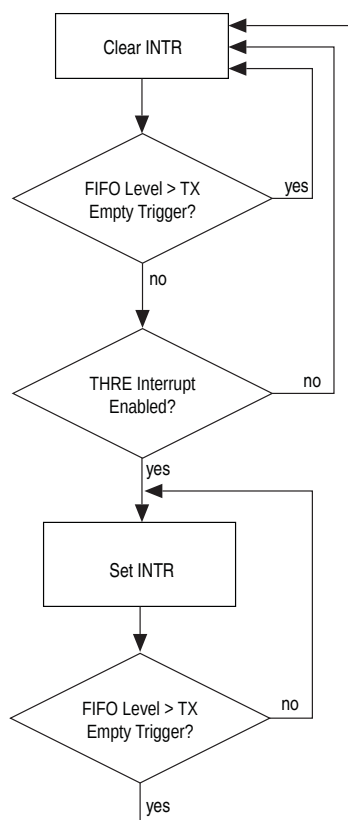
Figure 21–4. Programmable THRE Interrupt Mode

The threshold level is programmed into IIR_FCR.TET. The available empty thresholds are empty, 2, $\frac{1}{4}$, and $\frac{1}{2}$. The optimum threshold value depends on the system's ability to begin a new transmission sequence in a timely manner. However, one of these thresholds should prove optimum in increasing system performance by preventing the transmit FIFO buffer from running empty.

In addition to the interrupt change, line status register (LSR.THRE) also switches from indicating that the transmit FIFO buffer is empty, to indicating that the FIFO buffer is full. This change allows software to fill the FIFO buffer for each transmit sequence by polling LSR.THRE before writing another character. This directs the UART to fill the transmit FIFO buffer whenever an interrupt occurs and there is data to transmit, instead of waiting until the FIFO buffer is completely empty. Waiting until the FIFO buffer is empty reduces performance whenever the system is too busy to respond immediately. You can increase system efficiency when this mode is enabled in combination with automatic flow control.

When not selected or disabled, THRE interrupts and LSR.THRE function normally, reflecting an empty THR or FIFO buffer. [Figure 21-5](#) illustrates THRE interrupt generation when not in programmable THRE interrupt mode.

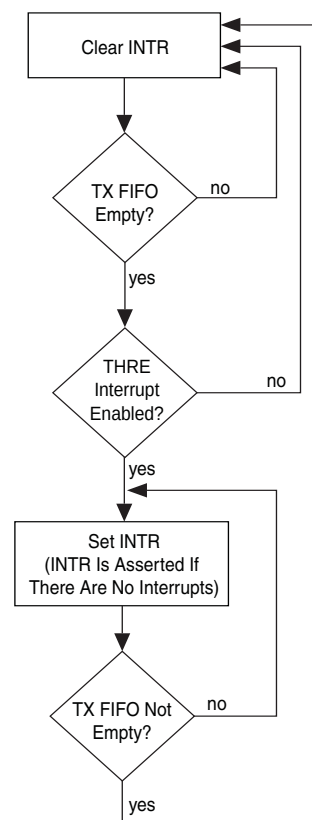Figure 21-5. Interrupt Generation without Programmable THRE Interrupt Mode



UART Controller Programming Model

This section describes the programming model for the UART controller.

DMA Controller Operation

The UART controller includes a DMA controller interface to indicate when the receive FIFO buffer data is available or when the transmit FIFO buffer requires data. The DMA requires two channels, one for transmit and one for receive. The UART controller supports both single and burst transfers.



For details about the DMA controller, refer to the *DMA Controller* chapter in volume 3 of the *Arria V Device Handbook*.

The FIFO buffer depth (FIFO_DEPTH) for both the RX and TX buffers in the UART controller is 128 entries.

Transmit FIFO Underflow

During UART serial transfers, transmit FIFO requests are made to the DMA controller whenever the number of entries in the transmit FIFO is less than or equal to the decoded level of the Transmit Empty Trigger (TET) field in the FIFO Control Register (IIR_FCR), also known as the watermark level. The DMA controller responds by writing a burst of data to the transmit FIFO buffer, of length specified as DMA burst length. †



For details about the DMA burst length microcode setup, refer to the *DMA Controller* chapter in volume 3 of the *Arria V Device Handbook*.

Data should be fetched from the DMA often enough for the transmit FIFO to perform serial transfers continuously, that is, when the FIFO begins to empty, another DMA request should be triggered. Otherwise, the FIFO will run out of data (underflow) causing a STOP to be inserted on the UART bus. To prevent this condition, you must set the watermark level correctly. †

Transmit Watermark Level

Consider the example where the following assumption is made: †


$$\text{DMA burst length} = \text{FIFO\_DEPTH} - \text{decoded watermark level of IIR\_FCR.TET} \dagger$$

Here the number of data items to be transferred in a DMA burst is equal to the empty space in the transmit FIFO. Consider the following two different watermark level settings: †

- Case 1: IIR_FCR.TET = 1, which decodes to a watermark level of 16: †
 - Transmit FIFO watermark level = decoded watermark level of IIR_FCR.TET = 16 †
 - DMA burst length = FIFO_DEPTH - decoded watermark level of IIR_FCR.TET = 112 †
 - UART transmit FIFO_DEPTH = 128 †
 - Block transaction size = 448†

Figure 21-6 shows the transmit FIFO when the watermark level equals 16.

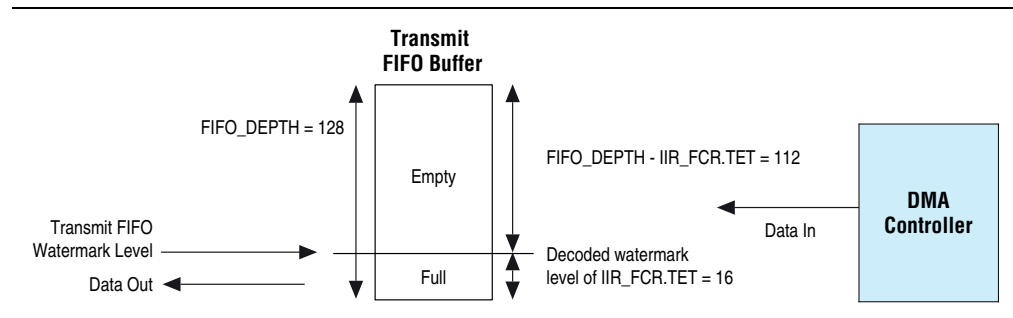Figure 21-6. Transmit FIFO Watermark Level = 16



The number of burst transactions needed equals the block size divided by the number of data items per burst:


$$\text{Block transaction size/DMA burst length} = 448/112 = 4$$

The number of burst transactions in the DMA block transfer is 4. But the watermark level, decoded level of IIR_FCR.TET, is quite low. Therefore, the probability of transmit underflow is high where the UART serial transmit line needs to transmit data, but there is no data left in the transmit FIFO. This occurs because the DMA has not had time to service the DMA request before the FIFO becomes empty.

- Case 2: IIR_FCR.TET = 3, which decodes to a watermark level of 64: †
 - Transmit FIFO watermark level = decoded watermark level of IIR_FCR.TET = 64 †
 - DMA burst length = FIFO_DEPTH - decoded watermark level of IIR_FCR.TET = 64†
 - UART transmit FIFO_DEPTH = 128 †
 - Block transaction size = 448 †

Figure 21-7 shows the transmit FIFO when the watermark level equals 64.

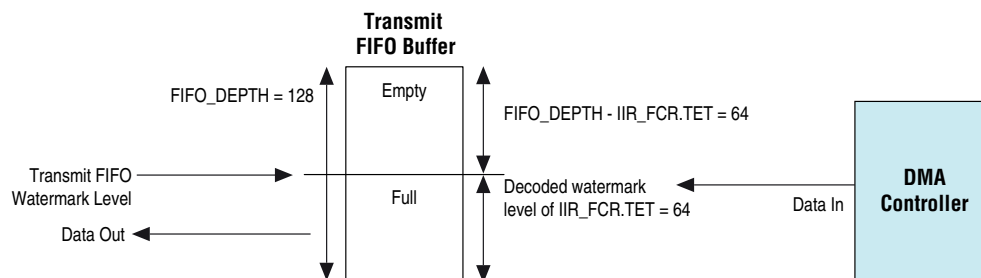Figure 21-7. Transmit FIFO Watermark Level = 64



Number of burst transactions in block: †

Block transaction size/DMA burst length = $448/64 = 7$ †

In this block transfer, there are 15 destination burst transactions in a DMA block transfer. But the watermark level, decoded level of IIR_FCR.TET, is high. Therefore, the probability of UART transmit underflow is low because the DMA controller has plenty of time to service the destination burst transaction request before the UART transmit FIFO becomes empty. †

Thus, the second case has a lower probability of underflow at the expense of more burst transactions per block. This provides a potentially greater amount of bursts per block and worse bus utilization than the former case. †

Therefore, the goal in choosing a watermark level is to minimize the number of transactions per block, while at the same time keeping the probability of an underflow condition to an acceptable level. In practice, this is a function of the ratio of the rate at which the UART transmits data to the rate at which the DMA can respond to destination burst requests. †

Transmit FIFO Overflow

Setting the DMA burst length to a value greater than the watermark level that triggers the DMA request might cause overflow when there is not enough space in the transmit FIFO to service the destination burst request. Therefore, the following equation must be adhered to in order to avoid overflow: †

DMA burst length $\leq$ FIFO_DEPTH - decoded watermark level of IIR_FCR.TET

In case 2: decoded watermark level of IIR_FCR.TET = 64, the amount of space in the transmit FIFO at the time of the burst request is made is equal to the DMA burst length. Thus, the transmit FIFO may be full, but not overflowed, at the completion of the burst transaction. †

Therefore, for optimal operation, DMA burst length should be set at the FIFO level that triggers a transmit DMA request; that is: †

DMA burst length = FIFO_DEPTH - decoded watermark level of IIR_FCR.TET

Adhering to this equation reduces the number of DMA bursts needed for block transfer, and this in turn improves bus utilization. †



The transmit FIFO will not be full at the end of a DMA burst transfer if the UART controller has successfully transmitted one data item or more on the UART serial transmit line during the transfer. †

Receive FIFO Overflow

During UART serial transfers, receive FIFO requests are made to the DMA whenever the number of entries in the receive FIFO is at or above the decoded level of Receive Trigger (RT) field in the FIFO Control Register (IIR_FCR). This is known as the watermark level. The DMA responds by fetching a burst of data from the receive FIFO. †

Data should be fetched by the DMA often enough for the receive FIFO to accept serial transfers continuously, that is, when the FIFO begins to fill, another DMA transfer is requested. Otherwise the FIFO will fill with data (overflow). To prevent this condition, the user must set the watermark level correctly. †

Receive Watermark Level

Similar to choosing the transmit watermark level described earlier, the receive watermark level, decoded watermark level of IIR_FCR.RT, should be set to minimize the probability of overflow, as shown in [Figure 21-8](#). It is a tradeoff between the number of DMA burst transactions required per block versus the probability of an overflow occurring. †

Receive FIFO Underflow

Setting the source transaction burst length greater than the watermark level can cause underflow where there is not enough data to service the source burst request. Therefore, the following equation must be adhered to avoid underflow: †

$$\text{DMA burst length} = \text{decoded watermark level of IIR\_FCR.RT} + 1$$

If the number of data items in the receive FIFO is equal to the source burst length at the time of the burst request is made, the receive FIFO may be emptied, but not underflowed, at the completion of the burst transaction. For optimal operation, DMA burst length should be set at the watermark level, decoded watermark level of IIR_FCR.RT. †


Adhering to this equation reduces the number of DMA bursts in a block transfer, which in turn can avoid underflow and improve bus utilization. †



The receive FIFO will not be empty at the end of the source burst transaction if the UART controller has successfully received one data item or more on the UART serial receive line during the burst. †

Figure 21-8 shows the receive FIFO buffer.

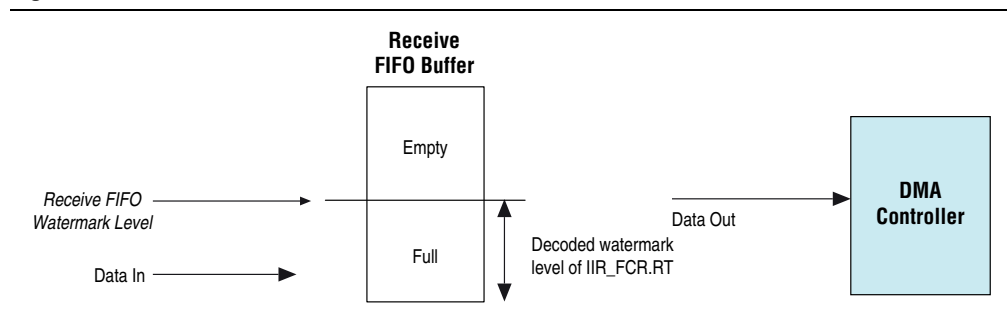Figure 21-8. Receive FIFO Buffer



UART Controller Address Map and Register Definitions

The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the link for either of the following module instances:

- **uart0**
- **uart1**

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.

The base addresses of all modules are also listed in the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 21-3 shows the revision history for this document.

Table 21-3. Document Revision History

Date	Version	Changes
November 2012	1.2	Minor updates.
May 2012	1.1	Added programming model, address map and register definitions, and reset sections.
January 2012	1.0	Initial release.

The hard processor system (HPS) provides three general-purpose I/O (GPIO) interface modules. The GPIO modules are instances of the Synopsys® DesignWare® APB General Purpose Programming I/O (DW_apb_gpio) peripheral.

Features of the GPIO Interface


The GPIO interface offers the following features:

- Supports digital de-bounce
- Configurable interrupt mode
- Supports up to 71 I/O pins and 14 input-only pins

GPIO Interface Block Diagram and System Integration

Figure 22–1 shows a block diagram of the GPIO interface.

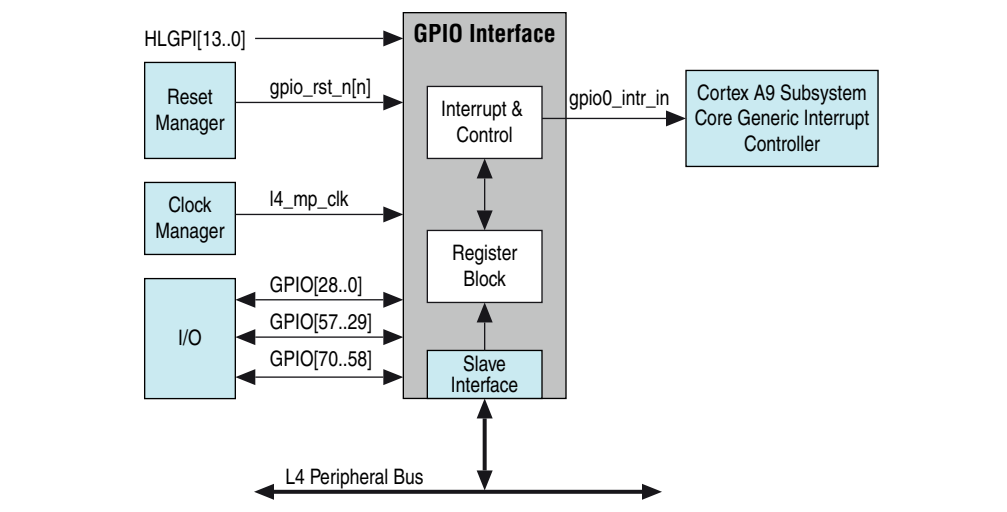Figure 22–1. GPIO Interface Block Diagram



© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

Portions © 2011 Synopsys, Inc. Used with permission. All rights reserved. Synopsys & DesignWare are registered trademarks of Synopsys, Inc. All documentation is provided "as is" and without any warranty. Synopsys expressly disclaims any and all warranties, express, implied, or otherwise, including the implied warranties of merchantability, fitness for a particular purpose, and non-infringement, and any warranties arising out of a course of dealing or usage of trade.

†Paragraphs marked with the dagger (†) symbol are Synopsys Proprietary. Used with permission.



Functional Description of the GPIO Interface

This section provides functional details of the GPIO interface.


Debounce Operation

The GPIO modules provided in the HPS include optional debounce capabilities. The external signal can be debounced to remove any spurious glitches that are less than one period of the external debouncing clock, `gpio_db_clk`.

When input interrupt signals are debounced using the `gpio_db_clk` debounce clock, the signals must be active for a minimum of two cycles of the debounce clock to guarantee that they are registered. Any input pulse widths less than a debounce clock period are filtered out. If the input signal pulse width is between one and two debounce clock widths it may or may not be filtered out, depending on its phase relationship to the debounce clock. If the input pulse spans two rising edges of the debounce clock, it is registered. If it spans only one rising edge, it is not registered.

Figure 22-2 shows a timing diagram of the debounce circuitry for both cases: a bounced input signal, and later, a propagated input signal.

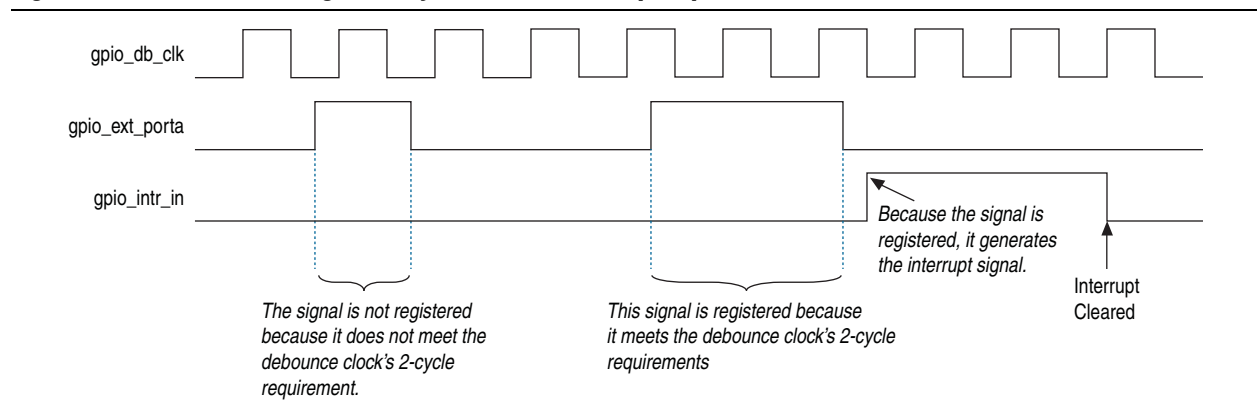Figure 22-2. Debounce Timing With Asynchronous Reset Flip-Flops



Enabling the debounce circuitry increases interrupt latency by two clock cycles of the debounce clock.

Pin Directions

The pins GPIO0 through GPIO70 can be configured to be either input or output signals. The pins HLGPI0 through HLGPI13 share pins with the HPS DDR controller and are input-only signals.

GPIO Interface Programming Model

Debounce capability for each of the input signals on port A can be enabled or disabled under software control by setting the corresponding bits in the `gpio_debounce` register accordingly. The debounce clock must be stable and operational before the debounce capability is enabled.

Under software control, the direction of the external I/O pad is controlled by a write to the `gpio_swportx_ddr` register. When configured as input mode, reading `gpio_ext_porta` would read the values on the signal of the external I/O pad. When configured as output mode, the data written to the `gpio_swporta_dr` register drives the output buffer of the I/O pad. The same pins are shared for both input and output modes, so they cannot be configured as input and output modes at the same time.

GPIO Interface Address Map and Register Definitions

 The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the link for any of the following module instances:

- `gpio0`
- `gpio1`
- `gpio2`

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.

 The base addresses of all modules are also listed in the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 22-1 shows the revision history for this document.

Table 22-1. Document Revision History

Date	Version	Changes
November 2012	1.2	Minor updates.
May 2012	1.1	Added programming model section.
January 2012	1.0	Initial release.

The hard processor system (HPS) provides four, 32-bit, general-purpose timers connected to the level 4 (L4) peripheral bus. The timers optionally generate an interrupt when the 32-bit binary count-down timer reaches zero. The timers are instances of the Synopsys® DesignWare® APB Timers (DW_apb_timers) peripheral.



The microprocessor unit (MPU) subsystem provides additional timers. For information about the timers in the MPU, refer to the *Cortex-A9 MPU Subsystem* chapter in volume 3 of the *Arria V Device Handbook*.

Features of the Timer

- Supports interrupt generation
- Supports free-running mode
- Supports user-defined count mode

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

Portions © 2011 Synopsys, Inc. Used with permission. All rights reserved. Synopsys & DesignWare are registered trademarks of Synopsys, Inc. All documentation is provided "as is" and without any warranty. Synopsys expressly disclaims any and all warranties, express, implied, or otherwise, including the implied warranties of merchantability, fitness for a particular purpose, and non-infringement, and any warranties arising out of a course of dealing or usage of trade.


†Paragraphs marked with the dagger (†) symbol are Synopsys Proprietary. Used with permission.



Timer Block Diagram and System Integration

Figure 23-1 shows a block diagram of the timer. Each timer includes a slave interface for control and status register (CSR) access, a register block, and a programmable 32-bit down counter that generates interrupts on reaching zero. The timer operates on a single clock domain driven by the clock manager.

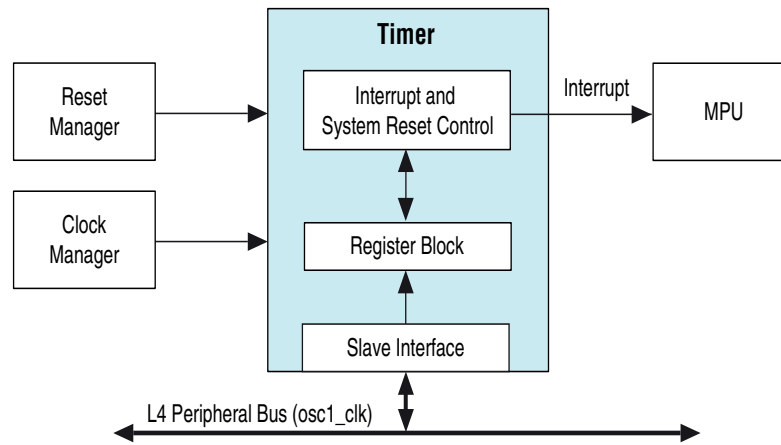Figure 23-1. Timer Block Diagram



Functional Description of the Timer

The 32-bit timer counts down from a programmed value and generates an interrupt when the count reaches zero. The timer has an independent clock input connected to the system clock signal or to an external clock source. †

The timer supports the following modes of operation:

- Free-running mode—decrementing from the maximum value (0xFFFFFFFF). Reloads maximum value upon reaching zero.
- User-defined count mode—generates a periodic interrupt. Decrements from the user-defined count value loaded from the timer1 load count register (timer1loadcount). Reloads the user-defined count upon reaching zero.

The initial value for the timer (that is, the value from which it counts down) is loaded into the timer by the timer1loadcount register. The following events can cause a timer to load the initial count from the timer1loadcount register: †

- Timer is enabled after being reset or disabled
- Timer counts down to 0

Clocks

Table 23–1 shows the clock signals and connections associated with the timers.

Table 23–1. Timer Clock Characteristics

Timer	System Clock	Notes
OSC1 timer 0	osc1_clk	—
OSC1 timer 1		
SP timer 0	l4_sp_clk	Timer must be disabled if clock frequency changes
SP timer 1		

SP timer 0 and SP timer 1 must be disabled before l4_sp_clk is changed to another frequency. You can then re-enable the timer once the clock frequency change takes effect. You cannot change the frequency of OSC1 timer 0 and OSC1 timer 1.



For more information about clock performance, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Resets

The timers are reset by a cold or warm reset. Resetting the timers produces the following results:

1. The timer is disabled
2. The interrupt is enabled
3. The timer enters free-running mode
4. The timer count load register value is set to zero

Interrupts

The timer1 interrupt status (timer1intstat) and timer1 end of interrupt (timer1eoi) registers handle the interrupts. The timer1intstat register allows you to read the status of the interrupt. Reading from the timer1eoi register returns the value 0 and clears the interrupt. †

The timer1 control register (timer1controlreg) contains the timer1 interrupt mask bit (timer1_interrupt_mask) to mask the interrupt. In both the free-running and user-defined count modes of operation, the timer generates an interrupt signal when the timer count reaches zero and the interrupt mask bit of the control register is high.

If the timer interrupt is set, then it is cleared when the timer is disabled.

Timer Programming Model

This section describes the programming model for the timer.

Initialization

To initialize the timer, perform the following steps: †

1. Initialize the timer through the `timer1controlreg` register: †
 - a. Disable the timer by writing a 0 to the `timer1_enable` bit (`timer1_enable`) of the `timer1controlreg` register. †

Before writing to a timer1 load count register (`timer1loadcount`), you must disable the timer by writing a 0 to the `timer1_enable` bit of the `timer1controlreg` register to avoid potential synchronization problems. †
 - b. Program the timer mode—user-defined count or free-running—by writing a 0 or 1, respectively, to the `timer1_mode` bit (`timer1_mode`) of the `timer1controlreg` register. †
 - c. Set the interrupt mask as either masked or not masked by writing a 1 or 0, respectively, to the `timer1_interrupt_mask` bit of the `timer1controlreg` register. †
2. Load the timer counter value into the `timer1loadcount` register. †
3. Enable the timer by writing a 1 to the `timer1_enable` bit of the `timer1controlreg` register. †

Enabling or Disabling the Timer

To enable the timer, write a 1 to the `timer1_enable` bit of the `timer1controlreg` register. To disable the timer, write a 0 to the `timer1_enable` bit. †

When a timer transitions to the enabled state, the current value of `timer1loadcount` register is loaded into the timer counter. †

When the timer enable bit is cleared to 0, the timer counter and any associated registers in the timer clock domain, are asynchronously reset. †

Loading the Timer Countdown Value

When a timer counter is enabled after being reset or disabled, the count value is loaded from the `timer1loadcount` register; this occurs in both free-running and user-defined count modes. †

When a timer counts down to 0, it loads one of two values, depending on the timer operating mode: †

- User-defined count mode—timer loads the current value of the `timer1loadcount` register. Use this mode if you want a fixed, timed interrupt. Designate this mode by writing a 1 to the `timer1_mode` bit of the `timer1controlreg` register. †

- Free-running mode—timer loads the maximum value (0xFFFFFFFF). The timer max count value allows for a maximum amount of time to reprogram or disable the timer before another interrupt occurs. Use this mode if you want a single timed interrupt. Enable this mode by writing a 0 to the `timer1_mode` bit of the `timer1controlreg` register. †

Servicing Interrupts

This section discusses various interrupt cases and how to service them.

Clearing Interrupt

You can clear an active timer interrupt by reading the `timer1eoi` register or by disabling the timer. When the timer is enabled, its interrupt remains asserted until it is cleared by reading the `timer1eoi` register. †

If you clear the interrupt at the same time as the timer reaches 0, the interrupt remains asserted. This is because setting the timer interrupt takes precedence over clearing the interrupt. †

Checking Interrupt Status

You can query the interrupt status of the timer without clearing its interrupt. To check the interrupt status, read the `timer1intstat` register. †

Masking Interrupt

The timer interrupt can be masked using the `timer1controlreg` register. To mask an interrupt, write a 1 to the `timer1_interrupt_mask` bit of the `timer1controlreg` register. †

Timer Address Map and Register Definitions

-  The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the link for any of the following module instances:

- `osc1timer0`
- `osc1timer1`
- `sptimer0`
- `sptimer1`

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.

-  The base addresses of all modules are also listed in the [Introduction to the Hard Processor System](#) chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 23-2 shows the revision history for this document.

Table 23-2. Document Revision History

Date	Version	Changes
November 2012	1.2	Minor updates.
May 2012	1.1	Added programming model and address map and register definitions sections.
January 2012	1.0	Initial release.

The primary function of a watchdog timer is to provide a way for the system to recover from an unresponsive state. The hard processor system (HPS) provides two programmable watchdog timers, which are connected to the level 4 (L4) peripheral bus. The watchdog timers are instances of the Synopsys® DesignWare® APB Watchdog Timer (DW_apb_wdt) peripheral.



The microprocessor unit (MPU) subsystem provides two additional watchdog timers. For information about the watchdog timers in the MPU, refer to the *Cortex-A9 MPU Subsystem* chapter in volume 3 of the *Arria V Device Handbook*.

Features of the Watchdog Timer

The following list describes the features of the watchdog timer:

- Programmable 32-bit timeout range
- Timer counts down from a preset value to zero, then performs one of the following user-configurable operations:
 - Generates a system reset †
 - Generates an interrupt, restarts the timer, and if the timer is not cleared before a second timeout occurs, generates a system reset
- Dual programmable timeout period, used when the time to wait after the first start is different than that required for subsequent restarts †
- Prevention of accidental restart of the watchdog counter †
- Prevention of accidental disabling of the watchdog counter †
- Pause mode for debugging

© 2012 Altera Corporation. All rights reserved. ALTERA, ARRIA, CYCLONE, HARDCOPY, MAX, MEGACORE, NIOS, QUARTUS and STRATIX words and logos are trademarks of Altera Corporation and registered in the U.S. Patent and Trademark Office and in other countries. All other words and logos identified as trademarks or service marks are the property of their respective holders as described at www.altera.com/common/legal.html. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

Portions © 2011 Synopsys, Inc. Used with permission. All rights reserved. Synopsys & DesignWare are registered trademarks of Synopsys, Inc. All documentation is provided "as is" and without any warranty. Synopsys expressly disclaims any and all warranties, express, implied, or otherwise, including the implied warranties of merchantability, fitness for a particular purpose, and non-infringement, and any warranties arising out of a course of dealing or usage of trade.


†Paragraphs marked with the dagger (†) symbol are Synopsys Proprietary. Used with permission.



Watchdog Timer Block Diagram and System Integration

Figure 24-1 shows a block diagram of the watchdog timer.

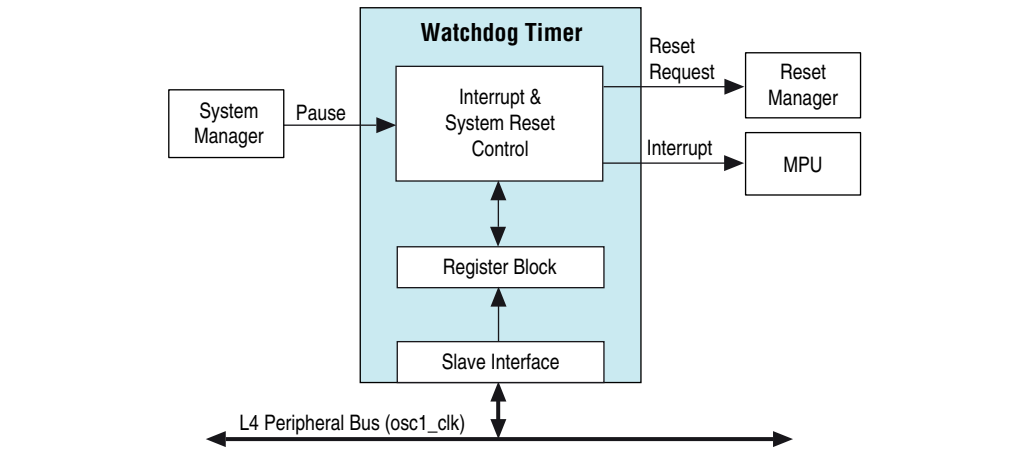Figure 24-1. Watchdog Timer Block Diagram



Each watchdog timer consists of a slave interface for control and status register (CSR) access, a register block, and a 32-bit down counter that operates on the slave interface clock (`osc1_clk`). A pause input, driven by the system manager, optionally pauses the counter when a CPU is being debugged.

The watchdog timer drives an interrupt request to the MPU and a reset request to the reset manager.



For more information, refer to the *Cortex-A9 MPU Subsystem* and *Reset Manager* chapters in volume 3 of the *Arria V Device Handbook*.

Functional Description of the Watchdog Timer

The watchdog timers are peripherals that can be used to recover from system lockup typically caused by software or system related issues.

Counter

Each watchdog timer is a programmable down counter that decrements by one on each clock cycle. The watchdog timer supports 16 fixed timeout period values and software chooses which timeout periods are desired. A timeout period is 2^n `osc1_clk` clock periods, where n is an integer from 16 to 31 inclusive. For information about programming the timeout period values, refer to “[Setting the Timeout Period Values](#)” on page 24-4. For more information about the `osc1_clk` clock, refer to “[Clocks](#)” on page 24-3.

If the counter reaches zero, the watchdog timer has timed out, indicating an unrecoverable error has occurred and a system reset is needed. Software must continually restart the timer (which reloads the counter with the restart timeout period value) to indicate that the system is functioning normally. Software can reload the counter at any time by writing to the restart register. For information, refer to [“Reloading a Watchdog Counter” on page 24-4](#).

Software sets the watchdog timer output response mode to either generate a reset request on a timeout, or assert an interrupt request and start counting down a second time. In the former case, the counter wraps and keeps decrementing, even while a reset request is asserted, until the watchdog timer is reset by the reset manager. In the latter case, the generated interrupt is passed to the generic interrupt controller (GIC) in the MPU subsystem. If the interrupt is not serviced by software before a second timeout occurs, the timer generates a reset request. For information about programming the output response mode, refer to [“Selecting the Output Response Mode” on page 24-4](#).



If a restart occurs at the same time the watchdog counter reaches zero, an interrupt is not generated.

Pause Mode

The watchdog timers can be paused during debugging. Pausing the watchdog timers is controlled by the system manager. The following options are available:

- Pause the timer while either CPU0 or CPU1 is in debug mode
- Pause the timer while only CPU1 is in debug mode
- Pause the timer while only CPU0 is in debug mode
- Do not pause the timer

When pause mode is enabled, the system manager pauses the watchdog timer while debugging. When pause mode is disabled, the watchdog timer runs even while debugging.

When the system manager exits reset, the watchdog pausing feature is enabled for both CPUs by default.

For information about programming the pause mode, refer to [“Pausing a Watchdog Timer” on page 24-5](#).

Clocks

Each watchdog timer is connected to the `osc1_clk` clock so that timer operation is not dependent on the phase-locked loops (PLLs) in the clock manager. This independence allows recovery from software that inadvertently programs the PLLs in the clock manager incorrectly.



For more information, refer to the [Clock Manager](#) chapter in volume 3 of the *Arria V Device Handbook*.

Resets

Watchdog timers are reset by a cold or warm reset from the reset manager, and are disabled when exiting reset. †



For more information, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Watchdog Timer Programming Model

The watchdog timer is a little-endian module. This section describes the programming options for the timers.

Setting the Timeout Period Values

The watchdog timers have a dual timeout period. The counter uses the initial start timeout period value the first the timer is started. All subsequent restarts use the restart timeout period. The valid values are $2^{(16+i)} - 1$ clock cycles, where i is an integer from 0 to 15. To set the programmable timeout periods, perform the following steps:

- To set the initial start timeout period, write i to the timeout period for initialization field (`top_init`) of the watchdog timeout range register (`wdt_torr`).
- To set the restart timeout period, write i to the timeout period field (`top`) of the `wdt_torr` register.



Set the timeout values before enabling the timer.

Selecting the Output Response Mode

The watchdog timers have two output response modes (as described in “Counter” on page 24-2). To select the desired mode, perform one of the following steps:

- To generate a system reset request when a timeout occurs, write 0 to the output response mode bit (`rmod`) of the watchdog timer control register (`wdt_cr`).
- To generate an interrupt and restart the timer when a timeout occurs, write 1 to the `rmod` field of the `wdt_cr` register.

If a restart occurs at the same time the watchdog counter reaches zero, a system reset is not generated. †

Enabling and Initially Starting a Watchdog Timer

To enable and start a watchdog timer, write the value 1 to the watchdog timer enable bit (`wdt_en`) of the `wdt_cr` register.

Reloading a Watchdog Counter

To reload a watchdog counter, write the value 0x76 to the counter restart register (`wdt_crr`). This unique 8-bit value is used as a safety feature to prevent accidental restarts.

Pausing a Watchdog Timer

Pausing the watchdog timers is controlled by the L4 watchdog debug register (wddbg) in the system manager.

For more information, refer to register definitions section of the *System Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Disabling and Stopping a Watchdog Timer


The watchdog timers are disabled and stopped only by resetting them from the reset manager.

For more information, refer to the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Watchdog Timer State Machine

Figure 24-2 shows a state machine for the watchdog timer functionality.

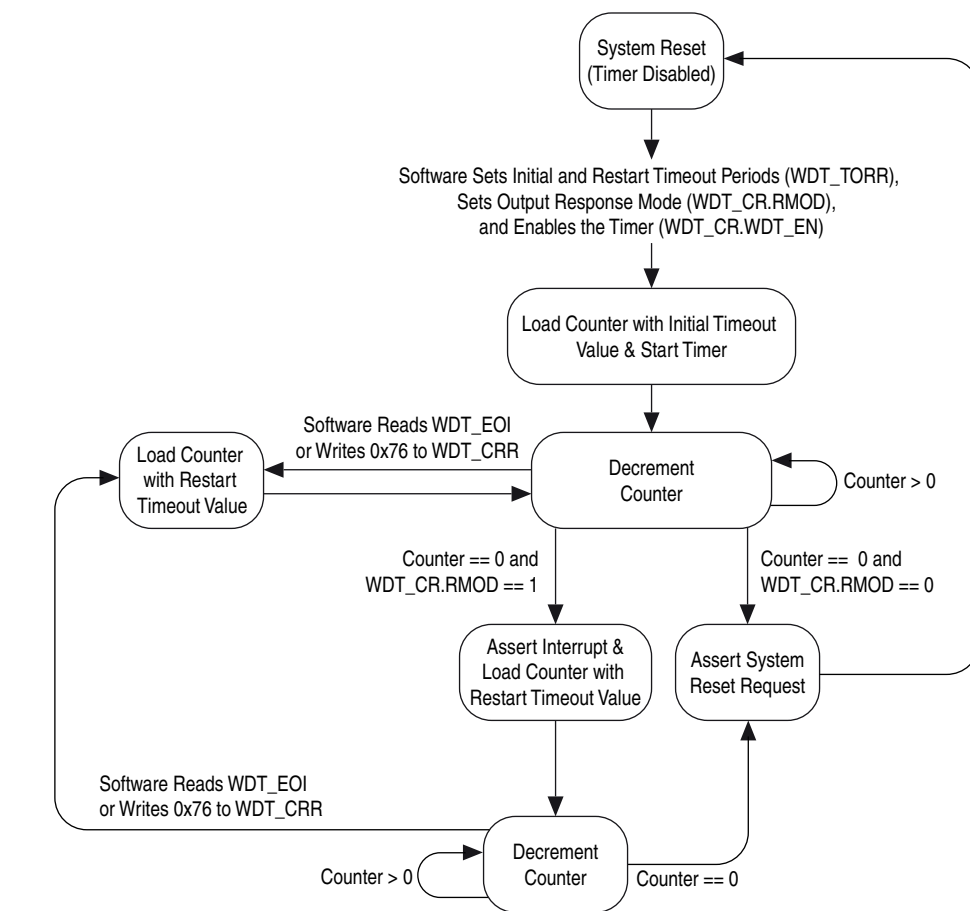Figure 24-2. Watchdog Timer State Machine



The state machine illustrates the behavior of the watchdog timer, including the behavior of both output response modes. Once initialized, the counter decrements at every clock cycle. The state machine remains in the Decrement Counter state until the counter reaches zero, or the watchdog timer is restarted. If software reads the interrupt clear register (`wdt_eoi`), or writes 0x76 to the `wdt_crr` register, the state changes from Decrement Counter to Load Counter with Restart Timeout Value. In this state, the watchdog counter gets reloaded with the restart timeout value, and then the state changes back to Decrement Counter.

If the counter reaches zero, the state changes based on the value of the output response mode setting defined in the `rmod` bit of the `wdt_cr` register. If the `rmod` bit of the `wdt_cr` register is 0, the output response mode is to generate a system reset request. In this case, the state changes to Assert System Reset Request. In response, the reset manager resets and disables the watchdog timer, and gives software the opportunity to reinitialize the timer.

If the `rmod` bit of the `wdt_cr` register is 1, the output response mode is to generate an interrupt. In this case, the state changes to Assert Interrupt and Load Counter with Restart Timeout Value. An interrupt to the processor is generated, and the watchdog counter is reloaded with the restart timeout value. The state then changes to the second Decrement Counter state, and the counter resumes decrementing. If software reads the `wdt_eoi` register, or writes 0x76 to the `wdt_crr` register, the state changes from Decrement Counter to Load Counter with Restart Timeout Value. In this state, the watchdog counter gets reloaded with the restart timeout value, and then the state changes back to the first Decrement Counter state. If the counter again reaches zero, the state changes to Assert System Reset Request. In response, the reset manager resets the watchdog timer, and gives software the opportunity to reinitialize the timer.

Watchdog Timer Address Map and Register Definitions



The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the module description and base address, scroll to and click the link for either of the following module instances:

- **l4wd0**
- **l4wd1**

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.



The base addresses of all modules are also listed in the *Introduction to the Hard Processor System* chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 24-1 shows the revision history for this document.

Table 24-1. Document Revision History

Date	Version	Changes
November 2012	1.2	Minor updates.
May 2012	1.1	Added programming model and address map and register definitions sections.
January 2012	1.0	Initial release.

This section includes the following chapters:

- Chapter 25, Introduction to the HPS Component
- Chapter 26, Instantiating the HPS Component
- Chapter 27, HPS Component Interfaces
- Chapter 28, Simulating the HPS Component



For information about the revision history for chapters in this section, refer to “Document Revision History” in each individual chapter.

The hard processor system (HPS) component is a soft component that you can instantiate in the FPGA fabric of the Arria® V SoC FPGA. It enables other soft components to interface with the HPS hard logic. The HPS component itself has a small footprint in the FPGA fabric, because its only purpose is to enable soft logic to connect to the extensive hard logic in the HPS.

 For a description of the HPS and its integration into the system on a chip (SoC), refer to the *Arria V Device Datasheet*. For a description of HPS system architecture and features, refer to the *Introduction to the Hard Processor* chapter in volume 3 of the *Arria V Device Handbook* and the *CoreSight Debug and Trace* chapter in volume 3 of the *Arria V Device Handbook*.

 For descriptions of individual peripheral architectures and features, refer to the following chapters and sections:

- “HPS Block Diagram and System Integration” in the *Introduction to the Hard Processor* chapter in volume 3 of the *Arria V Device Handbook*.
- “Clock Manager Block Diagram and System Integration” in the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.
- “Reset Manager Block Diagram and System Integration” in the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.
- “Interconnect Block Diagram and System Integration” in the *Interconnect* chapter in volume 3 of the *Arria V Device Handbook*.
- “AXI Bridges Block Diagrams and System Integration” in the *HPS-FPGA AXI Bridges* chapter in volume 3 of the *Arria V Device Handbook*.
- “Cortex-A9 MPU Subsystem Block Diagram and System Integration” in the *Cortex-A9 Microprocessor Unit Subsystem* chapter in volume 3 of the *Arria V Device Handbook*.
- “CoreSight Debug and Trace Block Diagram and System Integration” in the *CoreSight Debug and Trace* chapter in volume 3 of the *Arria V Device Handbook*.
- “SDRAM Controller Subsystem Block Diagram and System Integration” in the *SDRAM Controller Subsystem* chapter in volume 3 of the *Arria V Device Handbook*.
- “On-Chip RAM Block Diagram and System Integration” in the *On-Chip Memory* chapter in volume 3 of the *Arria V Device Handbook*.
- “Boot ROM Block Diagram and System Integration” in the *On-Chip Memory* chapter in volume 3 of the *Arria V Device Handbook*.

- “NAND Flash Controller Block Diagram and System Integration” in the *NAND Flash Controller* chapter in volume 3 of the *Arria V Device Handbook*.
- “SD/MMC Controller Block Diagram and System Integration” in the *SD/MMC Controller* chapter in volume 3 of the *Arria V Device Handbook*.
- “Quad SPI Flash Controller Block Diagram and System Integration” in the *Quad SPI Flash Controller* chapter in volume 3 of the *Arria V Device Handbook*.
- “FPGA Manager Block Diagram and System Integration” in the *FPGA Manager* chapter in volume 3 of the *Arria V Device Handbook*.
- “System Manager Block Diagram and System Integration” in the *System Manager* chapter in volume 3 of the *Arria V Device Handbook*.
- “Scan Manager Block Diagram and System Integration” in the *Scan Manager* chapter in volume 3 of the *Arria V Device Handbook*.
- “DMA Controller Block Diagram and System Integration” in the *DMA Controller* chapter in volume 3 of the *Arria V Device Handbook*.
- “EMAC Block Diagram and System Integration” in the *Ethernet Media Access Controller* chapter in volume 3 of the *Arria V Device Handbook*.
- “USB OTG Controller Block Diagram and System Integration” in the *USB 2.0 OTG Controller* chapter in volume 3 of the *Arria V Device Handbook*.
- “SPI Block Diagram and System Integration” in the *SPI Controller* chapter in volume 3 of the *Arria V Device Handbook*.
- “I²C Controller Block Diagram and System Integration” in the *I²C Controller* chapter in volume 3 of the *Arria V Device Handbook*.
- “UART Controller Block Diagram and System Integration” in the *UART Controller* chapter in volume 3 of the *Arria V Device Handbook*.
- “General-Purpose I/O Interface Block Diagram and System Integration” in the *General-Purpose I/O Interface* chapter in volume 3 of the *Arria V Device Handbook*.
- “Timer Block Diagram and System Integration” in the *Timer* chapter in volume 3 of the *Arria V Device Handbook*.
- “Watchdog Timer Block Diagram and System Integration” in the *Watchdog Timer* chapter in volume 3 of the *Arria V Device Handbook*.



The address map and register definitions reside in the [hps.html](#) file that accompanies this handbook volume. Click the link to open the file.

To view the description and base address for a specific peripheral, scroll to and click the link for the peripheral’s module name.

To then view the register and field descriptions, scroll to and click the register names. The register addresses are offsets relative to the base address of each module instance.

Document Revision History

Table 25-1 shows the revision history for this document.

Table 25-1. Document Revision History

Date	Version	Changes
June 2012	1.0	Initial release.
May 2012	0.1	Preliminary draft.

You instantiate the hard processor system (HPS) component in Qsys. The HPS is available in the component library under **Embedded Processors**. This chapter describes the parameters available in the HPS component parameter editor, which opens when you add or edit an HPS component.

-  The HPS requires specific device targets. For a detailed list of supported devices, refer to the *Arria® V Device Datasheet*.
-  For general information about using Qsys, refer to the *Creating a System with Qsys* chapter in volume 1 of the *Quartus® II Handbook*.

Configuring FPGA Interfaces

This section describes parameters on the **FPGA Interfaces** tab.

-  For general information about interfaces, refer to the *HPS Component Interfaces* chapter in volume 3 of the *Arria V Device Handbook*.

General Interfaces

This section describes parameters in the **General** group on the **FPGA Interfaces** tab. When enabled, the interfaces described in [Table 26-1](#) become visible in the HPS component.

Table 26-1. General Parameters

Parameter Name	Parameter Description	Interface Name
Enable MPU standby and event signals	Enables interfaces that perform the following functions: ■ Notify the FPGA fabric that the microprocessor unit (MPU) is in standby mode. ■ Wake up an MPCore processor from a wait for event (WFE) state.	h2f_mpu_events
Enable MPU general purpose signals	Enables a pair of 32-bit unidirectional general-purpose interfaces between the FPGA fabric and the FPGA manager in the HPS portion of the SoC device.	h2f_mpu_gp
Enable FPGA-to-HPS Interrupts	Enables interface for FPGA interrupt signals to the MPU (in the HPS).	f2h_irq0 f2h_irq1
Enable Debug APB interface	Enables debug interface to the FPGA, allowing access to debug components in the HPS. ⁽¹⁾	h2f_debug_apb h2f_debug_apb_sideband h2f_debug_apb_clock
Enable System Trace Macrocell hardware events	Enables system trace macrocell (STM) hardware events, allowing logic inside the FPGA to insert messages into the trace stream. ⁽¹⁾	f2h_stm_hw_events
Enable FPGA Cross Trigger interface	Enables the cross trigger interface (CTI), which allows trigger sources and sinks to interface with the embedded cross trigger (ECT). ⁽¹⁾	h2f_cti h2f_cti_clock
Enable FPGA Trace Port Interface Unit	Enables an interface between the trace port interface unit (TPIU) and logic in the FPGA. The TPIU is a bridge between on-chip trace sources and a trace port. ⁽¹⁾	h2f_tpiu h2f_tpiu_clock_in

Note to Table 26-1:

(1) For information about this functionality, refer to the [CoreSight Debug and Trace](#) chapter in volume 3 of the Arria V Device Handbook.

Boot and Clock Selection Interfaces

This section describes parameters in the **Boot and Clock Selection** group in the **FPGA Interfaces** tab.

Table 26–2 lists the available parameters.

Table 26–2. Boot and Clock Selection Parameters

Parameter Name	Parameter Description
Enable boot from FPGA ready	Enables an input to the HPS indicating whether a preloader is available in on-chip RAM. If the input is asserted, a preloader image is ready at memory location 0.
Enable boot from FPGA on failure	Enables an input to the HPS indicating whether a fallback preloader is available in on-chip RAM. If the input is asserted, a fallback preloader image is ready at memory location 0. The fallback preloader is to be used only if the HPS boot ROM does not find a valid preloader image in the selected flash memory device.

 For detailed information about the HPS boot sequence, refer to the *Booting and Configuration* appendix in volume 3 of the *Arria V Device Handbook*.

AXI Bridges

This section describes parameters in the **AXI Bridges** group on the **FPGA Interfaces** tab.

Table 26–3. Bridge Parameters

Parameter Name	Parameter Description	Interface Name
FPGA-to-HPS interface width	Enable or disable the FPGA-to-HPS interface; if enabled, set the data width to 32, 64, or 128 bits.	f2h_axi_slave
HPS-to-FPGA interface width	Enable or disable the HPS-to-FPGA interface; if enabled, set the data width to 32, 64, or 128 bits.	h2f_axi_master
Lightweight HPS-to-FPGA interface width	Enable or disable the lightweight HPS-to-FPGA interface. When enabled, the data width is 32 bits.	h2f_lw_axi_master

To facilitate accessing these slaves from a memory-mapped master with a smaller address width, you can use the Altera® Address Span Extender. The address span extender is discussed in “*Using the Address Span Extender Component*” on page 26–9.

 For more information, refer to the *Interconnect* chapter in volume 3 of the *Arria V Device Handbook*.

FPGA-to-HPS SDRAM Interface

This section describes parameters in the **FPGA-to-HPS SDRAM Interface** group on the **FPGA Interfaces** tab.

You can add one or more SDRAM ports that make the HPS SDRAM subsystem accessible to the FPGA fabric.

You can configure the slave interface to a data width of 32, 64, 128, or 256 bits. To facilitate accessing this slave from a memory-mapped master with a smaller address width, you can use the Altera Address Span Extender. The address span extender is discussed in [“Using the Address Span Extender Component” on page 26-9](#).

On the **FPGA Interfaces** tab, in the **FPGA to HPS SDRAM Interface** table, use + or – to add or remove FPGA-to-HPS SDRAM interfaces. The **Name** column denotes the interface name. [Table 26-4](#) shows the parameters available for each SDRAM interface.

Table 26-4. FPGA-to-HPS SDRAM Interface Parameters

Parameter Name	Parameter Description
Name	Port name (auto assigned as shown in Table 26-5)
Type	Interface type: ■ AXI-3 ■ Avalon-MM Bidirectional ■ Avalon-MM Write-only ■ Avalon-MM Read-only
Width	32, 64, 128, or 256

Table 26-5. FPGA-to-HPS SDRAM Port and Interface Names

Port Name	Interface Name
f2h_sdram0	f2h_sdram0_data
f2h_sdram1	f2h_sdram1_data
f2h_sdram2	f2h_sdram2_data
f2h_sdram3	f2h_sdram3_data
f2h_sdram4	f2h_sdram4_data
f2h_sdram5	f2h_sdram5_data



For more information, refer to the [SDRAM Controller Subsystem](#) chapter in volume 3 of the *Arria V Device Handbook*.

Reset Interfaces

This section describes parameters in the **Resets** group on the **FPGA Interfaces** tab. You can enable most resets on an individual basis. Table 26–6 lists the available reset parameters.

Table 26–6. Reset Parameters

Parameter Name	Parameter Description	Interface Name
Enable HPS-to-FPGA cold reset output	Enable interface for HPS-to-FPGA cold reset output	h2f_cold_reset
Enable HPS warm reset handshake signals	Enable an additional pair of reset handshake signals allowing soft logic to notify the HPS when it is safe to initiate a warm reset in the FPGA fabric.	h2f_warm_reset_handshake
Enable FPGA-to-HPS debug reset request	Enable interface for FPGA-to-HPS debug reset request	f2h_debug_reset_req
Enable FPGA-to-HPS warm reset request	Enable interface for FPGA-to-HPS warm reset request	f2h_warm_reset_req
Enable FPGA-to-HPS cold reset request	Enable interface for FPGA-to-HPS cold reset request	f2h_cold_reset_req

 For more information about the reset interfaces, refer to “Functional Description of the Reset Manager” in the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

DMA Peripheral Request

This section describes parameters in the **DMA Peripheral Request** group on the **FPGA Interfaces** tab.

You can enable each direct memory access (DMA) controller peripheral request ID individually. Each request ID enables an interface for FPGA soft logic to request one of eight logical DMA channels to the FPGA.

 For more information, refer to the *DMA Controller* chapter in volume 3 of the *Arria V Device Handbook*.

Configuring Peripheral Pin Multiplexing

This section describes parameters on the **Peripheral Pin Multiplexing** tab.

Configuring Peripherals

The **Peripheral Pin Multiplexing** tab contains a group of parameters for each available type of peripheral. You can enable one or more instances of each peripheral type by selecting an HPS I/O pin set for each instance. When enabled, some peripherals also have a mode settings specific to their functions.

Each list in the **Peripheral Pin Multiplexing** tab has a hint describing in detail the options available in the list. The hint for each pin multiplexing list shows the I/O pins used by each available pin set. The hint for each mode list shows the signals used by each available mode.

View each hint by hovering over the corresponding list.

The tooltips for the combo boxes show useful information. The pin multiplexing parameters have tables showing the pin destinations and the mode parameters show which signals are used in which mode.

You can enable the following types of peripherals. For details of peripheral-specific settings, refer to the chapter for each peripheral:

- Ethernet Media Access Controller—*Ethernet Media Access Controller* chapter in volume 3 of the *Arria V Device Handbook*
- NAND Flash Controller—*NAND Flash Controller* chapter in volume 3 of the *Arria V Device Handbook*
- Quad serial peripheral interface (SPI) Flash Controller—*Quad SPI Flash Controller* chapter in volume 3 of the *Arria V Device Handbook*
- Secure Digital / MultiMediaCard (SD/MMC) Controller—*SD/MMC Controller* chapter in volume 3 of the *Arria V Device Handbook*
- USB 2.0 On-The-Go (OTG) Controllers—*USB 2.0 OTG Controller* chapter in volume 3 of the *Arria V Device Handbook*
- SPI Controllers—*SPI Controller* chapter in volume 3 of the *Arria V Device Handbook*
- UART Controllers—*UART Controller* chapter in volume 3 of the *Arria V Device Handbook*
- Inter-integrated circuit (I²C) Controllers—*I²C Controller* chapter in volume 3 of the *Arria V Device Handbook*
- Trace port interface unit (TPIU)—*CoreSight Debug and Trace* chapter in volume 3 of the *Arria V Device Handbook*. Enabling the TPIU exposes trace signals to the device pins.

Connecting Unassigned Pins to GPIO

On the **Peripheral Pin Multiplexing** tab, the **Conflicts** table shows pins that are not assigned to any peripheral. By default, general-purpose I/O (GPIO) is disabled on these pins. You can enable a pin as GPIO by changing the **GPIO Enabled** field in the table. The table also shows the GPIO pin number assigned to that pin.

Resolving Pin Multiplexing Conflicts

Use the **Conflicts** table to view pins with invalid multiple assignments. The table shows one of two or more peripheral interfaces assigned to the same pin(s). You can use the peripherals' pin configuration to determine which other peripheral(s) are in conflict, and to resolve the conflict.



For detailed information about available HPS pin configurations for the Arria V device family, refer to the HPS pin multiplexing spreadsheet, which is available from your Altera sales representative.

Configuring HPS Clocks

This section describes parameters on the **HPS Clocks** tab.



For general information about clock signals, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

User Clocks

This section describes parameters in the **User Clocks** group on the **HPS Clocks** tab.

When you enable a user clock, you must manually enter its maximum frequency for timing analysis. The TimeQuest Timing Analyzer has no other information about how software running on the HPS configures the phase-locked loop (PLL) outputs. Each possible clock, including clocks that are available from peripherals, has its own parameter for describing the clock frequency.

Table 26-7 lists the user clock parameters. The frequencies that you provide are the maximum expected frequencies. The actual clock frequencies can be modified through the register interface, for example by software running on the microprocessor unit (MPU). For further details, refer to “*Selecting PLL Output Frequency and Phase*” on page 26-9.

Table 26-7. User Clock Parameters

Parameter Name	Parameter Description	Clock Interface Name
Enable HPS-to-FPGA user 0 clock	Enable main PLL from HPS to FPGA	h2f_user0_clock
User 0 clock frequency	Specify the maximum expected frequency for the main PLL	
Enable HPS-to-FPGA user 1 clock	Enable peripheral PLL from HPS to FPGA	h2f_user1_clock
User 1 clock frequency	Specify the maximum expected frequency for the peripheral PLL	
Enable HPS-to-FPGA user 2 clock	Enable SDRAM PLL from HPS to FPGA	h2f_user2_clock
User 2 clock frequency	Specify the maximum expected frequency for the SDRAM PLL	

The clock frequencies you provide are reported in a Synopsys Design Constraints File (.sdc) generated by Qsys.



For details about driving these clocks, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

PLL Reference Clocks

This section describes parameters in the **PLL Reference Clocks** group on the **HPS Clocks** tab.

Table 26-8. PLL Reference Clock Parameters

Parameter Name	Parameter Description	Clock Interface Name
Enable FPGA-to-HPS peripheral PLL reference clock	Enable the interface for FPGA fabric to supply reference clock to HPS peripheral PLL	f2h_periph_ref_clock
Enable FPGA-to-HPS SDRAM PLL reference clock	Enable the interface for FPGA fabric to supply reference clock to HPS SDRAM PLL	f2h_sdram_ref_clock



For more information, refer to the *Clock Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Configuring the External Memory Interface

This section describes parameters on the **SDRAM** tab.

The HPS supports one memory interface implementing double data rate 2 (DDR2), double data rate 3 (DDR3), and low-power double data rate 2 (LPDDR2) protocols. The interface can be up to 40 bits wide with optional error correction code (ECC).

Configuring the HPS SDRAM controller is similar to configuring any other Altera SDRAM controller. There are several important differences:

- The HPS parameter editor supports all SDRAM protocols with one tab. When you parameterize the SDRAM controller, you must specify the memory protocol: DDR2, DDR3, or LPDDR2.

To select the memory protocol, select DDR2, DDR3, or LPDDR2 from the **SDRAM Protocol** list in the **PHY Settings** tab in the **SDRAM** tab. After you select the protocol, settings not applicable to that protocol are disabled.



Many HPS SDRAM controller settings are the same as for Altera's dedicated DDR2, DDR3, and LPDDR2 controllers. This section only describes SDRAM parameters that are specific to the HPS component.

- Because the HPS memory controller is not configurable through the Quartus II software, the Controller and Diagnostic tabs are not present in the HPS parameter editor.
- Some settings, such as the controller settings, are not included because they can only be configured through the register interface, for example by software running on the MPU.
- Unlike the memory interface clocks in the FPGA, the memory interface clocks for the HPS are initialized by the boot-up code using values provided by the configuration process. You can accept the values provided by UniPHY, or you can use your own PLL settings, as described in *"Selecting PLL Output Frequency and Phase"*.



The HPS does not support external memory interface (EMIF) synthesis generation, compilation, or timing analysis.

The HPS memory controller cannot be bonded with a memory controller on the FPGA portion of the device.



For detailed information about SDRAM controller parameters, refer to the following chapters:

- The *Implementing and Parameterizing Memory IP* chapter in volume 2 of the *External Memory Interface Handbook*.
- The *Functional Description—Hard Memory Interface* chapter in volume 3 of the *External Memory Interface Handbook*. "EMI-Related HPS Features in SoC Devices" describes features specific to the HPS SDRAM controller.

Selecting PLL Output Frequency and Phase

You select PLL output frequency and phase with controls in the **PHY Settings** tab in the **SDRAM** tab. In the HPS, PLL frequencies and phases are set by software at system startup. A PLL might not be able to produce the exact frequency that you specify in **Memory clock frequency**. Normally, the Quartus II software sets **Achieved memory clock frequency** to the closest achievable frequency, using an algorithm that tries to balance frequency accuracy against clock jitter. This clock frequency is used for timing analysis by the TimeQuest analyzer.

It is possible to use a different software algorithm for configuring the PLLs. You can force the **Achieved memory clock frequency** box to take on the same value as **Memory clock frequency**, by turning on **Use specified frequency instead of calculated frequency** in the **PHY Settings** tab, under **Clocks**.



If you turn on **Use specified frequency instead of calculated frequency**, the Quartus II software assumes that the value in the **Achieved memory clock frequency** box is correct. If it is not, timing analysis results are incorrect.


Using the Address Span Extender Component

The FPGA-to-HPS bridge and FPGA-to-HPS SDRAM memory-mapped interfaces expose their entire 4 GB address spaces to the FPGA fabric. The Address Span Extender component provides a memory-mapped window into the address space that it masters. Using the address span extender, you can expose portions of the HPS memory space without needing to expose the entire 4-GB address space.

You can use the address span extender between a soft logic master and an FPGA-to-HPS bridge or FPGA-to-HPS SDRAM interface. This component reduces the number of address bits required for a master to address a memory-mapped slave interface located in the HPS.

Figure 26-1 shows how two address span extender components might be used in a system with the HPS.

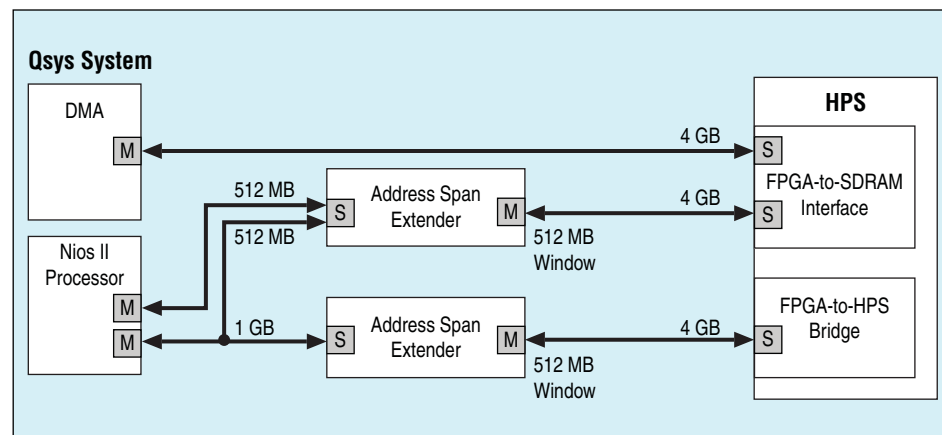Figure 26-1. Address Span Extender



You can also use the address span extender in the HPS-to-FPGA direction, for slave interfaces in the FPGA. In this case, the HPS-to-FPGA bridge exposes a limited, variable address space in the FPGA, which can be paged in using the address span extender.

For example, suppose that the HPS-to-FPGA bridge has a 1 GB span, and the HPS needs to access three independent 1 GB memories in the FPGA portion of the device. To achieve this, the HPS programs the address span extender to access one SDRAM (1 GB) in the FPGA at a time. This technique is commonly called paging or windowing.



For more information about the address span extender, refer to “Bridges” in the *Qsys Interconnect and System Design Components* chapter in volume 1 of the *Quartus II Handbook*.

Generating and Compiling the HPS Component

The process of generating and compiling an HPS design is very similar to the process for any other Qsys project. Perform the following steps:

1. Generate the design with Qsys. The generated files include an **.sdc** file containing clock timing constraints. If simulation is enabled, simulation files are also generated.



For information about generating a Qsys project, refer to the *Creating a System with Qsys* chapter in volume 1 of the *Quartus II Handbook*. For a description of the simulation files generated, refer to “Simulation Flow” in the *Simulating the HPS Component* chapter in volume 3 of the *Arria V Device Handbook*.

2. Add **system.qip** to the Quartus II project. **system.qip** is the Quartus II IP File for the HPS component, generated by Qsys.
3. Perform Analysis and Elaboration with the Quartus II software.
4. Assign constraints to the SDRAM component. When Qsys generates the HPS component (step 1), it generates the pin assignment Tcl Script File (**.tcl**) to perform memory assignments. The script file name is **<qsys_system_name>_pin_assignments.tcl**, where **<qsys_system_name>** is the name of your Qsys system. Run this script to assign constraints to the SDRAM component.

 For information about running the pin assignment script, refer to “MegaWizard Plug-In Manager Flow” in the *Implementing and Parameterizing Memory IP* chapter in volume 2 of the *External Memory Interface Handbook*.

You do not need to specify pin assignments other than memory assignments. When you configure pin multiplexing as described in “*Configuring Peripheral Pin Multiplexing*” on page 26-5, you implicitly make pin assignments for all HPS peripherals. Each peripheral is routed exclusively to the pins you specify. HPS I/O signals are exported to the top level of the Qsys design, with information enabling the Quartus II software to make pin assignments automatically.

You can view and modify the assignments in the **Peripheral Pin Multiplexing** tab. You can also view the assignments in the Quartus fitter report.

5. Compile the design with the Quartus II software.
6. Optionally back-annotate the SDRAM pin assignments, to eliminate pin assignment warnings the next time you compile the design.

 For information about back-annotating pin assignments, refer to *About Back-Annotating Assignments* in Quartus II Help.

Document Revision History

Table 26-9 shows the revision history for this document.

Table 26-9. Document Revision History

Date	Version	Changes
November 2012	1.1	■ Added debug interfaces ■ Added boot options ■ Corrected slave address width ■ Corrected SDRAM interface widths ■ Added TPIU peripheral ■ Added .sdc file generation ■ Added .tcl script for memory assignments
June 2012	1.0	Initial release.
May 2012	0.1	Preliminary draft.

This chapter describes the interfaces, including clocks and resets, implemented by the hard processor system (HPS) component.

The majority of the resets can be enabled on an individual basis. The exception is the h2f_reset interface, which is always enabled.

You must declare the clock frequency of each HPS-to-FPGA clock for timing purposes. Each possible clock, including ones that are available from peripherals, has its own parameter for describing the clock frequency. Declaring the clock frequency for HPS-to-FPGA clocks specifies how you plan to configure the PLLs and peripherals, to enable TimeQuest to accurately estimate system timing. It has no effect on PLL settings.

 For information about instantiating the HPS component, refer to the *Instantiating the HPS Component* chapter in volume 3 of the *Arria® V Device Handbook*. For Avalon™ protocol timing, refer to *Avalon Interface Specifications*. For Advanced Microcontroller Bus Architecture (AMBA®) Advanced eXtensible Interface (AXI™) protocol timing, refer to the *AMBA AXI Protocol Specification v1.0*, which you can download from the ARM website (infocenter.arm.com).

Memory-Mapped Interfaces

FPGA-to-HPS Bridge

Table 27–1. FPGA-to-HPS Bridges and Clocks

Interface Name	Description	Associated Clock Interface ⁽¹⁾
f2h_axi_slave	FPGA-to-HPS AXI slave interface	f2h_axi_clock

Note to Table 27–1:

(1) Refer to “Clocks” on page 27–4 for information about clock interfaces.

The FPGA-to-HPS interface is a configurable data width AXI slave allowing FPGA masters to issue transactions to the HPS. This interface allows the FPGA fabric to access the majority of the HPS slaves. This interface also provides a coherent memory interface.

The FPGA-to-HPS interface is an AXI-3 compliant interface with the following features:

- Configurable data width: 32, 64, or 128 bits

- Accelerator Coherency Port (ACP) sideband signals
- HPS-side AXI bridge to manage clock crossing, buffering, and data width conversion.

Other interface standards in the FPGA fabric, such as connecting to Avalon® Memory-Mapped (Avalon-MM) interfaces, can be supported through the use of soft logic adaptors. The Qsys system integration tool automatically generates adaptor logic to connect AXI to Avalon-MM interfaces.

This interface has an address width of 32 bits. To access existing Avalon-MM/AXI masters, you can use the Altera® Address Span Extender.



For more information about the FPGA-to-HPS bridge, refer to the *HPS-FPGA AXI Bridges* chapter in volume 3 of the *Arria V Device Handbook*. For information about the address span extender, refer to “Using the Address Span Extender Component” in the *Instantiating the HPS Component* chapter in volume 3 of the *Arria V Device Handbook*.

ACP Sideband Signals

For communication with the ACP on the microprocessor unit (MPU) subsystem, AXI sideband signals are used to describe the inner cacheable attributes for the transaction.



For more information about the ACP sideband signals, refer to the *Cortex-A9 Microprocessor Unit Subsystem* chapter in volume 3 of the *Arria V Device Handbook*.

HPS-to-FPGA and Lightweight HPS-to-FPGA Bridges

Table 27-2. HPS-to-FPGA and Lightweight HPS-to-FPGA Bridges and Clocks

Interface Name	Description	Associated Clock Interface ⁽¹⁾
h2f_axi_master	HPS-to-FPGA AXI master interface	h2f_axi_clock
h2f_lw_axi_master	HPS-to-FPGA lightweight AXI master interface	h2f_lw_axi_clock

Note to Table 27-2:

(1) Refer to “Clocks” on page 27-4 for information about clock interfaces.

The HPS-to-FPGA interface is a configurable data width AXI master (32, 64, or 128-bit) that allows HPS masters to issue transactions to the FPGA fabric.

The lightweight HPS-to-FPGA interface is a 32-bit AXI master that allows HPS masters to issue transactions to the FPGA fabric.

Both HPS-to-FPGA interfaces are AXI-3 compliant. The HPS-side AXI bridges manage clock crossing, buffering, and data width conversion where necessary.

Other interface standards in the FPGA fabric, such as connecting to Avalon-MM interfaces, can be supported through the use of soft logic adaptors. The Qsys system integration tool automatically generates adaptor logic to connect AXI to Avalon-MM interfaces.

Each AXI bridge accepts a clock input from the FPGA fabric and performs clock domain crossing internally. The exposed AXI interface operates on the same clock domain as the clock supplied by the FPGA fabric.

 For more information, refer to the *HPS-FPGA AXI Bridges* chapter in volume 3 of the *Arria V Device Handbook*.

FPGA-to-HPS SDRAM Interface

The FPGA-to-HPS SDRAM interface is a direct connection between the FPGA fabric and the HPS SDRAM controller. This interface is highly configurable, allowing a mix between number of ports and port width. The interface supports both AXI-3 and Avalon-MM protocols.

Table 27-3. HPGA-to-HPS SDRAM Interfaces and Clocks

Interface Name	Description	Associated Clock Interface ⁽¹⁾
f2h_sdram0_data	SDRAM AXI or Avalon-MM port 0	f2h_sdram0_clock
f2h_sdram1_data	SDRAM AXI or Avalon-MM port 1	f2h_sdram1_clock
f2h_sdram2_data	SDRAM AXI or Avalon-MM port 2	f2h_sdram2_clock
f2h_sdram3_data	SDRAM AXI or Avalon-MM port 3	f2h_sdram3_clock
f2h_sdram4_data	SDRAM AXI or Avalon-MM port 4	f2h_sdram4_clock
f2h_sdram5_data	SDRAM AXI or Avalon-MM port 5	f2h_sdram5_clock

Note to Table 27-3:

(1) Refer to “Clocks” on page 27-4 for information about clock interfaces.

The FPGA-to-HPS SDRAM interface is a configurable interface to the multi-port SDRAM controller.

The total data width of all interfaces is limited to a maximum of 256 bits in the read direction and 256 bits in the write direction. The interface is implemented as four 64-bit read ports and four 64-bit write ports. As a result, the minimum data width used by the interface is 64 bits, regardless of the number or type of interfaces.

You can configure this interface the following ways:

- AXI-3 or Avalon-MM protocol
- Number of interfaces
- Data width of interfaces

The FPGA-to-HPS SDRAM interface supports six command ports, allowing up to six Avalon-MM interfaces or three bidirectional AXI interfaces.

Each command port is available either to implement a read or write command port for AXI, or to form part of an Avalon-MM interface.

You can use a mix of Avalon-MM and AXI interfaces, limited by the number of command/data ports available. Some AXI features are not present in Avalon-MM interfaces.

This interface has an address width of 32 bits. To access existing Avalon-MM/AXI masters, you can use the Altera Address Span Extender.



For more information about available combinations of interfaces and ports, refer to the *SDRAM Controller Subsystem* chapter in volume 3 of the *Arria V Device Handbook*. For information about the address span extender, refer to “Using the Address Span Extender Component” in the *Instantiating the HPS Component* chapter in volume 3 of the *Arria V Device Handbook*.

Clocks

The HPS-to-FPGA clock interface supplies physical clocks and resets to the FPGA. These clocks and resets are generated in the HPS.

Alternative Clock Inputs to HPS PLLs

This section lists alternative clock inputs to HPS PLLs.

- `f2h_periph_ref_clock`—FPGA-to-HPS peripheral PLL reference clock. You can connect this clock input to a clock in your design that is driven by the clock network on the FPGA side.
- `f2h_sdram_ref_clock`—FPGA-to-HPS SDRAM PLL reference clock. You can connect this clock to a clock in your design that is driven by the clock network on the FPGA side.

User Clocks

A user clock is a PLL output that is connected to the FPGA fabric rather than the HPS. You can connect a user clock to logic that you instantiate in the FPGA fabric.

- `h2f_user0_clock`—HPS-to-FPGA user clock, driven from main PLL
- `h2f_user1_clock`—HPS-to-FPGA user clock, driven from peripheral PLL
- `h2f_user2_clock`—HPS-to-FPGA user clock, driven from SDRAM PLL

AXI Bridge FPGA Interface Clocks

The AXI interface has an asynchronous clock crossing in the FPGA-to-HPS bridge. The FPGA-to-HPS and HPS-to-FPGA interfaces are synchronized to clocks generated in the FPGA fabric. These interfaces can be asynchronous to one another. The SDRAM controller’s multiport front end (MPFE) transfers the data between the FPGA and HPS clock domains.

- `f2h_axi_clock`—AXI slave clock for FPGA-to-HPS bridge, generated in FPGA fabric
- `h2f_axi_clock`—AXI master clock for HPS-to-FPGA bridge, generated in FPGA fabric
- `h2f_lw_axi_clock`—AXI master clock for lightweight HPS-to-FPGA bridge, generated in FPGA fabric

SDRAM Clocks

You can configure the HPS component with up to six FPGA-to-HPS SDRAM clocks.

Each command channel to the SDRAM controller has an individual clock source from the FPGA fabric. The interface clock is always supplied by the FPGA fabric, with clock crossing occurring on the HPS side of the boundary.

The FPGA-to-HPS SDRAM clocks are driven by soft logic in the FPGA fabric.

- f2h_sdram0_clock—SDRAM clock for port 0
- f2h_sdram1_clock—SDRAM clock for port 1
- f2h_sdram2_clock—SDRAM clock for port 2
- f2h_sdram3_clock—SDRAM clock for port 3
- f2h_sdram4_clock—SDRAM clock for port 4
- f2h_sdram5_clock—SDRAM clock for port 5

Resets

This section describes the reset interfaces to the HPS component.



For details about the HPS reset sequences, refer to “Functional Description of the Reset Manager” in the *Reset Manager* chapter in volume 3 of the *Arria V Device Handbook*.

HPS-to-FPGA Reset Interfaces

The following interfaces allow the HPS to reset soft logic in the FPGA fabric:

- h2f_reset—HPS-to-FPGA cold and warm reset
- h2f_cold_reset—HPS-to-FPGA cold reset
- h2f_warm_reset_handshake—Warm reset request and acknowledge interface between HPS and FPGA

HPS External Reset Sources

The following interfaces allow soft logic in the FPGA fabric to reset the HPS:

- f2h_cold_reset_req—FPGA-to-HPS cold reset request
- f2h_warm_reset_req—FPGA-to-HPS warm reset request
- f2h_dbg_reset_req—FPGA-to-HPS debug reset request

Debug and Trace Interfaces

Trace Port Interface Unit

The TPIU is a bridge between on-chip trace sources and a trace port.

- h2f_tpiu
- h2f_tpiu_clock_in

FPGA System Trace Macrocell Events Interface

The system trace macrocell (STM) hardware events allow logic in the FPGA to insert messages into the trace stream.

- f2h_stm_hw_events

FPGA Cross Trigger Interface

The cross trigger interface (CTI) allows trigger sources and sinks to interface with the embedded cross trigger (ECT).

- h2f_cti
- h2f_cti_clock

Debug APB Interface

The debug Advanced Peripheral Bus (APB™) interface allows debug components in the FPGA fabric to debug components on the CoreSight™ debug APB.

- h2f_debug_apb
- h2f_debug_apb_sideband
- h2f_debug_apb_reset
- h2f_debug_apb_clock

Peripheral Signal Interfaces

DMA Controller Peripheral Request Interfaces

The DMA controller interface allows soft IP in the FPGA fabric to communicate with the DMA controller in the HPS. You can configure up to eight separate interface channels.

- f2h_dma_req0—FPGA DMA controller peripheral request interface 0
- f2h_dma_req1—FPGA DMA controller peripheral request interface 1
- f2h_dma_req2—FPGA DMA controller peripheral request interface 2
- f2h_dma_req3—FPGA DMA controller peripheral request interface 3
- f2h_dma_req4—FPGA DMA controller peripheral request interface 4
- f2h_dma_req5—FPGA DMA controller peripheral request interface 5
- f2h_dma_req6—FPGA DMA controller peripheral request interface 6
- f2h_dma_req7—FPGA DMA controller peripheral request interface 7



For more information, refer to the *DMA Controller* chapter in volume 3 of the *Arria V Device Handbook*.

Other Interfaces

MPU Standby and Event Interfaces

MPU standby and event signals are notification signals to the FPGA fabric that the MPU is in standby. Event signals are used to wake up the Cortex-A9 processors from a wait for event (WFE) state. The standby and event signals are included in the following interfaces:

- `h2f_mpu_events`—MPU standby and event interface, including the following signals:
 - `h2f_mpu_eventi`—Sends an event from logic in the FPGA fabric to the MPU. This FPGA-to-HPS signal is used to wake up a processor that is in a Wait For Event state. Asserting this signal has the same effect as executing the SEV instruction in the Cortex-A9. This signal must be de-asserted until the FPGA fabric is powered-up and configured.
 - `h2f_mpu_evento`—Sends an event from the MPU to logic in the FPGA fabric. This HPS-to-FPGA signal is asserted when an SEV instruction is executed by one of the Cortex-A9 processors.
 - `h2f_mpu_standbywfe[1:0]`—Indicates whether each Cortex-A9 processor is in the WFE state
 - `h2f_mpu_standbywfi[1:0]`—Indicates whether each Cortex-A9 processor is in the wait for interrupt (WFI) state
- `h2f_mpu_gp`—General purpose interface

The MPU provides signals to indicate when it is in a standby state. These signals are available to custom hardware designs in the FPGA fabric.



For more information, refer to the *Cortex-A9 Microprocessor Unit Subsystem* chapter in volume 3 of the *Arria V Device Handbook*.

FPGA-to-HPS Interrupts

You can configure the HPS component to provide 64 general-purpose FPGA-to-HPS interrupts, allowing soft IP in the FPGA fabric to trigger interrupts to the MPU's generic interrupt controller (GIC). The interrupts are implemented through the following 32-bit interfaces:

- `f2h_irq0`—FPGA-to-HPS interrupts 0 through 31
- `f2h_irq1`—FPGA-to-HPS interrupts 32 through 63

The FPGA-to-HPS interrupts are asynchronous on the FPGA interface. Inside the HPS, the interrupts are synchronized to the MPU's internal peripheral clock (`periphclk`).

General-Purpose Interfaces

You can use the FPGA manager to supply the h2f_mpu_gp interface, which includes the following general-purpose signals:

- 32 FPGA-to-HPS signals
- 32 HPS-to-FPGA signals



For more information, refer to the *FPGA Manager* chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

Table 27–4 shows the revision history for this document.

Table 27–4. Document Revision History

Date	Version	Changes
November 2012	1.1	■ Added debug interfaces. ■ Updated HPS-to-FPGA reset interface names. ■ Updated HPS external reset source interface names. ■ Removed DMA peripheral interface clocks. ■ Referred to Altera Address Span Extender.
June 2012	1.0	Initial release.
May 2012	0.1	Preliminary draft.

HPS Simulation Support

This section describes the simulation support for the hard processor system (HPS) component. The HPS simulation models support interfaces between the HPS and FPGA fabric, including:

- Bus functional models (BFMs) for most interfaces between HPS and FPGA fabric
- A simulation model for the HPS SDRAM memory

The HPS simulation support does not include modules implemented in the HPS, such as the ARM® Cortex™-A9 MPCore processor.

You specify simulation support files when you instantiate the HPS component in the Qsys system integration tool. When you enable a particular HPS-FPGA interface, Qsys provides the corresponding model during the generation process. Refer to “Simulation Flows” on page 28–10 for a description of the simulation flows.



For general information about instantiating the component, refer to the *Instantiating the HPS Component* chapter in volume 3 of the *Arria® V Device Handbook*.

The HPS simulation support enables you to develop and verify your own FPGA soft logic or intellectual property (IP) that interfaces to the HPS component.


The simulation model supports the following interfaces:

- Clock and reset interfaces
- FPGA-to-HPS Advanced Microcontroller Bus Architecture (AMBA®) Advanced eXtensible Interface (AXI™) slave interface
- HPS-to-FPGA AXI master interface
- Lightweight HPS-to-FPGA AXI master interface
- FPGA-to-HPS SDRAM interface
- Microprocessor unit (MPU) general-purpose I/O interface
- MPU standby and event interface
- Interrupts interface
- Direct memory access (DMA) controller peripheral request interface
- Debug Advanced Peripheral Bus (APB™) interface
- System Trace Macrocell (STM) hardware event

- FPGA cross trigger interface
- FPGA trace port interface

Figure 28-1 on page 28-2 shows the HPS with its BFM.

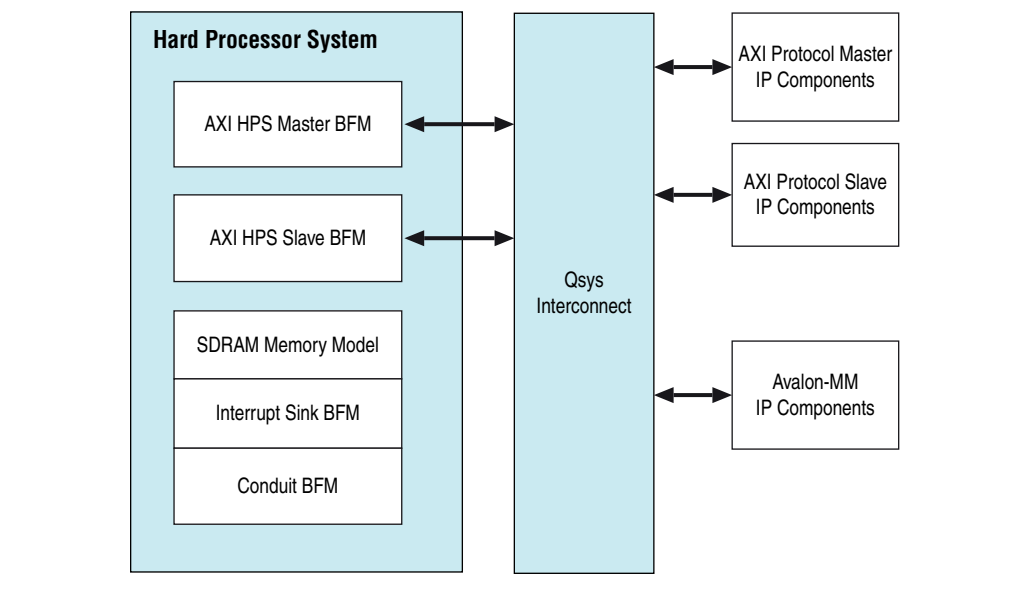Figure 28-1. HPS BFM Block Diagram



The HPS BFM uses standard function calls from the Altera® BFM application programming interface (API), as detailed in the remainder of this section.

For information about the BFM API, refer to the *Avalon Verification IP Suite User Guide* and the *Mentor Verification IP Altera Edition User Guide*.

HPS simulation supports only Verilog HDL or SystemVerilog simulation environments.

Clock and Reset Interfaces

For general information about clock and reset interfaces, refer to “Memory-Mapped Interfaces” in the *HPS Component Interfaces* chapter in volume 3 of the *Arria V Device Handbook*.

Clock Interface

Qsys generates the clock source BFM for each clock output interface from the HPS component. For HPS-to-FPGA user clocks, specify the BFM clock rate in the **User clock frequency** field in the **HPS Clocks** page when instantiating the HPS component in Qsys.

The HPS-to-FPGA trace port interface unit generates a clock output to the FPGA, named `h2f_tpiu_clock`. In simulation, the clock source BFM also represents this clock output’s behavior.

Table 28–1 lists all HPS clock output interfaces with the BFM instance name.

Table 28–1. HPS Clock Output Interface Simulation Model

Interface Name	BFM Instance Name
h2f_user0_clock	h2f_user0_clock
h2f_user1_clock	h2f_user1_clock
h2f_user2_clock	h2f_user2_clock
h2f_tpiu_clock	h2f_tpiu_clock

The Altera clock source BFM application programming interface (API) applies to all the BFM instance names listed in Table 28–1. Your Verilog interfaces use the same API, passing in different instance names.

Qsys does not generate BFM instance names for FPGA-to-HPS clock input interfaces.

Reset Interface

The HPS reset request and handshake interfaces are connected to Altera conduit BFM instance names for simulation. Table 28–2 lists the name of each interface. You can monitor the reset request interface state changes or set the interface by using the API listed in Table 28–2.

Table 28–2. HPS Reset Input Interface Simulation Model

Interface Name	BFM Instance Name	API Function Names
f2h_cold_reset_req	f2h_cold_reset_req	get_f2h_cold_rst_req_n()
f2h_debug_reset_req	f2h_debug_reset_req	get_f2h_dbg_rst_req_n()
f2h_warm_reset_req	f2h_warm_reset_req	get_f2h_warm_rst_req_n()
h2f_warm_reset_handshake	h2f_warm_reset_handshake	set_h2f_pending_rst_req_n() get_f2h_pending_rst_ack_n()

Table 28–3 lists all HPS reset output interfaces with the BFM instance name. The Altera reset source BFM application programming interface applies to all the BFM instance names listed in Table 28–3.

Table 28–3. HPS Reset Output Interface Simulation Model

Interface Name	BFM Instance Name
h2f_reset	h2f_reset
h2f_cold_reset	h2f_cold_reset
h2f_debug_apb_reset	h2f_debug_apb_reset

The HPS reset output interface is connected to a reset source BFM. Qsys configures the BFM as shown in [Table 28-4](#).

Table 28-4. Configuration of Reset Source BFM for HPS Reset Output Interface

Parameter	BFM Value ⁽¹⁾	Meaning
Assert reset high	Off	This parameter is off, specifying an active-low reset signal from the BFM.
Cycles of initial reset	0	This parameter is 0, specifying that the BFM does not assert the reset signal automatically.
Note to Table 28-4: (1) The parameter value of the instantiated BFM as configured for HPS simulation		

FPGA-to-HPS AXI Slave Interface

The FPGA-to-HPS AXI slave interface, `f2h_axi_slave`, is connected to a Mentor Graphics AXI slave BFM for simulation. Qsys configures the BFM as shown in [Table 28-5](#). The BFM clock input is connected to `f2h_axi_clock` clock.

Table 28-5. Configuration of FPGA-to-HPS AXI Slave BFM

Parameter	Value
AXI Address Width	32
AXI Read Data Width	32, 64, 128
AXI Write Data Width	32, 64, 128
AXI ID Width	8

You control and monitor the AXI slave BFM by using the BFM API.



For more information, refer to the *Mentor Verification IP Altera Edition User Guide*. For general information about FPGA-to-HPS AXI slave interfaces, refer to “Memory-Mapped Interfaces” in the *HPS Component Interfaces* chapter in volume 3 of the *Arria V Device Handbook*.

HPS-to-FPGA AXI Master Interface

The HPS-to-FPGA AXI master interface, `h2f_axi_master`, is connected to a Mentor Graphics AXI master BFM for simulation. Qsys configures the BFM as shown in [Table 28-6](#). The BFM clock input is connected to `h2f_axi_clock` clock.

Table 28-6. Configuration of HPS-to-FPGA AXI Master BFM

Parameter	Value
AXI Address Width	30
AXI Read and Write Data Width	32, 64, 128
AXI ID Width	12

You control and monitor the AXI master BFM by using the BFM API.

- For more information, refer to the *Mentor Verification IP Altera Edition User Guide*. For general information about HPS-to-FPGA AXI master interfaces, refer to “Memory-Mapped Interfaces” in the *HPS Component Interfaces* chapter in volume 3 of the *Arria V Device Handbook*.

Lightweight HPS-to-FPGA AXI Master Interface

The lightweight HPS-to-FPGA AXI master interface, `h2f_lw_axi_master`, is connected to a Mentor Graphics AXI master BFM for simulation. Qsys configures the BFM as shown in Table 28–7. The BFM clock input is connected to `h2f_lw_axi_clock`.

Table 28–7. Configuration of Lightweight HPS-to-FPGA AXI Master BFM

Parameter	Value
AXI Address Width	21
AXI Read and Write Data Width	32
AXI ID Width	12

You control and monitor the AXI master BFM by using the BFM API.

- For more information, refer to the *Mentor Verification IP Altera Edition User Guide*. For general information about lightweight HPS-to-FPGA AXI master interfaces, refer to “Memory-Mapped Interfaces” in the *HPS Component Interfaces* chapter in volume 3 of the *Arria V Device Handbook*.

FPGA-to-HPS SDRAM Interface

The HPS component contains a memory interface simulation model to which all of the FPGA-to-HPS SDRAM interfaces are connected. The model is based on the HPS implementation and provides cycle-level accuracy, reflecting the true bandwidth and latency of the interface. However, the model does not have the detailed configuration provided by the HPS software, and hence does not reflect any inter-port scheduling that might occur under contention on the real hardware when different priorities or weights are used.

- For more information, refer to “EMI-Related HPS Features in SoC Devices” in the *Functional Description—Hard Memory Interface* chapter in volume 3 of the *External Memory Interface Handbook*.

HPS-to-FPGA MPU General-Purpose I/O Interface

The HPS-to-FPGA MPU general-purpose I/O interface is connected to an Altera conduit BFM for simulation. Table 28-8 lists the name of each interface, along with API function names for each type of simulation. You can monitor the interface state changes or set the interface by using the API listed in Table 28-8.

Table 28-8. HPS-to-FPGA MPU General-Purpose I/O Interface Simulation Model

Interface Name	BFM Instance Name	RTL Simulation API Function Names	Post-Fit Simulation API Function Names
h2f_mpu_gp	h2f_mpu_gp	set_h2f_mpu_gp_out() get_h2f_mpu_gp_in()	set_gp_out() get_gp_in()

HPS-to-FPGA MPU Event Interface

The HPS-to-FPGA MPU event interface is connected to an Altera conduit BFM for simulation. Table 28-9 lists the name of each interface, along with API function names for each type of simulation. You can monitor the interface state changes or set the interface by using the API listed in Table 28-9.

Table 28-9. HPS-to-FPGA MPU Event Interface Simulation Model

Interface Name	BFM Instance Name	RTL Simulation API Function Names ⁽¹⁾	Post-Fit Simulation API Function Names
h2f_mpu_events	h2f_mpu_events	get_h2f_mpu_eventi() set_h2f_mpu_evento() set_h2f_mpu_standbywfe() set_h2f_mpu_standbywfi()	get_eventi() set_evento() set_standbywfe() set_standbywfi()

Note to Table 28-9:

(1) The usage of conduit get_*() and set_*() API functions is the same as with the general Avalon conduit BFM.

FPGA-to-HPS Interrupts Interface

The FPGA-to-HPS interrupts interface is connected to an Altera Avalon interrupt sink BFM for simulation. Table 28-10 lists the name of each interface.

Table 28-10. FPGA-to-HPS Interrupts Interface Simulation Model

Interface Name	BFM Instance Name
f2h_irq0	f2h_irq0
f2h_irq1	f2h_irq1

The Altera Avalon interrupt sink BFM API applies to all the BFMs listed in Table 28-3.

HPS-to-FPGA Debug APB Interface

The HPS-to-FPGA debug APB interface is connected to an Altera conduit BFM for simulation. Table 28–11 lists the name of each interface, along with API function names for each type of simulation. You can monitor the interface state changes or set the interface by using the API functions listed in Table 28–11.

Table 28–11. HPS-to-FPGA Debug APB Interface Simulation Model

Interface Name	BFM Name	RTL Simulation API Function Names	Post-Fit Simulation API Function Names
h2f_debug_apb	h2f_debug_apb	set_h2f_dbg_apb_PADDR() set_h2f_dbg_apb_PADDR_31() set_h2f_dbg_apb_PENABLE() get_h2f_dbg_apb_PRDATA() get_h2f_dbg_apb_PREADY() set_h2f_dbg_apb_PSEL() get_h2f_dbg_apb_PSLVERR() set_h2f_dbg_apb_PWDATA() set_h2f_dbg_apb_PWRITE()	set_PADDR() set_PADDR_31() set_PENABLE() get_PRDATA() get_PREADY() set_PSEL() get_PSLVERR() set_PWDATA() set_PWRITE()
h2f_debug_apb_side band	h2f_debug_apb_side band	get_h2f_dbg_apb_PCLKEN() get_h2f_dbg_apb_DBG_APB_DISABLE()	get_PCLKEN() get_DBG_APB_DISABLE()

FPGA-to-HPS System Trace Macrocell (STM) Hardware Event Interface

The FPGA-to-HPS STM hardware event interface is connected to an Altera conduit BFM for simulation. Table 28–12 lists the name of each interface, along with API function name for each type of simulation. You can monitor the interface state changes or set the interface by using the API functions listed in Table 28–12.

Table 28–12. FPGA-to-HPS STM Hardware Event Interface Simulation Model

Interface Name	BFM Name	RTL Simulation API Function Name	Post-Fit Simulation API Function Name
f2h_stm_hw_events	f2h_stm_hw_events	get_f2h_stm_hwevents()	get_stm_events()

HPS-to-FPGA Cross-Trigger Interface

The HPS-to-FPGA cross-trigger interface is connected to an Altera conduit BFM for simulation. [Table 28-13](#) lists the name of each interface, along with API function names for each type of simulation. You can monitor the interface state changes or set the interface by using the API functions listed in [Table 28-13](#).

Table 28-13. HPS-to-FPGA Cross-Trigger Interface Simulation Model

Interface Name	BFM Name	RTL Simulation API Function Names	Post-Fit Simulation API Function Names
h2f_cti	h2f_cti	get_h2f_cti_trig_in() set_h2f_cti_trig_in_ack() set_h2f_cti_trig_out() get_h2f_cti_trig_out_ack() set_h2f_cti_asicctl() get_h2f_cti_fpga_clk_en()	get_trig_in() set_trig_inack() set_trig_out() get_trig_outack() set_asicctl() get_clk_en()

HPS-to-FPGA Trace Port Interface

The HPS-to-FPGA trace port interface is connected to an Altera conduit BFM for simulation. [Table 28-14](#) lists the name of each interface, along with API function names for each type of simulation. You can monitor the interface state changes or set the interface by using the API functions listed in [Table 28-14](#).

Table 28-14. HPS-to-FPGA Trace Port Interface Simulation Model

Interface Name	BFM Name	RTL Simulation API Function Names	Post-Fit Simulation API Function Names
h2f_tpiu	h2f_tpiu	get_h2f_tpiu_clk_ctl() set_h2f_tpiu_data()	get_traceclk_ctl() set_trace_data()

FPGA-to-HPS DMA Handshake Interface

The FPGA-to-HPS DMA handshake interface is connected to an Altera conduit BFM for simulation. Table 28–15 lists the name for each interface, along with API function names for each type of simulation. You can monitor the interface state changes or set the interface by using the API listed in Table 28–15.

Table 28–15. FPGA-to-HPS DMA Handshake Interface Simulation Model

Interface Name	BFM Instance Name	RTL Simulation API Function Names ⁽¹⁾	Post-Fit Simulation API Function Names
f2h_dma_req0	f2h_dma_req0	get_f2h_dma_req0_req() get_f2h_dma_req0_single() set_f2h_dma_req0_ack()	get_channel0_req() get_channel0_single() set_channel0_xx_ack()
f2h_dma_req1	f2h_dma_req1	get_f2h_dma_req1_req() get_f2h_dma_req1_single() set_f2h_dma_req1_ack()	get_channel1_req() get_channel1_single() set_channel1_xx_ack()
f2h_dma_req2	f2h_dma_req2	get_f2h_dma_req2_req() get_f2h_dma_req2_single() set_f2h_dma_req2_ack()	get_channel2_req() get_channel2_single() set_channel2_xx_ack()
f2h_dma_req3	f2h_dma_req3	get_f2h_dma_req3_req() get_f2h_dma_req3_single() set_f2h_dma_req3_ack()	get_channel3_req() get_channel3_single() set_channel3_xx_ack()
f2h_dma_req4	f2h_dma_req4	get_f2h_dma_req4_req() get_f2h_dma_req4_single() set_f2h_dma_req4_ack()	get_channel4_req() get_channel4_single() set_channel4_xx_ack()
f2h_dma_req5	f2h_dma_req5	get_f2h_dma_req5_req() get_f2h_dma_req5_single() set_f2h_dma_req5_ack()	get_channel5_req() get_channel5_single() set_channel5_xx_ack()
f2h_dma_req6	f2h_dma_req6	get_f2h_dma_req6_req() get_f2h_dma_req6_single() set_f2h_dma_req6_ack()	get_channel6_req() get_channel6_single() set_channel6_xx_ack()
f2h_dma_req7	f2h_dma_req7	get_f2h_dma_req7_req() get_f2h_dma_req7_single() set_f2h_dma_req7_ack()	get_channel7_req() get_channel7_single() set_channel7_xx_ack()
Note to Table 28–15: (1) The usage of conduit get_*() and set_*() API functions is the same as with the general Avalon conduit BFM.			

Simulation Flows

This section describes the simulation flows for an HPS-based design.

Altera provides both functional register transfer level (RTL) simulation and post-fitter gate-level simulation flows. The simulation flows involve the following major steps:

1. Instantiate the HPS component—Refer to [“Specifying HPS Simulation Model in Qsys”](#) on page 28–10.
2. Generate the system in Qsys, including the simulation model—Refer to [“Generating HPS Simulation Model in Qsys”](#) on page 28–13.
3. Run the simulation—Refer to one of the following sections:
 - [“Running HPS RTL Simulation”](#) on page 28–13
 - [“Running HPS Post-Fit Simulation”](#) on page 28–14



For general information about simulation, refer to the [Simulating Altera Designs](#) chapter in volume 3 of the *Quartus II Handbook*.

Specifying HPS Simulation Model in Qsys

The following steps outline how to set up the HPS component for simulation.

1. Add the HPS component from the Qsys Component Library.
2. Configure the component based on your application needs by selecting or deselecting the HPS-FPGA interfaces.
3. Connect the appropriate HPS interfaces to other components in the system. For example, connect the FPGA-to-HPS AXI slave interface to an AXI master interface in another component in the system.

When you create your component, make sure the conduit interfaces have the correct role names, directions, and widths. [Table 28–16](#) lists the role names, directions, and widths for all the HPS conduit interfaces.



For general information about adding the HPS component to your design, refer to the [Instantiating the HPS Component](#) chapter in volume 3 of the *Arria V Device Handbook*.

Table 28–16. HPS Conduit Interfaces (Part 1 of 3)

Role Name	Direction	Width
h2f_warm_reset_handshake		
h2f_pending_rst_req_n	Output	1
f2h_pending_rst_ack_n	Input	1
h2f_mpu_gp		
gp_in	Input	32
gp_out	Output	32

Table 28–16. HPS Conduit Interfaces (Part 2 of 3)

Role Name	Direction	Width
h2f_mpu_events		
eventi	Input	1
evento	Output	1
standbywfe	Output	2
standbywfi	Output	2
f2h_dma_req0		
req0_req	Input	1
req0_single	Input	1
req0_ack	Output	1
f2h_dma_req1		
req1_req	Input	1
req1_single	Input	1
req1_ack	Output	1
f2h_dma_req2		
req2_req	Input	1
req2_single	Input	1
req2_ack	Output	1
f2h_dma_req3		
req3_req	Input	1
req3_single	Input	1
req3_ack	Output	1
f2h_dma_req4		
req4_req	Input	1
req4_single	Input	1
req4_ack	Output	1
f2h_dma_req5		
req5_req	Input	1
req5_single	Input	1
req5_ack	Output	1
f2h_dma_req6		
req6_req	Input	1
req6_single	Input	1
req6_ack	Output	1
f2h_dma_req7		
req7_req	Input	1
req7_single	Input	1
req7_ack	Output	1

Table 28-16. HPS Conduit Interfaces (Part 3 of 3)

Role Name	Direction	Width
h2f_debug_apb		
paddr	Input	18
paddr_31	Input	1
penable	Input	1
prdata	Output	32
pready	Output	1
psel	Input	1
pslverr	Output	1
pwwdata	Input	32
pwwrite	Input	1
h2f_debug_apb_sideband		
pclken	Output	1
dbg_apb_disable	Output	1
f2h_stm_hw_events		
stm_hwevents	Output	28
h2f_cti		
trig_in	Output	8
trig_in_ack	Input	8
trig_out	Input	8
trig_out_ack	Output	8
asicctl	Input	8
fpga_clk_en	Output	1
h2f_tpiu		
clk_ctl	Output	1
data	Input	32

Generating HPS Simulation Model in Qsys

The following steps outline how to generate the simulation model.

1. Go to the **Generation** page in Qsys.
2. For RTL simulation, perform the following steps:
 - a. Set **Create simulation model to Verilog**.
 - b. Click **Generate**.



HPS simulation does not support the VHDL simulation environment.

For post-fit simulation, perform the following steps:

- a. Turn on the **Create HDL design files for synthesis** option.
- b. Turn on the **Create block symbol file (.bsf)** option.
- c. Click **Generate**.



For general information about generating the HPS component, refer to the *Instantiating the HPS Component* chapter in volume 3 of the *Arria V Device Handbook*. For more information about Qsys simulation, refer to “Simulating a Qsys System” in the *Creating a System with Qsys* chapter in volume 1 of the *Quartus II Handbook*.

Running HPS RTL Simulation

Qsys generates scripts for various simulators that you use to complete the simulation process. Table 28–17 lists simulation tools, script names and the script directories for various vendors.

Table 28–17. Qsys-Generated Scripts for Various Simulators

Simulator	Script Name	Directory
Mentor Graphics Modelsim® Altera Edition	msim_setup.tcl	<project directory>/<Qsys design name>/simulation/mentor
Cadence NC-Sim	ncsim_setup.sh	<project directory>/<Qsys design name>/simulation/cadence
Synopsys VCS	vcs_setup.sh	<project directory>/<Qsys design name>/simulation/synopsys/vcs
Synopsys VCS-MX	vcsmx_setup.sh	<project directory>/<Qsys design name>/simulation/synopsys/vcsmx



For detailed simulation steps, refer to the *Mentor Verification IP Altera Edition User Guide*, and to the *Qsys Tutorial* chapter of the *Avalon Verification IP Suite User Guide*.

Running HPS Post-Fit Simulation

The section describes how you run HPS post-fit simulation. After successful Qsys generation, perform the following steps:

1. Add the Qsys-generated synthesis file set to your Quartus II project by performing the following steps:
 - a. In the Quartus II software, click **Settings** in the Assignments menu.
 - b. In the **Settings - <your Qsys system name>** dialog box, on the **Files** tab, browse to <your project directory>/<your Qsys system name>/**synthesis/** and select <your Qsys system name>.**qip**.
 - c. Click **OK**.
2. You can instantiate the Qsys system that contains HPS component as your Quartus II project top-level entity, if necessary.
3. Compile the design by clicking **Start Compilation** in the Processing menu.
4. Change the EDA Netlist Writer settings, if necessary, by performing the following steps:
 - a. Click **Settings** in the Assignment menu.
 - b. On the **Simulation** tab, under the **EDA Tool Settings** tab, you can specify the following EDA Netlist Writer settings:
 - **Tool name**—The name of the simulation tool
 - **Format for output netlist**
 - **Output directory**
 - c. Click **OK**.

❓ For more information about EDA Netlist Writer settings, refer to *Simulation Page (Settings Dialog Box)* in Quartus II Help.
5. To create the post-fitter simulation model with Quartus II EDA Netlist Writer, in the Start menu, point to **Processing** and click **Start EDA Netlist Writer**.
6. Compile the necessary simulation files in your simulation tool. [Table 28-18](#) lists the required libraries and files.
7. Start simulation.

Table 28–18. Post-Fit Simulation Files

Library	Directory ⁽¹⁾	File
Altera Verification IP Library	<Avalon Verification IP>/lib/	verbosity_pkg.sv avalon_mm_pkg.sv avalon_utilities_pkg.sv
Avalon Clock Source BFM	<Avalon Verification IP>/altera_avalon_clock_source/	altera_avalon_clock_source.sv
Avalon Reset Source BFM	<Avalon Verification IP>/altera_avalon_reset_source/	altera_avalon_reset_source.sv
Avalon MM Slave BFM	<Avalon Verification IP>/altera_avalon_mm_slave_bfm/	altera_avalon_mm_slave_bfm.sv
Avalon Interrupt Sink BFM	<Avalon Verification IP>/altera_avalon_interrupt_sink/	altera_avalon_interrupt_sink.sv
Mentor AXI Verification IP Library	<AXI Verification IP>/common/	questa_mvc_svapi.svh
Mentor AXI3 BFM	<AXI Verification IP>/axi3/bfm/	mgc_common_axi.sv mgc_axi_master.sv mgc_axi_slave.sv
HPS Post-Fit Simulation Library	<HPS Post-fit Sim>/	All the files in the directory
Device Simulation Library ⁽²⁾	<Device Sim Lib>/	altera_primitives.v 220model.v sgate.v altera_mf.v altera_Insim.sv cyclonev_atoms.v arriav_atoms.v mentor/cyclonev_atoms_ncrypt.v mentor/arriav_atoms_ncrypt.v
EDA Netlist Writer Generated Post-Fit Simulation Model	<User project directory>/	*.vo *.vho ⁽³⁾
User testbench files	<User project directory>/	*.v *.sv *.vhd ⁽³⁾

Notes to Table 28–18:

- (1) <ACDS install> = Altera Complete Design Suite installation path
 <Avalon Verification IP> = <ACDS install>/ip/altera/sopc_builder_ip/verification
 <AXI Verification IP> = <ACDS install>/ip/altera/mentor_vip_ae
 <HPS Post-fit Sim> = <ACDS install>/ip/altera/hps/postfitter_simulation
 <Device Sim Lib> = <ACDS install>/quartus/eda/sim_lib
- (2) The device simulation library is not needed with Modelsim-Altera.
- (3) Mixed-language simulator is needed for Verilog HDL and VHDL mixed design

For post-fit simulation, you must call the BFM API in your test program with a specific hierarchy. The hierarchy format is:

```
<DUT>.\<HPS>|fpga_interfaces|<interface><space>.<BFM>.<API function>
```

Where:

- **<DUT>** is the instance name of the design under test that you instantiated in your test bench that consists of the HPS component.
- **<HPS>** is the HPS component instance name that you use in your Qsys system.
- **<interface>** is the instance name for a specific FPGA-to-HPS or HPS-to-FPGA interface. This name can be found in the **fpga_interfaces.sv** file located in *<project directory>/<Qsys design name>/synthesis/submodules*.
- **<space>**—You must insert one space character after the interface instance name.
- **<BFM>** is the BFM instance name. In *<ACDS install>/ip/altera/hps/postfitter_simulation*, identify the SystemVerilog file corresponding to the interface type that you are using. The SystemVerilog file contains the BFM instance name.

For example, a path for the Lightweight HPS-to-FPGA master interface hierarchy could be formed as follows:

```
top.dut.\my_hps_component|fpga_interface|hps2fpga_light_weight .h2f_lw_axi_master
```

Notice the space after “hps2fpga_light_weight”. Omitting this space would cause simulation failure because the instance name “hps2fpga_light_weight”, including the space, is the name used in the post-fit simulation model generated by the Quartus® II software.

Document Revision History

Table 28-19 lists the revision history for this document.

Table 28-19. Document Revision History

Date	Version	Changes
November 2012	1.1	■ Added debug APB, STM hardware event, FPGA cross trigger, FPGA trace port interfaces. ■ Added support for post-fit simulation. ■ Updated some API function names. ■ Removed DMA peripheral clock.
June 2012	1.0	Initial release.
May 2012	0.1	Preliminary draft.

This section includes the following appendices:

- [Appendix A, Booting and Configuration](#)



For information about the revision history for chapters in this section, refer to “Document Revision History” in each individual chapter.

This appendix describes the booting of the hard processor system (HPS) and the configuration of the FPGA portion of the Altera system-on-a-chip (SoC) FPGA device.

The HPS boot starts when a processor is released from reset (for example, on power up) and executes code in the internal boot ROM at the reset exception address. The boot process ends when the code in the boot ROM jumps to the next stage of the boot software. This next stage of boot software is referred to as the preloader. The preloader can be customized and is typically stored external to the HPS in a nonvolatile flash-based memory.

The processor can boot from the following sources:

- NAND flash memory through the NAND flash controller
- Secure Digital/MultiMediaCard (SD/MMC) flash memory through the SD/MMC flash controller
- Serial peripheral interface (SPI) and quad SPI flash memory through the quad SPI flash controller
- FPGA fabric

The HPS boot supports indirect or direct execution of the preloader depending on the boot device. With indirect execution, the boot ROM code copies the preloader from the boot device into the on-chip RAM and jumps to it. Indirect execution is used for flash memory boot sources. With direct execution, the boot ROM code executes the preloader directly from the boot device or from the FPGA fabric boot source.

Configuration of the FPGA portion of the device starts when the FPGA portion is released from the reset state (for example, on power-on). The control block (CB) in the FPGA portion of the device is responsible for obtaining an FPGA configuration image and configuring the FPGA. The FPGA configuration ends when the configuration image has been fully loaded and the FPGA enters user mode. The FPGA configuration image is provided by users and is typically stored in non-volatile flash-based memory. The FPGA CB can obtain a configuration image from the HPS through the FPGA manager or from any of the sources supported by the Arria V FPGAs family.



For more information about the memory and peripheral modules used during the booting and configuration process, refer to their respective chapters:


- *On-Chip Memory* chapter in volume 3 of the *Arria® V Device Handbook*.
- *FPGA Manager* chapter in volume 3 of the *Arria V Device Handbook*.

The following three figures illustrate the possible HPS boot and FPGA configuration schemes. The arrows in the figures denote the data flow direction.

■ Independent

Figure A-1 shows that the FPGA configuration and HPS boot occur independently. The FPGA configuration obtains its configuration image from a non-HPS source, while the HPS boot obtains its preloader from a non-FPGA fabric source.

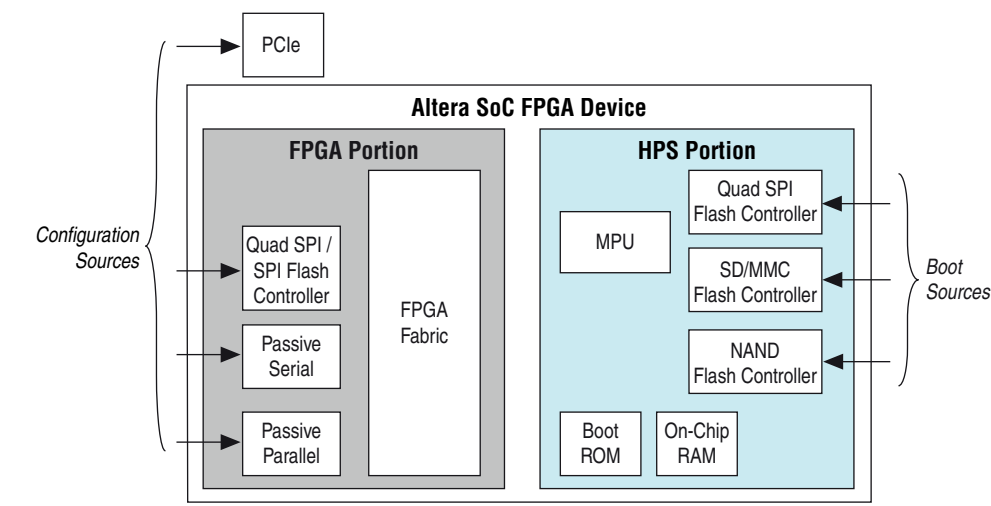
Figure A-1. Independent FPGA Configuration and HPS Booting



■ FPGA first

Figure A-2 shows that the FPGA is first configured through one of its non-HPS configuration sources and then the HPS boots from the FPGA fabric. The HPS boot waits for the FPGA fabric to be powered on and in user mode before executing. The HPS boot ROM code executes the preloader from the FPGA fabric over the HPS-to-FPGA bridge. The preloader can be obtained from the FPGA RAM or by accessing an external interface, depending on your design and implementation.

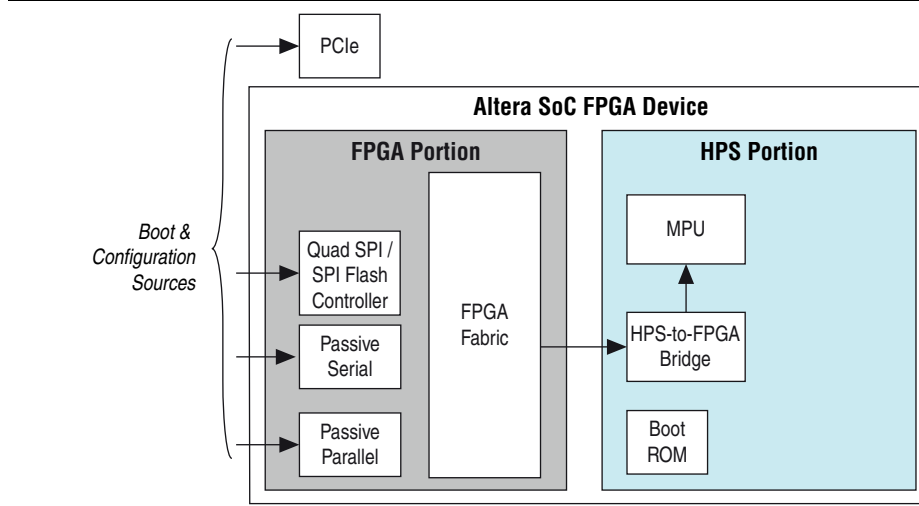
Figure A-2. FPGA Configures First



■ HPS first

Figure A-3 shows that the HPS boots first through one of its non-FPGA fabric boot sources and then software running on the HPS configures the FPGA fabric through the HPS FPGA manager. The software on the HPS obtains the FPGA configuration image from any of its flash memory devices or communication interfaces, for example, the Ethernet media access controller (EMAC). The software is provided by users and the boot ROM is not involved in configuring the FPGA fabric.

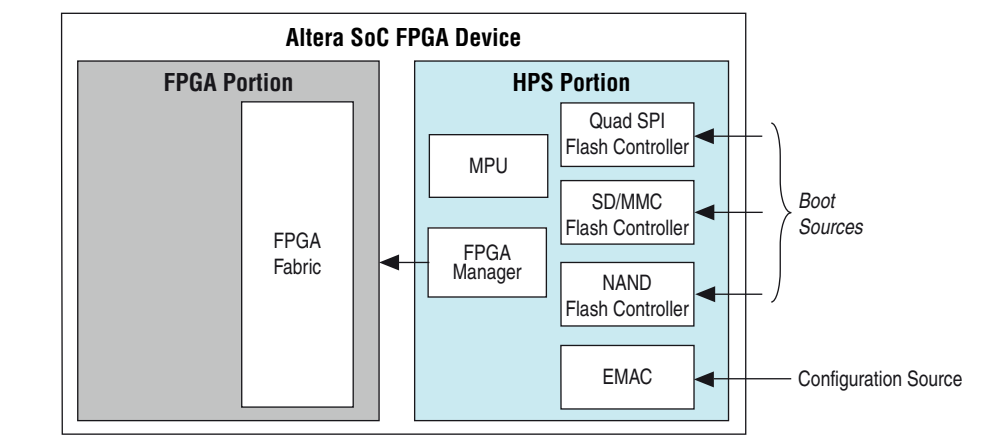Figure A-3. HPS Boots First




HPS Boot

Booting software on the HPS is a multi-stage process. Each stage is responsible for loading the next stage. The first software stage is the boot ROM. The boot ROM code locates and executes the second stage software, called the preloader. The preloader locates, and if present, executes the next stage software. The preloader and subsequent boot stages (if present) are collectively referred to as user software.

Only the boot ROM code is located in the HPS. The user software is located external to the HPS and is provided by users. The boot ROM code is only aware of the preloader and not aware of any potential subsequent boot stages.

Figure A-4 illustrates the typical boot flow. There may be more or less boot stages in the user software than shown and the roles of the boot stages may vary.

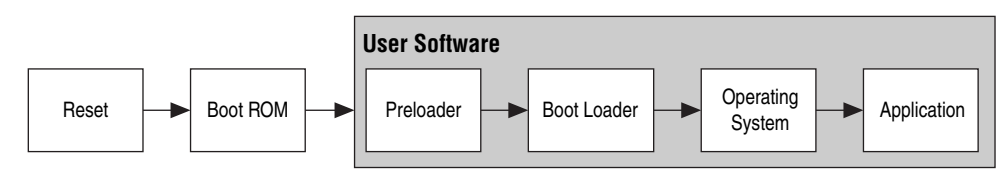Figure A-4. Typical Boot Flow



Boot Process Overview

Reset

The boot process begins when a CPU in the MPU exits from the reset state. When a CPU exits from reset, it starts running code at the reset exception address. In normal operation, the boot ROM is mapped at the reset exception address so code starts running in the boot ROM.

It is possible to map the on-chip RAM or SDRAM at the reset exception address and run code other than the boot ROM code. However, this chapter assumes that the boot ROM maps to the reset exception address.

Boot ROM

The boot ROM contains software code that executes after a reset exits. The boot ROM code determines if it is running on CPU0 or CPU1. If running on CPU1, the boot ROM code jumps to the value in the CPU1 start address register (`cpu1startaddr`) in the boot ROM code register group (`romcodegrp`) in the system manager. If running on CPU0, the boot ROM code reads the boot select (BSEL) and clock select (CSEL) values from the `bssel` and `csel` fields of the boot information register (`bootinfo`) in the system manager to determine the boot source and to set up the clock manager. The `bssel` and `csel` field values come from the BSEL and CSEL pins. The system manager samples the values on these pins when coming out of a reset.

Table A-1 lists the `bssel` field values for each flash memory device selection.

Table A-1. bssel Field Values and Flash Device Selection

bssel Field Value	Flash Device
0x0	Reserved
0x1	FPGA (HPS-to-FPGA bridge)
0x2	1.8 V NAND flash memory
0x3	3.0 V NAND flash memory
0x4	1.8 V SD/MMC flash memory with external transceiver
0x5	3.0 V SD/MMC flash memory with internal transceiver
0x6	1.8 V SPI or quad SPI flash memory
0x7	3.0 V SPI or quad SPI flash memory

For indirect execution from flash memory boot sources, the boot ROM code loads the preloader image from the flash device to the on-chip RAM and passes software control to the preloader in the on-chip RAM. For direct execution from the FPGA fabric boot source, the boot ROM code waits until the FPGA portion of the device is in user mode and then passes software control to the preloader in the FPGA RAM.

Preloader

The function of the preloader is user-defined. However, typical functions include initializing the SDRAM interface and configuring the HPS I/O pins. Initializing the SDRAM allows the preloader to load the next stage of the boot software (that might not fit in the 60 kilobytes (KB) available in the on-chip RAM). A typical next software stage is the open source boot loader, U-boot.

The preloader is allowed to load the next stage boot software from any device available to the HPS. Typical sources include the same flash device that contains the preloader, a different flash device, or a communication interface such as an EMAC.

Boot Loader

The boot loader loads the operating system and passes software control to the operating system.

Boot ROM

The function of the boot ROM code is to determine the boot source, initialize the HPS after a reset, and jump to the preloader. In the case of indirect execution, the boot ROM code loads the preloader image from the flash memory to on-chip RAM. The boot ROM performs the following actions to initialize the HPS:

Enable instruction cache, branch predictor, floating point unit, NEON vector unit

- Sets up the level 4 (l4) watchdog 0 timer
- Configures the main PLL and peripheral PLL based on the CSEL value
- Configures I/O elements and pin multiplexing based on the BSEL value
- Initializes the flash controller to default settings


While executing, the boot ROM code uses the top 4 KB of the on-chip RAM as data workspace. This area is reserved for the boot ROM code after a reset until the boot ROM code passes software control to preloader. This limits the maximum size of the preloader for indirect execution to 60 KB.

Boot ROM Flow

This section describes the software flow from reset until the boot ROM code passes software control to the preloader.

Figure A-5 illustrates the boot ROM flow. The boot ROM code can perform a warm boot from on-chip RAM, a cold boot from the FPGA portion of the device, or a cold boot from flash memory.

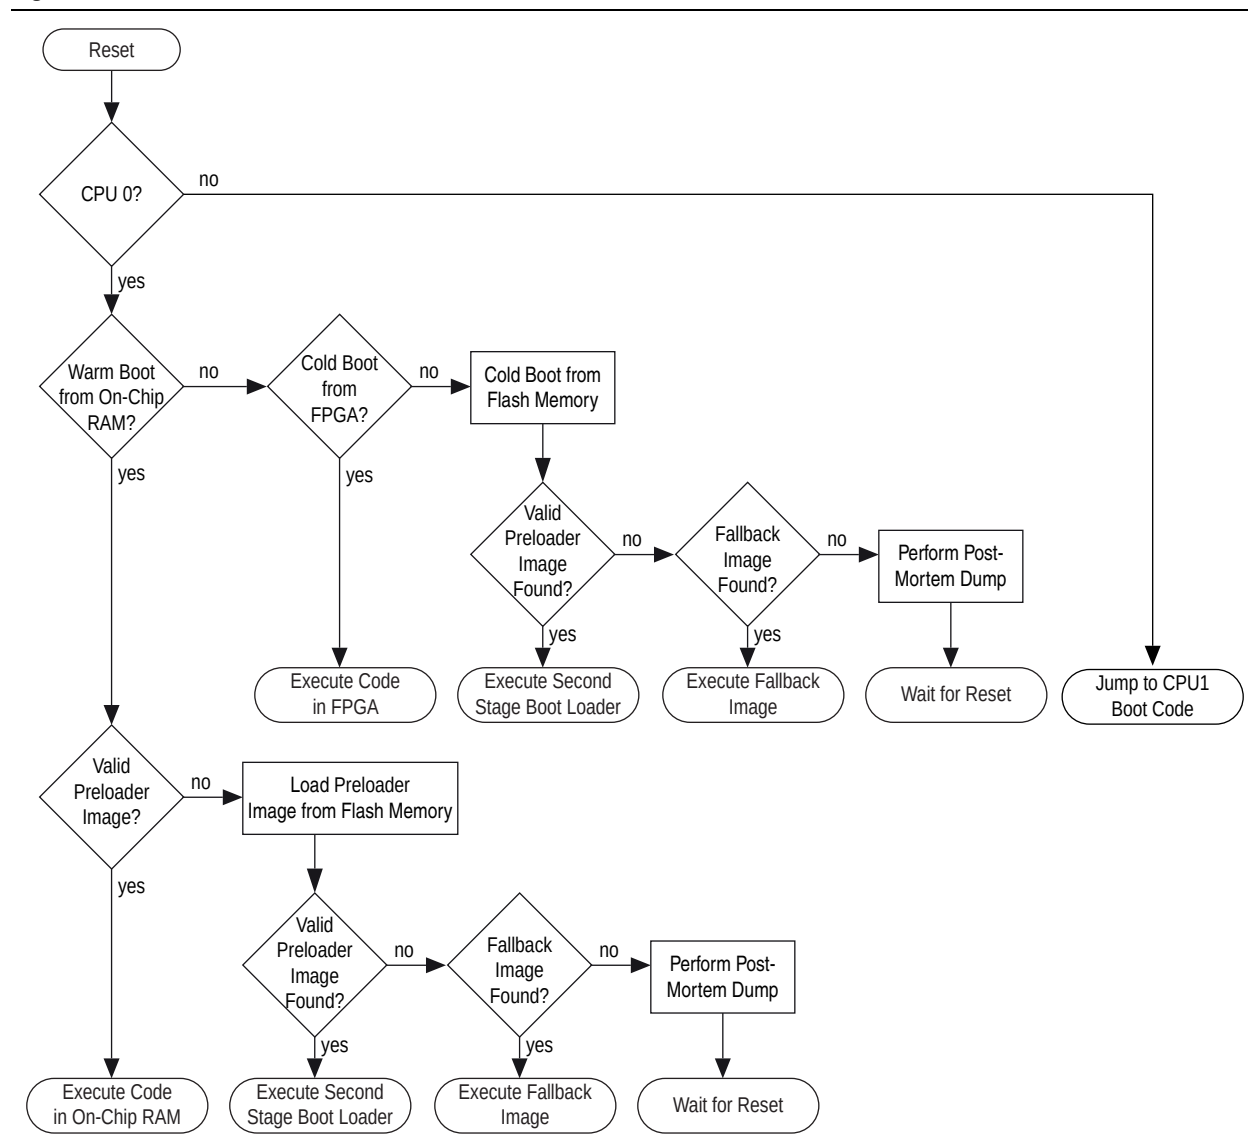Figure A-5. Boot ROM Flow



During a cold boot from the FPGA portion of the device, the boot ROM code waits until the FPGA is ready and then attempts direct execution at address 0x0 across the HPS-to-FPGA bridge. For example, the boot software could be provided by initialized on-chip RAM in the FPGA portion of the device at address 0x0. During a cold boot from flash memory, the boot ROM code attempts to load the first preloader image from flash memory to on-chip RAM and pass control to the preloader. If the image is invalid, the boot ROM code attempts to load up to three subsequent images from flash memory. If there is still no valid image found after the subsequent loads, the boot ROM code checks the FPGA portion of the device for a fallback image.

During a warm boot from on-chip RAM, the boot ROM code reads the preloader state register (`initswstate`) in the `romcodegrp` group in the system manager to determine if there is a valid preloader image in the on-chip RAM. If a valid preloader image is found in the on-chip RAM, the boot ROM code skips loading a preloader image from flash memory and instead passes control to the preloader residing in the on-chip RAM.

If a valid preloader image cannot be found in the on-chip RAM, boot ROM code attempts to load the last valid preloader image loaded from the flash memory, identified by the `index` field of the initial software last image loaded register (`initswlastld`) in the `romcodegrp` group in the system manager. If the image is invalid, boot ROM code attempts to load up to three subsequent images from flash memory. If a valid preloader image cannot be found in the on-chip RAM or flash memory, the boot ROM code checks the FPGA portion of the device for a fallback image.

Loading the Preloader

For indirect execution, the boot ROM code loads the preloader image from flash memory into the on-chip RAM and passes control to the preloader. The boot ROM code checks for a valid image by verifying the header and cyclic redundancy check (CRC) in the preloader image. [Figure A-6](#) shows the preloader header.


The boot ROM code checks the header for the following information:

- Validation word—validates the preloader image. The validation word has a fixed value of 0x31305341.
- Version—indicates the preloader version.
- Flags—unused
- Program length—the total length of the image (in bytes) from offset 0x0 to the end of code area, including exception vectors and CRC.
- Checksum—a checksum of all the bytes in the header, from offset 0x40 to 0x49.

The preloader image has a maximum size of 60 KB. This size is limited by the on-chip RAM size of 64 KB, where 4 KB is reserved as a workspace for the boot ROM data and stack. The preloader can use this 4 KB region (for its stack and data, for example) after the boot ROM code passes control to the preloader. This 4 KB region is overwritten by the boot ROM code on a subsequent reset.

Figure A-6 shows the preloader image layout in the on-chip RAM after being loaded from the boot ROM.

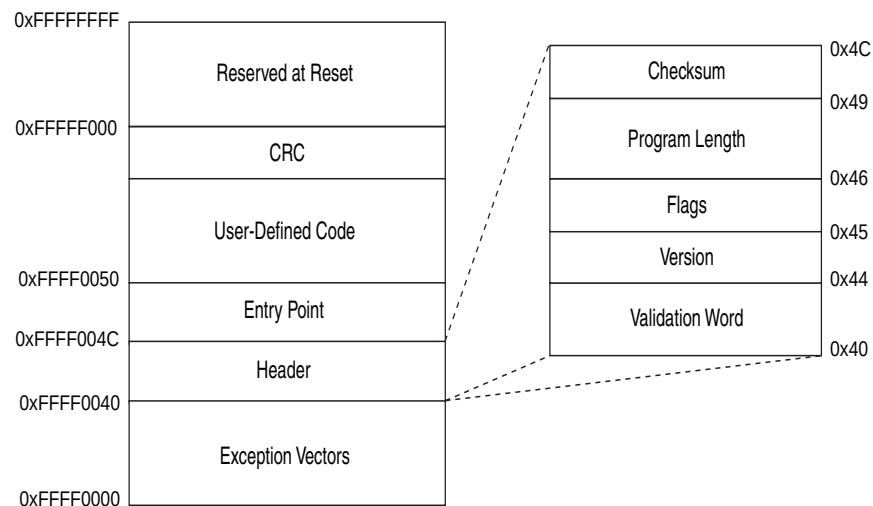Figure A-6. Preloader Image Layout ⁽¹⁾



Note to Figure A-6:

(1) Addresses are not represented to scale.

Exception vectors—Exception vectors are located at the start of the on-chip RAM. Typically, the preloader remaps the lowest region of the memory map to the on-chip RAM (from the boot ROM) to create easier access to the exception vectors.

Header—contains information such as validation word, version, flags, program length, and checksum for the boot ROM code to validate the preloader image before passing control to the preloader.

Entry point—contains the preloader image address. After the boot ROM code validates the header, the boot ROM code jumps to this address.

User-defined code—typically contains the program code of the preloader.

CRC—contains a CRC of data from address 0xFFFF0000 to 0xFFFF0000+(Program Length*4)–0x0004. The polynomial used to validate the preloader image is $x^{32} + x^{26} + x^{23} + x^{22} + x^{16} + x^{12} + x^{11} + x^{10} + x^8 + x^7 + x^5 + x^4 + x^2 + x + 1$. There is no reflection of the bits. The initial value of the remainder is 0xFFFFFFFF and the final value is XORed with 0xFFFFFFFF.

Reserved at reset—the top 4 KB is reserved for the boot ROM code after a reset. The boot ROM code uses this area for internal structures, workspace, and post-mortem dump. This area includes the shared memory where the boot ROM code passes information to the preloader.

Shared Memory

The shared memory contains information that the boot ROM code passes to the preloader. The boot ROM code passes the location of shared memory to the preloader in register r0, as described in “HPS State on Entry to the Preloader” on page A-10.

The shared memory contains the following information:

- Common—contains non-flash-specific settings used by the boot ROM code.
- Saved hardware register—contains hardware register values that the boot ROM code saves before the registers are modified by the boot ROM code.
- Flash device-specific—contains flash device-specific settings used by the boot ROM code that the preloader may use to continue using the flash device without reinitialization.

Table A-2 lists the contents of the shared memory block.

Table A-2. Shared Memory Block (Part 1 of 2)

Information Type	Content	Description
Common	Flash image	Indicates which preloader image (0-3) the boot ROM code loaded from the flash device. A nonzero value indicates that there was an error loading image 0 and the boot ROM code loaded another image.
	CSEL value used	Indicates the CSEL value used by the boot ROM code. Typically, this value is the value read from the <code>csel</code> field of the <code>bootinfo</code> register in the <code>romcodegrp</code> group in the system manager. However, if the PLL fails to lock, the boot ROM code ignores the <code>csel</code> field and uses zero to indicate PLL bypass mode.
	BSEL value used	Indicates the BSEL value used by the boot ROM code. Typically, this value is the value read from the <code>bSEL</code> field of the <code>bootinfo</code> register in the <code>romcodegrp</code> group in the system manager.
	Last page	Indicates the address of the last page read from the flash device.
	Page size	Indicates the page size used by the flash device. ■ For NAND flash memory, the boot ROM code reads this value from the NAND flash controller. ■ For SPI and quad SPI flash memory, the boot ROM code configures the page size through the quad SPI flash controller. ■ For SD/MMC flash memory, the boot ROM code configures the page size through the SD/MMC flash controller.
	Flash device type	Indicates the flash device used by the boot ROM code.
	Step complete	Track the completion state of up to 64 individual major steps during the boot process. The 64 bit value has one bit set for each major step completed in the boot process.
Saved hardware registers	CPU0 and CPU1 crash data	Indicates the CPU0 and CPU1 crash data. These values are pointers to where the boot ROM code saves the crash dump in an event of a crash.
	Status register (<code>stat</code>) of the reset manager	Contains reset source and event timeout information.
	Control (<code>ctrl</code>) register in the <code>romcodegrp</code> group in the system manager	Contains information used to control the boot ROM code.
	<code>initstate</code> register in the <code>romcodegrp</code> group in the system manager	Contains the magic value 0x49535756 when the preloader has reached a valid state.

Table A-2. Shared Memory Block (Part 2 of 2)

Information Type	Content	Description
Flash device-specific (SD/MMC)	is_sd_card	Indicates the card type. 1 indicates SD card; 0 indicates MMC.
	is_sector_mode	Indicates the addressing mode of card. 1 indicates sector addressing mode; 0 indicates byte addressing mode.
	rca	Contains the relative card address, which is used for host-card communication during card identification
	partition_start_sector	Indicates the partition start offset in unit sectors. 0 indicates raw mode.
	partition_size	Size of the partition in unit sectors. 0 indicates raw mode.

L4 Watchdog 0 Timer

The L4 watchdog 0 timer is reserved for boot ROM use. If a watchdog reset happens before software control passes to the preloader, boot ROM code attempts to load the last valid preloader image, identified by the `initswlastld` register in the `romcodegrp` group in the system manager.

HPS State on Entry to the Preloader

When the boot ROM code is ready to pass control to the preloader, the processor (CPU0) is in the following state:

- Instruction cache is enabled
- Branch predictor is enabled
- Data cache is disabled
- MMU is disabled
- Floating point unit is enabled
- NEON vector unit enabled
- Processor is in ARM secure supervisor mode

The boot ROM code sets the ARM® Cortex™-A9 MPCore™ registers to the following values:

- r0—contains the pointer to the shared memory block, which is used to pass information from the boot ROM code to the preloader. The shared memory block is located in the top 4 KB of on-chip RAM.
- r1—contains the length of the shared memory.
- r3—unused and set to 0x0.
- r4—unused and set to 0x0.

All other MPCore registers are undefined.



When booting CPU0 using the FPGA boot, or when booting CPU1 using any boot source, all MPCore registers, caches, the MMU, the floating point unit, and the NEON vector unit are undefined. HPS subsystems and the PLLs are undefined.

When the boot ROM code passes control to the preloader, the following conditions also exist:

- The boot ROM is still mapped to address 0x0.
- The L4 watchdog 0 timer is active.

Preloader

The preloader typically performs the following actions:

- Initialize the SDRAM interface.
- Configure the remap register of the L3 (NIC-301) GPV registers (l3regs) to map the on-chip RAM to address 0x0 so that exceptions are handled by the preloader.



The on-chip RAM is also accessible at address 0xFFFF0000. The address 0x0 is an alias.


- Configure the HPS I/O through the scan manager.
- Configure pin multiplexing through the system manager.
- Configure HPS clocks through the clock manager.
- Initialize the flash controller (NAND, SD/MMC, or quad SPI) that contains the next stage boot software.
- Load the next stage boot software into the SDRAM and pass control to it.

Typical Preloader Boot Flow

This section describes a typical software flow from the preloader entry point until the software passes control to the next stage boot software.

Figure A-7 shows a typical preloader boot flow.

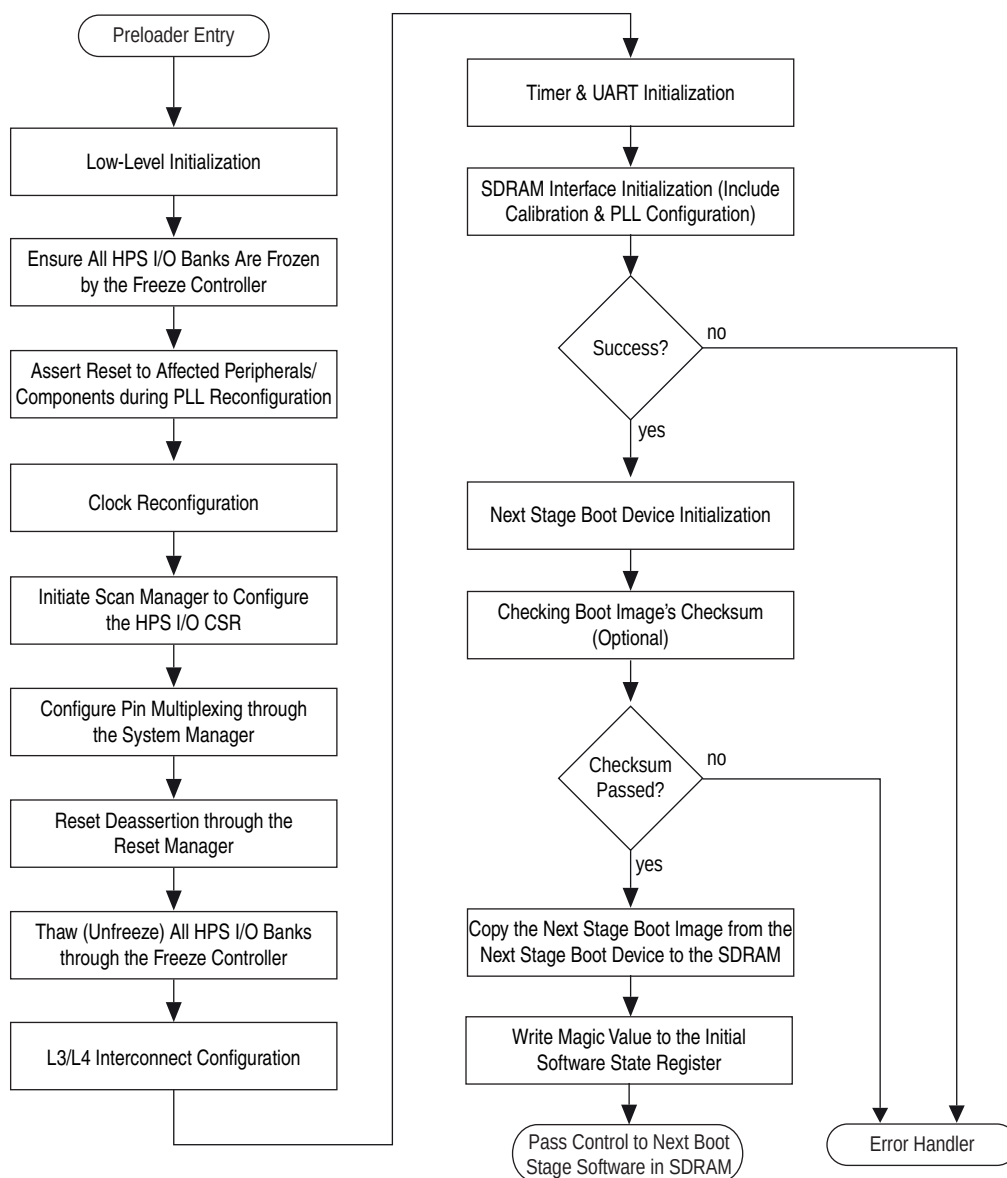Figure A-7. Typical Preloader Boot Flow



Low-level initialization steps include reconfiguring or disabling the L4 watchdog 0 timer, invalidating the instruction cache and branch predictor, remapping the on-chip RAM to the lowest memory region, and setting up the data area.


Upon entering the preloader, the L4 watchdog 0 timer is active. The preloader can either disable, reconfigure, or leave the watchdog timer unchanged. Once enabled after reset, the watchdog timer cannot be disabled, only paused.

The instruction cache and branch predictor, which were previously enabled by the boot ROM code, need to be invalidated.

The preloader needs to remap the exception vector table because the exception vectors are still pointing to the exception handler in the boot ROM when the preloader starts executing. By setting the L3 interconnect remap bit 0 to high, the on-chip RAM mirrors to the lowest region of the memory map. After this remap, the exception vectors will use the exception handlers in the preloader image.

Figure A-8 shows the memory map before and after remap.

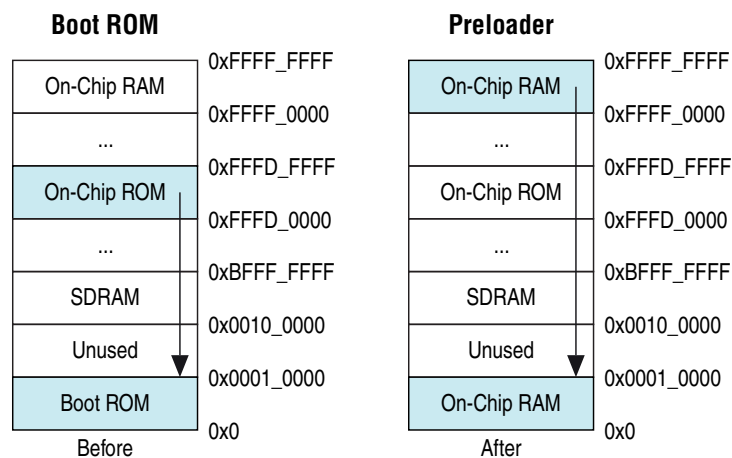Figure A-8. Remapping the On-Chip RAM ⁽¹⁾



Note to Figure A-8:

(1) Addresses are not represented to scale.

The preloader can reconfigure all HPS clocks. During clock reconfiguration, the preloader asserts reset to the peripherals in the HPS affected by the clock changes.

The preloader configures HPS I/O pins through the scan manager and pin multiplexing through the system manager. The preloader initiates the freeze controller in the scan manager to freeze all the I/O pins and put them in a safe state during I/O configuration and pin multiplexing.

The SDRAM goes through full initialization for cold boot or a partial initialization for warm boot. For full initialization, the preloader configures the SDRAM PLL before releasing the SDRAM interface from reset. SDRAM calibration adjusts I/O delays and FIFO settings to compensate for any board skew or impairment in the board, FPGA portion of the device, or memory device. For partial initialization, SDRAM PLL configuration and SDRAM calibration is not necessary.

The preloader looks for a valid next stage boot image in the next stage boot device by checking the boot image validation data and checksum in the mirror image. Once validated, the preloader copies the next stage boot image from the next stage boot device to the SDRAM.

Before software passes control to the next stage boot software, the preloader can write a valid value (such as 0x49535756) to the preloader initstate register under the romcodegrp group in the system manager. This value indicates that there is a valid boot image in the on-chip RAM. When a warm reset occurs, the boot ROM code can check the initstate register for the magic value to determine if it needs to reload the preloader image into the on-chip RAM.

Flash Memory Devices

The flash memory devices available for HPS boot are the NAND, SD/MMC, SPI, and quad SPI. The flash device can store the following kinds of files for booting purposes:

- Preloader binary file (up to four copies)
- Boot loader binary file
- Operating system binary file
- Application file
- FPGA programming files



The preloader file must be stored in a partition with no file system.

NAND Flash Devices

Figure A-9 shows the NAND flash image layout. The preloader image is located at offsets which are multiples of the block size. If the image size is less than 64 KB, only one block size is used. Since a block is the smallest area used for erase operation, any update to a particular image does not affect other images.

Figure A-9. NAND Flash Image Layout

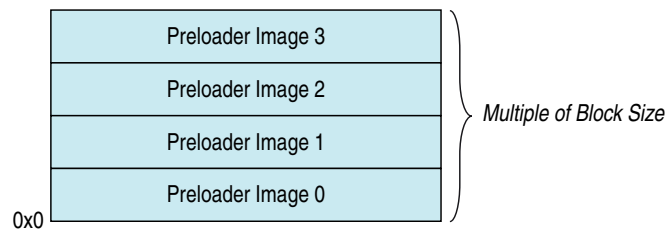


Table A-3 lists the NAND flash driver features supported in the boot ROM code.

Table A-3. NAND Flash Support Features

Feature	Driver Support
Device	Open NAND Flash Interface (ONFI) 1.0 raw NAND or electronic signature devices, single layer cell (SLC) and multiple layer cell (MLC) devices with integrated error correction code (ECC).
Chip select	CS0 only. Only CS0 is available to the HPS, the other three chip selects are routed out to the FPGA portion of the device.
Bus width	x8 only
Page size	512 bytes, 2 KB, 4 KB, or 8 KB.
Page per block	8, 16, 32, or 128
ECC	512-bytes with 8-bit correction

Table A-4 lists the CSEL pin settings for the quad SPI controller.

Table A-4. NAND Controller CSEL Pin Settings

Setting	CSEL Pin			
	0	1	2	3
osc1_clk (E0SC1 pin) range	10–50 MHz	10–12.5 MHz	12.5–25 MHz	25–50 MHz
nand_x_clk /25 device frequency	osc1_clk/25, 2 MHz max	osc1_clk*20/25, 9.6 MHz max	osc1_clk*10/25, 9.6 MHz max	osc1_clk*5/25, 9.6 MHz max
nand_x_clk controller clock	osc1_clk, 50 MHz max	osc1_clk*20, 240 MHz max	osc1_clk*10, 240 MHz max	osc1_clk*5, 240 MHz max
mpu_clk	osc1_clk, 50 MHz max	osc1_clk*32, 400 MHz max	osc1_clk*16, 400 MHz max	osc1_clk*8, 400 MHz max
PLL modes	Bypassed	Locked	Locked	Locked

For more information about the NAND flash memory, refer to the *NAND Flash Controller* chapter in volume 3 of the *Arria V Device Handbook*.


SD/MMC Flash Devices

Figure A-10 shows the SD/MMC flash image layout. The master boot record (MBR) is located at the first 512 bytes of the memory. The MBR contains information of partitions (address and size of partition). The preloader image is always stored in partition A2. Partition A2 is a custom raw partition with no file system.

The start address of each image is based on the following formula:

Start address = start address + ($\langle n \rangle * 64 \text{ K}$), where $\langle n \rangle$ is the image number

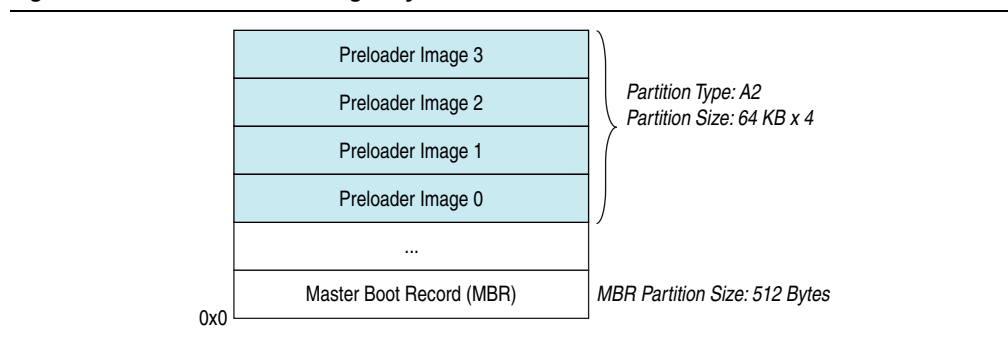Figure A-10. SD/MMC Flash Image Layout



The SD/MMC controller supports two booting modes:

- MBR (partition) mode
 - The boot image is read from a custom partition (0xA2)
 - The first image is located at the beginning of the partition, at offset 0x0
 - Start address = partition start address

- Raw mode
 - If the MBR signature is not found, SD/MMC driver assumes it is in raw mode. The boot image data is read directly from sectors in the user area and is located at the first sector of the SD/MMC.
 - The first image is located at the start of the memory card, at offset 0
 - Start address = 0

MBR

The MBR contains the partition table, which is always located on the first sector (LBA0) with a memory size of 512 bytes. The MBR consists of executable code, four partition entries, and the MBR signature. A MBR can be created by specific tools like the FDISK program.

Table A-5 lists the MBR structure.

Table A-5. MBR Structure

Offset	Size (Byte)	Description
0x000	446	Code area
0x1BE	16	Partition entry for partition 1
0x1CE	16	Partition entry for partition 2
0x1DE	16	Partition entry for partition 3
0x1EE	16	Partition entry for partition 4
0x1FE	2	MBR signature: 0xAA55

The standard MBR structure contains a partition with four 16-bytes entries. Thus, memory cards using this standard table cannot have more than four primary partitions or up to three primary partitions and one extended partition.

Each partition type is defined by the partition entry. The boot images are stored in a primary partition with custom partition type (0xA2). The SD/MMC flash driver does not support file system, so the boot images are located in partition A2 at fixed locations. Table A-6 lists the partition entry.

Table A-6. Partition Entry

Offset	Size (Byte)	Description
0x0	1	Boot indicator. 0x80 indicates that it is bootable.
0x1	3	Starting CHS value
0x4	1	Partition type
0x5	3	Ending CHS value
0x8	4	LBA of first section in partition
0xB	4	Number of sectors in partition

The boot ROM code configures the SD/MMC controller to default settings for the supported SD/MMC flash memory. Table A-7 lists the default settings of the SD/MMC controller.

Table A-7. SD/MMC Controller Default Settings

Parameter		Default	Register Value
Card type		1 bit	The card type register (ctype) in the SD/MMC controller registers (sdmmc) = 0x0
Timeout		Maximum	The timeout register (tmout) = 0xFFFFFFFF
FIFO threshold RX watermark level		1	The RX watermark level field (rx_wmark) of the FIFO threshold watermark register (fifoth) = 0x1
Clock source		0	The clock source register (clksrc) = 0x0
Block size		512	The block size register (blksiz) = 0x200
Clock divider	Identification mode	32	The clock divider register (clkdiv)= 0x10 (2*16=32)
	Data transfer mode	Bypass	The clock divider register (clkdiv)= 0x00

Table A-8 lists the CSEL pin settings for the SD/MMC controller.

Table A-8. SD/MMC Controller CSEL Pin Settings

Setting		CSEL Pin			
		0	1	2	3
osc1_clk (E0SC1 pin) range		10–50 MHz	10–12.5 MHz	12.5–25 MHz	25–50 MHz
ID mode	sdmmc_cclk_out device clock	osc1_clk/128, 391 KHz max	osc1_clk/32, 391 KHz max	osc1_clk/64, 391 KHz max	osc1_clk/128, 391 KHz max
	Controller baud rate divisor	32	32	32	32
Data transfer mode	sdmmc_cclk_out device clock	osc1_clk/4, 12.5 MHz max	osc1_clk*1, 12.5 MHz max	osc1_clk/2, 12.5 MHz max	osc1_clk/4, 12.5 MHz max
	Controller baud rate divisor (even numbers only)	1 (bypass)	1 (bypass)	1 (bypass)	1 (bypass)
sdmmc_clk controller clock:		osc1_clk, 50 MHz max	osc1_clk, 50 MHz max	osc1_clk, 50 MHz max	osc1_clk*2, 50 MHz max
mpu_clk		osc1_clk, 50 MHz max	osc1_clk*32, 400 MHz max	osc1_clk*16, 400 MHz max	osc1_clk*8, 400 MHz max
PLL modes		Bypassed	Locked	Locked	Locked



For more information about the SD/MMC, refer to the *SD/MMC Controller* chapter in volume 3 of the *Arria V Device Handbook*.


SPI and Quad SPI Flash Devices

Figure A-11 shows the SPI and quad SPI flash image layout. The preloader image is always located at offsets which are multiples of a subsector size. If the image is less than 64 KB, only one subsector is used. If subsector erase is not supported, sector erase is supported. Since a subsector is the smallest area used for erase operation, any update to a particular image does not affect other images.

The first image is located at offset 0 and followed by subsequent images. The start address of each image is based on the following formula:

Start address = (N * 64K), where N is the image number

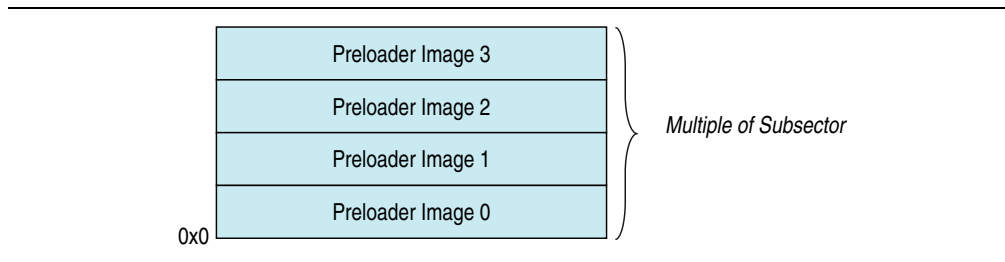Figure A-11. SPI and Quad SPI Flash Image Layout



The boot ROM code configures the quad SPI controller to default settings for the supported SPI or quad SPI flash memory. [Table A-9](#) lists the default settings of the quad SPI controller.

Table A-9. Quad SPI Controller Default Settings

Parameter	Default Setting	Register Value
SPI baud rate.	Divide by 4	The master mode baud rate divisor field (bauddiv) of the quad SPI configuration register (cfg) in the quad SPI controller registers (qspi_regs) = 1.
Read opcode.	Normal read	The read opcode in non-XIP mode field (rdopcode) in the device read instruction register (devrd) = 0x3.
Instruction type.	Single I/O (1 bit wide)	The address transfer width field (addrwidth) and data transfer width field (datawidth) of the devrd register = 0.
Delay in master reference clocks for the length that the master mode chip select outputs are deasserted between words when the clock phase is zero.	200 ns	The clock delay for chip select deassert field (nss) in the quad SPI device delay register (delay). Refer to delay[31:24] in Table A-11 on page A-19 .
Delay in master reference clocks between one chip select being deactivated and the activation of another. This delay ensures a quiet period between the selection of two different slaves and requires the transmit FIFO to be empty.	0 ns	The clock delay for chip select deactivation field (btwn) in the delay register = 0x0.
Delay in master reference clocks between the last bit of the current transaction and the first bit of the next transaction. If the clock phase is zero, the first bit of the next transaction refers to the cycle in which the chip select is deselected.	20 ns	The clock delay for last transaction bit field (after) in the delay register. Refer to delay[15:8] in Table A-11 on page A-19 .
Added delay in master reference clocks between setting qspi_n_ss_out low and first bit transfer.	20 ns	The clock delay with qspi_n_ss_out field (init) in the delay register. Refer to delay[7:0] in Table A-11 on page A-19 .
Number of address bytes.	3 bytes	The number of address bytes field (numaddrbytes) of the device size register (devsz) = 2.

Table A-10 lists the CSEL pin settings for the quad SPI controller.

Table A-10. Quad SPI Controller CSEL Pin Settings

Setting	CSEL Pin			
	0	1	2	3
osc1_clk (E0SC1 pin) range	10–50 MHz	20–50 MHz	25–50 MHz	10–25 MHz
sclk_out device clock	osc1_clk/4, 12.5 MHz max	osc1_clk/2, 25 MHz max	osc1_clk*1, 50 MHz max	osc1_clk*2, 50 MHz max
qspi_clk controller clock	osc1_clk, 50 MHz max	osc1_clk*2, 100 MHz max	osc1_clk*4, 200 MHz max	osc1_clk*8, 200 MHz max
Controller baud rate divisor (even numbers only)	4	4	4	4
Flash read instruction (1 dummy byte for READ_FAST)	READ	READ	READ_FAST	READ_FAST
mpu_clk	osc1_clk, 50 MHz max	osc1_clk*8, 400 MHz max	osc1_clk*8, 400 MHz max	osc1_clk*16, 400 MHz max
PLL modes	Bypassed	Locked	Locked	Locked

The delay register in the quad SPI controller registers (qspiregs) configures relative delay into the generation of the master output signals.

The SPI or quad SPI flash memory needs to meet the following timing requirements:

- T_{SLCH} (delay[7:0]): 20 ns
- T_{CHSH} (delay[15:8]): 20 ns
- T_{SHSL} (delay[31:24]): 200 ns

Table A-11 lists the delay register configuration with CSEL pin settings.

Table A-11. SPI and Quad SPI Flash Delay Configuration

CSEL Pin	T_{ref_clk} (ns)	T_{sclk_out} (ns)	Device Delay Register		
			delay[7:0]	delay[15:8]	delay[31:24]
0	20	80	0	0	6
1	10	40	0	0	16
2–3	5	20	0	0	36

The formula to calculate the delay is $(T_{delay} - T_{sclk\_out}) / T_{ref\_clk}$.



For more information about the quad SPI flash memory, refer to the *Quad SPI Flash Controller* chapter in volume 3 of the *Arria V Device Handbook*.

FPGA Configuration

You can configure the FPGA portion of the SoC device with non-HPS sources or by utilizing the HPS. Software executing on the HPS configures the FPGA by writing the configuration image to the FPGA manager in the HPS. Software can control the configuration process and monitor the FPGA status by accessing the control and status register (CSR) interface in the FPGA manager.

-  For more information about configuring the FPGA through the HPS FPGA manager, refer to the *FPGA Manager* chapter in volume 3 of the *Arria V Device Handbook*.
-  For more information about configuring the FPGA in general, refer to the *Configuration, Design Security, and Remote System Upgrades in Arria V Devices* chapter in volume 1 of the *Arria V Device Handbook*.

Full Configuration

The HPS uses the FPGA manager to configure the FPGA portion of the device. The following sequence suggests one way for software to perform a full configuration:

1. Set the `cdratio` and `cfgwidth` bits of the `ctrl` register in the FPGA manager registers (`fpgamgrregs`) to match the characteristics of the configuration image. These settings are dependant on the MSEL pins input.
2. Set the `nce` bit of the `ctrl` register to 0 to enable HPS configuration.
3. Set the `en` bit of the `ctrl` register to 1 to give the FPGA manager control of the configuration input signals.
4. Set the `nconfigpull` bit of the `ctrl` register to 1 to pull down the `nCONFIG` pin and put the FPGA portion of the device into the reset phase.
5. Poll the `mode` bit of the `stat` register and wait until the FPGA enters the reset phase.
6. Set the `nconfigpull` bit of the `ctrl` register to 0 to release the FPGA from reset.
7. Read the `mode` bit of the `stat` register and wait until the FPGA enters the configuration phase.
8. Clear the state of the `nSTATUS` bits (`ns`) in the configuration monitor registers (`fpgamgrregs.mon`).
9. Set the `axicfggen` bit of the `ctrl` register to 1 to enable sending configuration data to the FPGA.
10. Write the configuration image to the configuration data register (`data`) in the FPGA manager module configuration data registers (`fpgamgrdata`). You can also choose to use a DMA controller to transfer the configuration image from a peripheral device to the FPGA manager.
11. Use the `fpgamgrregs.mon` registers to monitor the `CONF_DONE` (`cd`) and `nSTATUS` (`ns`) bits.
 - a. `CONF_DONE` = 1 and `nSTATUS` = 1 indicates successful configuration.
 - b. `CONF_DONE` = 0 or `nSTATUS` = 0 indicates unsuccessful configuration. Complete steps 12 and 13, then go back and repeat steps 3 to 10 to reload the configuration image.
12. Set the `axicfggen` bit of the `ctrl` register to 0 to disable configuration data on AXI slave.
13. Send the DCLKs required by the FPGA to enter the initialization phase.
 - a. If DCLK is unused, write a value of 4 to the DCLK count register (`dc1kcnt`).
 - b. If DCLK is used, write a value of 20,480 (0x5000) to the `dc1kcnt` register.

14. Poll the `dcntdone` bit of the DCLK status register (`dcclkstat`) until it changes to 1, which indicates that all the DCLKs have been sent.
15. Write a 1 to the `dcntdone` bit of the DCLK status register to clear the completed status flag.
16. Read the `mode` bit of the `stat` register to wait for the FPGA to enter user mode.
17. Set the `en` bit of the `ctrl` register to 0 to allow the external pins to drive the configuration input signals.

If the HPS resets in the middle of a normal configuration data transfer before entering user mode, software can assume that the configuration is unsuccessful. After the HPS resets, software must repeat the steps for full configuration.

Partial Reconfiguration

Partial reconfiguration allows you to reconfigure part of the device while other sections remain running. The HPS performs partial reconfiguration while the FPGA portion of the device is in user mode. The following sequence suggests one way for software to perform a partial configuration:

1. Read the `mode` bit of the `stat` register in `fpgamgrregs` to ensure that the FPGA is in user mode.
2. Set the `cdratio` bit of the `ctrl` register to match the characteristics of the partial reconfiguration image and set the `cfgwidth` bit of the `ctrl` register to 0 for 16-bit configuration data width.
3. Set the `en` bit of the `ctrl` register to 1 to give the FPGA manager control of the configuration input signals.
4. Set the `prreq` bit of the `ctrl` register to 1 to assert `PR_REQUEST`.
5. Write a value of 1 to the `dcclkcnt` register to generate DCLK pulses for one clock cycle.
6. Poll the `fpgamgrregs.mon` registers to observe the `PR_READY` (`prr`) bit.
 - a. If `PR_READY=1`, continue to step 7.
 - b. If `PR_READY` is 0, then go back and repeat step 5. Note that a minimum of 16 DCLK pulses are required.
7. Write a value of 3 to the `dcclkcnt` register to generate DCLK pulses for three clock cycles.
8. Set the `axicfggen` bit of the `ctrl` register to 1 to enable sending configuration data to the FPGA.
9. Write the partial reconfiguration image to the data register in the FPGA manager `fpgamgrdata` registers. You can also choose to use a DMA to transfer the configuration image from a peripheral device to the FPGA manager.

10. Poll the `fpgamgrregs.mon` registers to observe the `PR_DONE` (`prd`), `PR_READY` (`prp`), `PR_ERROR` (`pre`), and `CRC_ERROR` (`crc`) bits until the bits match one of the completion statuses shown in [Table A-12](#).

Table A-12. Partial Reconfiguration Status

Bits				Partial Reconfiguration Status
PR_DONE	PR_READY	PR_ERROR	CRC_ERROR	
1	0	0	0	Completed
0	0	1	0	Completed with error
0	0	0	1	Completed with a SEU event CRC error

11. Set the `axicfgn` bit of the `ctrl` register to 0 to disable sending configuration data to the FPGA.
12. Set the `prreq` bit of the `ctrl` register to 0 to deassert `PR_REQUEST`.
13. Write a value of 128 to the `dcclknt` register to generate DCLK pulses for 128 clock cycles.
14. Poll the `dcntdone` bit of the `dcclkstat` register until it changes to 1, which indicates that all the DCLKs have been sent.
15. Write a 1 to the `dcntdone` bit of the `dcclkstat` register to clear the completed status flag.
16. Poll the `fpgamgrregs.mon` registers to observe the `PR_DONE` (`prd`), `PR_READY` (`prp`), `PR_ERROR` (`pre`), and `CRC_ERROR` (`crc`) bits. When all bits are set to 0, the FPGA is ready for the next transaction.
17. Set the `en` bit of the `ctrl` register to 0 to allow the external pins to drive the configuration input signals.

If the HPS resets in the middle of a partial reconfiguration, software can assume that the configuration is unsuccessful. After an HPS warm reset, software must repeat the steps for partial configuration. After an HPS cold reset, software must repeat the steps for [“Full Configuration”](#) on page A-20.



For more information about the configuration modes and pin settings, refer to the [FPGA Manager](#) chapter in volume 3 of the *Arria V Device Handbook*.

Document Revision History

[Table A-13](#) shows the revision history for this document.

Table A-13. Document Revision History (Part 1 of 2)

Date	Version	Changes
November 2012	1.3	■ Expanded shared memory block table. ■ Added CSEL tables. ■ Additional minor updates.
June 2012	1.2	Updated the HPS boot and FPGA configuration sections.

Table A-13. Document Revision History (Part 2 of 2)

Date	Version	Changes
May 2012	1.1	■ Updated the HPS boot section. ■ Added information about the flash devices used for HPS boot. ■ Added information about the FPGA configuration mode.
January 2012	1.0	Initial release.

This chapter provides additional information about the document and Altera.

How to Contact Altera

To locate the most up-to-date information about Altera products, refer to the following table.

Contact ⁽¹⁾	Contact Method	Address
Technical support	Website	www.altera.com/support
Technical training	Website	www.altera.com/training
	Email	custrain@altera.com
Product literature	Website	www.altera.com/literature
Nontechnical support (general) (software licensing)	Email	nacomp@altera.com
	Email	authorization@altera.com

Note to Table:

(1) You can also contact your local Altera sales office or sales representative.

Typographic Conventions

The following table shows the typographic conventions this document uses.

Visual Cue	Meaning
Bold Type with Initial Capital Letters	Indicate command names, dialog box titles, dialog box options, and other GUI labels. For example, Save As dialog box. For GUI elements, capitalization matches the GUI.
bold type	Indicates directory names, project names, disk drive names, file names, file name extensions, software utility names, and GUI labels. For example, \qdesigns directory, D: drive, and chiptrip.gdf file.
<i>Italic Type with Initial Capital Letters</i>	Indicate document titles. For example, <i>Stratix IV Design Guidelines</i> .
<i>italic type</i>	Indicates variables. For example, $n + 1$. Variable names are enclosed in angle brackets (< >). For example, <file name> and <project name>.pof file.
Initial Capital Letters	Indicate keyboard keys and menu names. For example, the Delete key and the Options menu.
"Subheading Title"	Quotation marks indicate references to sections in a document and titles of Quartus II Help topics. For example, "Typographic Conventions."

Visual Cue	Meaning
Courier type	Indicates signal, port, register, bit, block, and primitive names. For example, data1, tdi, and input. The suffix n denotes an active-low signal. For example, resetn. Indicates command line commands and anything that must be typed exactly as it appears. For example, c:\qdesigns\tutorial\chiptrip.gdf. Also indicates sections of an actual file, such as a Report File, references to parts of files (for example, the AHDL keyword SUBDESIGN), and logic function names (for example, TRI).
	An angled arrow instructs you to press the Enter key.
1., 2., 3., and a., b., c., and so on	Numbered steps indicate a list of items when the sequence of the items is important, such as the steps listed in a procedure.
	Bullets indicate a list of items when the sequence of the items is not important.
	The hand points to information that requires special attention.
	The question mark directs you to a software help system with related information.
	The feet direct you to another document or website with related information.
	The multimedia icon directs you to a related multimedia presentation.
	A caution calls attention to a condition or possible situation that can damage or destroy the product or your work.
	A warning calls attention to a condition or possible situation that can cause you injury.
	The envelope links to the Email Subscription Management Center page of the Altera website, where you can sign up to receive update notifications for Altera documents.